

Introduction

Scope of Manual	1-2
Section Descriptions	1-2
Section 1 – Introduction	1-2
Section 2 – Installation	1-2
Section 3 – System Overview	1-2
Section 4 – Option Installation	1-2
Section 5 – Applications	1-2
Section 6 – Setup Menus	1-3
Section 7 – Appendix A	1-3
Manual Conventions	1-3
System Description	1-4
Standard Features	1-4
Options	1-6
Reference Requirements	1-7
Control Ports	1-7
Overview of Terms	1-8
Control Panel Buttons	1-10
The Menu Screen	1-10
Menu Display	1-10
Menu Labels and Controls	1-10
Channel Select Buttons	1-13
Quick Keyframe Buttons	1-14
Channel Menu Buttons	1-15
TimeFrame Effects Editor Buttons	1-16
Graphics Buttons	1-17
Global Menu Buttons	1-18
Effects Buttons	1-19
System Buttons	1-20
Joystick	1-20
Numeric Keypad	1-21
On-Air Buttons	1-22
Timeline Control Buttons	1-23
Video and Key Signal Paths	1-24
Channel Configurations	1-24
V (Video)	
Dual Twin SD Configuration (HD mode)	1-24
V + V (Video + Video)	
Dual Twin SD, Dual Twin HD and Single Twin HD Configurations (SD & HD mode)	1-25
V + K (Video + Key)	

Dual Twin SD, Dual Twin HD and Single Twin HD Configurations (SD & HD mode)	1-26
VK + S (Video/Key + Shadow)	
Dual Twin SD, Dual Twin HD and Single Twin HD Configurations (SD & HD mode)	1-27
Additional Channels	1-27
Signal Paths	1-28
Inputs	1-28
Crosspoint Matrix	1-28
DVE Paths	1-29
Outputs	1-32

Installation

Physical Installation	2-2
Unpacking	2-2
Power Consumption	2-2
Cooling and Airflow	2-3
Rack Mounting	2-3
Control Panel Mounting	2-4
Video Connections	2-6
Serial Video Inputs	2-6
Reference Input	2-7
Serial Video Outputs	2-7
Control Connections	2-8
Control Panel	2-9
Serial Connectors	2-10
GPI In (General Purpose Interface Inputs)	2-11
Selecting GPI Input Type	2-12
GPI Inputs	2-12
GPI Out (General Purpose Interface Outputs)	2-14
GPI Outputs	2-15
Control Panel Connections	2-16
Keybd	2-16
Floppy	2-17
Mouse	2-18
Chassis	2-18
Shot Box	2-19
Loop Thru	2-19
Power	2-20
Connecting Control Panels	2-21
Using a Local Control Panel Supply	2-23

System Overview

Dveous/MX Main Chassis	3-2
Removing the Front Bezel	3-3
Configurations	3-4
Board Overview	3-5
Input Board	3-5
Motherboard	3-6
Defocus Card	3-6
Transform Cards	3-6
Output Card	3-7
Powering Up Dveous/MX	3-8
Updating Software	3-9
Chassis Software Installation	3-9
Panel Software Installation	3-9
Performing a First Birthday	3-10
Power Supply Removal	3-11
Fan Assembly Removal	3-13

Option Installation

Overview	4-2
Transform Boards	4-3
Overview	4-3
Installing Transform Boards	4-4
Input Card	4-5
Installing an Input Card	4-6
External Floppy Drive	4-8
Additional Control Panel	4-9

Applications I

Overview	5-2
External Aux Bus Control	5-3
RS-422 Control Cable	5-3
Aux Bus Video Cabling	5-4
Configure the Dveous/MX REMOTE Port	5-5
Configure the Switcher Remote Port	5-5
Select Aux Bus as Input	5-5
GVG CPL Control	5-6
Cable Connections	5-6
Configure the Dveous/MX REMOTE Port	5-6
Timeline Control	5-7

Setup Menus

Overview	6-2
Input Setup Menu	6-4
Channel Softkey	6-4
Input Softknob	6-4
Blanking Softknob	6-4
Matte Softkey	6-5
Output Setup Menu	6-6
Timing	6-6
Digital	6-6
Config	6-6
Remote Setup Menu	6-8
Setup	6-8
Engineering Menu	6-10
Setup	6-10
Chassis Softkey	6-10
Panel Softkey	6-11
Ram Softkey	6-11
Update Softkey	6-11
Remote Enable Menu	6-12
Remote 1, Remote 2 and Remote 3	6-12
No Xpnt Button	6-14
Personality Menu	6-15

Misc Softkey	6-15
Anamorph Softkey	6-15
Film Softkey	6-15
Acquire Button	6-16
Disk Menu	6-17
Disk	6-17
Confirm Save	6-18
Recall	6-18
Save	6-19
Confirm Recall	6-19
Action	6-19
Set Clock	6-20

Common Part Numbers

Overview	A-2
Main Chassis	A-3
Control Panel	A-4

