



# iPhone 12 Pro

## Repair Manual

# Contents

3 [Introduction](#)

## Basics

6 [Internal View](#)

7 [Orderable Parts](#)

9 [Screws](#)

10 [Tools](#)

## Safety

15 [Battery Safety](#)

18 [Broken Glass](#)

## Procedures

20 [First Steps](#)

21 [SIM Tray](#)

22 [Display](#)

55 [Camera](#)

62 [Speaker](#)

66 [Battery](#)

84 [Taptic Engine](#)

96 [TrueDepth Camera](#)

# Introduction

This manual includes technical instructions for replacing genuine Apple parts in iPhone and is intended for individual technicians with the knowledge, experience, and tools required to repair electronic devices.

## Important

- Read the entire manual first. If you're not comfortable performing the repairs as instructed in this manual, don't proceed.
- Always use the latest version of this document available at [support.apple.com/en\\_US/manuals/iphone](https://support.apple.com/en_US/manuals/iphone).



## Warning

Failure to follow the repair instructions or to use genuine Apple parts or proper tools may cause fire or other safety issues and lead to personal injury or death.



## Caution

Failure to follow the repair instructions or to use genuine Apple parts or proper tools may damage the iPhone, parts, or other property, or compromise the device's functionality or water resistance.

## Warranty information

Damage caused by repairs performed outside of Apple or the Apple Authorized Service Provider network is not covered by Apple's warranty or AppleCare plans. Such damage may cause future repairs to be subject to out-of-warranty costs or render the device ineligible for future repairs by Apple or Apple Authorized Service Providers.

## Tools and parts

### Hardware tools

Apple tools are designed to apply the appropriate heat, force, and torque during repairs, and to withstand high-volume professional use.

- The heated display removal fixture softens adhesive to allow separation of the display from the enclosure. The fixture is used with a heated display pocket designed for the device's specific dimensions.
- The display press applies the appropriate amount of pressure to secure new adhesive during display installation. The display press is used with a repair tray and display adhesive press plate designed for the device's specific dimensions.
- The battery press applies the appropriate amount of pressure to secure new adhesive during battery installation. The battery press is used with a repair tray designed for the device's specific dimensions.

### Ordering tools and parts

You can learn how to order genuine Apple parts and tools at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair). During the purchase process, enter the manual ID **FWRUJK** to indicate that you've read this manual in its entirety and agree that you have the knowledge and experience to perform your intended repair.

### Software tools

A System Configuration step may be required at the end of your repair. System Configuration is a postrepair software tool that completes the repair for genuine Apple parts. Running System Configuration has a number of purposes that vary based on the part replaced.

What System Configuration does	Why it's important
<b>Transfers factory calibration values</b>	Certain parts like displays, cameras, and ambient light sensors have calibration values that are customized to each individual part during manufacturing. Transferring these values ensures maximum performance and quality after a repair.
<b>Links Secure Enclave and biometric authentication parts</b>	After repair of a logic board or a biometric authentication part (Touch ID or Face ID), linking the biometric sensors to the Secure Enclave on the logic board is required to ensure device security.
<b>Ensures repair integrity</b>	After a hardware repair, software checks are performed to ensure repair integrity. Repair integrity means that a genuine Apple part has been correctly installed.
<b>Assigns wireless region</b>	To comply with regional communications regulations, a wireless region must be assigned to your logic board.
<b>Updates firmware</b>	Keeping firmware up to date ensures that the device has all the latest security and performance features.

## System Configuration requirements

The minimum requirements for System Configuration include:

- The latest version of iOS—not a beta version—on the iPhone
- A strong Wi-Fi network capable of 1.0 Mbps download and upload speeds, with less than 400 ms latency and less than 2% packet loss. Estimated data usage to run System Configuration is 6–22 MB.

If the TrueDepth camera is replaced, System Configuration also requires:

- The latest version of [Apple Service Utility](#) installed on a Mac running macOS Monterey 12.4 or later
- Internet access for the Mac
- A Lightning cable

## How to initiate System Configuration

Depending on the part replaced, you will initiate System Configuration through one of the following two methods:

- [Put the device into diagnostics mode](#). Tap Start Diagnostics and follow onscreen prompts.

or

- Contact the online store where you purchased genuine Apple parts. See [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).

See the individual repair sections of this manual for more information.

## Alerts

Failure to follow alerts could result in fire, injury, data loss, or damage to the device, parts, or other property.



### Warning

Instructions for reducing risk of personal injury




### Caution

Instructions for reducing risk of data loss or device hardware damage

### Important

Supplemental information for successfully completing procedures; neither a Warning nor a Caution

## Internal View

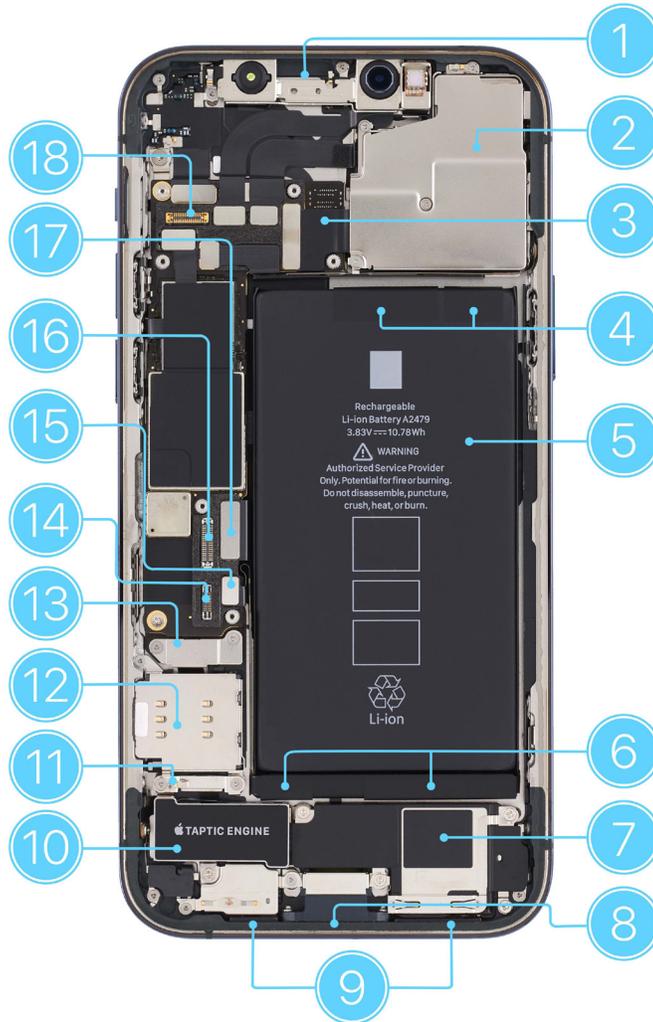

- |                                 |  |
|---------------------------------|--|
| 1. TrueDepth camera assembly    | 10. Taptic Engine  |
| 2. Camera                       | 11. Taptic Engine connector cowling                          |
| 3. Camera flex cable            | 12. SIM reader   |
| 4. Top battery adhesive tabs    | 13. SIM reader connector cowling                             |
| 5. Battery                      | 14. Multi-Touch connector                                    |
| 6. Bottom battery adhesive tabs | 15. Battery flex cable                                       |
| 7. Speaker                      | 16. Display connector  |
| 8. Lightning connector          | 17. Dock flex cable  |
| 9. Bottom microphones           | 18. Receiver/ambient light sensor/proximity sensor connector |

## Orderable Parts

Name	Numbers	Screws
<b>Battery</b>	661-17920	—
<b>Camera</b>	661-17922	—
<b>Camera cowling</b>	923-04990	923-05054 (3) upper left, upper middle, lower left 923-05055 (1) middle
<b>Display</b>	661-18504 LL661-18504 (U.S.)	—
<b>Display adhesive</b>	923-04894	—
<b>Lower cowling</b>	923-04987	923-04982 (2)
<b>Rubber gasket</b>	923-04937	—
<b>Security screws</b>	—	923-05064 (2) pacific blue 923-05065 (2) silver 923-05066 (2) gold 923-05067 (2) graphite
<b>SIM reader connector cowling</b>	923-04983	923-04978 (2)
<b>SIM tray</b>	923-05056 single, graphite 923-05057 dual, graphite 923-05058 single, silver 923-05059 single, gold 923-05060 single, pacific blue 923-05061 dual, silver 923-05062 dual, gold 923-05063 dual, pacific blue	—
<b>Speaker</b>	923-04915	923-05052 (4)
<b>Taptic Engine</b>	923-04979	923-04980 (3) upper left, right, SIM reader lower right (super screws) 923-04981 (1) lower middle 923-04982 (1) SIM reader upper left

---

<b>Name</b>	<b>Numbers</b>	<b>Screws</b>
<b>Taptic Engine connector cowling</b>	923-04977	923-04978 (2)
<b>TrueDepth Camera</b>	661-23798	—
<b>Upper cowling</b>	923-04985	923-04982 (3) upper right, lower left, lower right 923-04988 (1) upper left


---

# Screws

## Warning

- Never reinstall a screw after it has been removed. Install only new screws. iPhone screw grooves are covered in adhesive that can't be reused.
- Use only the torque driver indicated to install new screws during reassembly. Both overtightened screws and loose screws can damage parts.

**Note:** You can use any torque driver to remove screws.

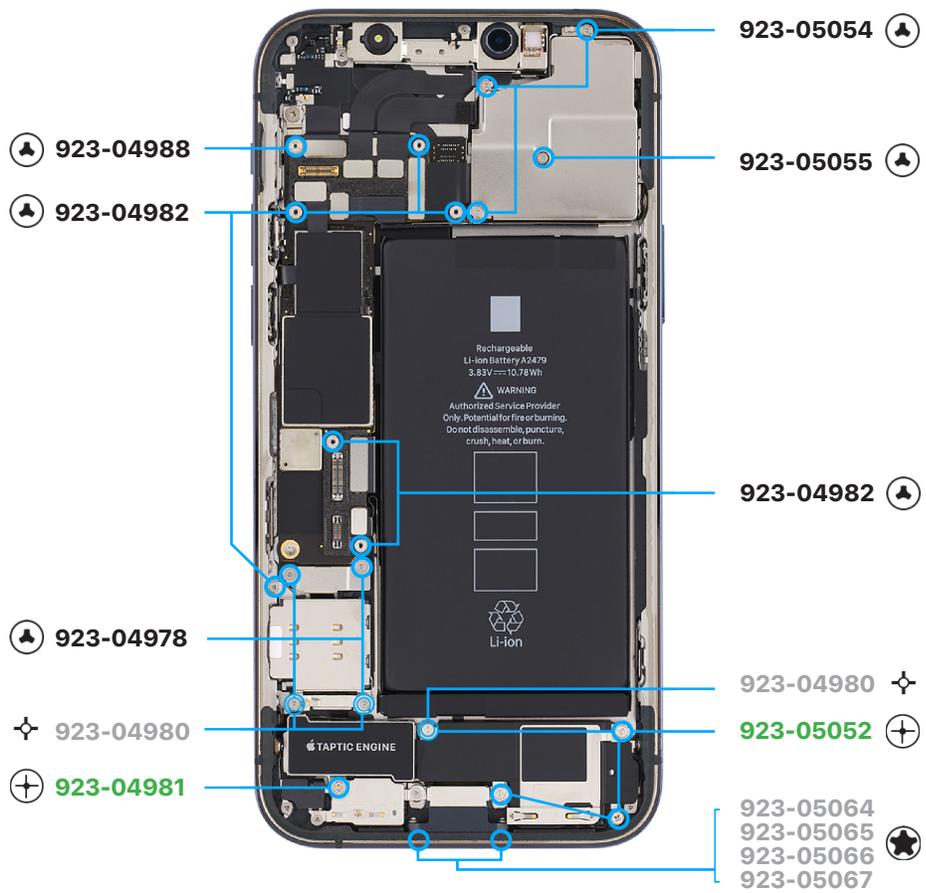

- Torque driver (black, 0.35 kgf cm)**
- Torque driver (green, 0.45 kgf cm)**
- Torque driver (gray, 0.55 kgf cm)**

-  Crosshead screw
-  Super screw\*
-  Trilobe screw
-  Security screw
-  Single screw
-  Screw with super screw underneath

\*A super screw has a threaded hole that holds another screw.

# Tools

Tools with part numbers are available for purchase from the Self Service Repair Store. Tools without part numbers can be purchased from electronics supply retailers.

**923-04877**  
6.1-inch back protective cover



**923-04878**  
6.1-inch display protective cover



**661-29193**  
6.1-inch heated display pocket




**923-04908**  
6.1-inch repair tray



**923-01092**  
Adhesive cutter



**923-02657**  
Battery press

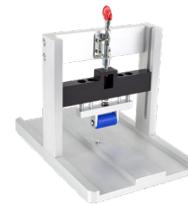

Cut-resistant gloves



**923-04911**  
Display adhesive press plate



**661-08916**  
Display press



ESD mat



ESD-safe cleaning solution



ESD-safe tweezers



ESD wrist strap with clip or plug



Ethanol wipes<sup>1</sup>



[661-28152](#)

Heated display removal fixture<sup>2</sup>



Heat-resistant gloves



IPA wipes



[923-01290](#)

Micro stix® bit



Nitrile or lint-free gloves



[922-5065](#)

Nylon probe (black stick)



Safety glasses with side shields



<p>Sand<sup>3</sup></p> 	<p>Sand container<sup>4</sup></p> 	<p><b>923-02066</b> Super screw bit</p>  
<p><b>923-0248</b> Torque driver (black, 0.35 kgf cm) kit<sup>5</sup></p>   	<p><b>923-00738</b> Torque driver (gray, 0.55 kgf cm)</p> 	<p><b>923-00105</b> Torque driver (green, 0.45 kgf cm)</p> 

<sup>1</sup> Ethanol wipes must contain at least 90% ethanol and no additives except isopropyl alcohol.

<sup>2</sup> Refer to the [Heated Display Removal Fixture Operating Manual](#) for general use and precautions.

<sup>3</sup> Clean, dry, untreated sand (8–10 cups)

<sup>4</sup> Sand container (wide-mouthed, quick pour, nonbreakable plastic container with a flip-top lid)

<sup>5</sup> The black torque driver kit includes a black torque driver (0.35 kgf cm), Torx® security bit (923-0247), and JCIS bit (923-0246). The bits are also available separately.

## Heated Display Removal Fixture

**Note:** A rented heated display removal fixture may have different packaging than shown. If your fixture came with a USB cable, set the cable aside. This setup doesn't require it.

1. Remove the fixture from the box. Then remove the packing foam.




### Caution

Don't lift the fixture by the knob.



2. Cut and remove the zip tie from the handle.

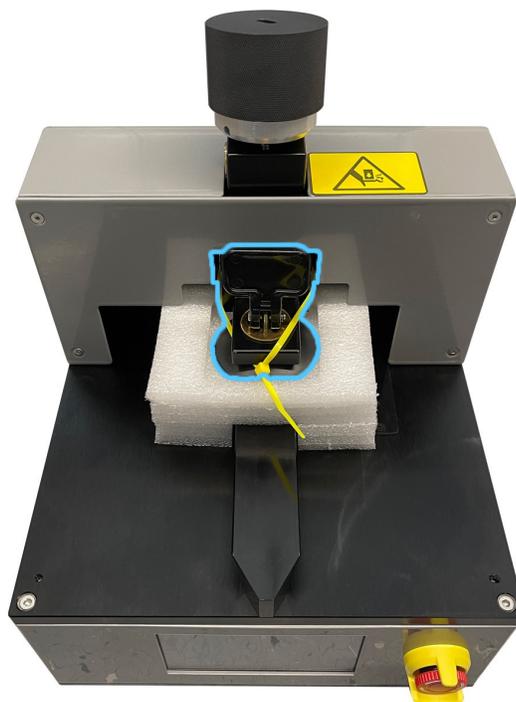

3. Turn the top knob on the fixture counterclockwise to raise the suction cup. Remove the packing foam.



4. Turn the emergency stop knob clockwise until it clicks and protrudes from the stop guard.



5. Plug the power cord into the fixture. The fixture won't turn on until you flip the switch on the back.

# Battery Safety

## Warning

- This device contains a built-in lithium-ion rechargeable battery with soft battery cells. Battery safety is the number one concern when repairing a device with a built-in lithium-ion battery.
- Only technicians with the knowledge, experience, and tools required to repair electronic devices should replace a battery.
- Improper battery replacement, improper handling of parts, failure to discharge the battery before repair, or failure to follow the provided instructions could cause battery overheating, swelling, venting, leaking, or a battery thermal event. These events could result in fire, injury, death, data loss, or damage to the device, parts, or other property.
- To avoid these potentially harmful events, follow the battery safety guidelines and work in a safety-focused workspace with the tools listed below. It's important to be prepared for all possible outcomes.

## How to set up a workspace for battery safety

### Tools

- Clean, dry, untreated sand (8–10 cups)
- Sand container (wide-mouthed, quick pour, nonbreakable plastic container with a flip-top lid)
- Heat-resistant gloves
- Safety glasses with side shields
- ESD-safe cleaning solution

Workspaces used to repair Apple devices should meet the following criteria:

- Nonflammable and electrostatic discharge (ESD)-safe work bench
- At least 2 feet away from paper and other combustible materials
- Sand container within reach (2 feet) on one side of the workspace, not above the workspace
- Adequate ventilation

 **Warning****How to handle a battery thermal event**

A battery thermal event is a rapid chemical chain reaction that occurs inside a battery cell. The energy stored in the battery is released suddenly, which can cause outgassing and fire. A battery thermal event can be triggered by physical damage to the battery, improper replacement or repair, or temperatures outside the battery's operating range.

Act immediately if you notice any of the following signs of a battery thermal event:

- The lithium-ion battery or a device that contains one begins to smoke or emit sparks or soot.
- The battery pouch suddenly and quickly puffs out.
- The lithium-ion battery or a device that contains one begins to emit hissing or popping sounds.

Do smother the battery or device immediately with plenty of clean, dry sand. Dump the sand all at once. Timing is critical — the faster you pour all the sand, the sooner the reaction will be contained.

Do contact local fire authorities if further assistance is needed.

Do leave the room for 30 minutes after the reaction is contained. Ventilate the area. Don't return until the area is clear of smoke.

Do wait 30 minutes before touching the device. Wear the heat-resistant gloves and safety glasses with side shields to remove the device from the sand.

Do wipe the affected area with water first. Then wipe the area with an ESD-safe cleaning solution.

Do dispose of the damaged battery or device (including any debris removed from the sand) according to local environmental laws and guidelines.

## How to handle batteries

### **Warning**

Fully discharge the battery before you begin a repair. A discharged battery is less susceptible to a battery thermal event. If you can't determine the battery level, don't repair the device.

Perform the following steps to discharge the battery:

- Disconnect all external cables.
- Remove all cases and covers.
- Turn on the flashlight from the Lock Screen, in Control Center, or by asking Siri. Wait until the device has turned off and the flashlight is no longer illuminated.

### **Caution**

The flashlight produces heat. Keep the iPhone in a well-ventilated area while the flashlight is illuminated.

### **Best practices**

- To avoid noxious fumes or a battery thermal event, don't puncture, strike, or crush a lithium-ion battery or a device that contains one.
- Keep your workspace clear of foreign objects and sharp materials.
- Be careful when using sharp tools near the battery.
- Don't leave loose screws, extra screws, or small parts inside the device.
- Don't use tools that conduct electricity.
- Don't throw or drop the battery.
- Don't expose the battery to excessive heat or sunlight, or temperatures outside the battery's operating range.
- Handle and dispose of waste batteries in accordance with local laws and regulations.

## Broken Glass

### **Warning**

iPhone displays and some back covers are made of glass. The glass could break if the iPhone is dropped on a hard surface, receives a substantial impact, or is crushed, bent, or deformed. Don't attempt to remove chipped or cracked glass shards without protection.

### Tools

- Back protective cover
- Cut-resistant gloves
- Display protective cover
- Heated display pocket
- Safety glasses with side shields
- Vacuum cleaner

### If the iPhone glass is broken, perform the following steps before you begin a repair:

1. Put on safety glasses with side shields and the cut-resistant gloves.
2. Use a vacuum cleaner to remove glass pieces from your workspace and the iPhone.
3. Attach a protective cover to the broken glass to prevent injury or scattering of glass. Each protective cover has a release liner underneath. Slowly pull the release liner out from under the protective cover while pressing the cover onto the enclosure.
4. Fold the release liner. Use the shiny side of the release liner to firmly press the protective cover onto the broken glass and smooth out any air bubbles.



5. Wait at least 12 minutes for the bond between the protective cover and the glass to strengthen.
6. If the back glass is broken, place the iPhone into the heated display pocket.

**If the iPhone has any of the following conditions, stop the repair:**

- There's no glass or insufficient glass for the protective cover to adhere to.
- The protective cover doesn't adhere to the iPhone.
- The iPhone doesn't fit in the heated display pocket.

You can find a service option at [support.apple.com/repair](https://support.apple.com/repair).

# First Steps

## Always perform the following steps before starting a repair:

- [Back up the iPhone.](#)
- [Discharge the battery fully.](#)
- [Turn off the iPhone.](#)
- Disconnect all cables.
- Remove all cases and covers.
- Clear and clean your workspace.
- Put on an ESD wrist strap and attach it to a properly grounded ESD mat.



### Caution

ESD (electrostatic discharge, or the release of static electricity) can damage electronic components.

## Be aware of the following while performing a repair:

- The manual for this model may show images of other models, but the procedures are the same. Ensure that you use the correct tools for the model you're repairing.
- Take your time. Thoroughly read all instructions and alerts.
- Magnetizing the torque drivers will make it easier to work with small screws.
- The end of each flex cable must align with its connector. Press the end of each flex cable to its connector until it clicks to ensure that it's secure.



### Warning

Loose screws, extra screws, or small parts inside the device can damage the battery and cause safety issues. Set aside all parts and screws removed during the repair and account for them at the end of the repair.

# SIM Tray

## Tools

- SIM-eject tool or paper clip

## Removal

1. [Find your model to locate the SIM tray.](#)
2. Insert a paper clip or SIM-eject tool into the hole next to the SIM tray.
3. Push the paper clip or SIM-eject tool toward the enclosure to eject the SIM tray.
4. Remove the SIM tray.

## Reassembly

1. Press the SIM tray back into the side of the enclosure.

# Display

## Before You Begin

### **Warning**

- Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.
- Read [Broken Glass](#) before you begin.

### Tools

- 6.1-inch heated display pocket
- 6.1-inch repair tray
- Adhesive cutter
- Display adhesive press plate
- Display press
- ESD-safe tweezers
- Ethanol wipes or isopropyl alcohol (IPA) wipes
- Heated display removal fixture
- Heat-resistant gloves
- Micro stix bit
- Nylon probe (black stick)
- Torque driver (black, 0.35 kgf cm)
- Torque driver (gray, 0.55 kgf cm)
- Torx security bit



**!** **Caution**

To avoid damaging the lenses, don't touch the TrueDepth camera assembly or nearby parts.

**!** **Caution**

- Don't touch the back of the display. Touching the back of the display may affect image quality.
- This procedure requires [System Configuration](#). After you've completed all removal and reassembly steps, follow the instructions to initiate System Configuration.

**Important**

Read [Heated Display Removal Fixture](#) if you're setting up the fixture for the first time.


## Removal

1. Use a torque driver and the Torx security bit to remove the two security screws, one from each side of the Lightning connector. Set aside the screws.



2. Flip the switch on the back of the heated display removal fixture to turn it on. The internal fan will turn on. Wait for a checkmark to appear on the screen.

**Note:** If an error code appears on the screen, turn off the fixture and turn it back on.

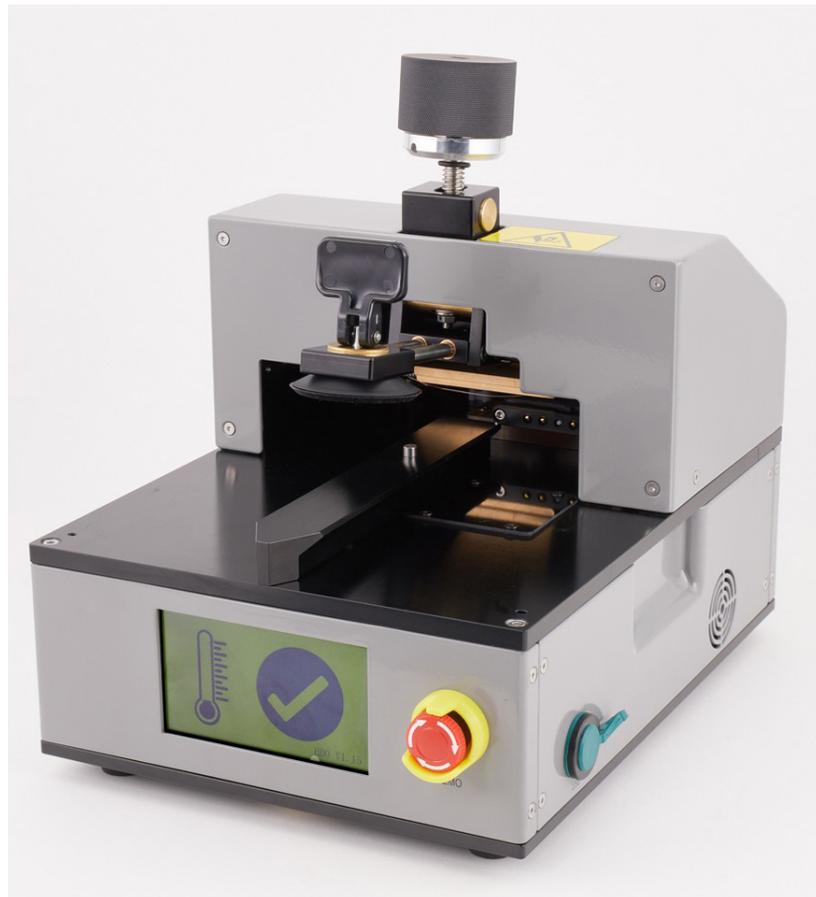

3. Gently insert the iPhone into the heated display pocket with the display faceup and the Lightning connector facing the bottom of the pocket.

**Important**

Ensure that the clamp on the side of the pocket is flipped up.




4. Flip down the clamp on the side of the pocket to lock the iPhone into place.



5. Put on the heat-resistant gloves. Align the cutout on the bottom of the pocket with the rail on the fixture. Slide the pocket with the iPhone onto the rail on the fixture.

 **Warning**

Don't insert the pocket into the fixture without wearing the heat-resistant gloves.

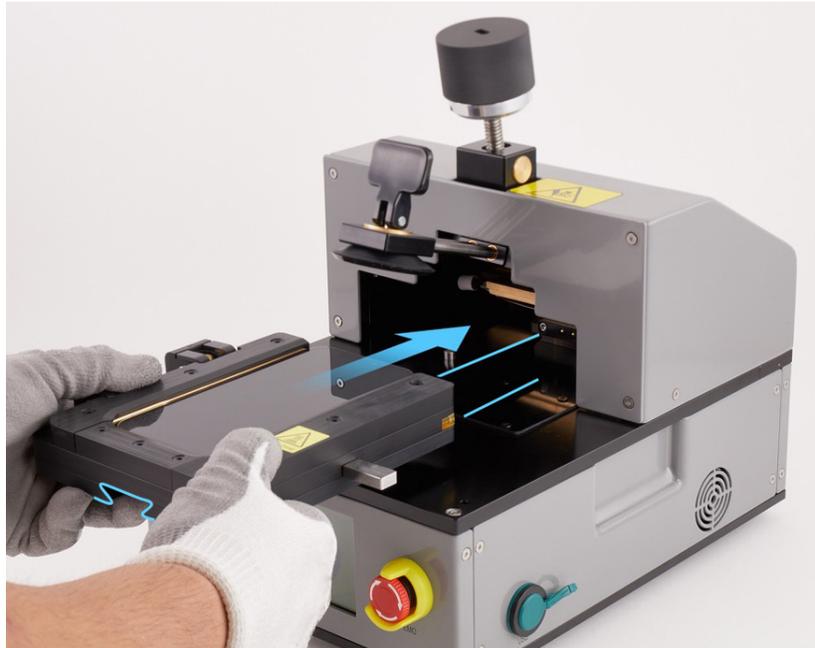

- Slide the pocket into the fixture until the pocket clicks into place.



**Note:** The screen on the fixture will turn red and the timer will count down from 2 minutes while the pocket heats to the correct temperature. When the timer shows 0, the fixture will start to beep and the screen will turn green.



- Turn the knob on the fixture clockwise to lower the suction cup as close to the iPhone as possible without touching the iPhone.

 **Caution**

To avoid damaging the iPhone, don't turn the knob before the fixture beeps, the screen has turned green, and the timer shows 0.

**Note:** The fixture will beep until the suction cup is lowered.



- Grasp the handle and slide the suction cup straight out until the edge of the suction cup aligns with the bottom edge of the display.

 **Caution**

Failure to align the edges of the suction cup and the display may damage the iPhone.



- Turn the knob on the fixture clockwise to lower the suction cup onto the display (1). Then flip down the handle on the suction cup to secure the suction cup to the display (2).

### Important

After the suction cup is lowered onto the iPhone, the screen will begin a 15-minute countdown. When the timer shows 0, the heated display removal fixture will turn off. Ensure that you complete steps 10 and 11 within this time frame.





- Slowly turn the knob on the fixture counterclockwise until the display begins to separate from the enclosure.

### Important

If you don't see a gap between the display and the enclosure immediately, wait 30 seconds. If you still don't see a gap, turn the silver part of the knob counterclockwise until the display begins to separate from the enclosure.




11. Insert the edge of the adhesive cutter between the display and the enclosure. Run the cutter between the display and the enclosure to the right and left as shown until the display partially releases from the enclosure.

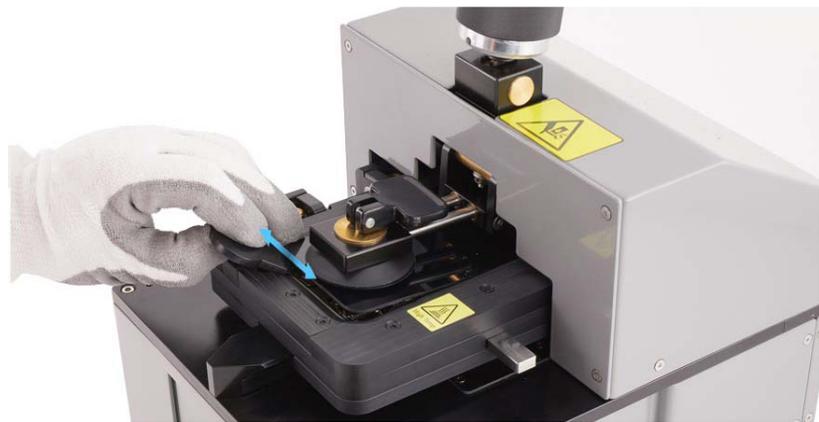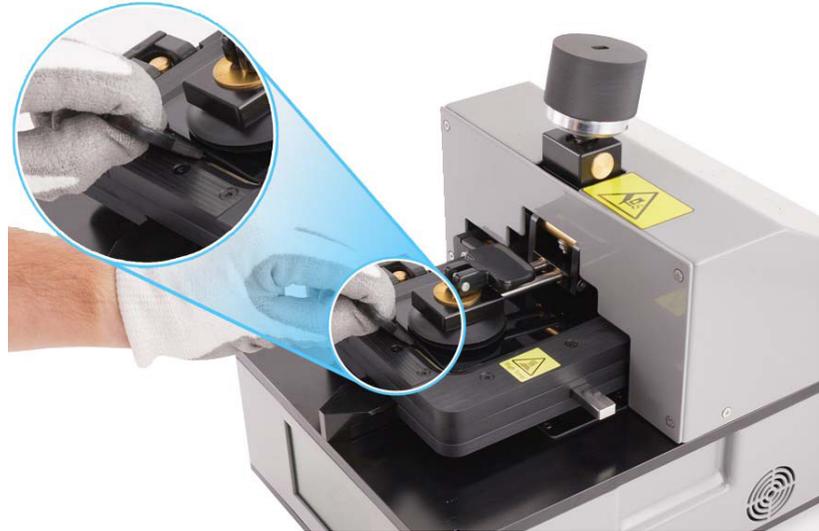

 **Caution**


To avoid damaging the flex cables, don't tilt up the bottom of the display more than 5 degrees.

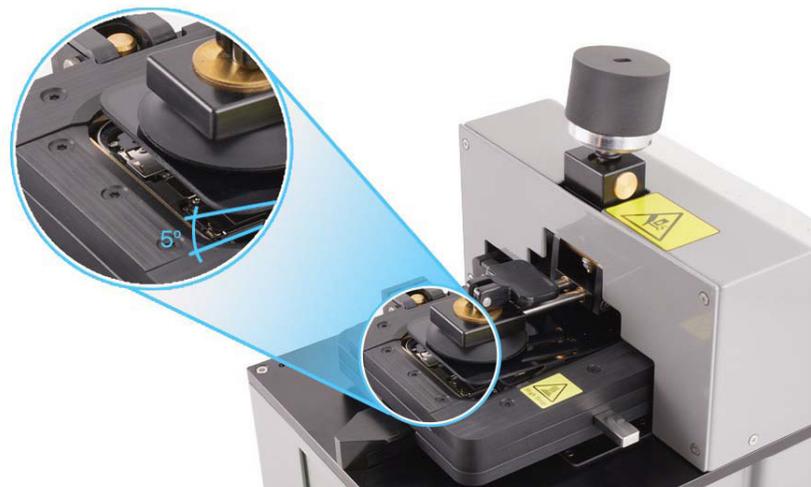

12. Flip up the handle to release the suction cup (1). Gently slide the flat end of the black stick under the edge of the suction cup to release it from the display (2).

 **Caution**


Don't turn the knob.  
Turning the knob may  
damage the flex cables.

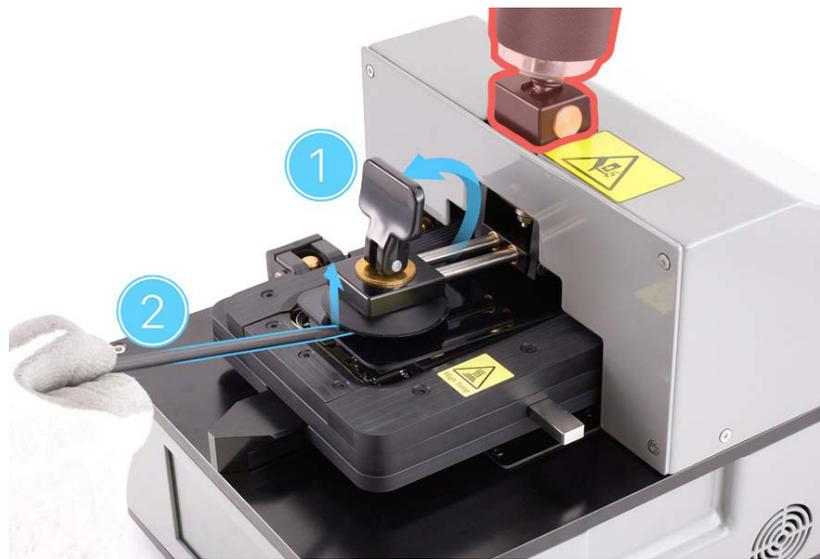

13. Press the eject button on the side of the pocket to release the pocket from the fixture.



14. Hold both sides of the pocket and slide it straight out of the fixture.

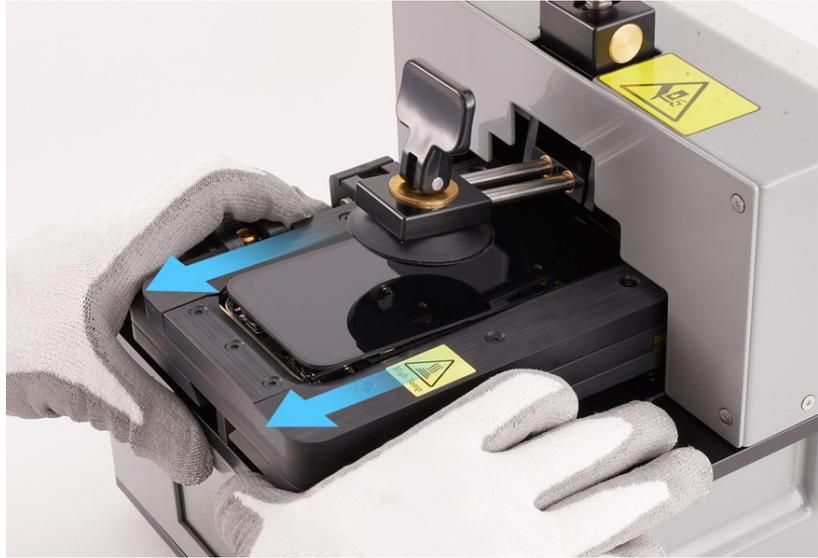


15. Flip up the clamp on the side of the pocket to release the iPhone (1). Hold the area outlined in blue and gently remove the iPhone from the pocket (2).



16. Place the iPhone into the repair tray with the display faceup and the Lightning connector facing the cutout. Remove the gloves.

17. Slide the display slightly toward the bottom of the iPhone.
18. Insert the edge of the adhesive cutter into the top of the iPhone between the display and the enclosure. Hold the adhesive cutter at a 45-degree angle. Start at the middle and cut along the top and sides of the iPhone until the display is free.

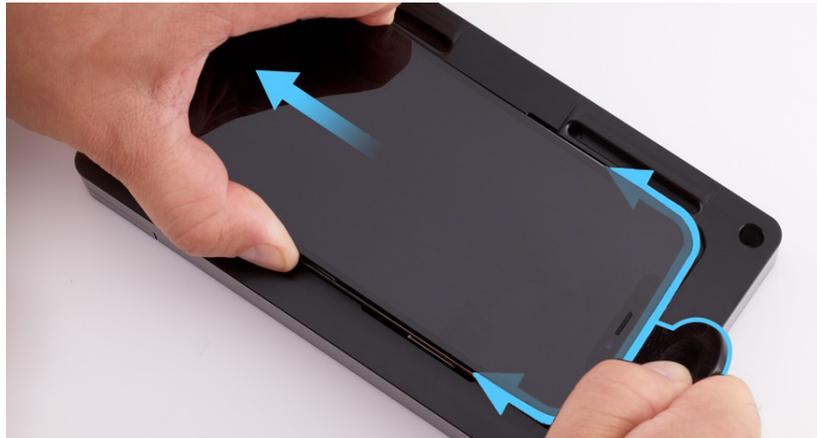

 **Caution**

To avoid damaging the flex cables, don't tilt up the bottom of the display more than 5 degrees.



19. Insert the repair tray suction cups into the slots in the repair tray.



20. Tilt up the display toward the suction cups. Press the top and bottom edges of the display to secure it to the suction cups.

**! Caution**


- To avoid damaging the enclosure or display, ensure that the internal display clips are released before you tilt up the display.
- Don't damage the flex cables as you tilt up the display.



**! Warning**

If the battery is dented, punctured, or otherwise damaged, stop the repair. You can find a service option at [support.apple.com/repair](https://support.apple.com/repair).

21. Use a torque driver and the Micro stix bit to remove the two trilobe screws from the lower cowling. Set aside the screws.

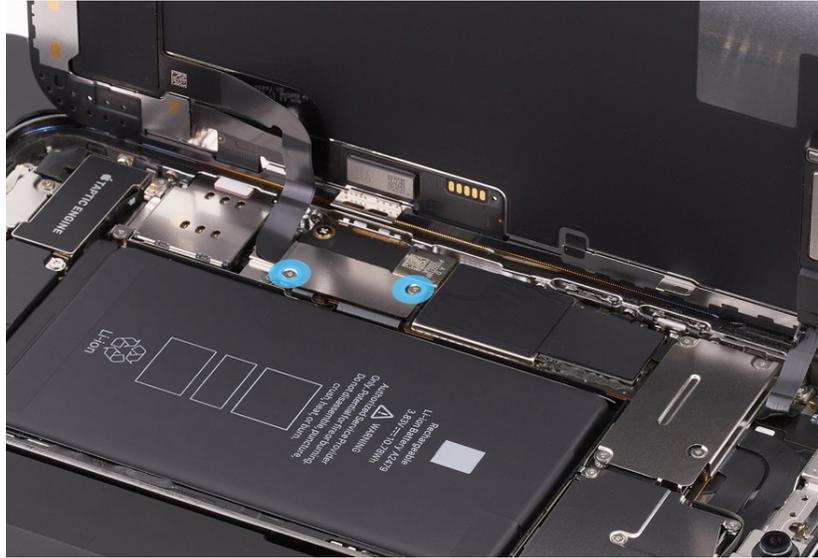

22. Use ESD-safe tweezers to remove the lower cowling. Save the cowling for reassembly.

23. Use a torque driver and the Micro stix bit to remove three trilobe screws from the upper cowling. Set aside the screws.



24. Hold the upper cowling in place and use a torque driver and the Micro stix bit to remove the last trilobe screw. Set aside the screw.




25. Use ESD-safe tweezers to remove the upper cowling. Save the cowling for reassembly.

26. Use the black stick to lift the end of the battery flex cable off the connector.

 **Caution**


You must disconnect the battery flex cable first to ensure that the iPhone remains turned off.

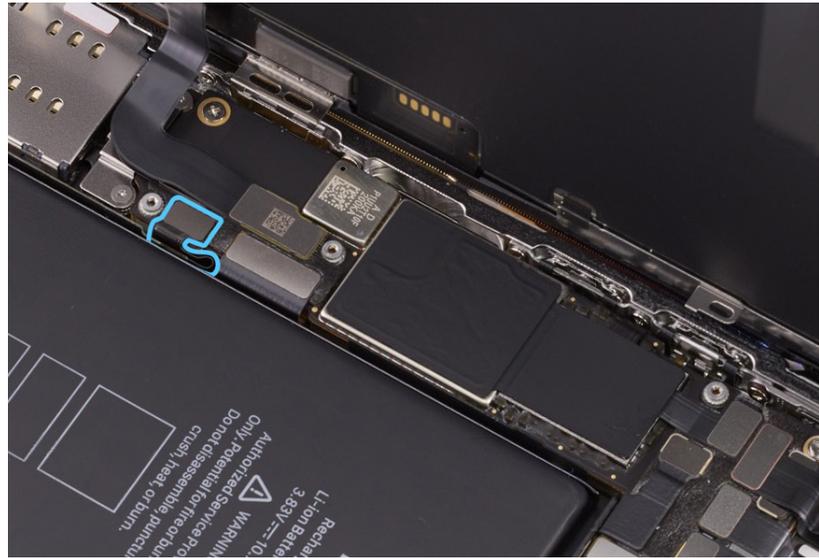

27. Use the black stick to lift the end of the display flex cable off the connector.



28. Use the black stick to lift the end of the Multi-Touch flex cable off the connector.

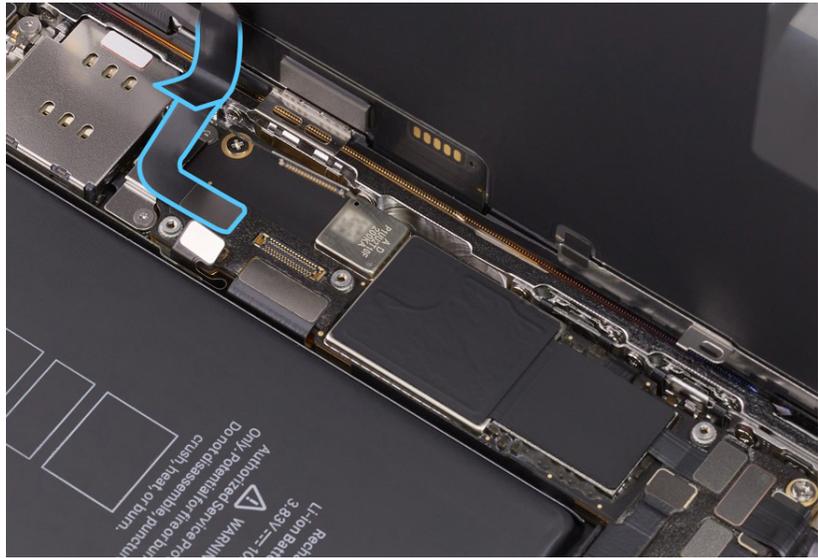


29. Use the black stick to lift the end of the receiver flex cable off the connector.



30. Hold the display by the edges. Pull the tabs on the suction cups to release them from the display. Then set the display facedown on a clean, flat surface.


31. Remove the suction cups from the repair tray.

32. Use ESD-safe tweezers to pick up the adhesive. Then pull the adhesive to remove it from the enclosure. Repeat this process until all the adhesive is removed from the perimeter of the enclosure.

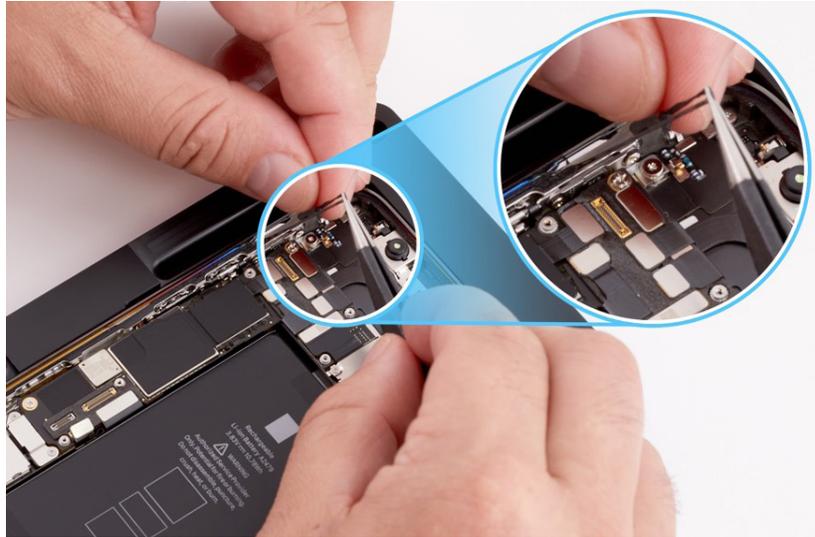

 **Caution**

Don't touch the TrueDepth camera assembly, grounding springs, or nearby parts.

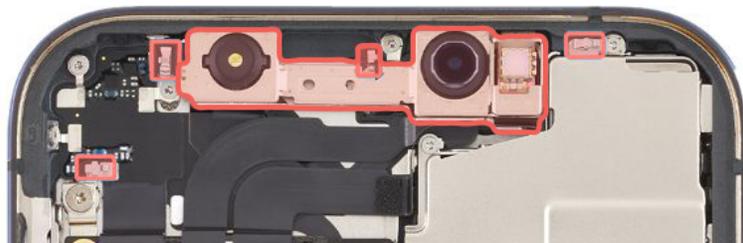


33. Use ethanol wipes or IPA wipes to clean all residual adhesive from the enclosure.

 **Caution**

Don't use ethanol wipes or IPA wipes on the display. Ethanol or isopropyl alcohol may damage the display and affect image quality.

## Reassembly

1. Inspect the internal display clips for damage before reassembly. Ensure that the internal display clips are at a 90-degree angle and aren't bent or damaged.

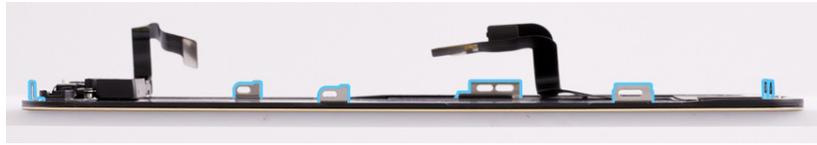

### Important

- If the internal display clips are damaged, you may need to replace the display.
- If you're installing a replacement display, peel the protective liner from its top and underside.

2. Place the enclosure in the repair tray with the Lightning connector facing the cutout.

3. Inspect the TrueDepth camera. Ensure that the top edge of the TrueDepth camera is under the lip of the enclosure.

**Correct position****Incorrect position****! Caution**

If the TrueDepth camera is positioned incorrectly, use the black stick to move it away from the grounding clip. Then insert the top edge of the TrueDepth camera under the lip of the enclosure.

**! Warning**

Inspect the enclosure for loose or extra screws and small parts, which can damage the battery and cause safety issues.

- Align the replacement display adhesive over the enclosure with the top holes over the TrueDepth camera assembly and the bottom tab on the right.


### **Caution**

Ensure that you've removed all residual adhesive from the display and the enclosure before you apply the replacement display adhesive.

- The replacement display adhesive has a top release liner, a middle release liner, and a bottom release liner. Grasp the tab on the bottom release liner. Then slowly pull the bottom release liner (1) out from under the adhesive (2) while pressing the adhesive onto the enclosure.

### **Important**

Don't remove the top release liner yet.

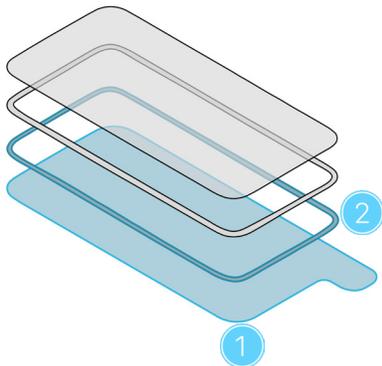

**1** Bottom release liner

**2** Adhesive

**Note:** The replacement display adhesive for your model may look different from the illustration, but the steps are the same.



6. Place the display adhesive press plate on top of the enclosure with the icon in the top right corner as shown.



7. Position the repair tray with the iPhone in the display press. Pull down the lever until the display press locks.



8. Wait until the display press beeps and the timer shows 0. Pull down the lever (1) and pull out the release knob (2). Then lift the lever (3).




9. Remove the repair tray from the display press and remove the press plate.

10. Remove the left section of the top release liner first (1). Then remove the three sections running along the top (2), right (3), and bottom (4).

### Important

Don't remove the middle release liner yet.

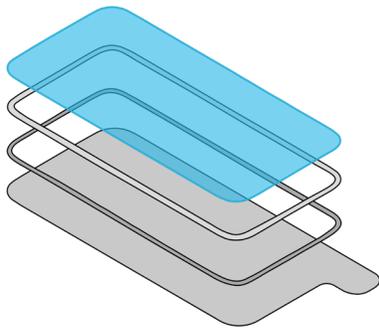

Top release liner



11. Insert the suction cups into the repair tray.

12. Rotate the repair tray. Align the left edge of the display with the left edge of the enclosure as shown. Gently press along the edges of the display to secure it to the suction cups.

13. Press the ends of the receiver flex cable (1), Multi-Touch flex cable (2), and the display flex cable (3) to the connectors. Press evenly along the length of each connector.

**Note:** The display flex cable covers the Multi-Touch flex cable.

14. Press the end of the battery flex cable to the connector (4). Press evenly along the length of the connector.




15. Use ESD-safe tweezers to position the lower cowlings over the ends of the Multi-Touch, display, and battery flex cables.

16. Use the black torque driver and Micro stix bit to install two new trilobe screws (923-04982) into the lower cowlings.



17. The upper cowlings has a tab near the second screw hole (2) that fits into a slot near the camera cowlings. Use ESD-safe tweezers to fit the tab into the slot. Then lower the cowlings over the end of the receiver flex cable.



18. Use the black torque driver and Micro stix bit to install four new trilobe screws (923-04988) (1) (923-04982) (2-4) into the upper cowlings in the order shown.

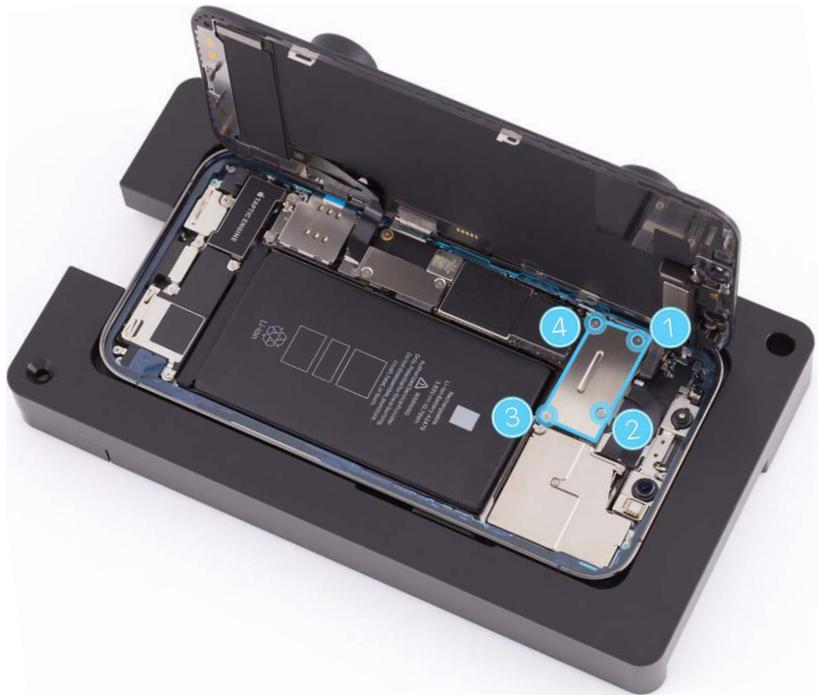

19. Peel the first strip of the middle release liner (1) counterclockwise, starting near the bottom right of the enclosure. Peel the second strip (2) clockwise, starting near the bottom right of the enclosure. Peel the third strip (3) counterclockwise, starting near the top left of the enclosure.

 **Caution**

The third strip of the middle release liner runs under two flex cables. Don't damage the flex cables while removing the release liner.

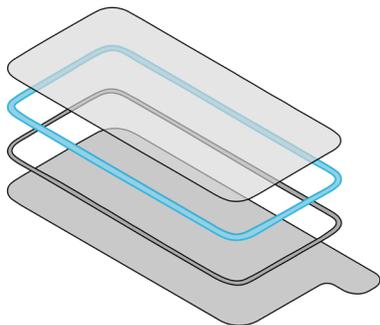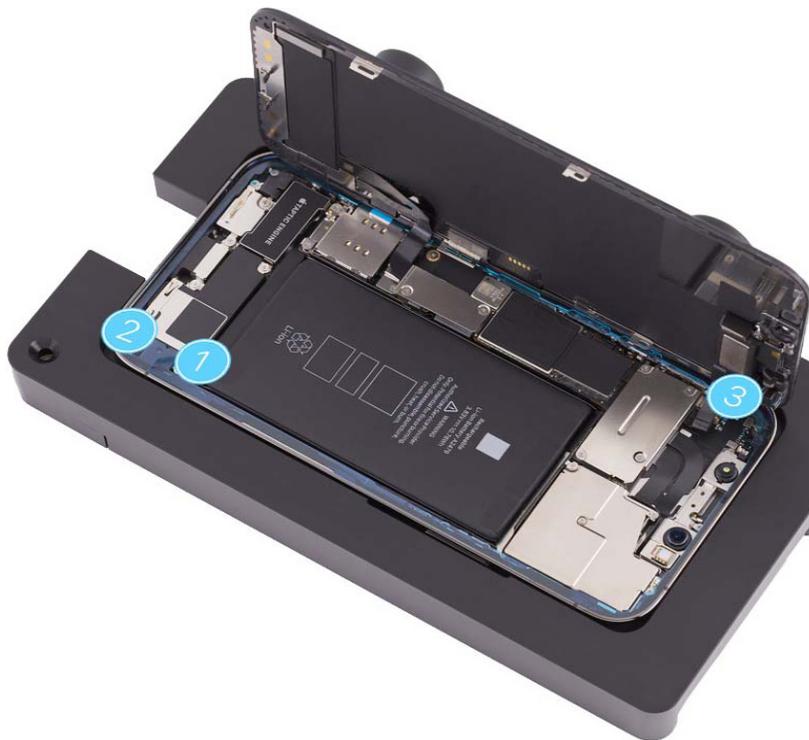

Middle release liner


20. Inspect the display adhesive to ensure that it's in the correct position and isn't damaged or wrinkled. If the adhesive is damaged, remove it and apply replacement adhesive.

21. Repeat step 3 to ensure that the TrueDepth camera is in the correct position. Then continue to step 22.

 **Warning**

Inspect the enclosure for loose or extra screws and small parts, which can damage the battery and cause safety issues.

22. Pull the tabs on the suction cups to release them from the display. Tilt down the display to rest on the enclosure.

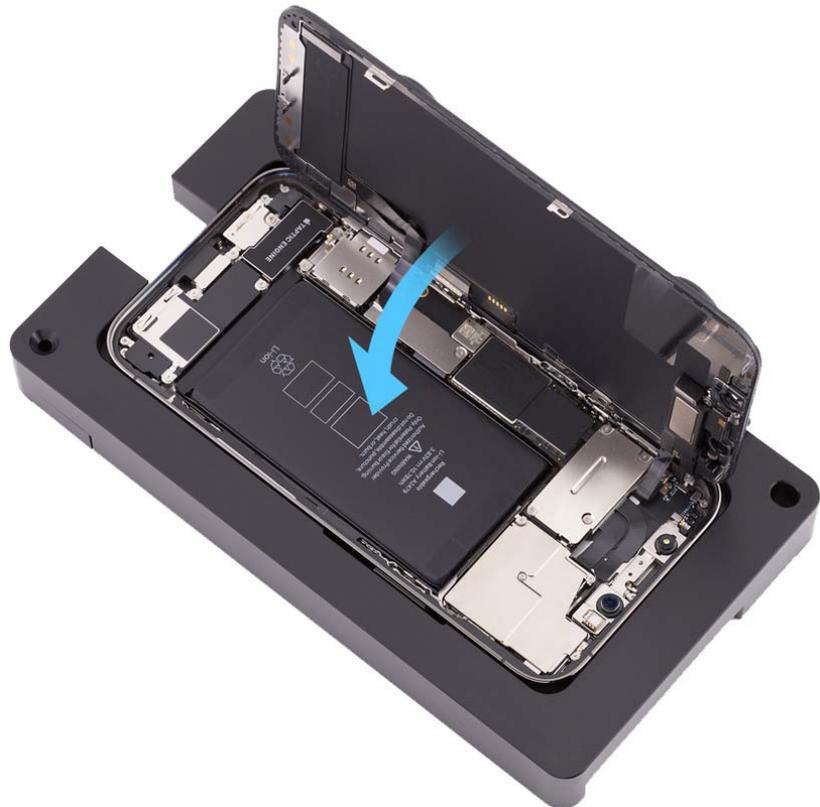

23. Remove the suction cups from the repair tray.

24. Press all four corners of the display simultaneously. Then press along the edges of the display until the display clicks into place and is flush with the enclosure.



 **Caution**

Ensure that the flex cables aren't trapped between the display and the enclosure. Feel the edges of the display for variations or gaps. If the display isn't flush, repeat all removal steps and check the flex cables for damage. Then repeat reassembly steps 1 through 24.

**Raised edges**



**Edges in correct position**



25. Position the repair tray with the iPhone in the display press. Pull down the lever until the display press locks.



26. Wait until the display press beeps and the timer shows 0. Pull down the lever (1) and pull out the release knob (2). Then lift the lever (3).



27. Remove the repair tray from the display press.

28. Use the gray torque driver and Torx security bit to install two new security screws, one on each side of the Lightning connector. As you install the screws, press lightly on the display near the Lightning connector.

**Note:** Use the correct screw color for your model.

- Gold (923-05066)
- Graphite (923-05067)
- Pacific blue (923-05064)
- Silver (923-05065)



 **Caution**

If the screws aren't flush, remove and set aside the screws. Repeat step 28 to install another new set of screws. If the new screws still aren't flush, repeat all removal and reassembly steps.

 **Caution**

- [System Configuration](#) is required if you've installed a replacement battery, display, camera, or TrueDepth camera. Disregard notifications about iPhone features on the Lock Screen until you complete System Configuration.
- After you've completed all removal and reassembly steps, initiate System Configuration. The method of initiating System Configuration will vary depending on the part or parts replaced.
  - **If you replaced the battery or display**, initiate System Configuration by [putting the device into diagnostics mode](#). Tap Start Diagnostics and follow the onscreen prompts.
  - **If you replaced the camera**, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).
  - **If you replaced the TrueDepth camera**, you will need the following:
    - The latest version of [Apple Service Utility](#) installed on a Mac running macOS 12.4 or later
    - Internet access
    - A Lightning cable

After you've installed Apple Service Utility on a Mac, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).

# Camera

## Before You Begin

### **Warning**

Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.

### Remove the following part before you begin:

- [Display](#)


### Tools

- 6.1-inch repair tray
- ESD-safe tweezers
- Micro stix bit
- Nitrile or lint-free gloves
- Nylon probe (black stick)
- Torque driver (black, 0.35 kgf cm)



### **Caution**

- To avoid damaging the lenses, don't touch the TrueDepth camera assembly or nearby parts.
- Avoid the grounding springs on the camera cowling and enclosure.

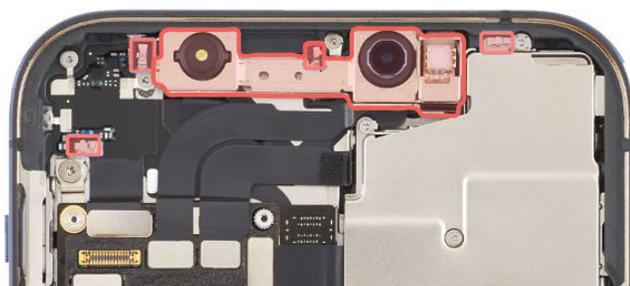


### **Caution**

This procedure requires [System Configuration](#). After you've completed all removal and reassembly steps, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).

## Removal

1. Place the enclosure in the repair tray with the Lightning connector facing the cutout.

2. Use a torque driver and the Micro stix bit to remove the four trilobe screws from the camera cowling in the order shown. Set aside the screws.

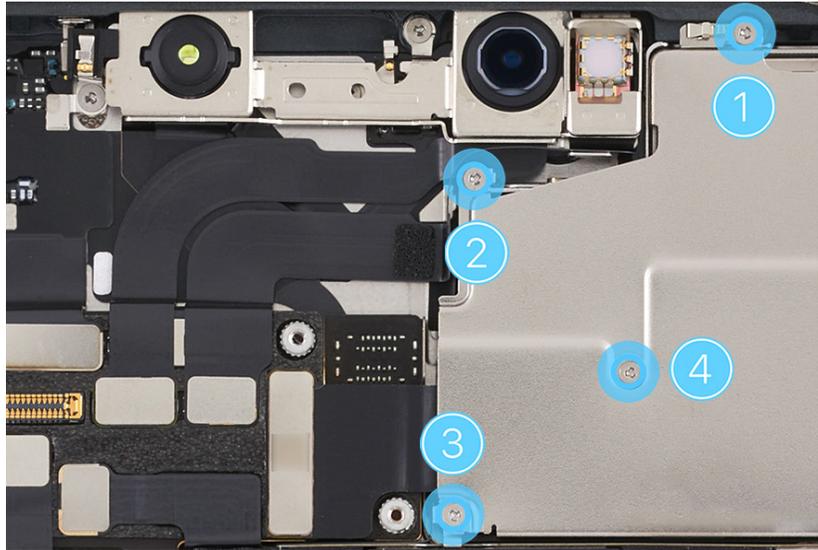

3. Use ESD-safe tweezers to tilt up the left side of the camera cowling as shown. Then slide the camera cowling out of the enclosure. Save the cowling for reassembly.




4. Use ESD-safe tweezers to gently lift the end of the top camera flex cable off the connector.


**Note:** One camera flex cable covers the other.



5. Use ESD-safe tweezers to gently lift the end of the bottom camera flex cable off the connector.

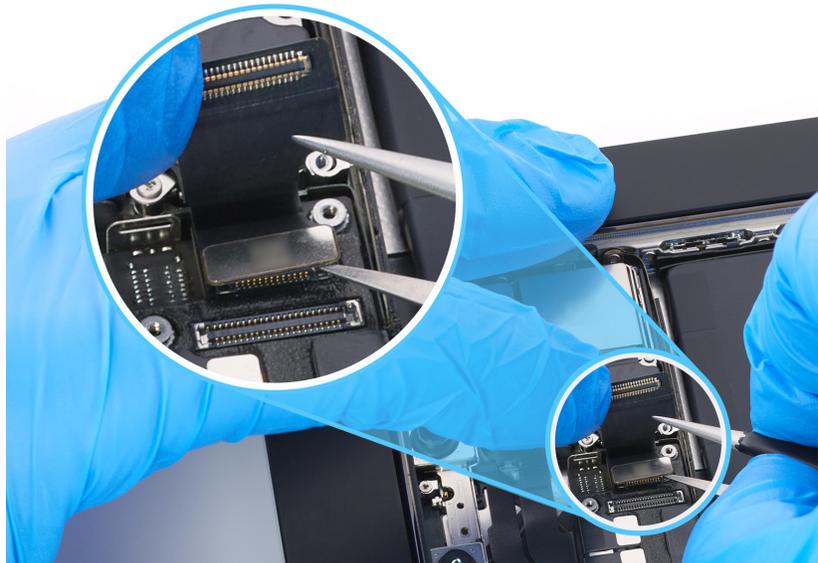


6. Gently hold the camera flex cables together and lift the cameras out of the enclosure.

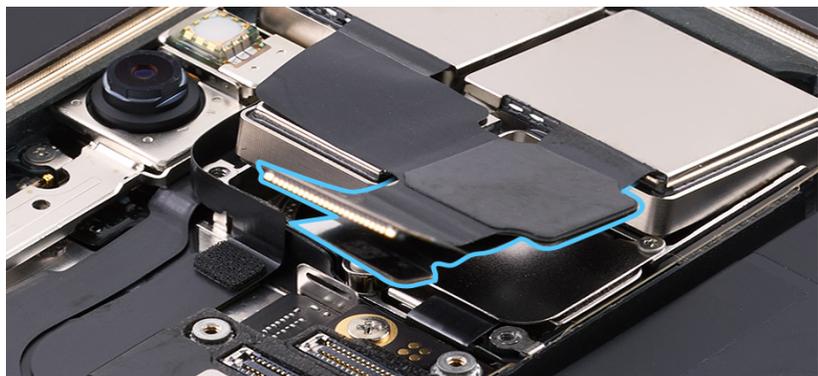

## Reassembly

1. Put on the gloves to prevent contamination of the camera lenses. Then hold the replacement cameras with the lenses facedown and remove the protective cover from the camera lenses.
2. Tilt down the cameras under the lip of the enclosure. Then lower the cameras into position.

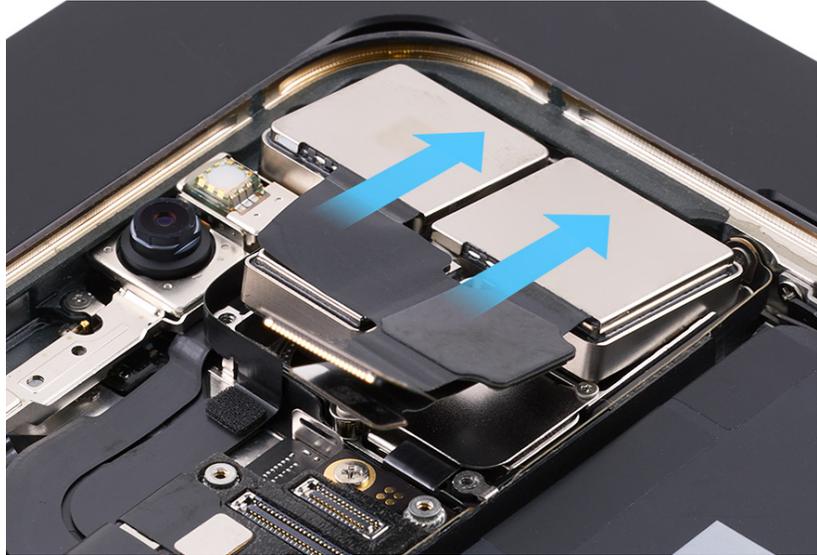

3. Press the end of the bottom camera flex cable to the connector.
4. Press the end of the top camera flex cable to the connector.
5. Lightly press the cameras into the enclosure.


- The camera cowling has tabs that fit into slots under the lip on the right side of the enclosure. Inspect the tabs and grounding spring on the cowling for damage before reassembly.




- Hold the cowling with ESD-safe tweezers and slide the cowling tabs into the slots. Then lower the cowling onto the cameras.

**!** **Caution**

- Avoid touching the grounding spring as you reinstall the camera cowling.
- Ensure that the screw cutouts in the camera cowling align with the screw holes. A misaligned camera cowling may affect display image quality.

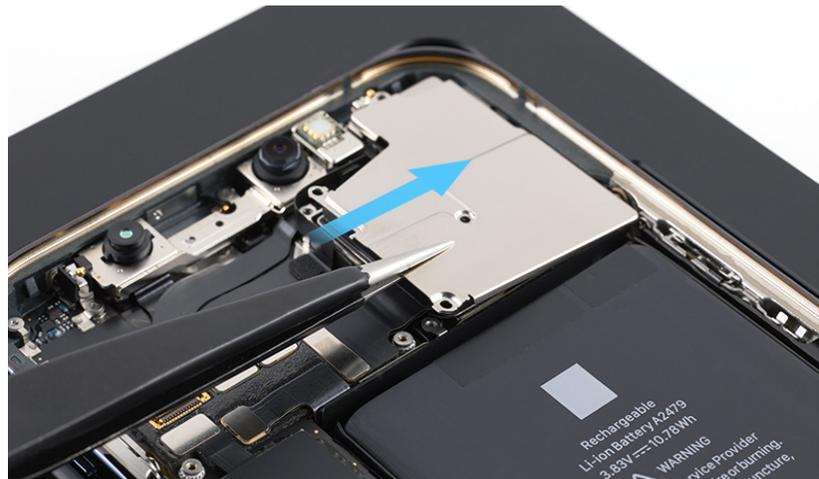

- Use the black torque driver and Micro stix bit to install four new trilobe screws (923-05055) (1) (923-05054) (2-4) into the camera cowling in the order shown.

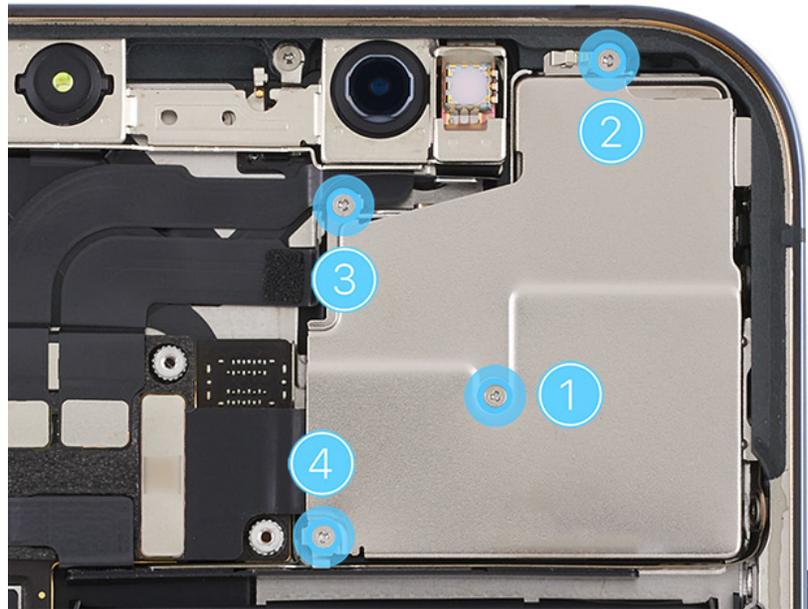

**Reinstall the following part to complete reassembly:**


- [Display](#)

 **Caution**

After you've completed all removal and reassembly steps, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).

During System Configuration, you will perform LiDAR Scanner calibration. Prepare for calibration by reviewing the following steps:

1. Use a well-lit area containing objects of different shapes and sizes.
2. Sit or stand 1 to 2 feet from the objects.
3. Hold the device vertically and rest your elbow on your body to help stabilize your arm.

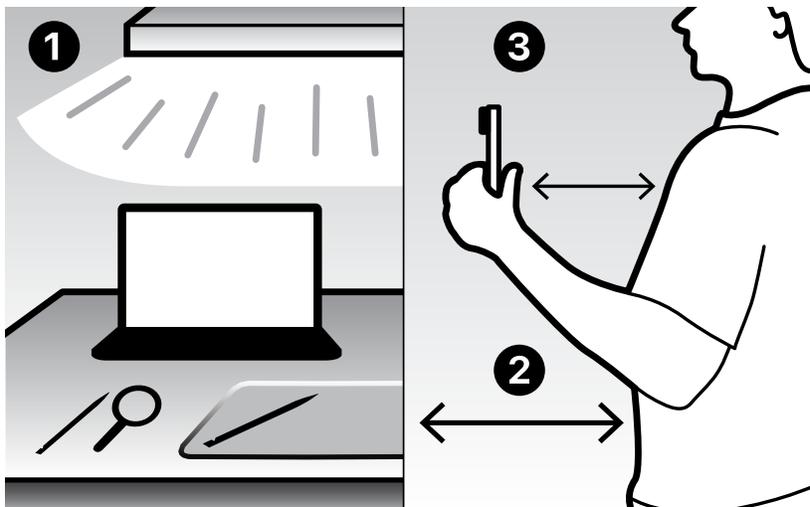

4. Start scanning by slowly panning back and forth to the left and right of the starting point. Follow the directions that appear on the device screen.



**Note:** The calibration process takes approximately 5 minutes.

# Speaker

## Before You Begin

### **Warning**


Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.

### Remove the following part before you begin:

- [Display](#)

### Tools

- 6.1-inch repair tray
- ESD-safe tweezers
- JCIS bit
- Nylon probe (black stick)
- Torque driver (green, 0.45 kgf cm)

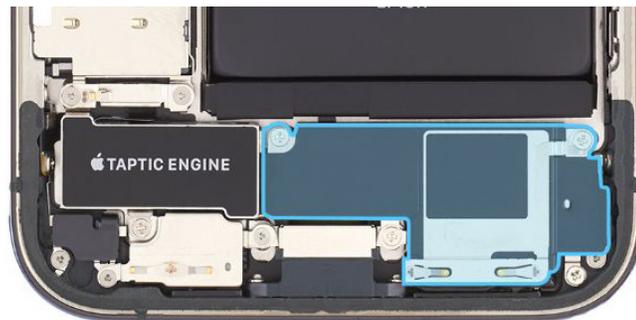

## Removal

1. Place the enclosure in the repair tray with the Lightning connector facing the cutout.
2. Use a torque driver and the JCIS bit to remove the four crosshead screws from the speaker. Set aside the screws.



3. Use the black stick to tilt up the speaker. Then remove the speaker from the enclosure.

## Reassembly

1. Rotate the repair tray. Ensure that the rubber gasket is positioned as shown. If the gasket is out of position, use ESD-safe tweezers to reposition it.



2. Rotate the repair tray. Tilt down the speaker and lower it into position.

 **Caution**

Don't damage the grounding springs on the speaker.



3. Use the green torque driver and JCIS bit to install four new crosshead screws (923-05052) into the speaker.



**Reinstall the following part to complete reassembly:**

- [Display](#)

# Battery

## Before You Begin

### Warning

- A battery should be replaced only by individual technicians with the knowledge and experience to repair electronic devices. Improper battery replacement, improper handling of parts, or failure to follow the provided instructions could result in fire, injury, data loss, or damage to the device, parts, or other property.
- Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.

### Remove the following parts before you begin:

- [Display](#)
- [Speaker](#)


### Tools

- 6.1-inch repair tray
- Battery press
- ESD-safe cleaning solution
- ESD-safe tweezers
- Ethanol wipes or isopropyl alcohol (IPA) wipes
- Heat-resistant gloves
- Nitrile or lint-free gloves
- Nylon probe (black stick)
- Safety glasses with side shields
- Sand
- Sand container
- Super screw bit
- Torque driver (gray, 0.55 kgf cm)



 **Caution**


To avoid damaging the lenses, don't touch the TrueDepth camera assembly or nearby parts.

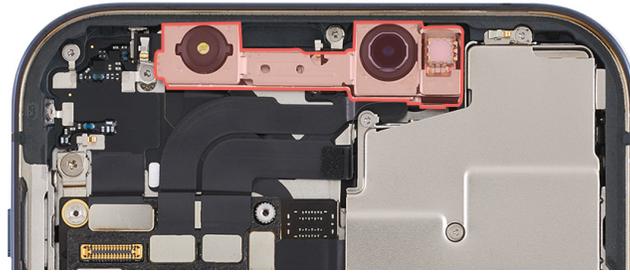 **Caution**

This procedure requires [System Configuration](#). After you've completed all removal and reassembly steps, follow the instructions to initiate System Configuration.

## Removal

1. Place the enclosure in the repair tray with the Lightning connector facing the cutout.
2. Use a torque driver and the screw super bit to remove the super screw from the upper right corner of the Taptic Engine. Set aside the screw.

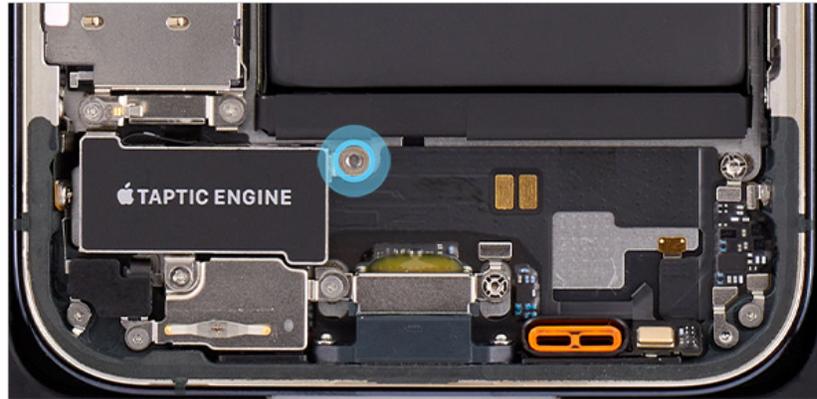

- Use ESD-safe tweezers to grasp the bottom right battery adhesive tab. Gently peel the adhesive tab away from the battery.

**Note:** The battery has four adhesive tabs.



 **Warning**

Don't scrape or puncture the battery with the tweezers.




4. Hold down the iPhone. Use ESD-safe tweezers to continue peeling the battery adhesive tab from the battery.



### Important


Peel the adhesive tab completely from the battery before twisting it around the tweezers.

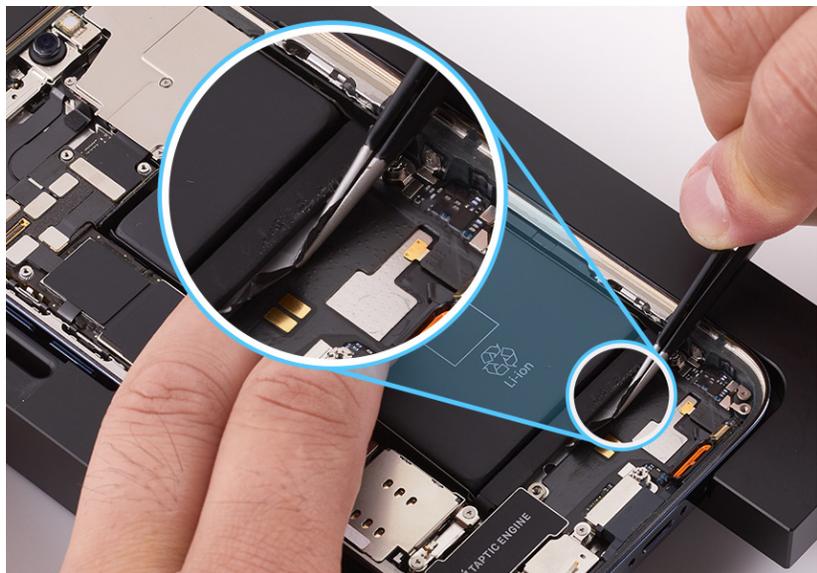

- Keep the tweezers close and parallel to the battery and twist until you see white adhesive strip on the tweezers.

### Important

Don't pull the tweezers until the white adhesive is wrapped around them.

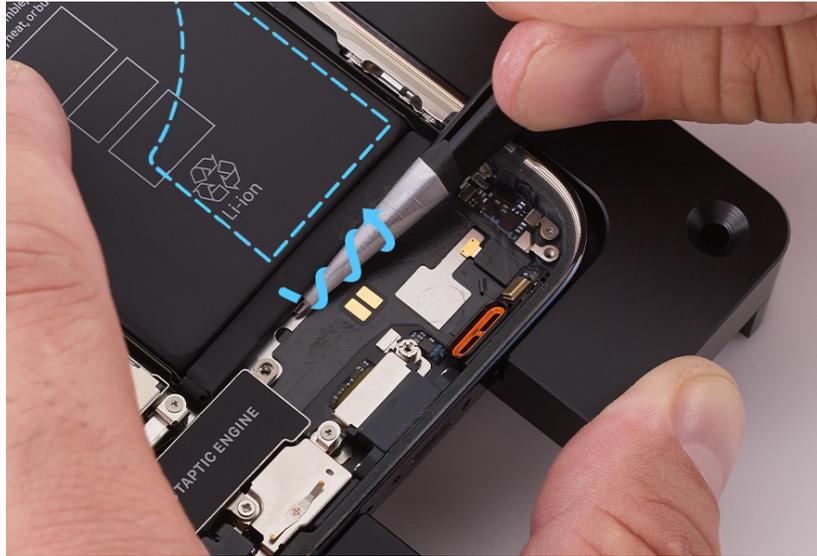


- Pull the tweezers toward the bottom of the iPhone and continue to twist the adhesive strip until you've removed the entire strip.

### Caution

Don't pull the adhesive strip against parts or screws.

### Important


If the battery adhesive tab or strip breaks off and you can still see it, attempt to retrieve it with the tweezers. Wrap the tab or strip around the tweezers and repeat steps 5 and 6. If you can't see the tab or strip, continue to step 7.

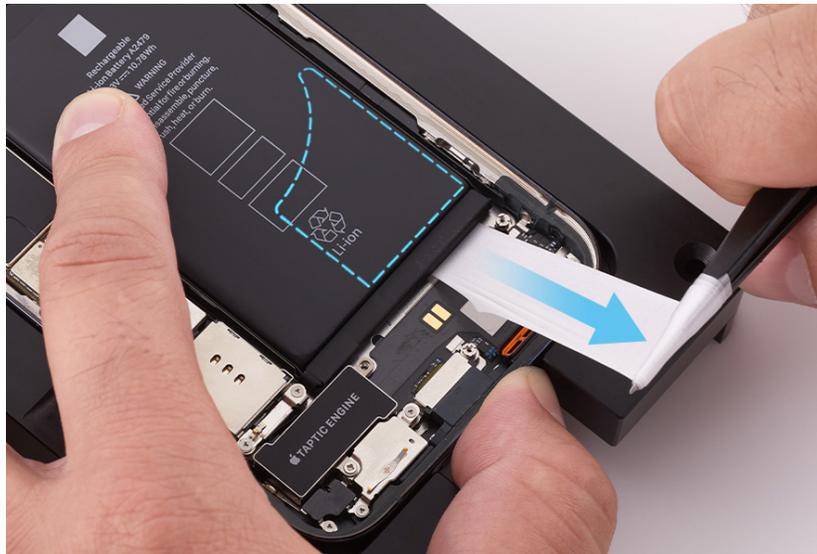

7. Use ESD-safe tweezers to grasp the bottom left battery adhesive tab. Gently peel the adhesive tab away from the battery.
8. Repeat steps 4 through 6 to remove the bottom left adhesive strip from the battery. If you remove the entire strip, continue to step 9.

### Important

- Pull the bottom left adhesive strip away from the Taptic Engine.
- If the battery adhesive tab or strip breaks off and you can still see it, attempt to retrieve it with the tweezers. Wrap the tab or strip around the tweezers and repeat steps 5 and 6. If you can't see the tab or strip, continue to step 9.

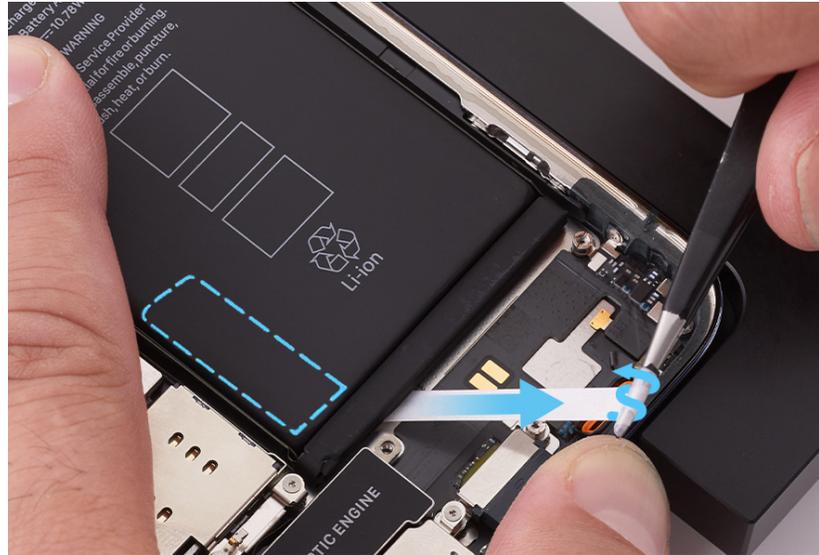

9. Rotate the repair tray and put on the nitrile or lint-free gloves.
10. Use ESD-safe tweezers to gently peel the two battery adhesive tabs from the top of the battery.

11. Hold down the iPhone. Use ESD-safe tweezers to grasp one battery adhesive tab. Then twist the tweezers to wrap the adhesive tab around them.

### Important

Hold the tweezers close and parallel to the battery as you twist.



12. Keep the tweezers in the channel between the battery and the camera cowling. Continue to slowly twist the tweezers until you've removed the entire adhesive strip.

### Important

If the battery adhesive tab or strip breaks off and you can still see it, attempt to retrieve it with the tweezers. Wrap the tab or strip around the tweezers and repeat step 12. If you can't see the tab or strip, continue to step 13.



13. Repeat steps 11 and 12 to remove the remaining battery adhesive strip from the top of the battery. If you remove the entire strip, continue to step 14.

### Important

If the battery adhesive tab or strip breaks off and you can still see it, attempt to retrieve it with the tweezers. Wrap the tab or strip around the tweezers and repeat step 12. If you can't see the tab or strip, continue to step 14.

14. If all four battery adhesive strips were fully removed, continue to step 16. If at least one strip was fully removed, continue to step 15.




### Warning

If all four strips were broken and can't be retrieved, don't forcibly pry the battery. Stop the repair. You can find a service option at [support.apple.com/repair](https://support.apple.com/repair).

 **Caution**

When using the black stick to remove the battery from the enclosure, don't damage the flex cables. Don't scrape, rip, tear, or otherwise damage the polyester film or other areas. If damage occurs, replace the iPhone.

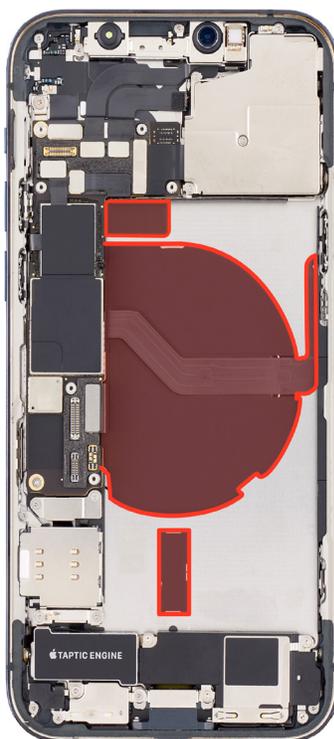

15. Insert the flat end of the black stick only into one of the insertion points as shown. Ensure that the black stick is inserted into a point where the battery strip has been fully removed. Don't insert the black stick into a point where the battery tab or strip is broken.



16. Slightly lift the battery with the black stick just enough to grasp underneath the battery.

 **Caution**

To avoid damage, don't press the black stick on the edge of the enclosure as you lift the battery.

17. Remove the battery from the enclosure. Then inspect the enclosure for damage. If the enclosure is damaged, replace the iPhone.

 **Warning**

If you can't remove the battery, stop the repair. You can find a service option at [support.apple.com/repair](https://support.apple.com/repair).

## Reassembly


1. Use the gray torque driver and super screw bit to install one new super screw (923-04980) into the upper right corner of the Taptic Engine.
2. Reinstall the [speaker](#). Then continue to step 3.
3. Use ethanol wipes or IPA wipes on the area shown in blue to remove any remaining adhesive from the enclosure.

### **Caution**

Don't use ethanol wipes or IPA wipes on the areas outlined in red. Ethanol or isopropyl alcohol may damage the polyester film and wireless charging unit.

### **Warning**

Inspect the enclosure for loose or extra screws and small parts, which can damage the battery and cause safety issues.

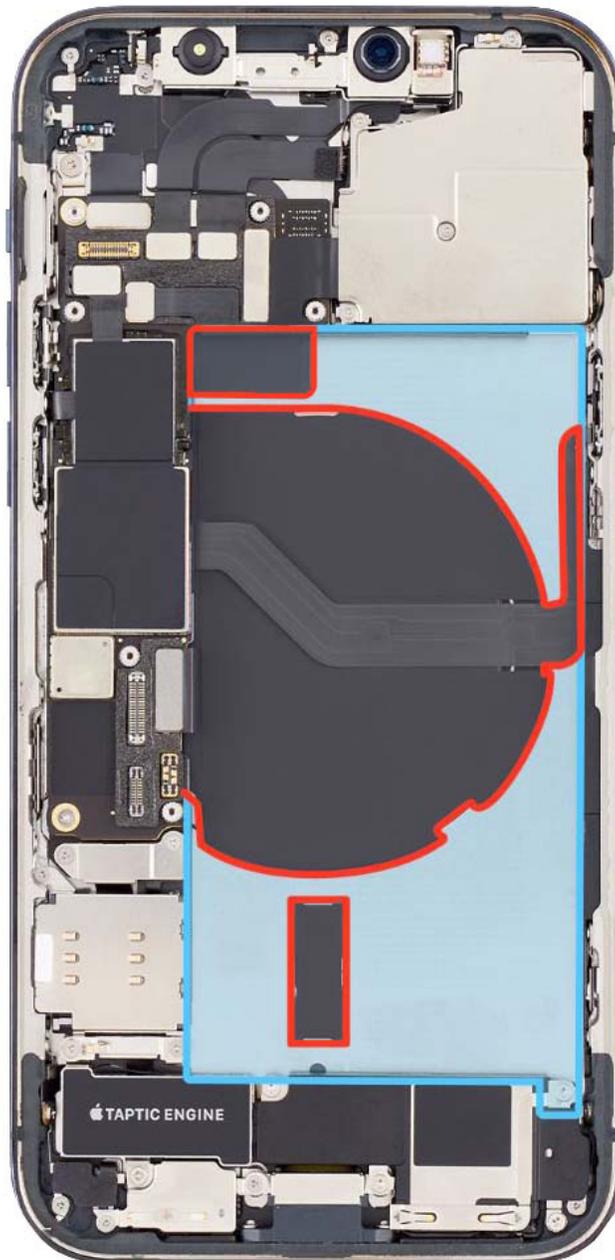


4. Peel the pink release liner from the underside of the replacement battery.

### Important


Don't remove the battery protective cover from the top of the battery yet.




5. Hold the battery over the enclosure with the protective cover faceup. Align the bottom of the battery with the speaker (1) and the left edge with the logic board (2). Then lower the battery into the enclosure.

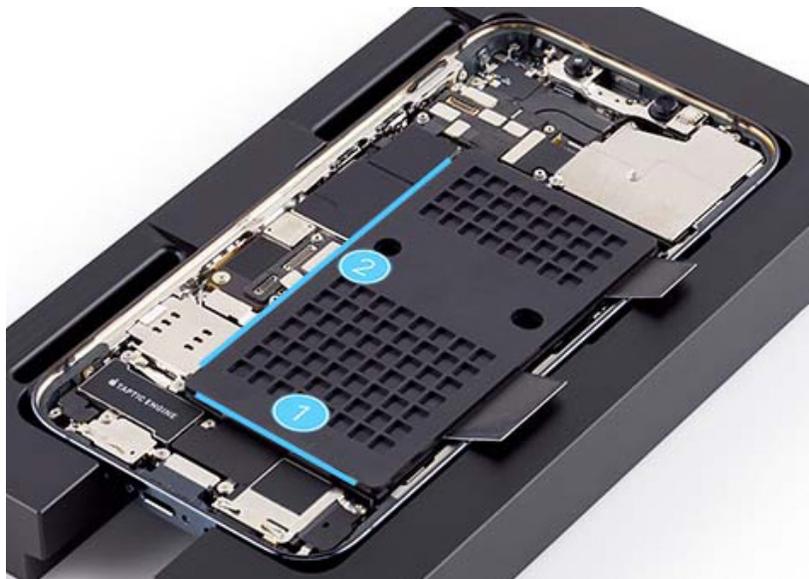


6. The center of the repair tray has two slots. Position the repair tray and enclosure onto the battery press with the left slot over the pin as shown.

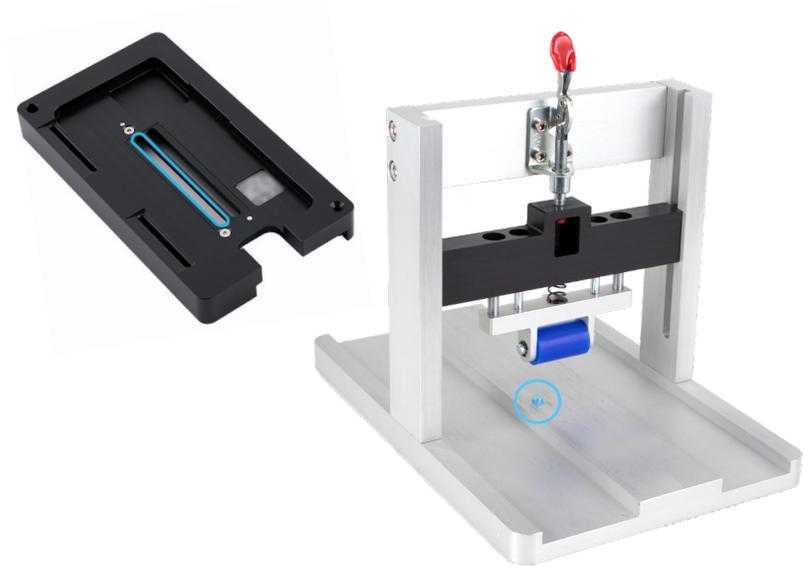


7. Flip down the red lever at the top of the battery press to lower the roller onto the battery.

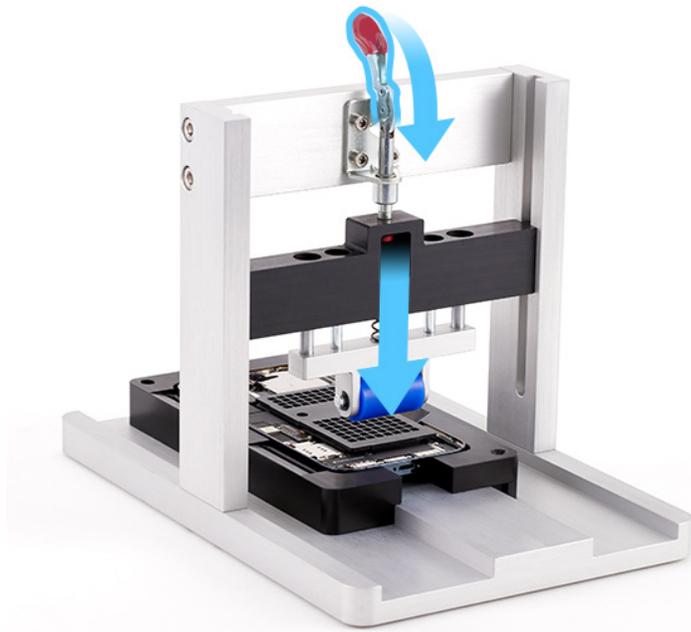


- Slide the repair tray back and forth through the battery press three times to adhere the battery to the enclosure.

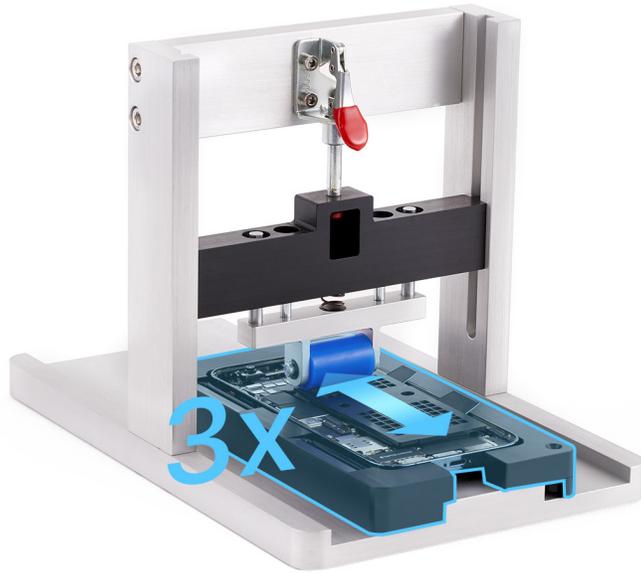


- Flip up the red lever.

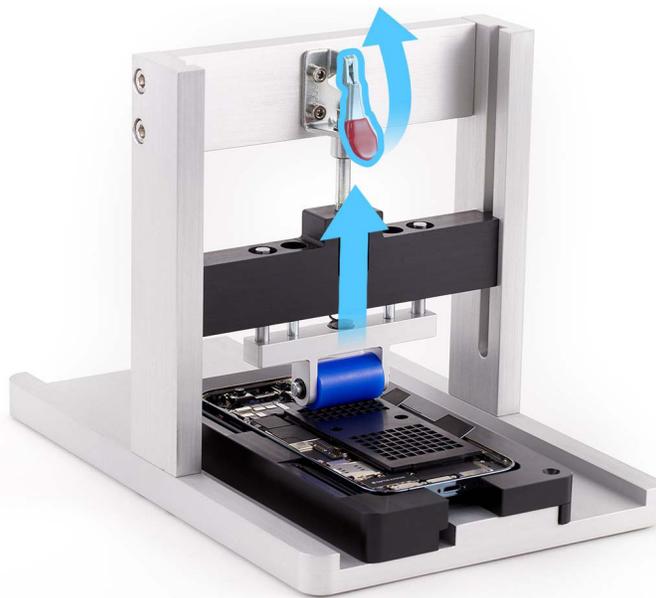


10. Position the repair tray and enclosure onto the battery press with the right slot over the pin.

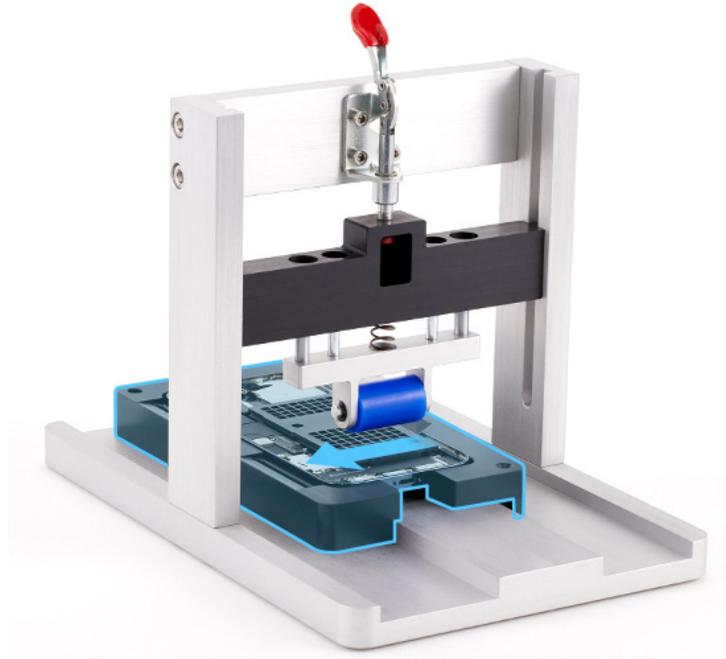


11. Flip down the red lever.

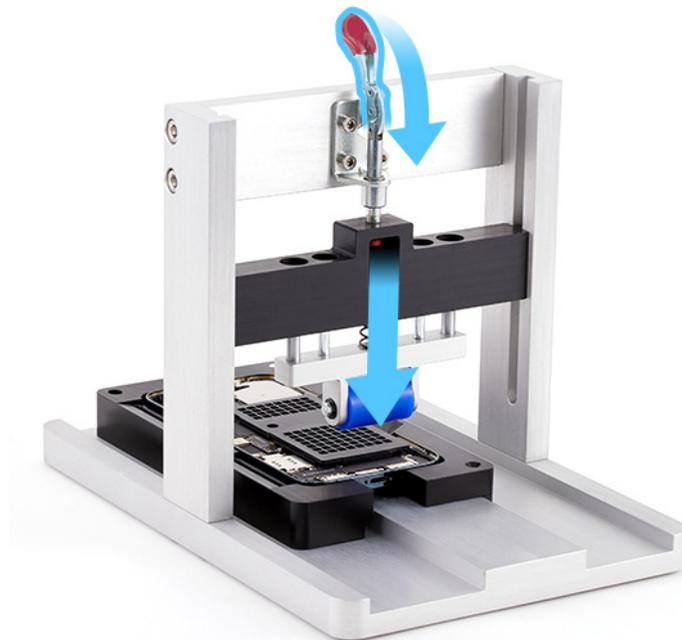

- Slide the repair tray back and forth through the battery press three times to adhere the battery to the enclosure.

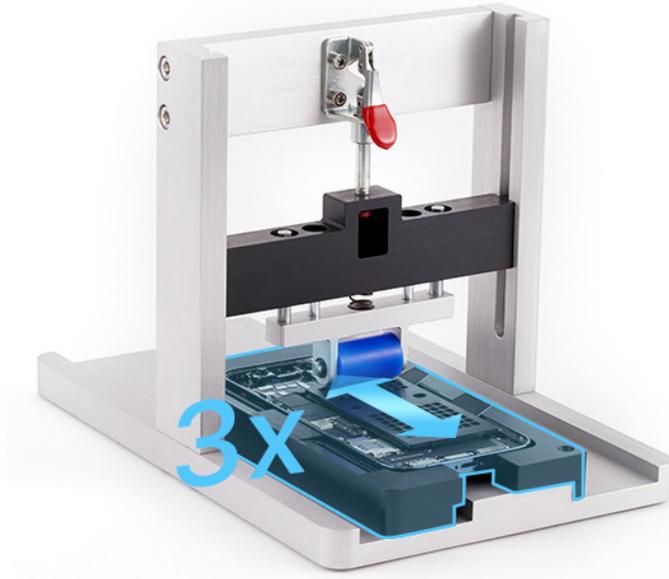

- Flip up the red lever.

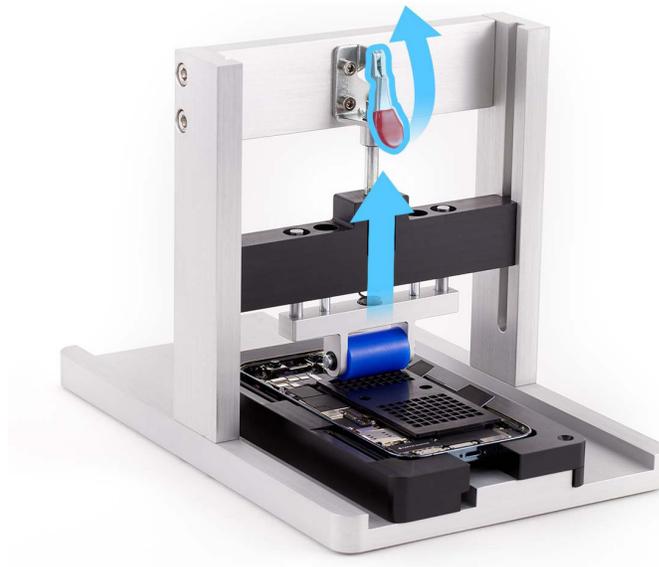

14. Remove the repair tray from the battery press.

15. Hold the edges of the protective cover. Pull the release tabs on the protective cover to remove the cover from the battery.

### Important

Don't press the area over the tab you're releasing.



**Reinstall the following part to complete reassembly:**

- [Display](#)

### Warning

Gently shake the iPhone. If the battery sounds loose, remove the [display](#) and the [battery](#). Then complete battery reassembly with another replacement battery.

### Important

A new battery is not charged. After you've completed all removal and reassembly steps, [charge the device](#) for a few minutes.

### Caution

After you've completed all removal and reassembly steps, initiate System Configuration by [putting the device into diagnostics mode](#). Tap Start Diagnostics and follow the onscreen prompts.

# Taptic Engine

## Before You Begin

### **Warning**

Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.

### Remove the following parts before you begin:

- [Display](#)
- [Speaker](#)

### Tools

- 6.1-inch repair tray
- ESD-safe tweezers
- JCIS bit
- Micro stix bit
- Nylon probe (black stick)
- SIM-eject tool
- Super screw bit
- Torque driver (black, 0.35 kgf cm)
- Torque driver (gray, 0.55 kgf cm)
- Torque driver (green, 0.45 kgf cm)



## Removal

1. Remove the enclosure from the repair tray.
2. Remove the [SIM tray](#) and save it for reassembly.
3. Place the enclosure in the repair tray with the Lightning connector facing the cutout.

4. Use a torque driver and the Micro stix bit to remove the two trilobe screws from the SIM reader connector cowling. Set aside the screws.



5. Use ESD-safe tweezers to remove the SIM reader connector cowling. Save the cowling for reassembly.

6. Use a torque driver and the Micro stix bit to remove the two trilobe screws from the Taptic Engine connector cowling. Set aside the screws.



7. Use ESD-safe tweezers to remove the Taptic Engine connector cowling. Save the cowling for reassembly.

8. Use ESD-safe tweezers to lift the end of the SIM reader flex cable off the connector.



9. Use a torque driver and the Micro stix bit to remove the trilobe screw from the upper left corner of the SIM reader. Set aside the screw.




10. Use a torque driver and the super screw bit to remove the super screw from the lower right corner of the SIM reader. Set aside the screw.




11. Tilt up the SIM reader and lift it out of the enclosure.




12. Use a torque driver and the super screw bit to remove the two super screws from the corners of the Taptic Engine. Set aside the screws.

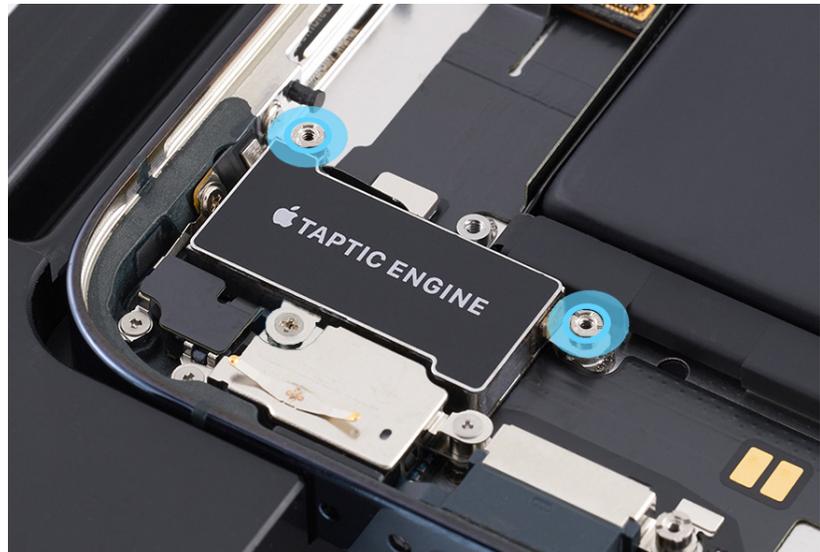

13. Use a torque driver and the JCIS bit to remove the crosshead screw from the bottom of the Taptic Engine. Set aside the screw.

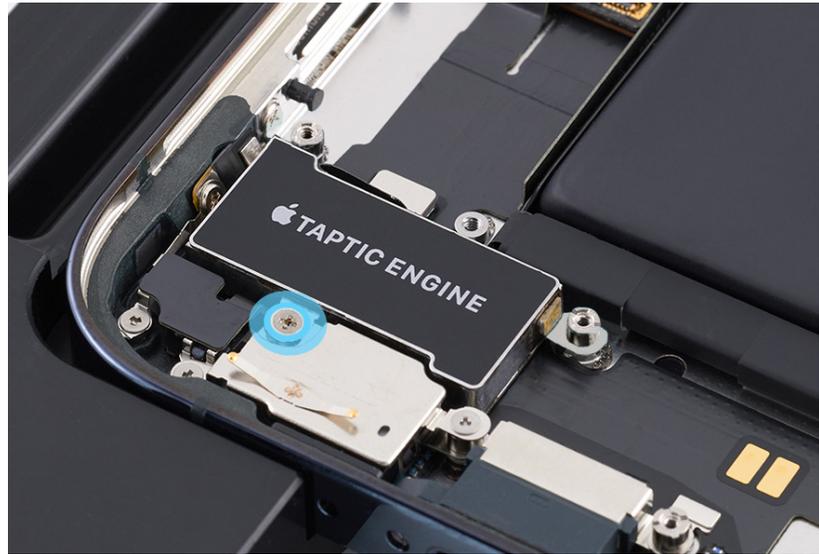

14. Use ESD-safe tweezers to lift the end of the Taptic Engine flex cable off the connector.

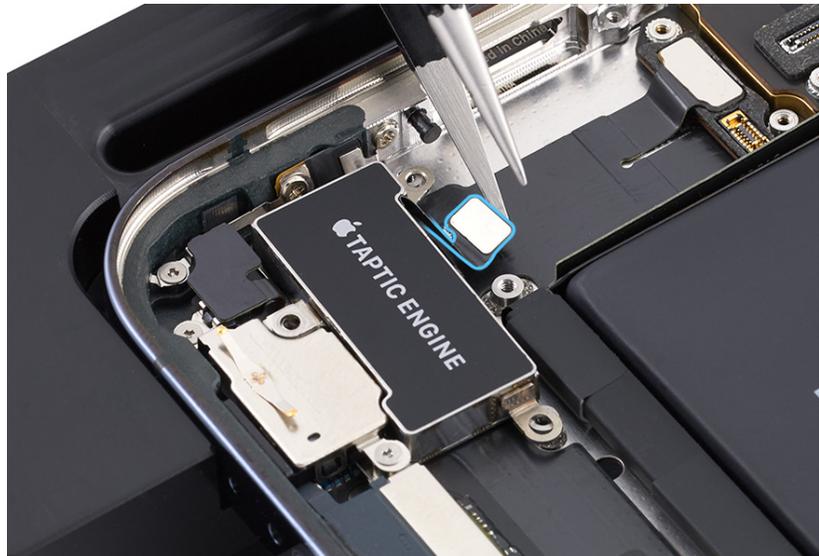

15. Use ESD-safe tweezers to remove the Taptic Engine.

## Reassembly


1. Position the Taptic Engine in the enclosure.




2. Press the end of the Taptic Engine flex cable to the connector.



3. Use the green torque driver and JCIS bit to install one new crosshead screw (923-04981) into the Taptic Engine.

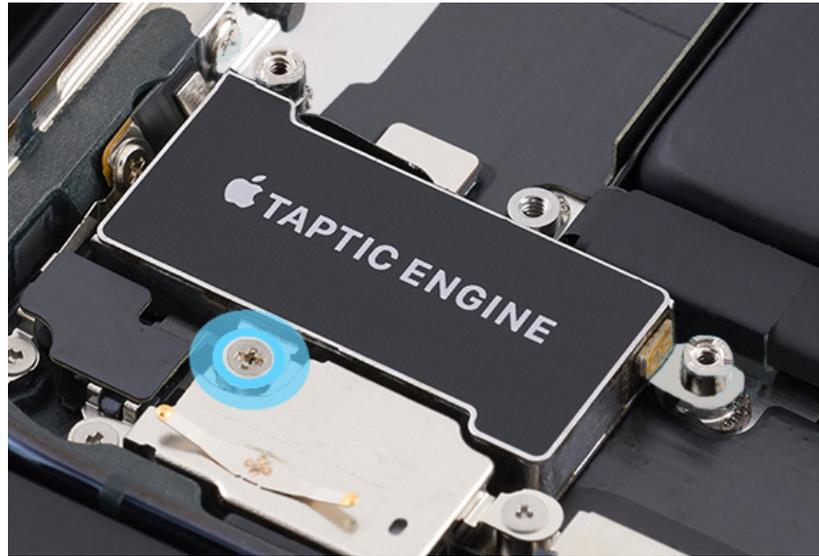

4. Use the gray torque driver and super screw bit to install two new super screws (923-04980) into the Taptic Engine.

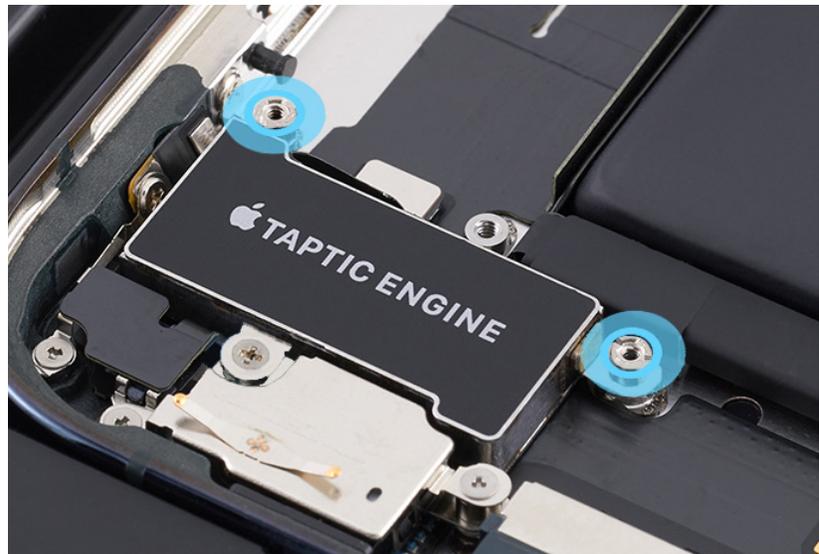

5. Tilt the SIM reader into the enclosure.



6. Use the black torque driver and Micro stix bit to install one new trilobe screw (923-04982) into the upper left corner of the SIM reader.




7. Use the gray torque driver and super screw bit to install one new super screw (923-04980) into the lower right corner of the SIM reader.



8. Press the end of the SIM reader flex cable to the connector.

9. Position the SIM reader connector cowling (1) over the end of the flex cable.
10. Position the Taptic Engine connector cowling (2) over the end of the flex cable.

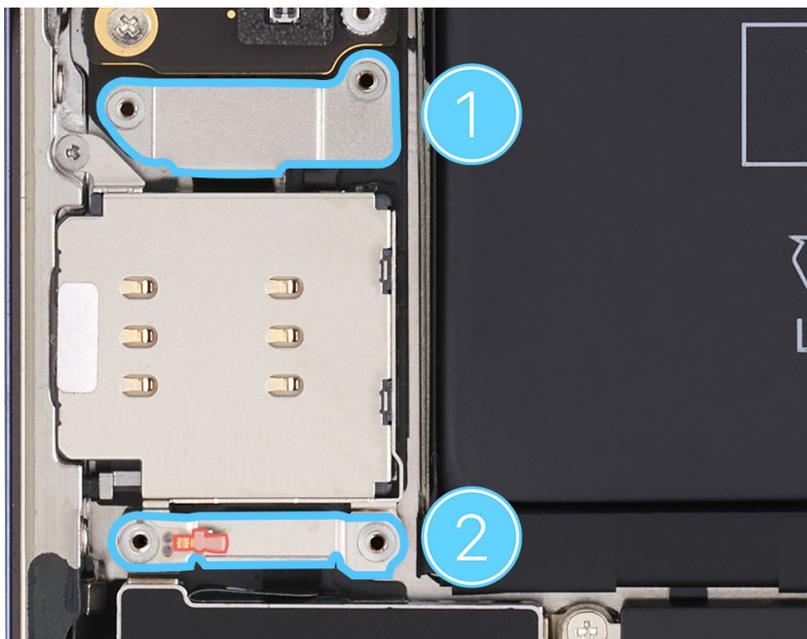

 **Caution**


Inspect the grounding spring on the Taptic Engine connector cowling to ensure that it's not damaged.



11. Use the black torque driver and Micro stix bit to install four new trilobe screws (923-04978) into the SIM reader and Taptic Engine connector cowlings.

 **Caution**

Avoid touching the grounding spring as you reinstall the Taptic Engine connector cawling.

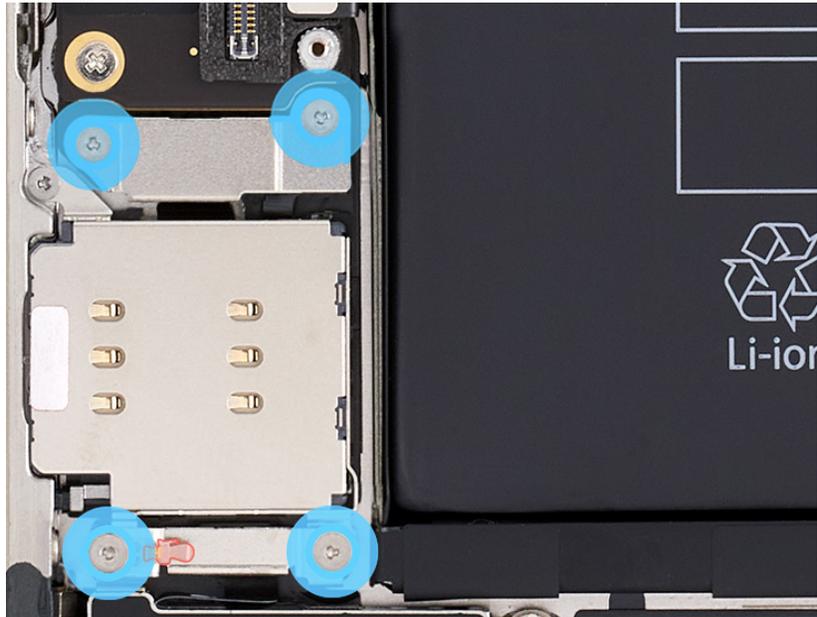

12. Remove the enclosure from the repair tray.
13. Reinstall the [SIM tray](#).

**Reinstall the following parts to complete reassembly:**

- [Speaker](#)
- [Display](#)

# TrueDepth Camera

## Before You Begin

### Warning


- Read [Battery Safety](#) and follow workspace and battery handling guidelines before you begin.
- The TrueDepth camera includes one or more lasers. Disassembly of the TrueDepth camera, damage to the TrueDepth camera, or failure to use genuine Apple parts could expose you to hazardous infrared laser emissions, possibly resulting in injuries to eyes or skin.

### Remove the following part before you begin:

- [Display](#)

### Tools

- 6.1-inch repair tray
- ESD-safe tweezers
- Nitrile or lint-free gloves
- Nylon probe (black stick)

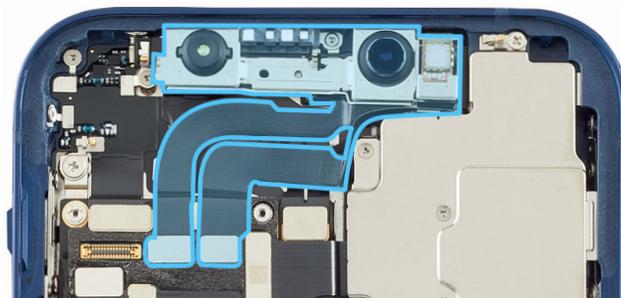

### Caution

This procedure requires [System Configuration](#). To perform System Configuration, you will need the following:



- The latest version of [Apple Service Utility](#) installed on a Mac running macOS Monterey 12.4 or later
- Internet access
- A Lightning cable

After you've completed all removal and reassembly steps and installed Apple Service Utility on a Mac, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).


## Removal

1. Place the enclosure in the repair tray with the Lightning connector facing the cutout.
2. Put on the gloves to prevent contamination of the camera lenses.
3. Use ESD-safe tweezers to lift the ends of the three TrueDepth camera flex cables off the connectors.

**Note:** One TrueDepth camera flex cable covers the third flex cable.

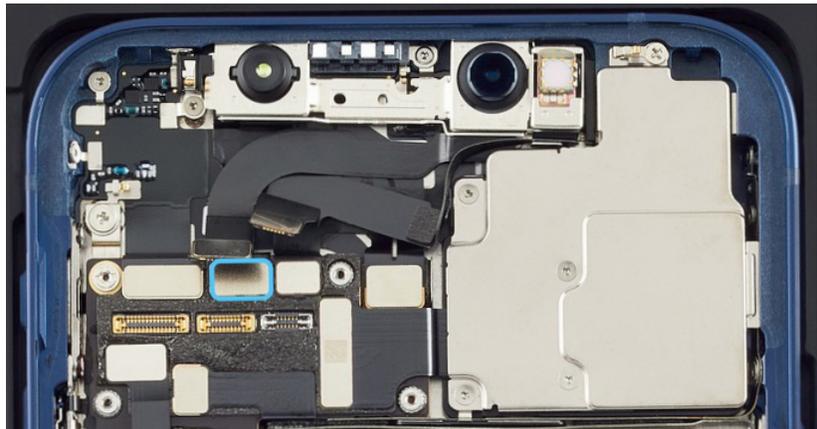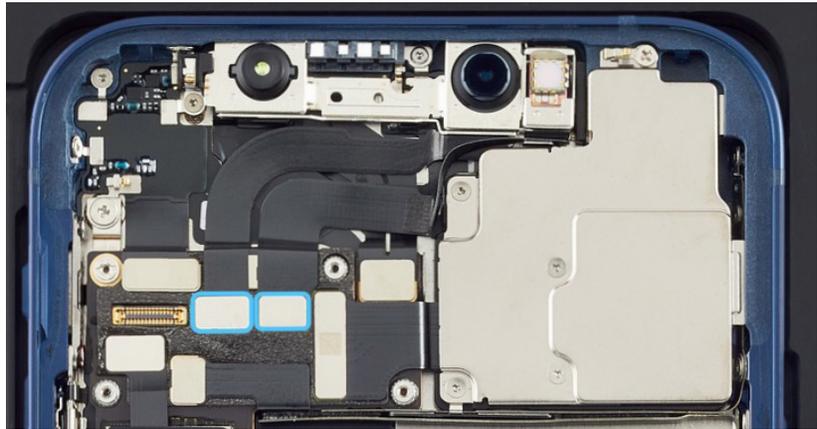

4. Use the flat end of the black stick to separate the adhesive between the TrueDepth camera flex cables and the enclosure as shown.

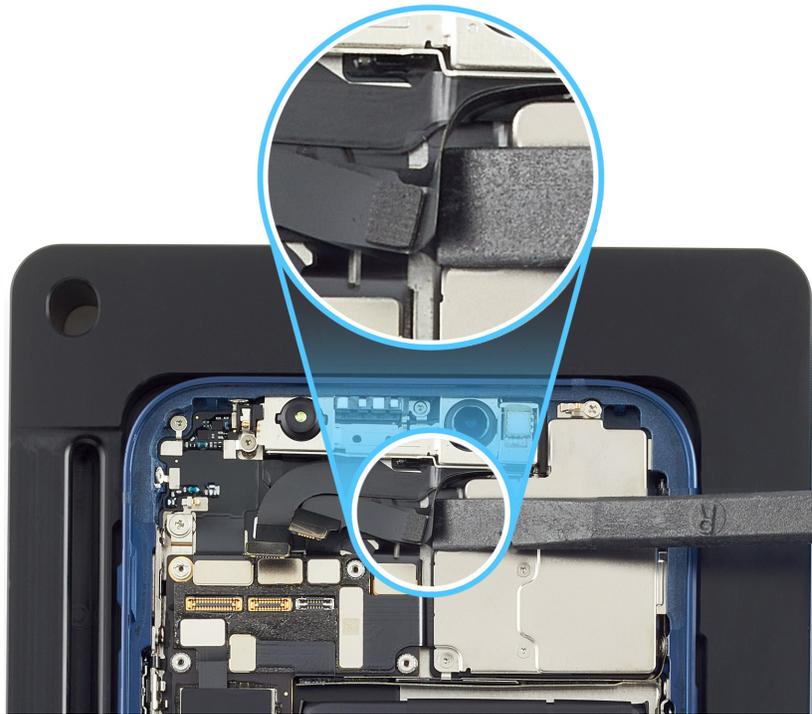

5. Gently hold the TrueDepth camera flex cables together. Then lift the TrueDepth camera assembly at a 45-degree angle to disengage the grounding pin on the left.




6. Slide the TrueDepth camera assembly out of the enclosure.




## Reassembly

1. Put on the gloves to prevent contamination of the camera lenses.
2. Remove the three release liners from the back of the replacement TrueDepth camera assembly.

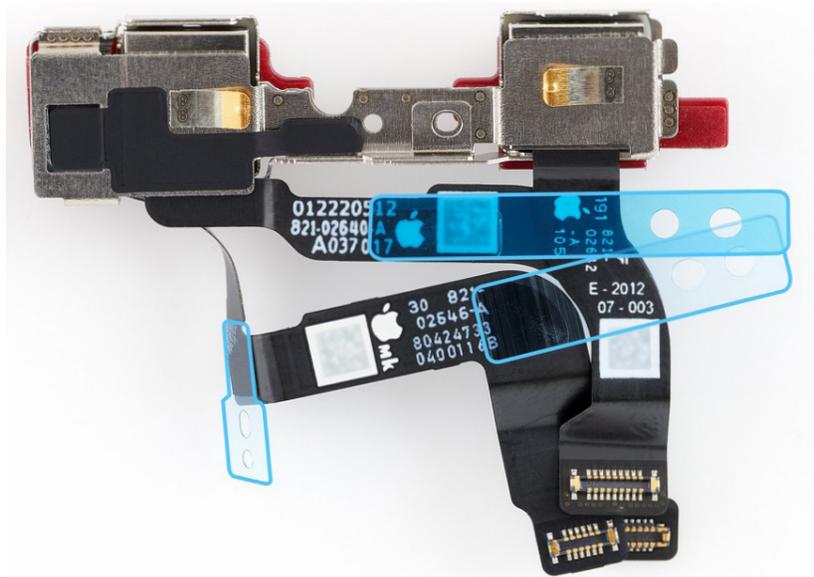

3. Inspect the back of the TrueDepth camera assembly to ensure that the grounding foam and grounding springs are intact. If either is missing or damaged, replace the TrueDepth camera assembly.

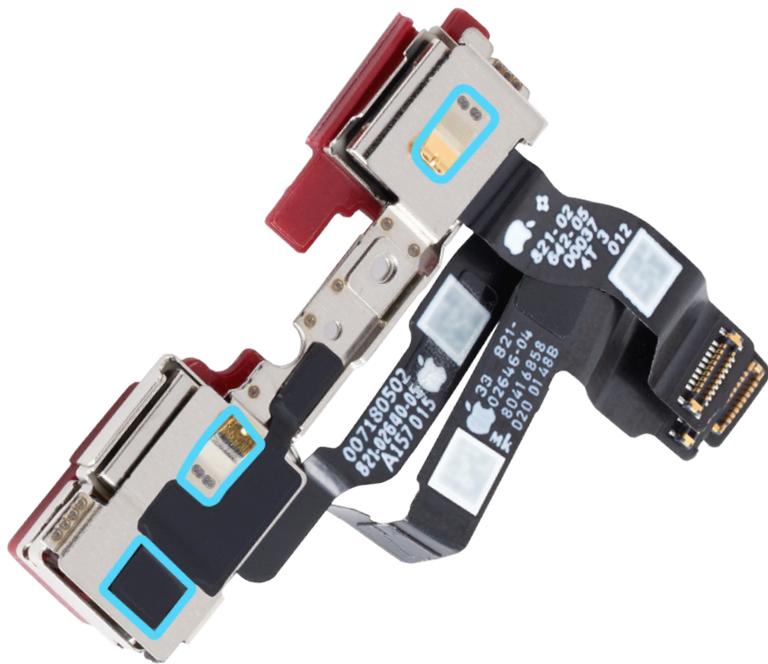

4. Hold the TrueDepth camera flex cables together and turn over the TrueDepth camera assembly.

5. Tilt the top edge of the TrueDepth camera assembly under the lip of the enclosure and to the right.



6. Gently slide the left side of the TrueDepth camera assembly under the lip of the enclosure to engage the grounding pin.



7. Inspect the TrueDepth camera assembly to ensure that the top edge of the TrueDepth camera is under the lip of the enclosure and the grounding pin is flush with the enclosure.



8. Press the ends of the three TrueDepth camera flex cables to the connectors.



9. Lightly press the TrueDepth camera flex cables on the areas shown to adhere the flex cables into place.



10. Use ESD-safe tweezers to remove the protective covers from the TrueDepth camera.



11. Inspect the TrueDepth camera. Ensure that the top edge of the TrueDepth camera is under the lip of the enclosure.

 **Caution**

- If the TrueDepth camera is positioned incorrectly, use the black stick to move it into the correct position.
- Don't touch the front of the TrueDepth camera assembly after the protective covers are removed.

**Reinstall the following part to complete reassembly:**

- [Display](#)

 **Caution**

- After you've completed all removal and reassembly steps, learn how to initiate the System Configuration process at [support.apple.com/self-service-repair](https://support.apple.com/self-service-repair).
- You will need a Mac with [Apple Service Utility](#) installed to perform System Configuration.