


HYDRA2 INSTALLATION MANUAL

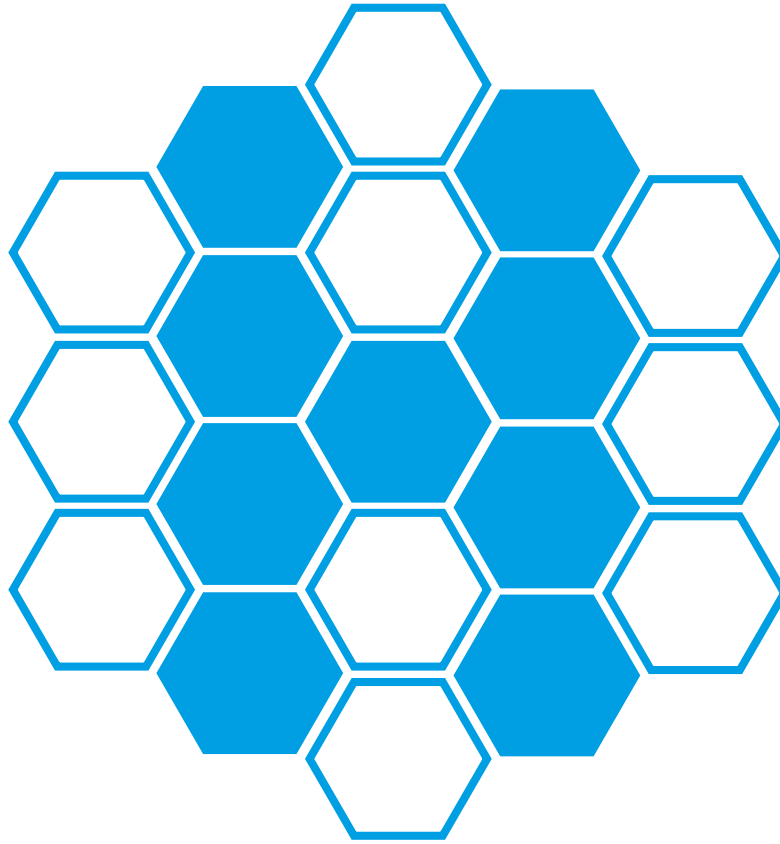

HYDRA2

Gigabit Ethernet Networking

Calrec Audio Ltd

Nutclough Mill
Hebden Bridge
West Yorkshire
England UK
HX7 8EZ

Tel: +44 (0)1422 842159
Fax: +44 (0)1422 845244
Email: enquiries@calrec.com

calrec.com

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and scanning, for any purpose, without the prior written consent of Calrec Audio Ltd.

Whilst the Company ensures that all details in this document are correct at the time of publication, we reserve the right to alter specifications and equipment without notice. Any changes we make will be reflected in subsequent issues of this document. The latest version will be available upon request. This publication is for International usage.

Calrec Audio Ltd reserve the right to change specifications without notice. E & O.E.

The established policy of Calrec Audio Ltd. is to seek improvements to the design, specifications and manufacture of all products. It is not always possible to provide notice outside the company of the alterations that take place continually.

Despite considerable effort to produce up to date information, no literature published by the company nor any other material that may be provided should be regarded as an infallible guide to the specifications available nor does it constitute an offer for sale of any particular product.

Apollo, Artemis, Summa, Brio, Hydra2, Bluefin and High Density Signal Processing (HDSP) are trade marks of Calrec Audio Ltd. **Dolby®E** is a registered trade mark of Dolby Laboratories, Inc. All other trade marks are acknowledged.

© 2018 Calrec Audio Ltd. All Rights Reserved.

HYDRA 2

CONTENTS

Information 7

Important Information	8
Health and Safety	10

Architecture & Networking 11

Overview	12
Single Console Networks	13
Multi-Console Networks	14
Bandwidth / link capacity	14
Increasing bandwidth - Trunk links	15
Master Routers	17
Configuring Master & Slave Routers	17
Auto Promote	17
Router Cores	18
Network Considerations and Router Capacity	19
8U Router Overview	19
4U Router Overview	19
8U Core Considerations	19
Expansion Router Cards	19
4U Core Considerations	19
Trunk Links	20
Capacity	20
Fixed Format I/O box bandwidth	20
Modular I/O Box Bandwidth	20
Sync in Multi-Core systems	24
IP Address Management	25
Confirming IP on Apollo/Artemis	25
Changing IP on Apollo/Artemis	25
IPs on Summa	25
Hydra2 Connections and Redundancy	26
Hydra2 Connectivity	26
Core Redundancy	26
Dual Router Core Redundancy	27
Card layout and types	27
Connectivity	27
Boot-up and configuration.	27
Sync	27
Resets	27

Connection Information 31

SFP - Overview	32
SFP slot orientation	32
SFP latching and extraction	32

SFP slot covers	33
Loose SFP storage	33
Power Budgets & Heat Management	33
RJ45 Copper SFP Connectivity	34
Shielded cables and connectors	34
Maximum cable length	34
Cable routing considerations	34
Termination and strain relief	34
Termination—pin-out	35
Testing / certification	35
Temporary / reusable cables	35
Fibre SFP Connectivity	36
Singlemode vs multimode SFP's	36
Bi-Directional SFP's	36
Identification	36
Connectors / terminations	36
SFP / fibre specifications	36
FDDI SFP	36
Fibre - General Rules	37
Testing / certification	37
Areas of loss	37
Fibre handling practise	37
Ruggedised fibre	37
WARNING	37
Cleaning fibre optic cables and connectors	38
Cleaning procedure	38
Additional notes	38
Cleaning optical transceivers	38
Cleaning procedure	38
System Status over SNMP	39
Connecting to the SNMP server	39
Configuring the SNMP Agent	39
Scope of System Status over SNMP	39
Router Core PC Configuration	40
PC Connections	40
Configuring Ports	40
Pre-installed software	40
Calrec Program Updater	40
Customer Data Backup Utility	40
SNMP Client	40
Google Chrome	40
Antivirus Protection	40

3rd Party Remote Control	41
SW-P-08 Remote Control	42
Connection	42
Configuration	42
Ember Remote Control	43
Connection	43

Fixed Format I/O	45
Fixed Format I/O Overview	46
Mounting	46
Airflow	46
Power	46
Hydra2 network connections	46
GPIO	46
Reset	46
I/O Box Identification	48
Address 2	48
Fixed Format GPIO - SW5739	49
GP outputs	50
GP inputs	50
Fixed Format Analogue I/O Overview	51
Input gain & impedance	51
Phantom power	51
Analogue reference level	51
AD5782 Analogue Mic / Line 12 in/4 Out (XLR)	52
AD5781 Analogue Mic / Line 24 in/8 Out (XLR)	53
AD5780 Analogue Mic / Line 48 in / 16 Out (XLR)	54
AE5743 Analogue Mic / Line 32 in / 32 Out (EDAC Standard Pin-Out)	55
AE5743 – EDAC Pin-Out - Inputs	56
AE5743 – EDAC Pin-Out - Outputs	57
AE5991 – Analogue Mic / Line 32 in / 32 Out (EDAC 'Style 1' Pin-OUT)	58
AE5991 – EDAC Pin-Out – Inputs ('Style 1')	59
AE5991 – EDAC Pin-Out – Outputs ('Style 1')	60
AE5992 – Analogue Mic / Line 32in / 32Out (EDAC 'Style 2' Pin-OUT)	61
AE5992 – EDAC Pin-Out – Inputs ('Style 2')	62
AE5992 – EDAC Pin-Out – Outputs ('Style 2')	63
Fixed Format Digital AES3 I/O Overview	64
Sample rate convertors	64
JB5606 – Digital AES3 16 in/16 Out (BNC)	65
JB5783 – Digital AES3 32 in / 32 Out (BNC)	66
JB5962 – Digital AES3 32 in / 32 Out (BNC)	67
Fixed Format MADI I/O Overview	68
Connectivity	68
I/O & audio channels	68
Fans / airflow	68
GPIO	68
Sample rate conversion & sync	68
JM5736 – MADI I/O (BNC or MultiMode SC)	69
JM5890 - MADI I/O (BNC or MultiMode ST)	70
JM5831 - MADI I/O (BNC or Singlemode SC)	71

DiGiCo Orange Box - Hydra 2 Interface	72
Module Enclosure	72
Hydra2 network connection	72
Fitting Modules	72

Modular I/O	73
Modular I/O Box	74
Power	74
Earthing	74
Airflow and mounting	74
Recess Kit	74
Hydra IDs	74
Fitting and removing cards	74
Modular I/O Hydra2 interface	77
Hydra2 interface card	77
Modular I/O box ID setting	77
Modular I/O Card options	79
Card Slots	79
Changing I/O card types	79

Modular I/O Cards	81
AD5838 – 8 X Analogue Line Level inputs (D-Type)	82
AD6057 – 8 X Analogue Mic / Line Level inputs (D-Type)	83
AD5840 – 4 X Mic/Line In (XLR)	84
AD6365 – 4 X Transformer Isolated Mic/Line In (XLR)	85
AL5870 – 2 X Mic/Line In with Splits (XLR)	86
AL5875 – 1 X Mic/Line In with 3 Splits (XLR)	87
BI6218 – Waves SoundGrid (RJ45)	88
Setting up the VNC display control program for SoundGrid	89
BI6192 – Dante with network redundancy (RJ45)	90
DA5839 – 8 X Analogue Line Out (D-Type)	91
DA5867 – 4 X Line Out (XLR)	92
JB5860 – 4 X Digital AES Input (BNC)	93
JX5869 – 4 X Digital AES Input (XLR)	94
JD5842 – 8 In, 8 Out Digital AES (D-Type)	95
JB5837 – 4 X Digital AES Output (BNC)	96
JX5868 – 4 X Digital AES Output (XLR)	97
JM6199 – MADI IN/OUT-AES10 (BNC / SFP)	98
VI5872 – 2 X SDI Embedder (BNC)	99
Maximum channel count	99
VO5841 – 2 X SDI De-Embedder (BNC)	100
Maximum channel count	100
WY5858 – GPIO, 8 In / 8 Full Changeover Out (D-Type)	101
LEDs	101
GP Inputs	101
GP Outputs	101
WY5859 – GPIO, 8 In / 16 Out (D-Type)	102
LEDs	102
GP Inputs	102
GP Outputs	102

Obsolete Modular I/O Cards **103**

VO5873 – Dolby E Decoder & 2 X SDI De-Embedder (BNC+ D-Type)	104
--	-----

Fieldbox **105**

AD6217-2 Fieldbox	106
Enclosure	106
Cooling	106
Power	106
Battery powered operation	106

H2HUB **109**

RY6211-2 H2Hub	110
Enclosure	110
Cooling	110
Power	110
Battery powered operation	110
Hydra2 network connections	110
Config Port	111
H2Hub Connectivity	112
Connectivity	112

AoIP Interface Unit **113**

EG6266-2 AoIP interface Unit	114
Enclosure	114
Power	114
Hydra2 network connections	114
Front Panel Reset & Status LEDs	114

BRIO Rack **115**

External I/O Rack for Brio 36	116
External I/O Rack Audio Interfaces	116
Port Patching Identification	116
Hydra2 interfacing	116
BR-IO box ID setting	117
BR-IO box Power Supply	117
Disconnecting the PSUs	117
Reference to Power / Environmental Specification	117
Power/Environmental Specifications - BRIO Rack	118

Specification **119**

Audio Performance Specification-General	120
Audio Performance Specification - BRIO	124
Operational Specification	126

HYDRA2 **INFORMATION**

IMPORTANT INFORMATION

Should you require any technical assistance with your Calrec product please contact your regional Calrec distributor. Customers within the UK or Ireland should contact Calrec directly.

For a complete list of worldwide distributors by region, go to www.calrec.com or contact us for more information.

For pre-delivery technical enquiries, UK and Ireland customers should contact the Calrec project manager assigned to their order. Post delivery, the Calrec Customer Support team will take care of your technical enquiries.

Our UK customer support team works closely with our global distributor network to provide the highest level of after sales support. Your distributor should be your first point of contact and will often be able to provide an instant solution, be it technical advice, spares or a site visit by an engineer.

Calrec UK customer support and our global technical team provide free of charge technical support and advice to all customers by phone or e-mail.

Calrec after sales support includes:

- Free of charge comprehensive technical advice and support by phone and e-mail.
- Repairs.
- Quick supply of replacement or loan hardware in the event of a failure.
- Provision of export documentation for the return of faulty parts.
- Operational training.
- Maintenance / technical training.
- Supply of replacement components.
- Supply of documentation.
- Service contracts.

We offer a range service contracts to our UK and Ireland customers, from 24/7 telephone support, regular health checks and extended warranty, amongst other benefits. Please contact our customer support team for more information on service contracts.

Product Warranty

A full list of our conditions and warranties relating to goods services is contained in Calrec's standard terms and conditions. A copy of this is available on request.

Repairs

If you need to return goods to Calrec for whatever reason, please contact your regional distributor, or Calrec customer support beforehand for guidance, as well as to log the details of the problem

and receive a reference number. For customers outside the UK and Ireland, shipping via the distributor saves customers from dealing with exportation paperwork. If there is a need to send direct to Calrec, contact us beforehand to log the incoming repair and for assistance with exportation documents.

Standard of Service

Ensuring the highest standards is a priority, if you have any comments on the level of service, product quality or documentation offered to you by Calrec, please contact the Calrec Customer Support team in the UK who will endeavour to address your issues. Calrec welcomes all customer feedback.

For feedback specific to this document, please contact enquiries@calrec.com.

Whenever you contact Calrec Customer Support please have the following information to hand:

- Name
- Company
- Email Address
- Full details of enquiry (e.g. fault report)
- Serial number of faulty hardware (if applicable)

Once this information has been provided, a service ticket will be created to log your enquiry. The service ticket reference number will be given via email.

Serial Numbers

All units produced by Calrec are given a serial number and are booked into a central record system at the time of manufacture. These records are updated whenever a piece of hardware is dispatched to or received from a customer.

When contacting Calrec Customer Support with a hardware inquiry it is important that the correct Calrec serial number is provided to enable the customer support team to provide a high level of service.

Telephone:
(9:00am-5:30pm)

+44 (0) 1422 842159

Email - Technical: support@calrec.com

Email - General: enquiries@calrec.com

Postal Address:

**Calrec Audio Ltd.
Nutclough Mill,
Hebden Bridge,
West Yorkshire,
HX7 8EZ,
UK**

Fax:

+44 (0) 1422 842159

Website:

www.calrec.com

After Sales Modifications

Please be aware that any modifications other than those made or approved by Calrec Audio Limited or their agents, may invalidate the console's warranty. This includes changes to cabling provided by Calrec and variations to the recommended installation as detailed in Calrec documentation.

Modifications to this equipment by any party other than Calrec Audio Limited may invalidate EMC and safety features designed into the equipment. Calrec Audio Limited can not be liable for any legal proceedings or problems that may arise relating to such modifications.

If in doubt, please contact Calrec Audio Limited for guidance prior to commencing any modification work.

Installation

In many installations the AC power connectors will not be readily accessible, effectively making the equipment permanently connected. The installation should be carried out in accordance with all applicable installation rules and regulations.

Service Personnel

The AC disconnect devices are IEC 60320-1 C13/C14 couplers, DC disconnect devices are XLR4F/XLR4M type couplers located at the rear of each unit. **WARNING:** The apparatus has a dual power system. It is essential that BOTH AC and DC power couplers are disconnected to prevent exposure to hazardous voltage within the unit.

Third Party Equipment

Integrating third party equipment into a Calrec system may compromise the product's ability to comply with the radiated emission limits set in the latest EMC (Electro Magnetic Compatibility) standard.

Calrec Audio Limited can not be responsible for any non-conformities due to use of third party equipment. If in doubt, please contact Calrec Audio Limited for guidance prior to integrating any third party equipment.

ESD (Static) Handling Procedures

In its completed form, this equipment has been designed to have a high level of immunity to static discharges. However, when handling individual boards and modules, many highly static sensitive parts are exposed. In order to protect these devices from damage and to protect your warranty, please observe static handling procedures, for example, use an appropriately grounded anti-static wrist band. Calrec will supply an electrostatic cord and wrist strap with all of its digital products.

All modules and cards should be returned to Calrec Audio Limited in anti-static wrapping. Calrec Audio Limited can supply anti-static wrapping upon request.

This applies particularly to digital products due to the types of devices and very small geometries used in their fabrication, analogue parts can, however, still be affected.

RoHS Legislation

In order to comply with European RoHS (Reduction of Hazardous Substances) legislation, Calrec PCB and cable assemblies are produced with lead-free (tin/copper/silver) solder instead of tin/lead solder.

In the unlikely event of a customer having to carry out any re-soldering on Apollo, Artemis or Hydra2 hardware, it is imperative that lead-free solder is used; contaminating lead-free solder with leaded solder is likely to have an adverse effect on the long-term reliability of the product. Circuit boards assembled with lead-free solder can be identified (in accordance with IPC/JEDEC standards) by a small oval logo (see below) on the top-side of the circuit board near the PCB reference number (8xx-xxx). The same logo is used on the connector hoods of soldered cable assemblies.

If in doubt, please check with a Calrec customer support engineer before carrying out any form of re-soldering

ISO 9001 and RAB Registered

Calrec Audio Ltd has been issued the ISO9001: 2008 standard by the Governing Board of ISOQAR.

The award, for both UKAS and RAB registration (see below), is the most comprehensive of the ISO9000 international standards. Granted in recognition of excellence across design, development, manufacture and after-sales support, the certification follows a rigorous and thorough review of Calrec's internal and external communication and business procedures.

LEAD FREE



LEAD FREE STICKER



HEALTH AND SAFETY

Important Safety Instructions:

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and the point where they exit from the apparatus.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operator normally, or has been dropped.
- Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Not intended for outdoor use.
- This equipment must be EARTHED.
- Before starting any servicing operation, equipment must be isolated from ALL power supplies. AC disconnect devices are IEC 60320-1 C13/C14 couplers. DC disconnect devices are XLR4F/XLR4M type couplers.
- Do not allow ventilation slots to be blocked.
- Do not leave the equipment powered up with the dust cover fitted.

Cleaning

For cleaning the front panels of the equipment we recommend using a soft anti-static cloth, lightly dampened with water if required.

Explanation of Warning Symbols

Triangular warning symbols contain a black symbol on a yellow background, surrounded by a black border.

The lightning flash with arrow head symbol within an equilateral triangle, as shown on this page, is intended to alert the user to the presence of dangerous voltages and energy levels within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock or injury.

The exclamation mark within an equilateral triangle, as shown on this page, is intended to prompt the user to refer to important operating or maintenance instructions in the documentation supplied with the product.

Earthing

This is a Class I product. An Earth connection **MUST** be provided in each AC power cord.

The Earth Bolt connection at the rear of the console should be connected to Earth using Earth cable at least 6mm² in cross section (10 AWG).


Lithium Battery Replacement

Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

DANGEROUS VOLTAGES

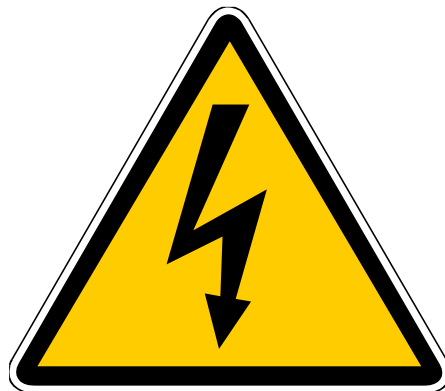

IMPORTANT INSTRUCTIONS



Other Symbols in Use

For apparatus intended to be used at altitude not exceeding 2000m, a warning label containing the following symbol shown below shall be fixed to the equipment at readily visible place.

ALTITUDE WARNING SYMBOL



For apparatus intended to be used in not-tropical climate regions, a warning label containing the following symbol shown below shall be fixed to the equipment at readily visible place.

TROPICAL CLIMATE WARNING SYMBOL



HYDRA2

ARCHITECTURE & NETWORKING

OVERVIEW

The Hydra2 system is designed to provide seamless, scalable audio networking of Calrec audio consoles and routers with Calrec audio I/O interfaces. It allows for very large numbers of audio inputs and outputs to be easily connected, shared and controlled, irrespective of their location, as well as providing comprehensive built-in redundancy.

Audio consoles, routers and I/O can be physically added to the network as and when needed. Added hardware automatically synchronises with the rest of the system and makes itself available for use.

The Hydra2 Organiser, H2O, is an administrator level user interface designed to provide control over the network without the use of an audio console. Amongst other things, H2O can be used for source to destination cross-point routing, and can change access rights of individual consoles to selected I/O on a port by port, or port group basis—effectively splitting the network to safeguard multi-production environments and to aid control room and resource management.

Hydra2 provides 1-to-n routing; inputs may be routed to any number of destinations. They can be used in multiple places on a console, on multiple consoles, as well as being sent directly to multiple outputs by cross-point routing, all simultaneously.

Hydra2's interconnections are made using SFPs—plug-in gigabit interface modules—to provide copper connections on RJ45s or LC fibre connections in either single-mode or multi-mode. Distances are only limited by the chosen SFP type.

Each connection between Hydra2 units can carry up to 512 channels of audio in each direction simultaneously.

I/O interfaces are available in a range of format types including balanced analogue, balanced and unbalanced AES digital, MADI, Dolby-E decoders, SDI embedders and de-embedders. New formats can easily be supported as they arrive. Hydra2 also supports non-audio I/O interfaces in the form of general purpose inputs and outputs (GPIO) for remote control input tallies and output switching.

Connecting I/O to a Hydra2 router via Cat5e or fibre allows it to be located remotely from the router, close to the audio sources and destinations that it interfaces with, minimizing multi-core and individually screened audio cabling, installation time and costs, and maximizing audio quality by reducing the distances over which analogue signals are passed over.

As with all Calrec products, audio quality and product reliability are our top concerns. All Hydra2 hardware and audio interfaces are designed to the highest standards with no compromise to audio performance. All analogue preamps and line level paths are designed around our well proven and highly respected circuitry, providing very high headroom with a very low noise floor. Our lossless proprietary network transportation protocol does not compromise the high audio quality within the digital domain whilst maintaining negligible latency. Particular attention is also paid to communications reliability, system status monitoring, power generation and distribution, thermal management and physical robustness. The system is designed with redundancy and fault detection at the forefront, providing backup paths for data and audio in the event of hardware or cable failure,


to keep any disruption of audio or control to the absolute minimum. All critical components are fed from dual power supplies

Hydra2 also supports the Ember and SW-P-08 protocols for integration with third party routers and control systems for remote control.

SINGLE CONSOLE NETWORKS

Apollo, Artemis and Summa consoles rely on Hydra2 for the routing of all audio to and from their DSP. A single, standalone console uses a simple Hydra2 network with all I/O boxes having a direct connection to the router card fitted in the console's processing core. This creates a star formation, in that all elements connect to a central point; the router card.

FIGURE 1 - STAR FORMATION

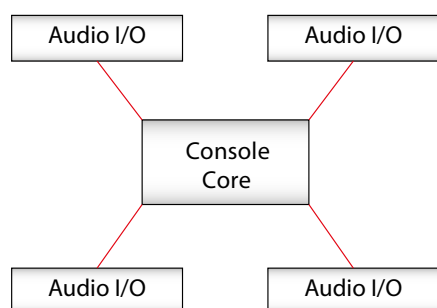

The router card is responsible for directing audio and data across the Hydra2 network and within the processing core itself. When an input port is patched to a fader, the router card requests that the relevant I/O box sends audio from the selected input port and then passes that audio on to the DSP card within the processing core for use by the console. When an output is patched, the router card takes the output audio from the DSP card and sends it to the relevant I/O box port. When an input to output patch is made, the router requests the input and then sends it directly to the I/O box output port in question.


The comprehensive routing system and the ability to perform point to point input to output patching reduces the need for I/O to be wired via physical patch points. Any input can be used multiple times in multiple places, simultaneously sending audio to any/all input channels as well as

other locations on the console such as direct inputs or monitor inputs, and can be patched directly to multiple output ports if the signal is required by other equipment. Console DSP audio outputs can also be sent to multiple output I/O box ports and be made available to other users on the Hydra2 network via Hydra Patchbays.

Input to output patching provides routing capability without the use of DSP or the need for a control surface.

Multiple port patching to mixed formats of I/O, along with input to output patching, reduces the need for external audio routers, distribution amplifiers, and format converters such as ADCs / DACs.

FIGURE 2 - EXAMPLE OF A SINGLE CONSOLE NETWORK

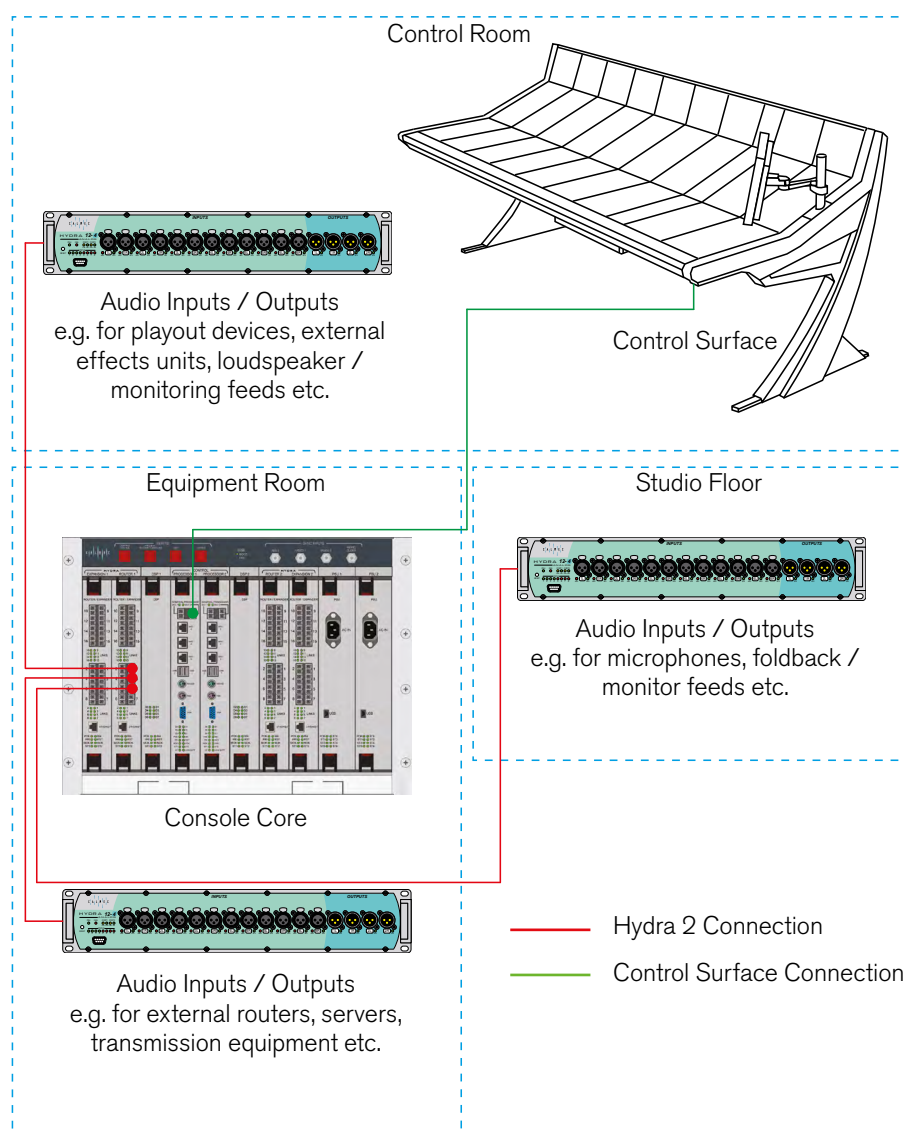

MULTI-CONSOLE NETWORKS

Routers from different processing cores can be connected together. Networking consoles in this way gives access to all I/O from all control surfaces and system PCs on the same network.


Each console's access to I/O can be managed from the Hydra2 Organiser, removing the right of individual consoles to access I/O by groups of I/O boxes, specific I/O boxes, specific ports, or groups of ports.

Inputs can be used by multiple consoles on the same network simultaneously. Any console with access can patch audio to any output port.

Router to router connections, like I/O box connections, can be made using any of the 16 front panel Hydra2 main router ports. Note, expansion router cards should NOT be used for connecting cores together. Connecting cores together creates multiple linked star formations, as shown in Figure 1. All 3 routers shown have access to all of the I/O shown. The path from I/O box to console may pass through multiple router cards before reaching the console's own router.


It is important that there is only one path between any two points in the network (not counting secondary paths designed for redundancy, or configured trunks for increased bandwidth). Having multiple paths between two points will cause data collisions and instability. Figure 2 shows an incorrect connection of three processing cores. The addition of a third router-to-router link creates a duplicate path. The route between any two processing cores can be direct or via the other processing core. Removing any one of the three marked links corrects the problem.

FIGURE 1 - CORRECT CONNECTION OF A THREE STAR FORMATION NETWORK

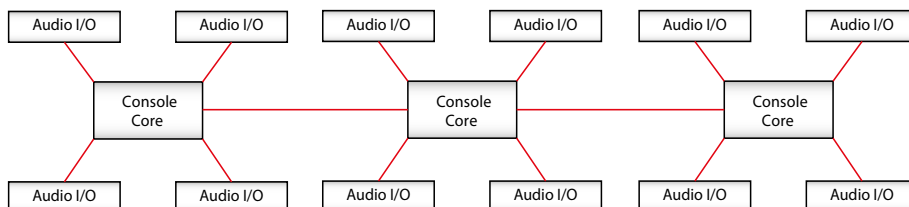

✓ Three router cores connected with no duplicate paths.

FIGURE 2 - INCORRECT CONNECTION OF A THREE STAR FORMATION NETWORK

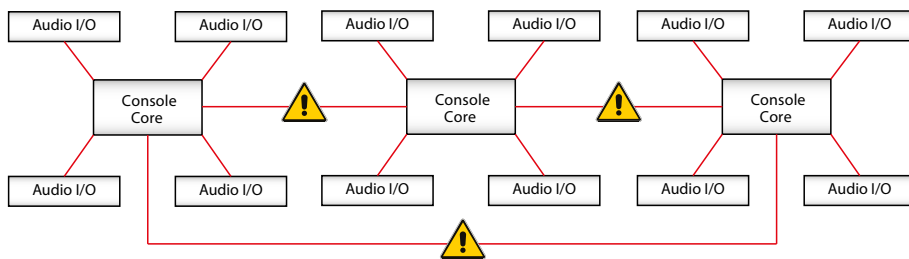

✗ Incorrect Connection The additional link creates duplicate paths.

When connecting two or more routers together it is important that one of them, and only one, is configured to be the Master Router.

Please see "Master Routers" on page 17 for more details.

Note, it is important to ensure IP address compatibility of the systems being connected together and that Hydra2 routers which are networked together are on separate VLANs.


Please see "IP Address Management" on page 25 for more details.

Bandwidth / link capacity

Each Hydra2 link is capable of carrying up to 512 channels of audio in each direction simultaneously. This imposes no limitations over standard I/O box to router connections as standard I/O boxes contain less than 512 inputs and 512 outputs. Modular I/O boxes should not be fitted with card types and quantities that exceed this limitation. If a modular I/O box is populated such that it exceeds the limitation, only the first 512 channels or inputs/outputs will pass audio.

For multi-core systems, it is important to understand the network topology. A single connection between two routers is also limited to 512 channels in each direction.

FIGURE 4 - EXAMPLE OF A THREE CONSOLE NETWORK

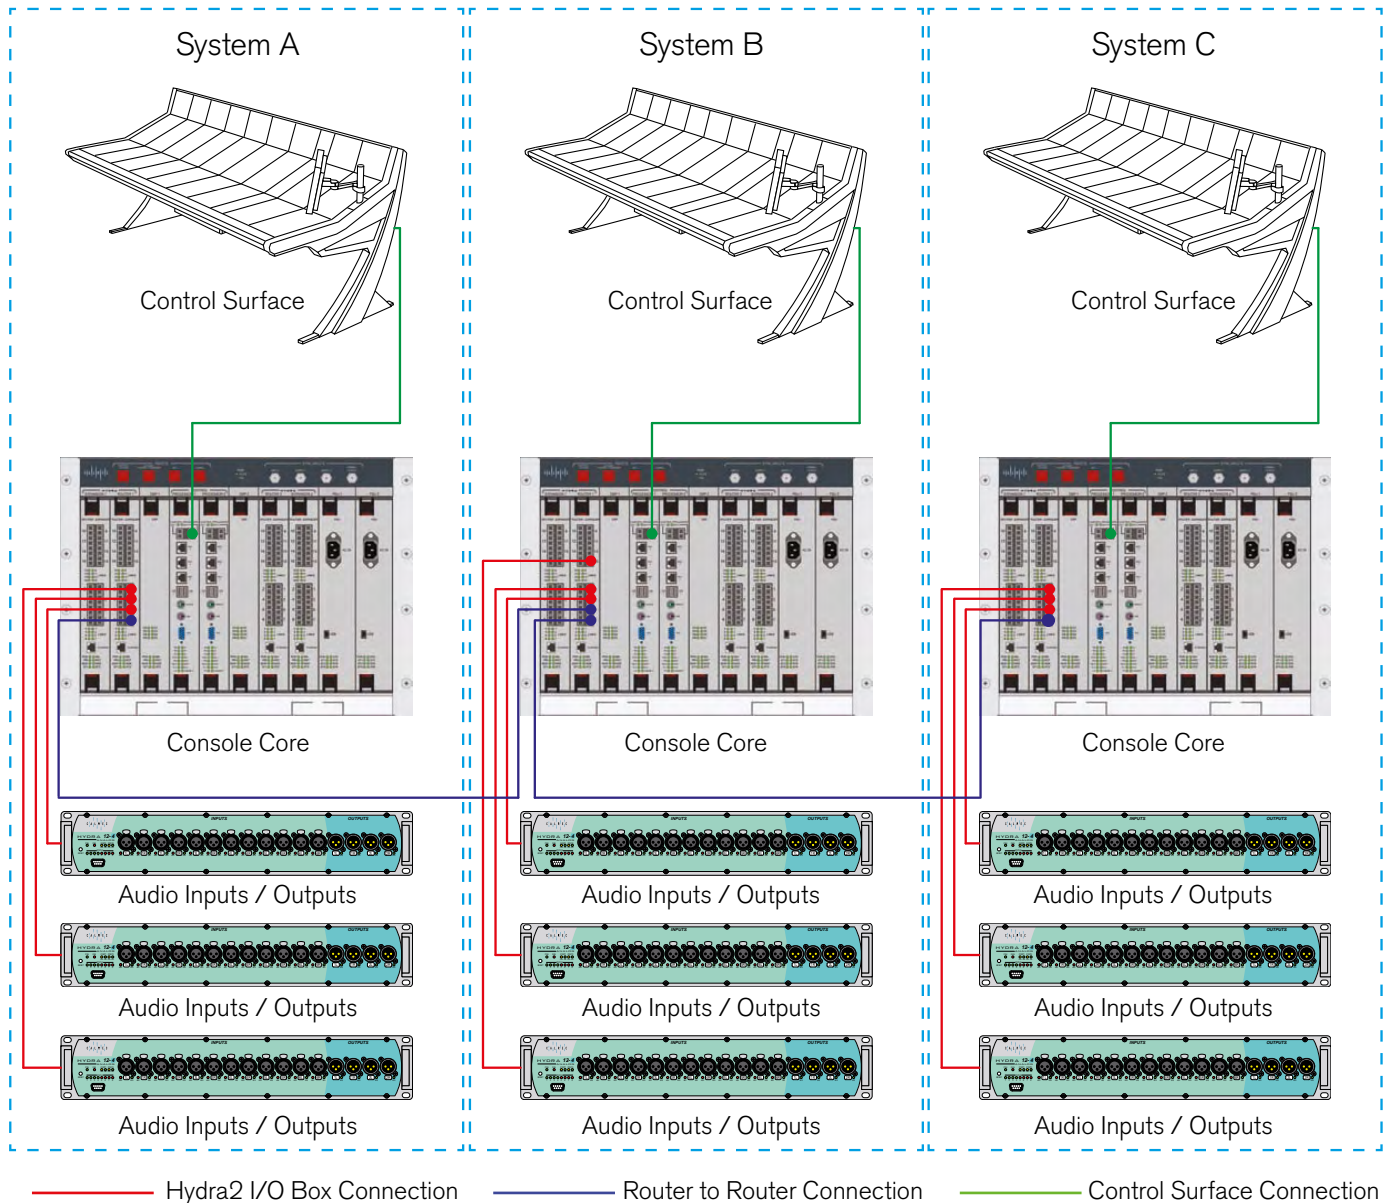

This imposes a limit on the amount of I/O that can be accessed via other routers' connections at any given time. The bandwidth available is determined by usage on either side of the link. In the example shown in Figure 4, If console A is sending 100 channels of audio to outputs

connected to console B's core, Console B and C can then only access 412 channels from inputs connected to the A core.

Increasing bandwidth - Trunk links


Bandwidth between cores can be increased in multiples of 512 channels by

fitting additional links between them and configuring them for use as 'trunk links'. Please contact Calrec Customer Support to discuss 'Trunk Links'

Bandwidth only becomes an issue in large networks with a high volume of router-to-router traffic. In such systems, centrally located routers should be also be considered.


Network topology becomes important when more than 3 consoles are connected together. Connecting to a central point minimises the number of routers a signal has to pass through and therefore optimises bandwidth across the network. If the network is large and there are insufficient ports available on the central router, multiple star formations can be linked together.

FOUR CORE SYSTEM CONNECTED IN SERIES - NOT RECOMMENDED

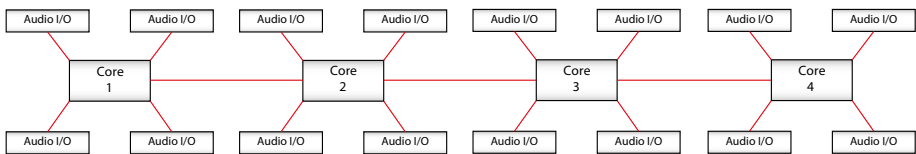


- In order for Core 1 to access I/O connected to Core 4, the signal needs to pass through all four cores. Whilst this connectivity is valid, it is not the most efficient use of router to router links.

CORE STAR FORMATION CONNECTIVITY

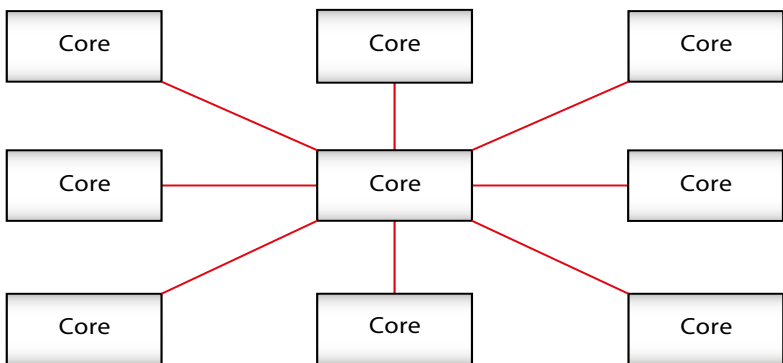

- Connecting all the cores to the same central point minimises the amount of cores that a signal has to pass through. In the above example of a 9 core network (I/O boxes not shown), any core can access I/O connected to any other core with the signal passing through a maximum of only three cores.

MULTIPLE CORE STAR FORMATION CONNECTIVITY

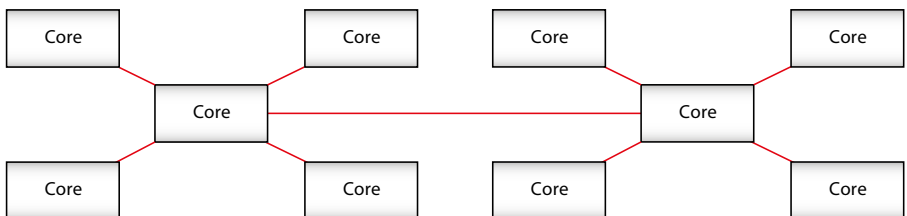

MASTER ROUTERS

A Master Router needs to be present on any Hydra2 network. In a single core system, there is only one active router card. All of the router cards fitted within such a core will be factory pre-configured as Master Routers so that whichever card is active will be the master.

In a multi-core system, one of the cores needs to be dedicated as the Master Router and the router cards in this core should be configured as such. All other routers on the same network need to be configured as Slaves.

Having more than one Master Router core on a Hydra2 network will result in instability.

Not having an active Master Router on a network will also cause instability.

The core configured to be the Master Router needs to remain powered and active to maintain reliability of the network. No individual system should be used if the Master Router is not active.

Similarly, it is important to understand the network topology to know which I/O boxes are available to which consoles if individual cores (other than the Master) are powered down.

When two or more networks are joined or a network is split, for example if two OB / mobile units are occasionally connected together, it is essential that the Master Routers are managed. If connecting two networks, one of the masters will need to be reconfigured as a slave. When separating two networks, one of the slaves needs to be changed to be a master.

Configuring Master & Slave Routers

Only the active main router card in the dedicated core needs to be configured as the Master, however, it is good practise to set the secondary main router and also the primary and secondary expansion routers as masters as well. This allows for cards to be moved around within the same core to aid troubleshooting if hardware problems are experienced as well as ensuring the backup is correct in the event of a hot-swap.

Changing the Master/Slave status of a router affects the whole Hydra2 network and as such, should only be carried out by engineers with a good understanding of the network topology.

Please contact our customer support team - support@calrec.com, or your regional Calrec distributor for guidance on changing router master/slave statuses.

Auto Promote

A Hydra2 network needs one master router to function correctly. If anything causes the master router to go off-line, another router on the network must be promoted to be the master to keep the system running—from Apollo/Artemis software V1.16, Auto Promote allows this to happen automatically.

To avoid losing valuable data the Hydra database is copied from the master router to any routers in the network which may auto promote themselves. The Hydra database stores the following information:

- Details of I/O connected on network.
- Patches made via H2O.
- Patches made via SW-P-08.
- Port labels.

A system of levels and time delays is used to control which routers can take over the master router status and in which order. Auto Promote is setup by Calrec engineers and so should be planned with your Calrec project engineer during the ordering process.

ROUTER CORES


A Router Core is a core that is not fitted with a DSP mixing engine, and therefore also has no control surface attached.

A Router Core can be used as an independent unit in its own right, controlled via the H2O GUI, or by an SW-P-08 controller. Router Cores can also be used to increase the capacity of I/O connections across a Hydra network by providing an extra 16 or 32 router ports.

Router Cores can be used as a central point for shared I/O resources and console router connections, dedicated as the Master Router, and located in an equipment room, powered 24/7, ensuring that the network is always active and that any console that is powered on has access to all their own I/O, as well as all I/O connected to the central Router Core, and I/O connected to other console cores that are powered on.

The consoles / control rooms shown below have access to the studio floor and equipment room I/O without it being routed via other consoles' cores.

HYDRA2 NETWORK WITH A STANDALONE MASTER ROUTER

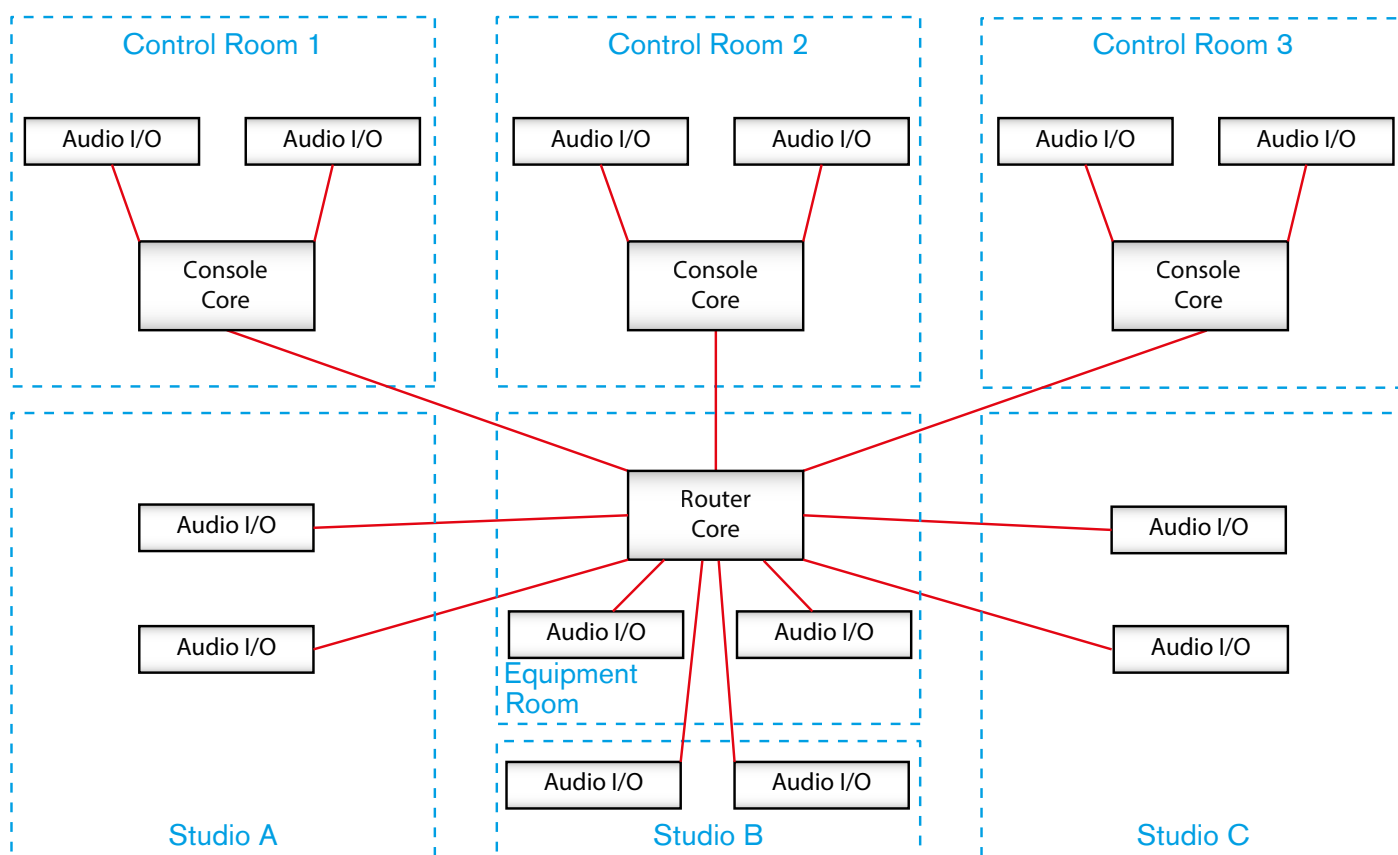

NETWORK CONSIDERATIONS AND ROUTER CAPACITY

Each core contains a Hydra2 router card fitted in the Main router slot which provides a capacity of 8192 audio input channels and 8192 audio output channels (Apollo, Artemis Shine/Beam) or 4096 audio input channels and 4096 audio output channels (Artemis Light / Summa).

8U Router Overview

The Apollo and Artemis (Shine/Beam) router (RY5710) is described as an 8192² router, which means up to 8192 separate sources can be routed to 8192 destinations. Although the router is described this way, there can be up to 12288 inputs (6144 inputs for 4U router), as described later in this section. Hydra2 routers can also be networked together to scale the available inputs up as required. Only one source can supply audio to each destination, but a single source can supply audio to all destinations, hence it is a '1-to-n' router.

4U Router Overview

The Artemis Light and Summa (RY5912) router is described as a 4096² router. The considerations described above for RY5710 are also valid for this router but the maximum number of routes which can be made is 4096.

8U Core Considerations

For an Apollo/Artemis 8U core with a DSP card installed, 2048 destinations are reserved to pass audio internally, via the core backplane, to and from the DSP mixing engine, leaving 6144 destinations available for external signals via the router card's front panel ports.

Expansion Router Cards

Expansion router cards can be fitted into 8U processing cores (Apollo, Artemis Shine/Beam). A router card fitted in the expansion slot increases connectivity by doubling the number of front panel Hydra2 ports available, it does not act as an independent router or increase the total capacity. In order for an expansion router to be fully functional, there must be a router card fitted in the main router slot as well.

When an Expander card is fitted into a core, 2048 destinations are reserved for access via the Expander card's front panel ports, therefore for a core with a DSP and an Expander card fitted, 4096 destinations are available through the router and 2048 through the expander; the addition of an expander card, expands the number of ports for connecting I/O boxes, not the number of destinations.

2048 sources can be routed from each DSP or Expander card to destinations on the router (routes made from sources to destinations that are on the expander only **do not** use this capacity). The number of sources available increases by 2048 when a DSP or Expander card is fitted:

- Neither = 8192 sources
- DSP = 10240 sources
- Expander = 10240 sources
- DSP and Expander = 12288 sources

4U Core Considerations

For an Artemis Light or Summa core with a DSP card installed, 2048 destinations are reserved to pass audio internally, via the core backplane, to and from the DSP mixing engine, leaving 2048 destinations available for external signals via the router card's front panel ports. The Artemis Light / Summa core does not support expansion router cards.

The number of sources available increases by 2048 when a DSP card is fitted, from 4096 to 6144.

8U Core Configuration	Cards in Core	Router Destination Allocation	Available Sources
Router Core - Router Only	Router	8192	8192
Router Core with Expander	Router Expander	6144 2048	8192 + 2048
Console Core	Router DSP	6144 2048	8192 + 2048
Console Core with Expander	Router Expander DSP	4096 2048 2048	8192 + 2048 + 2048

Trunk Links

When console cores are connected together they can share the I/O which is connected to each others' router cards, as with all SFP connections to the router card front ports the bandwidth limit of this connection is 512. Connections between cores potentially carry more traffic than core to I/O box connections, and as such should always be made to main router card ports, not to expansion card ports. 'Trunk Links' can be added which are extra connections between the two cores' router cards which each increase the bandwidth by 512 e.g. one link plus one 'trunk link' equals a bandwidth of 1024. Up to three 'trunk links' can be added equating in total to a bandwidth of 2048.

Trunk links should only be fitted if the network is configured appropriately. Please contact Calrec support (support@calrec.com), or your regional Calrec distributor for guidance on trunk link configuration.

Capacity

Each individual front panel router/expansion port is capable of passing 512 channels of audio inputs and 512 channels of audio outputs as long as the total number being used per card does not exceed the maximum available for the card slot. (Note, GPIO connections are also counted in this allocation)

With router capacity at this scale, it is not easy to reach these limitations unless doing so intentionally for test purposes using high density I/O on a large multi-console network. If the number of routes made reaches the maximum for a router card slot, or individual front panel router port, further routes cannot be made via that slot/port without removing some of the existing ones. Warning messages are generated when this is the case.

Fixed Format I/O box bandwidth

The fixed format I/O box destination count is dependent on the number of I/O cards within a given box. Each I/O card within a box is allocated 32 destinations, for example, a 12/4 analogue I/O box has one card and so is allocated 32

destinations, whereas a MADI box is considered to have two cards for each MADI port. A breakdown is given in the Fixed Format I/O Box type table below.

Modular I/O Box Bandwidth

The maximum bandwidth of any port on a

router is 512 signals, so 512 sources and destinations is the maximum count that any modular I/O box should be populated with (20 card slots are available).


The Modular I/O card type table below shows the source and destination allocation for each modular I/O card type.

Fixed Format I/O Box Type	Source / Destination Allocation
AD5872 - 12 / 4 Analogue I/O Box	32
AD5871 - 24 / 8 Analogue I/O Box	64
AD5870 - 48 / 16 Analogue I/O Box	128
AE5743/5991/5992 - 32 / 32 Analogue I/O Box	128
JB5606 - 16 / 16 AES I/O Box	64
JB5783/5962 - 32 / 32 AES I/O Box	128
JM5736/5831/5890 - MADI interface	128


Modular I/O card type	Source Allocation	Destination Allocation
AD5838	8	0
AD6057	8	0
AD5840	4	0
AL5870	2	2
AL5875	1	3
BI6218	64	64
BI6192	64	64
DA5839	0	8
DA5867	0	8
JB5860	8	0
JX5869	8	0
JD5842	16	16
JB5837	0	8
JX5868	0	8
BI6199	64	64
VI5872	0	32
VO5841	32	0
VO5873	Up to 64 (32 SDI + 8 per DolbyE decoder)	Up to 8 (2 per Dolby E decoder)
WY5858	8	8
WY5859	8	16

8U PROCESSING CORE ROUTER CAPACITY

Apollo/Artemis-Shine/Artemis-Beam Console Core (no Expansion Router)

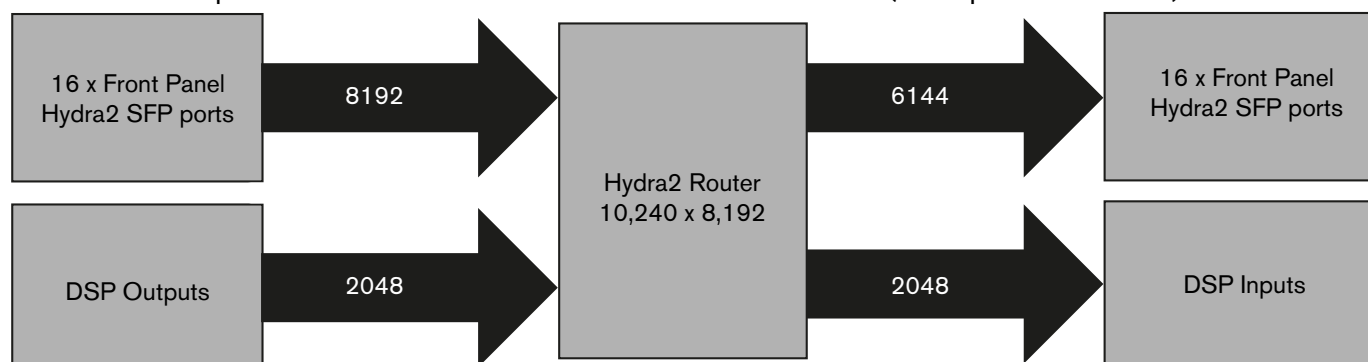


Apollo/Artemis-Shine/Artemis-Beam Console Core with Expansion Router card fitted.

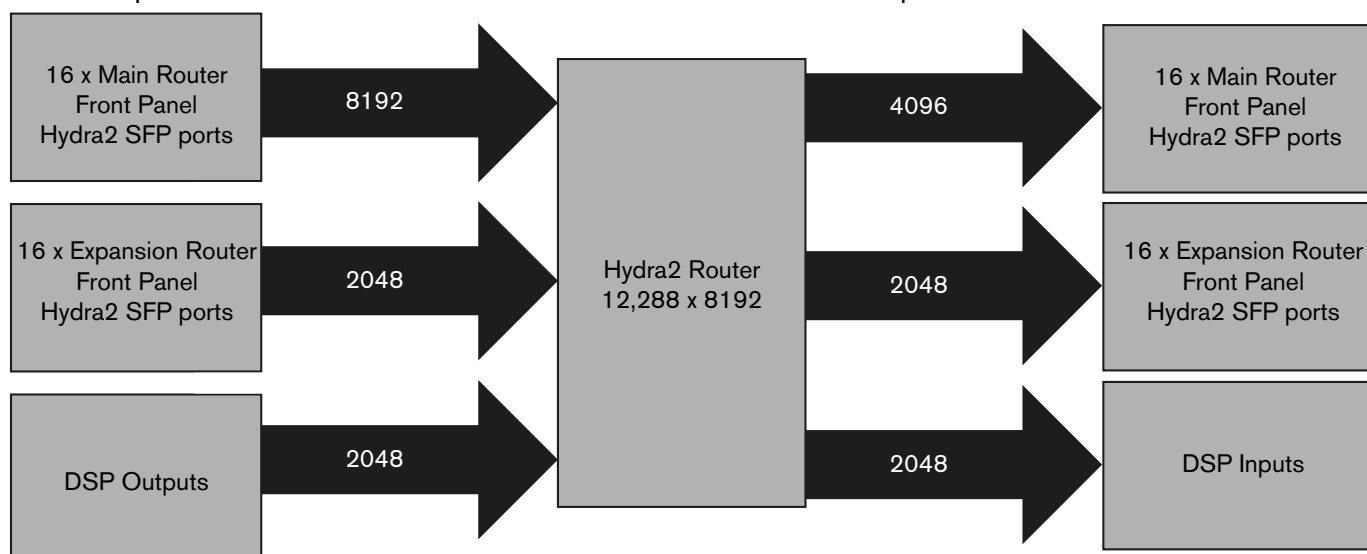


8U PROCESSING CORE ROUTER CAPACITY - NO DSP


8U Router Core (no DSP, no Expansion)

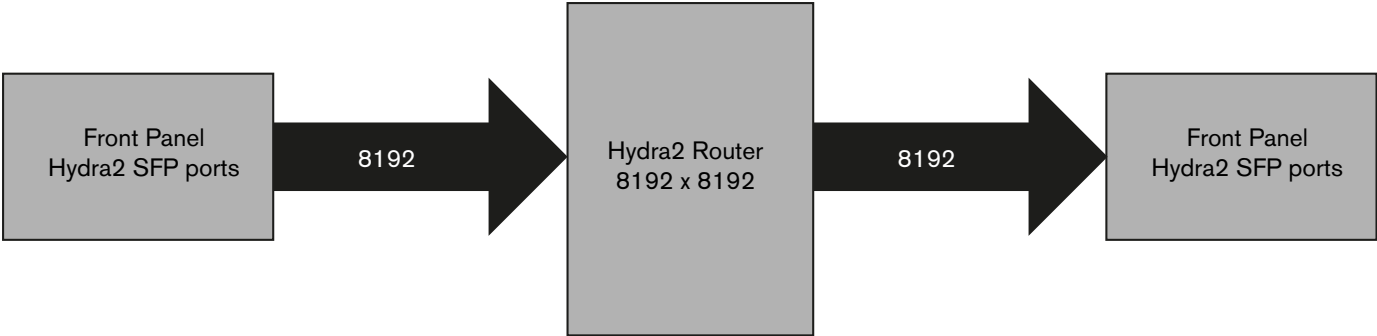

8U Router Core with Expansion fitted (no DSP)

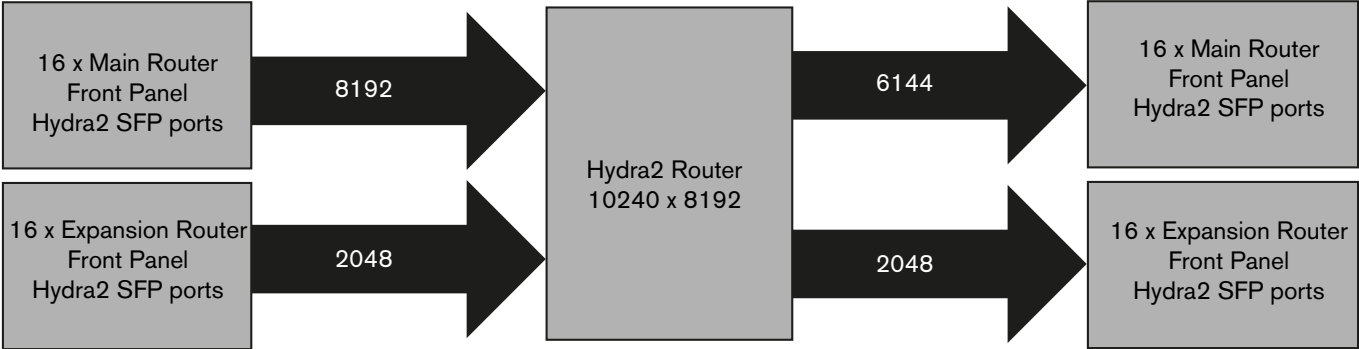

4U PROCESSING CORE ROUTER CAPACITY

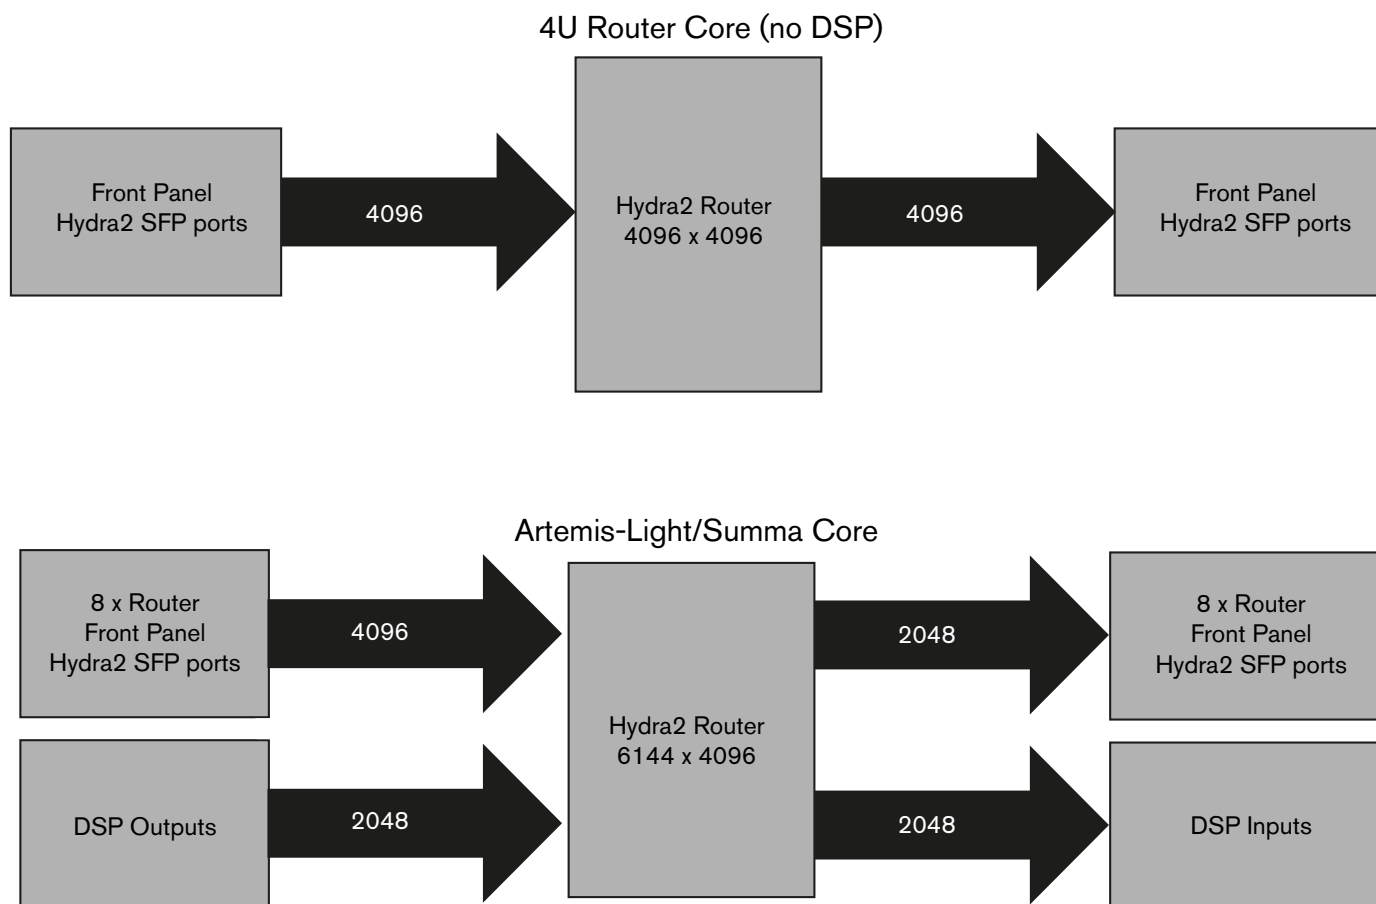


SYNC IN MULTI-CORE SYSTEMS

In a multi-core system each core requires its own sync connection. The router in each core in turn provides sync over the network to the I/O boxes connected to it.

It is vitally important that all cores on the same network are locked to a sync derived from and locked to the same source. If any routers are clocked by free running sync, or if they are derived from different sources, both network audio and communications will be compromised.

Cores running on different syncs can cause instability leading to the loss of I/O boxes and unreliable error messaging.

If sync is being distributed via equipment such as regenerators / buffers, it is important to ensure that they are all set to lock to the correct input from the master sync generator.

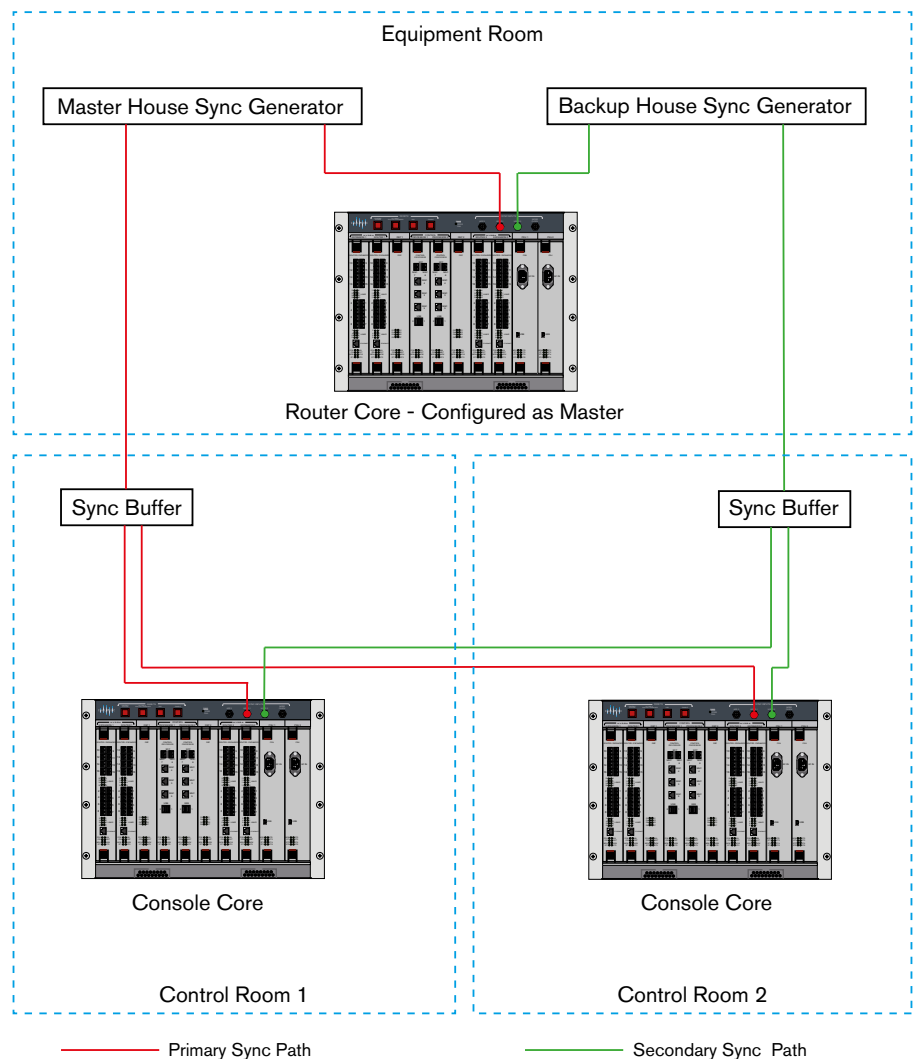

IP ADDRESS MANAGEMENT

In an Apollo/Artemis/Summa/Hydra2 system, each hardware element is allocated a unique IP address, be it a Router card, Control Processor, or an I/O box.

IP addresses follow the format of:
AAA.BBB.XXX.YYY.

AAA is given a value unique to the customer/owner of the system.

BBB is given a value unique to each core owned by a customer.

AAA.BBB is set by the configuration of the active Control Processor card within a core. Physically changing a Control Processor could change the IP address of all hardware associated with that core, including the I/O boxes connected to it if the replacement card is not correctly configured.

XXX.YYY is automatically set for each element within and connected to the core, including core cards, control surface elements and I/O boxes, but not other cores, or items connected via other cores. XXX is set by the type of hardware, YYY is set by the location / port that the hardware is connected to.


By maintaining this format of IP allocation, it ensures that systems can be connected together without address conflicts, as shown in Figure 1.

Confirming IP on Apollo/Artemis

To confirm the IP addresses associated with a processing core on Apollo or Artemis consoles, login to the PC associated with that core with administrator privileges and launch the Calrec Program Updater application.

On startup, the Program Updater scans all the hardware it can find and lists it. The first hardware element detected by the

FIGURE 1 - MULTI-CORE IP'S

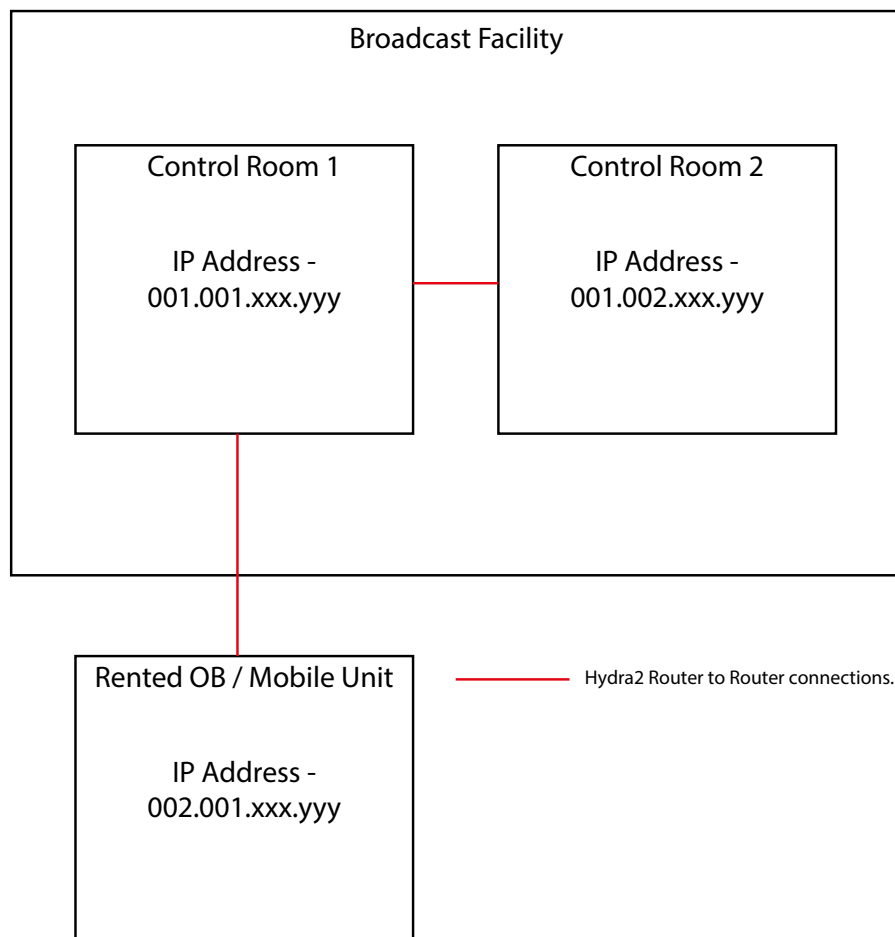

program updater is the configuration PC itself, followed by the Control Processor and then the remaining hardware associated with that core. All hardware listed is part of the same system and will have the same number for the first two bytes, AAA.BBB.

Another system owned by the same customer will have the same first byte, AAA but a different second byte BBB.

A system owned by a different customer will have a different first byte AAA, but may have the same second byte BBB.

Changing IP on Apollo/Artemis

The first two bytes of the IP address are set by the Master Control Processor. Changing the IP on Apollo or Artemis requires logging in to the card's Linux environment and editing a configuration file. This should only be carried out by competent technicians. Please contact our Customer Support team for guidance on IP address changing if required.

IPs on Summa

To view or change the IP address on a Summa console, go to the System Settings>LAN Configuration screen.

HYDRA2 CONNECTIONS AND REDUNDANCY

Each core is fitted with a primary/ normally active router card in slot 2, and a secondary/backup router card in slot 7. In an 8U core, optional expansion router cards can be fitted—primary in slot 1, secondary in slot 8.

Hydra2 Connectivity

All I/O boxes have a primary/normally active port 1, and a secondary/backup port 2.

Port 1 of each I/O box should connect to one of the front panel primary router or primary expansion router ports.

To provide redundancy, port 2 of each I/O box should be connected to secondary router / expansion cards in the same core as the primary connection.


Redundancy is provided when connecting cores together by fitting a normally active link between the primary router in one core to the primary router in the other core, and a backup connection fitted between the secondary router of one core to the secondary router of the other. Core-to-core connections should always be made to the main primary / secondary routers, not expansion cards.

All Hydra2 connections—on I/O boxes and on router cards—are made via SFPs (small format pluggable) modules. Please refer to “SFP - Overview” on page 32 for information on connection types, pin-outs and length limitations.

Core Redundancy

Standard cores provide complete redundancy by being fitted with a full set of backup hardware—a secondary router, Control Processor and PSU, as well as expansion router and DSP card if primaries of these are fitted.

FIGURE 1 - CONNECTIONS FROM CORE TO IO BOX

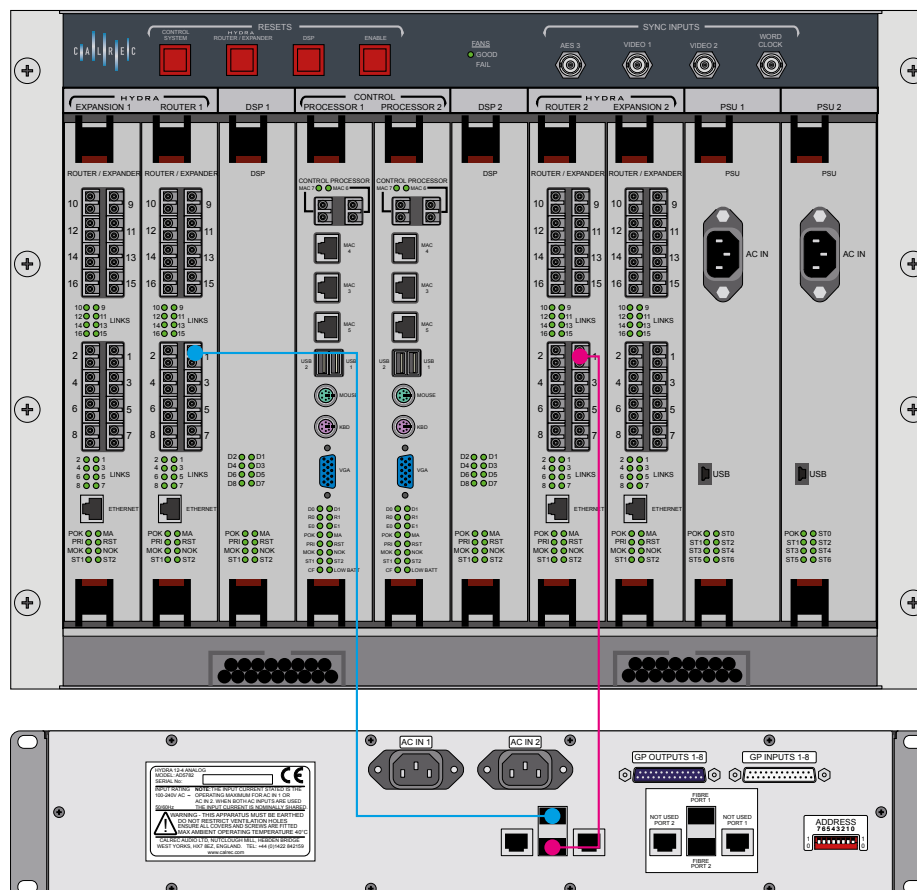

Sophisticated hardware and software status monitoring, along with highly flexible communications and data routing allow for secondary cards to quickly and automatically take over from primaries if problems are detected. During a hot-swap situation, the minimum amount of hardware required swaps over to the secondary cards in order to minimise disruption and to retain maximum redundancy in the unlikely event of a further failure.

DUAL ROUTER CORE REDUNDANCY

Dual Router Core redundancy is an option for 8U Router Core systems (cores that do not contain a DSP mix engine), to physically split the location of the primary and secondary cards, providing protection against serious infrastructure problems, such as complete loss of power to an equipment bay/room, flooding or fire.

Systems that employ router cores normally use them as centralised distribution points within a wider Hydra2 network. Where router cores are used, one of them is normally dedicated as the Master Router for the network—upon which all other router and console cores are dependant. Therefore, providing locational redundancy for router cores in this way further secures reliability across the network as a whole.

Card layout and types

A dual core router comprises of 2 x 8U cores—'Core A' houses the primary cards, and 'Core B' houses the secondary cards. The primary cards are fitted in the normal primary slots of Core A. The secondary cards are fitted in the normal secondary slots of Core B. (The secondary slots in Core A, and primary slots in Core B are inactive.)

Power supplies are an exception to this - both cores are fitted with 2 x PSUs each in order to maintain power redundancy to both cores.

DSP cards cannot be fitted in a Dual Router Core—cores providing a mixing console DSP engine (an Apollo, Artemis or Summa core) need to be housed in a single enclosure, though they can be connected to a Dual Router Core.

In addition to the standard cards - Routers, Control Processors and PSUs, a Redundant Core Link (RCL) card is required in both Core A and Core

B - an RCL card should be fitted in the secondary Control Processor slot of Core A, and the primary Control Processor slot of Core B. The RCL cards provide a backup data link between the two cores.

All primary and secondary cards are identical in hardware and run the same software, allowing them to be freely interchanged between linked cores. Other than the RCL cards, all hardware and software, and the core enclosures/backplanes themselves are the same as are used in standard router cores and Apollo/Artemis console cores.

Connectivity

I/O boxes and other router or console processing cores connect as normal—I/O port 1's and primary routers from other cores connect to the primary router which is fitted in Core A. I/O secondary ports and other cores' secondary routers connect to the secondary router which is fitted in Core B.

Two additional connections are required to provide a primary and secondary comms link between Core A and Core B - the MAC7 ports of the Core A and Core B Control Processors should be connected together to form the primary link, and the single front panel port of the RCL cards in Cores A and B should also be connected together to form the secondary link (see diagram overleaf for further clarity). These are SFP ports, and therefore can be RJ45 copper or various fibre formats. Please refer to "SFP - Overview" on page 32 for further information on type and specification.

Boot-up and configuration.

At boot-up, the Control Processors check to see if they have an RCL card fitted in their neighbouring Control Processor slot, or on their MAC7 port link. If either is true, the system will boot in Dual Router Core

Redundancy mode. If both are false, it will boot in standard redundancy mode.

As with a standard, self-contained core, both the primary and secondary Control Processors have identical configuration settings. The IP addresses assigned to cards in both cores are in the same range, and use the same IP allocation as a standard core.

Sync

Both core A and core B need to be connected and locked to a commonly derived sync source, as is the case for all router / console cores in any Hydra2 network.


From software version 1.12.1, the H2O Manage Clients screen allows for router cores to be configured as 'Dual Router'. Cores configured as Dual Routers will display the sync status of both Core A and Core B. Both operate on the same sync priority list (i.e. Core A cannot be given a different priority list of sync types to that of Core B), however they can independently switch and will therefore lock independently depending on the sync type being fed into each.

Two padlock icons are displayed for Dual Router Cores within their H2O sync status table to indicate the currently locked source—the actively controlling router's icon is coloured gold, the non-controlling router is silver. Clicking 'reset to first' will cause both the core A and core B to attempt to lock to the top entry in the list, moving down until a viable source is found.

Resets

The reset buttons for both Core A and Core B are independent of each other and only reset the cards fitted within each Core.

REDUNDANT CORE LINK CARD

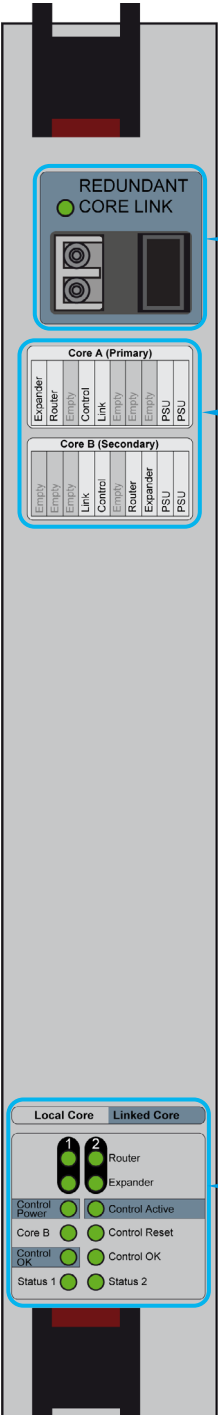

SFP slot & activity LED for comms connection with Control Processor fitted in the linked core. Note, the right hand SFP slot is inactive and blanked off.

Card map - shows the valid card slots for all card types in both Core A and Core B.

Status LEDs

Router 1 / Expander 1

- Primary router / expansion router heartbeat, inactive if RCL card is fitted in Core B.

Router 2 / Expander 2

- Secondary router / expansion router heartbeat, inactive if RCL card is fitted in Core A.

Control Power

Lights solid to indicate that the Control Processor fitted in the linked core is powered.

Control Active

Lights solid if the Control Processor in the linked core is actively in control. Off if the linked Control Processor is in standby / backup mode.

Core B

- Lights solid green when fitted in Core B, off if fitted in Core A.

Control Reset

Lights momentarily during a control reset.

Control OK

- Lights solid to indicate Control Processor has booted. Left hand LED (with shaded background) refers to the Control Processor fitted in the linked core. Right hand LED refers to the Control Processor fitted in the adjacent slot to this card.


Status 1

- Displays own heartbeat.

Status 2

- Unused.

DUAL ROUTER CORE REDUNDANCY - CARD POPULATION AND CONNECTIVITY EXAMPLE

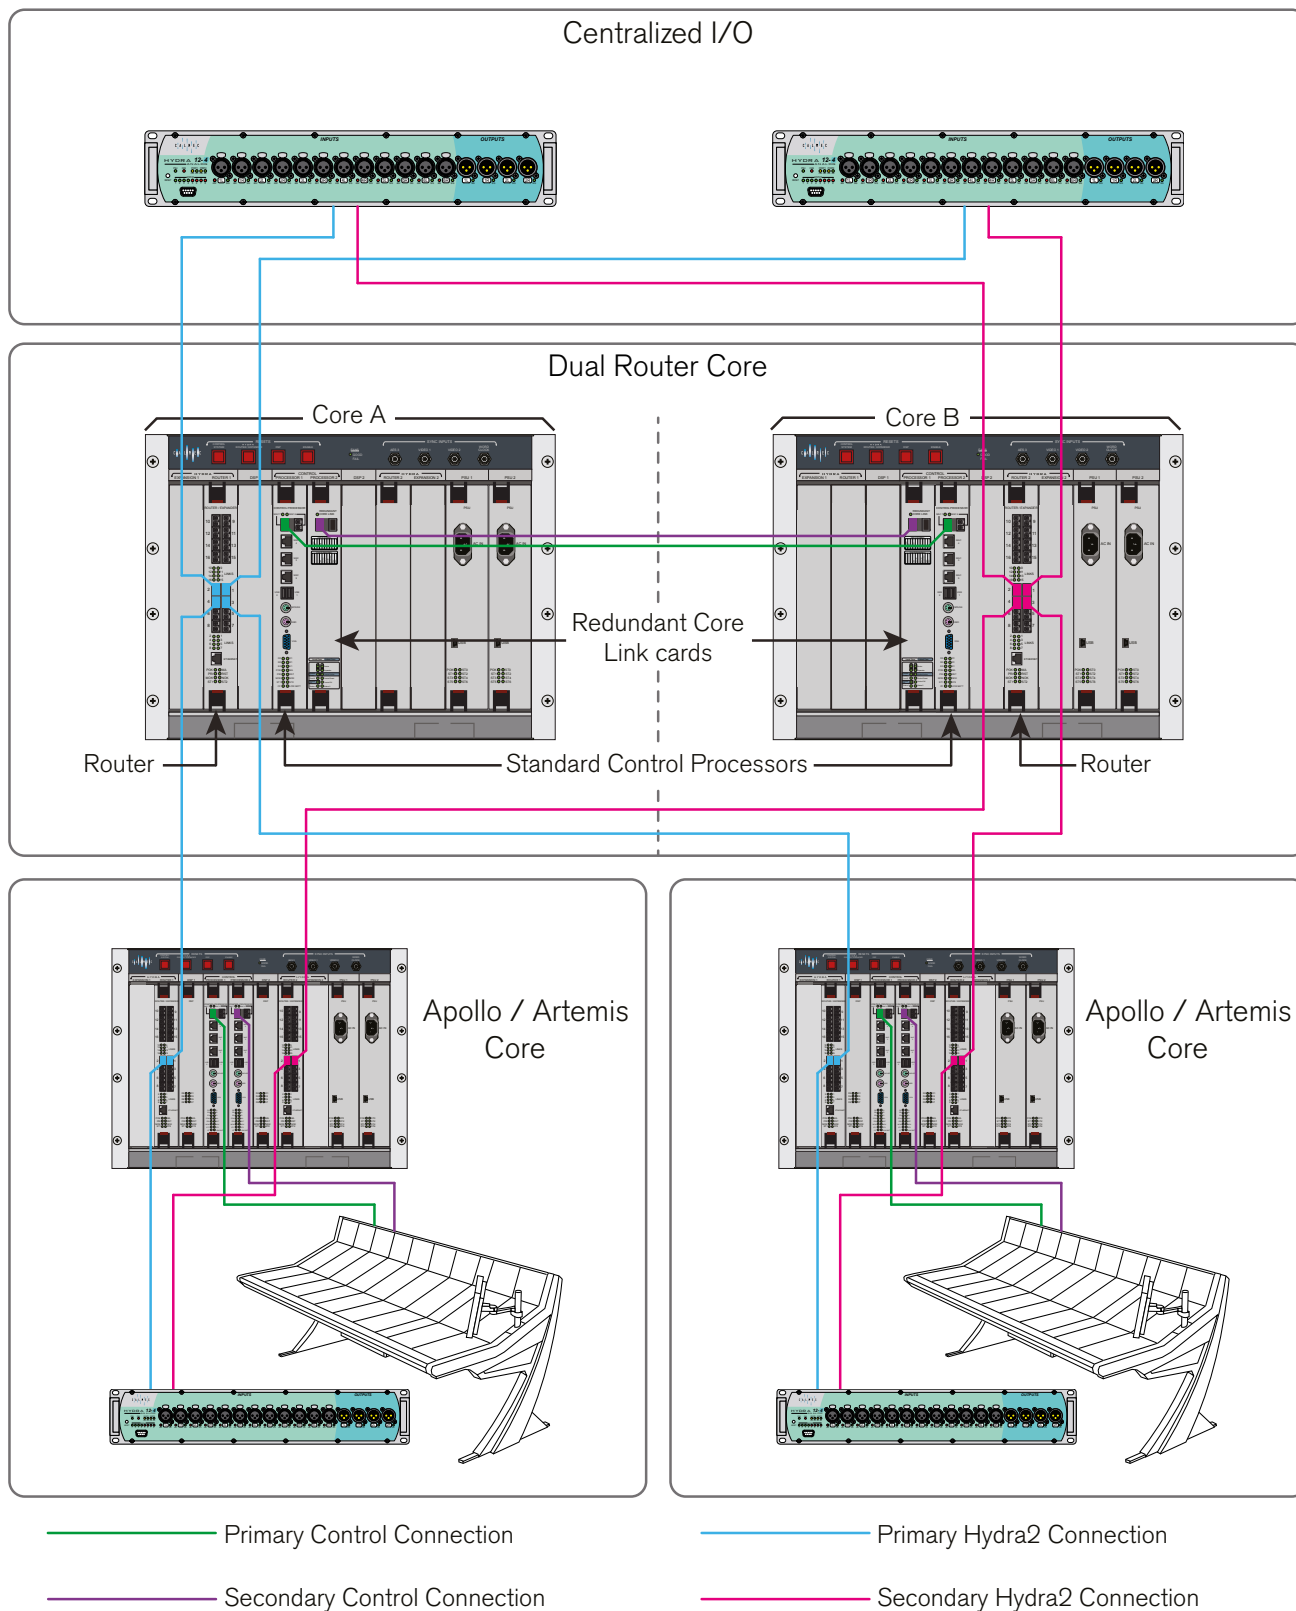

HYDRA2

CONNECTION INFORMATION


SFP – OVERVIEW

The connections between control surface and processing core, as well as all Hydra2 network connections, connections between I/O boxes and routers, and router to router connections between different cores — are made via SFP modules (Small Form-factor Pluggable).

SFPs can be provided for RJ45 copper connections, as well as for Singlemode or multimode fibre on LC connectors. This allows for each port's connection type to be chosen depending on the distance of the run or to match the infrastructure present. SFPs can easily be changed on a port by port basis as and when required.

The correct quantity of SFPs are supplied pre-fitted. The type of each connection—copper, Singlemode fibre or multimode fibre, should be specified at the time of order to ensure the correct SFP types are supplied. Additional SFP modules can be ordered if required. If a system is to be connected to an existing Hydra2 network, please discuss this with your Calrec project leader, sales person or local distributor to ensure the correct SFP and port provision for the additional router to router connections.

SFP MODULES

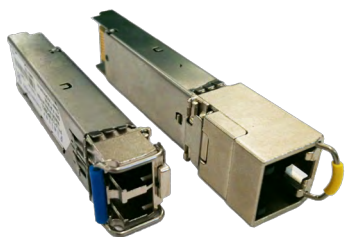

- Both SFP types above have a handle latching mechanism, shown here in the locked position. The unit on the left is a Singlemode duplex LC fibre module. The unit on the right is a copper RJ45 module.


SFP slot orientation

SFP modules plug into front panel slots on core and modular I/O controller cards, and rear panel slots on fixed format I/O boxes. The modules can be fitted or removed whilst the system is powered and without removing or opening any card or box cases.

Note the orientation of the SFP modules, as shown in the illustrations on this page—modules fitted in even numbered router ports (left hand column) are fitted the opposite way around to those in the odd numbered router ports (right hand column). Likewise for fixed format I/O boxes, the primary SFP module is the opposite way around to the secondary SFP module. The modules are orientated so that the release catch for the RJ45 / LC connector plugs, once inserted, are on the outside edge.


For modular I/O box controller cards, both SFP slots are orientated so that the release catch on the cable / fibre connector are on the right-hand side.

ROUTER CARD SFP ORIENTATION

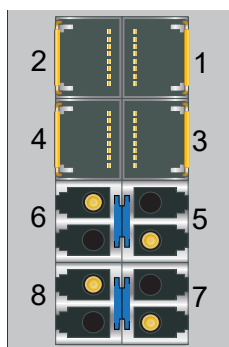

- Router card shown with copper SFPs fitted in ports 1-4, single mode fibre (button release) in ports 5-8.

FIXED FORMAT I/O BOX SFPs

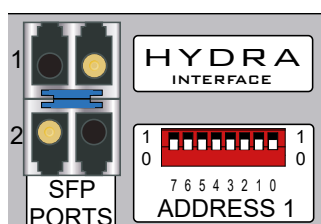

- I/O box shown with Singlemode fibre SFPs (button release) fitted.

MODULAR I/O BOX SFPs



- Modular I/O controller card SFPs are both orientated the same way (Button release Singlemode fibre SFPs shown).

SFP latching and extraction

Calrec source SFP modules from various manufacturers. All types used conform to the same specification, however the latching mechanism on them can vary slightly.

The standard copper SFP, and some fibre SFPs as shown in the photograph on the previous page have latch / extraction handles. On insertion, the handles should be set against the outer edge (the same side as the release catch on the RJ45 / LC connector plug that fits into the SFP) to lock them into place and prevent accidental removal if cables are pulled.


To remove this style of SFP, remove the cable / fibre and slide the handle (copper) or lift the handle out (fibre) to the inside edge position as shown in the diagram below. The module can then be removed by pulling on the handle.

Other SFPs automatically latch into place when they are inserted fully and have a release button on their inside edge. The fibre SFPs shown in the orientation diagrams and below are of this type and have blue release buttons. To remove, depress the button using a small flat blade screwdriver or similar tool. The SFP module will then be free to be removed.

SFP slot covers

Dust covers should be fitted to all SFP slots that do not have SFP modules fitted in them in order to keep them clean and maintain connection reliability.

SFPS WITH HANDLES - LATCHED

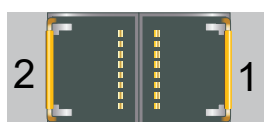


- Both SFPs shown are locked in place—Latch / extraction handles in outer position (or 'down' position for fibre).

Loose SFP storage

SFP modules are small yet reasonably expensive devices. When removing or changing SFPs, take care to keep track of them and store loose modules in a clean, dry, and anti-static environment. Fibre SFPs should always have a dust cover fitted into their optical transceiver end when no fibre is connected to them.


Calrec will not be liable for lost or missing SFP modules, or damage due to poor storage.

SFPS WITH HANDLES - UNLATCHED

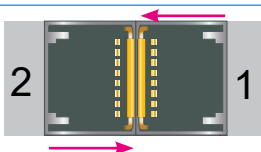

- Both SFPs free to remove—Latch / extraction handles in inner (or 'lifted' for fibre) position.

AUTO-LATCHING SFP

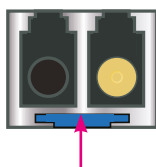

- Depress the release button to remove.

SFP design varies depending on the manufacturer, please ensure that SFPs are correctly latched in place after fitting them. In the event that a connection is not automatically established after hot-plugging an SFP, please reset the unit the SFP is plugged in to.

RJ45 COPPER SFP CONNECTIVITY

Hydra2 network connections and control surface to processing core connections made via copper SFP modules require shielded F/UTP Category 5e or Category 6 cables with shielded RJ45 mating connectors.

Calrec do not supply these cables as it is often preferable to terminate them after they have been run through cable ducting to avoid damaging the terminations, and to be able to cut them to the precise length required.

Shielded cables and connectors

Shielded cabling and connectors are required in order to meet EMC (Electromagnetic compatibility) standards to comply with the radiated emission limits set in the standard EN55022, as well as to guarantee performance in electrically noisy environments.

F/UTP Cat5e/Cat6 cable has an overall foil shield around the conductor cores. Shielded RJ45 connector plugs have a metallic shield around them which should be clamped / bonded to the shield within the cable. The shield on the connector mates with the chassis of the RJ45 socket that it is plugged into, providing an earth to the cable shield.

The method of attaching the connector shield to the cable shield can vary. Please refer to the connector manufacturer's information for further guidance.

SHIELDED RJ45 CONNECTOR



Conductive connector mating screen clamped / bonded to cable shield

Maximum cable length

The maximum length of Cat5e/Cat6 cables is 90m / 295ft. This is the absolute maximum and needs to include any patch points and cables that may be in the path. Hydra2 cable runs can NOT be extended using Ethernet switches, hubs or repeaters. If a run between Hydra2 hardware exceeds the maximum recommended distance for copper cabling, fibre and optical SFPs should be used instead.

Cable routing considerations

The layout and twist rate of the data cores within Cat5e/Cat6 cables are integral to their performance at high speed over distance. Poor installation practise can seriously impact upon this. The following are general good rules of practise, please refer to the cable manufacturer's information for comprehensive installation rules:

- When running Cat5e / Cat6 network cabling, it is important to avoid kinking the cable. Kinks can seriously impair performance. Cable manufacturers advise that kinked cables should be discarded and replaced as the damage caused cannot be addressed simply by straightening the outer appearance.
- Cables should not be bent in tight angles, this too can seriously impair performance. Please refer to the cable manufacturer's specification on minimum bend radii.
- Excessive pulling force when routing cables can deform the twist rate of the cable cores, causing irreparable damage. Cable manufacturers specify a maximum pulling tension.
- Cable ties should not be over-tightened as this also deforms the internal structure of the cable. Cable ties should be tight enough only to support the cable weight but not so tight as to cause any visible deformation to

the cable's outer jacket. Large, heavy bundles of cables can be difficult to support using cable-ties without causing damage. 'Velcro' style hook-and-loop cable straps can be a good alternative to plastic cable ties.


- Whilst neatly bundled parallel cable runs are tidy and aesthetically pleasing, they increase the chance of cross-talk, which can impact on performance. Avoid neat bundling of network cables over any kind of distance—the majority of a cable's length is normally unseen, running under floor or through ducting where they should be loosely laid rather than neatly bundled.

Termination and strain relief

Poor termination and lack of strain relief is one of the most common causes of high speed network cable problems.

To properly strain relief the data cores, the outer jacket of the cable should be inserted into the RJ45 housing and held in place once crimped by the strain-relief point, as shown in the following diagram. This also maintains the integrity of the twist rate and shield into the termination, and therefore the full length of the cable

STRAIN RELIEVED RJ45 TERMINATION

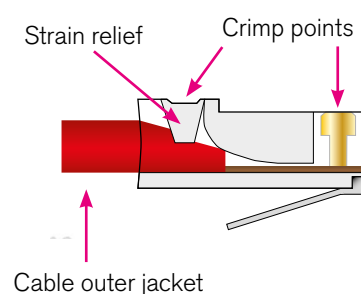


- Note, this is a simplified diagram that does not include the shield.

conforms to its intended specification. Slide on outer boots offer additional strain-relief protection but are not sufficient on their own. In order to be able to crimp the cable jacket inside the RJ45 and land the data cores on the terminals, the amount that the jacket is stripped back in relation to the cores needs to be quite accurate. Cables with exposed data cores should not be used as they will be unreliable.

Termination—pin-out

Hydra2 network cables use the standard gigabit Ethernet pin-out. Performance relies on the positive and negative leg of each signal pair using cores that are twisted together. Calrec recommends that 'straight-through' or 'pin-for-pin' cables are used. 'Cross-over' style cables can be used, however they must be gigabit standard cross-over. Older pin-outs, designed for use with slower Ethernet standards only use two of the four pairs, even though all four pairs are terminated. Cross-over variants of this style only cross the pairs that are used (A and B). Gigabit cross-over cables require that the blue (C) pair is crossed with the brown (D) pair as well as the orange (A) pair being crossed with the blue (B) pair.

RJ45 PIN NUMBERING

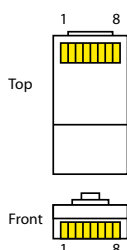

STANDARD HYDRA2 RJ45 PIN-OUT

Pin	Colour	Signal
1	Orange-White	A+
2	Orange	A -
3	Green-White	B+
4	Blue	C+
5	Blue-White	C -
6	Green	B -
7	Brown-White	D+
8	Brown	D -

- For standard wiring, both ends of the cable should be terminated as above.

Testing / certification

Calrec strongly recommend that all Hydra2 network cabling is properly tested or certified prior to on-site commissioning of the system. Simple test devices that only check the pin-out of the terminations are not sufficient to prove the performance and reliability of high speed data cabling. Certification level test equipment can give a simple pass / fail response but in doing so will test various important factors as well as pin-out. Certification type tests include determining cable length, measuring skew (timing differences between pairings due to variations in length caused by intentional differences in twist rate), measuring for loss, signal to noise ratio and BERT error checking on data.

Cables that fail certification tests or fail to perform, may appear to function fine in other applications, such as a PC LAN connection where errors leading to retries and therefore delays are acceptable and often unnoticed.

Temporary / reusable cables

Cabling that is not part of a permanent infrastructure, such as temporary runs used for outside broadcasts should be carefully coiled and uncoiled to avoid 'kinking' and they should be regularly tested. Cables showing any sign of damage should be replaced.

FIBRE SFP CONNECTIVITY

Optical SFP modules for fibre connectivity can be used for console to processing core, router to router, and router to I/O connections.

Fibre connectivity is required when the cable run between units exceeds the maximum permissible length for Cat5e/ Cat6 copper cabling. Fibre can also be used for shorter runs if it is simply the preferred medium.

Note that this section only concerns fibre connections made via SFPs. Like all I/O boxes, MADI units have pluggable SFPs for their Hydra2 connections to routers, but they also have fibre connectors that pass the actual MADI audio format in and out of the system. The MADI I/O format fibre connectors are of a fixed type which has no relation to SFP choice. Different build types of MADI I/O box are available to provide various types of MADI fibre interface. Please refer to the Hydra2 installation manual for more details on MADI I/O options.

Singlemode vs multimode SFP's

The core within multimode fibre is relatively thick when compared to singlemode. Light travels through multimode fibre at multiple angles, 'bouncing' of the sides of the core as it travels through it, taking multiple paths, or 'modes' of varying length from one end to the other, resulting in pulses being lengthened as they travel. Singlemode fibre has a very fine core and light travels in a single, direct path from one end to the other without affecting pulse length.

The result is that singlemode fibre has

a higher bandwidth capacity and lower signal loss allowing much greater distances to be achieved. Light can be transmitted into multimode fibre using LED's or low powered lasers whilst singlemode uses a higher powered laser.

Bi-Directional SFP's

These SFP's use a simplex LC connector and operate by transmitting and receiving at 2 different frequencies down the same fibre in opposite directions. These have to be used in a Type A /Type B pair. Type A has a TX frequency of 1310nm and a RX frequency of 1550nm whilst its opposite uses a TX frequency of 1550nm and a RX frequency of 1310nm. Calrec recommend the use of singlemode fibre whenever possible in order to maximise the flexibility in the location of hardware and maintain uniformity across the system by using a single type. If a multimode infrastructure is in place, fibre length, the number of interconnects and equipment location becomes important.

SFP modules are available in bi-directional, singlemode and multimode fibre types. It is important to select the correct SFP for the type of fibre being used in the installation. If using a mixture of singlemode and multimode fibre, it is important to ensure the correct SFPs are matched to the correct fibre type.

Identification

The release button / handles of fibre SFPs are colour coded - Blue (TypeA) /Purple or Green (TypeB) for bi-directional, Blue for singlemode and Black for multimode. Blue LC connectors, as shown below should be used to terminate singlemode fibre, and beige connectors for multimode.

Connectors / terminations

Calrec fibre bi-directional SFPs use simplex LC connectors whilst multimode and singlemode use duplex LC connectors. The duplex termination requires two fibres per connection, one is a send path, the other is a receive path. When terminating the fibre, the send from one end should connect to the receive of the other and therefore they are 'cross-over', terminated A to B and B to A.

SFP / fibre specifications

Specifications are shown in the table below. The maximum distances shown assume a single point to point connection with no intermediary interconnections. Losses should be measured across the total signal path including interconnects - between points of transceiver connection. Losses need to be less than the optical power budget of the SFP transceivers.

FDDI SFP 491-254 (see spec table)

This is a Bi-Directional SFP used for FDDI interfacing to the JM6199 MADI module.

DUPLEX LC FIBRES CORRECTLY TERMINATED A TO B & B TO A



BI-DIRECTIONAL LC FIBRE CORRECTLY TERMINATED TYPE A TO TYPE B



SFP COPPER / FIBRE SPECIFICATIONS

Part Number	Description /Cable Type	Type	TX Freq	RX Freq	Bale Colour	Max Dist	Connector Type	GBIC Type	Power Budget
491-194	SFP Module Copper CAT5/6	N/A	N/A	N/A	N/A	90m	RJ45	N/A	N/A
491-087	SFP Module Fibre Multimode 62.5/125um	N/A	850nm	850nm	Black	275m	LC Duplex	SX	7.5dB
As above	SFP Module Fibre Multimode 50/125um	N/A	850nm	850nm	Black	550m	LC Duplex	SX	7.5dB
491-072	SFP Module Fibre Singlemode 8/125um	N/A	1310nm	1310nm	Blue	10km	LC Duplex	LX	8.0dB
491-060	SFP Module Fibre Singlemode 8/125um	N/A	1310nm	1310nm	Blue	70km	LC Duplex	LH	23.0dB
491-195	SFP Module Fibre Bi-Directional 9/125um	A	1310nm	1550nm	Blue	10km	LC Simplex	LX	11.5dB
491-196	SFP Module Fibre Bi-Directional 9/125um	B	1550nm	1310nm	Purple	10km	LC Simplex	LX	11.5dB
491-201	SFP Module Fibre Bi-Directional 9/125um	A	1310nm	1550nm	Blue	40km	LC Simplex	LH	23.0dB
491-200	SFP Module Fibre Bi-Directional 9/125um	B	1550nm	1310nm	Green	40km	LC Simplex	LH	23.0dB
491-254	SFP Module Fibre FDDI Multimode 62.5/125um	FDDI	1310nm	1310nm	Black	2km	LC Duplex	SX	11.9dB

FIBRE – GENERAL RULES

Testing / certification

Calrec strongly recommends that all fibres are properly tested or certified prior to onsite commissioning of the system. A certain amount of signal loss occurs over the length of a fibre path. If the total loss of a path exceeds the optical power budget of the SFPs in use, the system will be unreliable.

Areas of loss

Signal loss occurs in various areas. Splice loss occurs in terminations - at the point where the fibre meets the connector. Typically splice loss should be <0.3dB per termination. Poor termination results in higher loss.

Connector loss occurs at the point where the connector meets the SFP / optical transceiver, or another connector, such as extension interconnects or patch-points. Connector loss should typically be <0.5dB per interconnect. Dust or other contamination between interconnects and scratches on the end surface contact point of the fibre will substantially increase the amount of loss. As such, dust covers should always be fitted to optical transceivers such as SFPs when no fibre is connected and to fibre connectors that are not landed.

As well as splice and connector loss, the fibre itself has inherent loss over distance, typically fibre loss will vary from 3.5dB per Km for multimode down to 0.4dB per Km for singlemode. Poor installation practise and lack of care can damage the fibre and result in substantially increased losses.

Fibre handling practise

It is important to follow the fibre manufacturer's guidelines when handling fibre and installing fibre runs. Some of the main points of concern are:

- Minimum bend radii - fibre should not be bent through too tight an angle. Tight angles can cause significant losses and permanent damage to the fibre. Fibres may pass initial installation testing but can fail at a later date due to stresses on the core of the fibre caused by tight bends.
- Twists, snags and kinks - Twists in fibre runs add stresses to the core which can cause damage over time. Avoid snagging on other cables or conduit which will cause excessive tensions when pulling and can cause kinks and excessive bends in the fibre. When routing through angled conduit, provide enough clearance around corners to avoid the fibres being pulled sharply around the inside of the angle.
- Pulling - observe the manufacturers maximum pulling tension specification. Use pulling tools and lubrication where appropriate. Never pull on the connector.
- Strain relief - fibres should be adequately strain relieved to prevent tension on terminations, however use of plastic cable ties can crush the internal construction of the cable. Hook-and-loop 'Velcro' straps are harder to over-tighten, offer more gentle support and a greater surface area to dissipate the pressure.
- Crushing - never place heavy items on top of unprotected fibre.

Ruggedised fibre

For temporary / re-usable fibre runs, or runs unprotected by conduit, fibre that is likely to be exposed to the elements, snagging or to being stood on, should always be of a ruggedised / armoured type to protect the internal construction of the core.



WARNING

Never look into the end of an optical transceiver or fibre when in use. Laser radiation can be harmful to the human eye and should be avoided.

Remember that when disconnecting a fibre, the transmitting device at the other end may still be active.

Cleaning and preventative maintenance

Contamination of transceiver and fibre mating contact points causes signal loss and can cause permanent damage by scratching.

Dust covers should be fitted to all fibre connectors and SFP optical transceivers when they are not mated. It is also important to ensure that dust covers themselves are kept clean.

When handling fibres without dust covers, do not allow the ends to come into contact with any surface, including fingers.

Specialist materials should be used for the cleaning of mating contact points to avoid further contamination or scratching. The following items are low cost and readily available from camera shops and laboratory suppliers:

- Canned compressed air - it is important to use specialist filtered, clean, dry air, free of contaminants and moisture.
- Isopropyl alcohol. Use with cotton swabs or lint-free wipes to ensure no residue is left.
- Lint free wipes / long fibre, low ash lens paper - needs to be free from chemical additives. Ensure wipes and swabs are stored in a clean environment and are not reused.

Cleaning fibre optic cables and connectors

There are multiple ways to clean fibre-optic cables and connectors.

Included below are some helpful tips to properly clean fibre optic cables.

- Do not allow the end of the fibre optic cable to make contact with any surface including fingers.
- Do not excessively bend the fibre cable. Bending the cable may cause internal breaks along the fibre resulting in poor performance or instability.
- Optics and optic coatings are easily chipped and/or scratched. Use of finger cots or powder free surgical gloves while handling fibre optic cables, will help ensure cleanliness.
- Only fresh (dry) spectroscopic grade Isopropyl Alcohol should be used as a cleaning solvent.
- Ensure that the module power is off and that other light sources are disabled.

Cleaning procedure

1. Blow the fibre surface with a stream of Clean Dry Air, this will dislodge larger loose particles.
2. Place 1-3 drops of spectroscopic grade Isopropyl Alcohol in the centre of a lens tissue.
3. Hold the fibre by the connector or cable, place the wet portion of the lens tissue on the optical surface and slowly drag it across.
4. Examine the surface of the fibre end under high intensity light using a direct magnifying inspection microscope or an indirect video inspection tool if available. If streaks or contaminants still remain, repeat the process using a fresh lens tissue.
5. Immediately install a protective cover over the end of the cable to avoid re-contamination or insert the fibre back into the previously cleaned receptacle for immediate use.

Additional notes

Do not tip the can of Clean Dry Air whilst aerosol spraying as liquid may be released contaminating the surface of the fibre.

Do not use lens paper dry as dry lens paper is extremely abrasive.

Do not use Acetone as a cleaning solvent on the fibre optical surfaces.

To ensure the purity of the Isopropyl Alcohol, do not insert the lens tissue, swabs, etc into the liquid, instead, drip the liquid on to the material.

Cleaning optical transceivers

The best way to clean a transceiver port is to remove particles using a stream of Clean Dry Air.

Included below are some helpful tips to properly clean fibre optic modules.

- Always handle optical SFP modules in an ESD safe manner using the proper safety precautions.
- Ensure that the module power is off and handle the modules with care.
- Always use Clean Dry Air or an approved canned compressed air supply.
- Always hold the can of compressed air upright. Tipping may release liquids into the air stream.
- Do not touch the inner surfaces of the module including the Optical Sub-Assemblies (OSA), or insert any foreign objects into the ports.
- Use of finger cots or powder free surgical gloves are not required but may be used for cleanliness.

Cleaning procedure

1. With the clean dry air, blow the inner barrel of the Transmitter and Receiver Optical Sub-Assemblies (OSA). This will dislodge loose particles.

2. Examine the surface of the OSA lens under high intensity light using the inspection microscope. If contaminants still remain, repeat the process.

Following these guidelines should provide a successful installation and ensure optimum reliability and system performance.

For further information or advice please feel free to contact Calrec.

SYSTEM STATUS OVER SNMP

All Calrec consoles feature **System Status** - a warning and correction system. **System Status** messages can be managed centrally using an **SNMP (Simple Network Management Protocol)** server.

All Calrec console and Master Router PCs provide an SNMP agent to forward error and warning messages to a central SNMP server, allowing equipment faults to be monitored and managed from a central location. A connection can also be made to a second SNMP server if required for redundancy.

Connecting to the SNMP server

A USB to ethernet adapter is provided with each console PC for connecting to your central SNMP server. If multiple SNMP servers are used this connection should be made to a network switch to allow multiple onwards connections.

Router cores are provided with a rack mount PC which has a spare ethernet port to be used for connecting to your central SNMP server.


In both cases the ethernet ports used must be configured to be in range of your central SNMP server before configuration can continue.

Configuring the SNMP Agent


Each console/router core PC's SNMP agent must be configured individually. This can be done from the local PC by opening Google Chrome and entering 'localhost' in the address bar as shown here. SNMP agents can also be configured remotely by entering the IP address of the PC where the SNMP agent is running, including the port number (default: 80).

The SNMP Agent interface has 3 tabs. The System Status tab shows a list of


SNMP AGENT - SYSTEM STATUS TAB

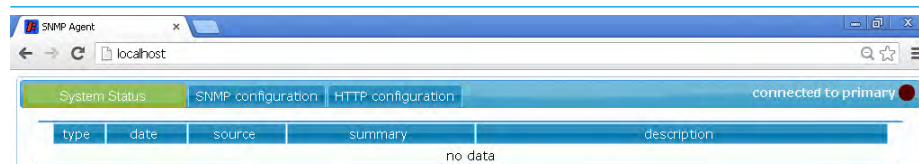

SNMP AGENT - SNMP CONFIGURATION TAB

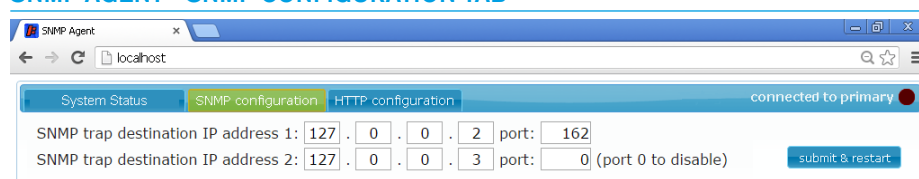

SNMP AGENT - HTTP CONFIGURATION TAB

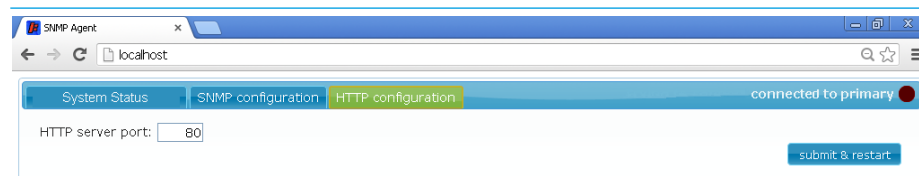

the current System Status errors and warnings for the console or router that you are accessing.

Enter the IP address of the facility's main SNMP server within the SNMP configuration tab under 'address 1'; this is where the SNMP agent and SNMP server are connected together. If a second SNMP server is used enter its IP address under 'address 2'. After making any changes, click SUBMIT & RESTART.

The HTTP configuration tab allows you to set the port number for access to the SNMP agent configuration interface, the default is port 80. If changes are made here, the port will need to be


specified when accessing the SNMP agent interface, for example, if the port is changed to 10, type 'Localhost:10' in Chrome's address bar to access the SNMP agent interface. After making any changes, click SUBMIT & RESTART.

Scope of System Status over SNMP

Only System Status error and warning messages are sent via SNMP, information messages are not sent. When errors are corrected, the relevant System Status messages are cleared from the PC Main application and are simultaneously cleared from the SNMP server.

ROUTER CORE PC CONFIGURATION

1U PC REAR CONNECTIONS

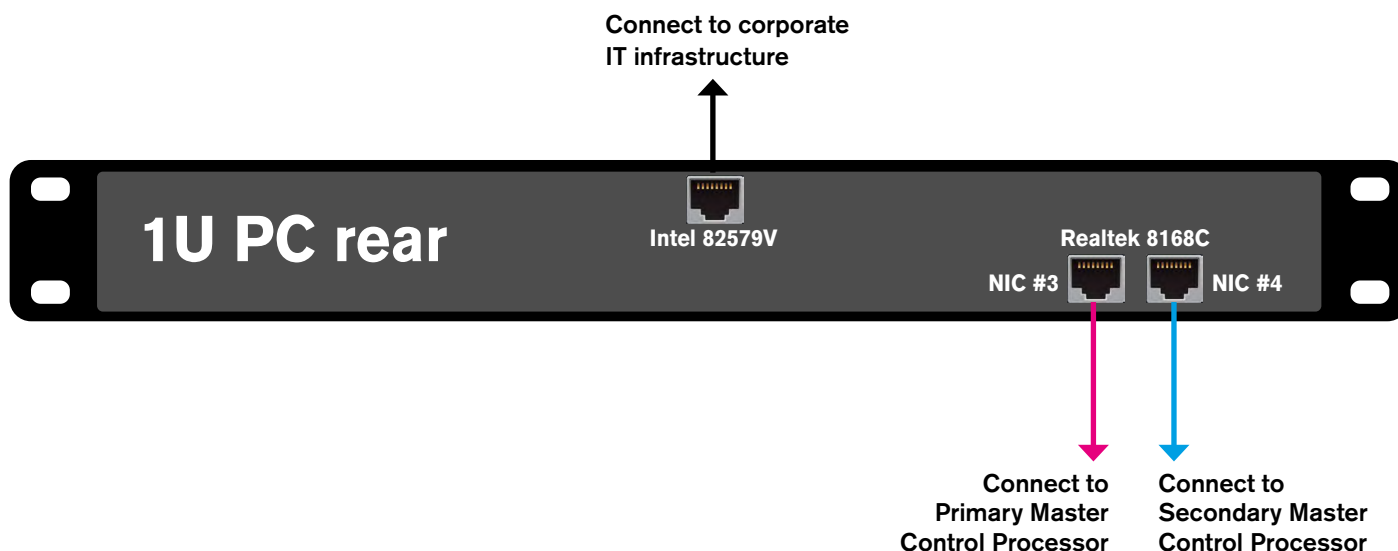

All Router Cores are supplied with a 1U rack mounted PC and 1U keyboard and screen for accessing the various components of the Router Core and the wider Hydra2 Network.

PC Connections

The Intel Ethernet port should be connected to your corporate LAN and the two Realtek ethernet ports should be connected to your Router Core processing core as shown in the diagram above. The MAC5 RJ45 port on the front of the Master control processor card should be used.

Configuring Ports

The Intel 82579V port should be configured to interface with your corporate IT structure for the purpose of communicating System Status messages using the SNMP protocol.

Pre-installed software

The following software comes pre-installed on every Router Core 1U PC:

- Calrec Program Updater
- Customer Data Backup Utility
- SNMP client
- Google Chrome

The following admin software is pre-installed on all Router Core 1U PCs:

- WinSCP
- PUTTY
- logmein

Calrec Program Updater

Calrec Program Updater is used to update primary and secondary control processors, routers and processor switches without the need for swapping network cables.

Program Updater is also used to gather console logs from both primary and secondary control processors and routers

Customer Data Backup Utility

Calrec's Customer Data Backup Utility is used for backing up and restoring core databases and promoting/demoting master routers within the Hydra2 network

SNMP Client

The SNMP client allows System Status messages to be reported to a central SNMP server where the status of the active processor is automatically tracked. System Status messages can also be viewed using the SNMP client's browser via Google Chrome.

Google Chrome

Google Chrome is used to access Calrec's network management tool H20 and to configure the SNMP client as described on the previous page.

Antivirus Protection

Antivirus protection is not pre-installed on console and router core PCs as standard but if you wish to protect your PC you can install a package of your choice. . Exceptions will need to be configured within the antivirus software to allow the following to communicate with the Calrec system:

- C:\Calrec\WindowsService\DeskPcWs.exe
- C:\Calrec\ProgramUpdater\Calrec.ProgramUpdater.exe

HYDRA2

3RD PARTY REMOTE CONTROL

SW-P-08 REMOTE CONTROL

The Hydra2 router allows for cross-point matrix routing of Hydra inputs direct to Hydra outputs without using console DSP or control surface space. Control over input to output cross-point routing can be from the console PC, a standalone PC running the Hydra2 Organiser or via 3rd party controllers supporting the SW-P-08 protocol.

As well as physical Hydra2 I/O ports, the H2O application and SW-P-08 controllers also have access to Hydra patchbays, enabling them to change sources on console DSP inputs and access to console DSP outputs.

The following 3rd party SW-P-08 systems have been proven with, and are supported by Calrec:

- L-S-B VSM
- Colledia BNCS
- Grass Valley Jupiter
- Evertz
- NVision
- Axon Cortex
- Harris Edge

Please refer to the relevant manufacturer's guidance for specific information relating to their products.

Connection

The 3rd party SW-P-08 controller should be connected to the single front panel RJ45 'Ethernet' on the main (not expansion) Router card. A secondary, backup connection can be made to the secondary main router card. Systems requiring both SW-P-08 and Ember control need to use the same single Ethernet port and therefore an Ethernet switch is required. The two control systems are separated by using different TCP socket port settings.

On Hydra2 networks with more than one processing core, the SW-P-08 connections should be made to the router cards in the processing core configured as the Master Router.

Slaved processing cores do not support SW-P-08 connections. Connections made to the Master Router can be given access to any I/O on the network, irrespective of which processing core the I/O is connected to.

The Ethernet port on the router cards is a gigabit connection which uses standard Ethernet straight-through or cross-over pin-outs and pairings. Screened Cat5e cable should be used to guarantee performance.

The default IP address of the SW-P-08 ports are the same as that of the router cards themselves—xxx.yyy.5.0 for the primary and xxx.yyy.6.0 for the secondary. xxx.yyy is different for each processing core and can be checked using the Calrec Program Updater application on the PC associated with the core in question. The user must be logged into Windows as **CalrecAdmin** with the password **calrec** in order to run the Calrec Program Updater which can be found in the Calrec folder in the Windows Start menu. Upon launch, the application checks for the presence of local hardware and reports back with IP addresses. All hardware associated with the same processing core has the same first two bytes of IP address. The router cards themselves can be identified in the list by their unit number being prefixed with 'RY'. IP addresses for the SW-P-08 connections can be aliased if required to make them more suitable for use with the 3rd party network, however this should be carried out by a Calrec Engineer and so such should be discussed prior to commissioning.

Note, as well as addressing the routers by IP, the SW-P-08 controller needs to be configured to use the TCP socket port of 61000.

Configuration

SW-P-08 configuration requires the use of the Hydra2 Organiser GUI. Please refer to the H2O user guide for information.

EMBER REMOTE CONTROL

The EMBER protocol is a sophisticated data exchange mechanism that has potential for controlling many functions across varied equipment types.

EMBER control has been incorporated into Calrec's Apollo, Artemis and Hydra2 range to allow remote control functionality both over consoles and the wider Hydra2 network.

Currently, Calrec support the use of the following EMBER controllers:

- L-S-B VSM
- Colledia BNCS

Please refer to the relevant manufacturer's guidance for specific information relating to their products.

Currently, EMBER has the ability to control the following features when connected to a Calrec Apollo/Artemis/Hydra2 network:

- Loading of shows and user memories onto control surfaces.
- Loading / removing alias files used by consoles, instructing them to use different pre-defined sets of I/O ports. (Please refer to the console operator manual for more information on the use of alias files.)
- EMBER controllers can view and edit the H20 based Hydra2 I/O box and port labels.
- Inserting SMPTE2020 metadata into Hydra2 SDI embedder outputs - Metadata sets can be uploaded and edited using the H20 application. EMBER controllers can select any of the available metadata sets for insertion to, or removal from any of the SDI embedder outputs on the network.
- EMBER controllers can selectively mute any of the audio channels within the SDI output of Hydra2 embedders.

Connection

The 3rd party EMBER client should be connected to the single front panel RJ45 labelled 'Ethernet' on the main (not expansion) router card. A backup secondary connection can be made to the secondary main router card. Systems using both EMBER and SW-P-08 control require the use of an external Ethernet switch to allow both control systems to connect to the same Ethernet port. The two control systems are separated by using different TCP socket port settings.

On Hydra2 networks with more than one processing core, the EMBER connections should be made to the router cards in the processing core configured as the Master Router. Slaved processing cores do not support EMBER connections. Connections made to the Master Router can be given access to any console and I/O on the network, irrespective of which processing core they are connected to.

The Router card Ethernet ports are gigabit connections, which use standard Ethernet straight-through or cross-over pin-outs and pairings. Screened Cat5e cable should be used to guarantee performance.

The default IP address of the Ethernet ports are the same as that of the router cards themselves—xxx.yyy.5.0 for the primary and xxx.yyy.6.0 for the secondary. xxx.yyy is different for each processing core and can be checked using the Calrec Program Updater application on the PC associated with the core in question.

The user must be logged into Windows as **CalrecAdmin** with the password **calrec** in order to run the Calrec Program Updater, which can be found in the Calrec folder in the Windows Start menu. Upon launch, the application checks for the presence of local hardware and reports

back with IP addresses. All hardware associated with the same processing core has the same first two bytes of IP address. The router cards themselves can be identified in the list by their unit number being prefixed with 'RY'. IP addresses for the SW-P-08 connections can be aliased if required to make them more suitable for use with the 3rd party network, however this must be carried out by a Calrec Engineer and so should be discussed prior to commissioning.

As well as addressing the routers by IP, the EMBER controller needs to be configured to use the TCP socket port of 61000.

HYDRA2

FIXED FORMAT I/O

FIXED FORMAT I/O OVERVIEW

A range of different fixed format I/O boxes are available to provide the quantity and type of signal format required where it is needed.

Each type of fixed format I/O box contains a set number of inputs and outputs, all of the same type / signal format. The term 'fixed format' differentiates this type of I/O box from modular I/O boxes which can be custom populated with mixed signal formats in varying quantities.

Mounting

All Hydra2 I/O boxes are fitted with racking angles, designed for mounting into standard 19' equipment bays.

Airflow

Units can sit, or be mounted directly on top of, and beneath other equipment—no spacing above or below is required for cooling. Airflow is via the side panels, which should be left unobstructed. All units, other than MADI I/O, have fan assisted airflow. A single, high specification, low noise fan is mounted to the right hand side panel, expelling air from the unit. Fans are run under-voltage to further increase reliability and reduce acoustic noise, ensuring suitability for locating the I/O within studios.

Power

All units are fitted internally with 2 x AC PSUs, each with its own IEC mains input connector, to provide redundancy against both internal PSU failure, and external AC mains loss. Where possible, the two IEC connectors / PSUs should be fed from separate AC sources. Units are supplied with IEC 'Y-split' cables to maintain redundancy by allowing both PSUs to be fed from a single AC outlet / cable, if that is all that is available.

Hydra2 network connections

I/O boxes interface with the Hydra2 network via rear-mounted, hot-pluggable SFP slots to allow Cat5e copper, Singlemode, or multimode fibre connectivity.

All units have 2 x Hydra ports - a primary / normally active, and a secondary / backup. Port 1 of an I/O box should connect to a primary Hydra2 router card, port 2 should connect to the secondary router card fitted in the same core.

Note, any fixed RJ45's on the rear of Hydra2 I/O boxes are not functional, if copper connections are required, copper SFPs should be specified.

GPIO

Most fixed format I/O units can be fitted with an optional GPIO card that provides 8 inputs and 8 outputs whose functions are assignable by any control surface on the network. A range of functions can be assigned, including Autofader and path

Cut/On trigger inputs, fader open/start and error alert outputs.

Reset


The reset button can be used to perform a 'soft' or 'hard' reset.

Press RESET to perform a soft reset.

Press RESET and hold until the FAN FAIL LED is illuminated to perform a hard reset.

Note: Splats may be emitted from analogue outputs during a hard reset. Please ensure loudspeakers are disconnected/powered down before performing a hard reset.

FRONT PANEL STATUS LED'S - NORMAL CONDITION

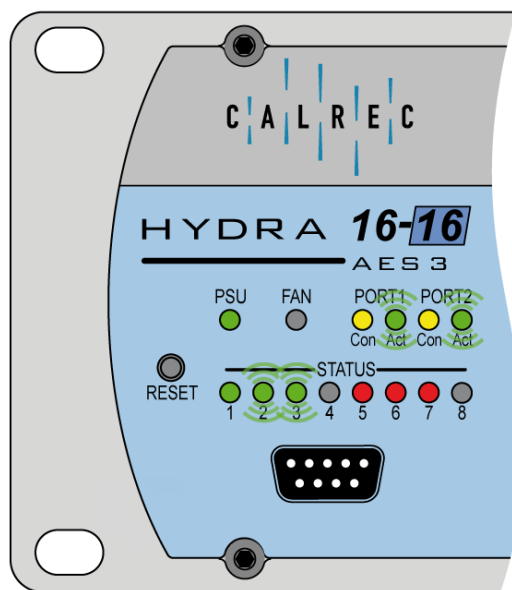

In normal operation, front panel LEDs should be as shown above:

- PSU - ON solid green
- Fan - OFF
- Port 1/2 Con - ON solid yellow
- Port 1/2 Act - FLASH (fast) green
- Status 1 - ON solid green
- Status 2 - FLASH (slow) green*
- Status 3 - FLASH (slow) green*
- Status 4 - No function**
- Status 5 - ON solid red
- Status 6 - ON solid red
- Status 7 - ON solid red
- Status 8 - OFF

FRONT PANEL STATUS LED INFORMATION

LED	Description	Display
PSU	Power Supply Status	ON SOLID GREEN —Normal, indicates both PSUs are functioning. OFF —One or both PSUs is faulty or has no AC input.
FAN	Fan Status	OFF —Normal, internal fan is functioning. FLASHING RED —Fan is faulty.
Port 1/2 Con	Hydra port Connection	ON SOLID YELLOW —Normal, indicates a valid Hydra2 port connection is made. OFF —Hydra2 port connection is not valid.
Port 1/2 Act	Hydra Port Activity	FLASHING GREEN —Under normal operation, once the connection is established, this LED should be flashing in a regular pattern, approx 10 times per second. OFF —No activity on the Hydra link.
Status 1	Unit Booted & Initialised	ON SOLID GREEN —Normal, indicates the unit has booted and the Hydra2 ports are enabled. OFF —Unit has failed to boot.
Status 2	Primary Router Heartbeat	FLASHING GREEN* —Normal, should flash approx 2 times per second. Indicates a valid link between port 1 and a Hydra2 primary router. OFF or ON SOLID —Failed link between port 1 and Hydra2 primary router.
Status 3	Secondary Router Heartbeat	FLASHING GREEN* —Normal, should flash approx 2 times per second. Indicates a valid link between port 2 and a Hydra2 secondary router. OFF or ON SOLID —Failed link between port 2 and Hydra2 secondary router.
Status 4	No Function**	
Status 5	Primary Control Data	ON SOLID RED —Normal, indicates primary control data connections are established between port 1 and a Hydra2 primary router. OFF —Primary control data has failed / cannot be established.
Status 6	Secondary Control Data	ON SOLID RED —Normal, indicates secondary control data connections are established between port 2 and a Hydra2 secondary router. OFF —Secondary control data has failed / cannot be established.
Status 7	Primary Audio / Sync active	ON SOLID RED*** —Normal, audio and sync input to the unit active from port 1. OFF —Unit is not actively receiving audio / sync via port 1.
Status 8	Secondary Audio / Sync active	OFF —Normal, unit is not using audio / sync input from port 2 (secondary / backup) . ON SOLID RED*** —Unit is using audio and sync from port 2, indicates a problem with the primary path.

- Primary and secondary heartbeat LEDs are often seen to flash synchronously—together, in time with each other, however, this is not important. As long as each LED is flashing approximately twice per second, both ports have an active and reliable comms path with a Hydra router. Under normal boot-up, from power on or reset, the heartbeats will start off in sync with each other. Over time, slight differences in timing between them will lead to the heartbeats being out of sync with each other - this is normal operation. Heartbeats will be out of sync with each other from the start if the system is already booted and the Hydra connections are physically plugged in one at a time.

** The function of status LEDs can be subject to change with software versions. Under some software versions, status LED 4 may light to indicate a PSU issue during bootup and is primarily used by Calrec Engineers for troubleshooting rather than for guidance during normal operation.

***Status LEDs 7 and 8 may be lit at the same time if an I/O box is receiving signals on its secondary connection.

I/O BOX IDENTIFICATION

Each I/O box on a Hydra2 network needs to be given a unique ID in the form of a number between 0 and 255. The Hydra ID, or 'HID' for each box is set using a DIP switch accessible from the rear of fixed format I/O boxes.


Label pockets are fitted to the front panel of I/O boxes to aid visual identification.

The 8 way DIP switch is set as an 8 bit binary representation of the HID value with the left hand switch used for the most significant bit, and the right hand switch for the least significant bit. A switch in the down/off position represents a binary 0 and a switch set in the up/on position representing a binary 1. Each individual switch / binary bit equates to a decimal value, starting at 1 for the least significant bit. The remaining switches are double the value of their less significant neighbour, making the 8th / most significant bit equate to a decimal value of 128. The overall decimal value is the sum of the decimal values of each binary '1'

All fixed format I/O box ID switches are orientated the same way, though some boxes, such as MADI units, use a different style switch with more pronounced labelling. Ignore any labels on the switch itself and always refer to the Calrec labelling on the surrounding panel, which will show the most significant bit switch on the left and the binary 1 position as up.

Care should be taken when setting HIDs to avoid accidentally duplicating the same ID on more than one box. Duplicate box IDs can cause network conflicts. I/O boxes should be disconnected from the network before changing their HIDs, and reset or power cycled once the DIP switch is set to ensure the new HID is active before reconnecting to the network.

STANDARD SWITCH FOR HID SETTING

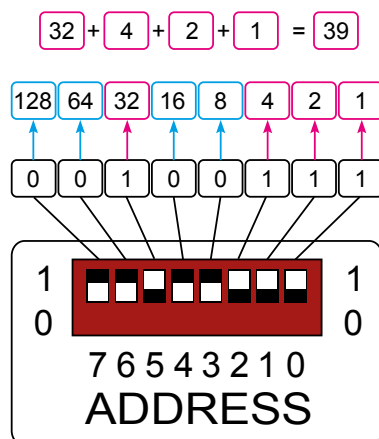

- The above diagram shows how each switch relates to a decimal value. The setting shown in the example provides a decimal HID value of 39

If replacing an I/O box for any reason, choosing a box of the same type as the original and setting it with the same ID makes it a drop-in replacement that will work with existing user memories and settings, requiring no further configuration.

When connecting additional I/O boxes to a network it is important to be aware of the existing I/O HIDs in order to select a unique number and avoid creating a conflict.

Address 2

Some I/O boxes, such as MADI units, are fitted with 2 banks of DIP switches - Address 1 and Address 2, to provide a 16 bit ID and therefore a greater range of values. Please note that only ID values between 0 and 255 are currently supported. Any DIP switches labelled Address 2 should all be set to the off position.

FIXED FORMAT GPIO – SW5739

The SW5739 is an optional GPIO card that can be fitted in most fixed format I/O boxes.

GPIO are General Purpose Inputs and Outputs. GPIO are often used to connect different pieces of equipment together to allow a function on one to be triggered by a selection on the other, for example, to make a CD player start playing automatically when its fader is opened on the mixing console or to light an 'on-air' sign when a mic fader is opened


Currently, the only fixed format I/O box types that can NOT be fitted with a GPIO card are the 1U MADI units, and the rear interfacing AES unit, due to physical space limitations. All other fixed format I/O units available can have the GPIO option fitted. Different GPIO cards, with a different connector and pin-out, are available for modular I/O boxes.

One SW5739 card can be fitted in each compatible I/O box, providing 8 inputs, and 8 outputs per unit. Multiple I/O boxes can be fitted with GPIO cards to make up the total quantities of GPIO required in each location.

Fixed format I/O boxes with GPIO cards fitted have D-type connectors on the rear panel. Units without a GPIO card will have these connectors blanked off.


The function assigned to each GPIO input and output is selected from any control surface on the network. GP output functions include fader starts, assignable button presses, error alerts, and more. GP input functions include path Cut/On, Auto-fader triggers and more. Please refer to the console Operators Manual for details on GPIO assignment.

FIXED FORMAT GPIO CONNECTORS (REAR PANEL)

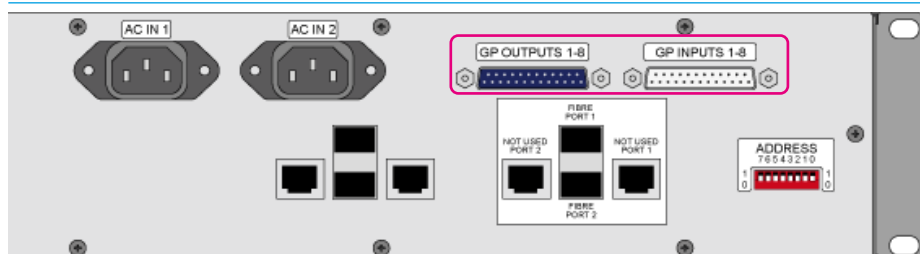

GP OUTPUTS CONNECTOR PIN-OUT

25 Pin Female D-Type - Wiring side of connecting cable

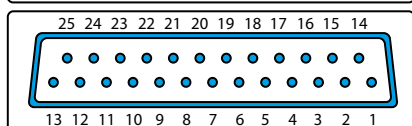

	Function	Pin
Relay 1	Common	1
	Normally Open	14
	Normally Made	2
Relay 2	Common	15
	Normally Open	3
	Normally Made	16
Relay 3	Common	4
	Normally Open	17
	Normally Made	5
Relay 4	Common	18
	Normally Open	6
	Normally Made	19
Relay 5	Common	7
	Normally Open	20
	Normally Made	8
Relay 6	Common	21
	Normally Open	9
	Normally Made	22
Relay 7	Common	10
	Normally Open	23
	Normally Made	11
Relay 8	Common	24
	Normally Open	12
	Normally Made	25
Ground		13


- Calrec connector is male, requiring female terminated cable

Relay Specification

- 30V 100mA maximum

GP INPUTS CONNECTOR PIN-OUT

25 Pin Male D-Type - Wiring side of connecting cable

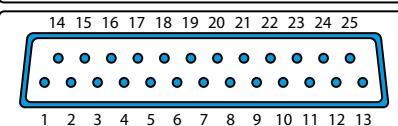

	Function	Pin
Opto 1	+	1
	-	14
Opto 2	+	15
	-	3
Opto 3	+	4
	-	17
Opto 4	+	18
	-	6
Opto 5	+	7
	-	20
Opto 6	+	21
	-	9
Opto 7	+	10
	-	23
Opto 8	+	24
	-	12
+5V		2
		5
		8
		11
Ground		16
		19
		22
		25
		13

- Calrec connector is female, requiring male terminated cable


Opto-input specification

- +/- 5-24 V DC or AC (50-60Hz)

GP outputs


Relays are used for GP outputs. All 3 relay contacts are made available on the GP output connector to provide flexibility in use—they can be wired to produce a standard closure when activated, to produce a default closure that becomes open when active, or to pass a ground or voltage that is made or broken when activated. Having all 3 contacts also allows audio or other signals to be fed through the relay and switched by GPIO control if required. The Common pin is always connected to one of the other two pins by the relay—when the relay is NOT activated, Common is connected to the Normally Made pin. When the relay becomes active (the assigned GP function is triggered), the Common pin becomes connected to the Normally Open pin. To create a dry (no voltage) closure, some typical wiring examples are shown on this page.

GP OUTPUT WIRING EXAMPLE #1

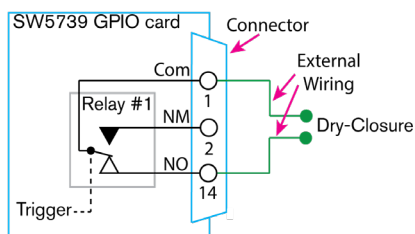

- Wiring shown provides a dry-closure on activation

GP OUTPUT WIRING EXAMPLE #2

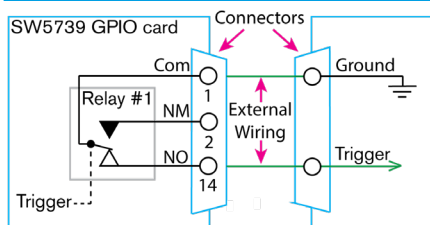


- Wiring shown provides a ground on activation. Note, the ground is provided by the device being triggered.

GP inputs


Opto-isolated inputs allow for mixing console functions to be triggered remotely by other equipment. Applying voltage across the + and - pins of an opto will trigger it. If using a dry (no voltage) closure as a trigger, one side of the closure should be wired to one of the opto's pins, the other side of the closure should be wired to ground, and the other side of the opto should be wired to +ve voltage. Both voltage and ground should be sourced from the GPIO card itself where possible. If the 3rd party kit sends a single logic line, as opposed to a closure pair, both pieces of equipment will need to share the same ground reference, or +ve voltage will need to be supplied by the 3rd party kit. Common wiring examples are shown on this page.

GP INPUT WIRING EXAMPLE #1

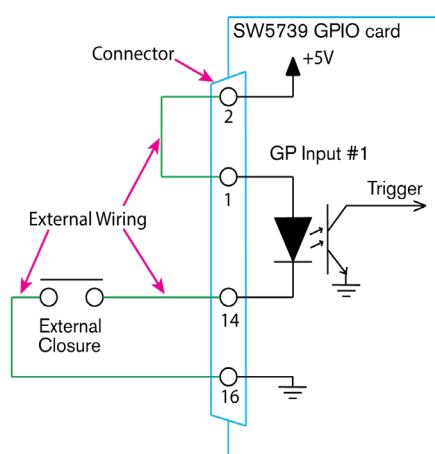

- In this example, the 3rd party equipment provides a dry closure. Voltage and ground are supplied by the GPIO card

GP INPUT WIRING EXAMPLE #2

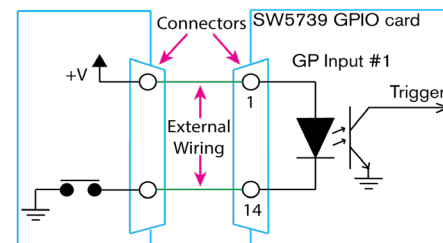

- In this example, the 3rd party equipment provides a single tally line which is grounded on activation. Voltage is supplied by the 3rd party. If voltage is instead supplied by the GPIO card, the two pieces of equipment MUST have the same ground reference.

SW5739 GPIO COMPATIBILITY

I/O Type	GPIO Compatible
AD5780	Yes
AD5781	Yes
AD5782	Yes
AE5743	Yes
AE5991	Yes
AE5992	Yes
JB5606	Yes
JB5783	Yes
JB5962	No
JM5736	No
JM5890	No
JM5831	No

FIXED FORMAT ANALOGUE I/O OVERVIEW

A range of fixed format analogue I/O units are available offering various quantities of inputs and outputs via either XLR or EDAC connectors.

Input gain & impedance

All fixed format analogue inputs accept mic and line level signals. Input impedance is automatically switched dependant on the gain setting of each input. The gain of each input can be controlled from -18 to +78dB remotely from any mixing console on the network that has been granted access. The impedance can be set globally to changeover at +18, 20, 22 or 24dB of input gain.

Phantom power

Phantom power can be switched on or off to each mic / line input remotely from any

mixing console on the network which has been granted access.


Analogue reference level

The analogue-to-digital, and digital-to-analogue conversion level is set globally across the Hydra2 network.

The most common values used are +4dBu analogue = -20dBFS digital, and 0dBu analogue = -18dBFS digital.

FIXED FORMAT ANALOGUE I/O SPECIFICATIONS


Format	Analogue
Type	Balanced
Input Gain Range	-18 dB to +78 dB, remotely controlled per input
Phantom Power	48 V remotely switchable per input
Input Impedance	2 k Ω @ Mic Level / 10 k Ω @ Line level (auto-switching)
Output Impedance	<40 Ω
ADC / DAC	24 bit

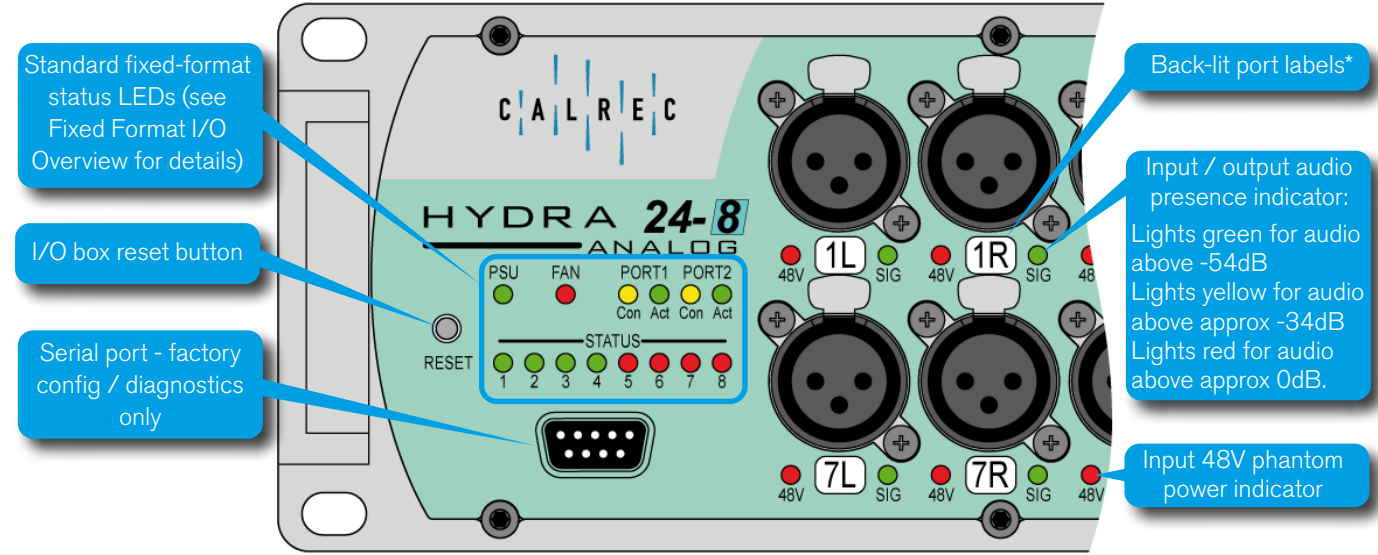


- Ports are labelled 'L' & 'R', however all ports can be used as discrete and independent mono if required. In addition, any two ports, not just adjacent ones, can be paired together for stereo processing within mixing console DSP.

AD5782 ANALOGUE MIC / LINE 12 IN/4 OUT (XLR)

FRONT PANEL VIEW

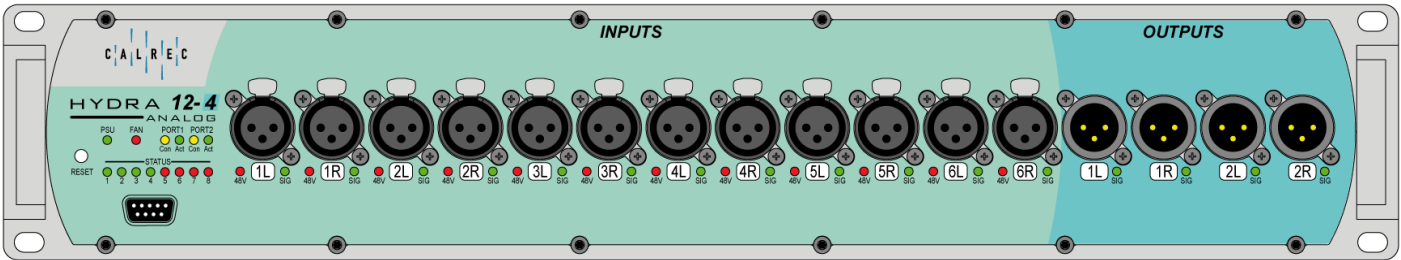


REAR PANEL VIEW

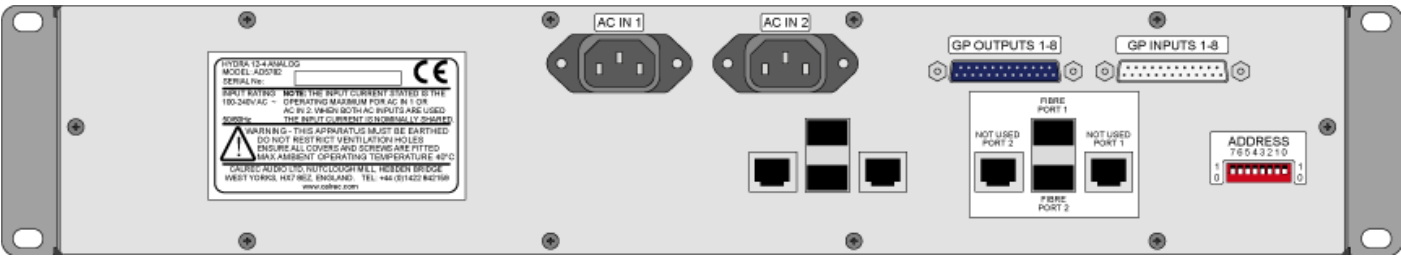

UNIT SPECIFICATIONS

Format	Analogue
Inputs	12 Mic / Line
Outputs	4 Line Level
Audio Connectors	XLR (Inputs - Female, Outputs - Male)
GPIO compatible	Yes
Height	2U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	11.5 lbs (5.2 kg)
Input Power	100-240 V AC, 0.45-0.25 A RMS, 50/60 Hz
Acoustic Noise	26 dB-SPL A-Weighted, 1 m from source


XLR CONNECTORS

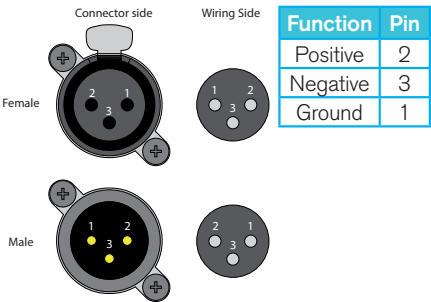


- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

AD5781 ANALOGUE MIC / LINE 24 IN/8 OUT (XLR)

FRONT PANEL VIEW

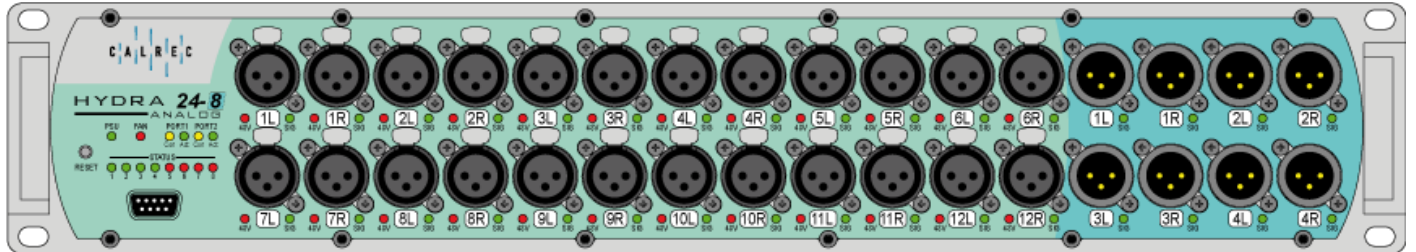


REAR PANEL VIEW

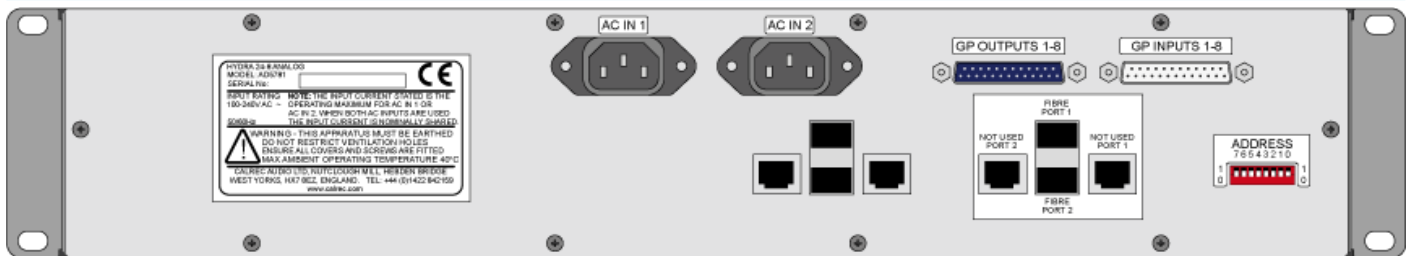

UNIT SPECIFICATIONS

Format	Analogue
Inputs	24 Mic / Line
Outputs	8 Line Level
Audio Connectors	XLR (Inputs - Female, Outputs - Male)
GPIO compatible	Yes
Height	2U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	12.5 lbs (5.7 kg)
Input Power	100-240 V AC, 0.60-0.31 A RMS, 50/60 Hz
Acoustic Noise	26 dB-SPL A-Weighted, 1 m from source


XLR CONNECTORS

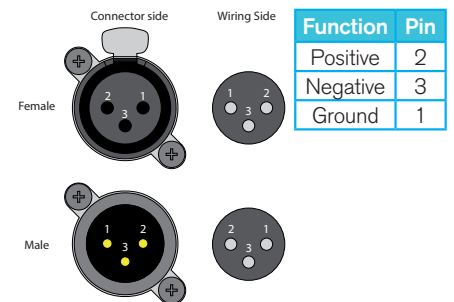


- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

AD5780 ANALOGUE MIC / LINE 48 IN / 16 OUT (XLR)

FRONT PANEL VIEW

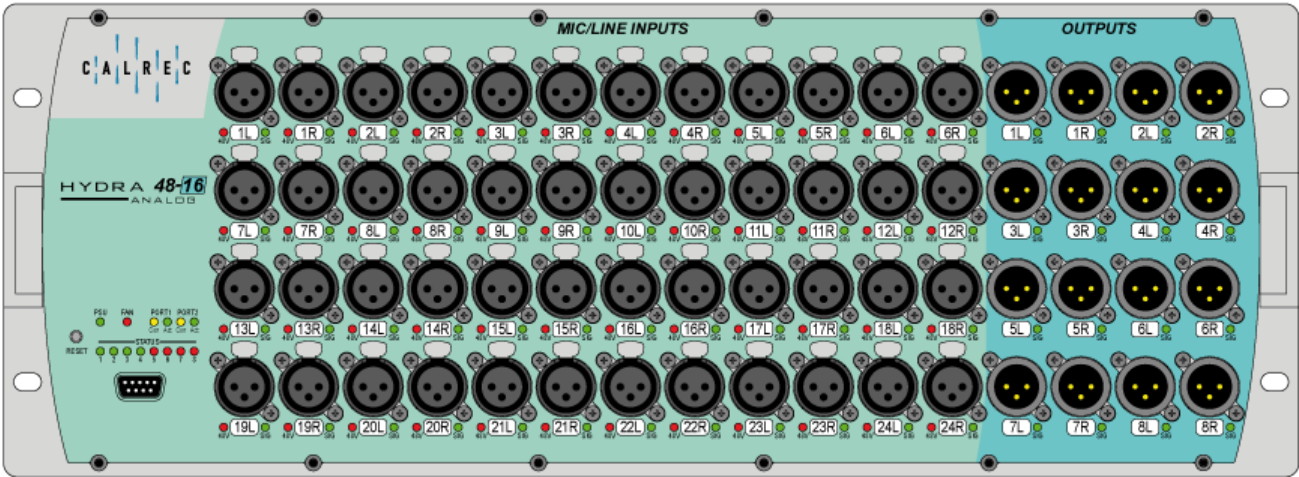


REAR PANEL VIEW

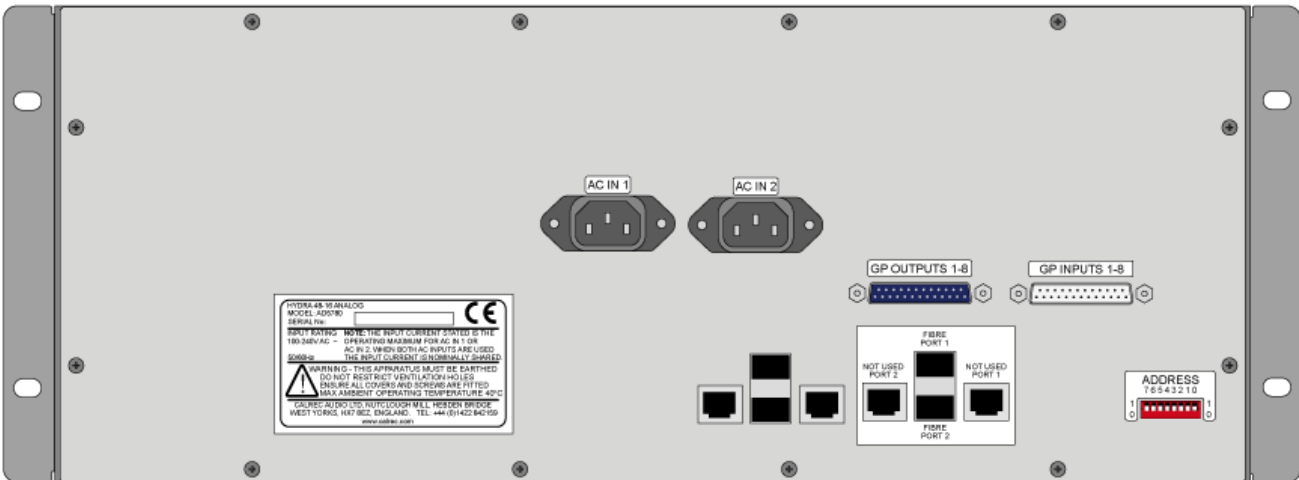

UNIT SPECIFICATIONS

Format	Analogue
Inputs	48 Mic / Line
Outputs	16 Line Level
Audio Connectors	XLR (Inputs - Female, Outputs - Male)
GPIO compatible	Yes
Height	4U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	16.1 lbs (7.3 kg)
Input Power	100-240 V AC, 1.05-0.51 A RMS, 50/60 Hz
Acoustic Noise	27 dB-SPL A-Weighted, 1 m from source


XLR CONNECTORS

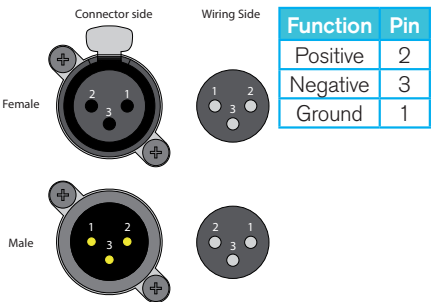


- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

AE5743 ANALOGUE MIC / LINE 32 IN / 32 OUT (EDAC STANDARD PIN-OUT)

FRONT PANEL VIEW

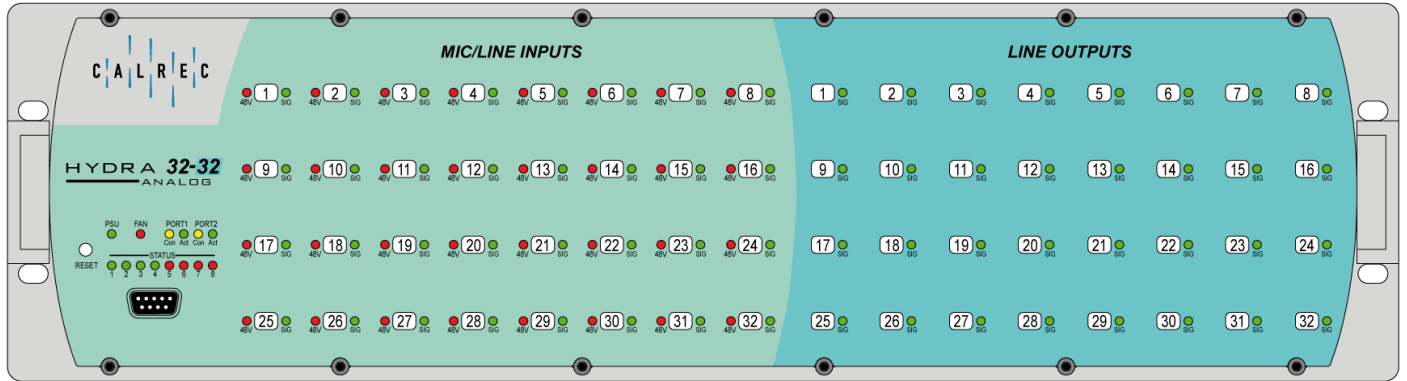

REAR PANEL VIEW

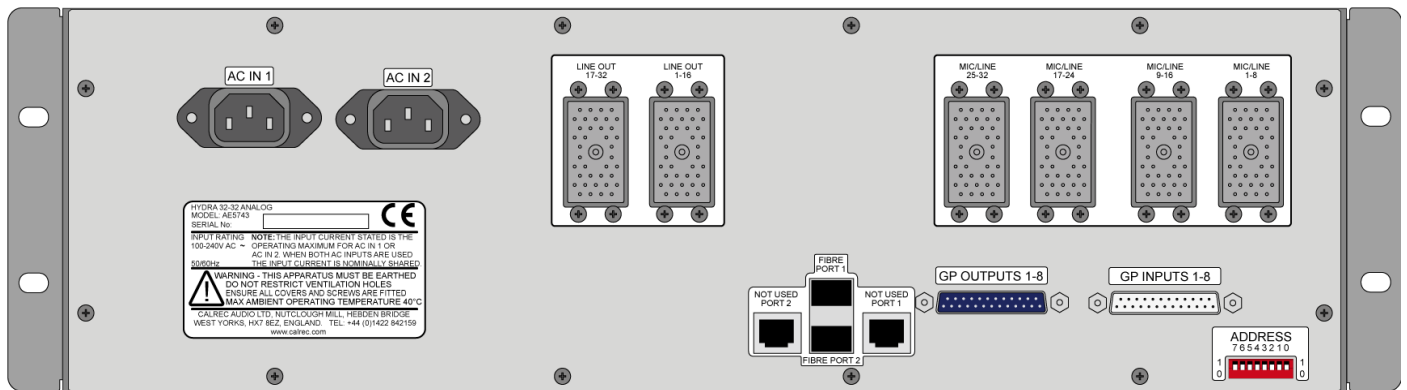

- Audio interface EDAC connectors are mounted on the rear panel of the unit

UNIT SPECIFICATIONS

Format	Analogue
Inputs	32 Mic / Line
Outputs	32 Line Level
Audio Connectors	38 pin Male EDAC (Inputs & Outputs)
GPIO compatible	Yes
Height	3U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	11.5 lbs (5.2 kg)
Input Power	100-240 V AC 1.05-0.51 A RMS 50/60 Hz
Acoustic Noise	27 dB-SPL A-Weighted, 1 m from source

- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.


AE5743 – EDAC PIN-OUT - INPUTS

Mic / Line 1-8	
Signal	Pins + / - (screen)
Input 1	E / F (A)
Input 2	J / K (D)
Input 3	R / S (L)
Input 4	T / U (P)
Input 5	Z / AA (DD)
Input 6	BB / CC (HH)
Input 7	JJ / KK (PP)
Input 8	MM / NN (TT)

Mic / Line 9-16	
Signal	Pins + / - (screen)
Input 9	E / F (A)
Input 10	J / K (D)
Input 11	R / S (L)
Input 12	T / U (P)
Input 13	Z / AA (DD)
Input 14	BB / CC (HH)
Input 15	JJ / KK (PP)
Input 16	MM / NN (TT)

Mic / Line 17-24	
Signal	Pins + / - (screen)
Input 17	E / F (A)
Input 18	J / K (D)
Input 19	R / S (L)
Input 20	T / U (P)
Input 21	Z / AA (DD)
Input 22	BB / CC (HH)
Input 23	JJ / KK (PP)
Input 24	MM / NN (TT)

Mic / Line 25-32	
Signal	Pins + / - (screen)
Input 25	E / F (A)
Input 26	J / K (D)
Input 27	R / S (L)
Input 28	T / U (P)
Input 29	Z / AA (DD)
Input 30	BB / CC (HH)
Input 31	JJ / KK (PP)
Input 32	MM / NN (TT)

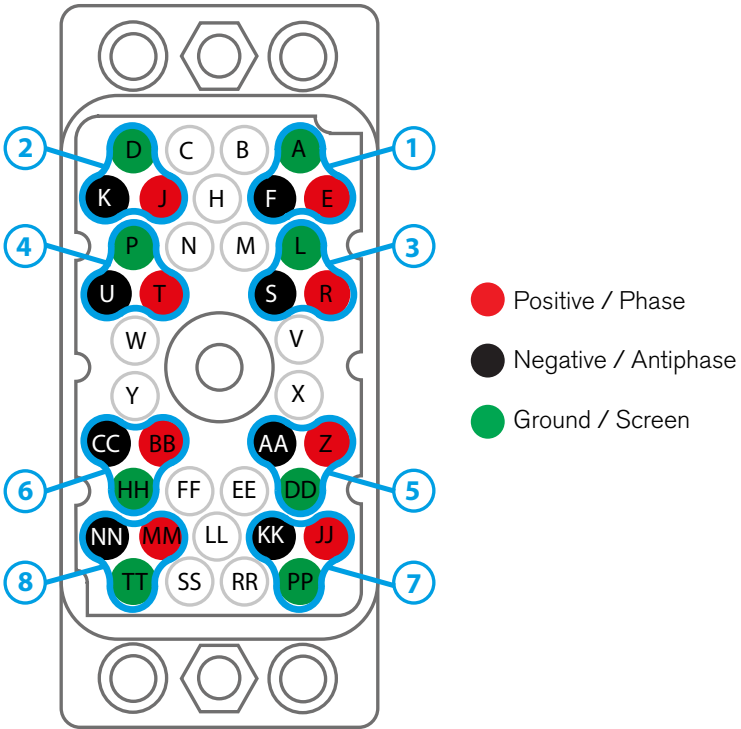


- 38 pin EDAC - viewed from male mating side / female wiring side

AE5743 – EDAC PIN-OUT – OUTPUTS

Line Out 1-16	
Signal	Pins + / -
Output 1	A / B
Output 2	C / D
Output 3	E / F
Output 4	J / K
Output 5	L / M
Output 6	N / P
Output 7	R / S
Output 8	T / U
Output 9	Z / AA
Output 10	BB / CC
Output 11	DD / EE
Output 12	FF / HH
Output 13	JJ / KK
Output 14	MM / NN
Output 15	PP / RR
Output 16	SS / TT
Screen	H, V, W, X, Y, LL

Line Out 17-32	
Signal	Pins + / -
Output 17	A / B
Output 18	C / D
Output 19	E / F
Output 20	J / K
Output 21	L / M
Output 22	N / P
Output 23	R / S
Output 24	T / U
Output 25	Z / AA
Output 26	BB / CC
Output 27	DD / EE
Output 28	FF / HH
Output 29	JJ / KK
Output 30	MM / NN
Output 31	PP / RR
Output 32	SS / TT
Screen	H, V, W, X, Y, LL

- Positive / Phase
- Negative / Antiphase
- Ground / Screen

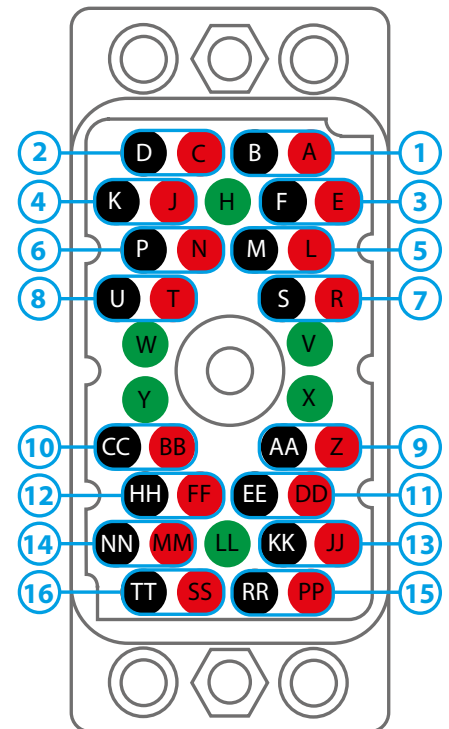

- 38 pin EDAC—viewed from male mating side / female wiring side


- Note, All EDAC connectors on the I/O box, for both inputs and outputs are **male**, requiring that interfacing cables are terminated with **female** connectors. The AE5743 provides 8 inputs per connector, each with its own screen/ground pin. Input connector pins not listed in the tables are also grounded. The output connectors provide 16 outputs each. Only 6 earth pins are available in each output connector. If the installation dictates that individually screened 2 core cable must be used for line level outputs, and that they must have screens terminated at the source rather than destination, multiple cable screens will need to be landed on each connector pin.

AE5991 – ANALOGUE MIC / LINE 32 IN / 32 OUT (EDAC ‘STYLE 1’ PIN-OUT)


The AE5991 provides 8 inputs / 16 outputs per EDAC connector, with a pin-out that matches Calrec Alpha / Sigma / Omega / Zeta ‘Style 1’ connectivity, allowing customers replacing such products to utilise their existing cabling.

As with all fixed format EDAC boxes, the audio interface connectors are rear panel mounted.

FRONT PANEL VIEW

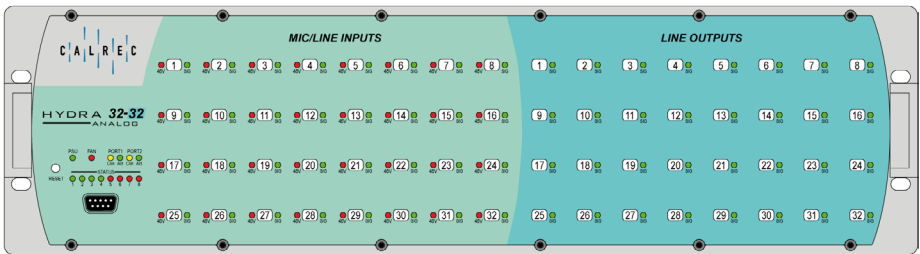

REAR PANEL VIEW

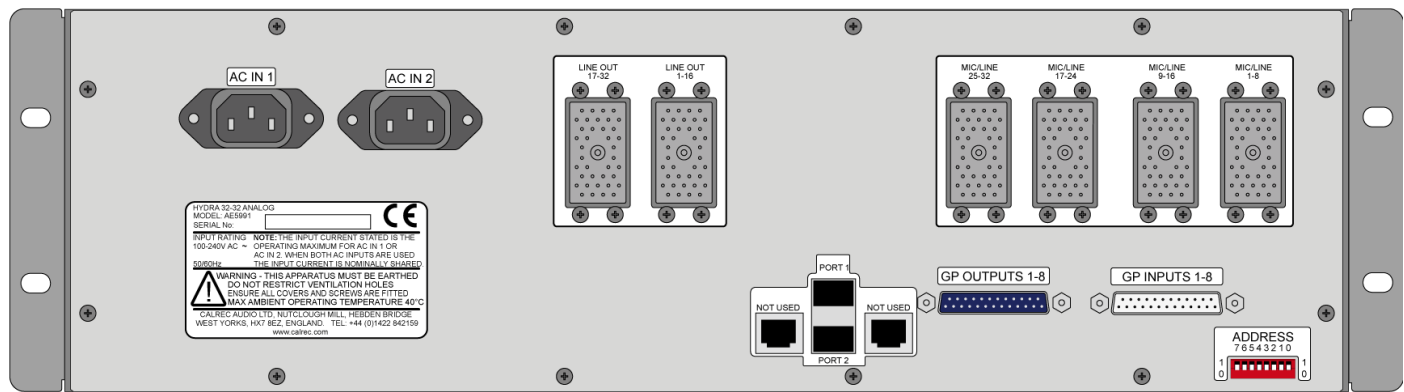

UNIT SPECIFICATIONS

Format	Analogue
Inputs	32 Mic / Line
Outputs	32 Line Level
Audio Connectors	38 pin Male EDAC (Inputs & Outputs)
GPIO compatible	Yes
Height	3U
Width	19' rackmount (483 mm)
Depth	9' (230 mm)
Depth inc rear mating connectors	12' (300 mm)
Approx Weight	11.5 lbs (5.2 kg)
Input Power	100-240 V AC 1.05-0.51 A RMS 50/60 Hz
Acoustic Noise	27 dB-SPL A-Weighted, 1m from source

- See “Fixed Format I/O Overview” on page 46 and “Audio Performance Specification-General” on page 120 for further detail.


AE5991 – EDAC PIN-OUT – INPUTS ('STYLE 1')

Mic / Line 1-8	
Signal	Pins + / - (screen)
Input 1	A / E (B)
Input 2	D / K (C)
Input 3	L / R (M)
Input 4	P / U (N)
Input 5	Z / DD (AA)
Input 6	CC / HH (BB)
Input 7	JJ / PP (KK)
Input 8	NN / TT (MM)

Mic / Line 9-16	
Signal	Pins + / - (screen)
Input 9	A / E (B)
Input 10	D / K (C)
Input 11	L / R (M)
Input 12	P / U (N)
Input 13	Z / DD (AA)
Input 14	CC / HH (BB)
Input 15	JJ / PP (KK)
Input 16	NN / TT (MM)

Mic / Line 17-24	
Signal	Pins + / - (screen)
Input 17	A / E (B)
Input 18	D / K (C)
Input 19	L / R (M)
Input 20	P / U (N)
Input 21	Z / DD (AA)
Input 22	CC / HH (BB)
Input 23	JJ / PP (KK)
Input 24	NN / TT (MM)

Mic / Line 25-32	
Signal	Pins + / - (screen)
Input 25	A / E (B)
Input 26	D / K (C)
Input 27	L / R (M)
Input 28	P / U (N)
Input 29	Z / DD (AA)
Input 30	CC / HH (BB)
Input 31	JJ / PP (KK)
Input 32	NN / TT (MM)

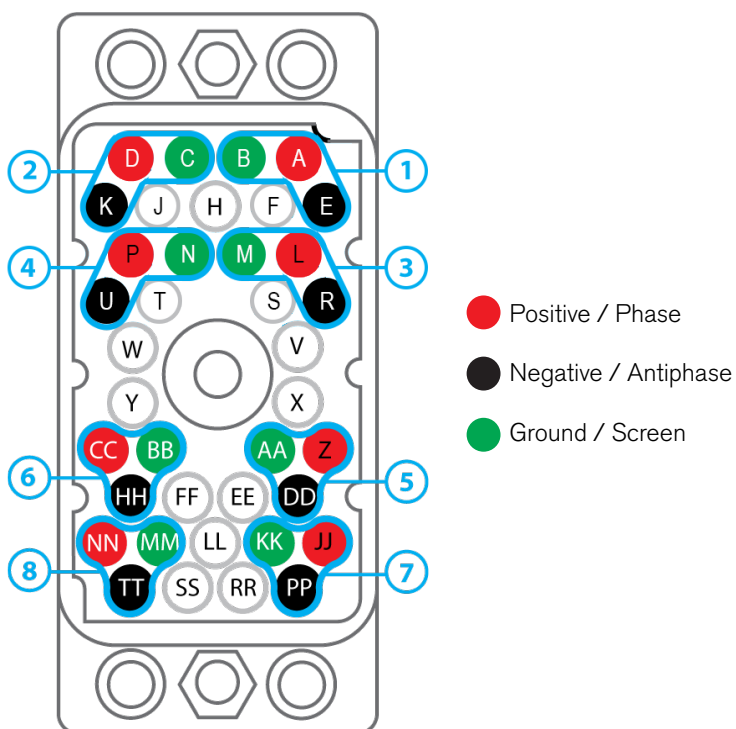


- 38 pin EDAC - viewed from male mating side / female wiring side

AE5991 – EDAC PIN-OUT – OUTPUTS ('STYLE 1')

Line Out 1-16	
Signal	Pins + / -
Output 1	A / B
Output 2	C / D
Output 3	E / F
Output 4	J / K
Output 5	L / M
Output 6	N / P
Output 7	R / S
Output 8	T / U
Output 9	Z / AA
Output 10	BB / CC
Output 11	DD / EE
Output 12	FF / HH
Output 13	JJ / KK
Output 14	MM / NN
Output 15	PP / RR
Output 16	SS / TT
Screen	H, V, W, X, Y, LL

Line Out 17-32	
Signal	Pins + / -
Output 17	A / B
Output 18	C / D
Output 19	E / F
Output 20	J / K
Output 21	L / M
Output 22	N / P
Output 23	R / S
Output 24	T / U
Output 25	Z / AA
Output 26	BB / CC
Output 27	DD / EE
Output 28	FF / HH
Output 29	JJ / KK
Output 30	MM / NN
Output 31	PP / RR
Output 32	SS / TT
Screen	H, V, W, X, Y, LL

- Positive / Phase
- Negative / Antiphase
- Ground / Screen

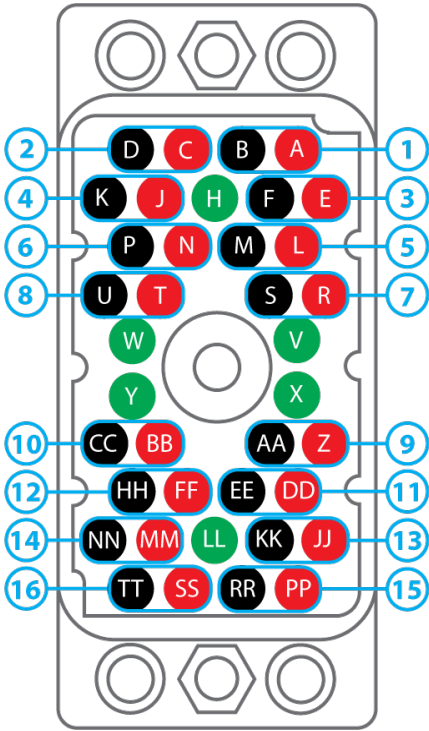

38 pin EDAC—viewed from male mating side / female wiring side


- Note, all EDAC connectors on the I/O box, for both inputs and outputs are **male**, requiring that interfacing cables are terminated with **female** connectors. The AE5991 provides 8 inputs per connector, each with its own screen/ground pin. Input connector pins not listed in the tables are also grounded. The output connectors provide 16 outputs each. Only 6 earth pins are available in each output connector. If the installation dictates that individually screened 2 core cable must be used for line level outputs, and that they must have screens terminated at the source rather than destination. Multiple cable screens will need to be landed on each connector pin.

AE5992 – ANALOGUE MIC / LINE 32IN / 32OUT (EDAC ‘STYLE 2’ PIN-OUT)


The AE5992 provides 12 inputs and 12 outputs per EDAC connector, with a pin-out that matches Calrec Alpha/Sigma/Omega/Zeta ‘Style 2’ connectivity, allowing customers replacing such products to utilise their existing cabling, and to simplify wiring to 12-pair jack-field connectors.

As with all fixed format EDAC boxes, the audio interface connectors are rear panel mounted.

FRONT PANEL VIEW

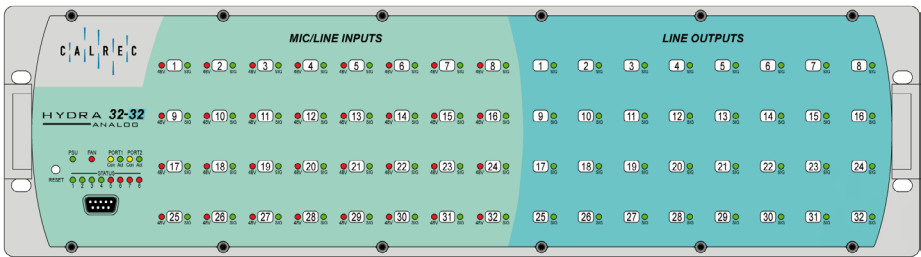

REAR PANEL VIEW

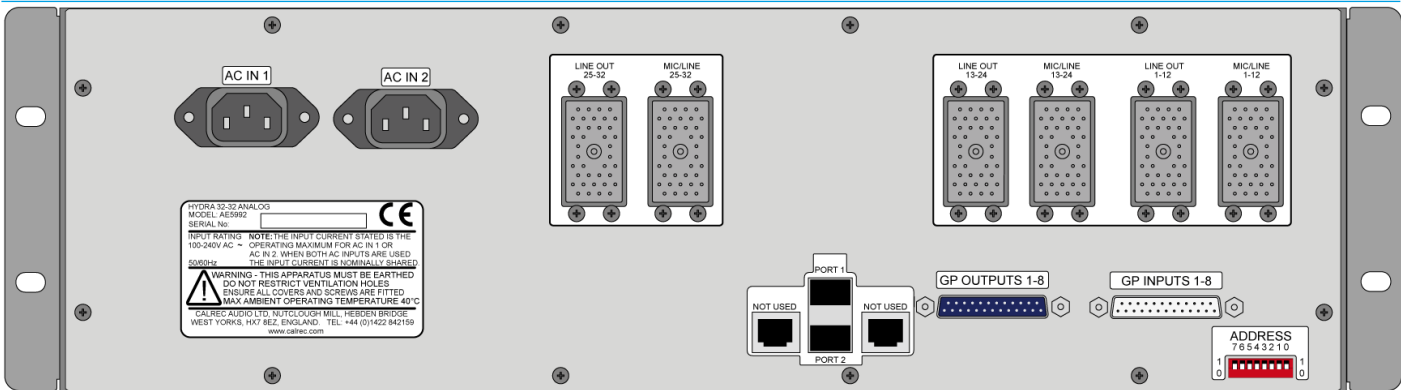

UNIT SPECIFICATIONS

Format	Analogue
Inputs	32 Mic / Line
Outputs	32 Line Level
Audio Connectors	38 pin Male EDAC (Inputs & Outputs)
GPIO compatible	Yes
Height	3U
Width	19' rackmount (483 mm)
Depth	9' (230 mm)
Depth inc rear mating connectors	12' (300 mm)
Approx Weight	11.5 lbs (5.2 kg)
Input Power	100-240 V AC 1.05-0.51 A RMS 50/60 Hz
Acoustic Noise	27dB-SPL A-Weighted, 1 m from source


- See “Fixed Format I/O Overview” on page 46 and “Audio Performance Specification-General” on page 120 for further detail.

AE5992 – EDAC PIN-OUT – INPUTS ('STYLE 2')

Mic / Line 1-12	
Signal	Pins + / - (screen)
Input 1	A / B (E)
Input 2	C / D (K)
Input 3	L / M (F)
Input 4	N / P (J)
Input 5	R / S (V)
Input 6	T / U (W)
Input 7	Z / AA (X)
Input 8	BB / CC (Y)
Input 9	DD / EE (KK)
Input 10	FF / HH (MM)
Input 11	PP / RR (JJ)
Input 12	SS / TT (NN)

Mic / Line 13-24	
Signal	Pins + / - (screen)
Input 13	A / B (E)
Input 14	C / D (K)
Input 15	L / M (F)
Input 16	N / P (J)
Input 17	R / S (V)
Input 18	T / U (W)
Input 19	Z / AA (X)
Input 20	BB / CC (Y)
Input 21	DD / EE (KK)
Input 22	FF / HH (MM)
Input 23	PP / RR (JJ)
Input 24	SS / TT (NN)

Mic / Line 25-32	
Signal	Pins + / - (screen)
Input 25	A / B (E)
Input 26	C / D (K)
Input 27	L / M (F)
Input 28	N / P (J)
Input 29	R / S (V)
Input 30	T / U (W)
Input 31	Z / AA (X)
Input 32	BB / CC (Y)

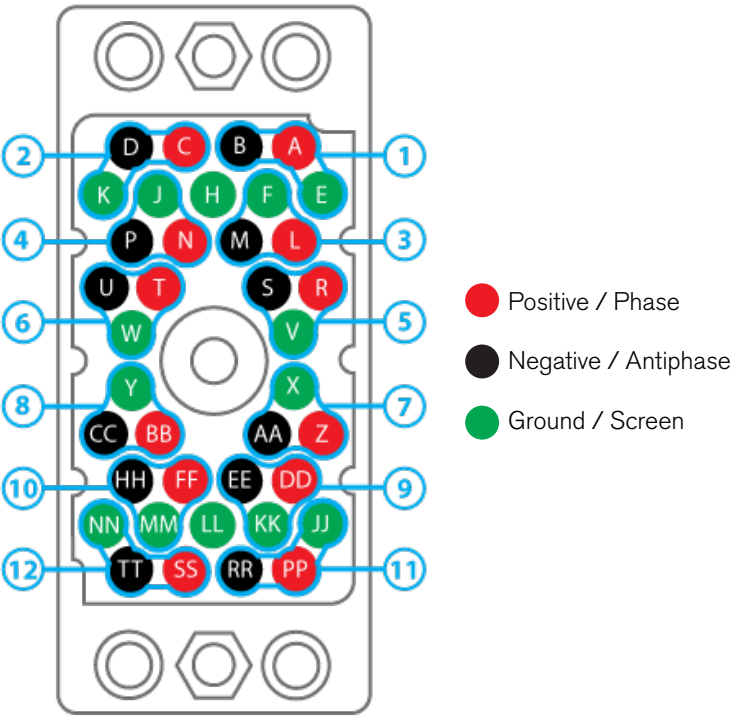


- 38 pin EDAC - viewed from male mating side / female wiring side

AE5992 – EDAC PIN-OUT – OUTPUTS ('STYLE 2')

Line Out 1-12	
Signal	Pins + / - (screen)
Input 1	A / B (E)
Input 2	C / D (K)
Input 3	L / M (F)
Input 4	N / P (J)
Input 5	R / S (V)
Input 6	T / U (W)
Input 7	Z / AA (X)
Input 8	BB / CC (Y)
Input 9	DD / EE (KK)
Input 10	FF / HH (MM)
Input 11	PP / RR (JJ)
Input 12	SS / TT (NN)

Line Out 13-24	
Signal	Pins + / - (screen)
Input 13	A / B (E)
Input 14	C / D (K)
Input 15	L / M (F)
Input 16	N / P (J)
Input 17	R / S (V)
Input 18	T / U (W)
Input 19	Z / AA (X)
Input 20	BB / CC (Y)
Input 21	DD / EE (KK)
Input 22	FF / HH (MM)
Input 23	PP / RR (JJ)
Input 24	SS / TT (NN)

Line Out 25-32	
Signal	Pins + / - (screen)
Input 25	A / B (E)
Input 26	C / D (K)
Input 27	L / M (F)
Input 28	N / P (J)
Input 29	R / S (V)
Input 30	T / U (W)
Input 31	Z / AA (X)
Input 32	BB / CC (Y)

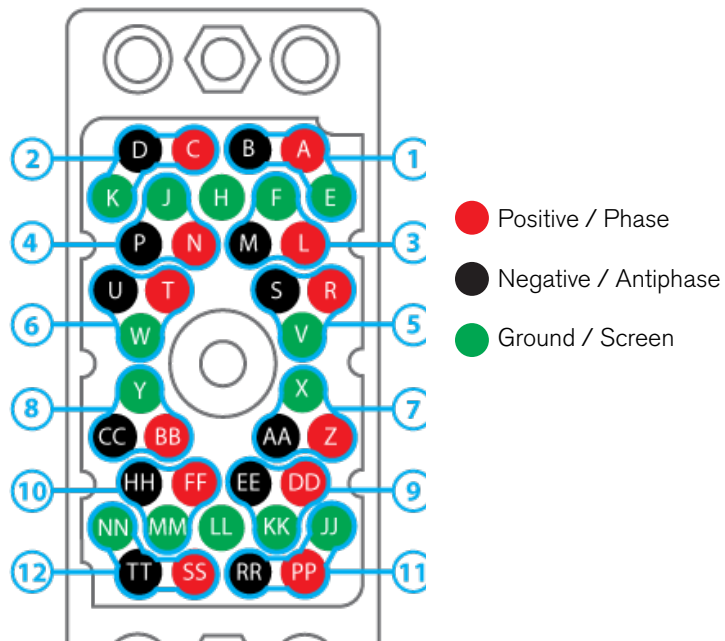

- 38 pin EDAC - viewed from male mating side / female wiring side

- Note, All EDAC connectors on the I/O box, for both inputs and outputs are **male**, requiring that interfacing cables are terminated with **female** connectors.

FIXED FORMAT DIGITAL AES3 I/O OVERVIEW

A range of fixed format digital AES3 I/O units are available offering various quantities of inputs and outputs via unbalanced 75 Ω BNC connections.


Balanced 110 Ω AES I/O is an option for modular I/O boxes only.

Sample rate convertors

SRCs can be switched in on each input remotely by any control surface on the Hydra2 network which has been granted access.


FIXED FORMAT DIGITAL AES3 I/O SPECIFICATIONS

Format	Digital
Type	AES3 - 24 bit, Unbalanced.
Impedance	75 Ω
Connector Type	BNC
Input Signal Range	0.3-1.2 V Pk-Pk
Output Signal	1 V Pk-Pk (nominal)

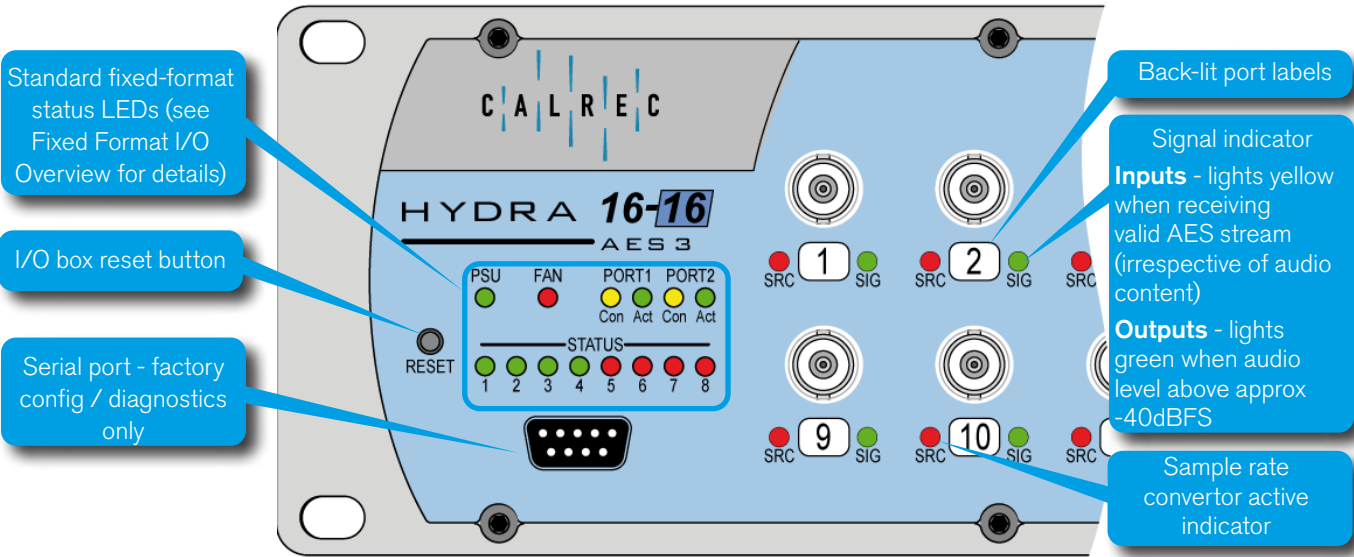


JB5606 – DIGITAL AES3 16 IN/16 OUT (BNC)

FRONT PANEL VIEW

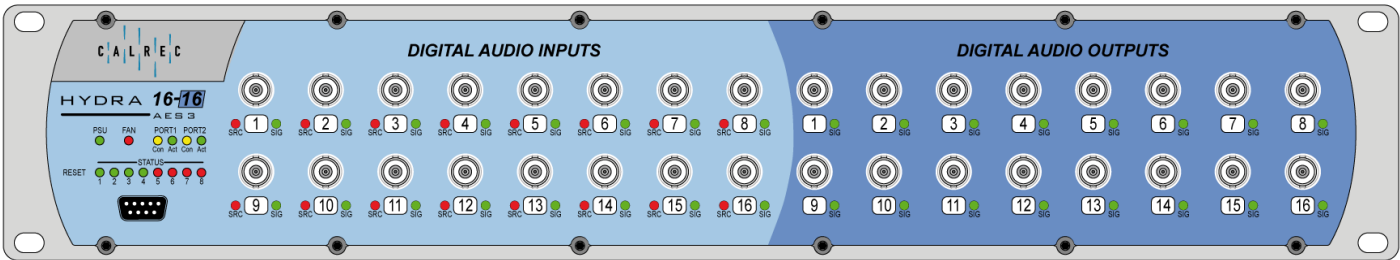

REAR PANEL VIEW

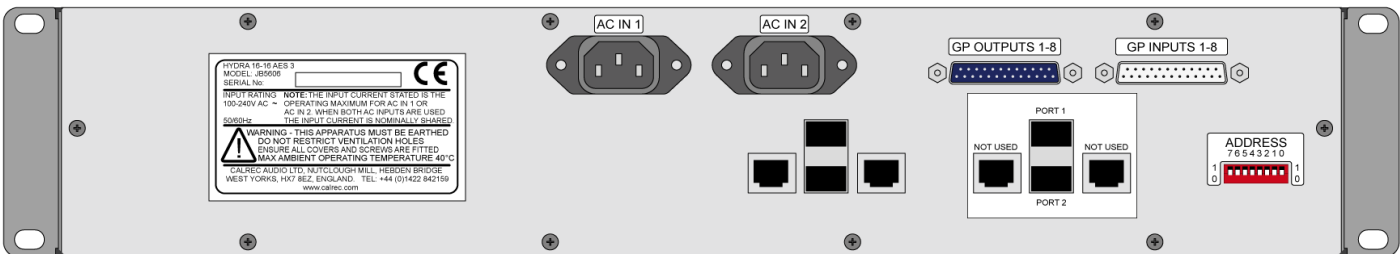


UNIT SPECIFICATIONS

Format	Digital AES3 unbalanced
Inputs	16
Outputs	16
Audio Connectors	BNC
GPIO compatible	Yes
Height	2U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	8.6 lbs (3.9 kg)
Input Power	100-240 V AC, 0.24-0.13 A RMS, 50/60 Hz
Acoustic Noise	26 dB-SPL A-Weighted, 1 m from source


- See Fixed Format Digital AES3 I/O Overview and Audio Performance Specification sections of this document for further detail.

JB5783 – DIGITAL AES3 32 IN / 32 OUT (BNC)

FRONT PANEL VIEW

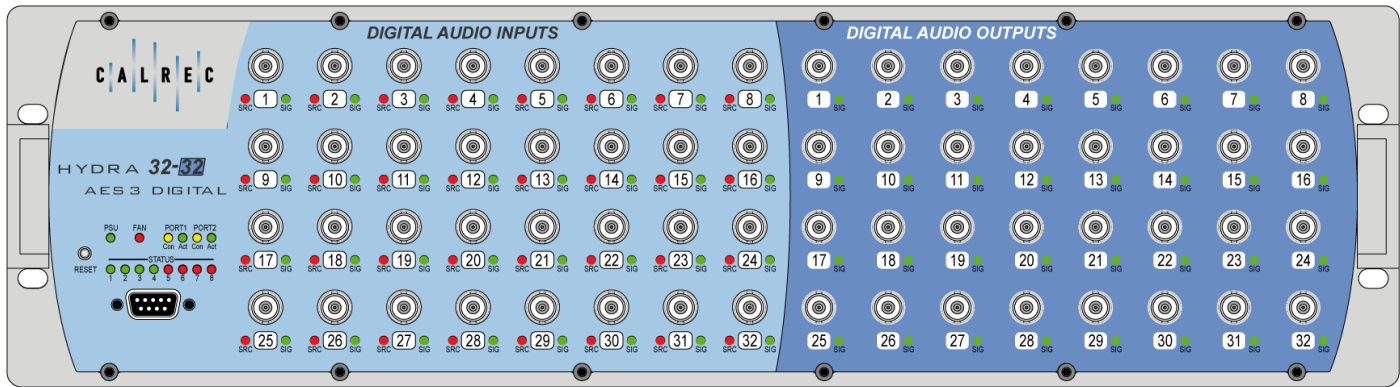

REAR PANEL VIEW

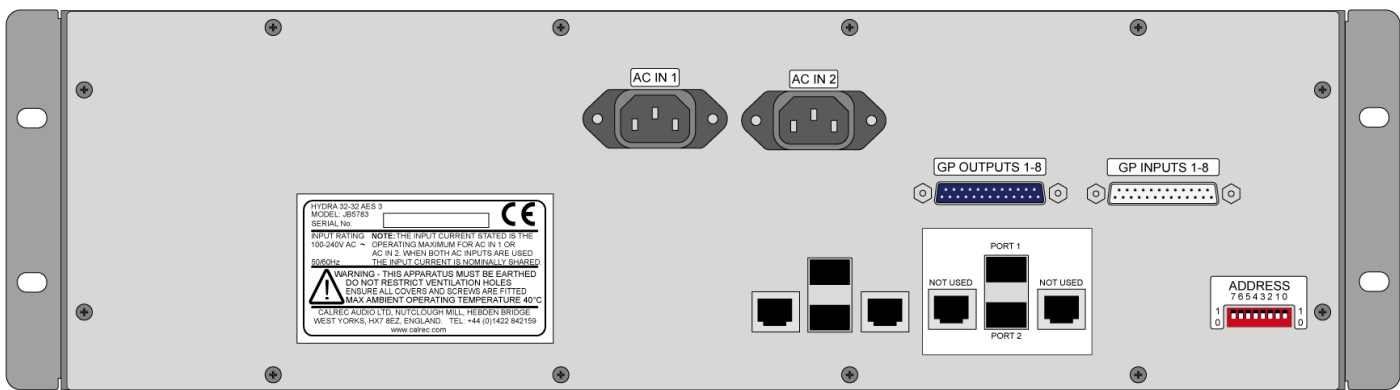

UNIT SPECIFICATIONS


Format	Digital AES3 unbalanced
Inputs	32
Outputs	32
Audio Connectors	BNC
GPIO compatible	Yes
Height	3U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	14.3 lbs (6.5 kg)
Input Power	100-240 V AC, 0.38-0.20 A RMS, 50/60 Hz
Acoustic Noise	26 dB-SPL A-Weighted, 1 m from source

- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.


JB5962 – DIGITAL AES3 32 IN / 32 OUT (BNC)

The JB5962's audio interface BNC connectors are rear panel mounted. This unit type cannot be fitted with a GPIO card.

FRONT PANEL VIEW

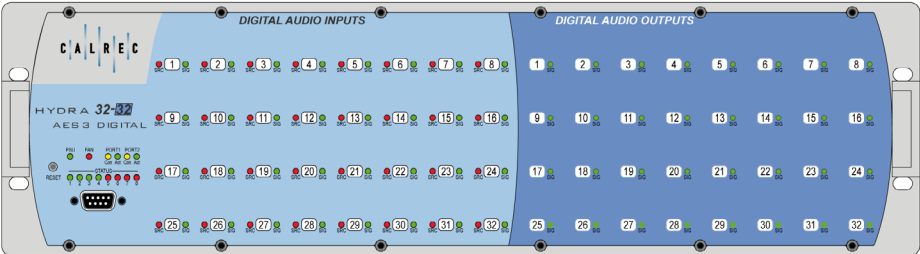

REAR PANEL VIEW

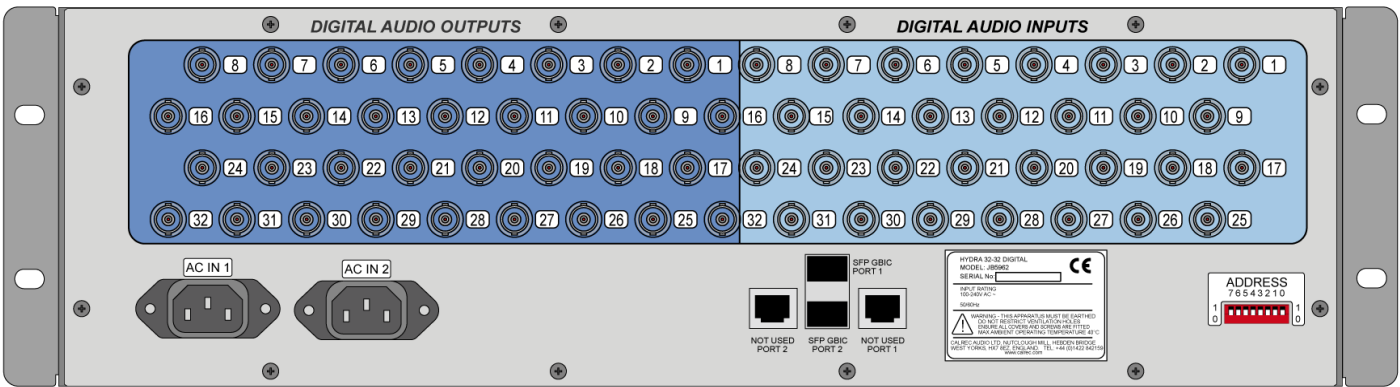

UNIT SPECIFICATIONS

Format	Digital AES3 unbalanced
Inputs	32
Outputs	32
Audio Connectors	BNC
GPIO compatible	NO
Height	3U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	14.3 lbs (6.5 kg)
Input Power	100-240 V AC, 0.38-0.20 A RMS, 50/60 Hz
Acoustic Noise	26 dB-SPL A-Weighted, 1 m from source

- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

FIXED FORMAT MADI I/O OVERVIEW

A range of MADI I/O units are available offering various fibre connection types for the MADI audio interface.

Connectivity

Like all I/O boxes, Hydra2 network components interface via pluggable SFP modules, allowing the connection type to the Calrec routing network to be changed as and when needed. The actual MADI audio I/O fibre connections, used to interface with other MADI systems however, are of a fixed type that cannot be changed. The type of MADI I/O fibre connections required dictates the I/O box that should be ordered.

Other than MADI I/O fibre connectivity, all MADI I/O box types are identical. In addition to fibre connectivity, all MADI I/O

boxes also have MADI inputs and outputs via BNC connectors for coaxial copper use.

I/O & audio channels

All MADI units have 2 x MADI inputs (labelled 'Rx'—receive) and 2 x MADI outputs (labelled 'Tx'—transmit), providing a total maximum of 128 channels of inputs and 128 channels of outputs, simultaneously, per MADI I/O box. The I/O is grouped under two 'ports'—each port consisting of 1 x MADI input stream, & 1 x MADI output stream. Each port can be selected independently to operate in the standard 64 channel mode, or 56 channel mode to match the equipment being interfaced with. The input for each port can be independently selected to receive via either the copper or fibre connector. Outputs from the box are

fed to both copper and fibre connectors simultaneously, irrespective of this setting.

Fans / airflow

MADI I/O units are not fitted with fans. Cooling is by natural airflow through the side panels which should not be obstructed.


GPIO

Due to the compact 1U enclosure, MADI I/O boxes can NOT be fitted with a GPIO card.


Sample rate conversion & sync

There is no sample rate conversion available for FIXED FORMAT MADI I/O. To guarantee audio performance, equipment being connected to MADI I/O should be locked to the same derived sync source as the Calrec router.

FRONT PANEL VIEW

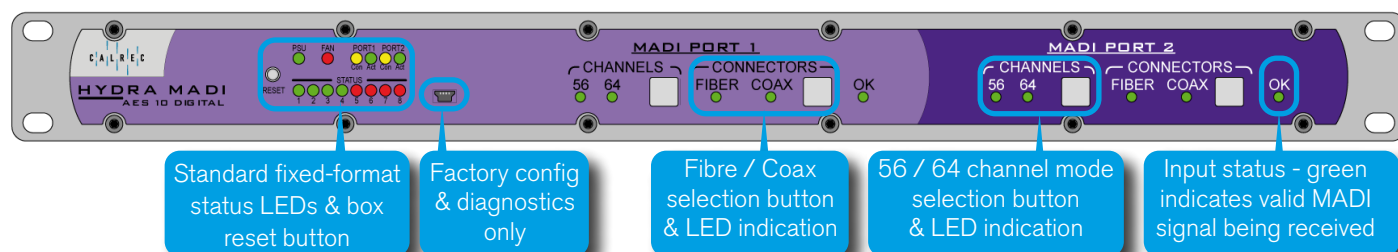


REAR PANEL VIEW

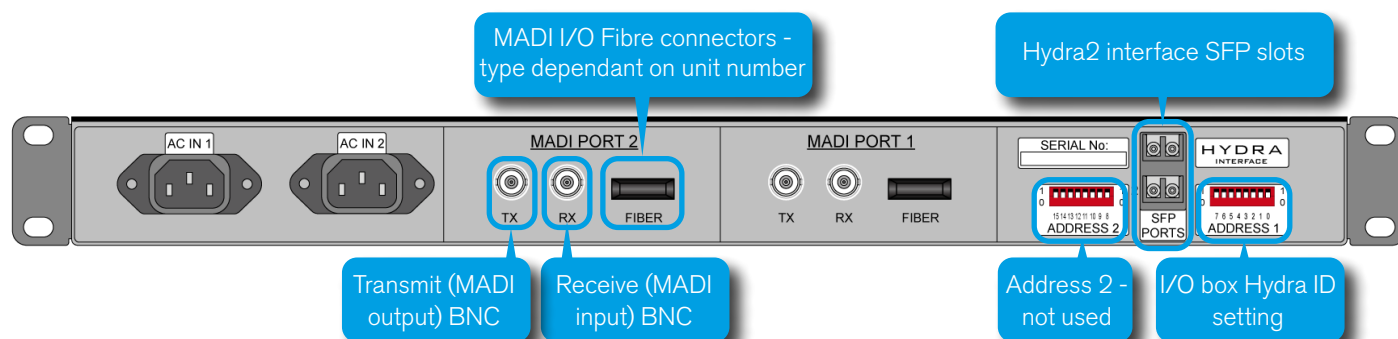


JM5736 – MADI I/O (BNC OR MULTIMODE SC)

FRONT PANEL VIEW

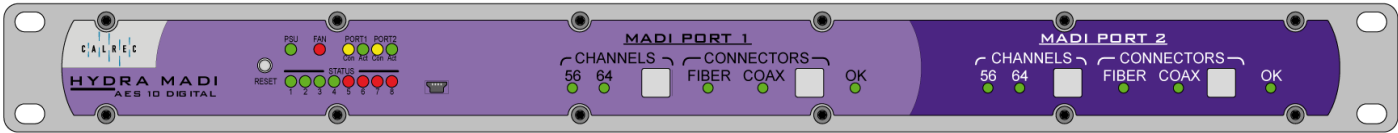

REAR PANEL VIEW

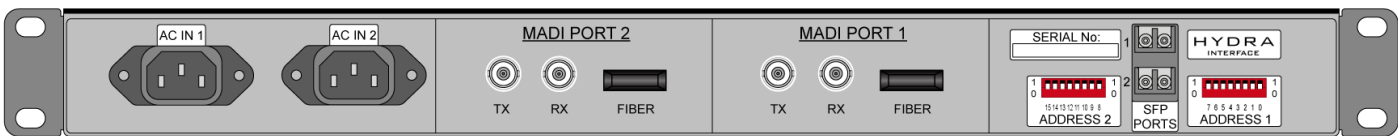

UNIT SPECIFICATIONS

Format	MADI (AES10)
Inputs	2 x MADI (2 x 64 / 56 channels)
Outputs	2 x MADI (2 x 64 / 56 channels)
Audio Connectors	BNC & Multimode SC Fibre
GPIO compatible	NO
Height	1U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	7.5 lbs (3.4 kg)
Input Power	100-240 V AC, 0.20-0.12 A RMS, 50/60 Hz
Acoustic Noise	N/A - No fans fitted in this unit

- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.


MULTIMODE SC FIBRE CONNECTORS




- Image above shows 2 x SC multimode (colour coded beige for multimode) connectors fitted into duplex housing. The Duplex housing is optional, but ensures correct polarity when connecting to I/O box.

JM5890 – MADI I/O (BNC OR MULTIMODE ST)

FRONT PANEL VIEW

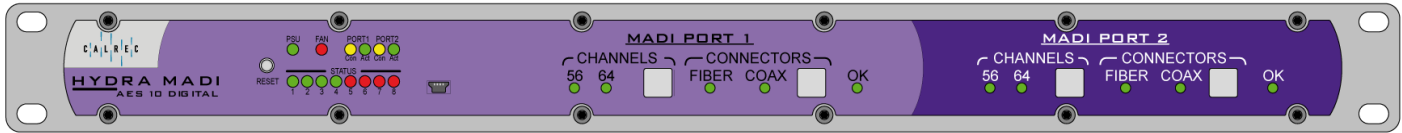

REAR PANEL VIEW

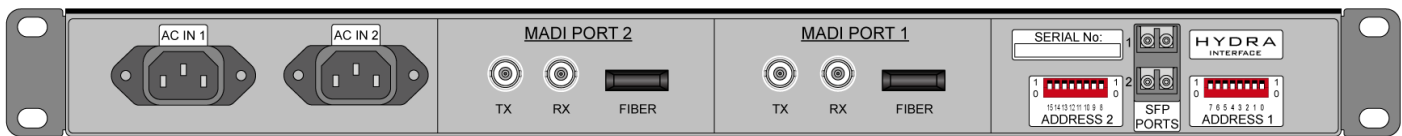

UNIT SPECIFICATIONS

Format	MADI (AES10)
Inputs	2 x MADI (2 x 64 / 56 channels)
Outputs	2 x MADI (2 x 64 / 56 channels)
Audio Connectors	BNC & Multimode ST Fibre
GPIO compatible	NO
Height	1U
Width	19' rackmount (483 mm)
Depth	9' (230 mm)
Depth inc rear mating connectors	12' (300 mm)
Approx Weight	7.5 lbs (3.4 kg)
Input Power	100-240 V AC, 0.20-0.12 A RMS, 50/60 Hz
Acoustic Noise	N/A - No fans fitted in this unit


- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

MULTIMODE ST FIBRE CONNECTORS




JM5831 – MADI I/O (BNC OR SINGLEMODE SC)

FRONT PANEL VIEW

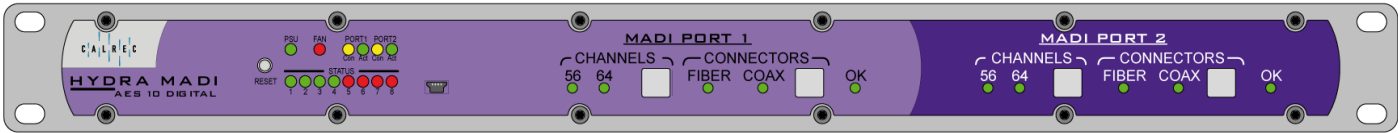

REAR PANEL VIEW

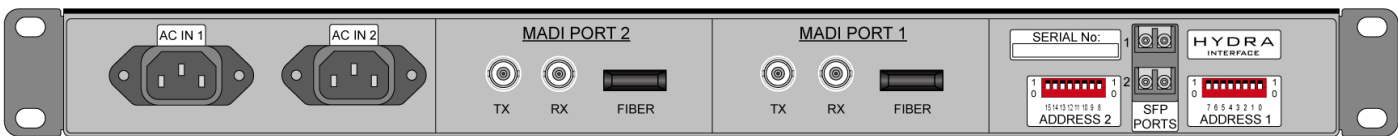


UNIT SPECIFICATIONS

Format	MADI (AES10)
Inputs	2 x MADI (2 x 64 / 56 channels)
Outputs	2 x MADI (2 x 64 / 56 channels)
Audio Connectors	BNC & Singlemode SC Fibre
GPIO compatible	NO
Height	1U
Width	19" rackmount (483 mm)
Depth	9" (230 mm)
Depth inc rear mating connectors	12" (300 mm)
Approx Weight	7.5 lbs (3.4 kg)
Input Power	100-240 V AC, 0.20-0.12 A RMS, 50/60 Hz
Acoustic Noise	N/A - No fans fitted in this unit

- See "Fixed Format I/O Overview" on page 46 and "Audio Performance Specification-General" on page 120 for further detail.

SINGLEMODE SC FIBRE CONNECTOR

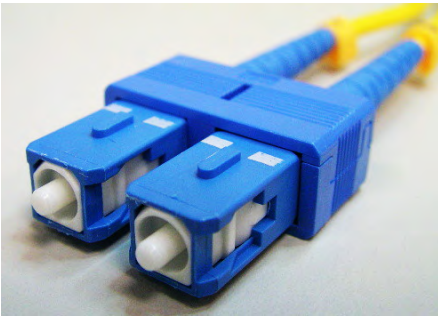

- Image above shows 2 x SC Singlemode (colour coded blue for Singlemode) connectors fitted into duplex housing. The Duplex housing is optional, but ensures correct polarity when connecting to I/O box.

DIGICO ORANGE BOX – HYDRA 2 INTERFACE

ORANGE BOX - FRONT VIEW



The Orange Box provides audio format conversion between any two of the ten available interfaces using DMI (DiGiCo Multichannel Interface) modules

The DMI-HYDRA 2 module interface for the Orange Box is shown right. It currently provides up to 56 Inputs and 56 Outputs when format converted to MADI using the DMI-MADI-B / DMI-MADI-C modules.

The DMI-MADI module is connected to the DiGiCo console allowing I/O to be passed between Calrec and DiGiCo domains along with exchange of labels in either direction.

The DMI bus interface carries up to 128 channels of audio in both directions and allows modules to be plugged in with power applied.

Module Enclosure

The DMI-HYDRA 2 Module fits into one of the module slots in the Orange Box.

Hydra2 network connection

A pair of front mounted SFP slots provide primary and secondary connections for a Hydra2 redundant network. Various fibre and copper SFP modules can be supplied for medium to long distances over Singlemode or Multimode fibre or CAT5e over Copper up to 90m.

Both Primary and Secondary interfaces show connectivity and active data status

DMI-HYDRA2 MODULE - FRONT PANEL



using LED indication on the front of the modules.

Fitting Modules

Currently the DMI-HYDRA 2 Module has to be fitted in the right hand slot (DMI 2) of the Orange Box for sync purposes and as a consequence the DMI-MADI Module is fitted in the left hand slot (DMI 1) of the Orange Box. When fitting the H2 Module static protection wristbands should be worn to prevent ESD failures.

- Note that this requires V3.2 software or later to work correctly.

HYDRA2 MODULAR I/O

MODULAR I/O BOX

Modular I/O BOXES are 3U rack-mount enclosures with 20 I/O card slots that can be populated with a mixed range of I/O cards, allowing for a custom selection of I/O quantities and formats.

Modular I/O boxes connect to a Hydra2 network in the same way as Fixed Format I/O. Multiple modular I/O boxes can co-exist on a Hydra2 network alongside fixed format I/O, if required, in order to make up the quantity of I/O in the format and location needed.

Power

Each modular I/O box is fitted with 2 x rear mounted AC PSUs, each with its own AC IEC input, operating from 100–240 V AC 50/60 Hz. Either PSU can power the whole box; two are fitted in order to provide redundancy. Where possible, each PSU should be fed from a separate AC source in order to provide redundancy against both PSU failure and external AC mains loss. Units are supplied with an IEC 'Y-cord' to allow both PSUs to be fed if only a single AC outlet is available.

Earthing

Chassis earth studs are fitted to each PSU cover. These should be connected to ground using earth cable of at least 6mm² cross-section (10 AWG).

Airflow and mounting

The unit is a 19" rack-mount enclosure designed for mounting into standard equipment bays. Rear/side supports should be considered in order to avoid excessive stress on the front racking angles, particularly if fitted into a mobile installation

A recessed air-intake grill runs across the bottom of the box. The box can be mounted directly under or on top of another unit or surface—the recessed

design of the intake allows sufficient air to be drawn in from the sides (see diagram) to cool the box. Both side facing inlets should be left unobstructed.

Low noise fans fitted to the PSU modules pull air through the box, venting to the rear. The fan grills at the rear of the box should be unobstructed with sufficient clearance for air to vent. Fans on both PSUs will operate, even if only one PSU is active, to ensure even airflow in the event of a PSU failure. To minimise fan noise and longevity, modular I/O fan speed is under variable control depending on the temperature within the box. SDI cards run notably hotter than other card types and therefore a box populated with a large number of SDI cards will generate the most fan noise.

Recess Kit

Recess kits are supplied as standard with Modular IO boxes, which allow them to be fitted, either flush to the front of the box, or recessed as shown in the diagram on the next page.

Hydra IDs

Unlike fixed format I/O, the Hydra ID is set using a DIP switch on the interface card fitted within the box which needs to be removed in order to change the HID. Please refer to the Modular I/O Hydra2 Interface section for more details.



Fitting and removing cards

It is essential to ensure EMC precautions are observed before removing or handling modular I/O cards. Any static should be discharged from the person by touching an earthed piece of metal, or preferably by wearing an ESD wrist-strap prior to handling. Cards should only be handled by their edges or front panels and should be worked on ESD protected benches and stored in EMC protected bags.

Failure to observe EMC precautions will invalidate warranty.




Cards are secured by top and bottom front panel screws and can be removed by pulling on the screws once they are unfastened. Do not pull on connectors or cables.

MODULAR I/O BOX AIRFLOW & SIDE VIEW CROSS-SECTION

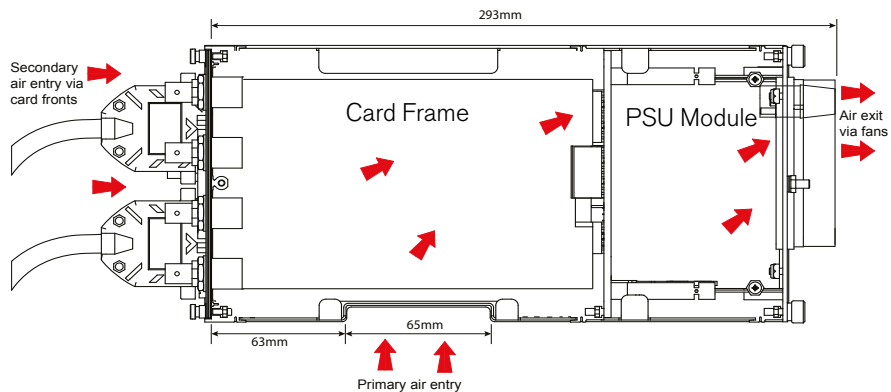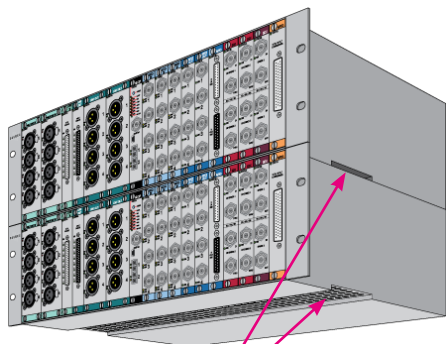


- Recessed air intake grills allow sufficient air to be drawn in from the sides, enabling units to be rack mounted directly above or below other units without space between them.

MODULAR I/O RECESS

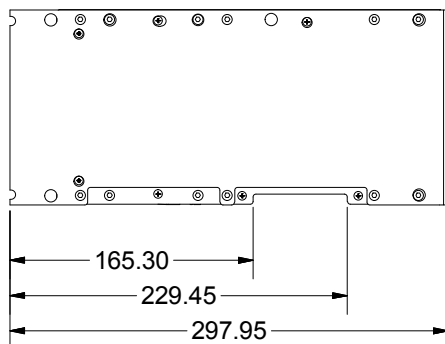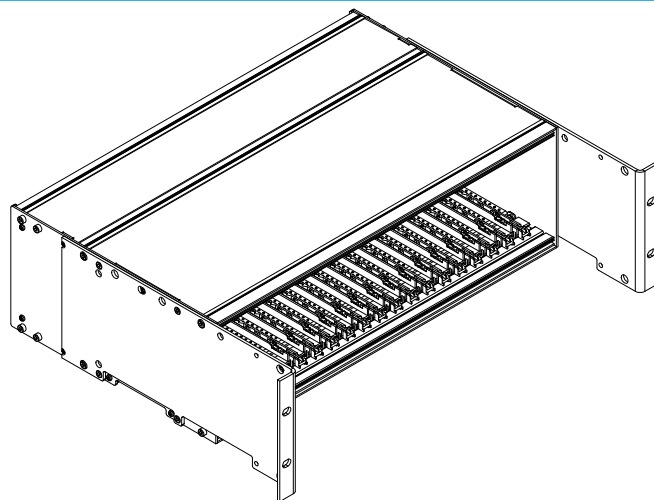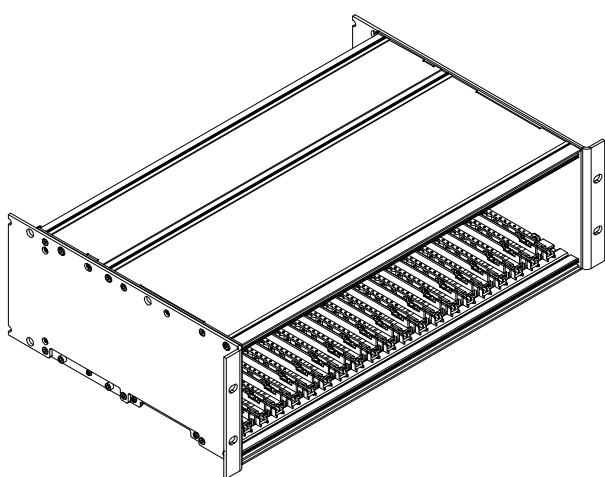


- Unrecessed

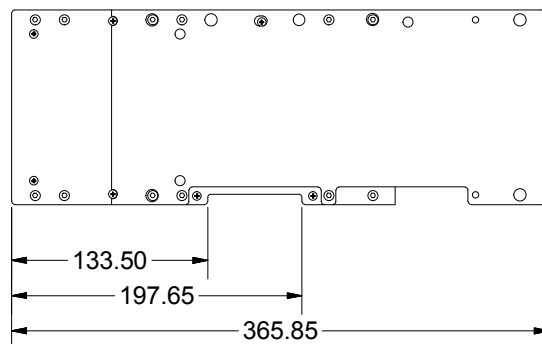

- Recessed


MODULAR I/O BOX - EXAMPLE SHOWING VARIED CARD TYPE POPULATION

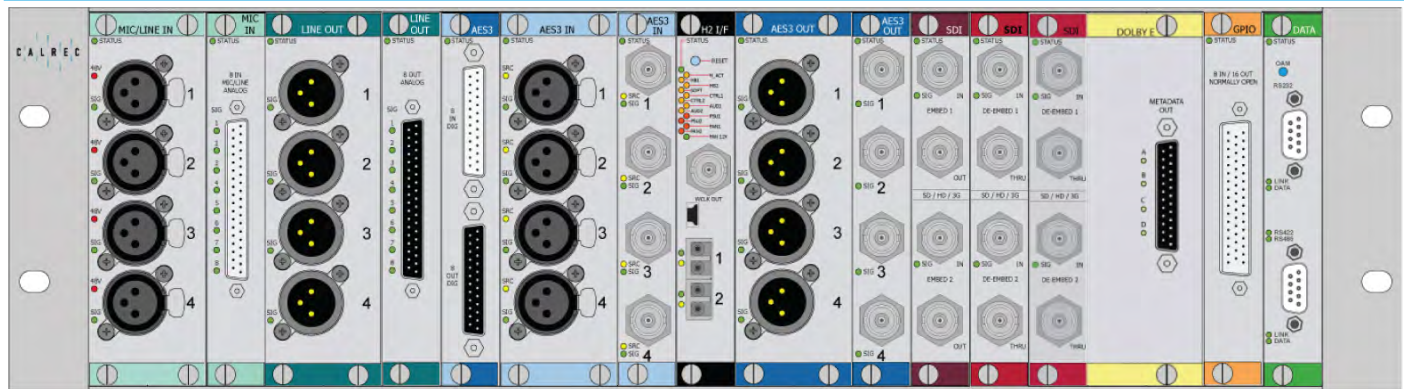


MODULAR I/O BOX SPECIFICATIONS

Height	3U
Width	19" (483 mm)
Depth	293 mm (11.6")
Approx. depth inc. rear mating connectors	350 mm (13.8")
Input Power (maximum)	100-240V AC 1.52-0.68A RMS 50/60Hz. Consumption dependant on I/O population.

MODULAR I/O BOX - REAR VIEW

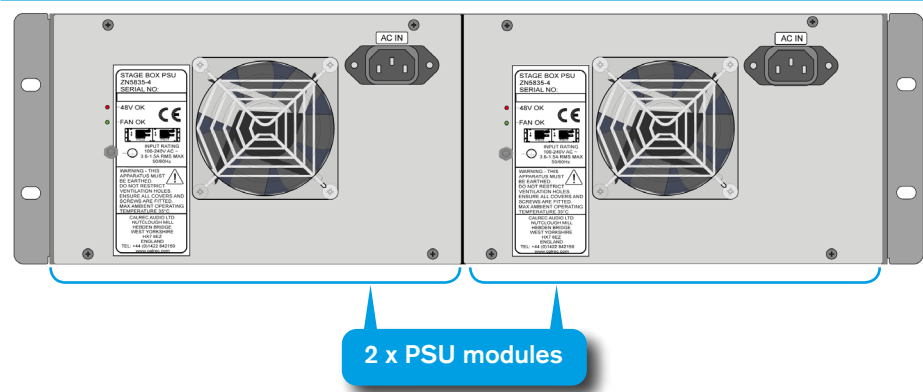

PSU DETAIL

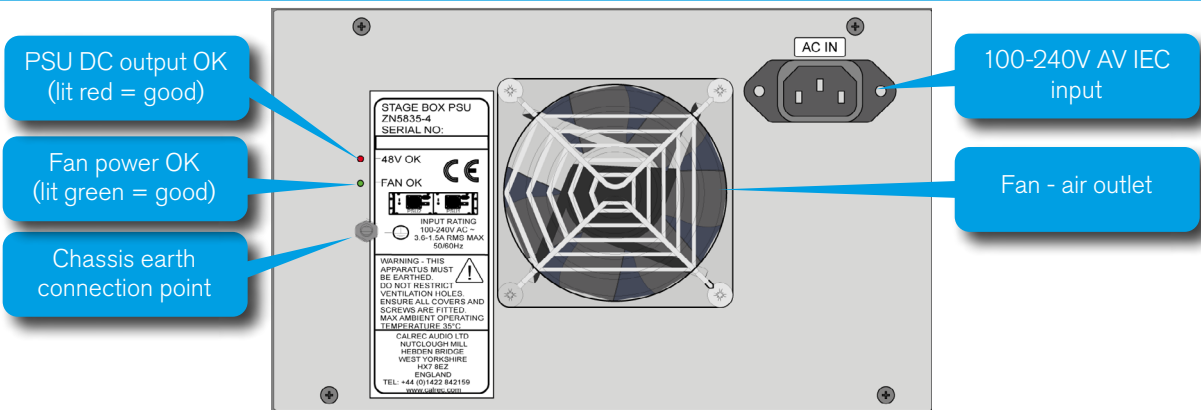

MODULAR I/O HYDRA2 INTERFACE

Hydra2 interface card

The central card slot of a modular I/O box is reserved for a UJ5836 Hydra2 interface card. This card connects the I/O to a Hydra2 network. Unlike fixed format I/O, the Hydra2 interface connectors are on the front of the modular I/O box.

Two Hydra2 interface ports are provided for redundancy - port 1 connects to a primary Calrec router, port 2 to the secondary router in the same core. Hydra2 network components interface via pluggable SFP modules, the correct type of SFP should be ordered to match the installation requirements—Cat5e copper, Singlemode, or MultiMode fibre. Please refer to the section on SFPs for more details.


Modular I/O box ID setting

The ID for modular I/O boxes is set using the DIP switches on the controller card and is only accessible by removing the card. Ensure ESD precautions are observed before removing any modular I/O box cards.


ID switches on modular I/O controller cards are orientated differently. Ignore any labelling on the switch itself and refer to the Calrec labelling printed on the circuit board around the switch to clarify its orientation. When viewing the card from the side, the most significant bit is on the left and the least significant bit on the right. Pulling a switch towards you sets it as a binary 1, away from you as a binary 0. The illustrations on this page show the ID switch on the modular I/O controller card from the side and top views. The decimal value of 39 is used for this example.

Note, always use a non-conductive tool to set the DIP switches to avoid damaging the card.


MODULAR I/O HYDRA2 INTERFACE CARD

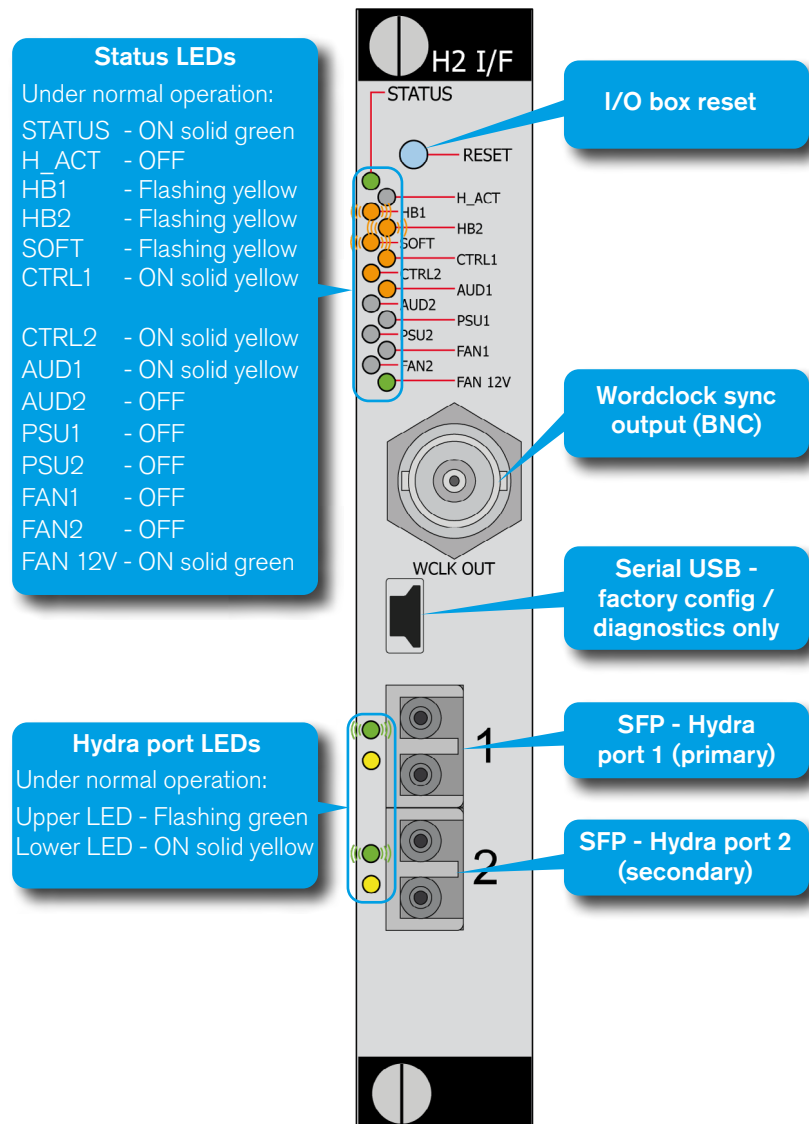

MODULAR I/O CONTROLLER - SIDE

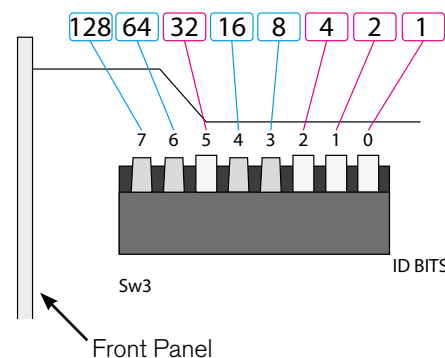

MODULAR I/O - VIEWED FROM TOP

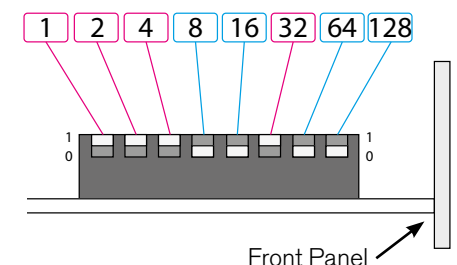

MODULAR I/O HYDRA INTERFACE LED INFORMATION

LED	Description	Display
STATUS	Boot Status	ON SOLID GREEN —Normal, indicates card has booted. FLASHING GREEN —Card is booting. OFF —Unit has failed to boot.
H_ACT	N/A	OFF —Normal, no function assigned to LED.
HB1	Primary Connection Heartbeat	FLASHING YELLOW —Normal, flashes approx twice per second. Indicates a valid link between port 1 and a primary router. OFF or ON SOLID —Failed or invalid link between port1 and primary router.
HB2	Secondary Connection Heartbeat	FLASHING YELLOW —Normal, flashes approx twice per second. Indicates a valid link between port 2 and a secondary router. OFF or ON SOLID —Failed or invalid link between port2 and secondary router.
SOFT	Software Heartbeat	FLASHING YELLOW —Normal, flashes approx twice per second. Indicates card software is running. OFF or ON SOLID —Card software is not running.
CTRL1	Primary Control Data	ON SOLID YELLOW —Normal, indicates control data connection between port 1 and primary router. OFF —No primary control data connection.
CTRL2	Secondary Control Data	ON SOLID YELLOW —Normal, indicates control data connection between port 2 and secondary router. OFF —No secondary control data connection.
AUD1	Primary Audio / Sync Active*	ON SOLID YELLOW —Normal, using sync and audio inputs via port 1. OFF —Unit is not using sync or audio via port 1.
AUD2	Secondary Audio / Sync Active*	OFF —Normal, unit is not using sync or audio via port 2. ON SOLID YELLOW —Unit is using sync and audio from port 2, indicates a problem with the primary path.
PSU1	PSU #1 Fail Indicator	OFF —Normal, I/O box PSU #1 is functioning ON SOLID RED —PSU #1 has failed or is not receiving AC mains power.
PSU2	PSU #2 Fail Indicator	OFF —Normal, I/O box PSU #2 is functioning ON SOLID RED —PSU #2 has failed or is not receiving AC mains power.
FAN1	Fan #1 Fail Indicator	OFF —Normal, Fan #1 (fitted to PSU #1) is functioning ON SOLID RED —Fan #1 has failed.
FAN2	Fan #2 Fail Indicator	OFF —Normal, Fan #2 (fitted to PSU #2) is functioning ON SOLID RED —Fan #2 has failed.
FAN 12V	Fan DC Power	ON SOLID GREEN —Normal, 12V DC power rail for fans is active. OFF —DC power for fans has failed or is inactive.
Port1 Green	Port 1 Activity	FLASHING GREEN —Under normal operation, once connection has been established, this LED should display a regular flashing pattern, approx 8 times per second. OFF —No activity detected on primary Hydra link.
Port1 Yellow	Port 1 Connection	ON SOLID YELLOW —Normal, indicates a valid Hydra2 port connection is made.
Port2 Green	Port 2 Activity	FLASHING GREEN —Under normal operation, once connection has been established, this LED should display a regular flashing pattern, approx 8 times per second. OFF —No activity detected on secondary Hydra link.
Port2 Yellow	Port 2 Connection	ON SOLID YELLOW —Normal, indicates a valid Hydra2 port connection is made.

- AUD1 & AUD2 LEDs may be lit at the same time if the box is receiving some signals on its secondary connection

MODULAR I/O CARD OPTIONS

A wide range of cards are available to fit in modular I/O boxes, offering various signal formats and connector types.

Card Slots

Up to 20 I/O cards can be fitted in each modular I/O box. Some card types physically take up more than one card slot space.

Card slots are labelled alphabetically from the left. Characters F, I, O, Q, U & Y are omitted as they are easily confused with other characters or numbers. Slot labels are printed on the upper rail of the box and are still visible when cards are fitted through a circular cut-out in the top left corner of the card's front panel. Cards that take up more than one slots space are identified by the left-most card slot of the space they occupy. The card slot character is used as part of the default I/O port labels.

Changing I/O card types

On connecting to a Hydra2 network, modular I/O boxes along with their I/O card population are automatically detected. The box configuration is saved to the Hydra2 database along with any port labels that have been edited in order to allow users to patch sources/destinations to/from an I/O box even if the box itself is offline.

If required, additional cards can be fitted into empty card slots. After resetting the I/O box, the new cards will be automatically detected and added to the Hydra2 database.

If a card is removed from an I/O box, it will still remain in the Hydra2 database and displayed on each console, and in H2O.

The card, or a different card of the same type can be fitted, and operation will be normal.

MODULAR I/O CARD OPTIONS

Card	Type	Inputs	Outputs	Connector	Width (slots)
AD5838	Analogue Line In	8	0	D-Type	1
AD6057	Analogue Mic/Line In	8	0	D-Type	1
AD5840	Analogue Mic/Line In	4	0	XLR	2
AD6365	Transformer Mic/Line In	4	0	XLR	2
AL5870	Analogue Mic In / Split	2	2	XLR	2
AL5875	Analogue Mic In / Split	1	3	XLR	2
BI6218	Waves SoundGrid	64	64	RJ45	1
BI6119	Dante with Network Redundancy	64	64	RJ45	1
DA5839	Analogue Line Out	0	8	D-Type	1
DA5867	Analogue Line Out	0	4	XLR	2
JB5860	Digital AES In Unbalanced	4	0	BNC	1
JX5869	Digital AES In Balanced	4	0	XLR	2
JD5842	Digital AES In/Out Balanced	8	8	D-Type	1
JB5837	Digital AES Out Unbalanced	0	4	BNC	1
JX5868	Digital AES Out Balanced	0	4	XLR	2
JM6199	MADI AES 10	64/56	64	BNC+SPF	1
VI5872	SDI embedder / Out	2	2	BNC	1
VO5841	SDI de-embedder / In	2	2	BNC	1
VO5873	SDI de-embedder / in with Dolby Decoder Support	2	2	BNC	3
WY5858	GPIO with Changeover	8	8	D-Type	1
WY5859	GPIO	8	16	D-Type	1

- Input / output quantities shown in grey indicate I/O that is local to the card and cannot be accessed by / is not fed from the Hydra2 domain, e.g. analogue split outputs and video content.

If the type of card fitted in a slot is changed, both the old and the new card type will be present in the Hydra2 database, and displayed on each console and in H2O which can lead to confusion.

If a card is to be changed for a different type, or if a card is to be permanently removed, the I/O box should be physically disconnected from the network, and then removed from the required list on each console, and removed from the IO box list in H2O, before being reconnected.

On connection, it will be automatically recognised with its correct current configuration and just need adding to the required list on each relevant console.

HYDRA2

MODULAR I/O CARDS


AD5838 – 8 x ANALOGUE LINE LEVEL INPUTS (D-TYPE)

The AD5838 provides 8 balanced line level analogue inputs to the Hydra2 network in a 1 slot-wide module. The audio interface is via a 37 pin female D-Type connector.


Front panel LEDs indicate audio signal presence for each input, lighting green for signals above -60dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

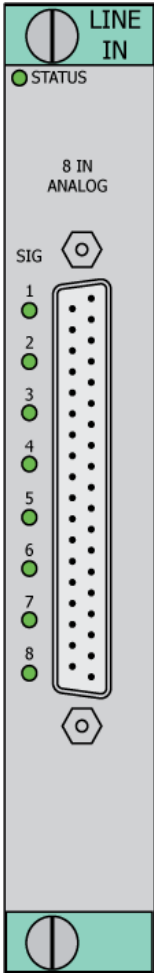

WIRING INFORMATION

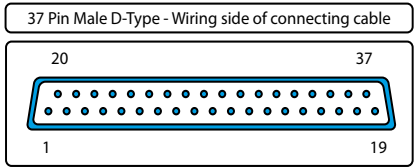

Function		Pin
In 1	+	21
	-	3
	Ground	2
In 2	+	23
	-	5
	Ground	4
In 3	+	25
	-	7
	Ground	6
In 4	+	27
	-	9
	Ground	8
In 5	+	29
	-	11
	Ground	10
In 6	+	31
	-	13
	Ground	12
In 7	+	33
	-	15
	Ground	14
In 8	+	35
	-	17
	Ground	16
Ground		18, 20, 36

- Card connector is female, requiring male terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Line Level
Inputs	8
Outputs	N/A
Input Impedance	10 k Ω
ADC	24 bit


AD6057 – 8 x ANALOGUE MIC / LINE LEVEL INPUTS (D-TYPE)

The AD6057 provides 8 balanced mic / line level analogue inputs to the Hydra2 network in a 1 slot-wide module. The audio interface is via a 37 pin female D-Type connector.


Front panel LEDs indicate audio signal presence for each input, lighting green for signals above -60dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

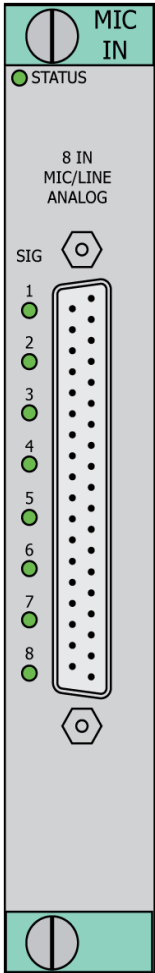

WIRING INFORMATION

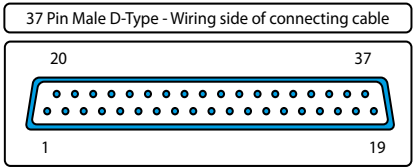

Function		Pin
In 1	+	21
	-	3
	Ground	2
In 2	+	23
	-	5
	Ground	4
In 3	+	25
	-	7
	Ground	6
In 4	+	27
	-	9
	Ground	8
In 5	+	29
	-	11
	Ground	10
In 6	+	31
	-	13
	Ground	12
In 7	+	33
	-	15
	Ground	14
In 8	+	35
	-	17
	Ground	16
Ground		18, 20, 36

- Card connector is female, requiring male terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Mic/Line Level
Inputs	8
Outputs	N/A
Input Gain Range	-18dB to +78dB, remotely controlled per input
Phantom Power	48V remotely switchable per input
Input Impedance	5 kΩ
ADC	24 bit

AD5840 – 4 x MIC/LINE IN (XLR)


The AD5840 provides 4 balanced mic / line level analogue inputs to the Hydra2 network in a 2 slot-wide module. The audio interface is via 4 female XLR connectors.

Front panel LEDs indicate audio signal presence for each input, lighting green for signals above -60dBFS.

Each input also has front panel LED indicators which light red when 48 V phantom power is on.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

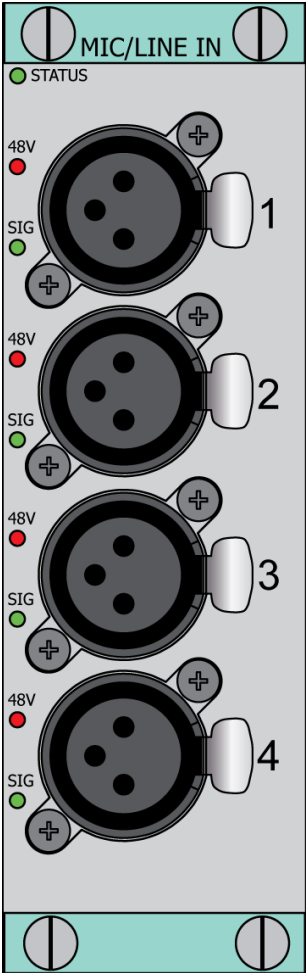

WIRING INFORMATION

Connector side

Wiring Side

Function	Pin
Positive	2
Negative	3
Ground	1

Female

Male

- Card connectors are female, requiring male terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Mic/Line Level
Inputs	4
Outputs	0
Input Gain Range	-18 dB to +78 dB, remotely controlled per input
Phantom Power	48 V remotely switchable per input
Input Impedance	2 k Ω @ Mic Level / 10 k Ω @ Line level (auto-switching)
ADC	24 bit

AD6365 – 4 x TRANSFORMER ISOLATED MIC/LINE IN (XLR)

The AD6365 provides 4 transformer isolated balanced mic / line level analogue inputs to the Hydra2 network in a 2 slot-wide module. The audio interface is via 4 female XLR connectors.

Transformer based I/O has the benefits of being isolated, and therefore protecting hardware from damage due to adverse currents, reducing susceptibility to noise from poor earthing, and their ability to be fed directly with either a balanced or an unbalanced signal.


Transformer based circuits provide high performance, with many audiophiles and music production users preferring the “warm” sound brought by transformers.

Front panel LEDs indicate audio signal presence for each input, lighting green for signals above -60dBFS.

Each input also has front panel LED indicators which light red when 48 V phantom power is on.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

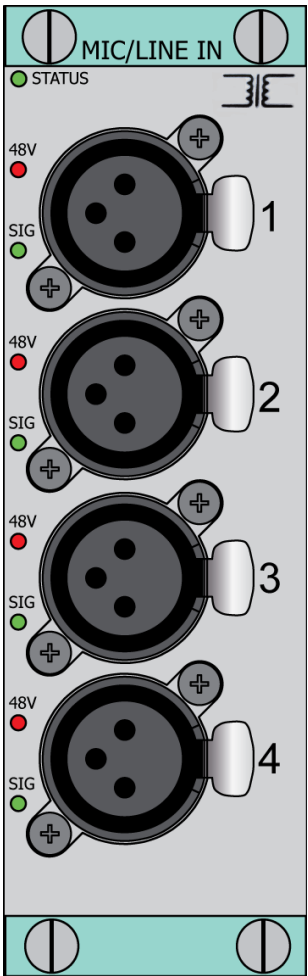

WIRING INFORMATION

Connector side

Wiring Side

Function	Pin
Positive	2
Negative	3
Ground	1

Female

Male

- Card connectors are female, requiring male terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Transformer Balanced Mic/Line Level
Inputs	4
Outputs	0
Input Gain Range	-18 dB to +78 dB, remotely controlled per input
Phantom Power	48 V remotely switchable per input
Input Impedance	1.6 kΩ @ Mic Level / >6.2 kΩ @ Line level (auto-switching)
ADC	24 bit

AL5870 – 2 x MIC/LINE IN WITH SPLITS (XLR)

The AL5870 provides 2 balanced mic / line level analogue inputs to the Hydra2 network along with a pre-gain analogue ‘split’ output for each input in a 2 slot-wide module. The 2 Input connectors are female XLR, the 2 ‘split’ outputs are male XLR.

The pre gain analogue split outputs are active, irrespective of the Hydra2 interface card status, as long as the I/O box is powered.


Front panel LEDs indicate audio signal presence for each input and split output, lighting green for signals above -60dBFS.

Each input also has front panel LED indicators which light red when 48V phantom power is on.


This module supports phantom power detection, allowing for power to the mic input to be controlled by the device being fed from the split output. This feature is enabled per input / split using PCB mounted DIP switches fitted to the card. When active, if +24V DC or greater is detected on a split output (i.e. phantom power is being fed by the device connected to the split), the card will automatically switch its own phantom power to the corresponding mic input. If phantom power has been switched in this way, the 48 V LED indicator will briefly blink off approximately every two seconds.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

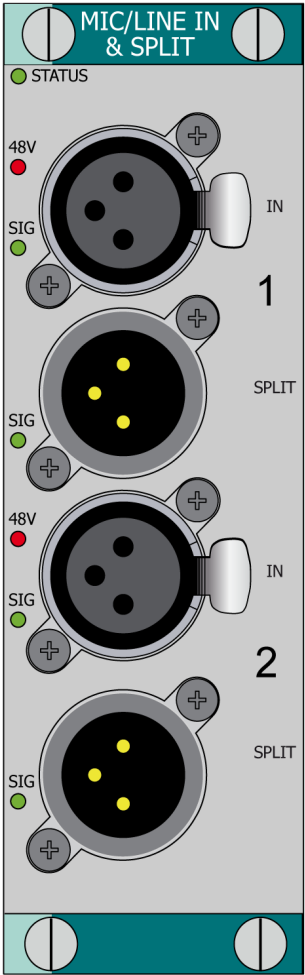

WIRING INFORMATION

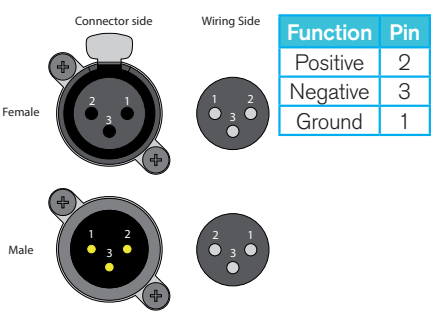

- Card input connectors are female, requiring male terminated interface cabling.
- Card Split output connectors are male, requiring female terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Mic/Line Level
Inputs	2
Outputs	2 (Pre-gain input splits)
Input Gain Range	-18 dB to +78 dB, remotely controlled per input
Phantom Power	48 V remotely switchable per input
Input Impedance	2 kΩ @ Mic Level / 10 kΩ @ Line level (auto-switching)
ADC	24 bit

AL5875 – 1 x MIC/LINE IN WITH 3 SPLITS (XLR)

The AL5875 provides 1 balanced mic / line level analogue input to the Hydra2 network along with a 3 pre-gain analogue ‘split’ outputs of the input signal in a 2 slot-wide module. The input connector is a female XLR, the 3 ‘split’ outputs are male XLR.


The pre gain analogue split outputs are active, irrespective of the Hydra2 interface card status, as long as the I/O box is powered.

Front panel LEDs indicate audio signal presence for the input and split outputs, lighting green for signals above -60dBFS.


The input also has a front panel LED indicator that lights red when 48V phantom power is on.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

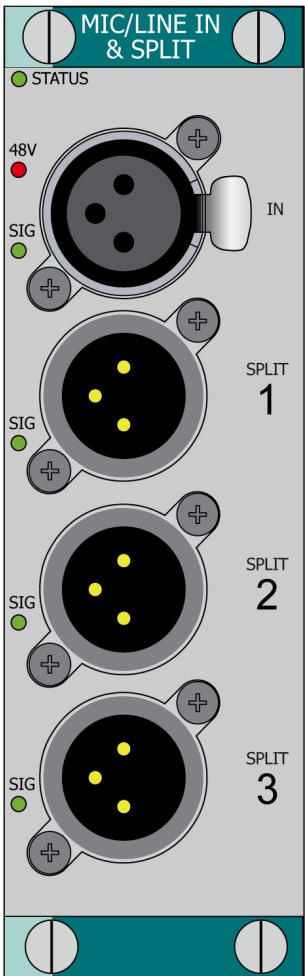

WIRING INFORMATION

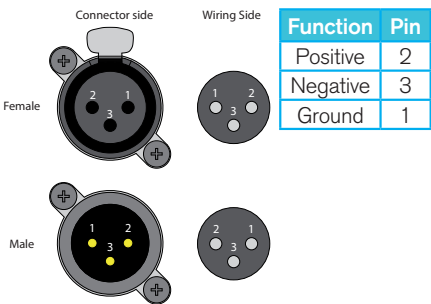

- Card input connector is female, requiring male terminated interface cabling.
- Card Split output connectors are male, requiring female terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Mic/Line Level
Inputs	1
Outputs	3 (Pre-gain input splits)
Input Gain Range	-18 dB to +78 dB, remotely controlled per input
Phantom Power	48 V remotely switchable per input
Input Impedance	2 kΩ @ Mic Level / 10 kΩ @ Line level (auto-switching)
ADC	24 bit

BI6218 – WAVES SOUNDGRID (RJ45)

The BI6218 provides 64 outputs from the Hydra 2 network to the SoundGrid network, and 64 inputs to Hydra 2 from SoundGrid at 48 kHz via a single Ethernet cable. .

SoundGrid is an Audio-over-Ethernet networking and processing technology developed by Waves. SoundGrid provides extremely low-latency, high-channel-count audio processing using standard Intel CPUs and 1 Gbps Ethernet networks for studio, live sound, and other real-time professional audio applications.

Real-time audio processing is performed on standard Intel-based plug-in servers, running a Waves-customised real-time version of Linux.

For more information please go to:-
<http://www.waves.com/soundgrid-systems>


Each BI6218 Waves mod I/O card is supplied with two serial numbers. The first one is a 6 digit Calrec serial number and the second is a Waves supplied 14 character hex serial number. The Waves Serial Number is shown circled in red far right. The customer is required to register the Waves supplied 14 character serial number against their Waves account so that the appropriate package files are made available.

Please note that each Soundgrid module should be registered to receive updates and support from Waves. Note there is a separate user guide available from Waves specific to the Calrec Soundgrid I/O which can be found at:-


<http://www.waves.com/1lib/pdf/live/calrec-manual.pdf>

Customers can use a dedicated display and input devices for the Waves PC, but if they want a more integrated feel, on Apollo and Artemis they could switch the console PC display, keyboard, and mouse, using a KVM or VNC protocol (similar to remote desktop). Setting up VNC is shown on the next page.

FRONT PANEL VIEW

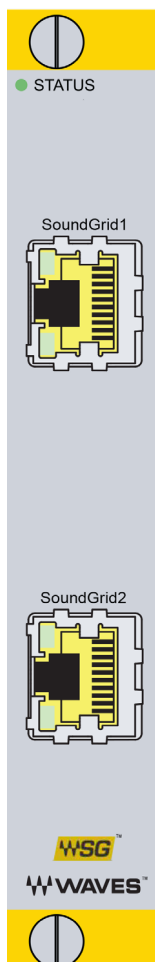

WAVES SOUNDGRID PLUG-IN MODULE FOR HYDRA 2

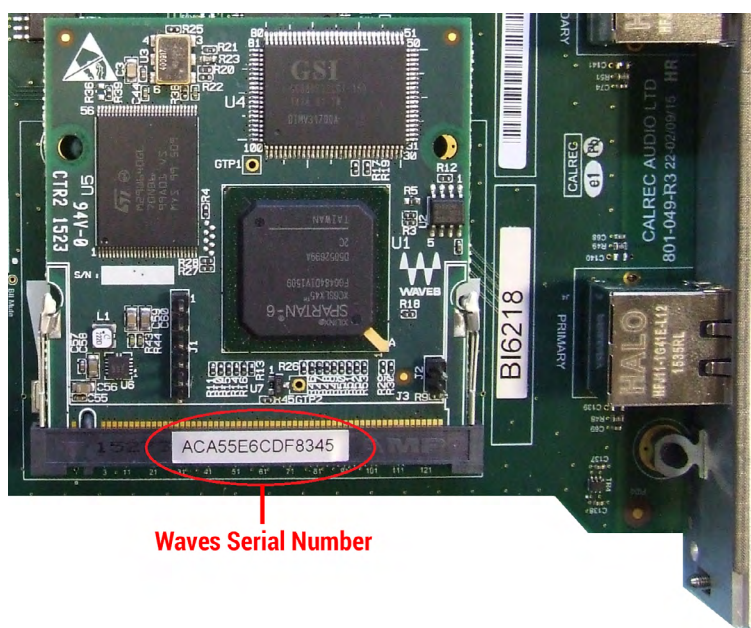

Waves Serial Number

SPECIFICATION

Format	Digital
Type	SoundGrid
Connector	RJ45
Inputs	64
Outputs	64

Setting up the VNC display control program for SoundGrid

If the user wants to use the console touch screen and keyboard to control the Waves SoundGrid Controller there are a number of solutions such as KVM and remote access programs available..

Currently we suggest the usage of the VNC program. This uses the on-board Ethernet adapter on the Waves SoundGrid Controller connected to the Ethernet port of the Console Controller to enable remote control.

The advantage of this system is that only requires a CAT5e cable between the Controllers and the VNC licenced software program, this eliminates the need for expensive KVM systems and also allows the user to interface via the touch screen of the console.

The VNC Server program needs to be licenced onto the Waves SoundGrid Controller and during the process the VNC Server window (shown above right) appears showing the IP address that the VNC viewer loaded onto the Console Controller uses to access the Waves SoundGrid Controller.

When the VNC viewer program is started on the console controller (shown right) the user enters the IP address of the VNC server.

Once this is entered into the VNC viewer the user presses the connect button.




This then opens the VNC Viewer Authentication window (shown below right) in which the Password provided by the user of the VNC Server is entered.

Note: the VNC server password is setup when the VNC server is installed but can be altered later on if required.

Pressing OK then enables the VNC display of the Waves SoundGrid Controller to be displayed and controlled from the console touch screen and keyboard.

The user can quickly change between the Waves SoundGrid display and the Console display by clicking on the two tabs at the bottom of the screen

For further information on VNC go here:
<http://www.realvnc.com>

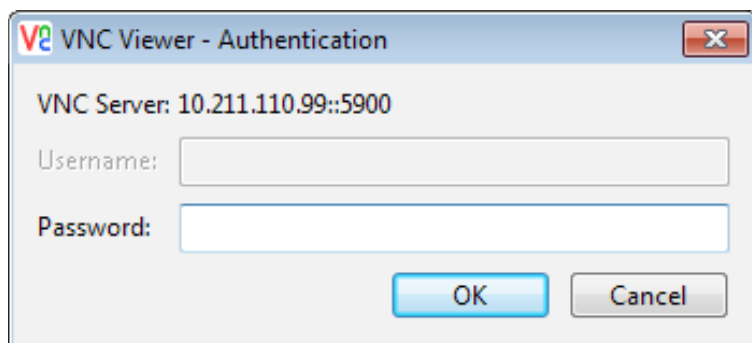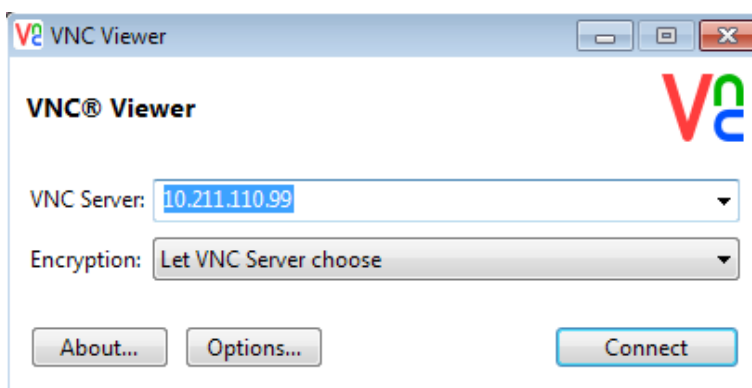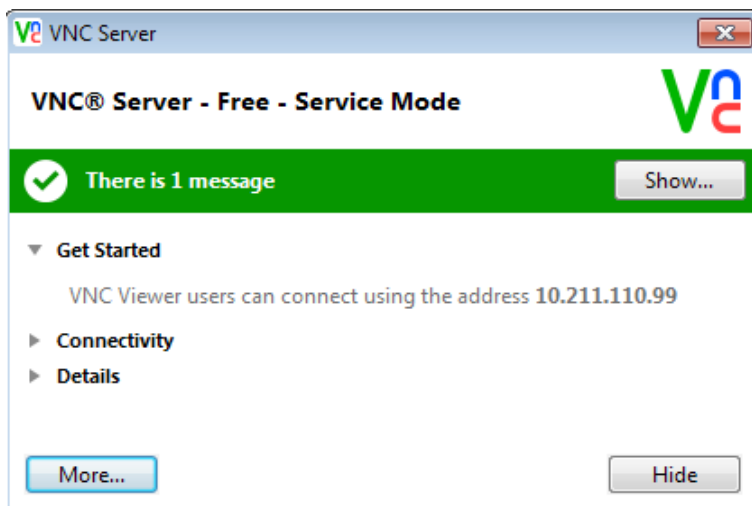

BI6192 – DANTE WITH NETWORK REDUNDANCY (RJ45)

The BI6192 provides an interface for routing audio in and out of a Hydra2 network into a Dante network. The interface is via RJ45 connectors housed within a 1-slot wide module.

Dante is a self-configuring, plug and play, digital audio networking technology developed by Audinate. Dante uses standard internet protocols. The Calrec Dante modular I/O card operates over Gigabit (Giga/E) Ethernet.

The BI6192 provides 64 input channels and 64 output channels (for a Dante network operating at 48 kHz or 44.1 kHz) or 32 input channels and 32 output channels (for a Dante network operating at 96 kHz) sample-rate converted down to 48kHz with the SRC's permanently enabled on all channels.

Two RJ45 ports (primary and secondary) are provided to give full redundancy on the Dante portion of the network.

For more information please see Audinate's Dante documentation here www.audinate.com/resources/technical-documentation.

FRONT PANEL VIEW



SPECIFICATION

Format	Digital
Type	Dante
Connector	RJ45
Inputs	64 (at 48 kHz or 44.1 kHz), 32 (at 96 kHz)
Outputs	64 (at 48 kHz or 44.1 kHz), 32 (at 96 kHz)


DA5839 – 8 x ANALOGUE LINE OUT (D-TYPE)

The DA5839 provides 8 balanced analogue line level outputs from the Hydra2 network in a 1 slot-wide module. The audio interface is via a 37 pin male D-Type connector.


Front panel LEDs indicate audio signal presence for each output, lighting green for signals above -60dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

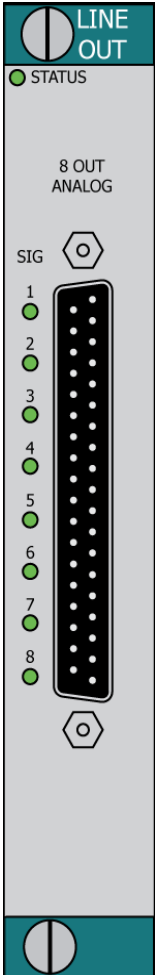

WIRING INFORMATION

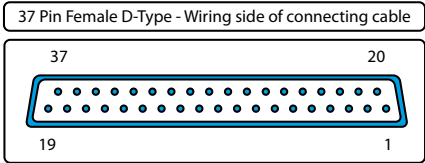

Function		Pin
Out 1	+	21
	-	3
	Ground	2
Out 2	+	23
	-	5
	Ground	4
Out 3	+	25
	-	7
	Ground	6
Out 4	+	27
	-	9
	Ground	8
Out 5	+	29
	-	11
	Ground	10
Out 6	+	31
	-	13
	Ground	12
Out 7	+	33
	-	15
	Ground	14
Out 8	+	35
	-	17
	Ground	16
Ground		18, 20, 36

- Card connector is male, requiring female terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Line Level
Inputs	N/A
Outputs	8
Output Impedance	<40 Ω
DAC	24 bit


DA5867 – 4 x LINE OUT (XLR)

The DA5867 provides 4 balanced analogue line level outputs from the Hydra2 network in a 2 slot-wide module. The audio interface is via the 4 male XLR connectors.

Front panel LEDs indicate audio signal presence for each output, lighting green for signals above -60 dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

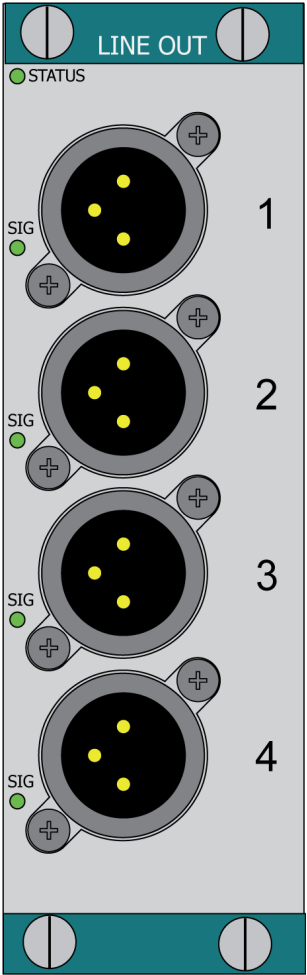

WIRING INFORMATION

Connector side

Wiring Side

Function	Pin
Positive	2
Negative	3
Ground	1

Female

Male

- Card connector is male, requiring female terminated interface cabling.

SPECIFICATION

Format	Analogue
Type	Balanced Line Level
Inputs	0
Outputs	4
Output Impedance	<40 Ω
DAC	24 bit

JB5860 – 4 x DIGITAL AES INPUT (BNC)


The JB5860 provides 4 unbalanced digital AES3 inputs to the Hydra2 network in a 1 slot-wide module. The audio interface is via the 4 BNC connectors.

Front panel LEDs indicate AES signal presence for each input, lighting green when receiving a valid AES carrier signal (irrespective of audio content).

Each input also has an 'SRC' LED indicator which lights yellow when the sample rate convertor is active.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

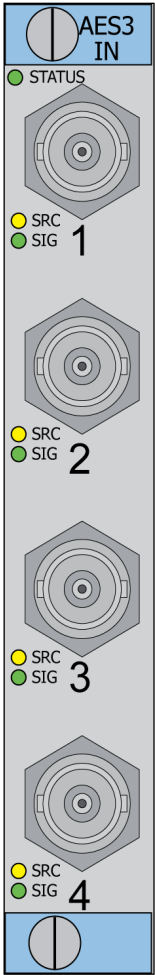

SPECIFICATION

Format	Digital
Type	AES3 (75 Ω unbalanced)
Input Range	0.3V-1.2V Pk-Pk
Audio Connector	BNC
Inputs	4
SRC	24 bit, remotely switchable per input.

JX5869 – 4 x DIGITAL AES INPUT (XLR)


The JB5896 provides 4 balanced digital AES3 inputs to the Hydra2 network in a 2 slot-wide module. The audio interface is via the 4 female XLR connectors.

Front panel LEDs indicate AES signal presence for each output, lighting green when receiving a valid AES carrier signal (irrespective of audio content).


Each input also has an 'SRC' LED indicator which lights yellow when the sample rate convertor is active.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

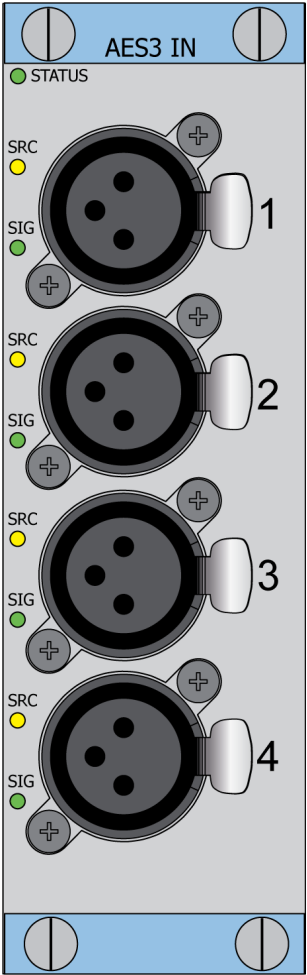

WIRING INFORMATION

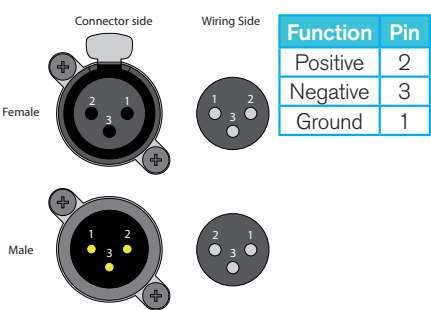

- Card connector is female, requiring male terminated interface cabling.

SPECIFICATION


Format	Digital
Type	AES3 (110 Ω balanced)
Input Range	0.2 V - 7.0 V Pk-Pk
Audio Connector	Female XLR
Inputs	4
SRC	24 bit, remotely switchable per input.

JD5842 – 8 IN, 8 OUT DIGITAL AES (D-TYPE)


The JD5842 balanced digital AES3 card provides 8 inputs and 8 outputs to / from the Hydra2 network in a 1 slot-wide module. Audio interfacing is via the 2, 25 pin D-Type connectors, female for inputs, male for outputs.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

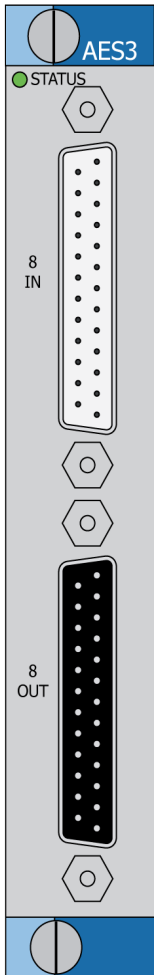


INPUT WIRING INFORMATION

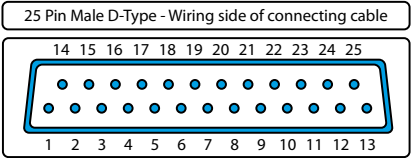

Function		Pin
Input 1	+	14
	-	15
	Ground	16
Input 2	+	17
	-	18
	Ground	19
Input 3	+	20
	-	21
	Ground	22
Input 4	+	23
	-	24
	Ground	25
Input 5	+	1
	-	2
	Ground	3
Input 6	+	4
	-	5
	Ground	6
Input 7	+	7
	-	8
	Ground	9
Input 8	+	10
	-	11
	Ground	12
Ground		13

- Input connector is female, requiring male terminated interface cabling.

OUTPUT WIRING INFORMATION

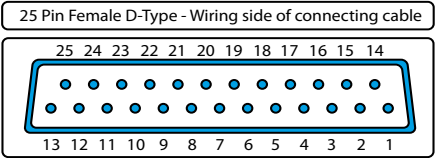

Function		Pin
Out 1	+	14
	-	15
	Ground	16
Out 2	+	17
	-	18
	Ground	19
Out 3	+	20
	-	21
	Ground	22
Out 4	+	23
	-	24
	Ground	25
Out 5	+	1
	-	2
	Ground	3
Out 6	+	4
	-	5
	Ground	6
Out 7	+	7
	-	8
	Ground	9
Out 8	+	10
	-	11
	Ground	12
Ground		13

- Output connector is male, requiring female terminated interface cabling.

SPECIFICATION

Format	Digital
Type	AES3 (110 Ω balanced)
Input Range	0.2 V - 7.0 V Pk-Pk
Output Voltage	3.5 V nominal into 110 Ω
Audio Connectors	Inputs - 25 pin female D-Type Outputs - 25 pin Male D-Type
Inputs	8
Outputs	8
SRC	24 bit, remotely switchable per input.


JB5837 – 4 x DIGITAL AES OUTPUT (BNC)

The JB5837 provides 4 unbalanced digital AES3 outputs from the Hydra2 network in a 1 slot-wide module. The audio interface is via the 4 BNC connectors.

Front panel LEDs indicate audio presence for each output, lighting green when outputting signal over -60 dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

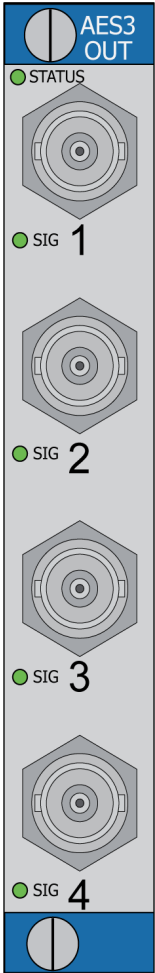

SPECIFICATION

Format	Digital
Type	AES3 (75 Ω unbalanced)
Output	1 V Pk-Pk nominal into 75 Ω
Audio Connector	BNC
Outputs	4


JX5868 – 4 x DIGITAL AES OUTPUT (XLR)

The JX5868 provides 4 balanced digital AES3 outputs from the Hydra2 network in a 1 slot-wide module. The audio interface is via the 4 XLR connectors.

Front panel LEDs indicate audio presence for each output, lighting green when outputting signal over -60 dBFS.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

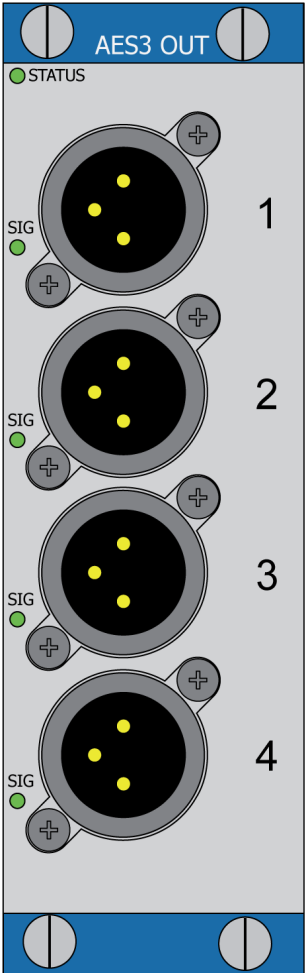

WIRING INFORMATION

Connector side

Wiring Side

Function	Pin
Positive	2
Negative	3
Ground	1

Female

Male

1

2

3

1

2

3

1

2

3

1

2

3

- Card connector is male, requiring female terminated interface cabling.

SPECIFICATION

Format	Digital
Type	AES3 (110 Ω unbalanced)
Output	3.5 V Pk-Pk nominal into 110 Ω
Audio Connector	XLR
Outputs	4

JM6199 – MADI IN/OUT-AES10 (BNC / SFP)


The JM6199 provides 1 x MADI input stream plus 1 x MADI output stream with independently switchable sample rate converters for both input and output.

The front panel LED provides indication for receiving a valid MADI input and for sample rate converters being active.

Input sources are selectable between BNC copper and SFP. Both BNC and SFP outputs are fed simultaneously with the same signal.

A range of SFPs are available, see Connection Information from page 30 for more details.

FRONT PANEL VIEW

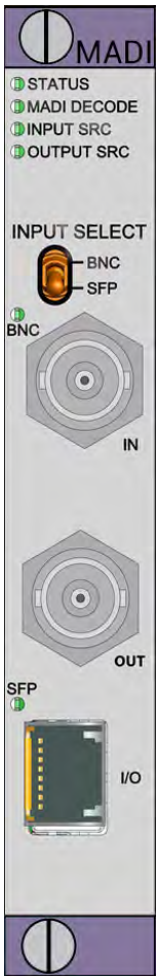

SPECIFICATION

Format	Digital
Type	MADI (AES 10)
Input	1 x 64/56 channel input stream (at 48KHz)
Output	1 x 64 channel output stream (at 48KHz)
Audio Connector	BNC+SFP

VI5872 – 2 x SDI EMBEDDER (BNC)

The VI5872 provides 2 SDI outputs, into which audio can be embedded from the Hydra2 network. This is a 1 slot-wide module with SDI interfacing via BNC connectors.

Any console, H2O user or 3rd party SW-P-08 controller on the Hydra2 network can select audio to be embedded into the SDI outputs. Each SDI output can carry up to 16 channels of embedded audio.

Each SDI output is paired with an SDI input. A valid SDI signal must be fed into an input connector in order for the corresponding output to function. The output can only pass video content from its corresponding input—video content cannot be re-routed by the Hydra2 system. Any audio in the incoming SDI signal is stripped and discarded—all audio in the output stream is routed from the Hydra2 network. Audio channels within the output stream will be silent unless Hydra2 patches are made to them. If any of the audio content from the SDI input needs to be maintained, the signal should first pass through a de-embedder card (VO5841 / VO5873).

3rd party EMBER controllers, such as L-S-B's VSM and Colledia's BNCS have the ability to insert SMPTE2020 metadata into each SDI output stream's VANC space.

Front panel LEDs for each input will light up green to indicate a valid SDI signal is being received.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.


Maximum channel count

As Hydra2 links are limited to 512 channels of audio in each direction, each I/O box can be populated with cards that provide a maximum of 512 input channels, and 512 output channels.

This limitation becomes a factor when a large number of SDI cards are fitted in the same modular I/O box. Channels are counted across the card slots from left to right. If, for example, SDI embedder (audio output) cards are fitted in the first 16 card slots, the output channel count will be at its maximum (16 channels of audio per SDI output x 2 SDI outputs per card x 16 cards = 512 channels) - Any output cards fitted in the remaining 4 slots will not pass audio or GPIO signals, irrespective of whether audio is being routed to any or all of the SDI outputs. The remaining card slots could however be fitted with input cards as inputs and outputs have separate channel count quotas.

Note, the channel count totals mono audio channels, therefore, each SDI stream has a channel count of 16 and each digital AES port has a channel count of 2.

FRONT PANEL VIEW

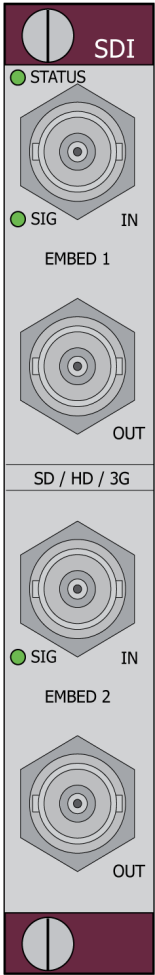

SPECIFICATION

Format	SDI
Type	SD / HD / 3G
SDI Connector	BNC
Outputs	2 x SDI (16 audio channels each)
Inputs	2 x SDI in (audio discarded)

VO5841 – 2 x SDI DE-EMBEDDER (BNC)

The VO5841 provides 2 SDI inputs, the audio from which can be de-embedded and distributed across the Hydra2 network. This is a 1 slot-wide module with SDI interfacing via BNC connectors.

All 16 channels of audio can be de-embedded from SD, HD or 3G SDI signals.

For each SDI input, there is an SDI 'thru' connector which passes on the incoming SDI signal, unchanged, with its original audio channels included.

Front panel LEDs for each input light up green to indicate a valid SDI signal is being received.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

Maximum channel count


As Hydra2 links are limited to 512 channels of audio in each direction, each I/O box can be populated with cards that provide a maximum of 512 input channels, and 512 output channels. When counting inputs and outputs GPIO ports must also be included.

This limitation becomes a factor when a large number of SDI cards are fitted in the same modular I/O box. Channels are counted across the card slots from left to right. If, for example, SDI de-embedder (audio input) cards are fitted in the first 16 card slots, the input channel count will be at its maximum (16 channels of audio per

SDI output x 2 SDI outputs per card x 16 cards = 512 channels).

Any input cards fitted in the remaining 4 slots will not pass audio or GPIO signals, irrespective of whether audio is being used from any or all of the SDI inputs. The remaining card slots could however be fitted with output cards as inputs and outputs have separate channel count quota's. Note, the channel count totals mono audio channels and therefore each SDI stream has a channel count of 16 and each digital AES port has a channel count of 2.

FRONT PANEL VIEW

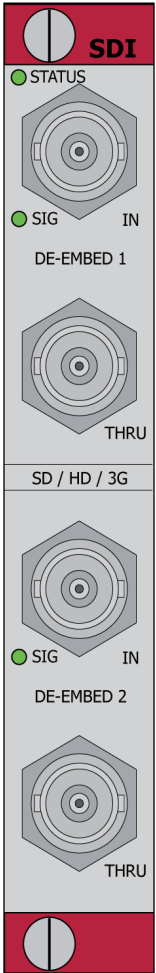

SPECIFICATION

Format	SDI
Type	SD / HD / 3G
SDI Connector	BNC
Inputs	2 x SDI (16 audio channel in each)
Outputs	2 (SDI 'Thru')

WY5858 – GPIO, 8 IN / 8 FULL CHANGEOVER OUT (D-TYPE)

GPIO cards can be fitted to provide General Purpose interfacing for logic control such as remote / fader starts for playback devices, triggering autofades on a control surface, and much more.

Access to each general purpose input and output can be given to any console on the Hydra2 network.

The function of each general purpose input and output is configurable and assignable from any Apollo/Artemis/Summa console which has been granted access.

This is a one slot wide module. Inputs and outputs are all on 1 x female 50 pin D-type connector.

LEDs

The Status LED strobes to indicate that the local software is running. The LED illuminates solidly when connection is established to the Hydra2 Interface Module in the same modular I/O chassis.

GP Inputs


8 opto-isolated inputs allow for remote control of console functions. Applying between 3 and 50 Volts, AC or DC across the + & - pins of the opto will trigger them.

If using a dry closure to trigger a GP input, note that the incoming closure should be wired to one side of an opto input only. The other side of the opto should be pulled up by linking it to the 5V pin on the connector. The other side of the closure should be wired to the 0V pin. An example of wiring a closure to GP input #1 is shown above right.


GP Outputs

The WY5858 version provides 8 changeover relays with access to both the normally open, and normally closed contacts for each. A closure pair is achieved by wiring one leg to either NO or NC and the other leg to a common pin for that specific relay. If external equipment requires a ground for activation, rather than a closure, the common pin for that relay should be connected to a ground from the external equipment.

FRONT PANEL VIEW

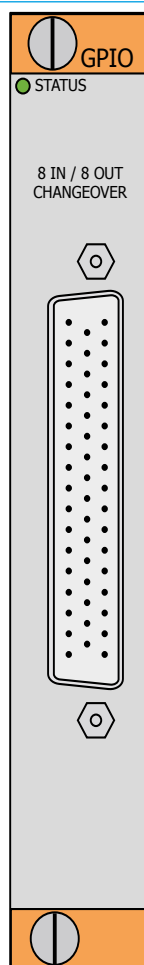


GP INPUT PINS

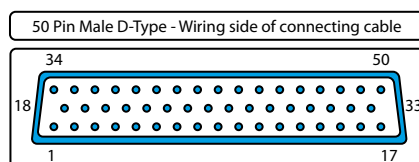

Function		Pin
GPI 1	+	1
	-	34
GPI 2	+	18
	-	2
GPI 3	+	35
	-	19
GPI 4	+	3
	-	36
GPI 5	+	20
	-	4
GPI 6	+	37
	-	21
GPI 7	+	5
	-	38
GPI 8	+	22
	-	6
Supply	+5 V	17
Supply	0 V	50

INPUT WIRING EXAMPLE GP INPUT #1

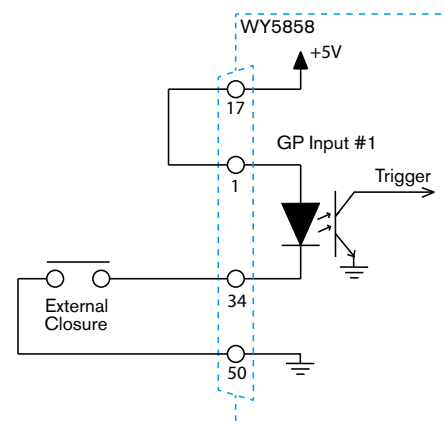

GP OUTPUT PINS

Function		Pin
GPO 1	NO	39
	NC	7
	Common	23, 40
GPO 2	NO	24
	NC	41
	Common	8, 25
GPO 3	NO	9
	NC	26
	Common	42, 10
GPO 4	NO	43
	NC	11
	Common	27, 44
GPO 5	NO	28
	NC	45
	Common	12, 29
GPO 6	NO	13
	NC	30
	Common	46, 14
GPO 7	NO	47
	NC	15
	Common	31, 48
GPO 8	NO	32
	NC	49
	Common	16, 33

See “Capacity” on page 20 for information on Modular I/O box capacity.

WY5859 – GPIO, 8 IN / 16 OUT (D-TYPE)

GPIO cards can be fitted to provide General Purpose interfacing for logic control such as remote / fader starts for playback devices, triggering autofades on a control surface, and much more.

This is a one slot wide module. Inputs and outputs are all on 1 x female 50 pin D-type connector.

Access to each general purpose input and output can be given to any console on the Hydra2 network.

The function of each general purpose input and output is configurable and assignable via Apollo/Artemis/Summa console's which have been granted access.

LEDs

The Status LED strobes to indicate that the local software is running. The LED illuminates solidly when connection is established to the Hydra2 Interface Module in the same modular I/O chassis.

GP Inputs


8 opto-isolated inputs allow for remote control of console functions. Applying between 3 and 50 Volts, AC or DC across the + & - pins of the opto will trigger them.

If using a dry closure to trigger a GP input, note that the incoming closure should be wired to one side of an opto input only. The other side of the opto should be pulled up by linking it to the 5V pin on the connector. The other side of the closure should be wired to the 0V pin. An example of wiring a closure to GP input #1 is shown on the previous page.


GP Outputs

The WY5859 version provides 16 normally open contact closure pairs. If external equipment requires a ground for activation, rather than a closure, one side of the relay should be connected to a ground from the external equipment and the other side of the relay used as the trigger.

FRONT PANEL VIEW

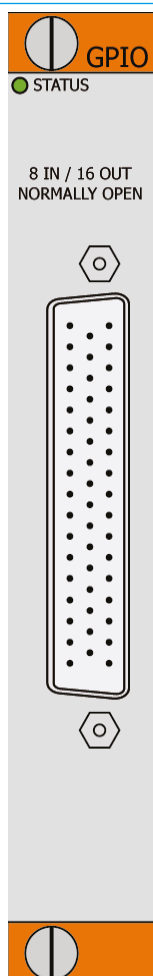

GP INPUT PINS

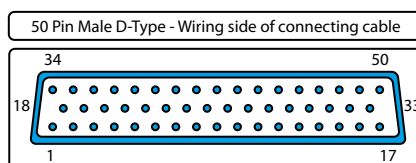

Function		Pin
GPI 1	+	1
	-	34
GPI 2	+	18
	-	2
GPI 3	+	35
	-	19
GPI 4	+	3
	-	36
GPI 5	+	20
	-	4
GPI 6	+	37
	-	21
GPI 7	+	5
	-	38
GPI 8	+	22
	-	6
Supply	+5 V	17
Supply	0 V	50

GP OUTPUT PINS

Function		Pin
GPO 1	NO +	39
	NO -	23
GPO 2	NO +	7
	NO -	40
GPO 3	NO +	24
	NO -	8
GPO 4	NO +	41
	NO -	25
GPO 5	NO +	9
	NO -	42
GPO 6	NO +	26
	NO -	10
GPO 7	NO +	43
	NO -	27
GPO 8	NO +	11
	NO -	44
GPO 9	NO +	28
	NO -	12
GPO 10	NO +	45
	NO -	29
GPO 11	NO +	13
	NO -	46
GPO 12	NO +	30
	NO -	14
GPO 13	NO +	47
	NO -	31
GPO 14	NO +	15
	NO -	48
GPO 15	NO +	32
	NO -	16
GPO 16	NO +	49
	NO -	33

See “Capacity” on page 20 for information on Modular I/O box capacity.

HYDRA2

OBSOLETE MODULAR I/O CARDS

VO5873 – DOLBY E DECODER & 2 x SDI DE-EMBEDDER (BNC+ D-TYPE)

The VO5873 can be fitted with up to 4 Dolby E decoder cards, each of which can be assigned to decode a Dolby E signal being input by any card or I/O box on the Hydra2 network. This is a 3 slot-wide card.

In addition to the Dolby E decoders, this card also offers the same functionality as the VO5841 by providing 2 SDI inputs, the audio from which can be de-embedded and distributed across the Hydra2 network. As with the VO5841, this card type can de-embed all 16 channels within SD, HD or 3G SDI signals and provides a 'thru' output to pass on the SDI input signal unchanged along with its original audio content. SDI inputs and outputs are via BNC connectors.

Although physically located on the same card as SDI inputs, the decoders are in fact fully assignable in their own right, able to decode any Dolby E signal fed into any input / I/O box (other than analogue) on the Hydra2 network, whether coming in as a standard AES pair, or embedded into a MADI or SDI stream.

Each decoder card is capable of decoding one encoded signal. The decoder cards themselves which are no longer made by Dolby (Calrec stock code 491-102) were optional extras and are no longer available to purchase which is why this module is now obsolete. This information is provided as there are customers who still have these modules.


Metadata from the signals being decoded is available via a 25 pin male D-type connector.

LEDs A–D light up green to indicate if decoder cards are fitted in the 4 available slots.


Front panel LEDs for each input light up green to indicate a valid SDI signal is being received by each SDI input.

The standard modular I/O status LED flashes green once the card has booted and lights solid green once a connection between the card and the Hydra2 interface has been established.

FRONT PANEL VIEW

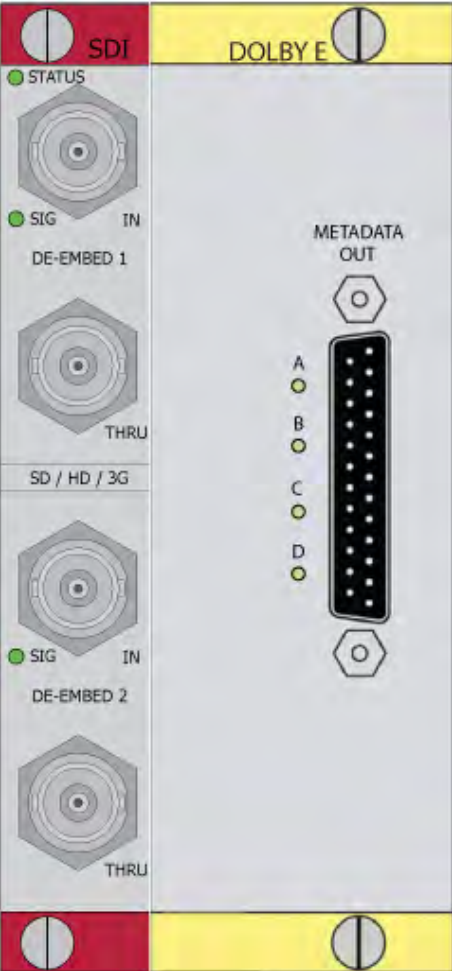

METADATA WIRING INFORMATION

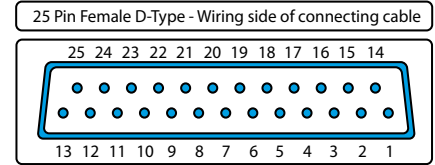

Function		Pin
Metadata Out 1	+	1
	-	14
	Ground	3
Metadata Out 2	+	2
	-	15
	Ground	16
Metadata Out 3	+	4
	-	17
	Ground	6
Metadata Out 4	+	5
	-	18
	Ground	19

SPECIFICATION

Format	SDI
Type	SD / HD / 3G
SDI Connector	BNC
Inputs	2 x SDI (16 audio channel in each)
Outputs	2 (SDI 'Thru')

HYDRA2 FIELD BOX

AD6217-2 FIELDBOX

FIELDBOX - FRONT VIEW



The Fieldbox provides 8 balanced analogue mic/line level inputs, and 8 balanced analogue line level outputs, in a compact, cost-effective package.

Enclosure

The Fieldbox is 220mm wide x 384mm deep x 40mm (<1U) high. Threaded fixing holes in the base allow the unit to be secured in place if required.

Cooling

This is a fanless design that is cooled through natural convection and radiation. If not being used in a cooled environment, please allow for 45mm (1.75") clearance on the top and sides from other heat generating equipment.

Power

The Fieldbox contains a single AC mains PSU that can be fed 100-240V AC via a rear mounted IEC connector. The IEC connector has a retaining clip that can hold some types of IEC cables in place. The cable supplied with the unit should be clipped in place.

A 10-30V DC input allows an optional external PSU to be connected to provide power redundancy if required.

Battery powered operation

The DC input is also suitable for use with batteries. Batteries can be used as a backup to the internal AC supply, or as the primary power source. There is no drain on the battery whilst the unit is fed with AC, yet switch-over from AC to DC is seamless.

System Status warnings are issued across the network and front panel LED indication is provided if the battery level is low.

A wide range of suitable batteries are commonly available from broadcast suppliers. Costs vary significantly based on run time and other factors. Calrec recommends the use of Anton Bauer G150 batteries in conjunction with their QR-UNIV XLR mount to provide a runtime in excess of 12 hours. 'Hot-swap' battery mounts are also available to fit 2 batteries that can be individually swapped out without interrupting operation.

The DC input is protected by ISO 7637-2 circuitry against surges, reverse polarity and other external power faults.

Hydra2 network connection

A pair of rear mounted SFP slots provide primary and secondary connections for a Hydra2 network. Various fibre and copper SFP modules can be supplied.


Note that SFP design varies depending on manufacturer, please ensure that SFPs are correctly latched in place after fitting them. In the event that a connection is not automatically established after hot-plugging an SFP, please reset the unit the SFP is plugged in to.

Like all other Hydra2 I/O, the Fieldbox must be given an ID, unique amongst all the I/O on the network, before being connected. The ID is a value from 1 to 255, set as a binary representation using DIP switches accessible from the rear.

For further guidance, please refer to the I/O Box Identification section, under Fixed Format I/O in the Hydra2 Installation manual.

Another DIP switch accessible from the rear sets whether the unit is to network via Hydra2 or AoIP. Please ensure this switch is set to the Hydra2 position for normal operation.

FIELDBOX - REAR VIEW

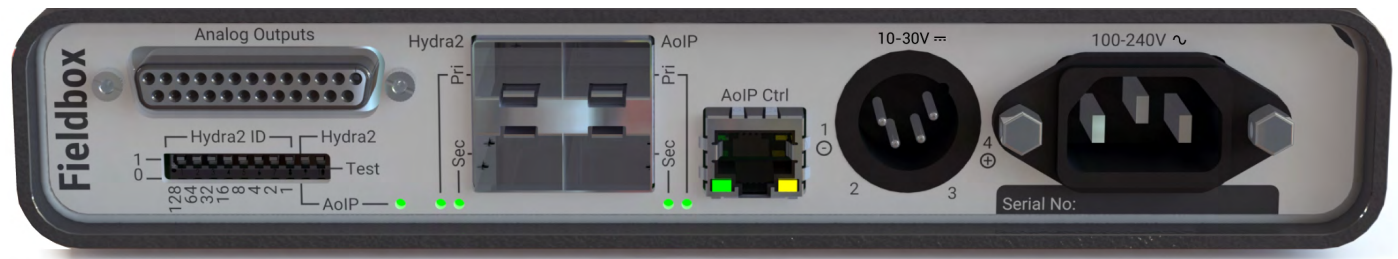

AoIP

A card slot within the unit will allow for future upgrades to AoIP networking. More information on AoIP connectivity will be provided when module options are available.

SPECIFICATION

Format	Analogue, electronically balanced
I/O	8 x Mic/line inputs + 8 x line level outputs.
Input Gain	-18 to +78dB, remotely controlled
Phantom Power	+48V remotely switchable
Input Impedance	5k
Equiv I/P noise	-126dBu
Input distortion	-1dBFS @ 1kHz - <0.004% -20dBFS @1kHz - <0.006% -60dBFS @1kHz - <0.6%
Input CMR	>80dB @1kHz
ADC/DAC	24 bit
Output balance	> 45 dB
Output impedance	<40 Ohms
GPIO	None
Height	< 1U - 40mm (1.6')
Width	220mm (8.7')
Depth	384mm (15.2')
Weight	2.5kg (5.5lbs)
AC input power	100-240V AC, 0.34-0.16A RMS, 50/60Hz, Supply current - 0.16A @ 240V, 0.30A @ 115V, 0.34A @ 100V
DC input power	10 - 30V DC, 20VA max. Supply current - 1.67A @ 12V, 0.83A @ 24V
Power dissipation (heat)	20W when fed DC 24W when fed 115-240V AC, 24.5W @ 100V AC
Operating ambient air temperature	0-40 C

STATUS LEDS

Power AC	Lights solid green when internal PSU is active.
Power DC	Light solid green when DC input valid. Flashes when outside of range.
OK	Flashes green heartbeat when connected and running. Fast flashing indicates boot/establishing comms.
+48V	One per input, lights solid red when phantom power switched on
AoIP (Rear)	Lights green if set to connect to a non Hydra2 network
Pri / Sec SFP (Rear)	Indicates network activity

DC INPUT CONNECTOR - 4 PIN XLR

Pin 1	- V DC
Pin 4	+ V DC (10-30V)

- Unit connector is male, requiring a female termination on the connecting cable

OUTPUT AUDIO CONNECTOR - 25 PIN D-TYPE, AES59 / 'TASCAM' STANDARD

Signal	Pins (+, -, Gnd)
O/P 1	24, 12, 25
O/P 2	10, 23, 11
O/P 3	21, 9, 22
O/P 4	7, 20, 8
O/P 5	18, 6, 19
O/P 6	4, 17, 5
O/P 7	15, 3, 16
O/P 8	1, 14, 2

- Unit connector is female, requiring male termination on the connecting cable.

FIELDBOX LATENCY @ 48KHZ SAMPLE RATE *

From	To	Via	Samples	=ms
AES3 inputs (SRC off)	Fieldbox Analogue Outputs	Port to port	50	1.042
	Fieldbox Analogue Outputs	channel, group, and aux, track or main output	62	1.292
		Turning SRC on adds to the above:	+ 39	+ 0.813
Fieldbox Mic/Line inputs	AES3 Outputs	Port to port	59	1.229
	AES3 Outputs	channel, group, and aux, track or main output	71	1.479
	Fieldbox Analogue Outputs	Port to port	91	1.896
	Fieldbox Analogue Outputs	channel, group, and aux, track or main output	103	2.146

HYDRA2 H2HUB

RY6211-2 H2HUB

FIGURE 1. H2HUB - FRONT VIEW



The H2Hub provides a network distribution node that can be used to connect from a router up to 4 external connections which may be I/O boxes or other Hubs to form a local array of I/O connectivity, in a compact, cost-effective package.

Enclosure

The H2Hub is 220mm wide x 284mm deep x 40mm (<1U) high. Threaded fixing holes in the base allow the unit to be secured in place if required.

Cooling

The unit has a single ultra low noise fan. Air is drawn in from the front and extracted from the rear, please allow at least 25mm (1") clearance at the front and rear of the unit for operation up to 40 deg C (104 deg F) ambient temperature.

Power

The H2Hub contains a single AC mains PSU that can be fed 100-240V AC via a rear mounted IEC connector. The IEC connector has a retaining clip that can hold some types of IEC cables in place. The cable supplied with the unit should be clipped in place.

A 10-30V DC input allows an optional external PSU to be connected to provide redundancy if required.

Battery powered operation

The DC input is also suitable for use with batteries. Batteries can be used as a backup to the internal AC supply, or as the primary power source. There is no drain on the battery whilst the unit is fed with AC, yet switch-over from AC to DC is seamless.

A wide range of suitable batteries are commonly available from broadcast suppliers. Costs vary significantly based on run time and other factors. Calrec recommends the use of Anton Bauer G150 batteries in conjunction with their QR-UNIV XLR mount to provide a runtime in excess of 12 hours. 'Hot-swap' battery mounts are also available to fit 2 batteries that can be individually swapped out without interrupting operation.

The DC input is protected by ISO 7637-2 circuitry against surges, reverse polarity and other external power faults.

Hydra2 network connections

A pair of front mounted SFP slots provide primary and secondary connections back to routers in a Hydra2 network.

Note, only fibre SFPs can be used for H2Hub connections.

Primary and Secondary SFP slots are also provided for up to 4 downstream ports which can either be connected to Calrec I/O Units or other H2Hubs.

The H2Hub must be given an ID which is unique on the network, before being connected. The ID is a value from 1 to 64, set as a binary representation using DIP switches accessible from the rear. Note that Hub ID's are different to I/O Box HID's so no conflict occurs if an I/O Box and a Hub have the same ID.

Two other switches are also provided on the rear of the unit the first is the Split / Contained switch. The unit is normally used in Contained mode where both Primary and Secondary connections are made to the same hub. In this mode the Upper row of SFP's are used for Primary connections and the lower row used for Secondary connections.

In certain situations extra redundancy may be provided by switching this to 'Split' the Hub. In this mode each Hub only manages either the Primary or Secondary connection which is determined by the Pri /Sec switch adjacent. Another hub is then required to be in 'Split' mode with the same ID to manage the other paired connection for mission critical I/O redundancy.

FIGURE 2. H2 HUB - REAR VIEW



Note that in 'Spilt' Mode , only the Upper row of SFP's are used for both Primary and Secondary connections. It is also worth noting that when updating a H2Hub in a split router core system, the user is required to go through mac 3,4,5 and update that way. As these mac ports cannot see the opposite side of its network, it is only possible to update

half (Primary or Secondary) of a H2Hub at any one time and you cannot see the secondary hub unless you are connected directly to the secondary MCs.

The Front Panel LEDs indicate the mode of operation and which SFP's are active.

Config Port

A Cat 5e connector on the rear of the unit is used for factory setup and diagnostics.

STATUS LEDS

Power AC	Lights solid green when internal PSU is active.
Power DC	Light solid green when DC input valid. Flashes when outside of range.
OK	Flashes green heartbeat when connected and running. Fast flashing indicates boot/establishing comms.
Pri Sec RTR	Light solid green when valid connections have been made to the Routers SFP ports.
Pri Sec 1-4	Light solid green when valid connections have been made to the 1 thru 4 I/O SFP ports.
Sec (Split)	Lights Yellow if Hub set to Sec in Split Mode

SPECIFICATION

Height	< 1U - 40mm (1.6')
Width	220mm (8.7')
Depth	284mm (11.2')
Weight	2.0kg (4.4lbs)
AC input power	100-240V AC, 0.30-0.13A RMS, 50/60Hz, Supply current - 0.13A @ 240V, 0.26A @ 115V, 0.30A @ 100V
DC input power	10 - 30V DC, 15VA max. Supply current - 1.25A @ 12V, 0.62A @ 24V
Power dissipation (heat)	15W when fed DC 19.5W when fed 100-240V AC
Operating ambient air temperature	0-40 C

DC INPUT CONNECTOR - 4 PIN XLR

Pin 1	- V DC
Pin 4	+ V DC (10-30V)

- Unit connector is male, requiring a female termination on the connecting cable

H2HUB CONNECTIVITY

Connectivity

Each hub has a dedicated upstream connection which must connect to a Master, or Slave Hydra2 router, either directly, or via other hubs. The remaining 4 downstream ports are available to connect I/O, or to another hub's upstream port. H2Hubs function similar to slave router cores, but in a portable package with low power consumption, and simple DIP switch setup, making them ideal for forming ad-hoc networks in the field, or for extending network spurs in fixed installations. Note Upstream connections cannot be made to an Expander card. Downstream connections cannot be made to a router.

Each H2Hub is capable of passing 512 channels upstream back to the router and 384 channels downstream to the I/O boxes or other H2Hubs


Localising connection points for I/O box positions means each I/O box does not need its own direct connection to a router, which can significantly reduce the overall amount of fibre that needs to be purchased and run, saving customers direct cost and time.

A H2Hub connects to a Hydra2 network via a Master or Slave router/console core, and extends each connection out via four connections to I/O boxes or other hubs. Unlike regular routers, hubs do not require a dedicated sync connection, further enhancing portability, and reducing the overhead of sync distribution.

Example:

In this example the RTR link on each hub is connected upstream to either a Router or to a Hub, *this is denoted in figure 3 by the Red dot*. The first Hub in the configuration is connected to the Router upstream. The 4 Downstream connections are either used to connect I/O units and / or to the RTR link on another Hub.

FIGURE 3. HYDRA 2 HUB - CONNECTIVITY EXAMPLE

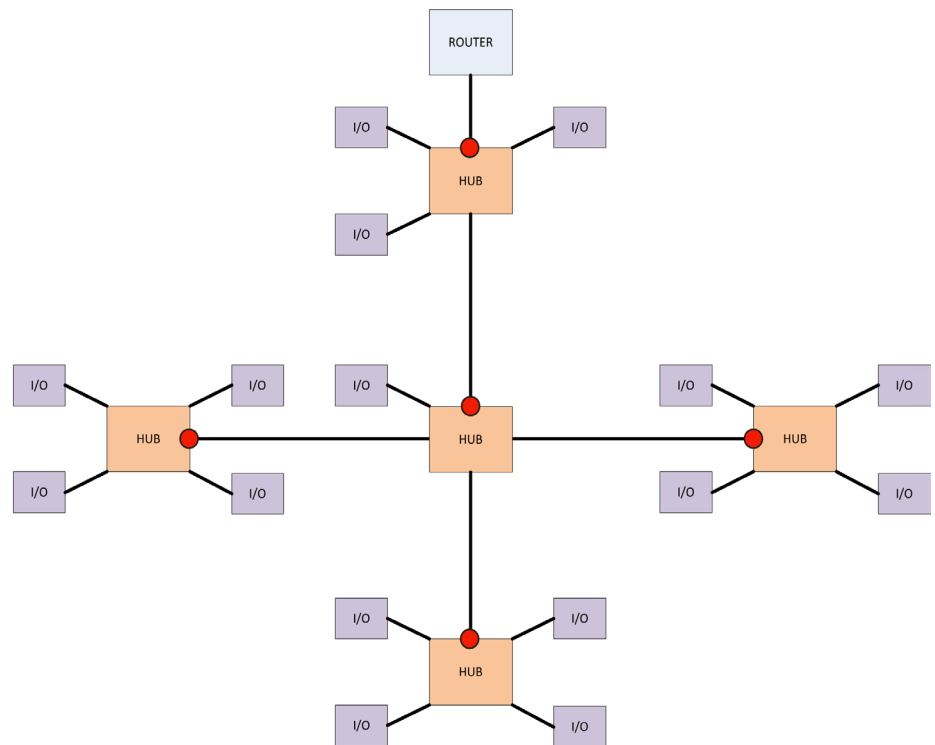

HYDRA2

AOIP INTERFACE UNIT

EG6266-2 AOIP INTERFACE UNIT

FIGURE 1. AOIP INTERFACE- FRONT VIEW


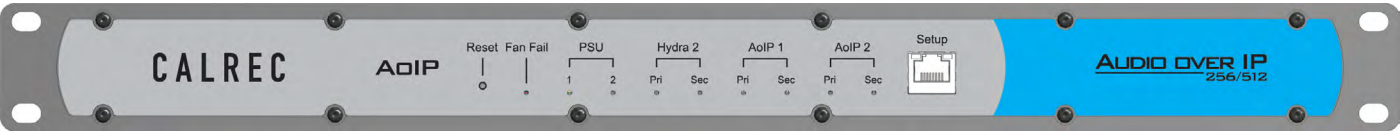


FIGURE 2. AOIP INTERFACE- REAR VIEW

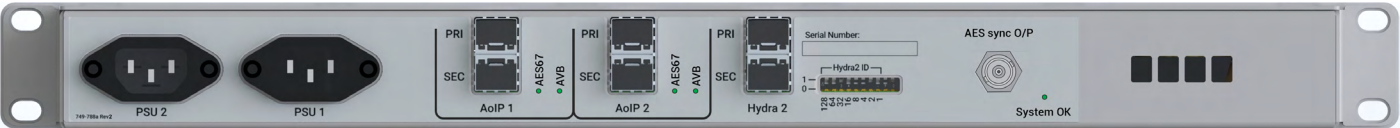

The Calrec Audio over IP unit provides a Hydra2 AoIP interface carrying up to 512 x 512 channels using AES67/ Ravenna and or AVB modules.

The unit can accommodate two modules AoIP 1 & AoIP 2 and may be fitted with one or two 256 x 256 channel AES67/ Ravenna or AVB modules, or one of each type as required.

In addition to the standard Hydra2 redundancy each module also has both a primary and secondary 1GB IP connection, supporting hitless switching for redundancy.

IP Stream management is achieved through a WEB UI.

Enclosure

The AoIP interface unit is 440mm wide x 225mm deep x 44mm (<1U) high.

Cooling

The unit has a single ultra low noise fan. Air is drawn in from the right and extracted from the rear, please allow at least 25mm (1") clearance at the right and rear of the unit for operation up to 40 deg C (104 deg F) ambient temperature.

Power

The AoIP unit contains dual AC mains PSUs for redundancy that can be fed 100-240V AC via rear mounted IEC connectors. The IEC connectors have a retaining clip that can hold some types of IEC cables in place. The cable supplied with the unit should be clipped in place.

Hydra2 network connections

A pair of rear mounted SFP slots provide primary and secondary connections back to routers in a Hydra2 network.

Primary and Secondary SFP slots are also provided for the 2 x AoIP ports and indicators are provided on the rear to show which modules have been fitted to the unit.

The AoIP unit must be given an ID which is unique on the network, before being connected. The ID is a value from 1 to 256, set as a binary representation using DIP switches accessible from the rear.

The AES sync O/P on the rear of the unit provides a PTP clock reference derived from the Internet stream. *Note: this sync O/P is not yet enabled as of 01/09/16.*

The System OK LED strobes every second to indicate that the system is actively talking to the AoIP modules and the Hydra 2 interface. or every 100ms if the Hydra 2 interface is not active.

Config Port

A Cat 5e connector on the front of the unit is used for Setup via a WEB UI.

Front Panel Reset & Status LEDs

A recessed Reset button allows the user to reset the system. A Red Fan Fail LED illuminates if the fan stops spinning. Next to this are the 2 PSU LEDs which illuminate green to show they are ON.

The Hydra2, AoIP 1 & AoIP 2 primary and secondary interface LEDs illuminate to show they are connected.

STATUS LEDs

AES67/AVB	Lights to show modules are installed.
System OK	Flashes heartbeat every second when connected and running. Fast flashing indicates no comms with Hydra 2.
Fan Fail	Lights Red to show fan not spinning.
PSU 1 & 2	Light solid green when PSU working.
Hydra2 Pri & Sec	Light solid green when valid connections made to Hydra2 SFP ports.
AoIP 1 & 2 Pri & Sec	Lights solid green when valid connections made to AoIP1 & 2 SFP ports.

SPECIFICATION

Height	< 1U - 44mm (1.73')
Width	19" Rackmount (483mm)
Depth	225mm (8.9") inc BNC
Weight	3.13kg (6.9lbs)
AC input power	100-240V AC, 50/60Hz, 0.37-0.22A RMS, Supply current - 0.22A @ 240V, 0.37A @ 100V
Power Dissipation (Heat)	42.0W @ 100-240V AC
Operating ambient air temperature	0-40 C

HYDRA2 BRIO RACK

EXTERNAL I/O RACK FOR BRIO 36

BR-IO is a 4U Hydra2 based external I/O Rack allowing for cost effective expansion of I/O for use with Brio 36 consoles.

It is intended to be placed in control/ equipment rooms, trucks, studios, and even outdoor use providing the user provides appropriate protection against the elements (flight-cases / covers / general protection). This rack has the same complement of analogue and digital I/O that can be found in a Brio 36 system.

External I/O Rack Audio Interfaces
The image below shows the BR-IO rack and the Audio interfaces available to the user from this I/O Rack are:-

- 24 x Analogue Mic/Line I/Ps,
- 16 x Analogue Line O/Ps,
- 8 x Digital AES I/Ps, with SRC,
- 8 x Digital AES O/Ps.

The Audio Specifications for the Analogue and Digital inputs and outputs are the same as those built-in to the Brio 36.

These can be found in the [“Audio Performance Specification - BRIO” on page 124.](#)

Port Patching Identification
The BR-IO has it's own ICON which appears in the I/O Boxes patching pages. The analogue inputs and outputs are prefixed by the Letter 'A' in the port patching pages and the digital inputs and outputs are prefixed by the letter 'B' for patching purposes.

For example, where the box ID is set to 434 then Analogue Mic/Line Input 3 would be identified as 434A-03. See below for a I/O Box / Port Patching example.

BR-IO PORT PATCHING EXAMPLE

Access		Desk Outputs	I/O Boxes	Hydra Patchbays																									
Fader Layout		Source: I/O Box																											
I/O Patching		<table><thead><tr><th>Number</th><th>In</th><th>Box Label</th><th>Type</th><th>Box ID</th></tr></thead><tbody><tr><td>434A-01</td><td>Mic</td><td>434</td><td>BR-IO</td><td>434</td></tr><tr><td>434A-02</td><td>Mic</td><td></td><td></td><td></td></tr><tr><td>434A-03</td><td>Mic / Line</td><td>434A-03</td><td></td><td></td></tr><tr><td>434A-04</td><td>Mic / Line</td><td>434A-04</td><td></td><td></td></tr></tbody></table>			Number	In	Box Label	Type	Box ID	434A-01	Mic	434	BR-IO	434	434A-02	Mic				434A-03	Mic / Line	434A-03			434A-04	Mic / Line	434A-04		
Number	In	Box Label	Type	Box ID																									
434A-01	Mic	434	BR-IO	434																									
434A-02	Mic																												
434A-03	Mic / Line	434A-03																											
434A-04	Mic / Line	434A-04																											
Buses & Outputs																													
Contribution																													

Hydra2 interfacing
The interface controller on the right hand side of the front panel of the unit connects the I/O to the optional Hydra2 module in a Brio 36 system either directly or via a H2Hub.

Two Hydra2 'Light' based interface ports are provided on the BR-IO for redundancy: Port 1 connects to the Primary H2 connection on a Brio 36, Port 2 connects to the Secondary Hydra 2 connection on the same Brio 36. Multiple BR-IO units may be added via a H2 Hub along with other I/O boxes from the Hydra2 range.

Hydra2 based network components interface via pluggable SFP modules, the correct type of SFP should be ordered to match the installation requirements.

AD6300 - BR-IO EXTERNAL I/O RACK.




BR-IO box ID setting

The ID for BR-IO boxes is set using the DIP switches on the controller card and is only accessible by powering the BR-IO unit off and removing the access panel on the lid of the BR-IO box. Ensure ESD precautions are observed before handling any BR-IO box cards.

ID switches on the I/O controller are orientated as shown in the image below left. The illustration on this page shows the ID switch on the modular I/O controller card from the top view. The decimal value of 39 is used for this example, and as with all externally connected I/O, each I/O box needs a unique ID to function correctly.

BR-IO CONTROLLER ID SWITCHES

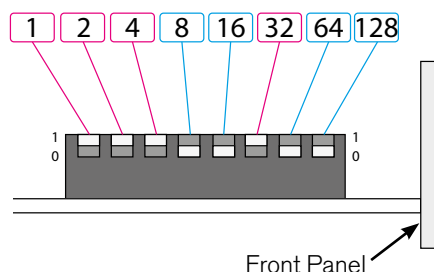

Note, always use a non-conductive tool to set the DIP switches to avoid damaging the card.


BR-IO box Power Supply

BR-IO contains two power supply units which are supplied with AC power by two independent (IEC 60320-1 C13/C14 couplers).

These dual power supplies provide full power redundancy, a feature of all Calrec products.

Although BR-IO will run with only one PSU powered on, it is recommended that, to ensure power redundancy, these two IEC inlets should be supplied by separate AC power supplies.

BR-IO HYDRA2 'LIGHT' INTERFACE CONTROLLER

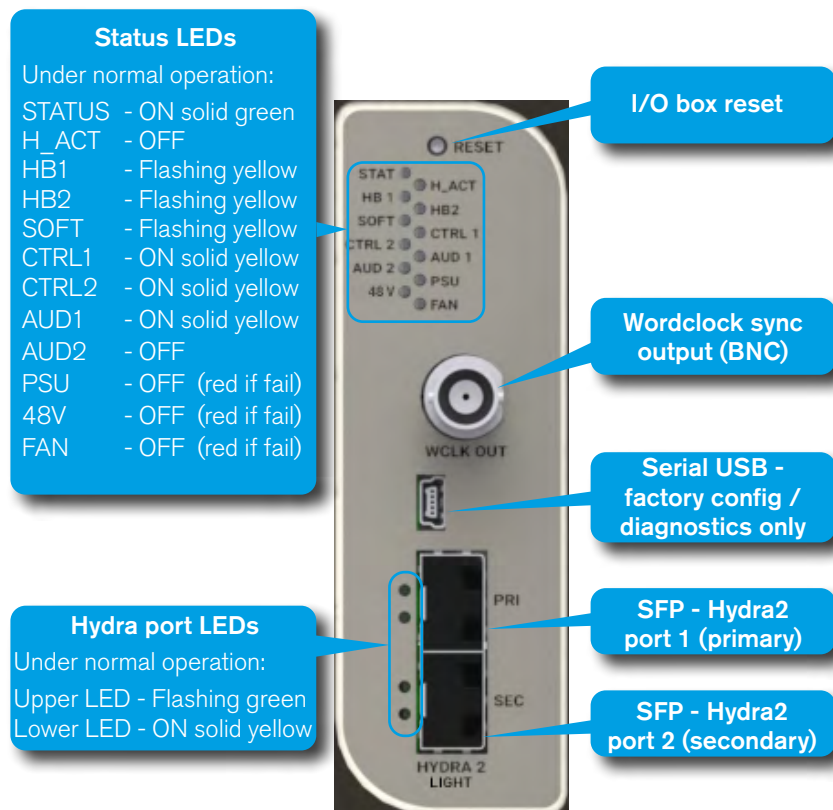

A PSU failure or a loss of AC power input will generate a system status error message.

The two PSU's employ load sharing, if one PSU fails, the other will automatically take over the full load with no loss of audio or operation.

Disconnecting the PSUs

The BR-IO rack does not contain a separate mains power switch. To safely disconnect the mains power both IEC connectors need to be removed from the rear of the unit.

Reference to Power / Environmental Specification

BR-IO has it's own Power / Environmental specification which can be found in the ["Power/Environmental Specifications - BRIO Rack"](#) on page 118.

POWER/ENVIRONMENTAL SPECIFICATIONS – BRIO RACK

BR-IO EXTERNAL I/O RACK

BR-IO	240V Operation	115V Operation	100V Operation
Supply Current	0.33 A	0.53 A	0.60 A
Power Factor	0.57	0.77	0.78
Power Dissipation (Heat)	46 W	47 W	47 W
Cooling	This 4U Rack is cooled by a quiet outtake fan on the rear of the unit. The air intake is on the side vents of the unit. The side panels of the BR-IO unit should be unobstructed with at least 50mm (2") clearance to allow airflow. No clearance is required above or below the unit.		
Operating Ambient Air Temperature	0°C - 40°C		
Height	4U		
Width	19" rackmount (483 mm)		
Depth	389mm (15.3")		
Weight	8.6kg		

HYDRA2 **SPECIFICATION**

AUDIO PERFORMANCE SPECIFICATION-GENERAL

AES3 INPUT SPECS

Formats Supported	AES/EBU (AES3) 24-bit. Also suitable for use with SPDIF (IEC958 type 2) signals
Interface, Input Sensitivity	75 Ω unbalanced (BNC), 0.3 V–1.2 V Pk–Pk 110 Ω balanced (XLR or D-Type), 0.2 V–7.0 V Pk–Pk
Sample Rate Conversion (SRC)	24-bit switchable on all AES inputs, SRC Range 30kHz to 100kHz
SRC THD+N	-117 dB @ 1 kHz, 0.00014%

AES3 OUTPUT SPECS

Formats Supported	AES/EBU (AES3) 24-bit
Interface	110 Ω transformer balanced 3.5 V Pk–Pk (nominal) into 110 Ω load 75 Ω unbalanced 1 V Pk–Pk (nominal) into 75 Ω load
Jitter	<0.015UI (2.5ns) peak

ANALOGUE INPUT SPECS

Analogue to Digital Conversion	24-bit
Input	Electronically Balanced
Input Impedance	2k Ω for Mic gains* 10 k Ω for Line gains*
Sensitivity	+18 / -78 dB on Mic/Line Inputs
Equivalent Input Noise	-127 dB (150 Ω source)**
Distortion	-1 dBFS @ 1 kHz – Better than 0.006% -20 dBFS @ 1 kHz – Better than 0.003% -60 dBFS @ 1 kHz – Better than 0.3%
Frequency Response	20 Hz to 20 kHz +/- 0.5 dB on Mic/Line inputs
Input CMR (Common Mode Rejection)	>75 dB (Typical 85 dB) on Mic/Line inputs***
Crosstalk	-105dB or better on adjacent channels with 0dBFS tone at 1kHz on Source
Notes	Analogue input for 0 dBFS can be pre-set globally to +28, +24, +20, +18 or +15 dBu Pre-fader headroom on mic inputs is adjustable globally from +24 to +36 dB in 2 dB steps For analogue inputs/outputs the system can handle analogue levels of up to +27 dBu from analogue input to analogue output at line up.hese levels must be attenuated in the system before they are fed to digital outputs.

* The AD6057 8 x mic/line modular I/O card has a fixed input impedance of 5k Ω
The AD6365 Transformer Isolated Mic/Line modular I/O card has an input impedance of 1.6k Ω in Mic mode and >6.2k Ω in Line mode

** EIN of 126dB for AD6057

*** The AD6365 Transformer Isolated Mic/Line modular I/O card has an input CMR >100dB in Mic mode

ANALOGUE OUTPUT SPECS

Digital to Analogue Conversion	24-bit
Output Balance	Electronically Balanced, 20 Hz to 20 kHz Better than -35 dB, typically -45 dB
Output Impedance	<40 Ω
Distortion	-1 dBFS @ 1 kHz – Better than 0.006% -20 dBFS @ 1kHz – Better than 0.003% -60 dBFS @ 1 kHz – Better than 0.3%
Frequency Response	20 Hz to 20 kHz +/- 0.25 dB
Notes	Analogue output for 0 dBFS matches input setting into > 1 k Ω (+24 dBu max into 600 Ω)

AUDIO PERFORMANCE DATA

Digital to Digital (AES3) Distortion	-1 dBFS, 20 Hz to 10 kHz – Better than 0.0001%
Digital to Digital (AES3 with SRC) Distortion	-1 dBFS, 20 Hz to 10 kHz – Better than 0.0002%
Frequency Response (Digital Input to Output)	There is no filtering on digital outputs. A signal routed from digital input to output is unchanged.
Frequency Response (Analogue Input to Output)	20 Hz to 20 kHz +/- 0.5 dB
Fader Off Isolation	22 Hz to 22 kHz – Better than -132 dB

SYNCHRONISATION INPUTS

48 kHz Synchronisation	NTSC/PAL Video Tri-Level Internal Crystal Reference TTL Wordclock (48 kHz) AES/EBU (AES3) Digital Input (48 kHz)
------------------------	--

LATENCY @ 48KHZ / 96KHZ SAMPLE RATE *

From	To	Via	Samples	@48kHz	@96kHz
AES3 inputs (SRC off)	AES3 Outputs	Port to port	18	0.375ms	0.188ms
	AES3 Outputs	channel, group, and aux, track or main output	30	0.625ms	0.313ms
	Analogue Outputs	Port to port	65	1.354ms	0.677ms
	Analogue Outputs	channel, group, and aux, track or main output	77	1.604ms	0.802ms
		Turning SRC on adds to the above:	+ 39	+ 0.813ms	+ 0.407ms
Mic/Line inputs	AES3 Outputs	Port to port	43	0.896ms	0.448ms
	AES3 Outputs	channel, group, and aux, track or main output	55	1.146ms	0.573ms
	Analogue Outputs	Port to port	90	1.875ms	0.938ms
	Analogue Outputs	channel, group, and aux, track or main output	102	2.125ms	1.063ms

* Note: These latency figures are for a system with a single Router/DSP core. Add 2 samples for each input, and 2 samples for each output, for each additional core in the relevant part of the signal path.

DYNAMIC RANGE FOR ANALOGUE AND AES3 I/O (INPUTS)

HYDRA2 Analogue INPUTS	system set for				
	to Digital Outputs with 0 dB gain	+18 dBu = 0 dBFS		110 dB	
		+24 dBu = 0 dBFS		116 dB	
	to Analogue Outputs with 0 dB gain *	N/A		118 dB	
HYDRA2 AES3 UNBALANCED DIGITAL INPUTS	system set for	SRC on I/P		SRC on I/P	
	to Digital Outputs with 0 dB gain	N/A	off	138 dB	on 130 dB
	to Analogue Outputs with 0 dB gain	+18 dBu = 0 dBFS	off	111 dB	on 111 dB
		+24 dBu = 0 dBFS	off	117 dB	on 117 dB
HYDRA2 AES3 BALANCED DIGITAL INPUTS (MODULAR I/O ONLY)	system set for	SRC on I/P		SRC on I/P	
	to Digital Outputs with 0 dB gain	N/A	off	138 dB	on 130 dB
	to Analogue Outputs with 0 dB gain	+18 dBu = 0 dBFS	off	111 dB	on 111 dB
		+24 dBu = 0 dBFS	off	117 dB	on 117 dB

* The analogue to analogue dynamic range is achieved because the system can accept analogue signals of up to +28 dBu from input to output at 0 dB gain. Obviously, an analogue input of up to +28 dBu must be attenuated to output this digitally, but this attenuation will maintain the Dynamic Range of the input, as the analogue input noise will be attenuated by the same amount as the signal, and the analogue input noise will still be dominant above the noise floor of the digital system.

DYNAMIC RANGE FOR ANALOGUE AND AES3 I/O (OUTPUTS)

HYDRA2 Analogue OUTPUTS from Digital Inputs with 0 dB gain from Analogue Inputs with 0 dB gain *	system set for	SRC on I/P		SRC on I/P	
	+18 dBu = 0 dBFS	off	111 dB	on	111 dB
	+24 dBu = 0 dBFS	off	117 dB	on	117 dB
	N/A	N/A	118 dB		
HYDRA2 AES3 UNBALANCED DIGITAL OUTPUTS from Digital Inputs with 0 dB gain from Analogue Inputs with 0 dB gain	system set for	SRC on I/P		SRC on I/P	
	N/A	off	138 dB	on	130 dB
	+18 dBu = 0 dBFS	N/A	110 dB	N/A	
	+24 dBu = 0 dBFS	N/A	116 dB	N/A	
HYDRA2 AES3 BALANCED DIGITAL OUTPUTS (MODULAR I/O ONLY) from Digital Inputs with 0 dB gain from Analogue Inputs with 0 dB gain	system set for	SRC on I/P		SRC on I/P	
	N/A	off	138 dB	on	130 dB
	+18 dBu = 0 dBFS	N/A	110 dB	N/A	
	+24 dBu = 0 dBFS	N/A	116 dB	N/A	

* The analogue to analogue dynamic range is achieved because the system can accept analogue signals of up to +28 dBu from input to output at 0 dB gain. Obviously, an analogue input of up to +28 dBu must be attenuated to output this digitally, but this attenuation will maintain the Dynamic Range of the input, as the analogue input noise will be attenuated by the same amount as the signal, and the analogue input noise will still be dominant above the noise floor of the digital system.

AUDIO PERFORMANCE SPECIFICATION - BRIO

BRIO AES3ID UNBALANCED DIGITAL INPUTS

Format	AES/EBU (AES3) 24-bit. Also suitable for use with SPDIF (IEC958 type 2) signals
Interface	75 Ohm unbalanced (BNC), 0.3V-1.2V Pk-Pk
Sample Rate Conversion	24-Bit switchable on all AES inputs
SRC THD+N	-116dB @ 1kHz, 0.00015%

BRIO AES3ID UNBALANCED DIGITAL OUTPUTS

Format	AES/EBU (AES3) 24-bit
Interface	75 Ohm unbalanced 1V Pk-Pk (nominal) into 75 Ohm load (BNC)
Jitter	<0.018UI (3.2ns) peak

BRIO ANALOGUE INPUT SPECS

Analogue - Digital Conversion	24 Bit
Input	Electronically Balanced
Input Impedance	5.4k Ohms for mic/line level gain settings
Sensitivity	+18 / -78dB for Mic/Line Inputs
Equivalent Input Noise	-126dB, 22kHz bandwidth, max gain (150 Ohm source)
Distortion	-1dBFS @ 1kHz - Better than 0.003% -20dBFS @ 1kHz - Better than 0.036% -60 dBFS @ 1kHz - Better than 0.2%
Frequency Response	20Hz to 20kHz +/- 0.5dB on Mic/Line Inputs
Input CMR (Common Mode Rejection)	>75dB (Typical 85dB) on Mic/Line inputs
Notes	Analogue input for 0dBFS can be pre-set globally to +28, +24, +22, +20, +18 or +15dBU Pre-fader headroom on mic inputs is adjustable globally from +24 to +36dB in 2dB steps For analogue inputs/outputs the system can handle analogue levels of up to +27 dBu from analogue input to analogue output at line up These levels must be attenuated in the system before they are fed to digital outputs

BRIO ANALOGUE OUTPUT SPECS

Digital - Analogue Conversion	24 Bit
Output Balance	Electronically balanced. 20Hz to 20KHz, better than -35dB, typically -45dB
Output Impedance	<40 Ohms
Distortion	-1dBFS @ 1kHz - Better than 0.002% -20dBFS @ 1kHz - Better than 0.002% -40 dBFS @ 1kHz - Better than 0.2%
Frequency Response	20Hz to 20kHz +/- 0.25dB
Notes	Analogue output for 0dBFS matches input setting into >1kOhms (+24dBu max into 600 Ohms)

DYNAMIC RANGE FOR BRIO ANALOGUE AND AES3 (INPUTS)

Built-In Analogue INPUTS	system set for				
	to Digital Outputs with 0 dB gain	+18 dBu = 0 dBFS		108 dB	
		+24 dBu = 0 dBFS		114 dB	
	to Analogue Outputs with 0 dB gain *	N/A		112 dB	

Built-In AES3 UNBALANCED DIGITAL INPUTS	system set for	SRC on I/P		SRC on I/P		
	to Digital Outputs with 0 dB gain	N/A	off	141 dB	on	134 dB
	to Analogue Outputs with 0 dB gain	+18 dBu = 0 dBFS	off	109 dB	on	109 dB
		+24 dBu = 0 dBFS	off	115 dB	on	115 dB

* The analogue to analogue dynamic range is achieved because the system can accept analogue signals of up to +28 dBu from input to output at 0 dB gain. Obviously, an analogue input of up to +28 dBu must be attenuated to output this digitally, but this attenuation will maintain the Dynamic Range of the input, as the analogue input noise will be attenuated by the same amount as the signal, and the analogue input noise will still be dominant above the noise floor of the digital system.

DYNAMIC RANGE FOR BRIO ANALOGUE AND AES3 (OUTPUTS)

Built-In Analogue OUTPUTS	system set for	SRC on I/P		SRC on I/P		
	from Digital Inputs with 0 dB gain	+18 dBu = 0 dBFS	off	109 dB	on	109 dB
		+24 dBu = 0 dBFS	off	115 dB	on	115 dB
	from Analogue Inputs with 0 dB gain *	N/A	N/A	112 dB		

Built-In AES3 UNBALANCED DIGITAL OUTPUTS	system set for	SRC on I/P		SRC on I/P		
	from Digital Inputs with 0 dB gain	N/A	off	141 dB	on	134 dB
	from Analogue Inputs with 0 dB gain	+18 dBu = 0 dBFS	N/A	108 dB	N/A	
		+24 dBu = 0 dBFS	N/A	114 dB	N/A	

* The analogue to analogue dynamic range is achieved because the system can accept analogue signals of up to +28 dBu from input to output at 0 dB gain. Obviously, an analogue input of up to +28 dBu must be attenuated to output this digitally, but this attenuation will maintain the Dynamic Range of the input, as the analogue input noise will be attenuated by the same amount as the signal, and the analogue input noise will still be dominant above the noise floor of the digital system.

OPERATIONAL SPECIFICATION

FIGURE 1 - HYDRA2 FIXED FORMAT SPECIFICATIONS

Powering	<p>The 1U, 2U, 3U and 4U boxes have two AC power inlets each powering an internal PSU. Although the boxes will operate with one inlet supply we recommend both inlets are powered. This will ensure continued operation should a PSU or AC source fail.</p> <p>The operating AC supply voltage is 100V - 240V +/-10%.</p> <p>The peak inrush current is limited (cold start). Figures are available for all units. This reduces the chance of a nuisance trip or fuse blow from power up. The RMS quiescent current figures are available for all types of I/O box.</p>
Power Factor	<p>All units have less than 75W of input power. The internal power supplies fitted have passive filtering (as opposed to active power factor correction) to reduce the harmonics to within the limits of the standard EN61000-3-2. At the time of writing the standard does not apply to equipment <75W. If the lower limit is ever reduced the units will be compliant and as such are future proof.</p>
Heat Output and Efficiency	<p>The Heat output from the boxes depends on the supply voltage and loading. Typically it is 0.55 times the RMS VA (Volts x Amperes) at 230V and 0.7 times the RMS VA at 115V.</p> <p>The heat output figures are available for all types of I/O boxes.</p> <p>The low power PSU efficiency again is dependant on supply voltage and loading, generally >70%.</p>
Cooling	<p>The 2U, 3U & 4U boxes keep their operating temperature under control with fan assistance. Operation is not dependant on the fan; it is there to extend the operating life of the unit. There is an 80mm low power, low speed and low noise fan mounted in the right side of the boxes viewed from the front. The fan is speed monitored so if it slows down or stops a warning is given. The air intake is at the left side of the boxes viewed from the front and the air outtake on the right. At least 50mm (2") clearance must be maintained for these vents. The 1U I/O boxes have sufficient surface area to radiate the heat out so no fan is required. Any boxes may be mounted in an open bay providing the ambient air temperature is within limits (see below). The boxes may also be housed in any air conditioned bay.</p>
Operating Ambient Air Temperature	0°C 40°C
Relative Humidity	5% – 90% Non-condensing

FIGURE 2 - HYDRA2 MODULAR I/O SPECIFICATIONS

Powering	<p>The 3U Stagebox I/O box has two pluggable AC-48V DC power modules fitted in the back of the unit. Each power module has four retaining screws, the screws can be released or tightened by hand or with an appropriate sized cross head or straight blade driver. Although the box will operate with one inlet supply we recommend both inlets are powered. This will ensure continued operation should a PSU or AC source fail. When both power modules have an AC supply the load is shared.</p> <p>The operating AC supply voltage is 100V - 240V +/-10%.</p> <p>The inrush current to each power module is actively limited. At 115V the maximum current is 6.5A and at 230V the maximum current is 13A. This reduces the chance of a nuisance trip or fuse blow from power ups, dips and interruptions.</p> <p>The power requirement (VA) depends on the type and quantity of I/O modules fitted (up to 20 maximum). The highest it can be is 200W. The RMS quiescent current figures for a given input voltage are available for all configurations of I/O box.</p>
Power Factor	<p>The internal power supplies fitted have active power factor correction to ensure the harmonics are within the limits of the standard EN61000-3-2. A good power factor brings the apparent power down closer to the real power and is more efficient. It also provides a more sinusoidal current flow with a much reduced peak magnitude in the AC distribution cables, this produces much less low frequency noise from the cables that could otherwise couple into sensitive signal paths.</p>
Heat Output and Efficiency	<p>The Heat output from the box depends on the type and quantity of I/O modules fitted. The highest it can be is 185W. A good rule of thumb for these units is $0.9 \times \text{VA (RMS)}$.</p> <p>The PSU efficiency is dependant on loading. The efficiency improves with more I/O modules fitted. Most configurations will be between 75 - 88%.</p>
Cooling	<p>The 3U box keeps its operating temperature under control with fan assistance. Each of the two power modules has an 80mm fan mounted externally on its rear panel. The speed of the fans is under internal temperature control. Boxes equipped with Mic Input and/or AES modules are lower power so the fans will run slow for use in studios etc. Boxes equipped with higher density Line In/Out and/or SDI modules are higher power so the fans will run faster as required. This configuration of box is intended for use where fan noise isn't an issue. The box has been designed so that if an AC source or a PSU should fail, both fans will continue to run normally so the cooling is maintained. The fans are speed monitored so if one goes too slow or stops a warning is given. The air intake is at the underside of the box but the design of the box allows air in from the sides to the same area when mounted against a flat surface. It is essential that the box is not mounted on anything like carpet or soft furnishings as this will restrict or block the air intake. The air outtake is directly from the fans on the rear of the unit. At least 50mm (2") clearance must be maintained for the side and rear vents. The box may be mounted in an open bay providing the ambient air temperature is within limits (see below). The box may also be housed in any air conditioned bay.</p>
Operating Ambient Air Temperature	<p>0°C - 35°C</p>
Relative Humidity	<p>5% – 90% Non-condensing</p>

Calrec Audio Ltd

Nutclough Mill
Hebden Bridge
West Yorkshire
England UK
HX7 8EZ

Tel +44 (0)1422 842159
Fax +44 (0)1422 845244
Email Enquiries@calrec.com

calrec.com

(926-153 Iss.28)