

IRSE-S drive (type 4)

move iris switch to A

engage Zoom and focus levers to servo under drive

Hold **memo** button and Power on the lens

release after 3 seconds

then

push auto iris button

Push Aux button

push RET button

Push VTR

lens zoom and iris and if full servo the focus will all move