

Installation Instructions for DIO-1616T-PE and PIO-16/16T(PCI)H GPI/O Boards

NOTE

The installation software must be installed with the GPI/O card *not* inserted into the unit. If it is in the unit, remove it. Also note that Lyric 6.14.1228 or up is required.

1. Run the installation software from the disk. Do not change any of the default settings.
2. Shut down the unit and install the GPI/O card.
3. Power on the unit. You should get a message that new hardware is detected and the Found New Hardware Wizard should begin.
4. In the first dialog box, for the question, "Can Windows connect to Windows Update to search for software?" select the following option: "No, not this time." Click Next.
5. In the next dialog box, select the following option: "Install the software automatically (Recommended)." Click Next.
6. The next dialog box should indicate that the software is being installed. When complete, click Finish.
7. Installation is complete.

NOTE

Lyric will allow you to set any of the four ports (of eight I/Os each) as inputs or outputs. However, the GPI board will only function with Ports 0 and 1 as dedicated input ports and Ports 2 and 3 as dedicated output ports.

8. You may test the GPI/O board using the GPI test functionality in Lyric.

Both boards have the same connector shape and pin-outs, which are included in a PDF on the CD.