

Instructions Email forward

There is. You can use our Multicam Debug tool to make it easy on you ([MulticamDebugCollec_83.27.zip](#)).

[see enclosed file in box folder. Password to unzip is “evs”]

1. Go to the OptionJson tab
2. Type in your server's PCLAN IP address at the top right (or click on “discover”)
3. Click on “get current config” and then start
4. Add or remove the “NAT disabled” parameter to the current active config using the up and down arrow buttons
5. Make its value enabled true or false as needed
6. Use the dropdown and select “send newoptions and restart server” and click start

[the application will ask for a password to apply settings, “evs!!!”]

