

When connecting Multiple XNet HUBS together there are a few considerations to remember :

1. The MASTER HUB MUST contain at least 1 XT Server on it to function. Without an XT Server running on the HUB, the HUB does not fully start.
2. All SLAVE HUBS MUST connect directly to the MASTER HUB, NOT to another SLAVE HUB.
3. All SLAVE HUBS MUST use branch 1 as their uplink to the MASTER HUB

