




User's Manual

Version 3.01 - July 2009

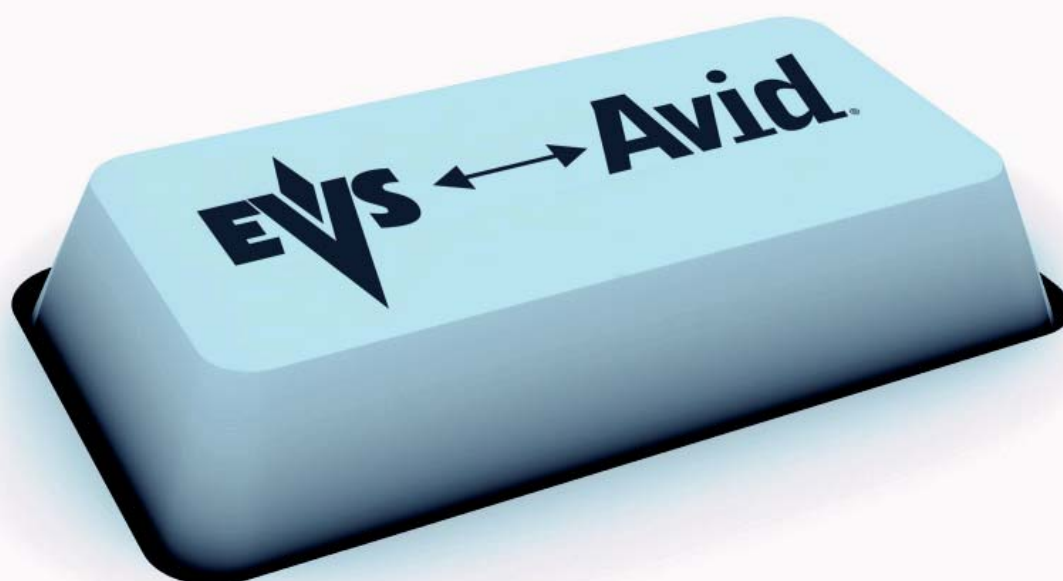

EVS and Avid Integration

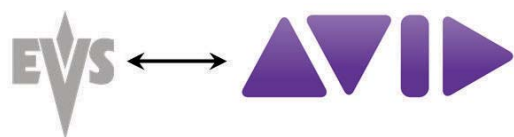

		Avid-EVS Integration
<u>Authors:</u> Serge Comes & Olivier Fettweis		<u>Object :</u> Workflows, installation & User's Manual
<u>Date</u> 08/07/2009	<u>Version</u> 3.01	

1 HISTORY

Version	Date	Author	Description
1.00	18/09/2006	Serge Comes	Creation
1.01	3/10/2006	Serge Comes	XBrowse/XStore limitation
2.00	10/04/2007	Serge Comes	DNxHD & Interplay integration
2.01	10/05/2007	Serge Comes	Update & corrections with XT package v8.04
2.02	4/06/2007	Serge Comes	Corrections
2.03	20/06/2007	Serge Comes	Release 1.2.2 (WG4) & 2.1.1 (Interplay Transfer v1.1.0)
2.04	05/07/2007	Serge Comes	Release 2.2.0 (Interplay Transfer v1.1.2) & load balancing with multi Transfer Manager
2.05	03/08/2007	Serge Comes	Update with Release Package Multicam 8.04.27
2.06	09/11/2007	Serge Comes	New EVS Avid Tools v1.3.3 & v2.3.3 for Package Multicam 8.04.33
2.07	28/01/2008	Olivier Fettweis	Beta 2.4.3 (interplay v1.1.6) & Multicam 9
2.08	01/03/2008	Serge Comes	Avid Interplay v1.2.1, Avid FTP DHM, EVS-Avid Quick setup
2.09	09/04/2008	Serge Comes	Multicam 9 package release, Avid PB server nicknames
2.10	24/07/2008	Olivier Fettweis	Multicam 10 package release and IPD5 referencing, Avid PB server
2.11	25/08/2008	Olivier Fettweis	Package Multicam 9.00.70
2.12	21/11/2008	Olivier Fettweis	Locator and catalog (for IPD5) Video Mixdown (2 video Tracks) Log description + Testing part New Avid Play Back Server Avid MXF OPATOM workflow Avid Tape Metadata for Ingest
2.13	30/01/09	Olivier Fettweis	Creation of folder into interplay Access – Interplay 1.5
3.0	07/04/09	Olivier Fettweis	Multicam 10.01 and IPD5.5.

			Workflow WebService Review of all the document
3.01	08/07/09	Olivier Fettweis	Added DVCPRO support

2 TABLE OF CONTENT

1	<u>HISTORY</u>	<u>1</u>
2	<u>TABLE OF CONTENT.....</u>	<u>3</u>
3	<u>OBJECTIVE OF THE DOCUMENT.....</u>	<u>6</u>
4	<u>MAIN FEATURES</u>	<u>7</u>
5	<u>VERSIONS COMPLIANCE MATRIX.....</u>	<u>8</u>
5.1	AVID APIs TM	8
5.2	AVID APIs WEBSERVICE	8
5.3	AVID SOFTWARE	9
5.4	EVS SOFTWARE	10
6	<u>AVID ARCHITECTURES.....</u>	<u>11</u>
7	<u>WORKFLOWS.....</u>	<u>12</u>
7.1	IMPORT IMX OP1A WORKFLOW.....	13
7.2	AVID MXF OPATOM WORKFLOW.....	14
7.3	TRANSFER MANAGER/ENGINE WORKFLOW	15
7.3.1	EVS TO AVID (INGEST)	16
7.3.2	CLIP “PUSH” STREAMING: IP DIRECTOR INTERFACE & EVS AVID BROWSER IN FTP MODE ..	17
7.3.3	CLIP “PUSH” VIA BACKED UP FILES : EVS AVID BROWSER OR XFILE INTERFACE	21
7.3.4	CLIP “PULL” VIA BACKED UP FILES ON MEDIA COMPOSER	27
7.3.5	CLIP “PULL” STREAMING FROM XT[2] SERVER ON MEDIA COMPOSER	30
7.3.6	LIVE FEED “STREAMING” TO AVID : XSTREAM INTERFACE OR XTACCESS (IPD INGEST SCHEDULER).....	31
7.3.7	AVID TO EVS (SEND TO PLAYBACK)	33
7.4	WEBSERVICE EVS-AVID WORKFLOW.....	36
7.4.1	CLIP TRANSFER.....	36
7.4.2	EDL TRANSFER.....	37
7.4.3	RESTORE.....	39
7.4.4	LIMITATION	40
8	<u>INSTALLSHIELDS.....</u>	<u>41</u>
8.1	EVS AVID TOOLS.....	41
8.2	AVID TRANSFER MANAGER OR ENGINE CLIENT.....	46
8.3	AVID INTERPLAY WEBSERVICE.....	49
9	<u>EVS-AVID QUICK CHECKUP</u>	<u>51</u>
9.1	SIMPLIFIED PROCEDURE	51
9.1.1	INGEST	51
9.1.2	SEND TO PLAYBACK	51
9.2	WINDOWS NET WORKING.....	52
9.3	AVID TRANSFER MANAGER (WG4) / TRANSFER ENGINE (INTERPLAY).....	53

9.4	XFILE / XSTREAM SETUP.....	55
9.5	EVS PLAYBACK SERVER SETUP	56
9.6	EVS AVID BROWSER SETUP	57
9.7	MEDIA COMPOSER / NEWS CUTTER SETUP.....	58
9.8	USEFUL INFORMATION	59
10	<u>DETAILED INSTALLATION AND CONFIGURATION.....</u>	<u>60</u>
10.1	EVS IPDIRECTOR	61
10.2	AVID TRANSFER MANAGER SERVER.....	63
10.3	XFILE/XSTREAM & XTACCESS.....	68
10.4	EVS AVID BROWSER	73
10.5	EVS PLAYBACK SERVER	77
10.5.1	SHARED DRIVE	83
10.5.2	XT GIGE.....	86
10.5.3	AUDIO/VIDEO FILLER IN SEND TO PLAYBACK DHM	90
10.6	MEDIA COMPOSER CONFIGURATION	91
10.6.1	EVS TO AVID WORKFLOWS	91
10.6.2	EXPORT AVID TO EVS WORKFLOWS (EVS PLAYBACK SERVER)	91
10.7	AVID INTERPLAY WEBSERVICES.....	94
10.7.1	CONFIGURING THE AVID INTERPLAY WS PORT.....	94
10.7.2	CONFIGURING THE WORKGROUP NAME TO SERVER MAPPING	95
10.7.3	CONFIGURATION OF XTACCESS.....	96
11	<u>LOG DESCRIPTION.....</u>	<u>98</u>
11.1	EVS Log.....	98
11.1.1	ON THE CLIENT COMPUTER	98
11.1.2	ON THE SERVER COMPUTER.....	100
11.1.3	ON THE SEND TO PLAY BACK SERVER COMPUTER	101
11.2	AVID LOG	102
11.3	TESTING	102
12	<u>EVS AND AVID NETWORKING</u>	<u>105</u>
12.1	RECOMMENDED INTERCONNECTIVITY	105
12.2	NETWORKING CONFIGURATION RULES	106
12.2.1	TRANSFER MANAGER SERVER	106
12.2.2	EVS DEVICES.....	106
12.3	DNS CONFIGURATION	107
12.4	WORKFLOW NETWORKING CONSIDERATIONS.....	107
12.4.1	XTACCESS (PUSH MODE)	107
12.4.2	EVS AVID BROWSER ON EVS DEVICE (PUSH MODE).....	108
12.4.3	EVS AVID BROWSER ON AVID EDITING STATIONS (PULL MODE)	108
12.4.4	EVS AVID PLAYBACK SERVER	108
13	<u>KNOWN BUGS, LIMITATIONS & CONSTRAINTS</u>	<u>109</u>
13.1	GENERALITIES	109
13.2	INGEST TO AVID	110
13.3	SEND TO PLAYBACK (TO EVS).....	110
13.4	TIPS	111
14	<u>WORKING WITH MULTIPLE TRANSFER MANAGER SERVERS</u>	<u>112</u>

<u>15</u>	<u>WORKING WITH AVID MEDIA MANAGER (WG 4)</u>	<u>114</u>
15.1	CLIPS SEARCH AND IMPORT TO A BIN	114
15.2	TRANSFER MANAGER	115
<u>16</u>	<u>WORKING WITH AVID INTERPLAY</u>	<u>117</u>
16.1	AVID INTERPLAY ACCESS.....	118
16.1.1	WORKSPACE/FOLDER IN INTERPLAY ACCESS	118
16.2	AVID INTERPLAY ACCESS WINDOW IN MEDIA COMPOSER.....	119
16.3	AVID INTERPLAY ASSIST	120
16.4	AVID INTERPLAY TRANSFER STATUS	120
16.5	EVS METADATA AND LOGS TRANSFER TO AVID INTERPLAY	121
16.5.1	METADATA	121
16.5.2	AVID TAPE METADATA	123
16.5.3	LOCATOR	124
<u>17</u>	<u>ACRONYMS</u>	<u>125</u>

3 OBJECTIVE OF THE DOCUMENT

This document describes the installation, configuration and procedure to interface EVS XT server and Avid Transfer Manager.

Avid has developed several API to interface Third parties devices with Avid Transfer Manager and Avid Media Manager servers.

- Avid Transfer Manager Playback (DHM) SDK
- Transfer Manager Automation SDK

EVS has developed applications (EVS Avid Tools) communicating with those API in order to:

- Import IMX D10, Avid DNxHD®, DVCPRO 50 & DVCPRO HD Codec content from an XT[2] server to Unity and Media Composer Adrenaline NLE. This can be performed through XFile or a standalone application EVS Avid Browser
- Export and generate IMX D10, Avid DNxHD®, DVCPRO 50 & DVCPRO HD Codec content from a Media Composer Adrenaline NLE belonging to a Unity system. This can be performed through the standalone EVS Avid Playback application.
- Interface with WG 4 and Interplay (WG5) environments. Each system implements different APIs, resulting in separate installer for EVS Avid Tools.

4 MAIN FEATURES

- **2-way process** : import and export with Avid Transfer Manager Server
- **SD & HD** with XT[2] only, not XT[1]!
- **EVS native format IMX D10** :
 - IMX 30/40/50 supported.
 - No decoding/encoding process. Native XT[2] quality is preserved.
- **EVS native format Avid DNxHD® Codec** :
 - Low level 8-bit : 120 Mbps (1080i50, 720p50) & 145 Mbps (1080i59.94 & 720p59.94)
 - High level 8-bit : 185 Mbps (1080i50, 720p50) & 220 Mbps (1080i59.94 & 720p59.94)
 - No decoding/encoding process. Native XT[2] quality is preserved.
- **EVS native format DVCPRO** :
 - DVCPRO 50
 - No decoding/encoding process. Native XT[2] quality is preserved.
- **EVS native format DVCPROHD Codec (only available with the TM 1.2.4 and EVSAvid_Interplay_1.2.4_Setup_2.8.x.0.exe or upper)** :
 - 100 Mbps (1080i50, 720p50, 1080i59.94 & 720p59.94)
 - No decoding/encoding process. Native XT[2] quality is preserved.
- **Avid DHM** :
 - EVS DHM : EVS Avid Browser, EVS PlayBack Server, Streaming Transfer with XT[2], direct access to EVS XT[2] Gigabit interface.
 - Avid FTP DHM : Only for IMX-D10 backup files in MXF OP1a format.
- **EVS Access Content Formats** :
 - EVS MXF (IMX-D10, Avid DNxHD®, DVCPRO50, DVCPRO HD Codec)
 - MXF OP1a (IMX-D10 only)
 - Native XT[2] rough file format via FTP XT[2] Gigabit
- **Avid File formats**: OMF & AAF (MXF) are supported. Note : Interplay only supports AAF/MXF, not OMF !
- **Audio**: 4 or 8 channels, 16-bit & 24-bit supported. Audio Filler
- **Metadata** : EVS Metadata see list below
- **Formats** : 625i25 (PAL), 525i29.97 (NTSC), 1080i50, 1080i59.94, 720p50 & 720p59.94
- **SuperSlow Motion**: By default SuperSlow Motion clips are transferred to Avid Transfer Manager frame by frame : the actual speed on Avid MC is then a SuperSlow Motion. Audio is withdrawn and TC is not consistent. For other SuperSlow Motion modes, please contact EVS. EVS MXF format only. MXF OP1a not supported.

5 VERSIONS COMPLIANCE MATRIX

5.1 Avid APIs TM

Avid supplies several versions of APIs, either compliant with WG 4 (non Interplay) or with Interplay versions.

- WG 4 (non Interplay) :
 - DHM : Avid TM-DHM v2.9.1
 - TMAuto : Transfer Manager Automation API v2.9.1
- Interplay v1.1.2:
 - DHM : SDK_DHM_Interplay_1.0.7.20070629
 - TMAuto : SDK_TMAutoAPI_Interplay-20061130
- Interplay v1.1.6:
 - DHM : SDK_DHM_Interplay_1.1.5.20071004
 - TMAuto : SDK_TMAutoAPI_Interplay-20061130
- Interplay v1.2.1:
 - DHM : SDK_DHM_Interplay_1.2.0.20071218
 - TMAuto : SDK_TMAutoAPI_Interplay-20061130
- Interplay v1.2.3
- Interplay v1.4 (TM v1.2.4) (**support of the DVCPRO HD**):
 - DHM : SDK_DHM_Interplay_1.2.4.20080822
 - TMAuto : SDK_TMAutoAPI_Interplay-20061130
- Interplay 1.4.2
- Interplay 1.5.0
- Interplay 1.6.0
 - DHM : SDK_DHM_Interplay_1.6.0.20090217
 - TMAuto : SDK_TMAutoAPI_Interplay-20061130
- Interplay 1.6.2

5.2 Avid APIs WebService

- Avid Interplay WS 1.1

5.3 Avid Software

Please contact Avid support for specific architecture and HW specifications.

- **WG 4 (non Interplay) : IMX D10 only**
 - Avid Transfer Manager Server & Client : v2.9.10, 2.9.12, 2.9.14, 2.9.16, 2.9.19, 2.9.21.
 - Avid Unity MediaManager Server : v4.5+
 - Avid Media Composer Adrenaline : v2.2.6+ (v2.9 or 2.9.10 recommended).
 - Avid NewsCutter Adrenaline HD : v6.2.6+
- **Interplay : IMX D10 & Avid DNxHD® Codec + DVCPRO codecs**
 - Avid Interplay v1.1.2; 1.1.6; 1.2.1; 1.2.3; 1.2.4, 1.4.2, 1.5.0, 1.6.0, 1.6.2. This includes Avid Interplay Engine & Transfer Engine Server & Client.
 - Avid Media Composer (Adrenaline) : v2.7.2, v2.8.0, v3.0.5, v3.5 , v3.5.1
 - Avid NewsCutter : v6.7.2 & v6.8.0 (?)
 - Interplay Engine 1.2.4 or upper is needed for the DVCPRO HD

5.4 EVS Software

- **EVS Avid Tools** : EVS Avid tools dlls must be compiled with the specific Avid APIs.
 - **Avid WG 4 (non Interplay)** : EVSAvid_WG4_Setup_1.8.x.x.exe
 - **Interplay v1.1.2 (TM v1.1.2)** : EVSAvid_Interplay_1.1.2_Setup_2.8.x.x.0.exe
 - **Interplay v1.1.6 (TM v1.1.5)** : EVSAvid_Interplay_1.1.5_Setup_2.8.x.x.0.exe
 - **Interplay v1.2.1 (TM v1.2.0)** : EVSAvid_Interplay_1.2.0_Setup_2.8.x.x.0.exe
 - **Interplay v1.2.4 (TM v1.2.4)** : EVSAvid_Interplay_1.2.4_Setup_2.8.x.x.0.exe
 - **Interplay v1.6 (TM v1.6)** : EVSAvid_Interplay_1.6.0_Setup_2.8.x.x.0.exe

- **XT Suite for XT[2] servers** :
 - **Release Package 8.04.33 (November 2007)**
 - Multicam v8.04.33
 - XFile v1.13.01
 - XFile Lite v1.01.01
 - IP Director v4.31.80
 - MediaXchange v1.10.06

 - **Release Package M9.00.70**
 - Please refer to the specific document "Software Compatibility for Package Multicam 09.00.70".

 - **Release Package M9.00.74**
 - Please refer to the specific document "Software Compatibility for Package Multicam 09.00.74".


 - **Package M10.01**
 - Please refer to the specific document "Software Compatibility for Package Multicam 10.01".

6 AVID ARCHITECTURES

Typically, there are 2 types of Avid architectures.

- **Media Composer Stations with Transfer Manager in standalone.** Content will be stored locally, on the local drives (System drive or SCSI packs) of the stations. In this case, the EVS browser is recommended instead of transfer via XFile. In the latter, media will be available through Avid Media Tool, where the media are more difficult to find out especially in case of a large amount of content – no search tool is available.
 - **Note :** AAF/MXF mode generates a TC error with WG4. It is recommended to use OMF mode ! (except if editing must be done during streaming: OMF does not allow you for editing during transfer)
- **Avid Unity system** including a shared storage and specific devices for WG4 Media Manager & Transfer Manager or Interplay Engine Suite. Both EVS browser and EVS XFile/XTAccess can be used with this configuration. Avid Unity configurations :
 - **Avid Unity MediaNetwork :** FC storage for high throughput
 - **Avid ISIS :** Internet storage for large amount of simultaneous accesses to drives.
 - **Avid LanShare :** 3 RU all-in-one server and storage chassis with limited access (max 6 clients) and storage (4 or 8 TB).

A diagram of the EVS/Avid interoperability is shown below.

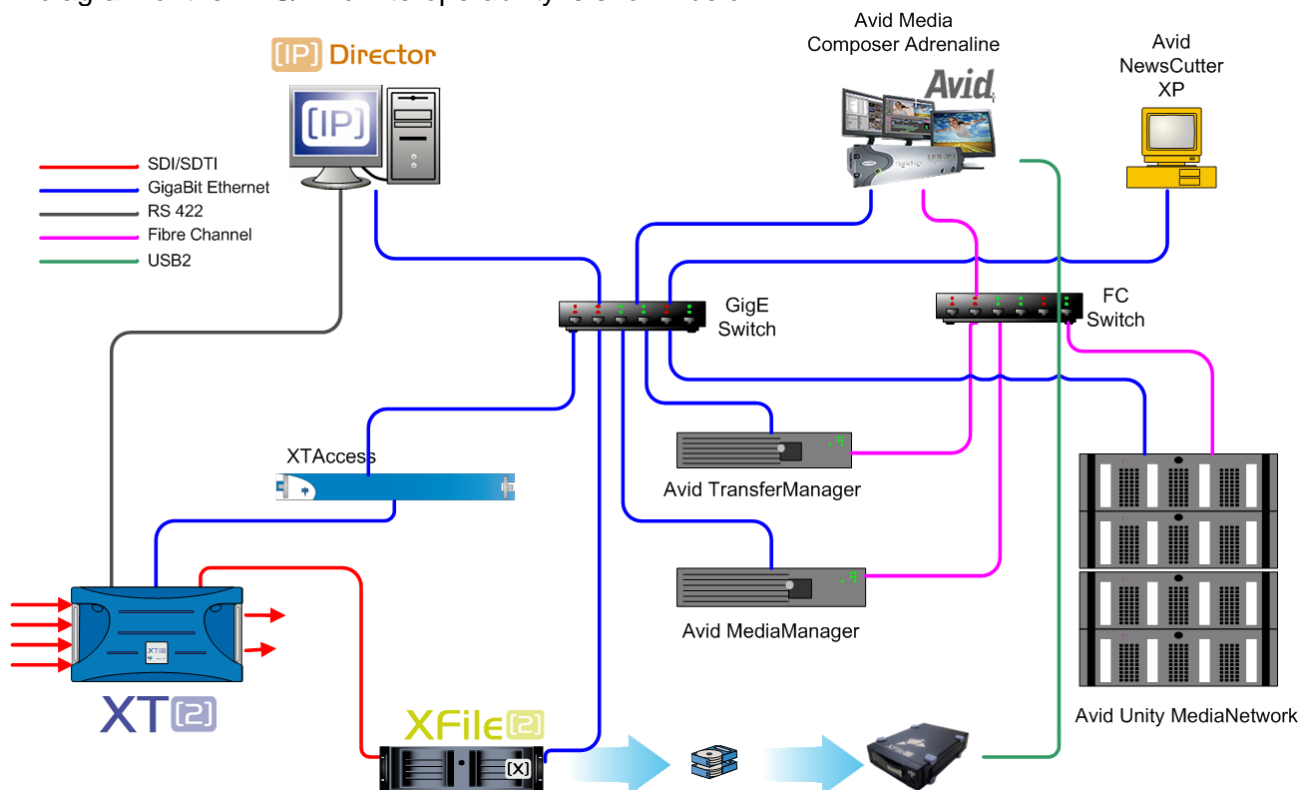

7 WORKFLOWS


Preliminary Remarks :

- Workflows are identical for both IMX D10 and Avid DNxHD® Codec or DVCPRO 50 and DVCPRO HD, as well as for any bitrate flavours (IMX 30/40/50 or Avid DNxHD® Codec 120/145/220). Only performances are affected by the bitrate.
- Each workflow supports up to 8 audios channels, either 16- or 24-bit audio, both ways.
- WG 4 and Interplay has no influence on the workflows.
- The Transfer Engine 1.6 is needed to transfer DVCRPO HD clips or files to Avid

7.1 Import IMX OP1a workflow

You can create with XFile or XTAccess an IMX OP1a files (SD only) and import it (manually) into the MediaComposer (Media Composer will transcode it in Avid MXF OPAtom).

You can also export your sequence from MediaComposer in IMX QT and restore it using XTAccess.

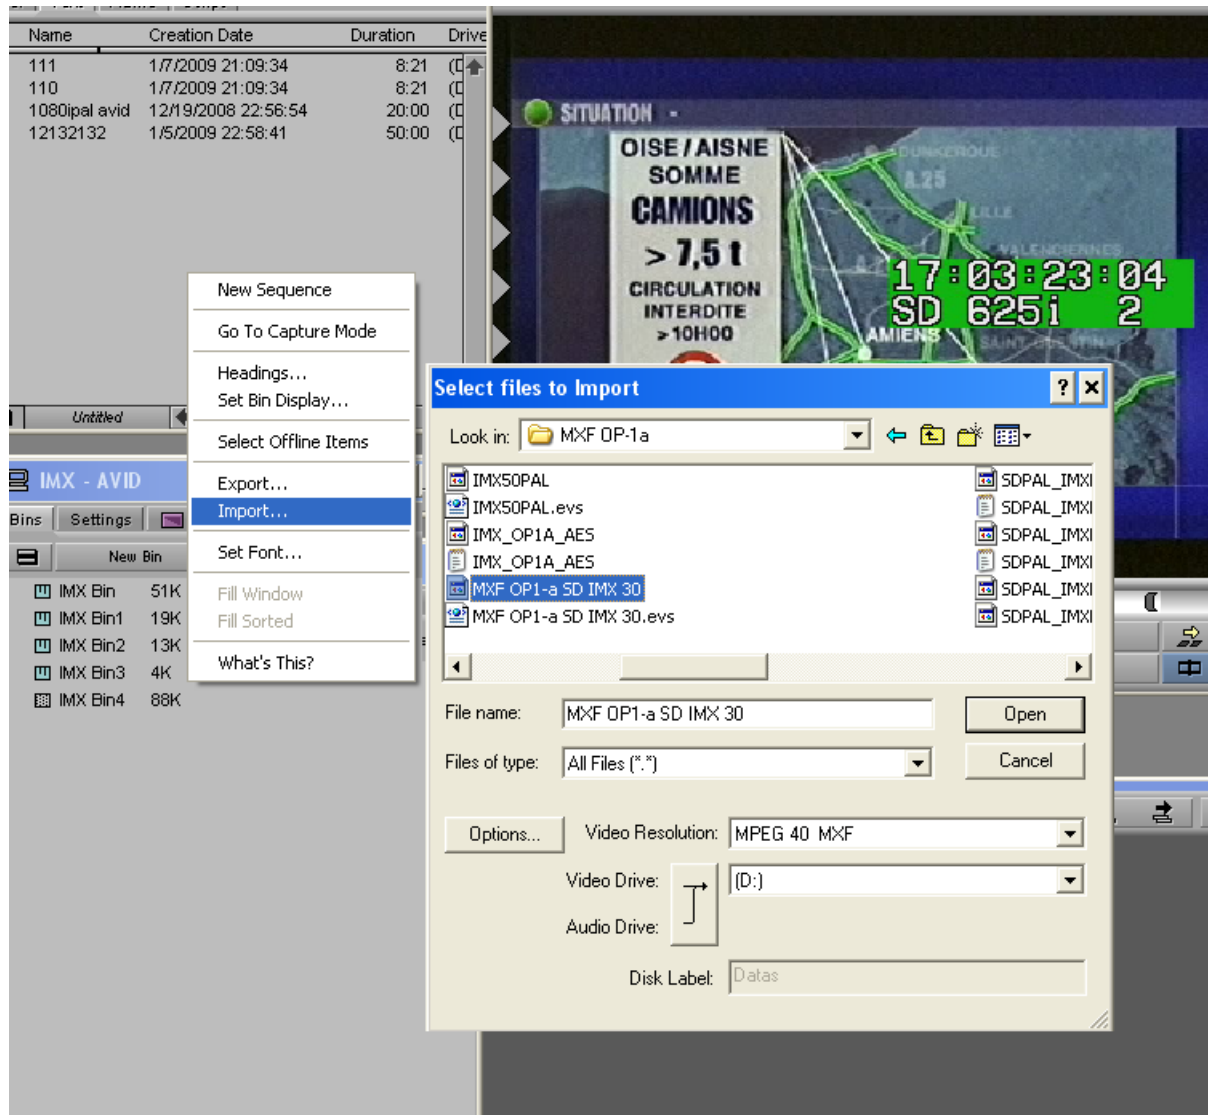


See the XTAccess documentation for more information.

7.2 Avid MXF OPATOM workflow


XTAccess and XFile are able to create Avid MXF OPAtom files (IMX, DNxHD, DVCPro 50, DVCPro HD) which are directly compatible with the Media Composer without transcoding.

The workflow is more dedicated for OB van to Studio workflow:

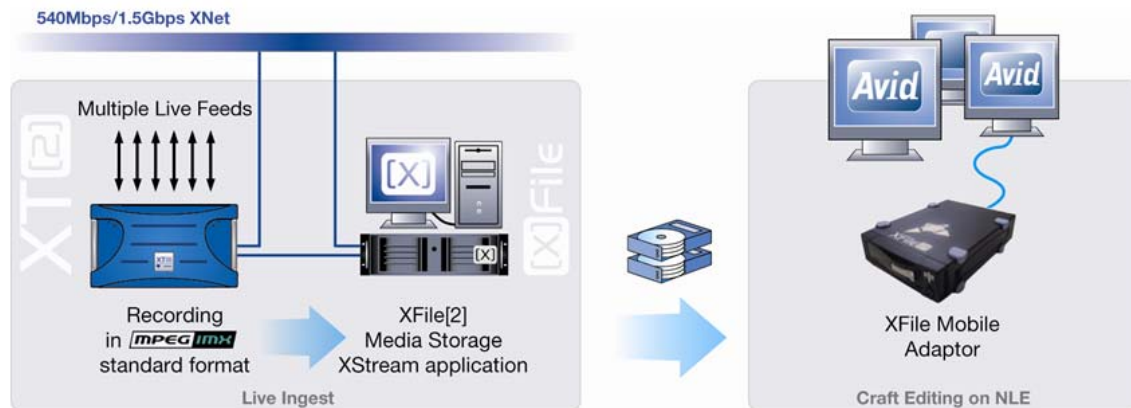

The EVS operator creates backed up files in Avid MXF format on removable drives using XFile/XStream or XTAccess (+IPDirector) in the OB Van. (See the XTAccess/XFile documentation for more information)

Those removable drives are sent to the studio manually. They can be plugged in the Avid editing station (stand-alone) via the USB adaptor for removable drives. The Avid operator can then read and edit the Avid MXF files using the Avid Media Composer Media Tool.

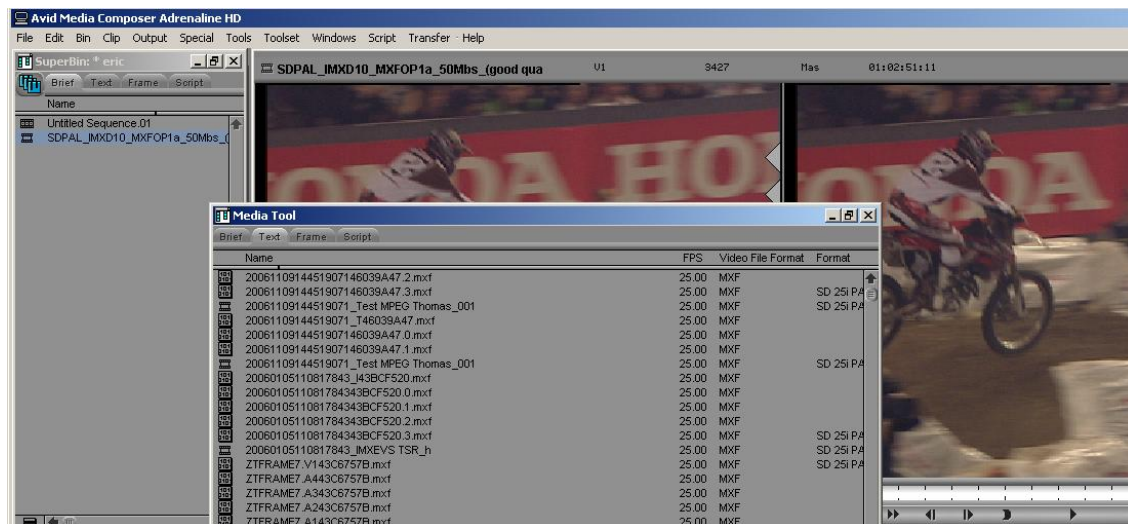


The Avid MXF files are detected by the MediaComposer Media Tool only if the MediaComposer is used in stand-alone without Avid Media Indexer (interplay).

See the Integration_Avid_MXF_OPATOM documentation for more information.

7.3 Transfer Manager/Engine Workflow

- Way to control the transfer :
 - **Push** : Pushing content to Avid means initiate the transfer from a remote station (not locally from Avid Media Composer), e.g. IP Director, XFile, etc.
 - **Pull** : Pulling content into Avid means initiate the transfer locally from the Media Composer workstation, e.g; Avid Browser
- Type of Content access :
 - **XTStreaming** : direct access to the XT server via XT GigE or SDTI.
 - **File transfer** : access to XT content via a file, for example after backup

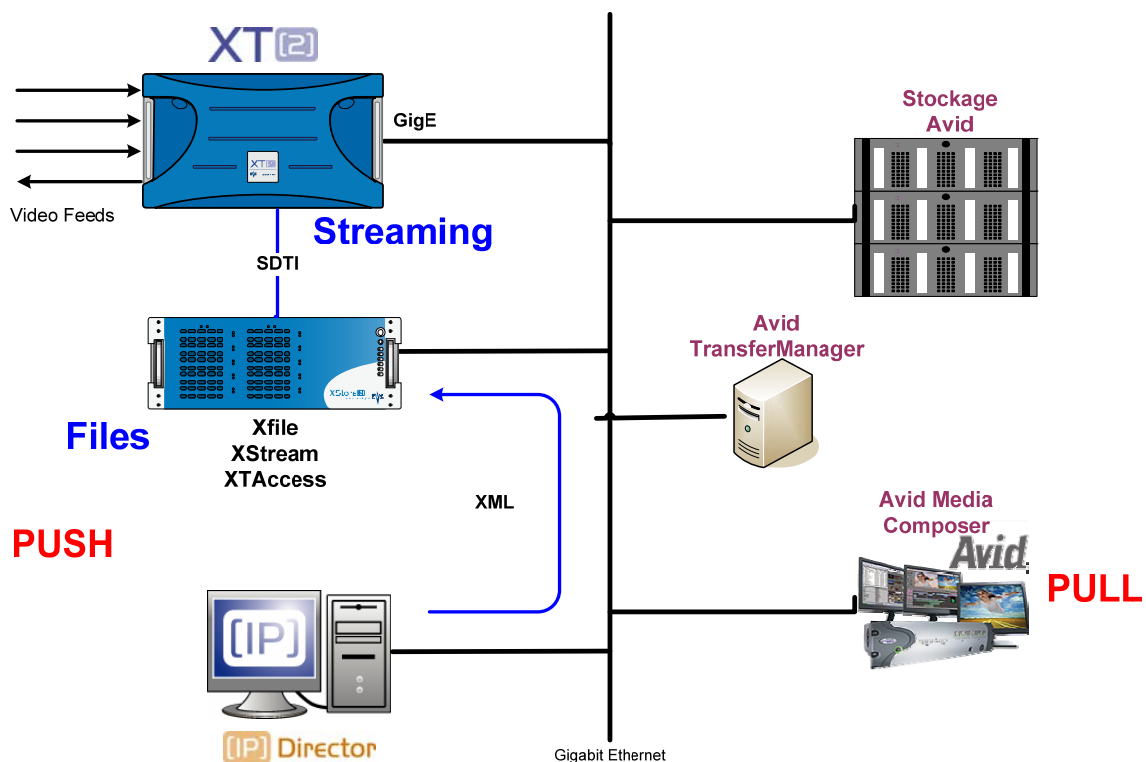

7.3.1 EVS to Avid (Ingest)

There are several ways to import an EVS clip into the Avid system :

1. Clip “Push” streaming from IP Director to Avid via XFile/XTAccess : IP Director interface
2. Clip “Push” via backed up files to Avid : EVS Avid Browser or XFile interface
3. Clip “Pull” via backed up files to Avid on Avid Media Composer : EVS Avid Browser & Avid FTP Client
4. Clip “Pull” streaming from XT[2] server on Avid Media Composer : EVS Avid Browser (GigE XT[2] FTP access)
5. Live feed streaming to Avid : XStream interface

Workflow	XT content	Application	Transfer Initiator
1. Clip “Push” streaming	Clips on XT[2]	Studio network	IP Director Operator
2. Clip “Push” backup files	Clips as backed up files	- Studio network asynchronous - OB Van to Studio	Avid Content Manager on remote station
3. Clip “pull” backup files	Clips as backed up files	- Studio network asynchronous - OB Van to Studio	Avid Media Composer Editor
4. Clip “Pull” Streaming (XT[2] GigE)	Clips on XT[2]	Studio network	Avid Media Composer Editor
5. Live feed streaming	Train or live feed	Live Studio network	XStream Operator

Note: In the workflow 1, 4 and 5, there is no backup to a file on the XF[2]/XStore[2] storage. The clip is directly streamed from XT[2] server via SDTI or Gigabit to the Avid System.

7.3.2 Clip “Push” Streaming: IP Director interface & EVS Avid Browser in FTP Mode

This workflow is based on Avid TMAuto API.

This is a one step process where the content from XT[2] server is directly streamed to Avid Transfer Manager Server. No temporary file is created on XFile or XTAccess: the process is thus highly efficient.

- **XFile (SDTI)** : The XT[2] XNet (XFile gateway) must be connected to the Avid system via high speed LAN. EVS XT[2] content is streamed to Avid Transfer Manager server through XFile (SDTI/LAN gateway)
- **XTAccess (Gigabit)** : The XT[2], XTAccess and the Transfer Manager must be connected via a Gigabit Switch on the same IP address range/mask. Jumbo Frame setup of each GigE component is recommended for high performances. XTAccess is only used to set up the transfer. EVS XT[2] content is directly streamed to Avid Transfer manager server in FTP proxy mode.

7.3.2.1 Workflow

- **Clip Creation with IP Director**
 - In & Out boundaries. Set a clip name and Save
 - This clip can be browsed using the Database Explorer and previewed in a XT[2] playout channel




- **Clip export to Avid**

- **Option (a) : With IP Director GUI**

- Select one clip, a part of clip (using software player of IPD) or a list of clips to be “exported to Avid”
 - Send those clips to an “Avid Export target”. Note : the target can also be pre-selected (sub-window “Send to”) when creating a clip: the transfer is then automatically started when saving the clip.
 - **XFile** : The content of the clip is streamed through XFile (SDTI) gateway to Avid Transfer Manager and then to the Avid storage in OMF or AAF/MXF format.
 - **XTAccess** : The content of the clip is directly streamed from XT[2] Gigabit interface to Avid Transfer Manager (proxy transfer mode) and then to the Avid storage in OMF or AAF/MXF format. XTAccess is only used to set up the transfer with Avid Transfer Manager server.

- **Option (b) : With the EVS Avid Browser in FTP mode**

- Open the EVSAVIDBrowser in FTP mode and select the XT[2] server FTP address.
 - Browse the Clips on the XT[2]
 - Select a clip and double-click on it
 - The content of the clip is directly streamed from XT[2] Gigabit interface to Avid Transfer Manager (proxy transfer mode) and then to the Avid storage in OMF or AAF/MXF format.

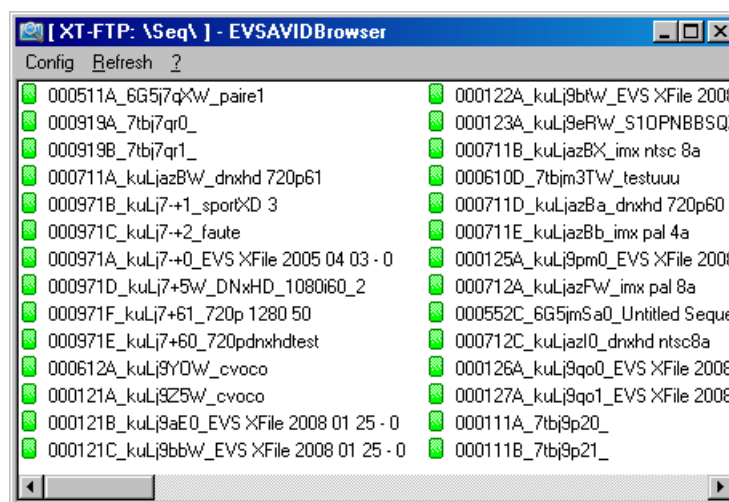


- **Option (c) : XFile AutoBackup or Manual backup (XFile v2.00.xx +)**


- Select Avid TM for the Default file format of the Autobackup and Manual Backup into the XFile Config Session
 - All your manual backup or autobackup operations into XFile will be transferred to AVID TM.



- **Clip Import in Media Composer bin**
 - **Option (a) : Stand-alone Avid Media Composer via Media Tool**
 - Search for the clip with Avid Media Composer Tools : Media Tool
 - Drag the clip into the Media Composer project bin
 - View and edit the clip in Media Composer

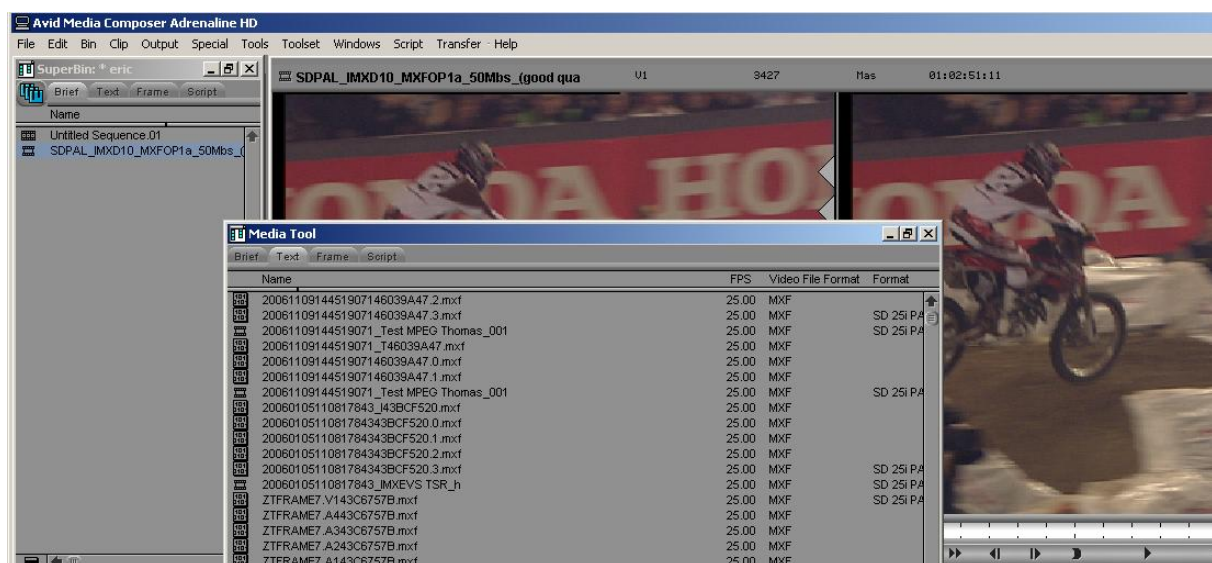

- **Option (b) : Unity Avid Media Composer via Media Manager or Interplay Engine**
 - Search for the clip on Media Composer station with :
 - Media Manager browser (WG4)
 - Interplay Window (Interplay)
 - Interplay Access or Assist Client (Interplay)
 - Drag the clip into the Media Composer project bin
 - View and edit the clip in Media Composer

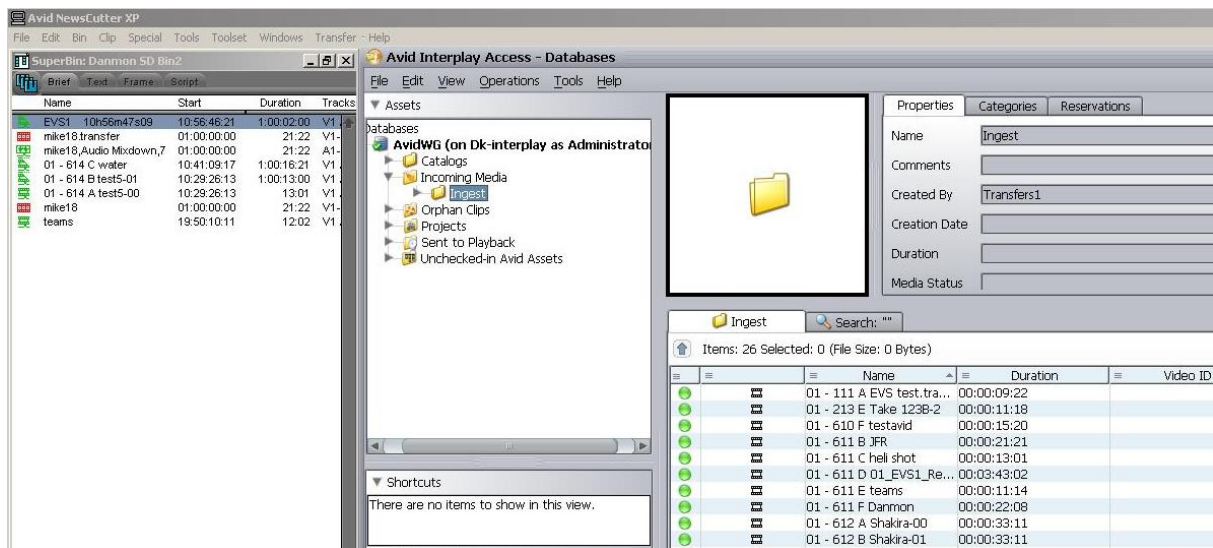


7.3.3 Clip “Push” via backed up files : EVS Avid Browser or XFile interface

This workflow is based on Avid TMAuto API.

This is a 2-steps process : First an EVS MXF file is backed up on XFile storage with the XFile or XTAccess applications. Secondly, this file is transferred to Avid storage.

This workflow is less efficient than the streaming but is dedicated to two typical applications :

- The process of file backup and Avid transfer is **asynchronous**. The operator first backs up a list of clips. Later this operator or another one chooses which clips must be sent to Avid storage.
- **OB Van to Studio workflows** : The EVS operator creates backed up files on removable drives using XFile/XStream or XTAccess in the OB Van. Those removable drives are sent to the studio manually. They can either be plugged in a studio XF[2] or XStore or merely attached to the Avid editing station via the USB adaptor for removable drives. The Avid operator can then push the files to the Avid storage.

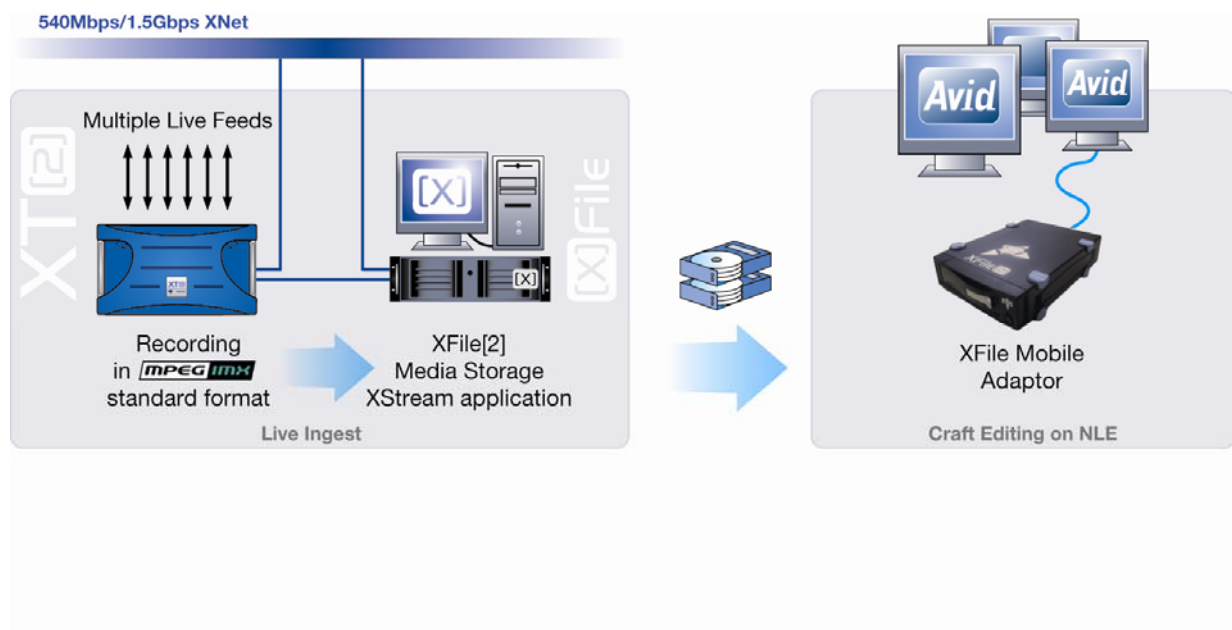


7.3.3.1 Workflow

- **Clip Creation with IP Director or EVS remote**
 - In & Out boundaries. Set a clip name and Save
 - This clip can be browsed using the Database Explorer and previewed in a XT[2] playout channel



- **Clip backup on XFile[2] or XStore[2] storage**

- Select one clip, a part of clip (using the software player of IPD) or a list of clips
- Send those clips to an XFile backup “target” or XTAccess backup “target”.
Note : the target can also be pre-selected (sub-window “Send to”) when creating a clip: the backup is then automatically initiated when the clip is saved.

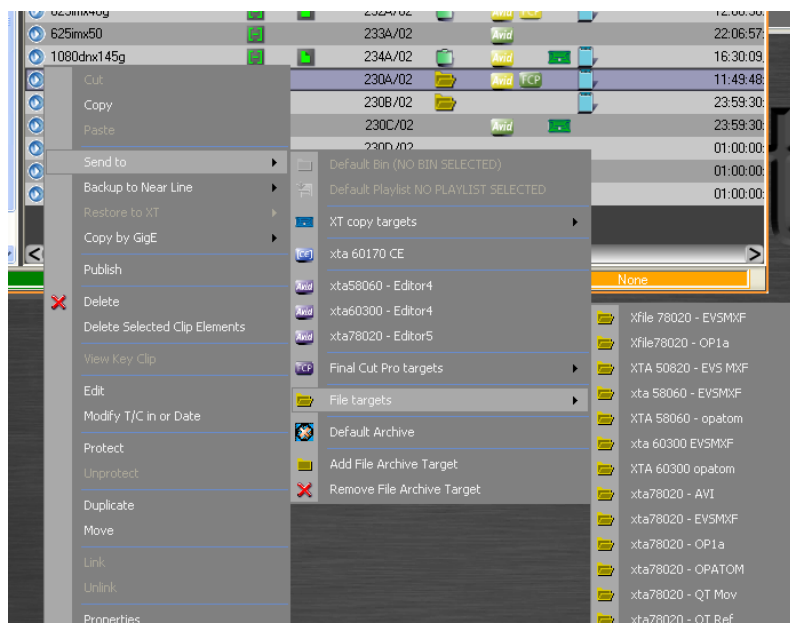


- The clip is backed up in EVS MXF or MXF OP-1a (IMX D10 only) on XF[2] or XStore[2] storage

- **Transfer to Avid**


- **Option (a) : EVS Avid Browser**

- Select a file to be transferred to Avid using the EVS Avid browser
 - Double-click on the selected file
 - The transfer to Avid storage (OMF or AFF/MXF format) starts via Avid Transfer Manager server. A progress and completion status is displayed.

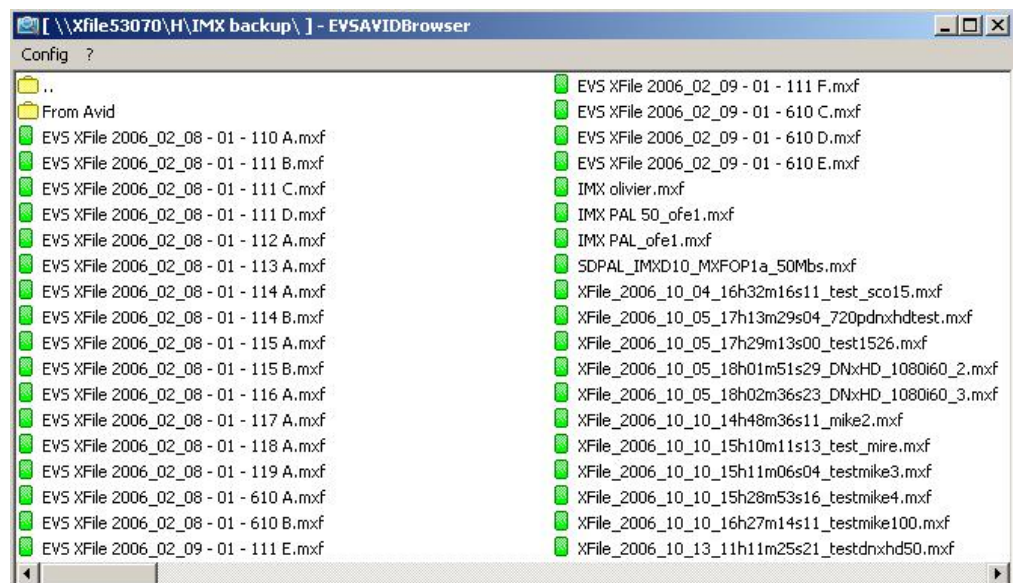


- **Option (b) : XFile GUI**

- Select a file to be transferred to Avid using the XFile Maintenance GUI
 - Right-click and choose "Transfer/Convert > Transfer to Avid TM"
 - Transfer to Avid storage (OMF or AFF/MXF format) starts via Avid Transfer Manager server. A progress and completion status is displayed in XFile GUI.

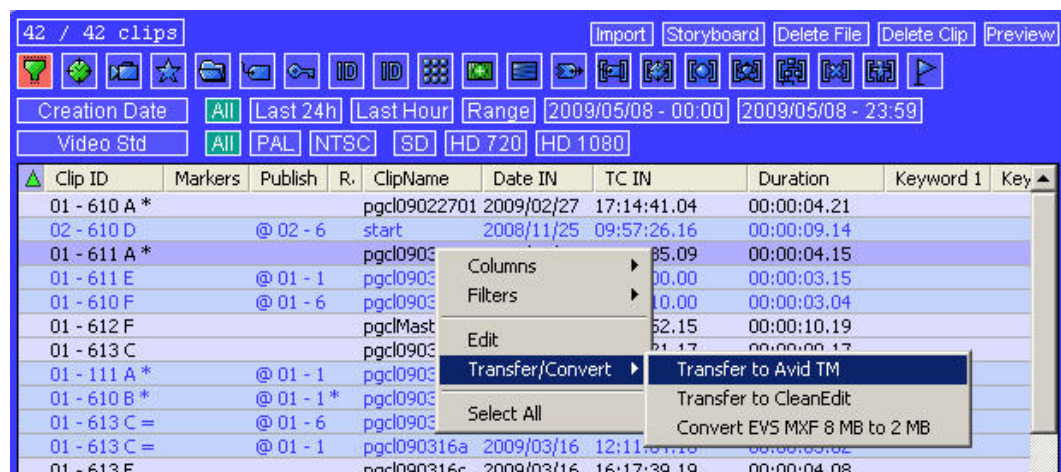


- **Option (C) : Nearline management from IPD**

- Select one file

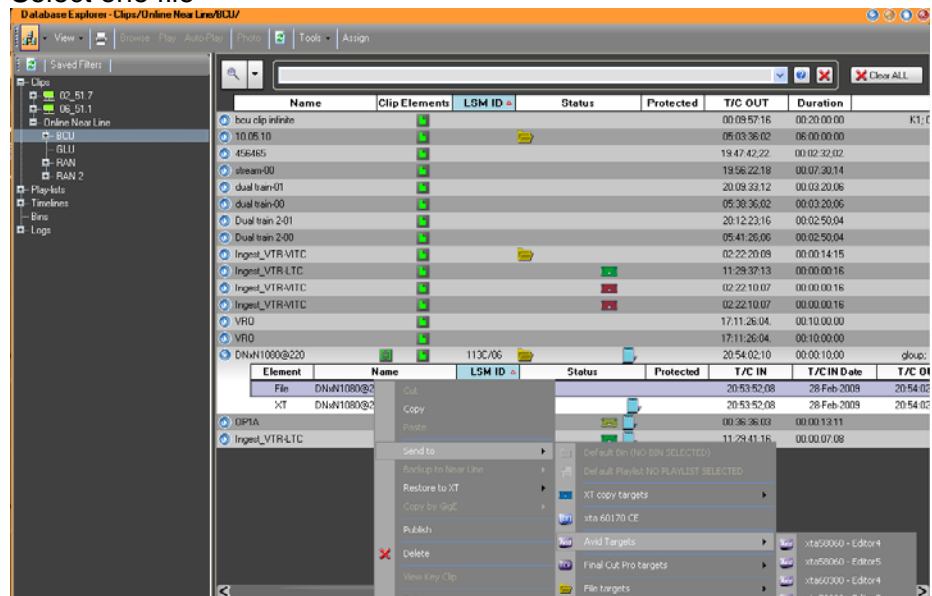


or a part of a file (using the software player of IPD) to be transferred to Avid using the Database Explorer and the Near Line management

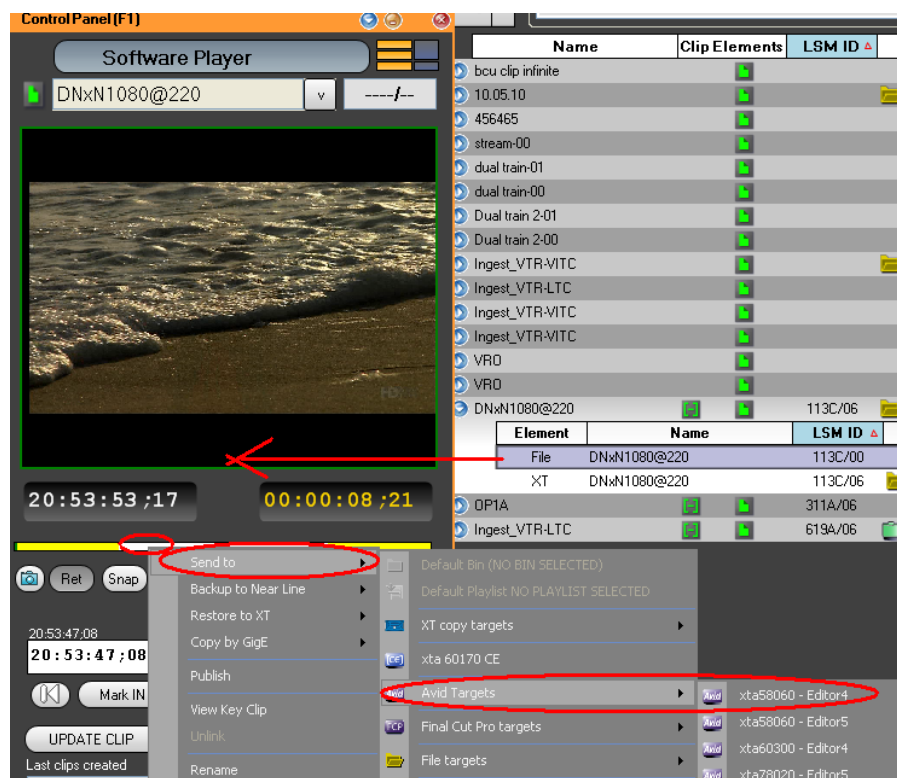


- Transfer to Avid storage (OMF or AFF/MXF format) starts via Avid Transfer Manager server. A progress and completion status is displayed in the IPD Transfer Monitoring window:

Transfer monitoring							
Type	Name	Status	Start Time	User	Target Type	Target Name	Destination
IMX30 PAL		0% completed	19-Mar-2009 08:40:42	bcu	SharedDrive	xla78020 - EVS...	\\xst
IMX30 PAL		0% completed	19-Mar-2009 08:40:42	bcu	SharedDrive	xla78020 - EVS...	\\xst
IMX30 PAL		0% completed	19-Mar-2009 08:40:43	bcu	SharedDrive	xla78020 - EVS...	\\xst
IMX40 PAL		0% completed	19-Mar-2009 08:40:43	bcu	SharedDrive	xla78020 - EVS...	\\xst
DNx1080@220		85% completed	24-Mar-2009 17:51:16	bcu	SharedDrive	xla78020 - EVS...	\\xst
MjSP10801372		63% completed	25-Mar-2009 11:01:39	bcu	SharedDrive	xla78020 - EVS...	\\xst
IMX40 PAL		90% completed	27-Mar-2009 12:05:01	bcu	SharedDrive	xla78020 - OP1a	\\xst
IMX30 PAL		89% completed	27-Mar-2009 12:05:01	bcu	SharedDrive	xla78020 - OP1a	\\xst
IMX30 PAL		73% completed	27-Mar-2009 12:05:01	bcu	SharedDrive	xla78020 - OP1a	\\xst
IMX30 PAL		49% completed	27-Mar-2009 12:05:01	bcu	SharedDrive	xla78020 - OP1a	\\xst
IMX30 PAL		0% completed	27-Mar-2009 12:05:55	bcu	SharedDrive	xla78020 - QT M...	\\xst
IMX40 PAL		0% completed	27-Mar-2009 12:05:55	bcu	SharedDrive	xla78020 - QT M...	\\xst

- **Clip Import in Media Composer bin**
 - **Option (a) : Stand-alone Avid Media Composer via Media Tool**
 - Search for the clip with Avid Media Composer Tools : Media Tool
 - Drag the clip into the Media Composer project bin
 - View and edit the clip in Media Composer

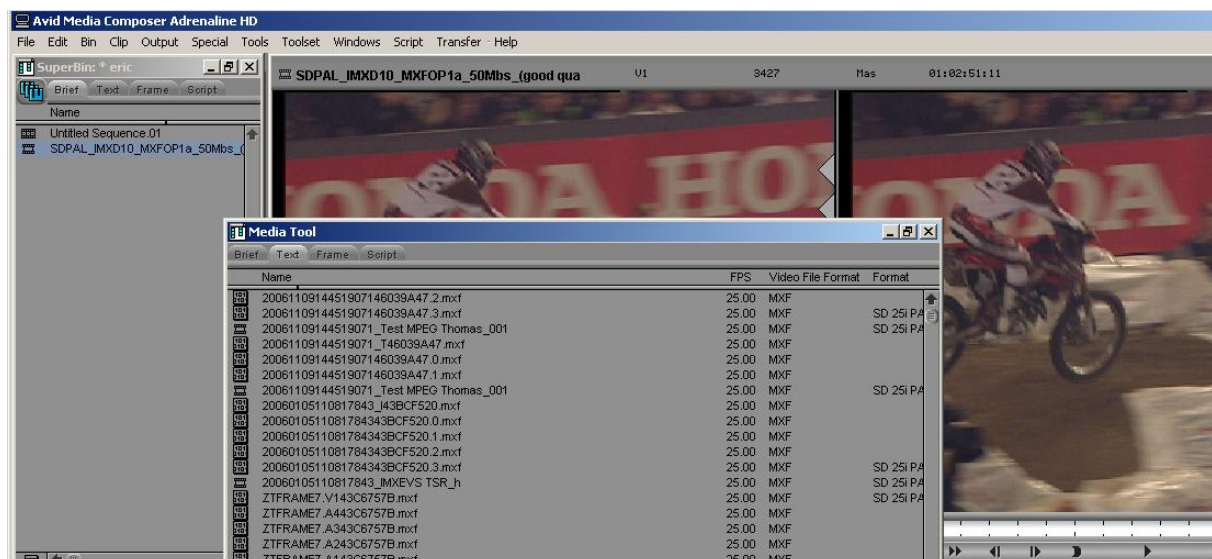

- **Option (b) : Unity Avid Media Composer via Media Manager or Interplay Engine**
 - Search for the clip on Media Composer station with :
 - Media Manager browser (WG4)
 - Interplay Window (Interplay)
 - Interplay Access or Assist Client (Interplay)
 - Drag the clip into the Media Composer project bin
 - View and edit the clip in Media Composer

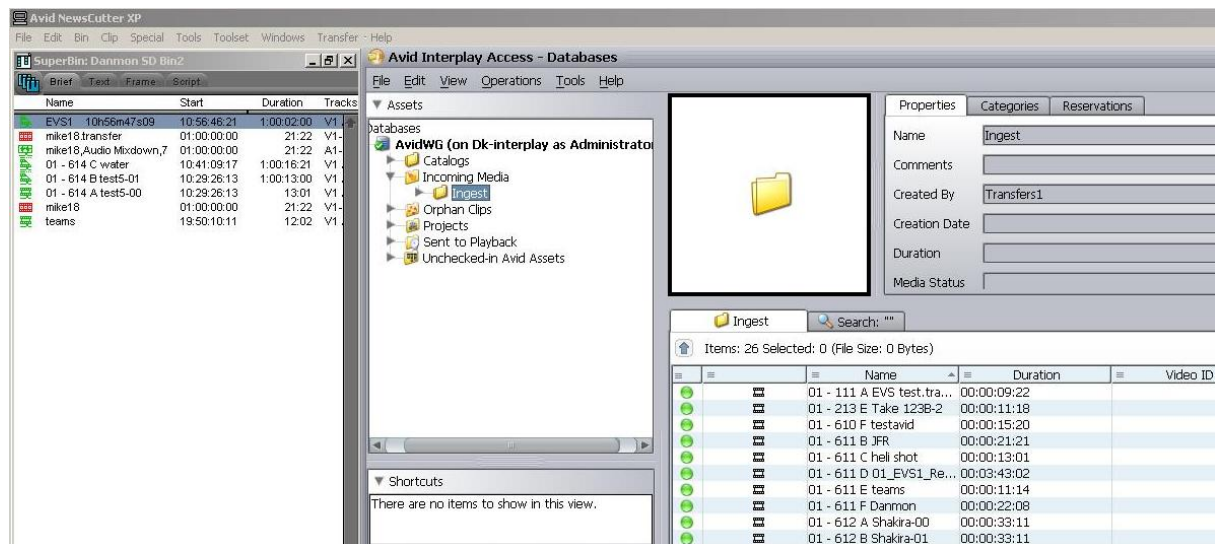


7.3.4 Clip “Pull” via Backed up files on Media Composer

This workflow is based on EVS DHM (EVS Avid Browser) or Avid FTP DHM (Avid FTP Client).

This is a 2-steps process : First an EVS MXF file is backed up on a XFile storage. Secondly, this file is pulled out from the XF[2] or XStore[2] storage to Avid storage.

This workflow is less efficient than the streaming but is dedicated to two typical applications :

- The process of file backup and Avid transfer is **asynchronous**. The operator first backs up a list of clips. Later this operator or another one chooses which clips must be sent to Avid storage.
- OB Van to Studio workflows : The EVS operator creates backed up files on removable drives using XFile/XStream or XTAccess in the OB Van. Those removable drives are sent to the studio manually. They can either be plugged in a studio XF[2] or XStore or merely attached to the Avid editing station via the USB adaptor for removable drives. The Avid operator can then push the files to the Avid storage.

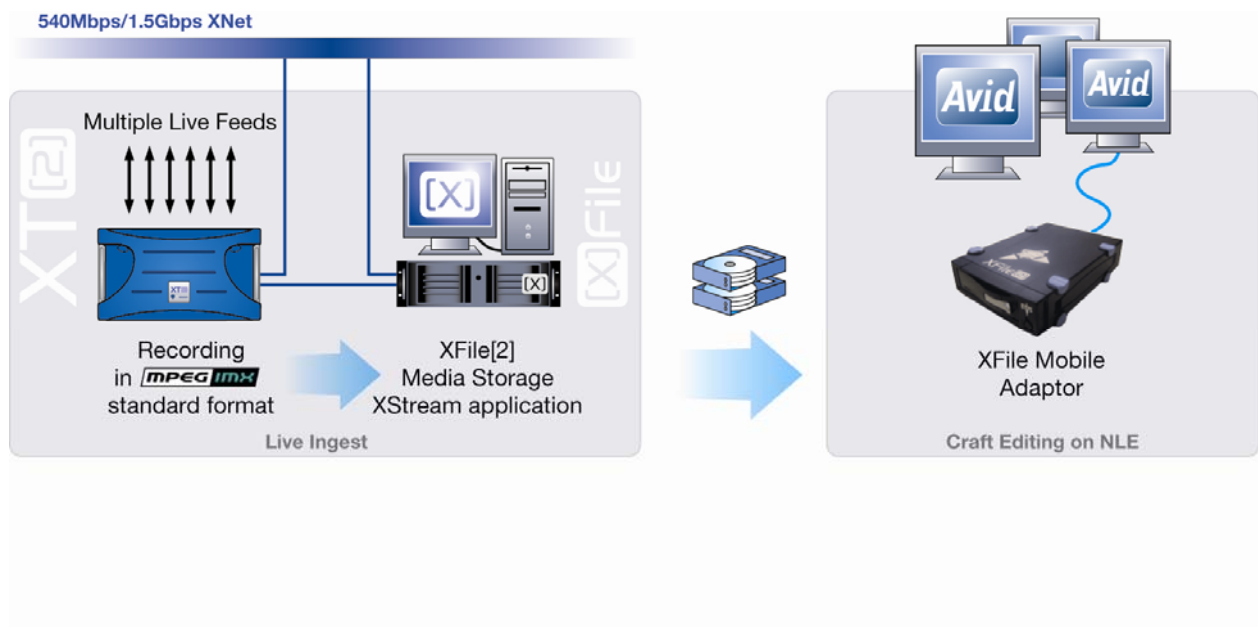


The main difference with the clip “push” via backed up file is that the transfer is initiated from the Avid editing station (i.e. Media Composer).

7.3.4.1 Workflow

- **Clip Creation with IP Director or EVS remote**
 - In & Out boundaries. Choose a clip name and Save
 - This clip can be browsed using the Database Explorer and previewed in a XT[2] playout channel

- **Clip backup on XFile[2] or XStore[2] storage**


- Select one clip, a part of a clip (using the software player of IPD) or a list of clips
- Send those clips to an XFile backup “target” or XTAccess backup “target”. Note : the target can also be pre-selected (sub-window “Send to”) when creating a clip: the backup is then automatically started when saving the clip.
- The clip is backed up in EVS MXF or MXF OP-1a (IMX D10 only) on XF[2] or XStore[2] storage.

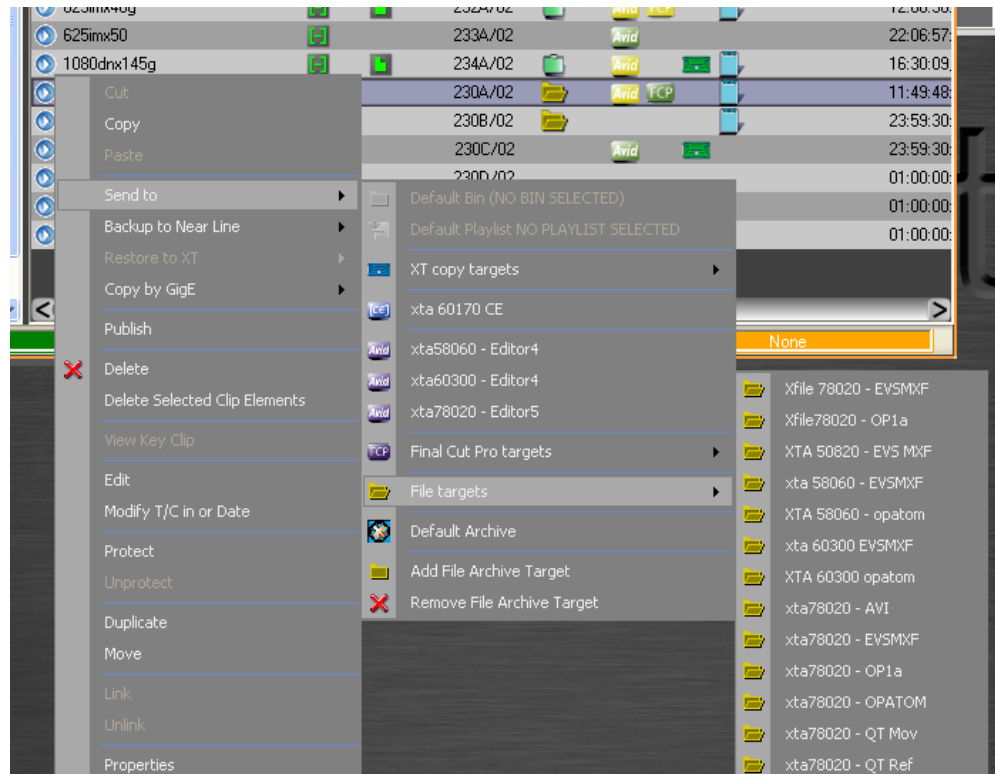

- **Import into Media Composer Project bin**

- **Option (a) : With the EVS Avid Browser (EVS DHM)**

- Select a file on a XF[2] or XStore[2] storage (shared drive) to be transferred to Avid using the EVS Avid browser running on the Media Composer Editing station
- Drag the file into the Media Composer bin
- Transfer to Avid storage (OMF or AFF/MXF format) starts via Avid Transfer Manager server. A progress and completion status is available using the Transfer Status in Media Composer “Transfer” menu.
- View and edit the clip in Media Composer. Note : the Media cannot be edited before the end of the transfer.

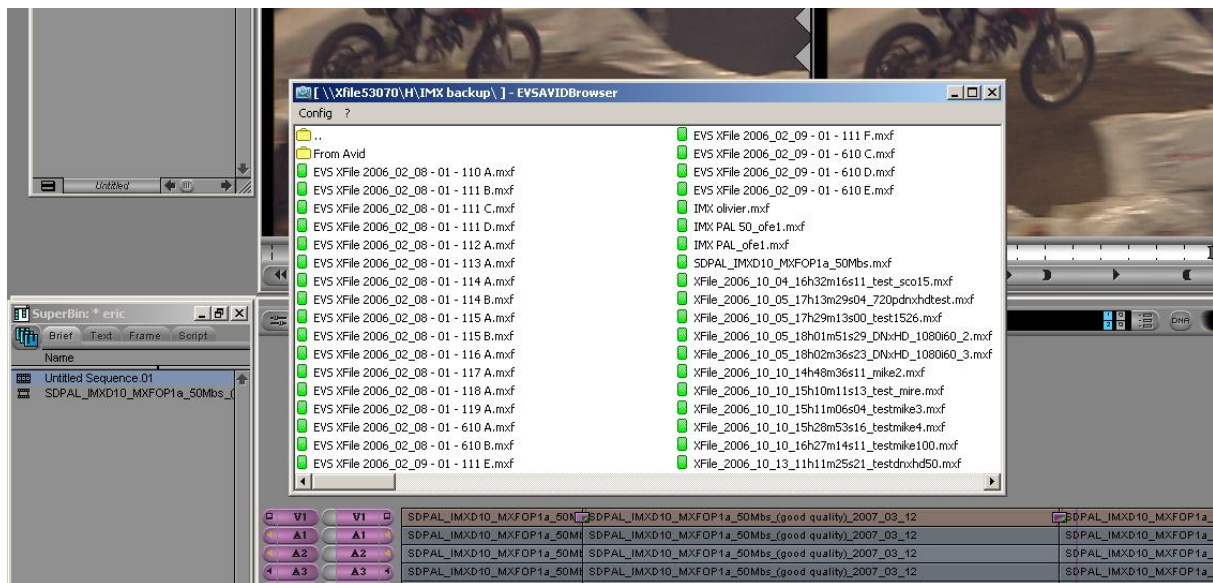

○ **Option (b) : With the Avid FTP Client (Avid FTP DHM)**

Note 1 : Transfer Manager Server must be installed with the FTP option and the Transfer Manager server dongle must have a valid FTP Transfer option

Note 2 : This transfer mode is only valid with IMX-D10 MXF OP1a backup files

- Launch the Avid FTP Client application on the Media Composer. Select the FTP server where are stored the backup IMX-D10 MXF OP1a files.
- Select a file to be transferred to Avid and drag this file into the Media Composer bin
- Transfer to Avid storage (OMF or AFF/MXF format) starts via Avid Transfer Manager server. A progress and completion status is available using the Transfer Status in Media Composer “Transfer” menu.
- View and edit the clip in Media Composer. Note : the Media cannot be edited before the end of the transfer.

7.3.5 Clip “Pull” Streaming from XT[2] server on Media Composer


This workflow is based on EVS DHM API.

This is a one step process where the content from XT[2] server is directly streamed to Avid Transfer Manager Server. No temporary file is created : the process is thus highly efficient.

- **EVS Avid Browser (Gigabit)** : The XT[2], EVS Avid Browser and the Transfer Manager must be connected via a Gigabit switch on the same IP address range/mask. Jumbo Frame setup of each GigE component is recommended for high performances. EVS Avid Browser is only used to set up the transfer. EVS XT[2] content is directly streamed to Avid Transfer manager server in FTP proxy mode.

7.3.5.1 Workflow

- **Clip Creation with IP Director**
 - In & Out boundaries. Set a clip name and Save
 - This clip can be browsed using the Database Explorer and previewed in a XT[2] playout channel
- **Clip export to Avid with the EVS Avid Browser in FTP mode**
 - Open the EVSAVIDBrowser in FTP mode and select the XT[2] server FTP address.
 - Browse the clips on the XT[2].
 - Select a clip and drag it into the Media Composer bin
 - The content of the clip is directly streamed from XT[2] Gigabit interface to Avid Transfer Manager (proxy transfer mode) and then to the Avid storage in OMF or AAF/MXF format. EVS Avid Browser is only used to set up the transfer with Avid Transfer Manager server.
 - View and edit the clip in Media Composer. Note : the Media cannot be edited before the end of the transfer.

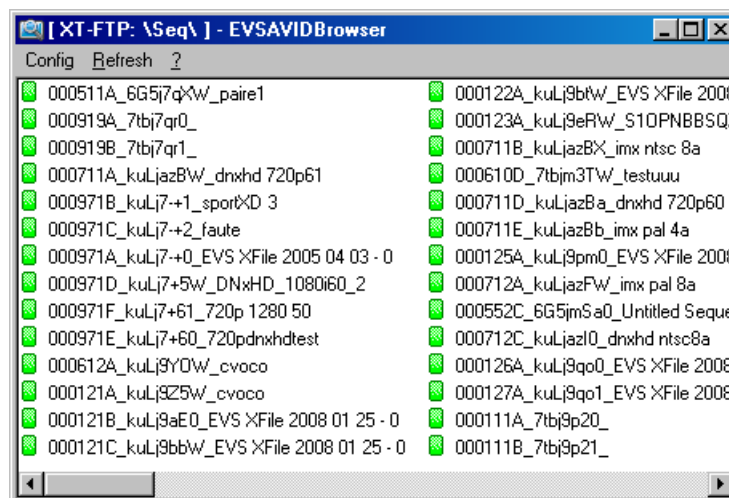

7.3.6 Live feed “Streaming” to Avid : XStream interface or XTAccess (IPD Ingest Scheduler)

This workflow is based on Avid TMAuto API.

This is a one step process where the input feeds from XT[2] server are directly streamed to the Avid storage via XStream (SDTI) or XTAccess (GigE) and Avid Transfer Manager Server. No temporary file is created: the process is thus highly efficient.

The XT[2] XNet/GigE via XStream/XTAccess must be connected to the Avid system via high speed LAN (GigE connection).


Avid Transfer must be set up in AAF/MXF format in order to edit the stream during record on Avid storage.

XStream has a user interface but XTAccess has not. But you can use the IPD Ingest Scheduler to control XTAccess. By the same way, IPD Ingest Scheduler can also control XStream if needed.

Media Manager or Interplay Engine must be implemented with Avid shared storage Unity (no stand-alone Media Composer) in order to edit live stream into Media Composer bin.


7.3.6.1 Workflow

- **XStream of XT[2] input feeds**
 - Start XStream application
 - Select the input feed to stream
 - Start streaming : the content of the clip is streamed between XStream and Avid Transfer Manager into the Avid storage in AAF/MXF format.

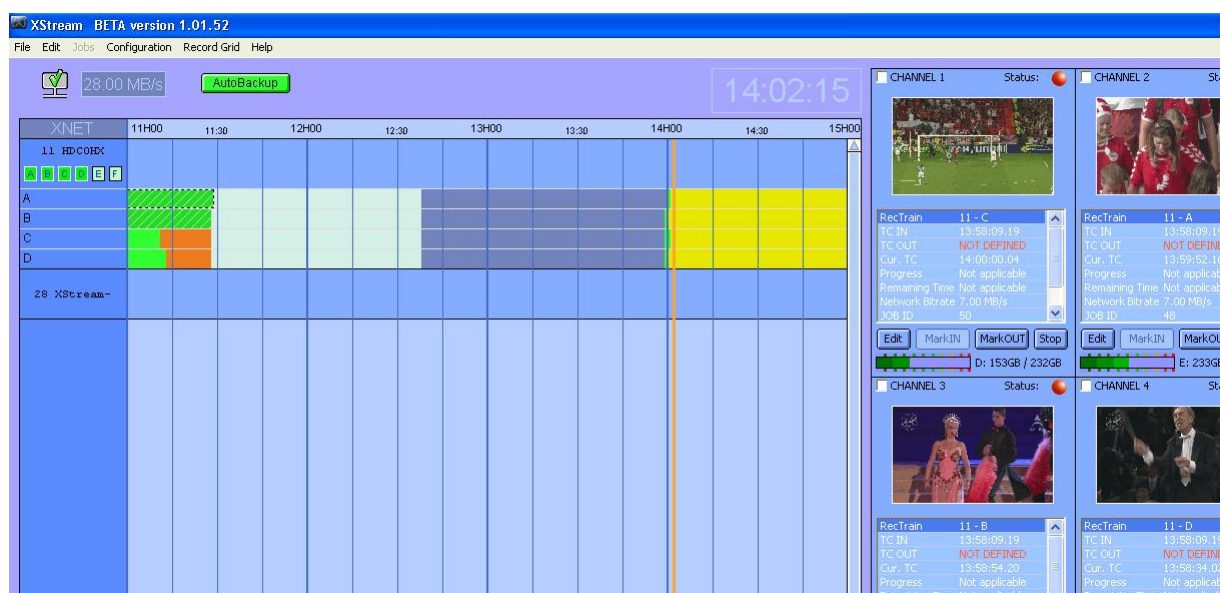


- **XTAccess-IPD Ingest Scheduler input feeds**

- Start IPD Ingest Scheduler application and XTAccess. XTAccess will be the “engine” and IPD Ingest Scheduler the “interface”.
- Select the input feed to stream
- Start streaming: the content of the clip is streamed between XT[2] and Avid Transfer Manager into the Avid storage in AAF/MXF format. XTAccess is only used to start the transaction between the XT[2] and the Transfer Manager.

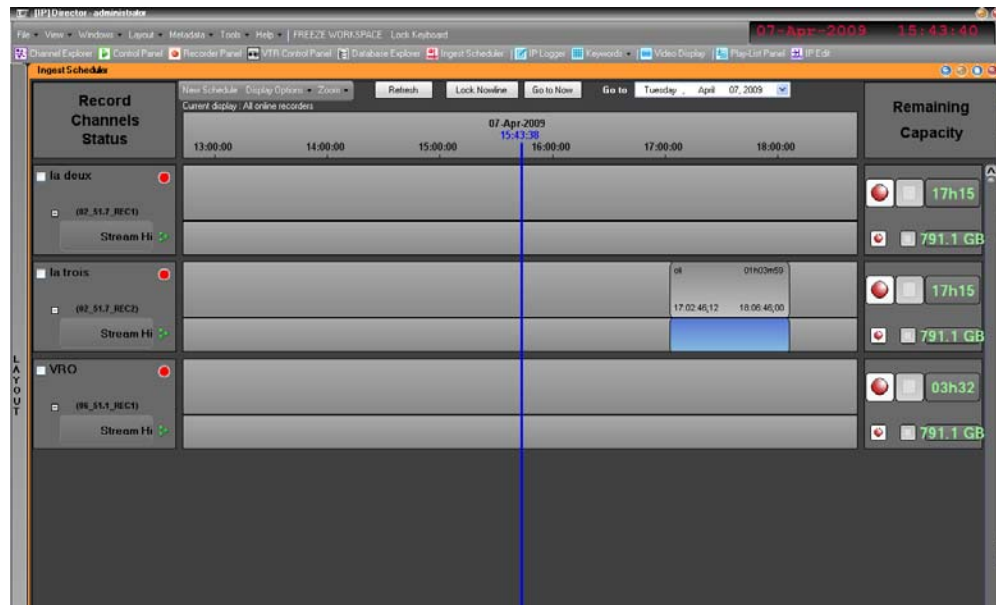

- **Clip Import in Media Composer bin via Media Manager or Interplay Engine**

- Search for the clip on Media Composer station with :
 - Media Manager browser (WG4)
 - Interplay Window (Interplay)
 - Interplay Access or Assist Client (Interplay)
- Drag the clip into Media Composer project bin
- View and edit the clip in Media Composer
- The delay between XT[2] input source and Avid edition is less than 1 minute.

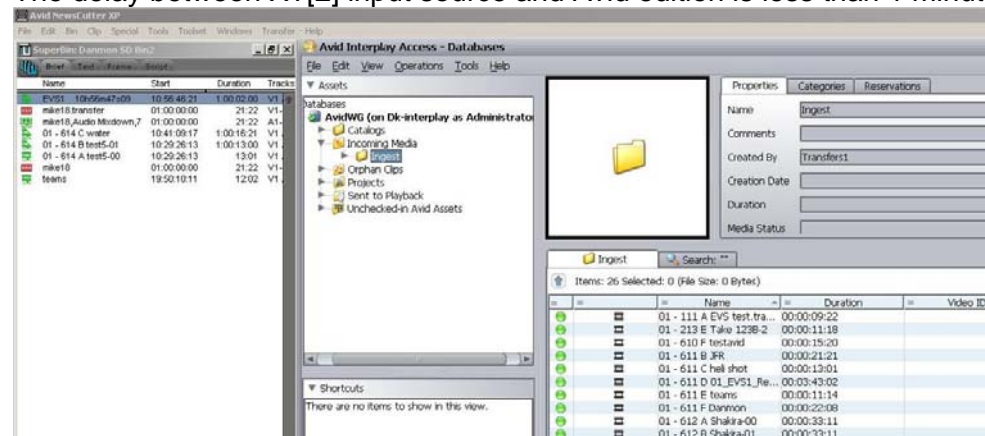


7.3.7 Avid to EVS (Send to Playback)

The Export workflow is controlled from the Media Composer editing station.

7.3.7.1 Workflow

- **Send to Playback Preparation**
 - Select a sequence on Media Composer editing station
 - Select a Playback device in the “Send to Playback” menu. This could be a “nickname” of a Playback device (see “EVS Playback Server” section)
 - Specify a TAPE ID

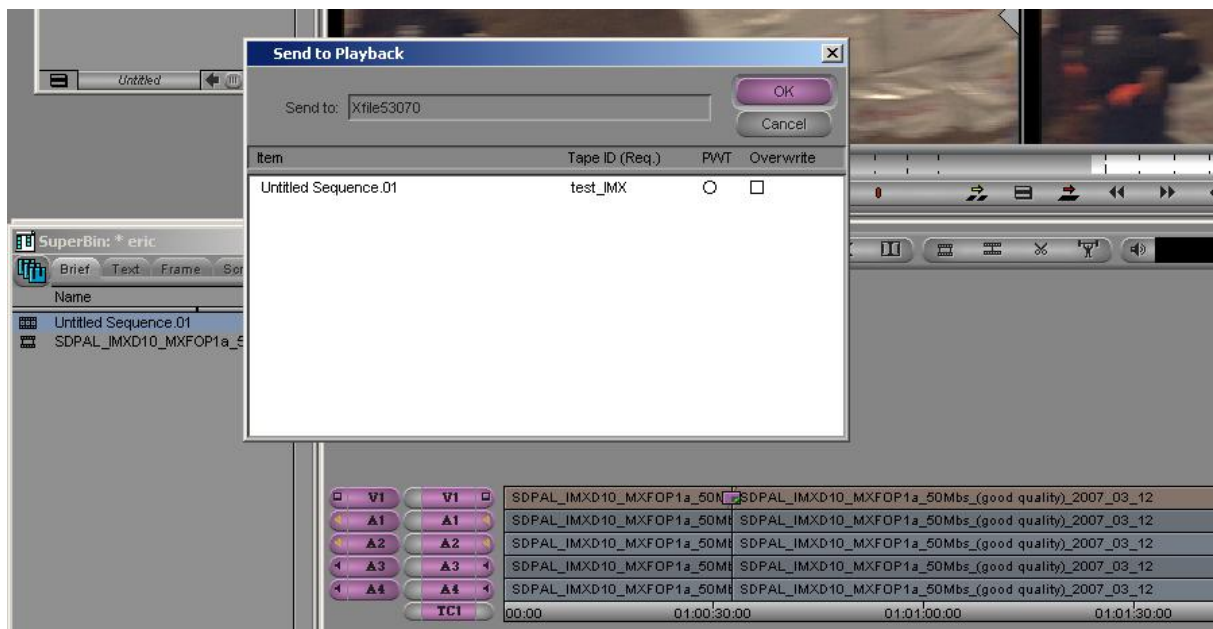


- **Send to Playback Process**
 - Audio and Video Mixdown.
 - Transfer : 2 Modes available
 - **Temporary file + XML metadata files generation before restore to XT[2] (SDTI)**
 - Selection of the “Shared Drive” option on EVS AvidPlayback Server. Setup of the Transfer with Avid Transfer Manager server via EVS Avid Playback Server. Once the setup is over, the EVS Avid Playback server is disconnected.
 - The sequence from Avid is transferred via the LAN and wrapped to an EVS MXF (for IMX-D10 or Avid DNxHD® Codec) or MXF OP-1a (for IMX D10 only) file with a XML file for the Owner and Tapeld information on XF[2] or XStore [2] storage.


- The MXF/OP1A file can be automatically restored on XT[2] server if connected. Otherwise the file can be manually restored on XT[2] via XFile GUI.

▪ **Direct streaming via Gigabit connection to XT[2] (Multicam 9 onwards)**

- Selection of the “XT GigE” option on EVS AvidPlayback Server.
- In this setup, the clip will be streamed from Avid to the XT (Multicam 9 onwards) using Gigabit connection in FTP proxy mode.

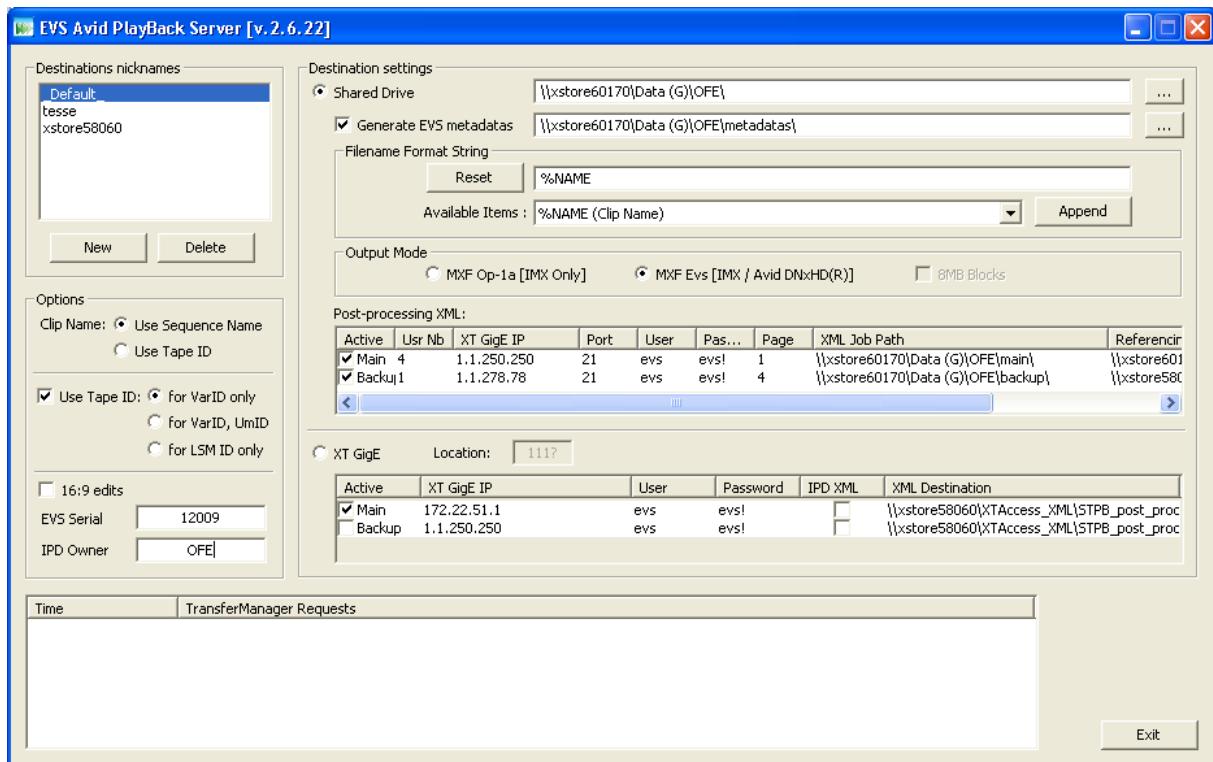

- Browsing and Playout on XT[2] server via IP Director 5 or via the Remote control
 - Browse the clips in the Database Explorer
 - Select a clip and drag it to a given XT[2] playout channel .
 - The clip can be played at the beginning of the restore

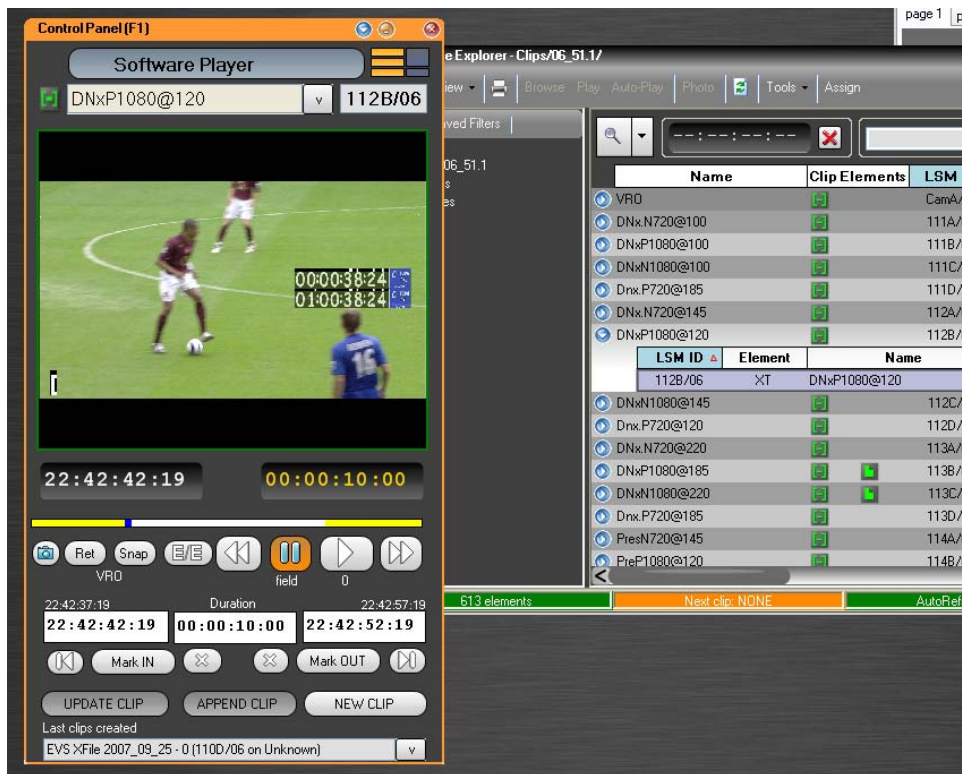

- **Multicam 8** : The clip can only be played at the end of the restore process from XFile.
- **Multicam 9**: From the start of the restore, the growing clips can be browsed and played using the EVS Remote or IPD 5. The “creating” clip is displayed on the XT monitoring.

7.4 WebService EVS-Avid Workflow

This workflow is still under development. Please use it only for test at the moment.

With the Avid WebService integration, we will be able to “check in” into Interplay Avid MXF OPAtom file. So we will not need anymore the transfer manager to ingest files into Interplay.

7.4.1 Clip transfer

This workflow is done in one step:


XTAccess will create Avid MXF OPAtom file (simple backup) on the Avid Storage and at the same time will reference the backed up file in the Interplay DB.

Clip Creation with IP Director or EVS remote


- In & Out boundaries. Set a clip name and Save
- This clip can be browsed using the Database Explorer and previewed in a XT[2] playout channel

Clip backup on Avid storage through XTAccess


- Select one clip, a part of clip or a list of clips
- Send those clips to an XTAccess Avid MXF OPAtom backup “target”

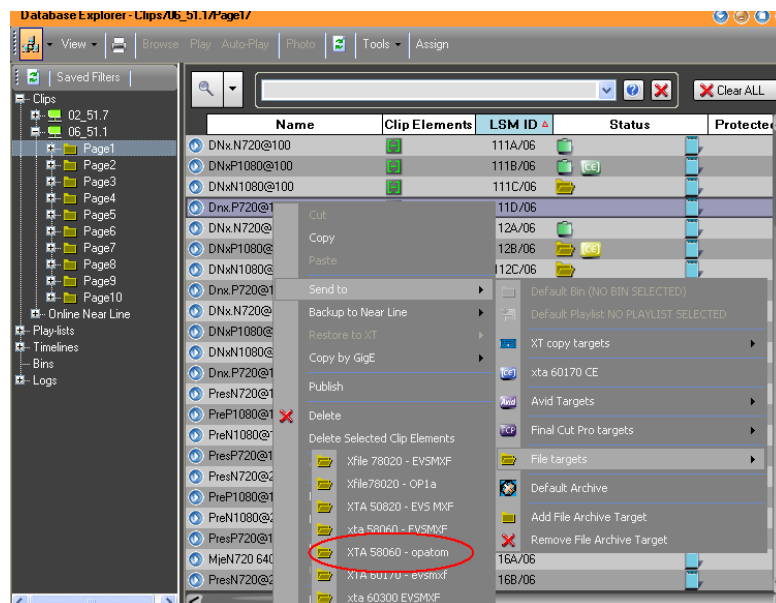

- The clip is backed up in Avid MXF OPAtom format on the Avid storage and checked in into Interplay.

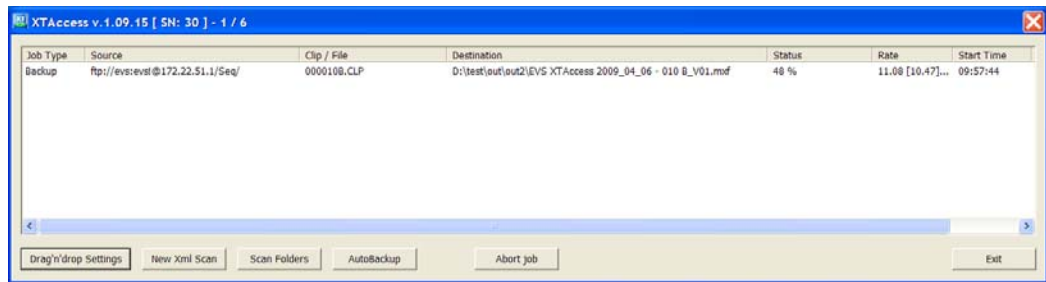


- Clip Import in Media Composer bin via Media Manager or Interplay Engine

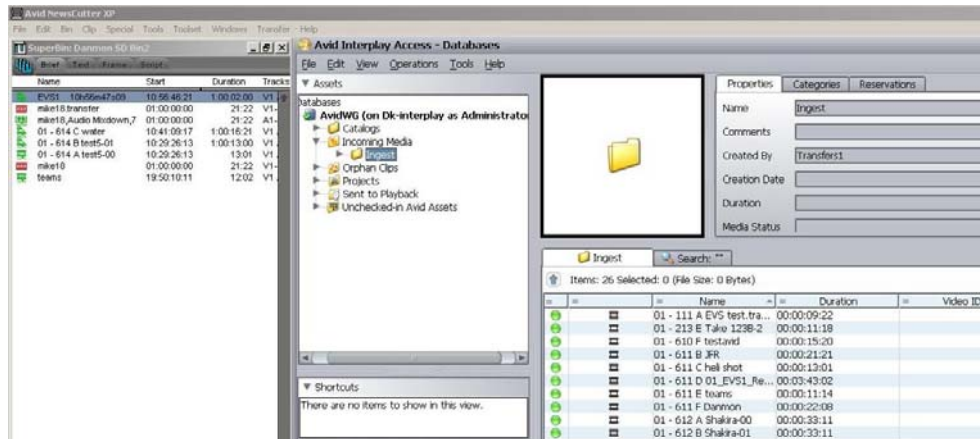


7.4.2 EDL transfer

Playlist Creation with IP Director


- create a playlist in IPDirector

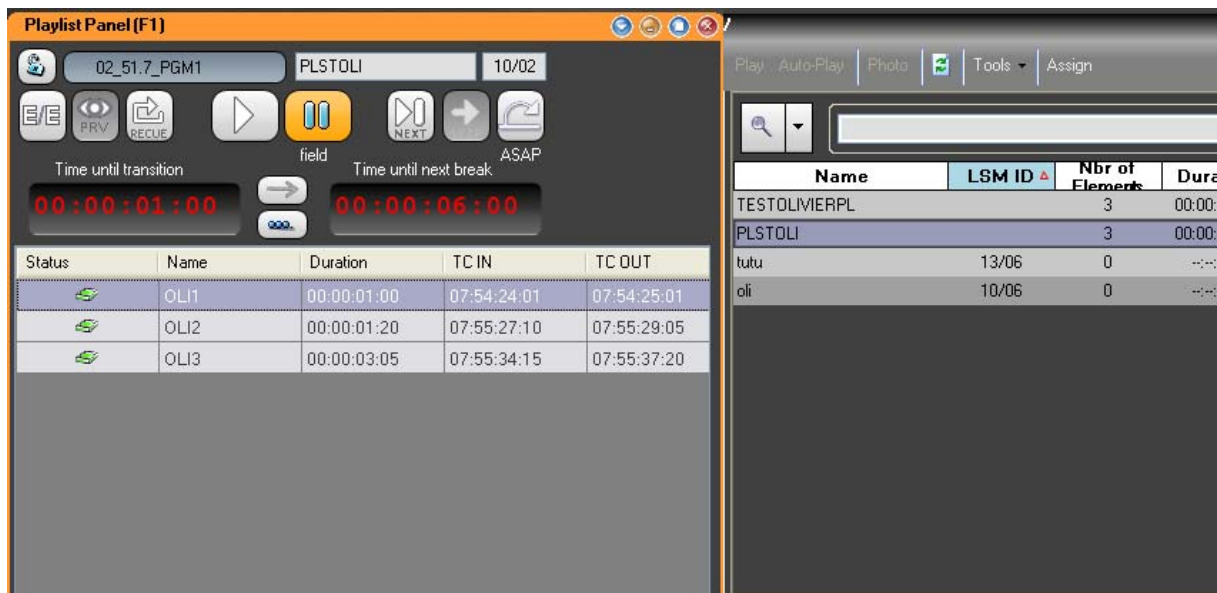

- Select the playlist
- Send this playlist to an XTAcess Avid MXF OPAAtom backup “target”. Be careful that the target path must be the folder where the Avid MXF OPAAtom files are stored. Example : \\172.22.53.3\Avid MediaFiles\

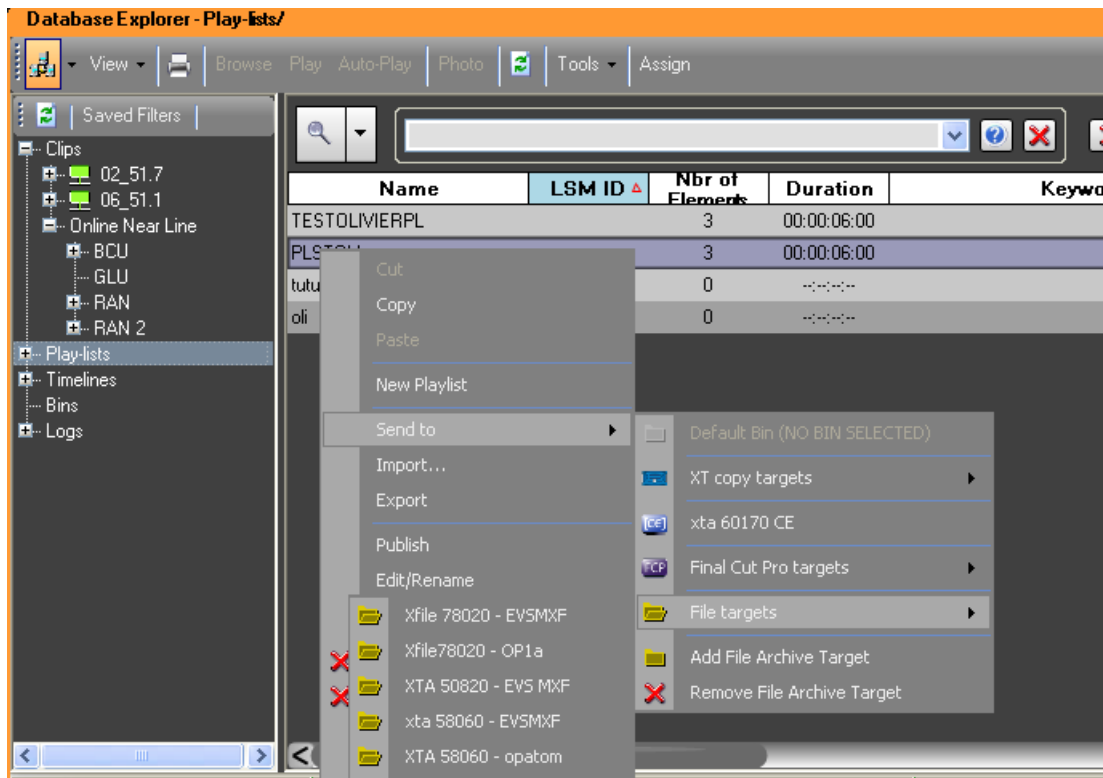


- All the clips present in the playlist are backed up and checked in into Interplay. A sequence corresponding to the playlist is created in Interplay with all the clips in cut mode. An AAF file can also be created.

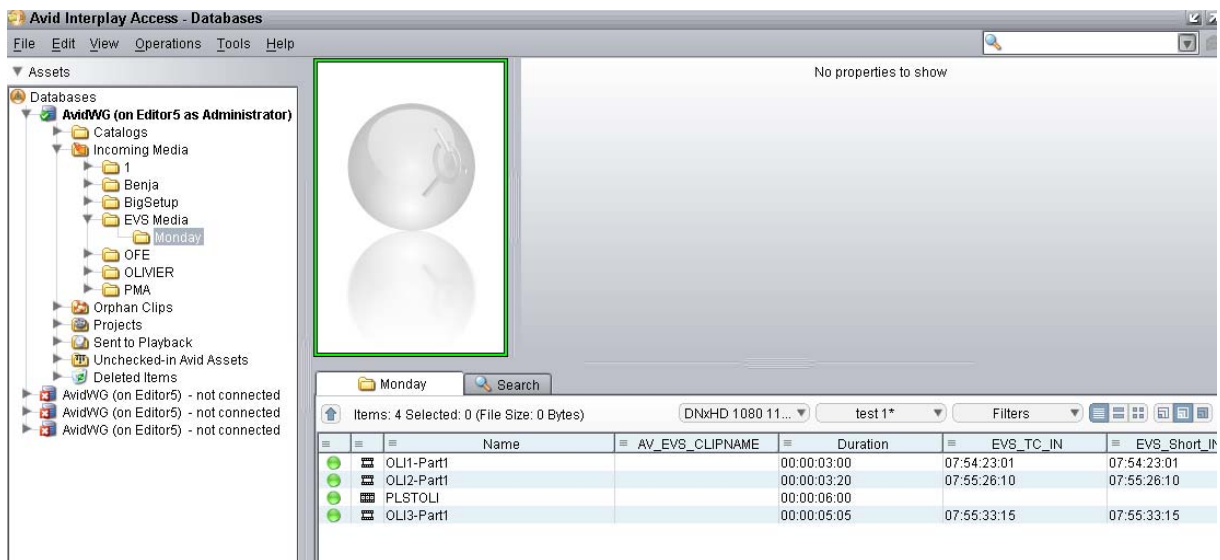

In this example: the playlist is called "PLSTOLI" and there is three clips in it: "OLI1", "OLI2", "OLI3"


- You can then import the sequence into MediaComposer

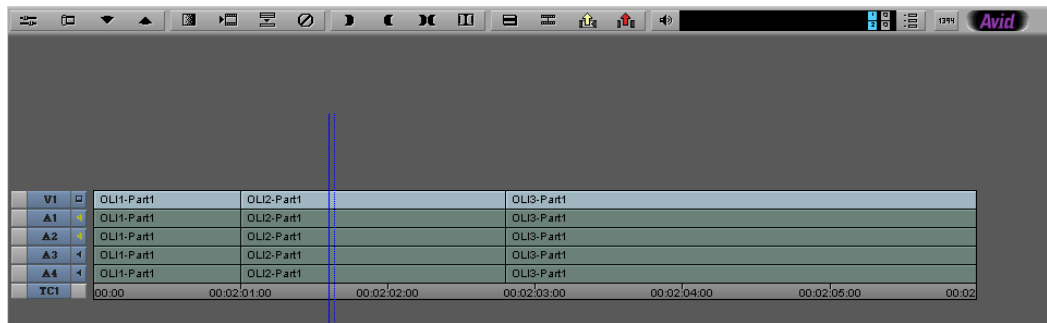


7.4.3 Restore

Export of the Sequence in AAF


- In the Media Composer, export your sequence in AAF

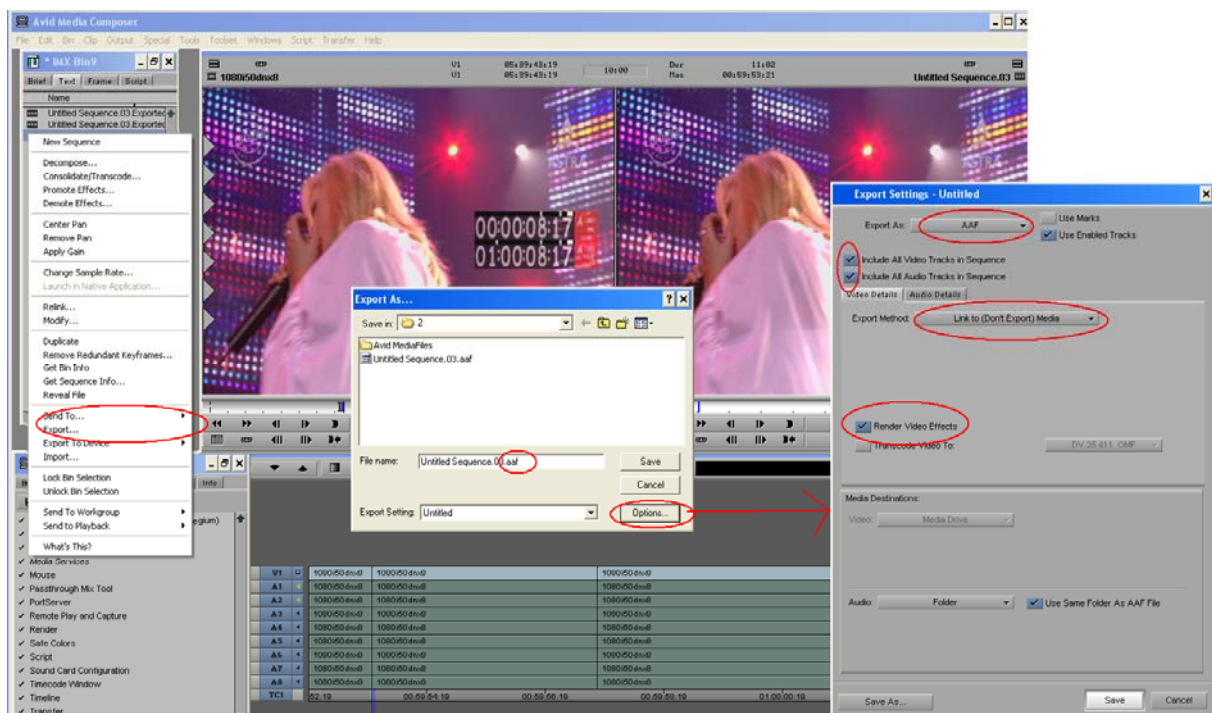

- Then you can use XTAccess and the scan folder to restore your sequence. XTAccess will read the aaf and restore the sequence in one clip.

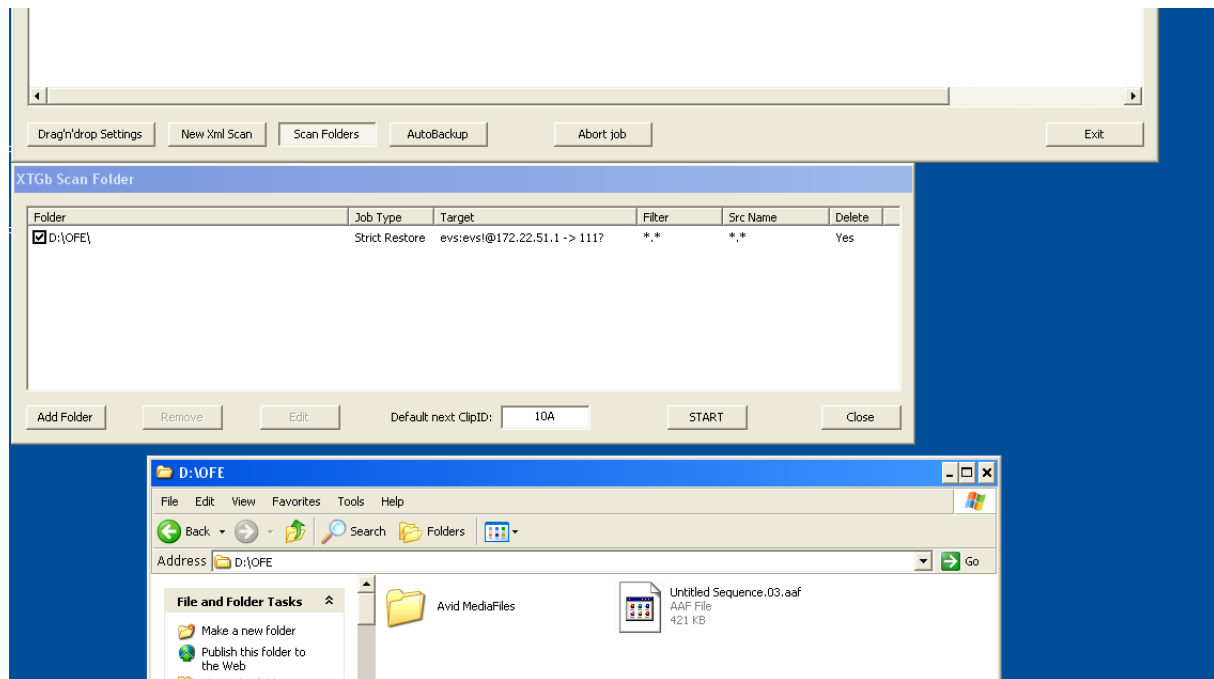

- Browsing and Playout on XT[2] server via IP Director 5 or via the Remote control
- Browse the clips in the Database Explorer.
- The clip can be played at the beginning of the restore

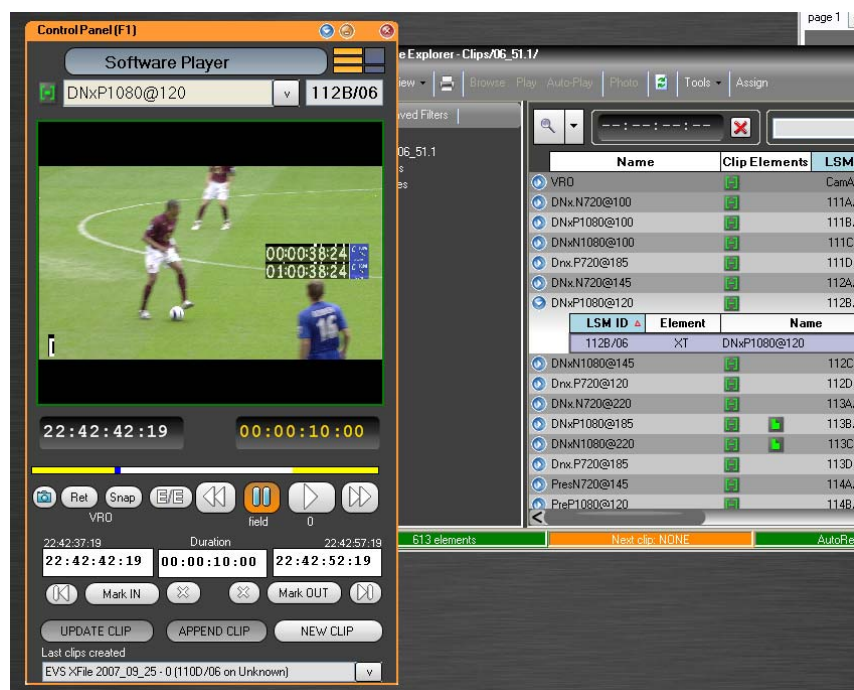

7.4.4 Limitation

- Use only for test at the moment
- No Edit While Transfer (EWT) capability
- Locator are not available

8 INSTALLSHIELDS

The interface with Avid involves 2 installshields:

- **EVS Avid Tools** is an EVS installshield for EVS & Avid dlls, as well as some EVS applications : EVS Avid Brower and EVS Avid Playback Server
- **Transfer Manager Client** is an Avid installshield mandatory to communicate with Transfer Manager Server.

This **section 8** explains how to install both installshields.

Section 9 is a simplified check-list for a quick installation of the EVS Avid tools and their configuration.

Section 10 explains in details which installshield and options to install on each device considered by the workflow. Configuration of applications and .ini files are also mentioned.

Note : the following sections only explain the installation and configuration of EVS DHM tools. Avid FTP DHM is a DHM developed by Avid, please contact Avid for more information about its installation and configuration.

8.1 EVS Avid Tools

During an import or an export with Avid Transfer Manager Server, EVS applications like EVS Avid Browser, EVS Avid Playback Server, XFile or XTAccess will tell Avid TM Server to communicate with EVS dlls to perform IMX or Avid DNxHD® Codec file demultiplexing and data (audio/video tracks) transfer (import) or generation of an IMX file from data received from TM Server (export). This means specific dlls and application must be installed. EVS Avid Tools setup is devoted to this task.

Reminder: EVS Avid tools dlls must be compiled with the specific Avid APIs.

- **Avid WG 4 (non Interplay)** : EVSAvid_Setup_1.8.xx.exe
- **Interplay v1.1.2 (TM v1.1.2)**: EVSAvid_Interplay_1.1.2_Setup_2.8.xx.exe
- **Interplay v1.1.6 (TM v1.1.5)** : EVSAvid_Interplay_1.1.5_Setup_2.8.xx.exe
- **Interplay v1.2.1 (TM v1.2.0)** : EVSAvid_Interplay_1.2.0_Setup_2.8.xx.exe
- **Interplay v1.6.0 (TM v1.6.0)** : EVSAvid_Interplay_1.6.0_Setup_2.8.xx.exe


List of items installed by each option:

File Name	From	EVS TM Server DLLs	Browser	PlayBack Server	TM Client DLLs
-----------	------	-----------------------------	---------	--------------------	-------------------


EVSSetupVC7.dll	EVS	x	x		x
EVSReceiverVC7.dll	EVS	x			
EVS_DHMVC7.dll	EVS	x			
EVSTMAuto.dll	EVS		x		x
EVSAvidBrowser2.exe	EVS		x		
EVSAPBSrv.exe	EVS			X	
AvidTMAutoAPIVC7.dll	Avid		x	X	x
TMClient.ini	Avid/EVS		x		x
IMX_System.mxf	EVS	x			
IMX_Header.mxf	EVS	x			
IMX_Footer.mxf	EVS	x			
Adding EVS Avid Tools to path	EVS	x	x	X	
Adding Port configuration in etc	EVS			X	

Dll to create Avid Proxy MOB from XML data
Dll to ingest Audio/video data in Transfer Manager
Dll to write Audio/video data generated by Transfer Manager (Playback)
Dll to control Transfer Manager in Auto mode
EVS application to browse files
EVS Playback server application (setting & monitoring)
Avid dll to communicate with Transfer Manager in Auto mode
ini file to specify the Transfer Manager device
MXF template file
MXF template file
MXF template file
Definition of the installation path
Addition of ports configurations used by Playback Server (Services files)


Launch EVSAvid_Setup_XX.exe

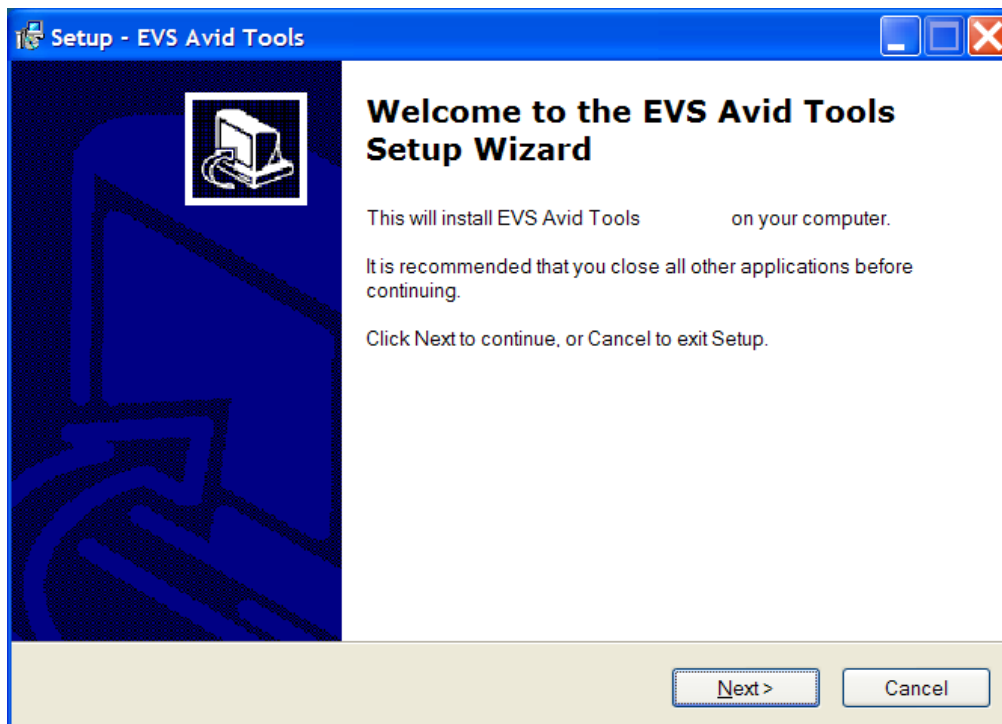

Click NEXT

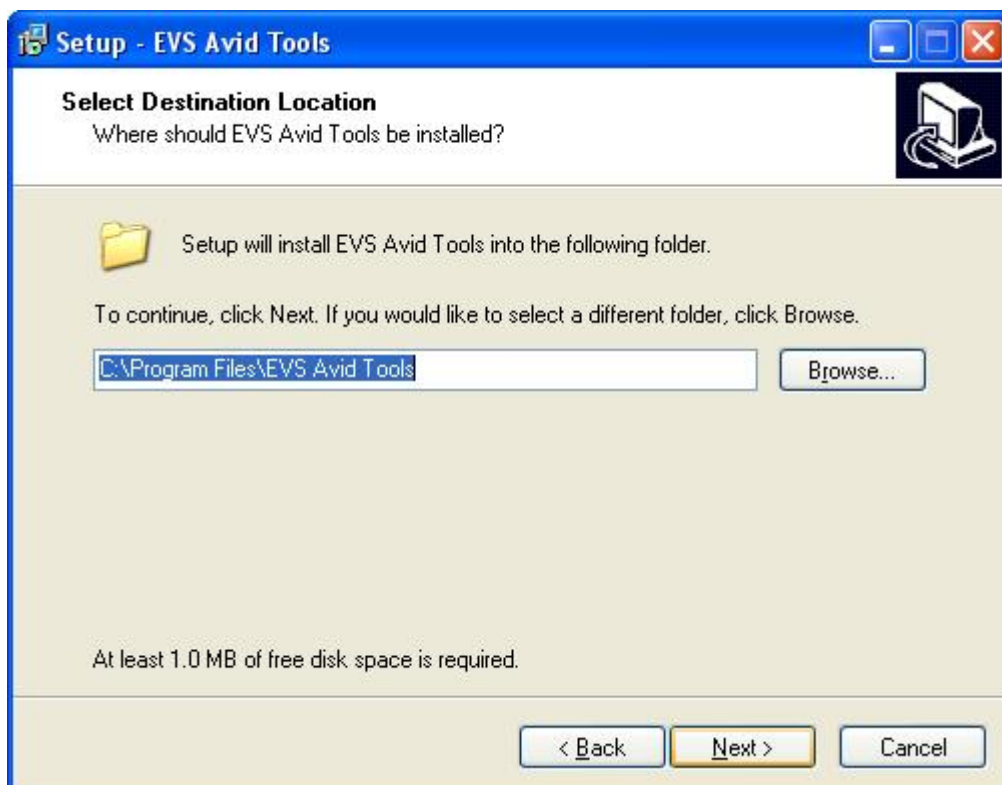


Select a directory and click NEXT

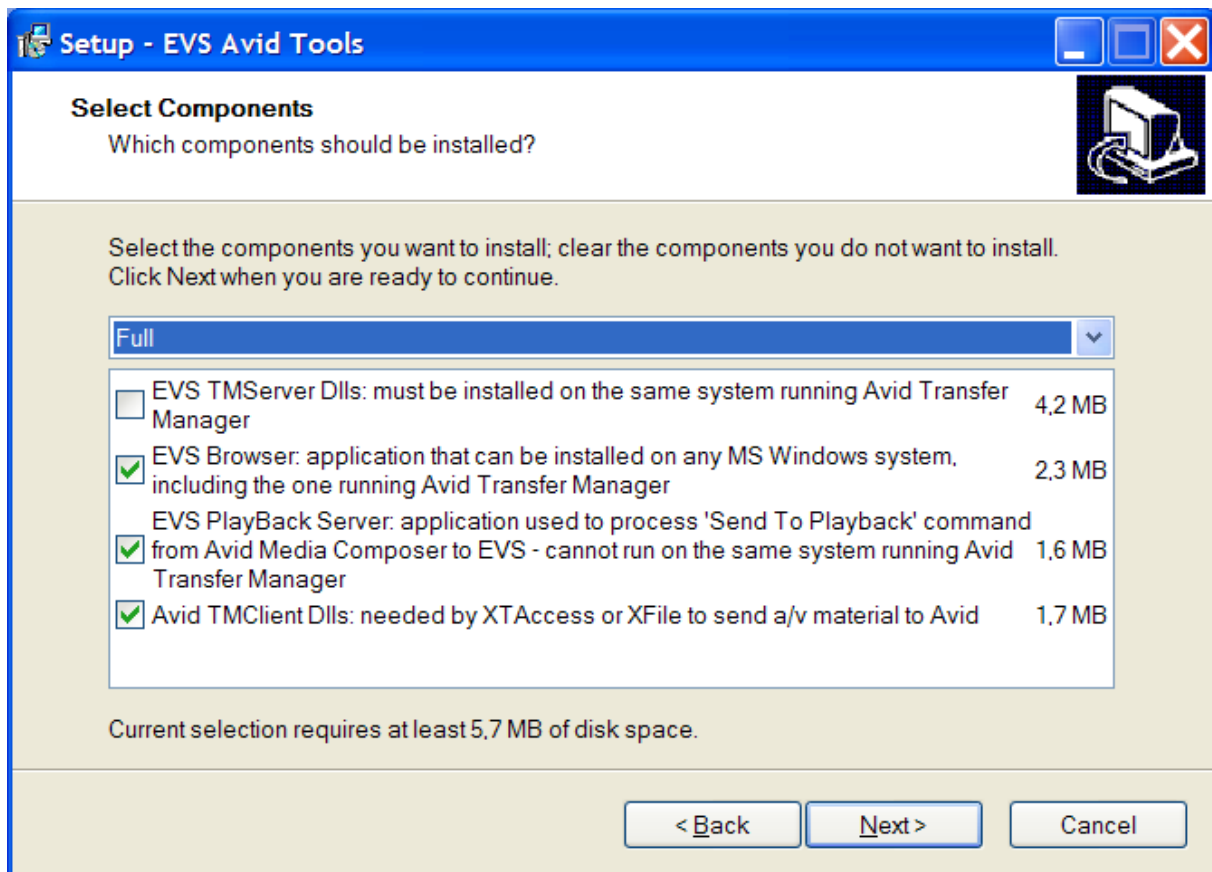

You must now select the dlls and applications to install the following project.

Each selected item will install the items defined above. See section 9 for typical installations.

Click NEXT

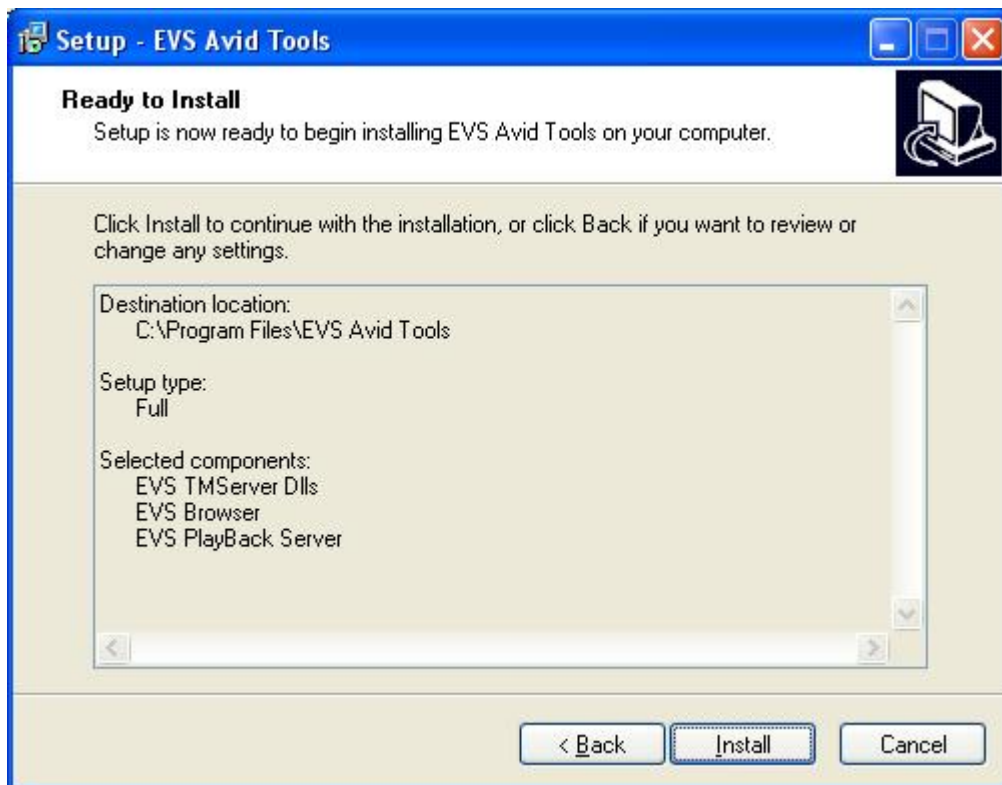

Click INSTALL



The setup is finished.


8.2 Avid Transfer Manager or Engine Client

Once any application will communicate with Avid Transfer Manager Server, the Transfer Manager Client must be installed on this workstation running the application. Applications like Avid Media Composer or News Cutter, EVS Avid Browser or XFile are concerned.


The version of the Avid Transfer Manager Client must be compliant to the relative version of transfer Manager Server.

So the Transfer Manager client will be installed separately from the EVS Avid tools.


Launch Transfer Manager Client setup from Avid install disks.

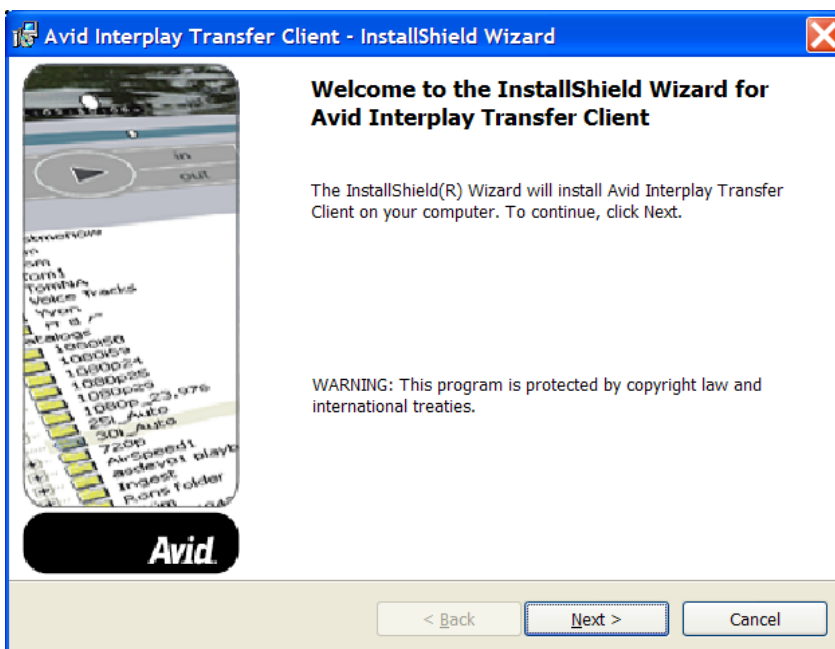


Click NEXT

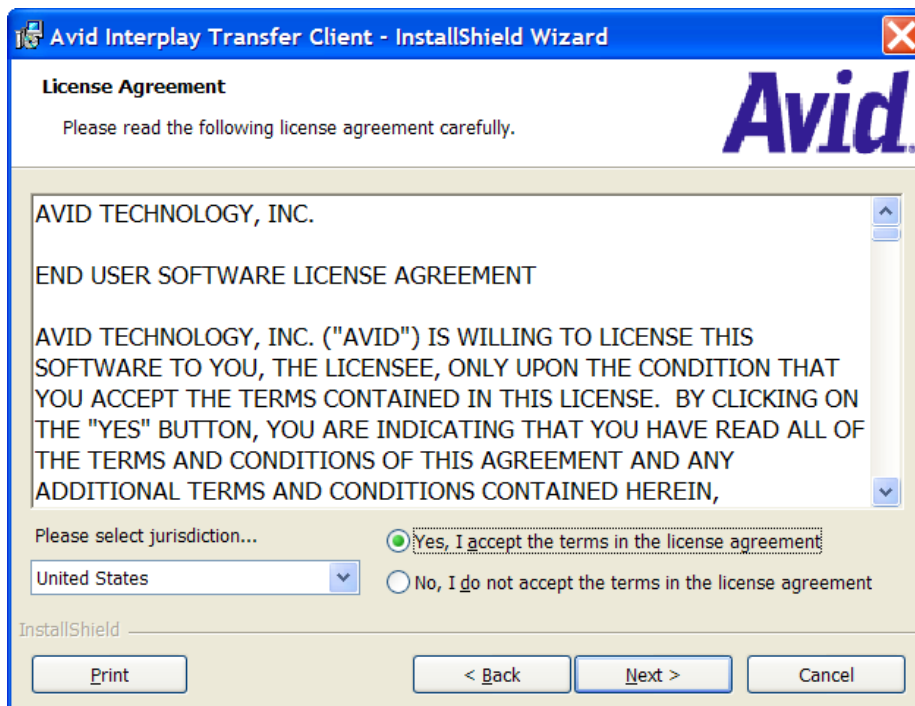

Select YES and click Next.

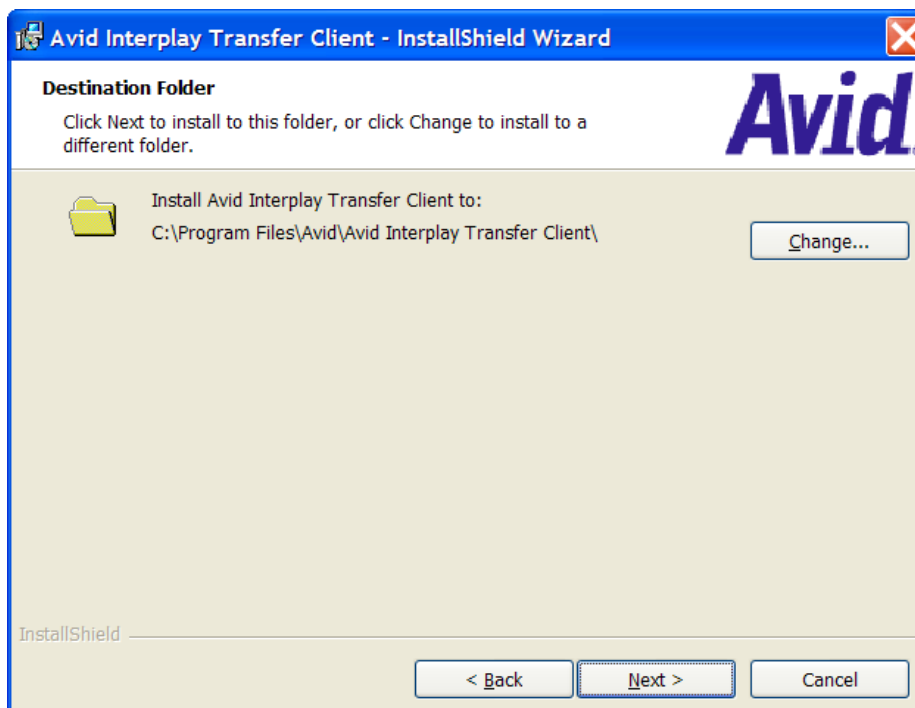

Select the directory and click NEXT. .NET framework 1.1 will be installed. Click NEXT in case it is not yet installed.

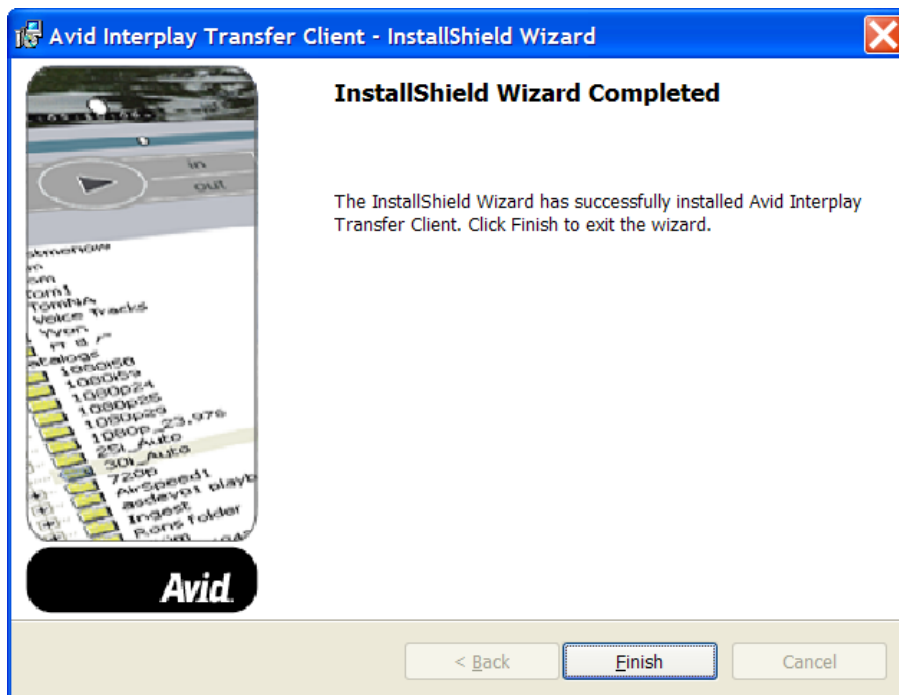

TM client is completely installed. You must restart the computer.

Notes :

- In case TM Client is already installed on your computer, Avid Installer will ask you to first remove the older version.
- If you install the WG4 Avid Transfer Manager Client you have to select the "Transfer Client for Editing System"


8.3 Avid Interplay WebService

Interplay WS requires the installation of the Avid Interplay Framework client as well as the Avid Interplay Web Services software itself.


After the Avid Interplay Framework has been installed, you can install Avid Interplay WS. This is a simple installation that you can run by double-clicking InterplayWS_Installer\Setup.exe




Click NEXT

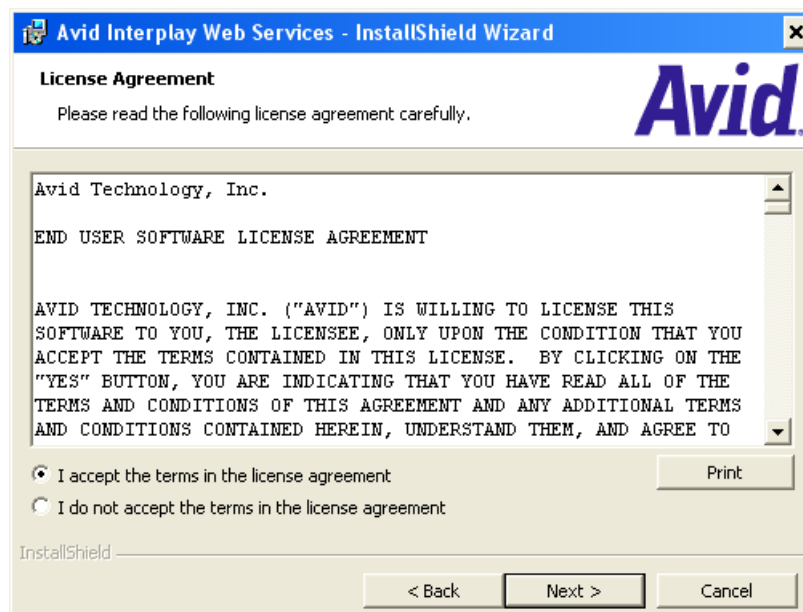

Accept and click Next

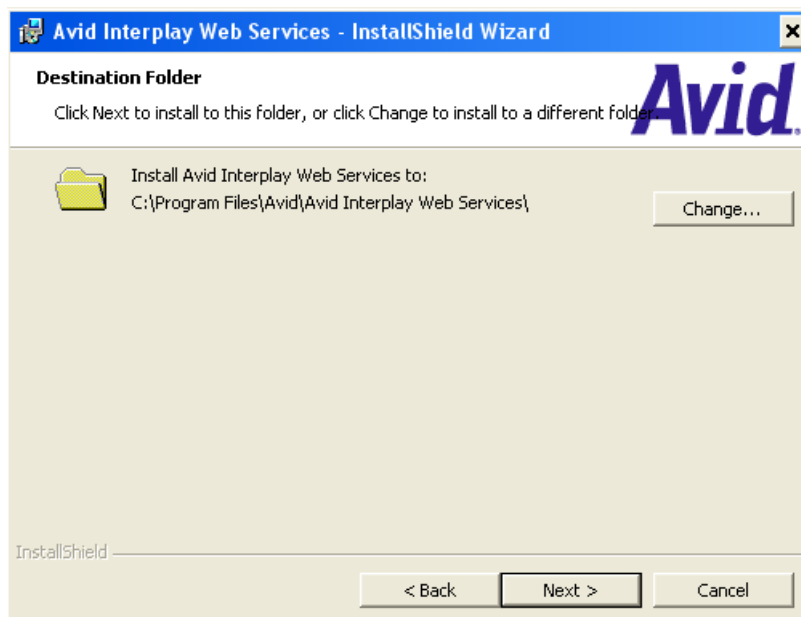

Select the directory and click NEXT.

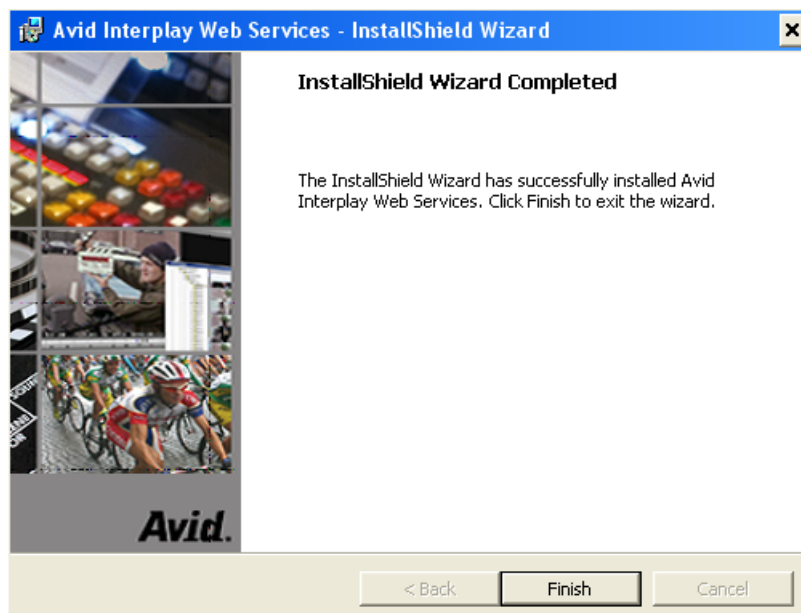

The WebServices are completely installed. You must restart the computer.

9 EVS-AVID QUICK CHECKUP

This section proposes a simplified procedure to install the EVS Avid tools. This is rather a check list than an exhaustive procedure.

Specific installation and configurations are explained in detail in section 10.

9.1 Simplified Procedure

9.1.1 Ingest

- **EVS device (XFile, XTAccess or EVS Avid Browser)**
 - Install Transfer Manager Client
 - Install EVS Avid tools with EVS Browser and EVS TMClient dlls options.
 - Edit TMClient.ini file with the name of the Transfer manager server device in :
 - C:\Program Files\EVSAvid Tools\ for EVS Avid Browser
 - C:\Program Files\EVS Broadcast Equipment\Xfile\ for XFile
 - C:\Program Files\EVS Broadcast Equipment\XTAccess\ for XTAccess
 - Share a drive where the backup file will be stored (not needed for streaming)
 - Configure EVS Avid Browser, XFile or XTAccess following the workflow.
- **Avid Transfer Manager Server device**
 - Install EVS Avid tools with EVS TM server dlls option.
 - Configure The Transfer Manager configuration : Ingest devices
 - Check the connection with EVS device and Shared drive (in case of backup files)
- **Avid Media Composer device (“Pull” mode only)**
 - Install Transfer Manager Client
 - Install EVS Avid tools with EVS Browser option.
 - Edit TMClient.ini file with the name of the Transfer manager server device in :
 - C:\Program Files\EVSAvid Tools\ for EVS Avid Browser
 - Configure EVS Avid Browser.

9.1.2 Send to Playback

- **EVS device (any workstation except Avid Transfer Manager Server)**
 - Install Transfer Manager Client
 - Install EVS Avid tools with EVS Playback Server option.
 - Edit TMClient.ini file with the name of the Transfer manager server device in :
 - C:\Program Files\EVSAvid Tools\ for EVS Avid Browser
 - Share a drive where the restore file will be created (only in shared drive mode – not XT FTP)


- Configure EVS Avid Playback Server.
- **Avid Transfer Manager Server device**
 - Install EVS Avid tools with EVS TM server dlls option.
 - Configure The Transfer Manager configuration : Playback devices
 - Check the connection with EVS device and Shared drive (in case of shared drive mode – not XT FTP)
- **Avid Media Composer device**
 - Install Transfer Manager Client (if not yet installed)
 - Edit TMClient.ini file with the name of the Transfer Manager server device in Avid Media Composer settings of the project (Transfer tag):

9.2 Windows Net Working

- Confirm visibility across Windows network of XFile <-> Avid TM <-> MCA
- Create common user/password admin accounts on both PC's (XFile and PC running TM)
- If using DNS, be sure to add the XFile into the DNS table
 - Otherwise enter the Avid TM and XFile into each others windows host table
- Use command line to confirm visibility of XFile <-> Avid TM Server, and log in as required
- On XF[2] (or XStore[2]) create new folders
- Create folders "TO_AVID" and "FROM_AVID"
- Share both folders with full Read/Write privileges
- Create a Shared folder on TM PC
- On XFile, create mapped network drive to Avid TM to confirm and force log in
- On Avid TM, create mapped network drives on XFile

9.3 Avid Transfer Manager (WG4) / Transfer Engine (Interplay)

- Install EVS TMServer dlls (from the EVS Avid Tools setup)
- Setup TM Server Configuration

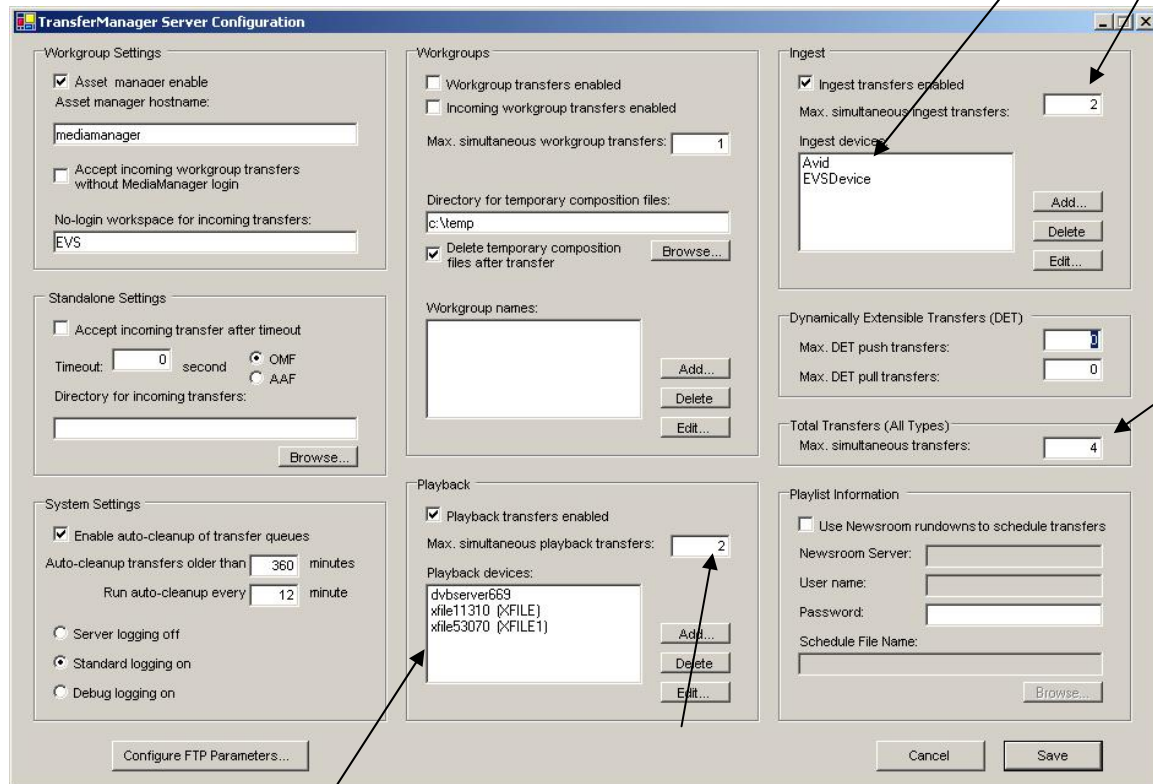

() Workgroup settings (normally defined by system administrator):

- Asset Manager HostName only in case the system is connected to an Avid Media Manager server
- Non-login Workspace for incoming transfer: please enter the workspace name where the files will be stored, in this example EVS.

() Stand-alone Settings: only in case of a TM in stand-alone on MCA station.

- Select OMF or AAF mode, depending on the costumers standard
- Directory for incoming transfer must be defined accordingly:
 - OMF : Drive:\OMFI MediaFiles
 - AAF : Drive:\Avid MediaFiles\MXF\1 for example

() Playback:

- Select "Playback transfers enabled"
- Choose the max. simultaneous playback transfers, e.g. 2

- Add the Hostname of the computer where the EVS Avid Playback Server is running

() Ingest:

- Select “Ingest transfers enabled”
- Choose the max. simultaneous ingest transfers, e.g. 2
- Add the EVS ingest device used for transfer (XFile or EVS Avid Browser). In this example, it is EVSDevice (TM Host name) like defined above.

() Total transfers:

- The value must be $\geq 2 \times \text{\# ingest transfers} + \text{\# playback transfers}$
- Max Total transfers advised by Avid: 8

() Shared hard drive location accessible by Transfer Manager

() Storage Drive mapped on Transfer Manager

! Make sure Transfer Manager can reach the hard drive location through IP Address as well as Hostname!!

! When working in OMF, Avid does not support “play while transfer”

9.4 XFile / XStream setup


- () Install EVS TMClient dlls (from the EVS Avid Tools setup)
- () Install Avid Transfer Manager Client
- () Edit C:\Program Files\EVS Broadcast Equipment\XFile\TMClient.ini
 - o [MyServer,MyWorkgroup]
MyServer = TM-UNITY, WORKGROUP

! Check the TM hostname and Workgroup in the System Properties of the Transfer Manager

- () Configure XFile Export settings
 - o “Default TM Hostname” is the ingest device in the Avid Transfer Manager configuration.
- () Select “Transfer To Avid TM” in the XStream Job Configuration if you want to stream directly into Avid

9.5 EVS Playback Server Setup

- () Install EVS Playback Server (from the EVS Avid Tools setup)
- () Install Avid Transfer Manager Client (If the Client is not installed, running the EVS Playback Server will generate an error)
- () Check in C:\Windows\System32\Drivers\Etc\services if the following lines are (automatically) inserted:
 - o com.avid.xmgr is added by the Transfer Manager Client installshield
 - o com.avid.mct is added by the EVS Avid Tools setup (EVS Playback server option)
 - o com.avid.pbp is added by the EVS Avid Tools setup (EVS Playback server option)
- () Configure EVS Playback Server settings

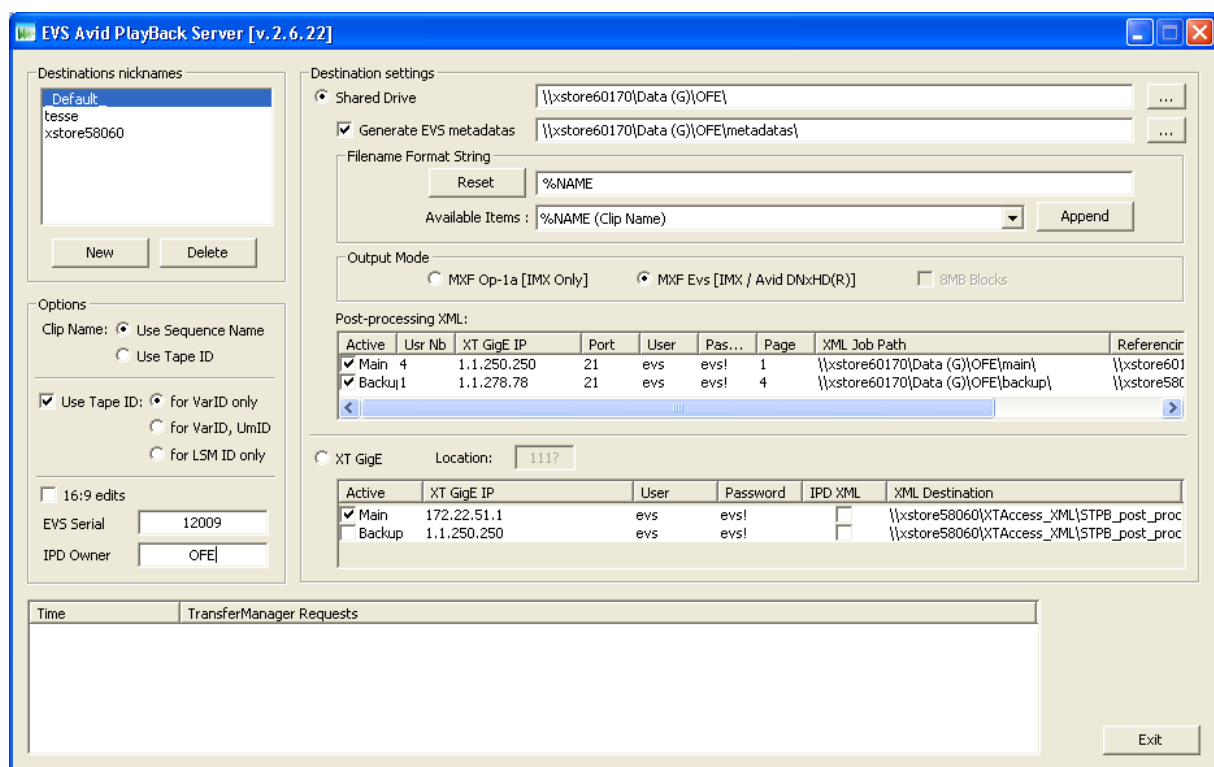


! Always use UNC paths!!

! XML always in the "Jobs_Incoming" folder


9.6 EVS Avid Browser setup

- () Install EVS Browser (from the EVS Avid Tools setup)
 - () Install Avid Transfer Manager Client (If the Client is not installed, running the EVS Avid Browser will generate an error)
 - () Edit C:\Program Files\EVS Avid Tools\TMClient.ini
 - o [MyServer,MyWorkgroup]
MyServer = TM-UNITY, WORKGROUP
- ! Check the TM hostname and Workgroup in the System Properties of the Transfer Manager**
- () Select Src Drive (always an UNC path)
 - () Select AAF or OMF, depending on the settings in Avid TM Configuration
 - () Set the Avid Ingest Device (the defined ingest device in the Avid Transfer Manager configuration)
 - () Restart EVS Avid Browser after changes have been made (not mandatory)

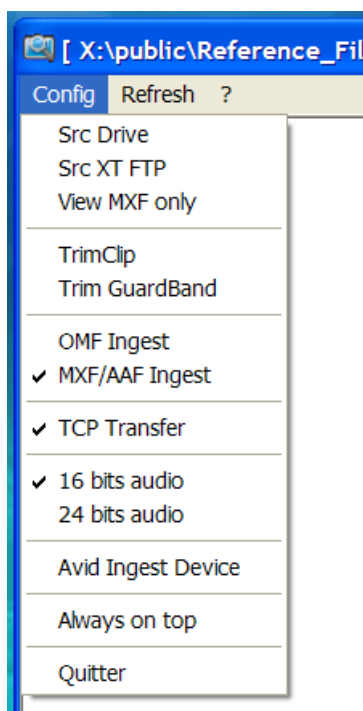


9.7 Media Composer / News Cutter setup

- () Make sure Avid Transfer Manager Client is installed
- () Set Media Creation (in the Project Settings) to OMF or MXF (identical to what is set in Avid Transfer Manager)

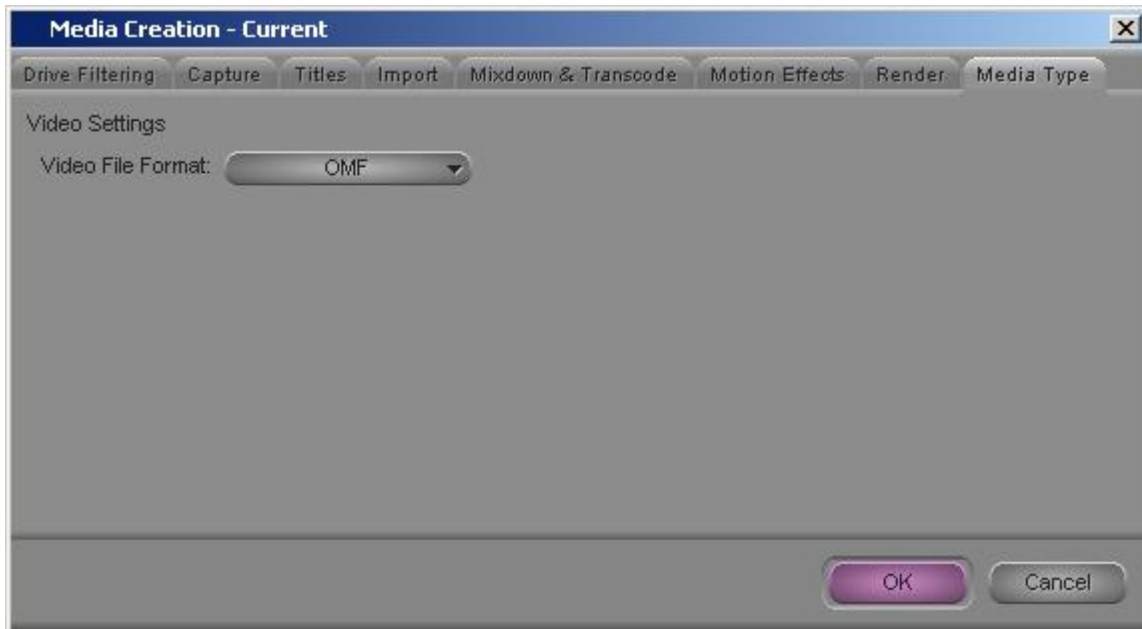

- () Set Media Creation (all tabs) to MPEG 30, 40 or 50, according to what bitrate the footage is recorded on XT[2]
- () Set Transfer settings (in the Project Settings)
 - o TMClient.ini settings:
 - Server : Computer name of the server where runs Avid Transfer Manager Server. Example : TM-UNITY
 - Workgroup : example : Workgroup

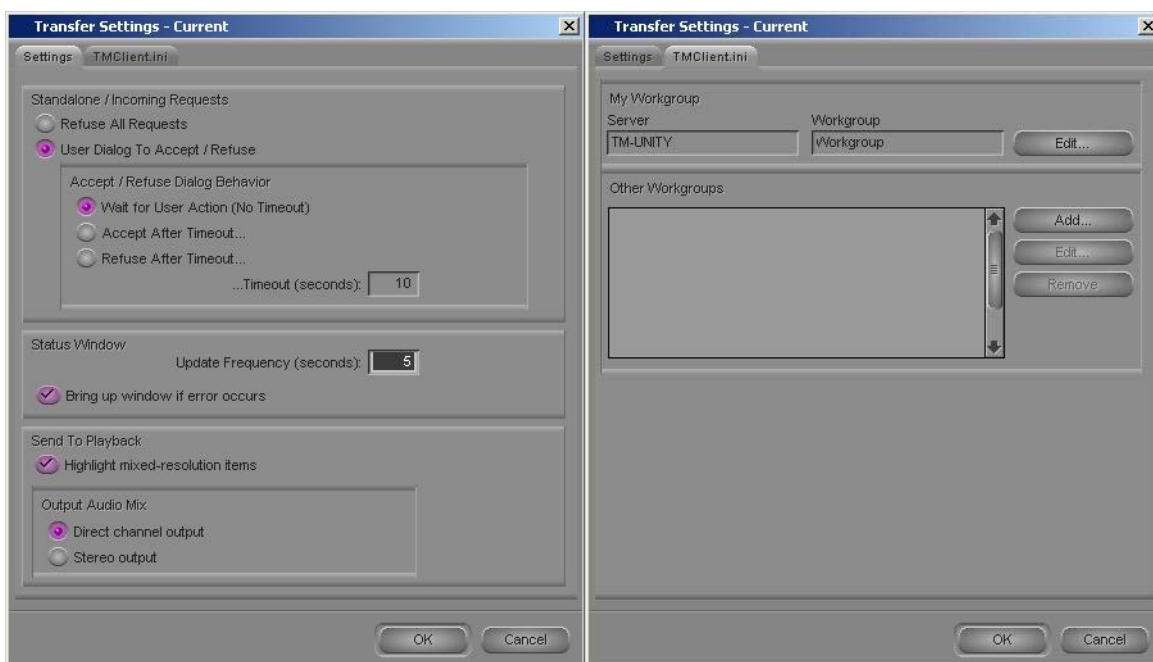

9.8 Useful information

At least one audio track and one video track must be present in the time line.


All video effects need to be rendered before transfer.

10 DETAILED INSTALLATION AND CONFIGURATION

This section explains in details which installshield and options to install for each workflow. The installation for each installshield is explained in section 8.

The following diagram shows a typical EVS/Avid system and the different installations of component for each device:

- EVS IPDirector workstation
- EVS XF[2] or XStore[2] (Where you can run XFile or XTAccess)
- Avid Transfer Manager Server
- Avid Editing station (Media Composer or NewsCutter).

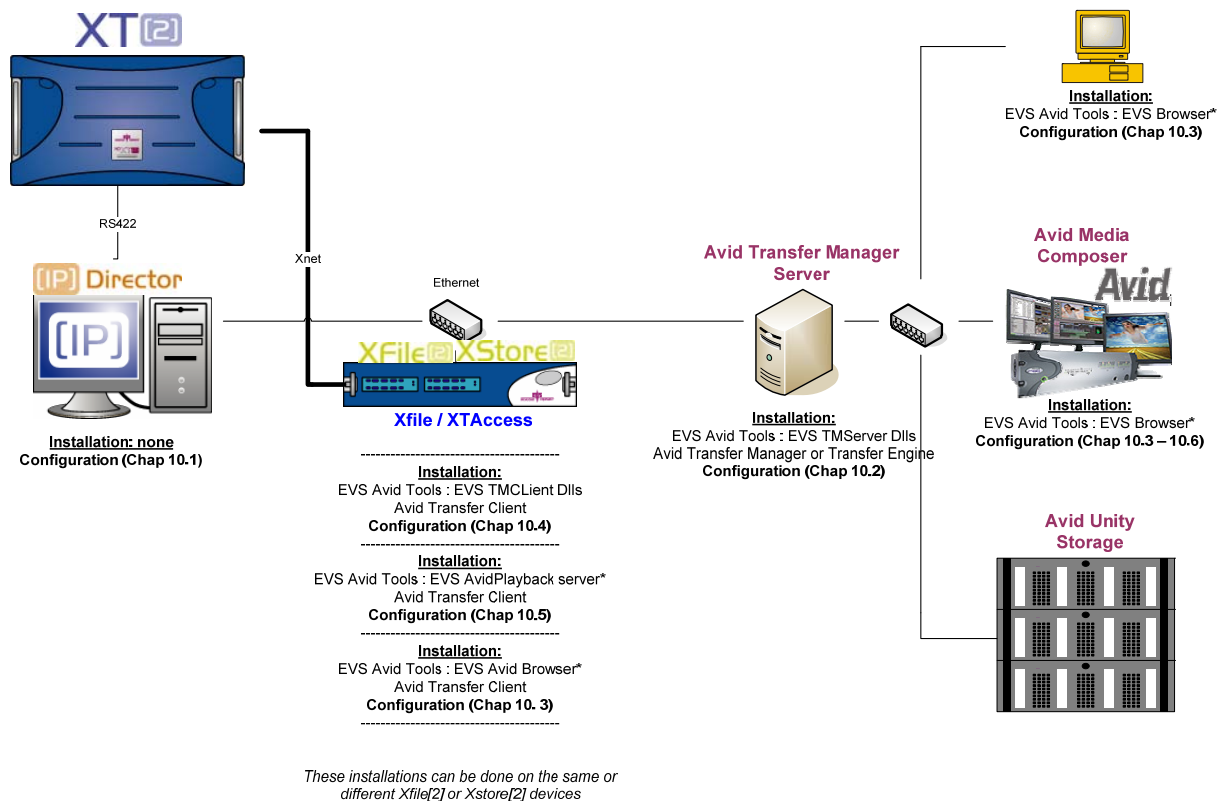

Devices to be configured for each workflow described in section 7:

- **“Push streaming” via IP Director** : IPDirector - config only (§ 10.1), XFile/XTAccess (§ 10.3), Avid Transfer Manager Server (§ 10.2)
- **“Push” via backed up files** : XFile/XTAccess maintenance menu (§ 10.3) or EVS Avid Browser on any device (§ 10.4), Avid Transfer Manager Server (§ 10.2)
- **“Pull” via backed up files or streaming Gigabit XT[2]** : EVS Avid Browser on Avid Media Composer (§ 10.4), Avid Transfer Manager Server (§ 10.2)
- **Live feed streaming (XStream)** : XFile (§ 10.3), Avid Transfer Manager Server (§ 10.2)
- **Send to Playback** : XFile (§ 10.5), Avid Transfer Manager (§ 10.2), Avid Media Composer (§ 10.6.2)

The installation of components for each device is described in the followings sections.

 
10.1 EVS IPDirector

IPDirector must be configured for the workflow “push” streaming to Avid explained in section 7.3.2.

No EVS Avid tools or Avid Transfer Manager Client need to be installed on the IPDirector workstation. You just need to configure “Avid Export” target. Note that “push” and “pull” via backup files workflows described in sections 7.3.3 & 7.3.4 need to create “Backup” target : they are not explained in this section as this configuration is related to IP Director and XFile/XTAccess backup only.


Open the Remote installer of the IPDirector

Click on the configure button:



XML Unit

Select the XML Unit Tab and Click on the ‘New’ button to add a new XML unit.

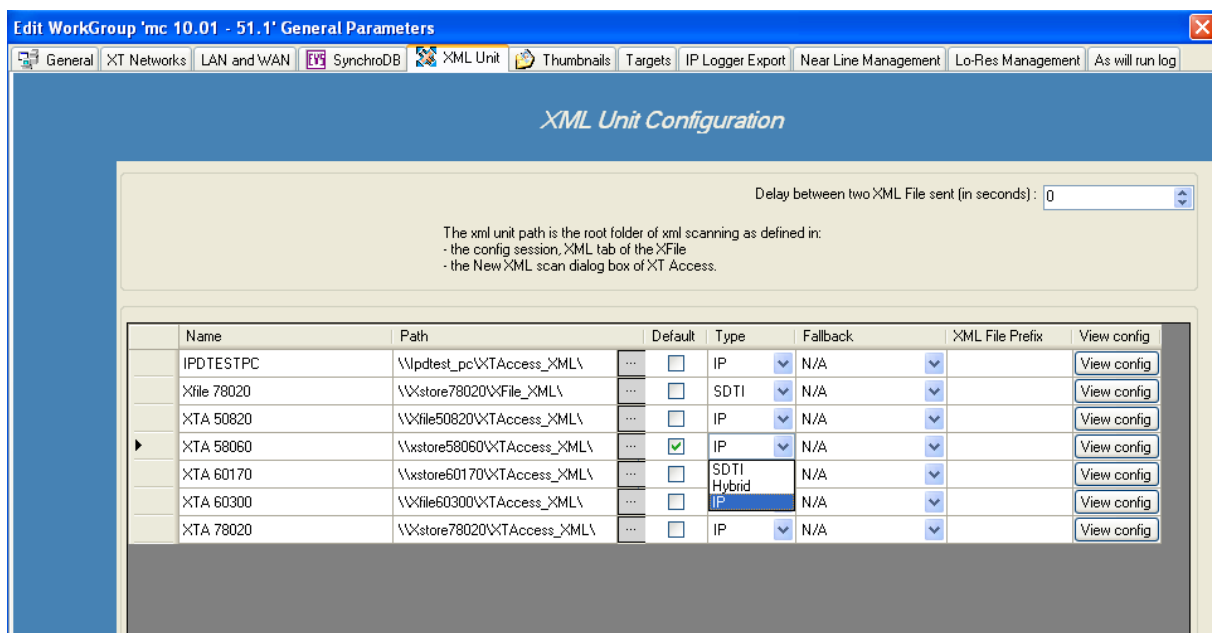


- **Name** : Name of the XML Unit

- **XML Unit Path** : UNC of the folder where the XML file will be put. This is the folder to be scanned by XTAccess.
- **Default** : specify the default XML Unit (in case not specified in the other configuration tabs).
- **Unit Type** :
 - IP : Gigabit access with XTAccess (to be chosen !)
 - SDTI : SDTI access with XFile
 - Hybrid : future use
- **Fallback XML Unit** : To specify a second XML Unit path. In case the XML Unit Path is not accessible, Fallback XML Unit will be used instead.
- **XML File Prefix** : To specify a prefix to the XML file.

Targets Tab

Select the Avid TM Tab and Click on the 'New' button to add a new target.

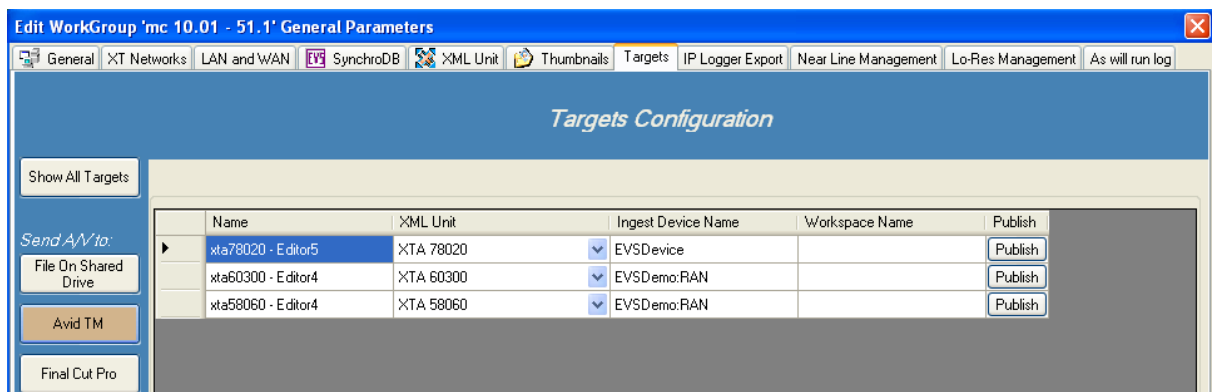


- **Name** : This name will appear in the IP Director 'Send To' menu. It is used to identify the AVID target in the IP Director interface
- **XML Unit**: specified the XML unit which will be used to perform the job. This unit should be located on the XFile or on the XTAccess which will be connected to the AVID Transfer Manager.
- **Ingest Device Name**: Name of the EVS Device for the interface with Avid Transfer Manager Server. This information is used by Avid Transfer Manager Server to specify from which ingest device the transfer is initiated. If you want to ingest your clips in a specific subdirectory into Interplay, you can add this subdirectory after the ingest device. Example: EVSDemo:Day1 (in this case the clips will appear in Interplay into the /Ingest/Day1 folder (see chapter on the creation of folder into Avid Interplay Access)).
- **Workspace Name**: Name of the "Avid Workspace"/"Interplay Access folder" where you want to store your clip in the Avid DB

10.2 Avid Transfer Manager Server

Avid Transfer Manager must be configured for all the workflows described in section 7.

STEP 1 : Install EVS Avid Tools.

Launch EVS Avid Setup and select EVS TMServer dlls (see section 8.1).

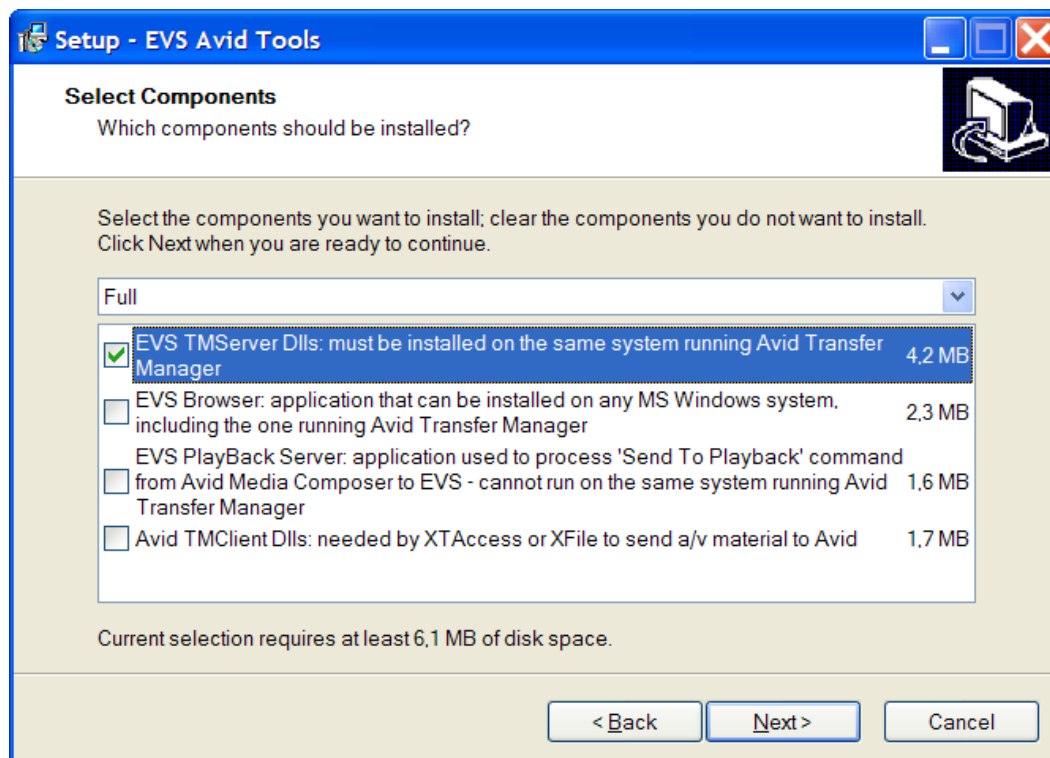

STEP 2 : Transfer Manager Server Configuration .

This is a typical configuration to be used with EVS. See “Avid Unity Transfer Manager – Setup and User’s Guide” for additional information.

TransferManager Server Configuration

Workgroup Settings

☒ Asset manager enable
Asset manager hostname:

☐ Accept incoming workgroup transfers without MediaManager login

No-login workspace for incoming transfers:

Standalone Settings

☐ Accept incoming transfer after timeout

Timeout: second ☒ OMF ☐ AAF

Directory for incoming transfers:

System Settings

☒ Enable auto-cleanup of transfer queues

Auto-cleanup transfers older than minutes

Run auto-cleanup every minute

☐ Server logging off

☒ Standard logging on

☐ Debug logging on

Workgroups

☐ Workgroup transfers enabled

☐ Incoming workgroup transfers enabled

Max. simultaneous workgroup transfers:

Directory for temporary composition files:

☒ Delete temporary composition files after transfer

Workgroup names:

Ingest

☒ Ingest transfers enabled

Max. simultaneous ingest transfers:

Ingest devices:

Dynamically Extensible Transfers (DET)

Max. DET push transfers:

Max. DET pull transfers:

Total Transfers (All Types)

Max. simultaneous transfers:

Playlist Information

☐ Use Newsroom rundowns to schedule transfers

Newsroom Server:

User name:

Password:

Schedule File Name:

Or since Interplay 1.6

Avid Interplay Transfer Engine Configuration

Workgroup Settings

☒ Interplay enabled

Interplay Engine hostname:

User name:

Password:

☐ Accept incoming workgroup transfers without Interplay login

No-login workspace for incoming transfers:

Standalone Settings

☐ Enable auto-cleanup of transfer queues

☐ Server logging off

☐ Standard logging on

☒ Debug logging on

Storage type:

Workgroups

☐ Workgroup transfers enabled

Directory for temporary composition files:

☒ Delete temporary composition files after transfer

Playback

☒ Playback transfers enabled

☐ Long GOP transfers enabled

Max. simultaneous playback transfers:

Playback devices:

Ingest

☒ Ingest transfers enabled

Max. simultaneous ingest transfers:

Ingest devices:

Dynamically Extensible Transfers (DET)

☐ DET enabled

Total Transfers (All Types)

Max. simultaneous transfers:

Playlist Information

☐ Use Newsroom rundowns to schedule transfers

- **Workgroup settings :**
 - Asset Manager HostName : in case the system is connected to an Avid Media Manager server, the name of the asset manager must be specified
 - Non-login Workspace for incoming transfer : please enter the Unity Workspace name, in this case EVS.
- **Standalone Settings :** to be filled in case of a TM in stand-alone on MCA station.
 - You must select either OMF or AAF mode. This must be compliant to the Media Creation mode in your project settings in MCA.
 - Directory for incoming transfer must be defined accordingly :
 - OMF : Drive:\OMFI MediaFiles
 - AAF : Drive:\Avid MediaFiles\MXF\1 for example
- **Playback :**
 - Select “Playback transfers enabled”
 - Choose the max. simultaneous playback transfers, e.g. 2 (value range is 0-20)
 - Add the computer name where the EVS Avid Playback Server is running. In this example, it is dvbserver669 or xfile11310.
- **Ingest :**
 - Select “Ingest transfers enabled”
 - Choose the max. simultaneous ingest transfers, e.g. 2 (value range is 0-20)
 - Add the EVS ingest device used for transfer (XFile or EVS Avid Browser). In this example, it is EVSDevice (TM Host name) like defined above.
 - You can also add a catalogue where the ingest files from EVS will be stored. You have first to create this catalogue on Interplay Access.
- **Total transfer :**
 - The value must be $\geq (2 \times \# \text{ ingest transfers} + \# \text{ playback transfers})$. When using the example above (4 ingest and 2 playout) this equates to a total of 10 simultaneous transfers.
 - Max Total transfer advised by Avid : 8

STEP 3 : Check the connection with storage drive for ingest and playback.

Transfer Manager Server must access through the network (LAN) the ingest and playback storage with read and write files capabilities.

You must thus check the access via UNC path (Windows host name and IP address) (e.g. using Windows Explorer/entire Network/).

Note that for the “push” streaming from IP Director where XFile is used as a gateway only, storage does not need to be accessible (only the IP address of XFile).

Remarks/tips :

- **Windows Workgroup / Domain :** As XFile is defined in a Workgroup, Avid Transfer Manager and other Avid devices must also be defined in a Workgroup, not a Domain ! Workgroups can be different but the same workgroup for all the EVS & Avid devices will facilitate the search of a device in the Windows network.
- **Domain ...**(to be completed)
- The storage drive can be mapped on the Transfer Manager server for an easy reconnection after a re-boot.
- Windows workgroup and logon could cause some difficulties to access the drive. Some tips :

- Use a login on the storage device with a password. Windows XP could block the access without password like login DVB and no password.


If you really want to keep no password change the policy on the transfer Manager to accept login without password.

Go to Start \ Administrative Tools \ Local Security Policy



Go to Local Policies / Security Options


Double click on "Accounts: Limit local account use of blank passwords to console logon only" and select Disabled

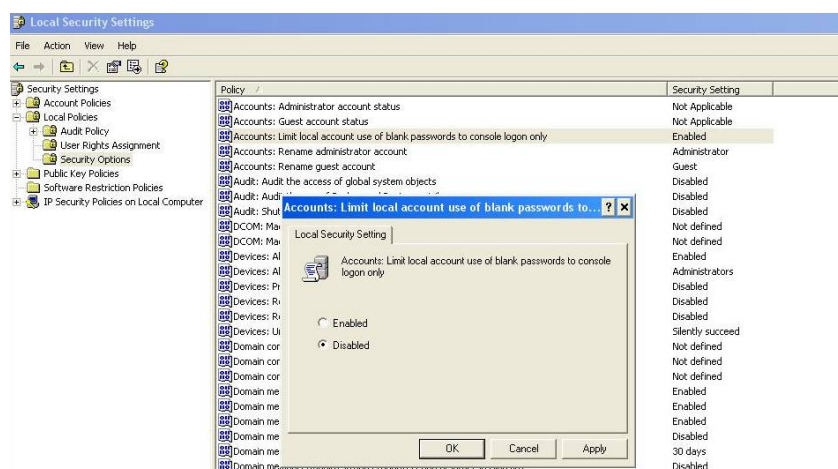

Press OK

Restart your computer.

- Create a User with login and password of the remote drive computer and add Administrator properties to this user.
- Once accessible, map the remote drive on the Transfer Manager server so the access will be automatically restored at each reboot of the Transfer Manager Server.
- TM Client does not need to be installed on the Transfer Manager Server device, unless other client application are running like Avid Media Composer (i.e. stand-alone configuration).
- If the Transfer Engine is installed on a dual core machine , you can increase the performance by selecting the two core into the Affinity of the Task Manager

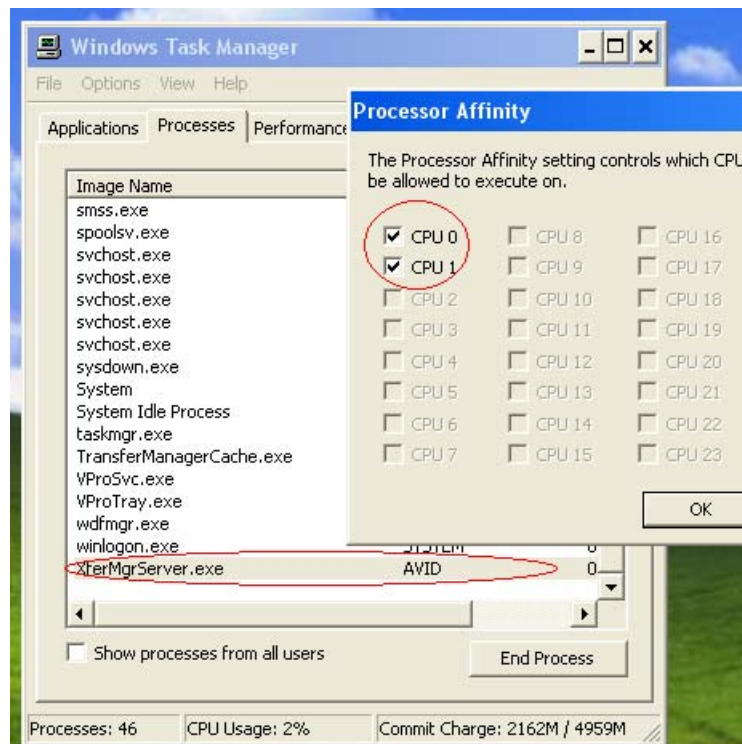


10.3 XFile/XStream & XTAcess

The EVS XFile, XStream & XTAcess are used in the following workflows:

- Clip “push” streaming via IP Director & XFile or XTAcess (see section 7.3.2).
- Clip “push” via backed up files (using XFile Export in Maintenance menu) (see section 7.3.3)
- Live Feeds streaming via XStream (see section 7.3.5).

STEP 1 : Install EVS Avid Tools.

Launch EVS Avid Setup and select Avid TMClient dlls (see section 8.1).

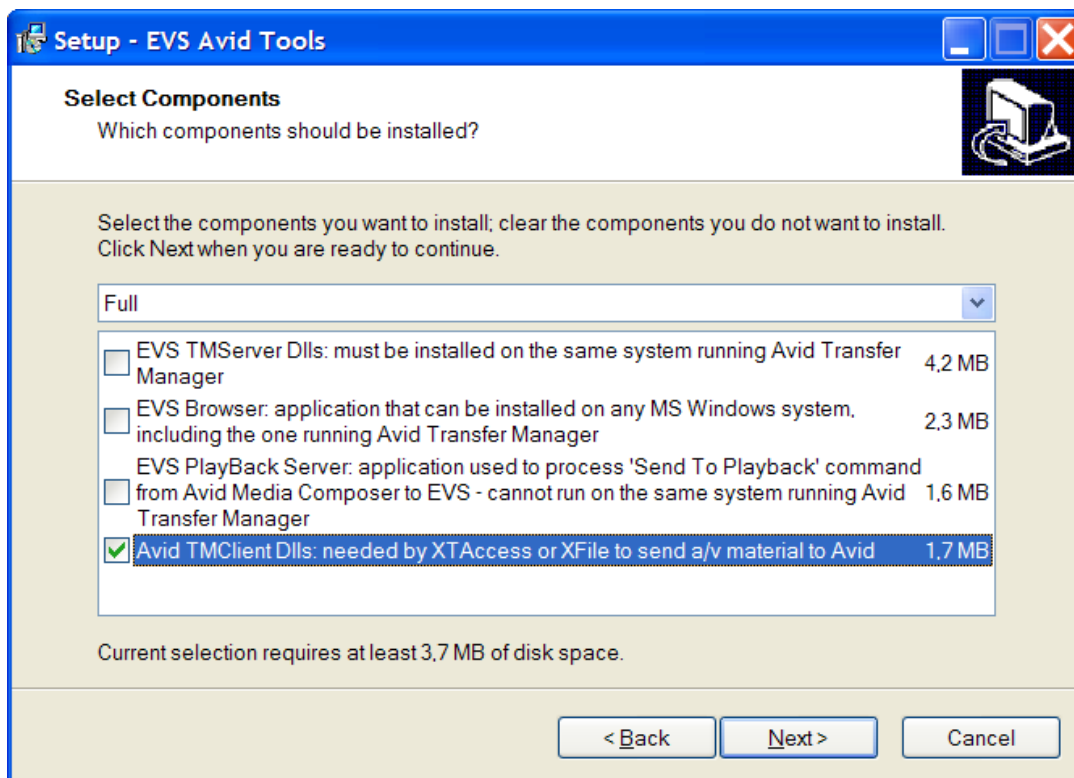

STEP 2 : Transfer Manager Client Installation

See section 8.2

STEP 3 : Edit TMClient.ini

Copy the TMClient.ini file from folder C:\Program Files\EVS Avid Tools\ to C:\Program Files\EVS Broadcast Equipment\XFile\ or/and C:\Program Files\EVS Broadcast Equipment\XTAccess\. Then replace the Avid TM server name in the TMClient.ini file by the computer name of the server where Avid Transfer Manager runs.

Example :

[MyServer,MyWorkgroup]

MyServer = TM-UNITY, WORKGROUP



- Tip : remove in TMClient.ini all references to servers which are not available on the network, otherwise initialisation of the transfer will be delayed (risk of timeout) before starting transfer of data.

STEP 4a : XFile/XTAccess Configuration.

Remark :

- Using IP Director

The XML file triggering the transfer will collect all the information related to the transfer. XTAccess is working only with XML file and IP director. So there is no configuration for XTAccess - see also XTAccess User's Manual.

- Using the XFile GUI

In XFile GUI, select "Export" configuration tab in "Config Session" : see also Xfile User's Manual.


The screenshot shows the 'XFile Config Session' dialog box with the 'Export' tab selected. The dialog has a blue background and a title bar. The 'Export' tab is highlighted in the top navigation bar. The main content area is divided into two sections: 'CleanEdit' and 'Avid TM'. The 'CleanEdit' section contains a checkbox for 'Update CleanEdit DB' and three text input fields for 'CleanEdit DB DSN Name', 'CleanEdit DB DSN User', and 'CleanEdit DB DSN Password'. The 'Avid TM' section contains a checkbox for 'Transfer All Clips Backedup', a text input field for 'Default TM Host Name', and two radio buttons for 'Default TM Media Format' (OMF and MXF/AAF, with MXF/AAF selected). Below these is a 'Target Name Format String' section with a 'Reset' button, a text input field containing '%XTNB - %CNB %CAM %NAME', a sample string 'Sample: 12 - 123 A clipname_24c', and an 'Available Items' list with '%CNB' selected and labeled '= Clip Number'. An 'Append' button is also present. At the bottom right, there is a faint watermark of three stylized human figures. At the bottom center, there are 'OK' and 'Cancel' buttons.

- **Transfer All Clips Backedup** : Each clip backed up will be automatically transferred to Avid if checked. Otherwise no action will be taken after a backup of file. **Typically not selected.**
- **Default TM Media Format** :
 - **OMF**: specify the OMF file format as file format on Avid storage
 - **MXF/AAF**: specify the MXF/AAF file format as file format on Avid storage
- **AvidTM:default TM_HostName** : e.g. EVSDevice as defined in the Transfer Manager Server Configuration (Ingest)
- **Target Name Format String** : This is the name format of the file to be generated in Avid storage.

STEP 4b : XStream Configuration.

Note: XFile must be first configured as described in the previous section for the Avid Host Name and Avid Name format string.

In XStream application, select “Jobs” configuration tab in “System Configuration” : see also XFile/XStream User’s Manual.

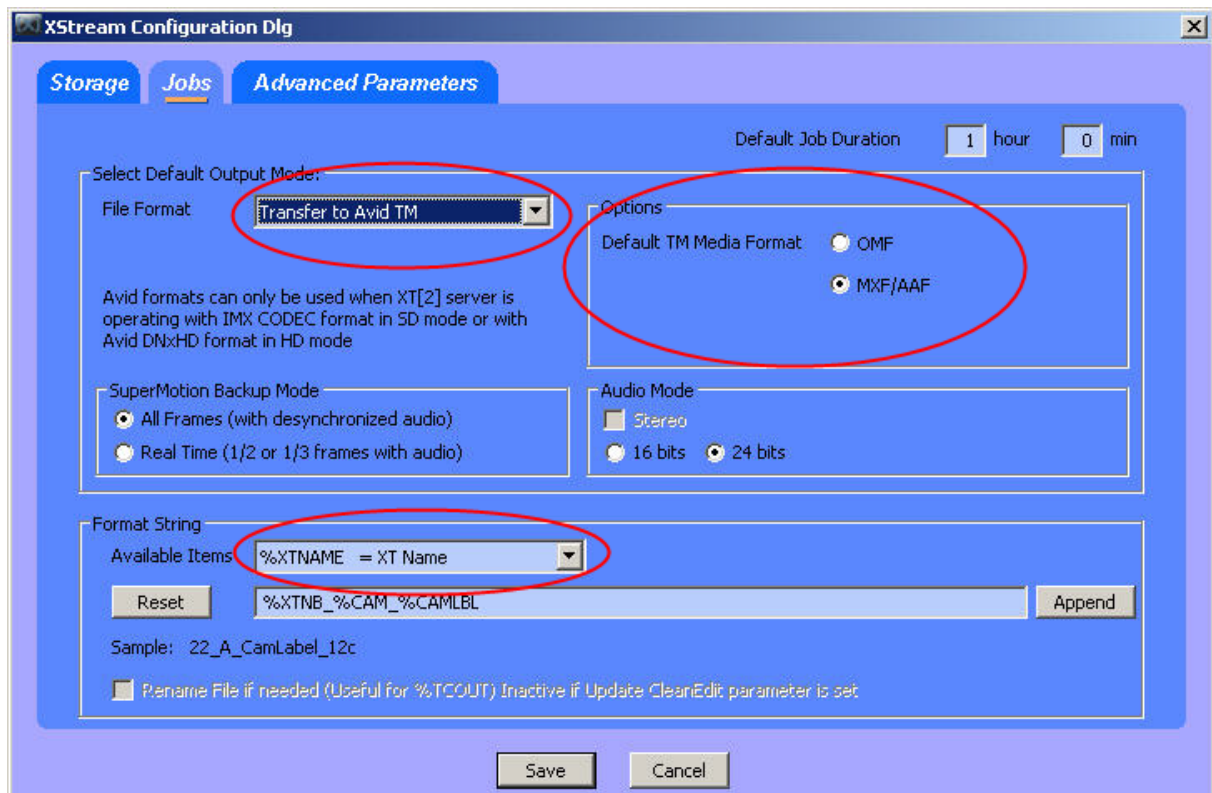

- **Default Output Mode** : Select Transfer to Avid TM.
- **Options** : select the OMF or MXF to specify the Avid file format used by Avid NLE or Unity Storage.
- **Format String** : Select and edit the Avid Target Name. This is the name format of the file to be generated in Avid storage

Remark

XStream will use the default TM host configured into XFile

STEP 4C : XTAccess Configuration

- XTAccess is used only with XML job files. But some XTAccess settings are not supported by XML. They must be specified in the local settings of the XML Jobs Scan

XT Access Settings [2MB Blocks EVS Mxf]

Target Path: D:\test\out\out2\

Target Format: Avid Ingest

Max Duration: 5 hour(s) 0 min

Audio Format: Stereo, 16 bits

SuperMotion Mode: All Frame [with unsynchronized / without audio]

Backup Filename Format String: EVS XTAccess %BDATE - %CNB %CAM

Avid Transfer Manager Settings: Avid Ingest Device: EVSDevice, OMF/Mxf

Apple Final Cut Pro Settings: Generate FinalCutPro XML, Quicktime Movie Local

Transcode Clip 'On the fly' [XServer / File -> File]

Transcode File [File -> File]

Copy / Restore Settings: Server IP: 172.22.51.6, Destination: 111?, User: evs, Password: evs!, Mode: Copy - Generate new VarID, MaterialID and LouthID

Show Settings Dialog ONLY if SHIFT Key is pressed while dropping fil

- **Audio Format** : Audio format configuration
16-Bit/24-Bit : stereo button to select the audio resolution.
- **Avid Ingest Device** : Avid Host name defined in Avid Transfer Manager server configuration (Ingest) if not defined into the XML file. **OMF/MXF**: Stereo button to select Avid file format after Avid ingest. : OMF or MXF/AAF.


10.4 EVS Avid Browser

The EVS Avid browser is used in the following workflows :

- Clip “push” via backed up files (see section 7.3.3): the browser is installed on any remote device connected to Avid Transfer Manager and XFile storage via LAN.
- Clip “pull” via backed up files (see section 7.3.4) : the browser is installed on the Avid editing station (i.e. Avid Media Composer)
- Clip “pull” streaming from Gigabit XT[2] – Multicam 9 onwards (see section 7.3.5) : the browser is installed on the Avid editing station (i.e. Avid Media Composer) and configured in FTP XT access mode.

STEP 1 : Install EVS Avid Tools.

Launch EVS Avid Setup and select EVS Browser (see section 8.1).

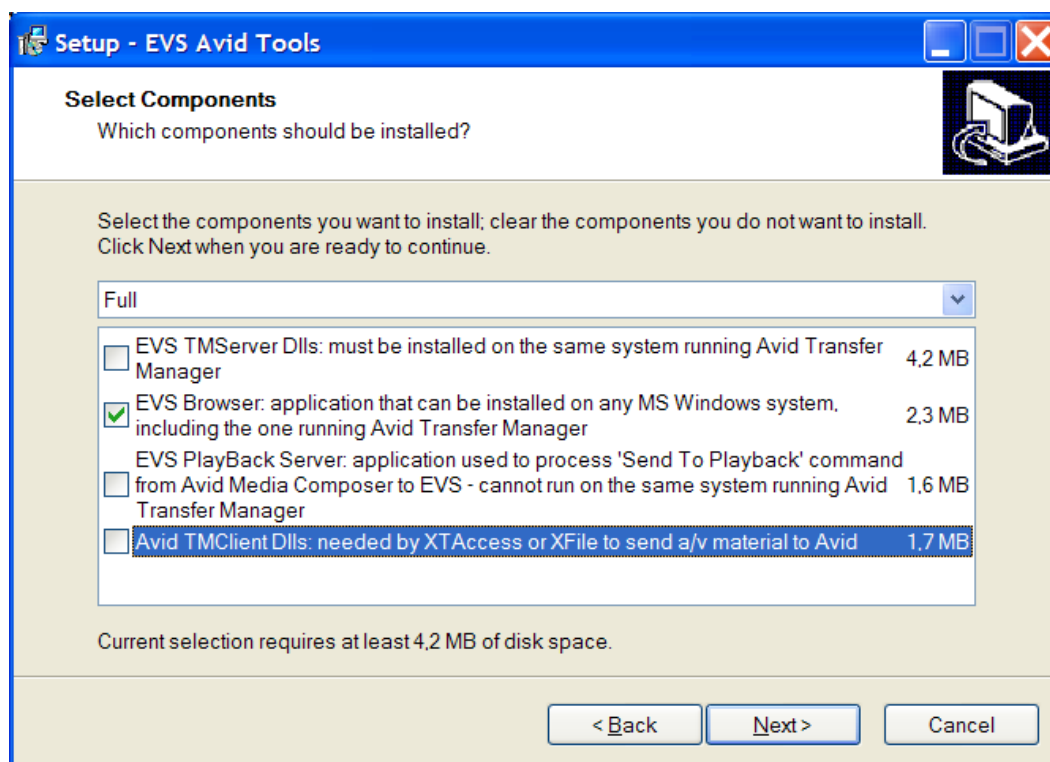

STEP 2 : Transfer Manager Client Installation

See section 8.2

STEP 3 : Edit TMClient.ini

Edit the file "TMclient.ini" located in C:\Program Files\EVS Avid Tools\ by adding or replacing the Avid TM server name by the computer name of the server where Avid Transfer Manager runs. Example :


[MyServer,MyWorkgroup]

MyServer = TM-UNITY, WORKGROUP




- Tip : remove in TMClient.ini all references to servers which are not available on the network: otherwise initialisation of the transfer will be delayed (timeout) before starting transfer of data.

STEP 4 : EVS Avid Browser Configuration.

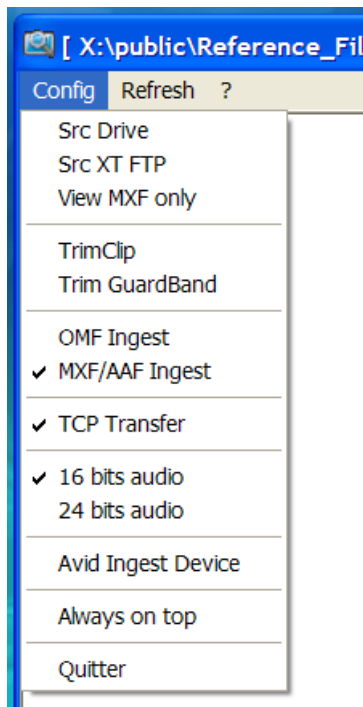

- **Refresh** : To refresh the directory selected. Shortcut : F5.
- **Source**
 - **Src Drive (Shared drive Mode)**: Browse through the network to select a drive/directory to browse. Click on OK and all the files available in this directory will be displayed. The drive path must be a UNC.
 - **Src XT FTP (FTP Mode)** : Select it to use the EVSAvid browser in FTP mode. Configure the FTP XT[2] server (Multicam 9) that you want to reach

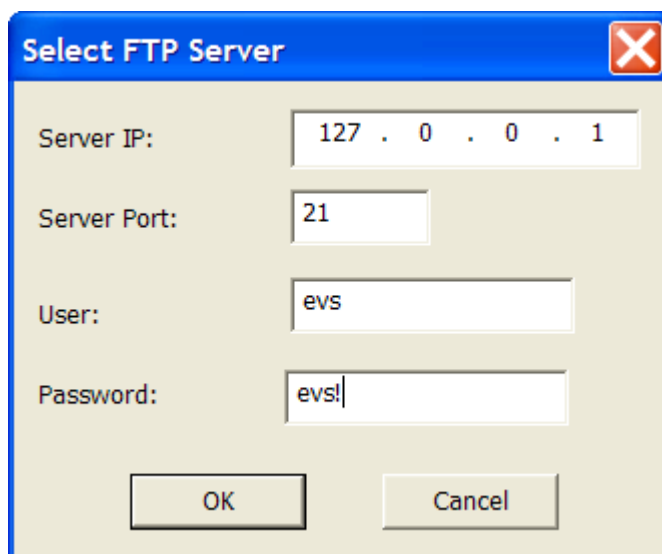

- **Server IP**: IP address of the FTP XT[2] server
- **Server Port**: Port of the FTP XT[2] server (by default 21)

- User: User defined into the FTP XT[2] server
 - Password: Password defined into the FTP XT[2] server]
- **View MXF only** : to filter and only display MXF files.
- **Clip Trimming** :
 - **TrimClip** : Select this option to transfer only Clip IN/OUT instead of File IN/OUT.
 - **Trim GuardBand** : In case TrimClip is selected, this allows to add a guard band to Clip IN/OUT.
- **Avid file format** :
 - **OMF File**: specify the OMF file format as file format on Avid storage
 - **MXF/AAF File** : specify the MXF/AAF file format as file format on Avid storage
- **TCP Transfer** : for future use
- **Audio sampling resolution** :
 - **16 bits audio** : select this option to ingest in 16-bit audio
 - **24 bits audio** : select this option to ingest in 24-bit audio
 - Note that the Avid Media Composer Project must be setup accordingly regarding its audio sampling resolution parameter in Audio Project settings.
- **Avid Ingest Device** : This is the name of the EVS device defined in the Transfer Manager Server Configuration (Ingest section) : e.g. EVSDevice
- If you want to ingest your clips in a specific subdirectory into Interplay, you can add this subdirectory after the ingest device. Example: EVSDemo:Day1 (in this case the clips will appear in interplay into the /Ingest/Day1 folder (see chapter on the creation of folder into Avid Interplay Access).
- **Always on top** : Select this option to always display the EVS Avid Browser on top of the display layers (overlaid)

10.5 EVS Playback Server

EVS Playback server is used for the Send to Playback workflow (Avid to EVS) (see section 7.3.7) :


This server must be installed on any workstation connected via a LAN to the Avid Transfer Manager Server. **Typically it is installed on the destination XFile but this is not mandatory.**

Important Notes : Send to Playback workflow uses an Avid TCP/IP protocol with some implications :

- The EVS Playback Server **MAY NOT BE** installed on the Avid Transfer Manager Server. This will result in Avid protocol errors (TCP ports conflicts by both applications).
- Avid Send to Playback is based on a TCP/IP protocol. The Ethernet GigE connection used to communicate with Avid Transfer Manager must be located in the first position in the Windows Network setup of the workstation to choose this interface. Otherwise Transfer Manager server is not able to “see” the EVS Playback server application. Loopback and other Ethernet boards must be either disabled or shifted behind.

STEP 1 : Install EVS Avid Tools.

Launch EVS Avid Setup and select EVS Playback Server (see section 8.1).

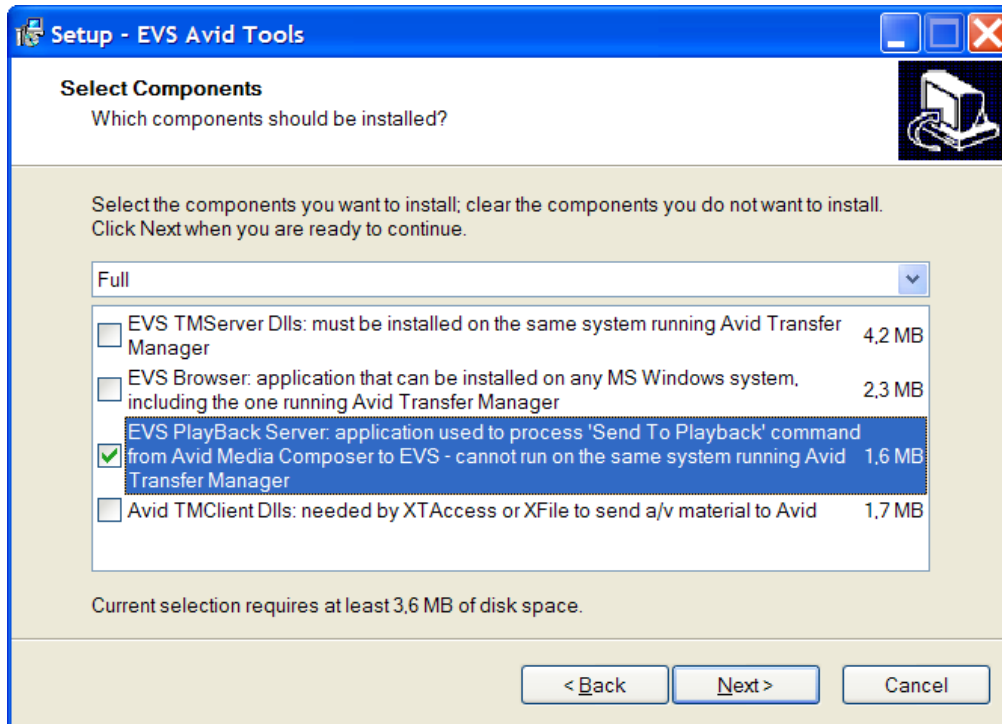


STEP 2 : Transfer Manager Client Installation

See section 8.2

STEP 3 : Check of the Avid protocols port definition

Open the C:\Windows\System32\Drivers\Etc\services (e.g. with Notepad) and check the protocols port are properly defined.

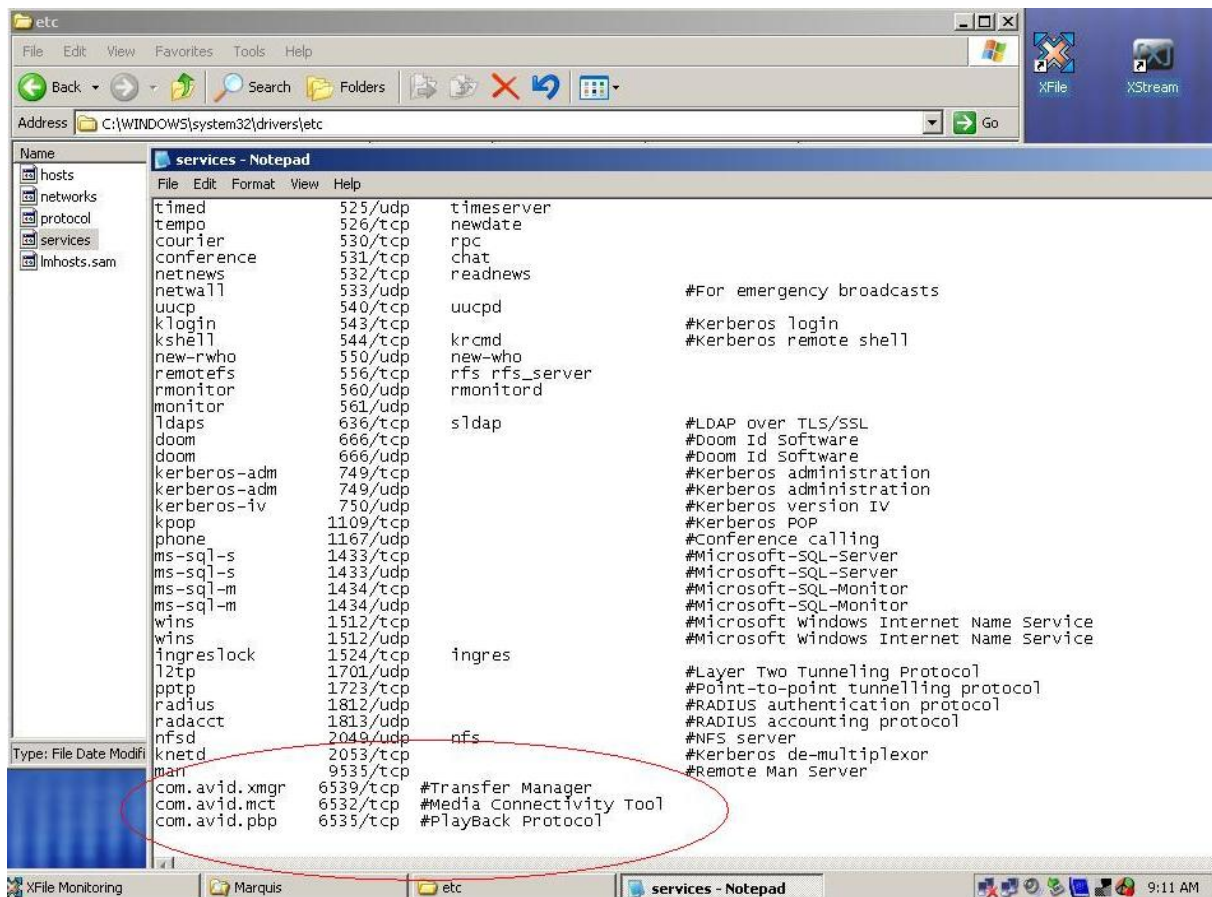


- com.avid.xmgr is added by the Transfer Manager Client installshield
- com.avid.mct is added by the EVS Avid Tools setup (EVS Playback server option)
- com.avid.pbp is added by the EVS Avid Tools setup (EVS Playback server option)

Remark on the use of Firewalls : Avid transfer Manager is based on a TCP/IP protocol. Firewalls could block some ports : The following ports 6539/tcp, 6532/tcp, 6535/tcp must be added in the exception list of the firewall.

STEP 4 : EVS Playback Server Configuration.

Launch EVS Playback Server :

Note : in case of any problem (i.e. RunTime error) to launch the EVS Playback Server, please check the protocols are properly available in the “services” files (see above).

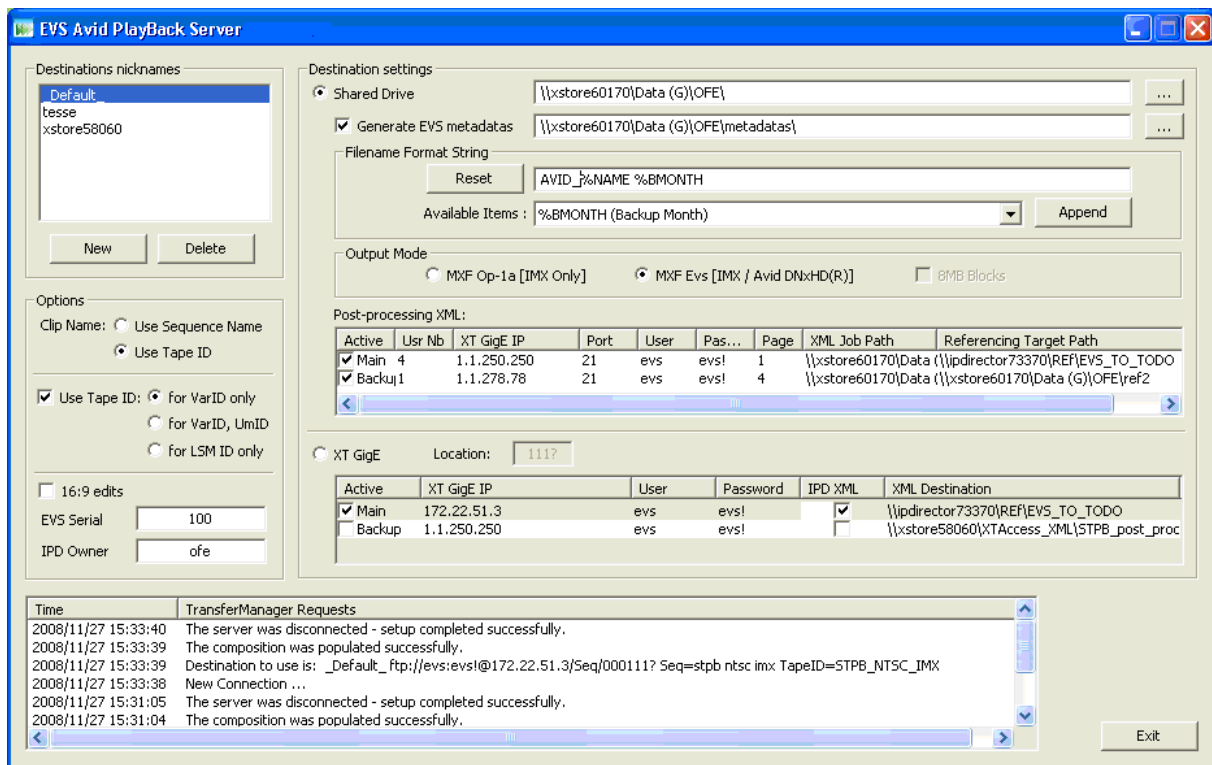

• Avid Destination nicknames

An Avid destination nickname is a profile for this EVS Avid Playback Server. Each profile can have its own configuration.

It is possible to select from Avid Media Composer “send to Playback” menu a specific profile/nickname. Avid nicknames are defined in Avid Transfer Manager Server Configuration GUI by : “EVS Avid PB server name/Avid_nickname” :

- EVS Avid PB server name : Windows name of the workstation where is running EVS Avid Playback server
- Avid_nickname : Avid Nickname or profile on EVS Avid Playback server

Avid Interplay Transfer Engine Configuration

Workgroup Settings

☒ Interplay enabled

Interplay Engine hostname:
editor4

User name: administrator

Password:

☐ Accept incoming workgroup transfers without Interplay login

No-login workspace for incoming transfers:

Standalone Settings

☐ Accept incoming transfer after timeout

Timeout: 0 second ☐ OMF ☒ AAF

Directory for incoming transfers:
d:\ Browse...

System Settings

☐ Enable auto-cleanup of transfer queues

Auto-cleanup transfers older than 360 minutes

Run auto-cleanup every 12 minute

☐ Server logging off ☐ Standard logging on ☒ Debug logging on

Storage type: MediaNetwork 5.0

Workgroups

☐ Workgroup transfers enabled

☐ Incoming workgroup transfers enabled

Max. simultaneous workgroup transfers: 1

Directory for temporary composition files:
d:\temp Browse...

☒ Delete temporary composition files after transfer

Workgroup names:

Add... Delete Edit...

Ingest

☒ Ingest transfers enabled

Max. simultaneous ingest transfers: 4

Ingest devices:
EVSDemo
EVS_1 Add... Delete Edit...

Dynamically Extensible Transfers (DET)

Max. DET push transfers: 0

Max. DET pull transfers: 0

Total Transfers (All Types)

Max. simultaneous transfers: 12

Playlist Information

☐ Use Newsroom rundowns to schedule transfers

Newsroom Server:

User name:

Password:

Schedule File Name: Browse...

Playback

☒ Playback transfers enabled

☐ Long GOP transfers enabled

Max. simultaneous playback transfers: 2

Playback devices:
xfile50820
xstore60170/MC9_4U
xstore64260
xfile53070
ipdirector53020
xstore60170/MC9_6U Add... Delete Edit...

Cancel Save

There are 2 EVS Avid PlayBack Server Transfer Modes:

1. **Shared Drive:** to first create a file and then restore it to XT[2] with XTAccess or XFile
2. **XT GigE:** to directly transfer a sequence from AVID to XT[2] with the GigE connection on the XT[2]

In both modes you can add a Main and then if you want a Backup configuration. This will allow you to restore at the same time your sequence from Avid to two different destinations that might be on different gigabit or SDTI networks.

The screenshot shows the 'Post-processing XML' configuration window. On the left, there are options for 'Name' (Use Sequence Name or Use Tape ID), 'Tape ID' (for VarID only, for VarID, UmID, or for LSM ID only), 'Serial' (12355), and 'Owner' (BCU). The main area contains two tables. The first table, 'Post-processing XML', has columns: Active, User Nb, XT GigE IP, Port, User, Password, and Page. It lists 'Main' (checked, User Nb 6, IP 1.1.240.240, Port 21, User evs, Password evs!, Page 1) and 'Backup' (unchecked, User Nb 4, IP 1.1.250.250, Port 21, User evs, Password evs!, Page 1). The second table, 'XT GigE', has columns: Active, XT GigE IP, User, Password, and I. It lists 'Main' (checked, IP 1.1.240.240, User evs, Password evs!) and 'Backup' (unchecked, IP 1.1.250.250, User evs, Password evs!). A 'Location' field with '111?' is also present. A 'Delete' button is at the top left, and 'TransferManager Requests' is at the bottom.

Active	User Nb	XT GigE IP	Port	User	Pas...	Page
<input checked="" type="checkbox"/>	6	1.1.240.240	21	evs	evs!	1
<input type="checkbox"/>	4	1.1.250.250	21	evs	evs!	1

Active	XT GigE IP	User	Password	I
<input checked="" type="checkbox"/>	1.1.240.240	evs	evs!	
<input type="checkbox"/>	1.1.250.250	evs	evs!	

In case one of both transfers failed, no error message is returned back to Avid Transfer Manager Server because the clip is available on at least 1 XT server. There is no Avid DHM API function to handle this failure case. To be investigated with Avid for future improvement.

10.5.1 Shared Drive

Shared Drive – to generate a file on a drive

Shared Drive: \\xstore60170\Data (G)\OFE\

Generate EVS metadata: \\xstore60170\Data (G)\OFE\metadatas\

Filename Format String: %NAME

Available Items: %NAME (Clip Name)

Output Mode: ☒ MXF Evs [IMX / Avid DNxHD(R)]

Post-processing XML:

Active	Usr Nb	XT GigE IP	Port	User	Pas...	Page	XML Job Path	Referencir
<input checked="" type="checkbox"/>	4	1.1.250.250	21	evs	evs!	1	\\xstore60170\Data (G)\OFE\main\	\\xstore601
<input checked="" type="checkbox"/>	1	1.1.278.78	21	evs	evs!	4	\\xstore60170\Data (G)\OFE\backup\	\\xstore580

- Select “**Shared Drive**” and configure the **Destination Path** if you want to generate a MXF video file before restoring it on XT server: It must be a UNC path (if not the background is red), not through a mapped or local drive.

Important : check that Transfer Manager server is able to open and write a file in this directory via the network.

- **Generate EVS metadata**: Select this option if you want to create a “light” EVS XML metadata file. This “light” EVS XML metadata file will contain Clip Name, Owner VarID and Tapeld metadata.

Example:

```
<?xml version="1.0" ?>
<EVS_Metadatas>
  <General_Infos>
    <XFile_File_Infos>
      <XT_Device_Src>EVS Avid PlayBack Server [v.2.6.23]</XT_Device_Src>
    </XFile_File_Infos>
  </General_Infos>
  <Clips_Infos>
    <Clip>
      <XFile_Clip_Infos>
        <XT_UmID>kwKxhLd0</XT_UmID>
        <XT_VarID>123</XT_VarID>
        <XT_ClipName>tata</XT_ClipName>
      </XFile_Clip_Infos>
      <IPDirector_Clip_Infos>
        <TapeID>123</TapeID>
        <Owner>ofe</Owner>
      </IPDirector_Clip_Infos>
    </Clip>
  </Clips_Infos>
</EVS_Metadatas>
```

- **Path for the EVS XML Metadata file**: by default the EVS XML metadata file will be saved into the same folder than your shared destination path. If you want to save it in a different place you can set it here (it must be an UNC path).
- **Filename Format String**: It is possible to customize the format string of the file name. You can add different dynamic metadata (%NAME,%BDATE...) or static

Filename Format String

Reset

%NAME - %OWNER (%TAPEID) - Date %BDATE %BYEAR-%BMONTH-%BDAY

Available Items :

- %BDAY (Backup Day)
- %NAME (Clip Name)
- %BDATE (Backup Date)
- %BYEAR (Backup Year)
- %BMONTH (Backup Month)
- %BDAY (Backup Day)
- %OWNER (Owner)
- %SEQUENCENAME (Avid Sequence Name)

Output Mode

☒ MXF Op-1a ☐ IP

Post-processing XML:

Active	Usr Nb	XT	GigE	IP
<input checked="" type="checkbox"/> Main	4	1.1	250	250

- **MXF OP-1a:** To select MXF OP-1A as output file format, for IMX-D10 codec only !
- **MXF EVS:** To select MXF EVS as output file format. Valid for both IMX-D10 & Avid DNxHD ® Codecs.
- **8 MB Blocks:** Shows the EVS MXF size block.

Right-click on the Post-Processing XML windows to create a main configuration



Destination settings

☒ Shared Drive: \\xstore60170\Data (G)\{OFE}

☒ Generate EVS metadata: \\xstore60170\Data (G)\{OFE}\metadatas\

Filename Format String: %NAME

Available Items: %NAME (Clip Name)

Output Mode: ☒ MXF EVS [TMX / Avid DNxHD(R)]


Post-processed XML

Active	Usr Nb	XT GigE IP	Port	User	Pas...	Page	XML Job Path	Referencing Target Path
<input checked="" type="checkbox"/> Main	4	1.1.250.250	21	evs	evs!	1	\\xstore60170\Data (G)\{OFE}\ref	
<input checked="" type="checkbox"/> Backup	1	1.1.278.78	21	evs	evs!	4	\\xstore60170\Data (G)\{OFE}\XTAccess_XML\STPB_po:	

- Created by Serge Comes
EVS Broadcast Equipment – July 2009
Page 84 of 125

- **GigE IP – Port – User – Password:** Enter XT GigE IP – Port – User – Password used to do the restore with XTAccess (not mandatory if you want to use XFile to perform the restore)
- **Page:** Select the Page from where the clips will be restored by XFile or XTAccess.
- **XML Job Path:** Define the directory to post the XML job file. It must be an UNC path (the job_incomming folder of the XFile or XTAccess).
Example: \\XSTORE60170\XTAccess_XML\Jobs_Incoming\
- **Referencing Target Path:** (This option is used to generate a XML file to reference the metadata directly into the IPDirector database). Define the directory where the XFile or XTAccess will send the referencing XML file with the Owner and TapeID information. The STPB will not create the XML referencing file, it is XTAccess or XFile which will create the referencing file in this folder.
Example: \\IPDirector60180\JOBREF\EVS_TO_DO\

10.5.2 XT GigE

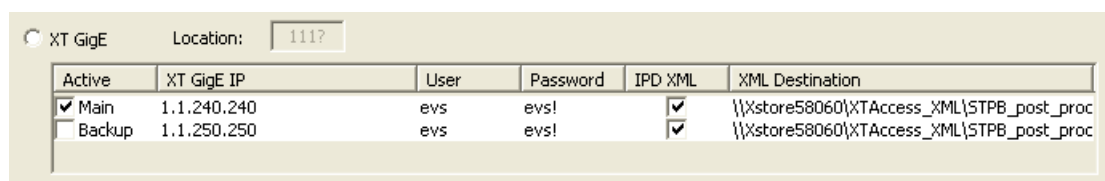


Active	XT GigE IP	User	Password	IPD XML	XML Destination
<input checked="" type="checkbox"/> Main	1.1.240.240	evs	evs!	<input checked="" type="checkbox"/>	\\xstore58060\XTAccess_XML\STPB_post_proc
<input type="checkbox"/> Backup	1.1.250.250	evs	evs!	<input checked="" type="checkbox"/>	\\xstore58060\XTAccess_XML\STPB_post_proc

- **XT GigE – Direct access to GigE XT**

Select “**XT GigE**” And configure the **FTP XT[2] server** if you want to restore directly your Avid Sequence to XT through the Gigabit Connection (Multicam 9 onwards).

Important : check that Transfer Manager server is able to open file on the FTP XT[2] server.

First, right-click to create a main configuration

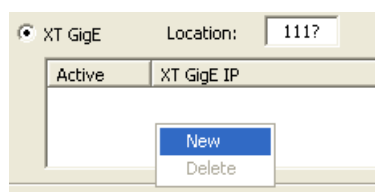

Then you can configure your shared drive mode:

- **Location** : ClipID of the first location to check when restoring.

4 modes are considered:

- 123X: X could be A, B, C, D, E or F. In that case the send to Play Back will check the availability of the clip, e.g. 123A clip.

If not available, the transfer Manager will show an error message. You will need to try again with a different location.

If available, the transfer will be done.

- 123?: In this case, the “Question Mark” allows Send To Play Back Server to check all the camera labels. First, check the availability of 123A, then 123B, 123C, 123D, 123E, 123F, 124A, 124B, etc.
- 123[XXXX]: X could be A, B, C, D, E or F. In that case, the Send To Play Back Server will check the availability of the clip in this range of camera.

Example: 111[ACD] XTAccess will try: 111A 111C 111D 112A 112C 112D 211A 211C

- [XXX]?: X could be 123456789 and XXX is/are the page where you want to restore the files. In this case, the “Question Mark” allows the Send To Play Back Server to check all the camera labels but after the XXX page.

Example: [157]? XTAccess will try : [110A 111A 112A ... 199A 510A ... 799A 110B 111B ... 199B 510B ... 799B 110C ... 799F].

These two last modes are only available with Multicam 10.01.07 or upper.

- **IP Address** : enter the IP address of the XT server
- **User** : Login of XT FTP server
- **Password** : Password of XT FTP server
- **IPD XML**: Select this option to generate XML file to reference the metadata directly into IP Director Database.
- **XML Destination**: Define the directory where the Transfer Manager will send the referencing XML file with the Owner and Tape ID information to the IPDirector database.

Example: \\IPDirector60180\\JOBREF\\EVS_TO_DO\\

- **Common parameters for a specific profile or Avid nickname**

- **Clip Name Use** :
 - **Sequence Name**: The clip name in XT server will be the Avid Sequence Name defined in the Avid NLE.
 - **Tape ID**: The clip name in XT will be the Tape ID entered during Send to Playback procedure. (The Tape ID cannot contain Unicode and will be reduced to 24 characters)
- **Use Tape ID for VarID only**: In this case the UmID will be automatically generated by EVSPB server (or Multicam) and will be different for each server. The LSM ID will depend on the location box. VarID will be identical for both Main & Backup servers and will be the Tape ID from Avid.
 - **In GigE mode**: If the VarID is already used, an error message will be issued and no clip is created.
 - **In shared mode**: If the VarID is already used; it is XTAccess or XFile which will display the error message. The file is created.

This option is convenient for automation using VarID to control Main and Backup XT servers on the same SDTI network.

- **Use Tape ID for VarID, UmID**: Only valid for a single server or servers Main & Backup on separate SDTI networks. VarID = UmID = TapeID from Avid. The LSM ID will depend on the location box and will be different for each server.
 - **In GigE mode**: If the VarID or UmID are already used, an error message will be issued and no clip is created.
 - **In shared mode**: If the VarID or UmID is already used; it is XTAccess or XFile which will display the error message. The file is created

This option is convenient for automation using VarID or UmID to control Main and Backup XT servers on different SDTI network.


- **Use Tape ID for LSM ID only:** LSM ID = Tape ID for both Main & Backup servers. The Tape ID has to be well formatted: 123X: where X could be A, B, C, D, E, F or ? (In capital letter). The VarID and UmID will be automatically generated.
 - **In shared mode:**
 - If the LSM ID is not correctly formatted: the Transfer Manager and the Send To Play Back server will display an error message. No file is created.
 - If the LSM ID is not available on the XT[2]: the Transfer Manager will not display an error message. It is the XTAccess or XFile doing the restore which will display the error message. The file is created.
 - **In XT GigE Mode:**
 - If the LSM ID is not correctly formatted: the Transfer Manager and the Send To Play Back server will display an error message. No clip is created
 - If the LSM ID is not available on the XT[2]: the Transfer Manager will display the same error message. No clip is created

In this mode the Location or the destination page is not used.

- **EVS Serial:** Select the **EVS Serial number** to uniquely generate an ID Material on XT server which will be associated with Exported MXF media. The Serial Number must be a value between 1 and 16333.
- **16:9 edits:** Avid Transfer Manager does not export the video aspect ratio: this must be forced at the level of EVS Playback Server when generating the IMX file.
- **Owner:** IP Director owner (user) to be referenced to IP Director Database (*IPD XML or XML Destination* – see above). If left blank, the “XT Generic User” is pushed into IP Director Database.

All the configuration of the Send To Play Back server is saved in an ini file that you can use to replicate your configuration on different computers.


C:\Program Files\EVS Avid Tools\EVSAPBSrv.ini

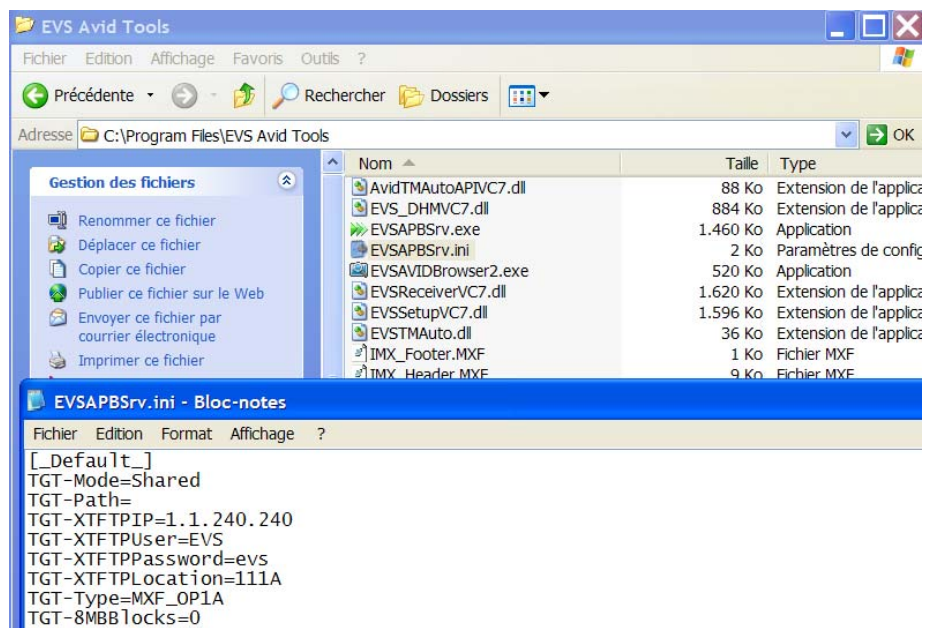

10.5.3 Audio/video Filler in Send to Playback DHM

- Audio and video Filler has been implemented in EVS DHM Send to Playback
- EVS DHM automatically fills in the missing frames with an audio and/or video filler when :
 - Some audio/video tracks are missing (e.g. 3 tracks instead of 4)
 - Some parts of the audio/video track are left blank (audio holes)
 - Some Audio/video tracks are shorter than video track
- Audio/video mix down is not anymore requested before send to playback to EVS XT except if you have added effect to the audio or the video.


Example:

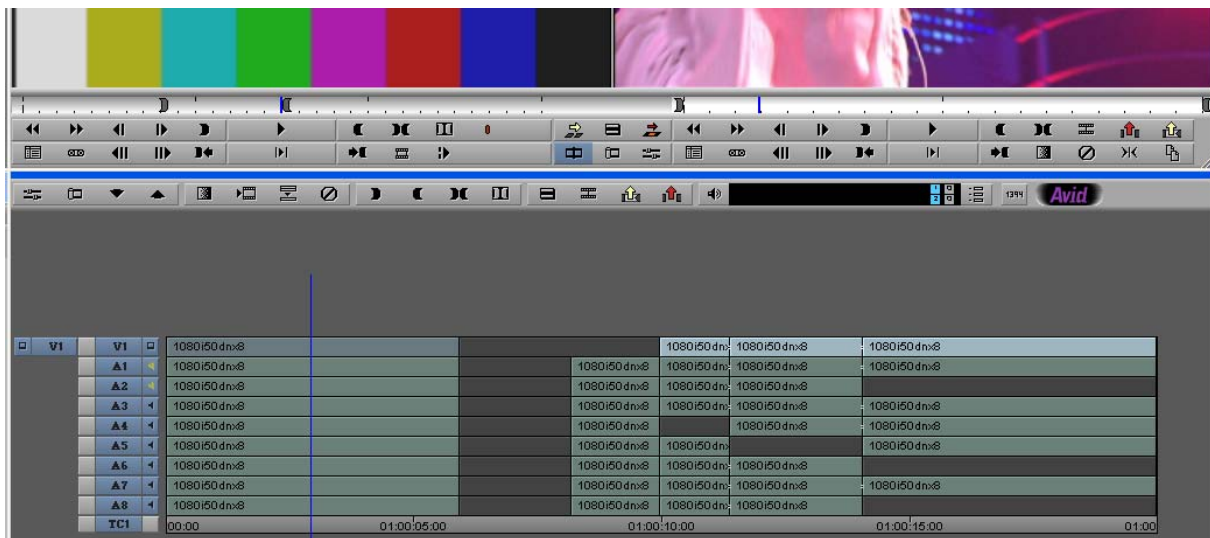

10.6 Media Composer Configuration

10.6.1 EVS to Avid Workflows

In Project settings, **Media Creation** must be set up as “OMF” or “MXF”. When using Media Manager or Interplay Engine, OMF or AAF (MXF) is defined in Media Manager or Interplay Engine setup. Any project linked to Media Manager/Interplay Engine will be automatically set up to the actual mode.

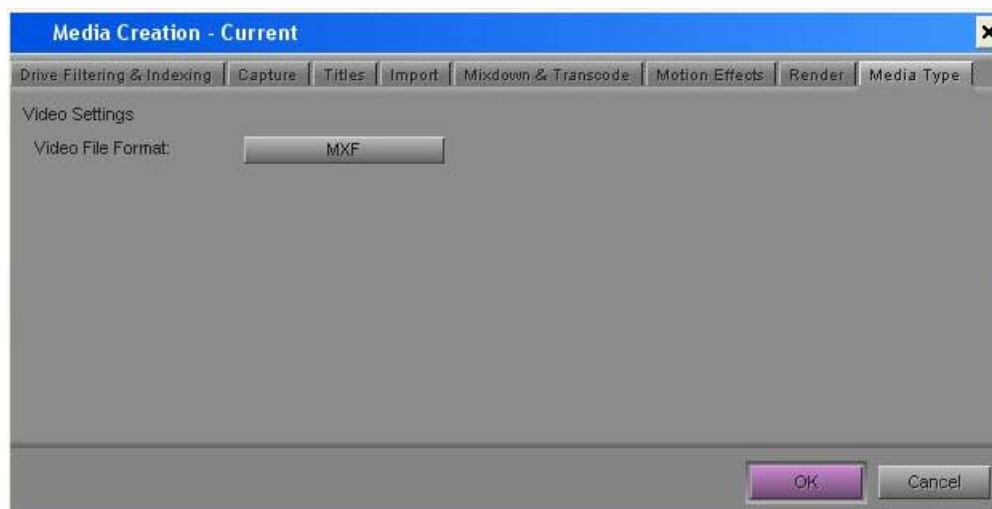

Note : Media Creation mode OMF/MXF must be identical to the OMF/MXF mode in Transfer Manager server.

- In stand-alone mode, you must select it manually in “Transfer Manager Configuration”. **Note that MXF mode generates an error in TC format. It is then recommended to use OMF mode in stand-alone mode.**
- With Avid Unity environment, the mode is automatically defined by Media Manager.


10.6.2 Export Avid to EVS workflows (EVS Playback Server)

Note : Transfer Manager Client must be installed on Media Composer station (see section 8.2)

In Project settings, **Transfer** must be configured as follows :


- Settings
 - Output Audio Mix : Direct channel output or stereo output
- TMClient.ini

- Server : Computer name of the server where runs Avid Transfer Manager Server. Example : TM-UNITY
- Workgroup : example : Workgroup

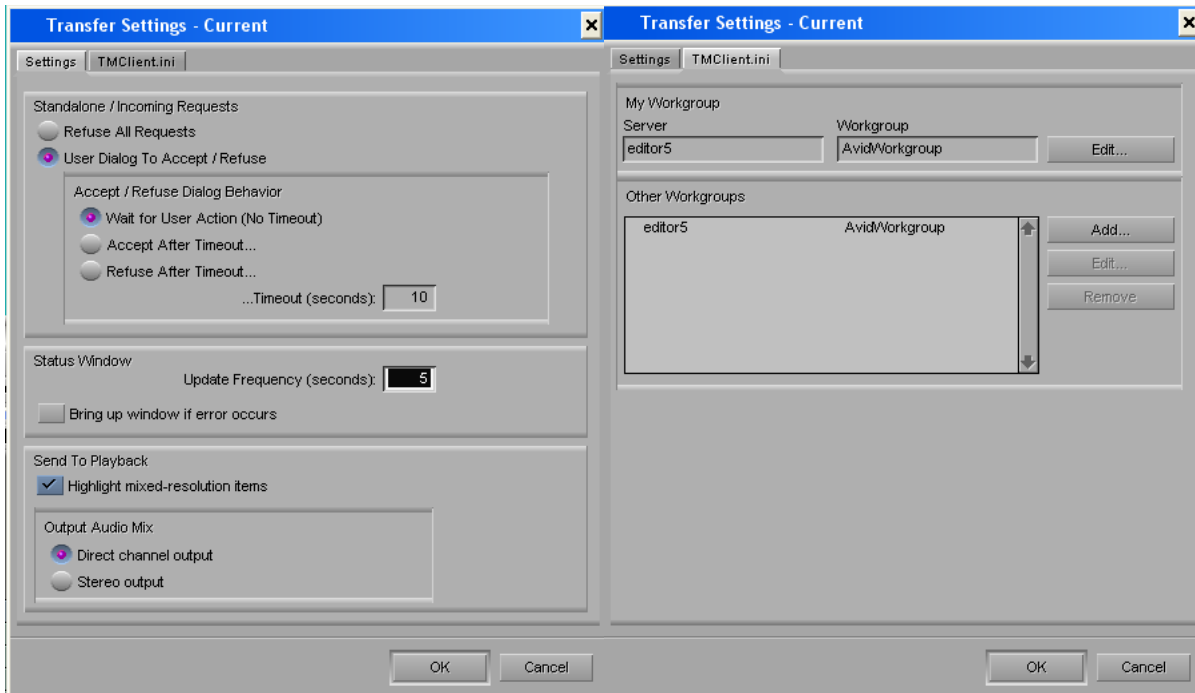


We only support one video track from AVID to EVS but you can use more than one video track if you do a mixdown.

To do this mixdown: you have to configure in the MediaCreation setting the MixDown & Transcode tab in DNxHD or MPEG.

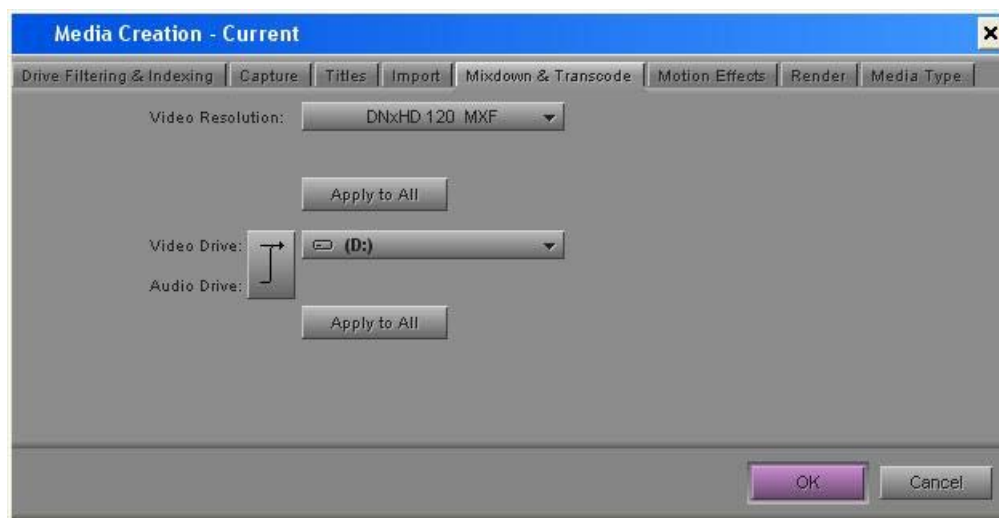

You also have to configure the Export setting to do mixdown before sending the sequence to EVS:

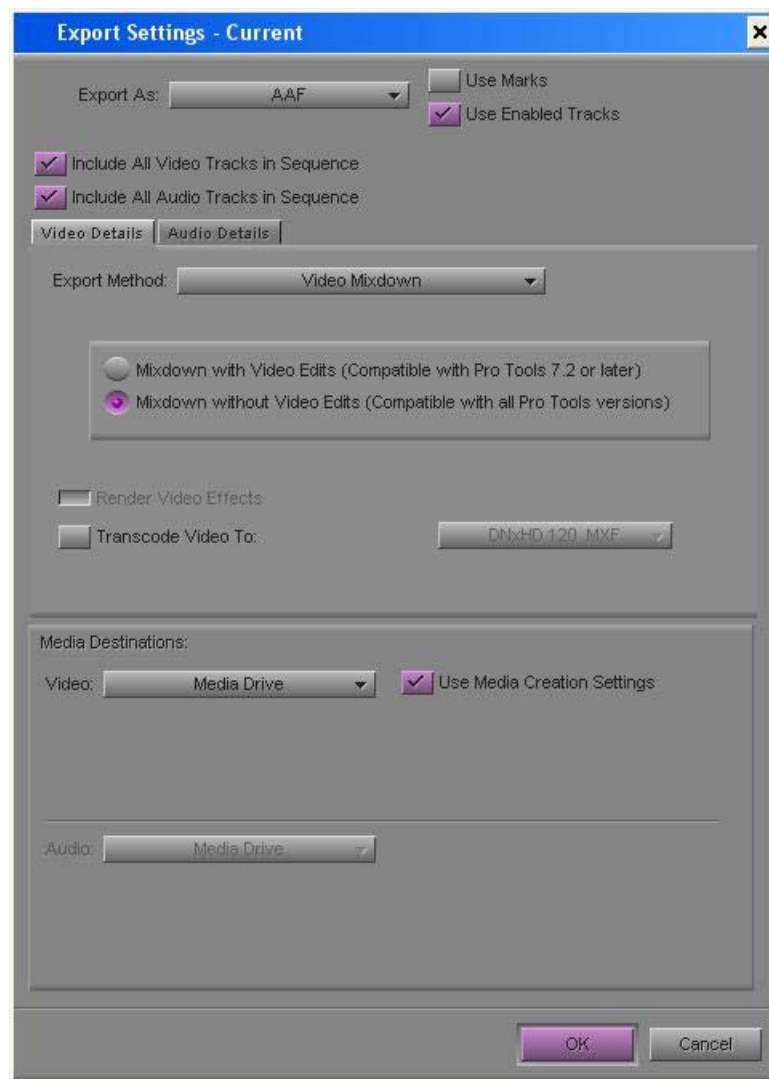

10.7 Avid Interplay WebServices


10.7.1 Configuring the Avid Interplay WS Port

If you are installing Avid Interplay WS on the same machine as an Interplay Engine or the same machine as another WebServices, you may need to change the port that Avid Interplay WS uses. For production environments, however, Avid highly recommends that no other Web server runs on the same machine.


You can change the port in this file :

C:\Program Files\Avid\Avid Interplay Web Services\apache-tomcat\conf\server.xml

Search for the phrase *port="80"* in the *server.xml* file and replace the port number with your desired HTTP port.

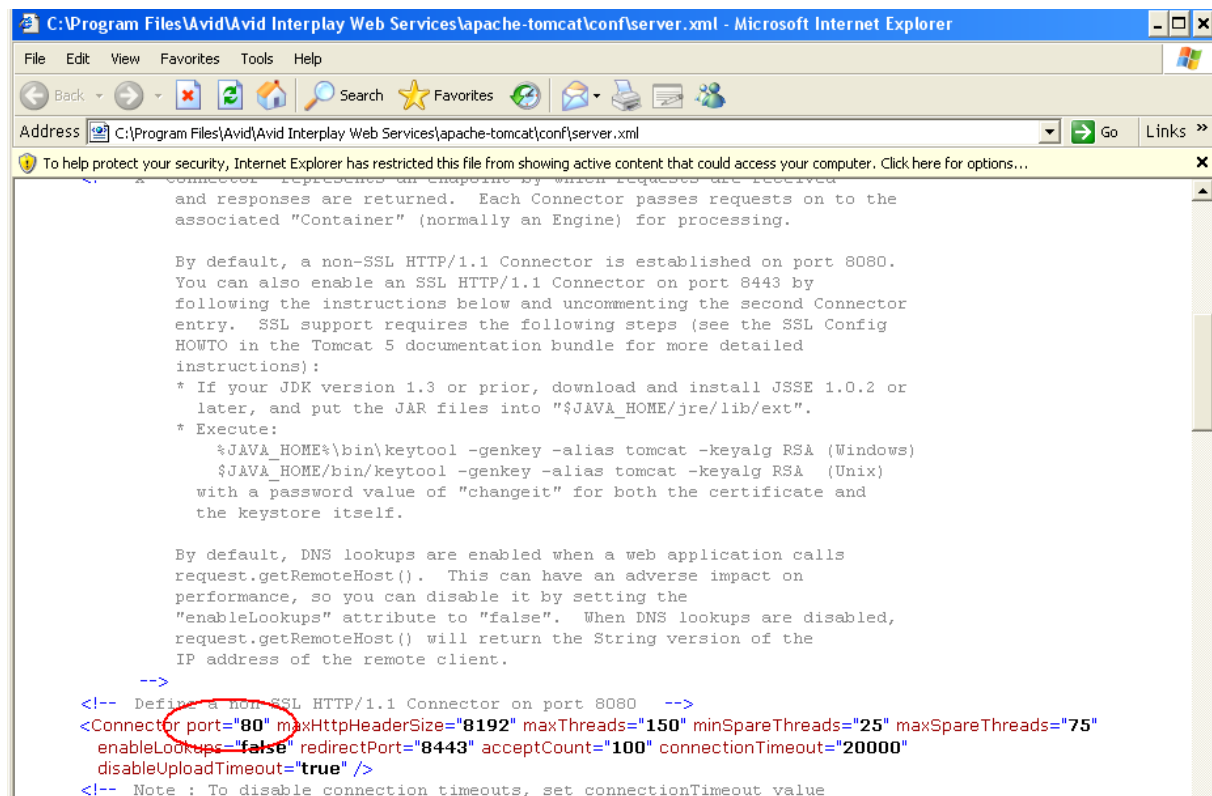

After turning off a conflicting server or changing the ports of Avid Interplay WS, you will need to restart the Avid Interplay WS service. You can do this via the Services console in Administrative Tools section of the Windows Control Panel.

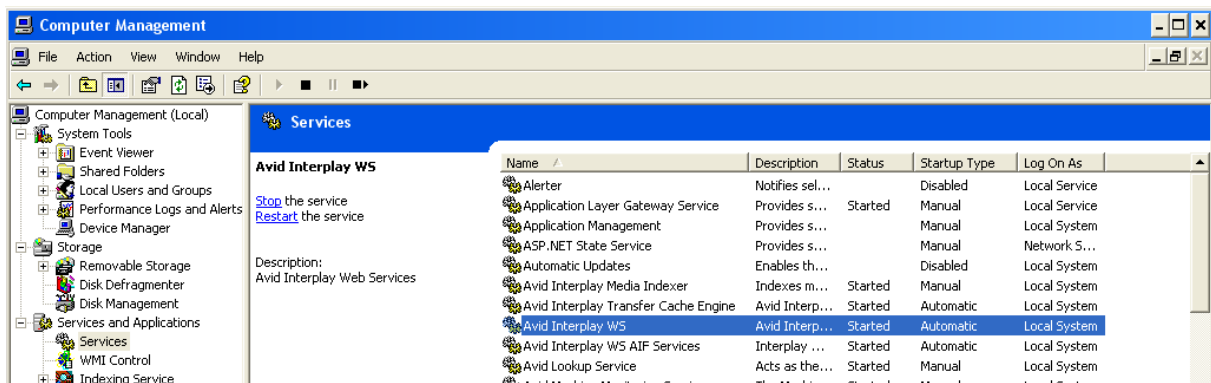


10.7.2 Configuring the Workgroup Name to Server Mapping

Avid Interplay WS uses a workgroup name to map requests to the Interplay Engine. You need to configure this mapping to match your environment. This configuration is done via the Avid Interplay Framework.

Go to *Start->All Programs->Avid->Interplay Framework->Avid Interplay Service Configuration*

Find the Avid Interplay WS service, and add the workgroup name to Interplay Engine mapping. For example, the following would signify a workgroup called "AvidWG" that maps to the computer where the Avid Interplay Engine is running and which calls "editor5".

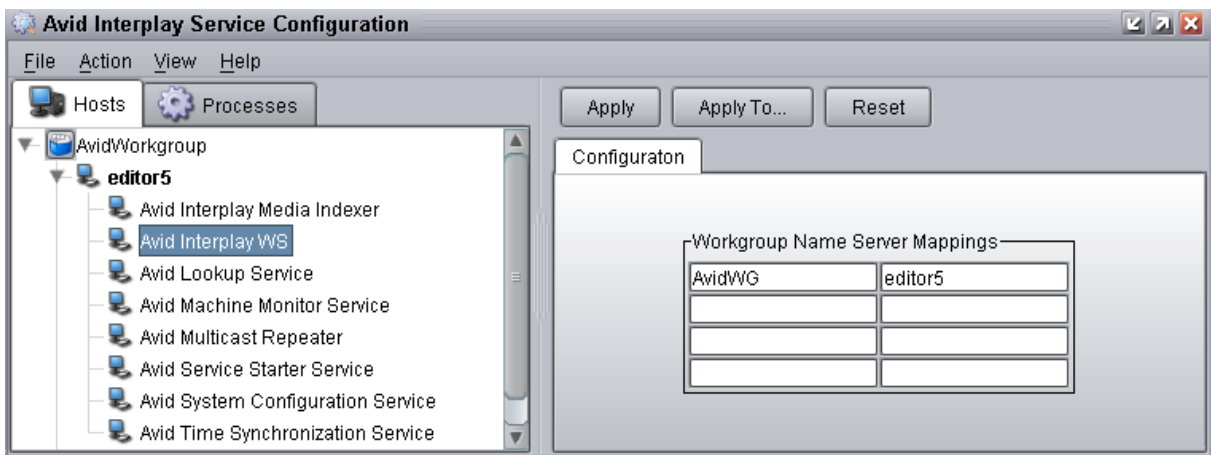


Click *Apply* to apply the changes and then exit the service configuration tool.


The Avid Interplay WS is now installed and configured. You can access online documentation by pointing to the server (and configured port, if applicable) in the browser. For most installations, this will be at <http://localhost/>

10.7.3 Configuration of XTAccess

Go into the “XML SCAN Settings” windows and then click on “NLE config”.

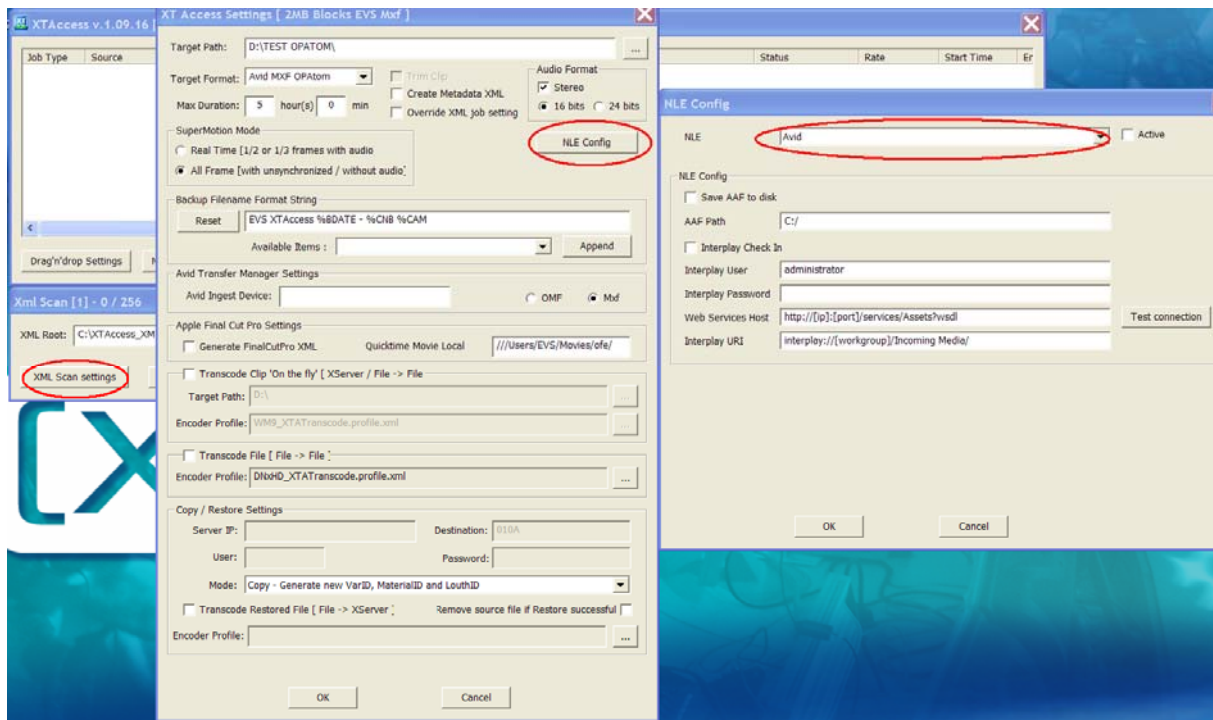


NLE Config :

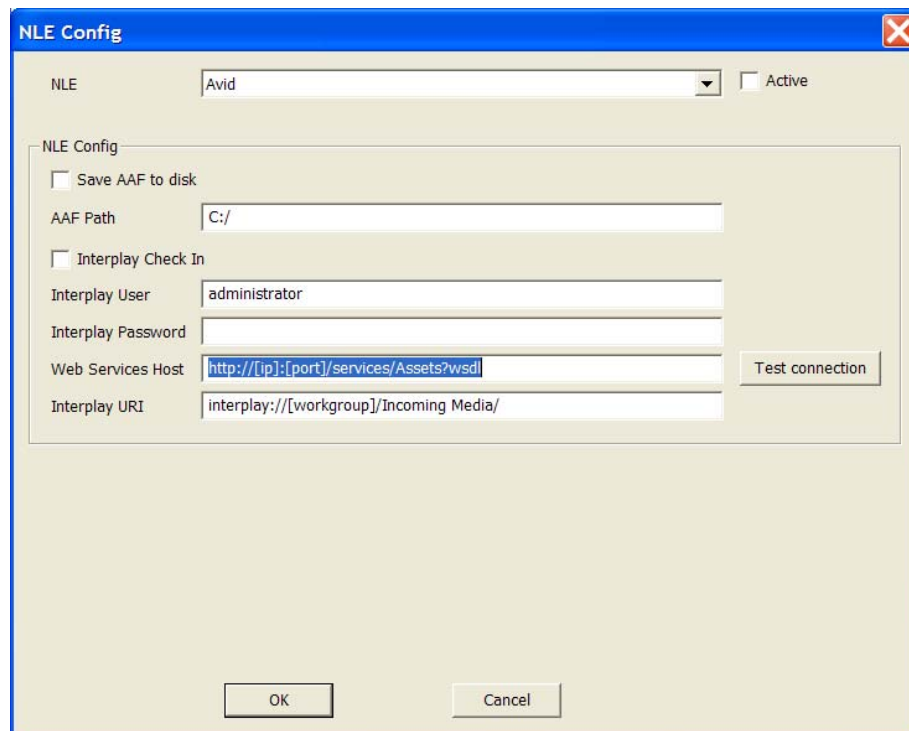

- **Active** : Allows you to activate or not the global XTAccess Web Service settings


- **Save AAF to disk:** Allows you to back up the AAF on disk before “check-in” into Avid Interplay. This AAF can then be used to directly drag your transferred clip or playlist into MediaComposer without using Avid Interplay Access.
- **AAF path:** Path where you want to store your AAF file
- **Interplay Check In:** Allows you to activate or not the Interplay “check-in”.
- **Interplay User:** Interplay user which must have enough right to do check-in into Interplay.
- **Interplay Password:** Password of the previous user
- **Web Services Host:** link to the Web Service on the Avid Interplay System, You have to replace :
 - [IP] by the IP address of the computer where the Avid web Services are running
 - [PORT] by the port that you have configured for your Avid Web Services (example : 8080)

You can also test the connection by clicking on the “test connection” button

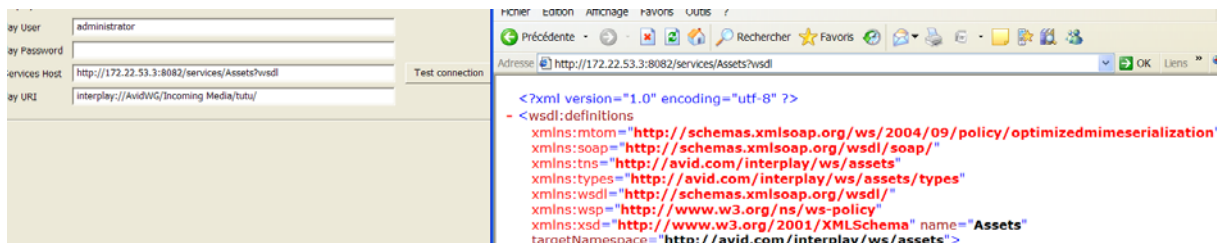

- **Interplay URI:** Path where the clip/playlist will be seen in the Interplay DB. You can add sub-folder after the Incoming Media folder. You have to replace:
 - [Workgroup] by your Avid workgroup

Example: interplay://AvidWG/Incoming Media/EVS Media/Monday/

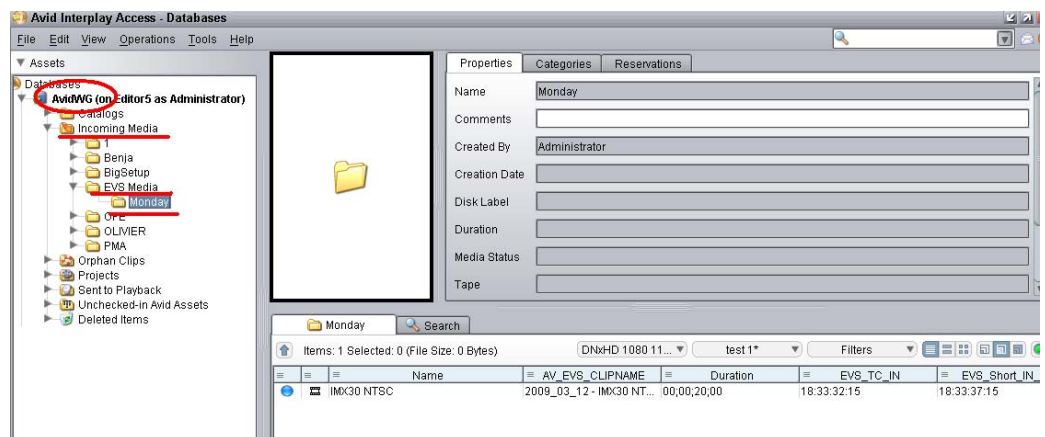

11 LOG DESCRIPTION

In case of trouble: You can send EVS the EVS log which is on the Client computer and Server computer (Transfer Manager) as well as the Avid Transfer Manager log.

That will help the EVS Support to help you.

See below

11.1 EVS Log

You can find the EVS log in this folder:



11.1.1 On the client computer

(XFile - EVS Avid Browser – XTAccess)

- EVSSetupDll.log (use with the EVS Avid Browser) :
Will show you the ingest configuration setup

Example

```
*****
Tue Jul 15 12:40:01.937 * LOG FILE OPENED *
*****
Tue Jul 15 12:40:01.937 EVSSetup Dll v.02.06.20
Tue Jul 15 12:40:01.937 AvCreateAPI
Tue Jul 15 12:40:01.937 EVSSetup::CreateProxyMob
Tue Jul 15 12:40:01.937 Creating AAF Media Type
Tue Jul 15 12:40:01.953 Transferring 1 VideoChannels
Tue Jul 15 12:40:01.953 Private TCs: 1499307 - 1499747 - 25 [ 440 FRAMES ]
Tue Jul 15 12:40:01.953 Entering in EVS_SETUP::ParseXMLDragMessage()
Tue Jul 15 12:40:01.968 EVS_SETUP::ParseXMLDragMessage() exited properly.
Tue Jul 15 12:40:01.968 EVSSetup::CreateProxyMob() found <EVS_METADATAS> node in the ingestdrag : attempt to
BuildTapeName()...
Tue Jul 15 12:40:01.968 EVSSetup::BuildTapeName() : HKEY_CURRENT_USER\SOFTWARE\EVS Broadcast
Equipment\EVSAvidSetupDll was found in the registry
Tue Jul 15 12:40:01.968 EVSSetup::BuildTapeName() : found key [TrainsTapeNameXPath] with value
[/ingestdrag/private/EVS_Metadatas/Clips_Infos/Clip/XFile_Clip_Infos/XT_ClipName]
Tue Jul 15 12:40:01.968 EVSSetup::BuildTapeName() : found key [ClipsTapeNameXPath] with value
[/ingestdrag/private/EVS_Metadatas/Clips_Infos/Clip/XFile_Clip_Infos/XT_NumClip]
Tue Jul 15 12:40:01.968 EVSSetup::BuildTapeName() : returned szTapeName [111]
Tue Jul 15 12:40:01.968 EVSSetup::CreateProxyMob() : BuildTapeName() returned [111]
Tue Jul 15 12:40:01.968 StartTC: 16:39:32:07 [25]
Tue Jul 15 12:40:01.968 8 audio Channels
Tue Jul 15 12:40:01.968 Avid Video Codec: Avid::MPEG2::30
Tue Jul 15 12:40:01.968 Adding EVS specific data ...
```

Tue Jul 15 12:40:01.968 SetSubATTR AV_EVS_BLOCKSIZE 8 SUCCEEDED
Tue Jul 15 12:40:01.984 Writing Clip Trimming data [250 - 630 - +/- 0]
Tue Jul 15 12:40:02.296 * LOG FILE CLOSED *

- EVSTMEError.log (used with XFile – EVS Avid Browser – XTAccess):
Will show error message with the Transfer Manager Client DII from Avid
- EVSAvidBrowser.log (used by the EVS AVID Browser)
Will show you some log about the EVS AVI Browser Software GUI
- ingestdrag.xml (use with)
Will show you the ingest information (metadata and configuration) of your last clip sent to AVID.

11.1.2 On the server computer

(AVID Transfer Manager)

- EVSReceiverDll.log (used for ingest EVS to Avid)
Will show you all the transactions between the Transfer Manager (+ EVS Receiver dll) and the XT GigE, File or Streaming through XFile (SDTI)

Example

```
Tue Jul 15 15:05:09.640 EVSReceiver:1: v.02.06.20
Tue Jul 15 15:05:09.703 Media Duration is 45000
Tue Jul 15 15:05:09.703 Trimming Media [ 0 / 45000 ]
Tue Jul 15 15:05:09.718 Using XT FTP Transfer [ftp://evs:evs!@1.1.249.249:21\Seq\000111A_JS6N258W_
.CLIP ]
Tue Jul 15 15:05:09.718 Media is 30 Mbits/s and 8 Audios [9 tracks]
Tue Jul 15 15:05:09.718 AddFtpServer: evs:evs!@1.1.249.249
Tue Jul 15 15:05:09.718 Trying to open ftp server [ 1.1.249.249:21 ]
Tue Jul 15 15:05:09.718 Reply: 220 EVS FTP Server (v) 07.04 (d) 01/10/2008 (a) B.Harmel [B: 8 MB L:1.1.249.249:21
R:1.1.220.220:45384]
Tue Jul 15 15:05:09.718 CTRL: USER evs
...
Tue Jul 15 11:53:43.328 Reply: 250 Directory changed to "X:\Seq\".
Tue Jul 15 11:53:43.328 CXTFtpClient::OpenXTClip._szClipFileName [000111A_JS6N258W_ .CLP]
Tue Jul 15 11:53:43.328 Opening file [ /SeqV ] [ 000111A_JS6N258W_ .CLP ]
Tue Jul 15 11:53:43.328 CTRL: NOOP
```

This log is very interesting in case of ingest failure

- EVSDHM.log (used for the Send To Play Back Avid To EVS)
Will show you the communication between the Transfer Manager (+ EVS DHM dll) and the XT GigE or the creation of an EVS MXF file

Example:

```
Tue Jul 15 10:58:59.546 TGT-Mode: XTFTP [Succeeded]
Tue Jul 15 10:58:59.546 Target Address ftp://evs:evs!@1.1.250.250/Seq/000731? [Succeeded]
...
Tue Jul 15 10:58:59.562 Opening DNxHD file [ ftp://evs:evs!@1.1.250.250/Seq/000731? ]
Tue Jul 15 10:58:59.562 Aspect Ratio: 4:3
...
Tue Jul 15 10:59:03.828 Trying to open ftp server [ 1.1.250.250:21 ]
Tue Jul 15 10:59:03.843 Reply: 220 EVS FTP Server (v) 06.71 (d) 07/08/2008 (a) B.Harmel [B: 8 MB L:1.1.250.250:21
R:1.1.220.220:35436]
Tue Jul 15 10:59:03.843 CTRL: USER evs

Tue Jul 15 10:59:03.843 Reply: 331 User name okay, need password.
Tue Jul 15 10:59:03.843 CTRL: PASS evs!

Tue Jul 15 10:59:03.843 Reply: 230 User logged in, proceed.
Tue Jul 15 10:59:03.843 --- Opened Client connection [ ftp://evs:evs!@1.1.250.250/Seq/000731?_Xc9SDvW_Untitled
Sequence 01 .CLP ] ---
```

This log is very interesting in case of Send To Play Back failure

- MetadataUpdate.xml (used in GigE mode)
Will show you the last updated XML file sent to the XT[2] after a send to playback in GigE mode

11.1.3 On the Send To Play Back server computer

(Most of the time XFile)


- EVSAPBSrv.log (log of the send to play back server)
Will show some information about the nick name used by the Transfer Manager in the setup step

11.2 Avid Log

You can find the log of the Transfer Manager in this folder:

C:\Documents and Settings\All Users\Application Data\Avid\Temp\TMServerLog\

The level of the log can be configured into the Transfer Manager configuration

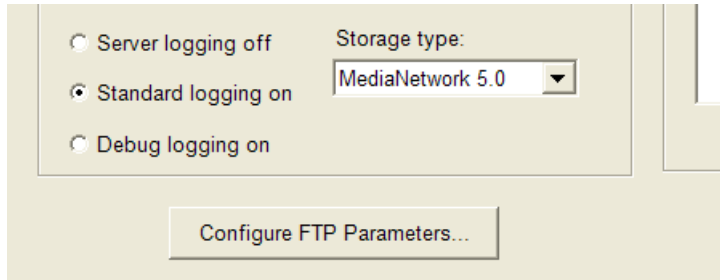

11.3 Testing

The easiest way to test the system is to use EVS Avid Browser. Assuming the clip is on the XStore59800\D drive (your mapped network drive is on the TM) you can double-click the clip you wish to send in Avid Browser and it should start transferring.

Be sure you have some IMX EVS MXF Files available to test with.

The MOST COMMON error seen in TM is:

Failed to Open IMX Target: No Media Error

```

Transfer Engine: Standalone Mode
11/20/2008 12:29:07 B58 APIMessageHandler::ProcessVersion: version: 0.8
11/20/2008 12:29:07 B58 APIMessageHandler::ProcessVersion: releaseVersion: 2.0
11/20/2008 12:29:07 B58 APIMessageHandler::ProcessVersion: Champlain or higher
[ 29041] [ INFO1 detach, env=13BA2894
[ 29041] [ INFO1 detach, env=13BA2894, deleting env()
[ 29041] [ INFO1 detach, env=13BA2894, calling DetachCurrentThread()
[ 29041] [ INFO1 ~xmog_localenv()
[ 34401] [ INFO1 JUM thread attach succeeded for group=0, name=<null>, daemon=f
else -> env=13C9C7D4
11/20/2008 12:29:07 D70 In APIMessageHandler::ProcessGetDeviceList called: List
Type is: WorkGroup
[ 34401] [ INFO1 detach, env=13C9C7D4
[ 34401] [ INFO1 detach, env=13C9C7D4, deleting env()
[ 34401] [ INFO1 detach, env=13C9C7D4, calling DetachCurrentThread()
[ 34401] [ INFO1 ~xmog_localenv()
[ 36921] [ INFO1 JUM thread attach succeeded for group=0, name=<null>, daemon=f
else -> env=13C9C7D4
11/20/2008 12:29:07 E6C In APIMessageHandler::ProcessGetFromIngest
11/20/2008 12:29:08 E6C QueueManager::ScheduleTransfer: received request attempt
ing to schedule it.
11/20/2008 12:29:08 E6C Transaction::Transaction: Created new transaction with
ID:3
11/20/2008 12:29:08 E6C QueueManager::ScheduleTransfer: Transaction ID assigned
:3
11/20/2008 12:29:08 E6C QueueManager::ScheduleTransfer: Ingest Request Queued
11/20/2008 12:29:08 E6C In APIMessageHandler::ProcessGetFromIngest, Request que
ued and ID is 3.
[ 36921] [ INFO1 detach, env=13C9C7D4
[ 36921] [ INFO1 detach, env=13C9C7D4, deleting env()
[ 36921] [ INFO1 detach, env=13C9C7D4, calling DetachCurrentThread()
[ 36921] [ INFO1 ~xmog_localenv()
11/20/2008 12:29:10 D84 IngestComp: TID=3, SessionID=3, name=IMX30, dest=G:\Avid
MediaFiles\MXF\1, ChunkSize=5400, QLimit=100
11/20/2008 12:29:10 D84 TransferController::IngestComp session 3
11/20/2008 12:29:10 D84 TransferController::ReserveBandwidth SStreamsUsed = 8:2
[ 32401] [ INFO1 JUM thread attach succeeded for group=0, name=<null>, daemon=f
else -> env=13DD3E7C
11/20/2008 12:29:10 CA8 TC::ReleaseBandwidth <TC_INCOMING> SStreamsUsed = 8:0
TransferError)
11/20/2008 12:29:10 CA8 TransferController::TransferError Error encountered in
Session 3, [EUSReceiver::Open: no media][EUSReceiver::Open: no media] 23 0
[ 32401] [ INFO1 detach, env=13DD3E7C
[ 32401] [ INFO1 detach, env=13DD3E7C, deleting env()
[ 32401] [ INFO1 detach, env=13DD3E7C, calling DetachCurrentThread()
[ 32401] [ INFO1 ~xmog_localenv()

```

This is usually because the TM cannot “see” the directory where the media is coming from. The error on EVS Avid Browser will be:




Example: your media is on the E drive of the XFile (XStore59800\E), and you have mapped the D drive (XStore59800\D). An example would be either to map the new network drive to XStore59800\E or move the file from the E drive to the D drive.

The error below usually indicates that the TMClient.ini is not correct:



The error below usually indicates that the Ingest Device name is not correct:

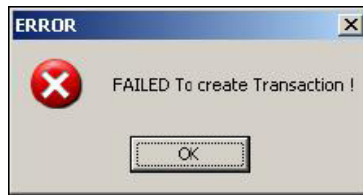

Once you are successfully transferring clips from EVS Avid Browser to TM, other problems (like XFile/XStream and IPD/XTAccess) are usually much quicker to solve.

First thing to check with XFile and XTAccess is always that the TMClient.ini is correct.

Next, check the Ingest Device Name settings.

Finally, check where the media is stored.

There are various ways of stabilizing the Windows network.

Create a new user on the TM (eg DVB) with the XF credentials.

Create a new user on the XF (eg Avid) with the TM credentials.

Make sure all Windows PCs have a password (you may have to create one on the XF).

Put the XF in the Avid DNS

Put the TM in the EVS DNS (if applicable)

Use the Hosts file on the XF and TM to help network between them (located in C:\WINDOWS\system32\drivers\etc)

Resolve multiple DNS suffixes in the network adapter settings.

Check the network binding order if using multiple NICs on the TM or XF.

Most problems with the installation and configuration of EVS and Avid integrations come from Windows networking. Once the network is stabilized, the configuration is relatively easy to troubleshoot.

A lot of the error messages seen will not make sense. Wherever you are seeing them, check you can send a file in the simplest way (through Avid Browser). This way you know the Browser Ingest Device is working. You also have a disk with media on it that you know the TM can see and transfer from.

From this point you can modify the settings in your current application (XFile/IPD) to match the ones of Avid Browser to see if the new settings work.


12 EVS AND AVID NETWORKING

The following section proposes some recommendations and rules to interconnect EVS and Avid networks. These recommendations have been discussed with Avid IT experts. For additional information about Avid networking rules, please refer to the document : [Network_Requirements_for_Unity_ISIS_and_Interplay_V1\[1\].3.1.pdf](#).

Important Notice : EVS/Avid integration could be based on more complex or simpler networking topologies. The following recommendations must be adapted to the actual system. Please contact EVS support for advises.

12.1 Recommended Interconnectivity

The diagram below represents the recommended interconnection of EVS and Avid networking.

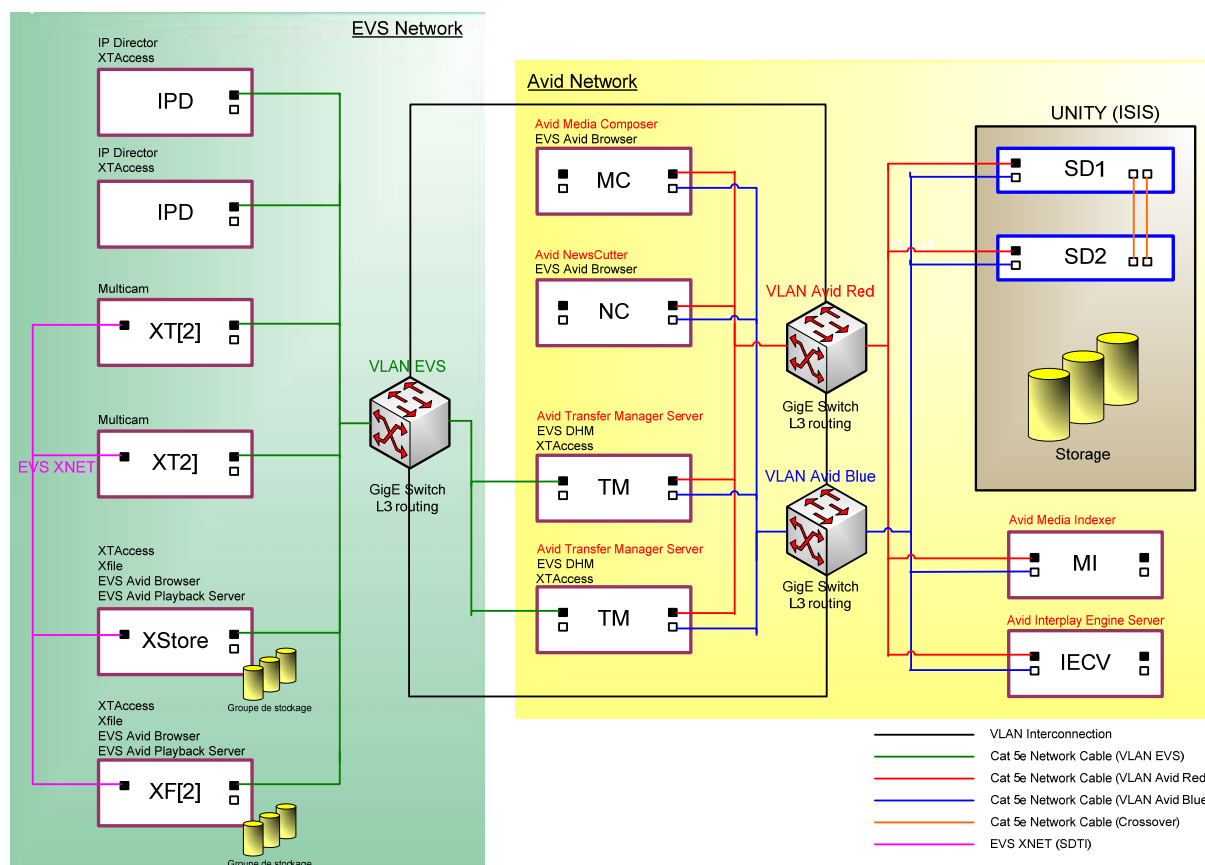

EVS network is composed of :

- EVS VLAN (subnet)
- XT[2] servers
- IP Director stations
- XStore or XF[2] workstations

Avid network is composed of :

- One or several VLANs (depending on the level of redundancy and protection proposed by Avid)
- Transfer Manager Servers
- Editing workstations (Avid Media Composer or Avid News Cutter)
- Unity Storage (Unity FC or ISIS)
- Interplay Engine and Media Indexer (optional)

EVS and Avid Subnets are clearly separated in this configuration, where the Avid Transfer Manager servers play the role of “gateway” between EVS and Avid subnets.

This topology has several **advantages** :

- EVS and Avid networking responsibility are clearly separated : EVS devices are not directly connected to the Avid subnets.
- Avid Transfer Manager server is suitable as an application “gateway”. It transfers compressed frames between EVS and Avid storage without any IP routing performed at this level.
- Transfer of audio and video data between EVS and Avid is only based on L2 routing, which is more efficient than L3 routing
- Control of Transfer Manager processes (XTAccess, EVS Avid Browser and EVS Avid Playback Server) can be done through L2 or L3 routing.
- Full Jumbo Frames performances can be reached. Actually Avid VLANs never support Jumbo Frames because Avid ISIS IP protocol (UDP based) does not support Jumbo Frame.

12.2 Networking configuration rules

12.2.1 Transfer Manager server

- Dedicate an NIC board (add a new GBE board if needed – contact Avid support)
- Connect this NIC to the EVS switch
- Configure the NIC with suitable EVS IP Address and mask (subnet). Possibly a default gateway in case of multiple EVS VLANs
- Configure the NIC board with Jumbo Frame capabilities, provided that EVS Subnet supports Jumbo Frames.

12.2.2 EVS devices


- EVS switches must support Jumbo Frames
- It is recommended to configure in Jumbo Frame EVS boards of devices where XTAccess, EVS Avid Browser and EVS Avid PlayBack Server.

12.3 DNS Configuration

EVS and Avid often use DNS to map IP address and Windows naming of workstations. Typically an EVS DNS is set for IP Director system and another Avid DNS is set for Interplay system.

It is possible to make several DNS working together but it needs IT specialist to configure them accordingly.

When only some devices must interoperate between EVS and Avid, it is simple to edit the “Hosts” file of the devices. This “Hosts” file is located in C:\WINDOWS\system32\drivers\etc\

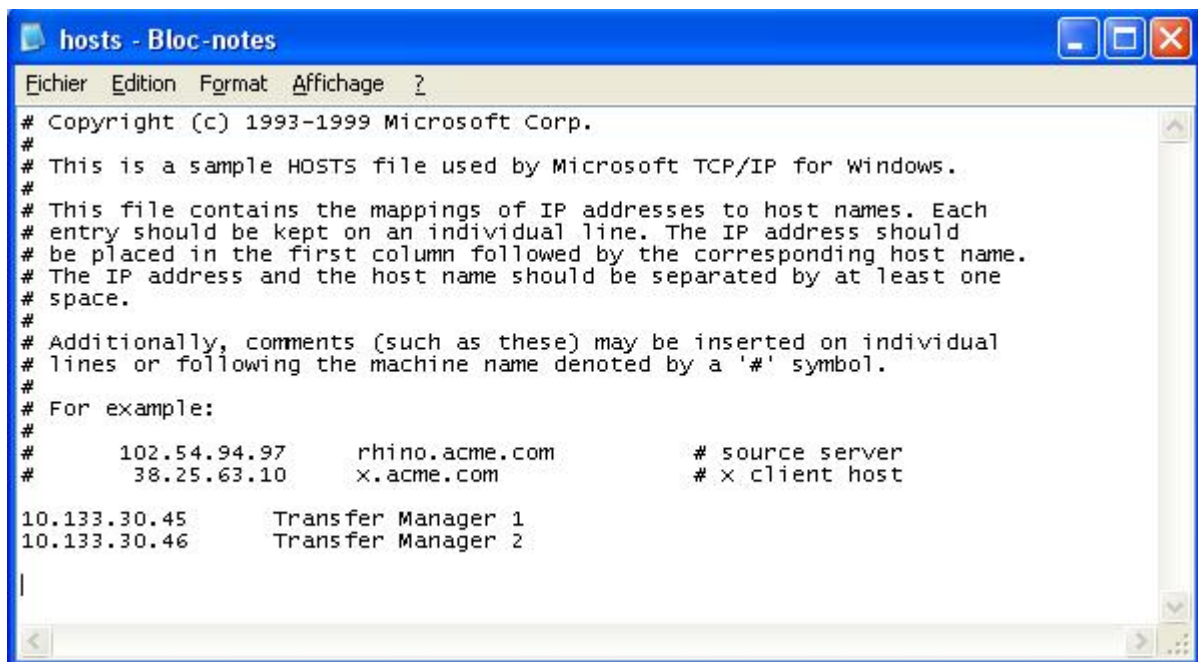

- On EVS side, edit the “Hosts” file of devices running XFile, XTAccess, EVS Avid Browser and EVS Avid Playback Server.
- On Avid side, edit the “Hosts” file of the Avid Transfer Manager servers and possibly Avid editing stations like Avid Media Composer in case EVS Avid Browser is installed.

12.4 Workflow Networking Considerations

12.4.1 XTAccess (push mode)

- Check the EVS subnet supports Jumbo Frames. If it is not the case, disable the Jumbo Frame settings on the Transfer Manager NIC to EVS subnets, otherwise, Jumbo Frames will be dropped by the EVS switch.
- XTAccess NIC does not need to be Jumbo Frames enabled as it is only used to initiate and control the Transfer Manager process (no transfer of data between XT[2] and Transfer Manager Servers). Anyway some cases have shown that XT and Transfer Manager automatically set their MSS at 1500 Bytes when Jumbo frames option is not enabled on XTAccess devices. For maximum performances, it is advised to set Jumbo Frames on XTAccess devices. Need to be further investigated by EVS Lab.

- XTAccess could run on Transfer Manager Server. Anyway this configuration has not yet been completely validated.

12.4.2 EVS Avid Browser on EVS device (push mode)

Same considerations as for XTAccess (see above).

12.4.3 EVS Avid Browser on Avid editing stations (pull mode)

- EVS Avid Browser must be able to browse the EVS storage (via file access) or XT[2] content (via FTP connection). The editing station running EVS Avid Browser must be connected to EVS VLAN. 2 solutions :
 - Provide L3 routing capabilities between EVS and Avid subnets. Use a default gateway on the Avid Editing station to be able to reach the EVS subnet
 - Use a dedicated NIC on the Avid Editing stations to be connected to EVS subnet. This method needs additional “wired” links between EVS and Avid networks.


12.4.4 EVS Avid Playback Server

Same considerations as for XTAccess (see above).

13 KNOWN BUGS, LIMITATIONS & CONSTRAINTS

13.1 Generalities

- **Transfer Manager FTP mode:** It does not use the Avid TM APIs. It is possible to transfer IMX MXF OP-1a file located on a FTP server using the Avid FTP client like a browser. Note only IMX MXF OP-1a is supported (development done for XDCAM import/export)
- **Use of Multiple Network Connections on XFile :** Avid Transfer Manager API is based on a TCP/IP protocol. The Ethernet GigE connection used to communicate with Avid Transfer Manager must be located in the first position in the Windows Network setup of the workstation to choose this interface. Otherwise the IP Address sent to Transfer Manager is wrong and the Transfer Manager server is not able to “see” the EVS ingest devices or the EVS Playback server application. Loopback and other boards must be either disabled or shifted behind. You can modify the position of the GigE connections in Windows Start Menu : Settings>Network Connections>Advanced>Advanced Settings like below :

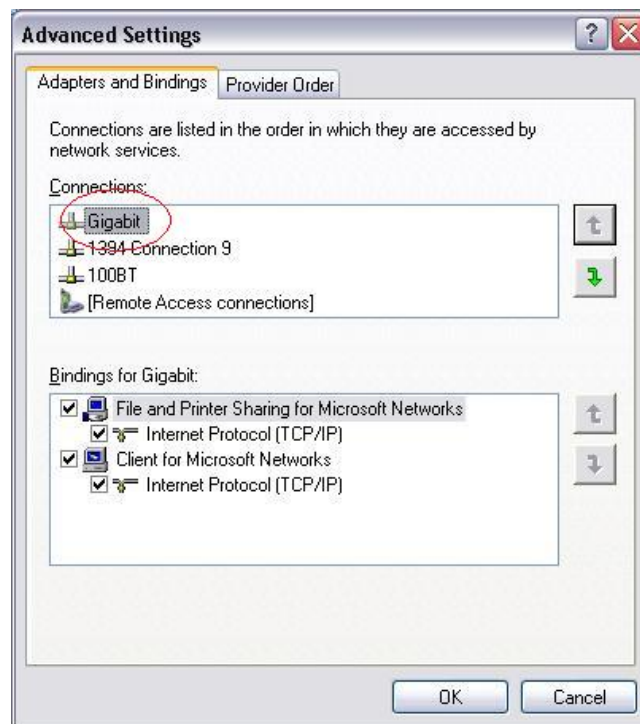

- **Firewall:** Avid Transfer Manager is based on a TCP/IP protocol. Firewalls could block some ports : The following ports 6539/tcp, 6532/tcp, 6535/tcp must be added in the exception list of the firewall.
- **Windows Workgroup / Domain:** As XFile is defined in a workgroup, Avid Transfer manager and other Avid devices must also be defined in a workgroup, not a domain. Workgroups can be different but the same workgroup for all the EVS & Avid devices will facilitate the search of a device in the Windows network.
- **Interplay only supports Avid AAF/MXF file format** (not OMF). EVS Avid Browser must be set up accordingly. Streaming from IP Director or XStream lets Avid choosing the file format automatically.

- **Avid Best Practices Recommendations :**
 - Avid recommends a max. of 4 simultaneous transfers (ingest & playback) per Transfer Manager Server.
 - Avid recommends to restart Transfer Manager Application at least once a week.

13.2 Ingest to Avid

- **Avid DNxHD® Codec with Quick Time format:** not supported by EVS. The only way to transfer an Avid DNxHD® Codec file to Avid is via Avid Transfer Manager, not via manual import of Avid DNxHD® Codec file wrapped in Quick Time Movie.
- **WG 4:** TMAuto generates AAF/MXF files with TC and duration errors. OMF mode is recommended when using TMAuto (i.e. “push” workflows – see section Workflows). No problem with Avid Interplay versions.
- **Push workflows with Interplay:** the file duration is set to 2 seconds at the beginning of the transfer. The duration is updated only after 2-3 minutes. In the meantime, only the 2 sec of content are available for editing. Limitation by Interplay.
- **Editing during transfer to Avid** is possible provided :
 - Avid file format (storage) is AAF/MXF (not OMF)
 - Media Manager or Interplay Engine (Unity) is implemented to access Media during transfer
 - Avid shared storage (Unity family) is implemented (not possible with local storage).
- **Multi Camera Editing mode:** It is only possible to group synchronized inputs or clips for multi camera editing once the clip is completely transferred to Avid (Avid MXF file closed). It is then not possible to edit synchronized camera in one group during transfer. This is a limitation related to Avid Media Composer.
- **Missing frame:** In Interplay versions, the transfer of 59.94 fps files (IMX-D10 and Avid DNxHD® codecs) is complete but Media Composer does not display the last frame (Push mode only). Workaround : add guardbands to the clip before transfer.
- **Windows Vista 64-bit :** EVS Avid tools are not compliant with 64-bit CPU processors. In particular, EVS Avid Browser cannot run on Avid Media Composer with Windows Vista 64-bit.

13.3 Send to Playback (to EVS)

There exist some limitations or constraints related to the **Avid sequence** in order to correctly use Avid Send to Playback feature with EVS devices:

- The Avid sequence must be set up in IMX (MPEG) 30, 40 or 50 or Avid DNxHD® Codec, not DV or any other codec!
- Audio settings resolution must be 16-bit or 24-bit, uncompressed and 48 KHz
- Only one video track defined in the timeline, all the additional video tracks must be rendered before transfer
- At least one audio track and one video track must be present in the timeline.

Other bugs and limitations:

- **Invalid characters:** Invalid characters for writing a Windows name are not supported in EVS Avid Playback server. This limitation concerns either the "Avid sequence name" or the "TAPE ID" following the option selected for clip name.
- **Unicode:** The Transfer Manager does not support Unicode metadata. All Clip Name, VarId and Keyword in unicode will be replaced by the word "UNICODE" before transfer to Avid.
- **Transfer cancelled :** In case the transfer to EVS is cancelled, the clips are deleted from the XT server.
- **Aspect ratio :** Aspect Ratio parameter is not supported in XFile while restoring an EVS MXF file.

13.4 Tips


- **TMClient.ini:** removes all references to servers which are not available on the network: otherwise initialisation of the transfer will be delayed (timeout) before starting transfer of data.

14 WORKING WITH MULTIPLE TRANSFER MANAGER SERVERS

Big studio environments are composed of a large amount of EVS XT servers, IP Director stations, XFile/XTAccess gateways and also multiple Transfer Managers Servers attached to the Avid Unity System.

Avid Transfer Manager Server cannot manage active redundancy or load balancing : this means the EVS server must specifically define which Transfer Manager is targeted.

The figure below represents a typical environment with 2 XFile/XTAccess gateways connected to 2 Transfer Manager Servers. This configuration can be extended to multiple XFile/Transfer Manager Servers. We consider the workflow “push streaming” triggered by IP Director.

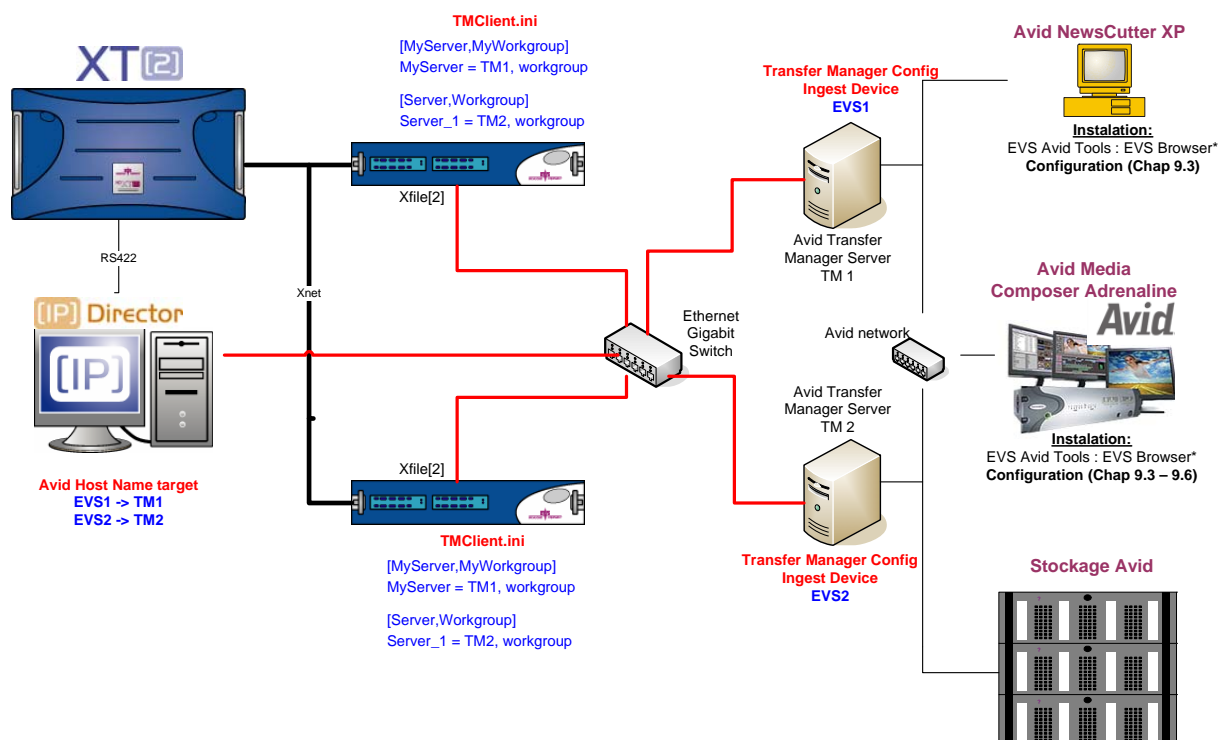

On the IP Director stations, we can define several Avid targets : we will consider 2 Avid targets TM1 & TM2.

In the configuration menu of the Transfer Manager Servers, the Ingest devices will be named EVS1 in TM1 and EVS2 in TM2. Similarly, the HostName of the Avid target of IP Director stations will also be named EVS1 for TM1 and EVS2 for TM2.

When selecting an Avid Target, IP Director will send a XML file to a predefined directory to be scanned by XFile gateways. This directory can be the local XML directory of the XFile/XTAccess (local scan) or a centralized directory scanned by several XFile (Load balancing).

The XFile/XTAccess will use the Avid Hostname defined in the XML (EVS1 for target TM1 or EVS2 for target TM2) to select the target Transfer Manager server. In order for any XFile/XTAccess device to connect any Transfer Manager Server, the TMClient.ini file located

in the XFile directory must list all the Transfer Manager servers available like described below :

```
[MyServer,MyWorkgroup]  
MyServer = TM1, workgroup  
  
[Server,Workgroup]  
Server_1 = TM2, workgroup
```

In this sample file, the XFile/XTAccess will connect both TM1 & TM2 and select for the transfer the one where is defined the appropriate Ingest device : EVS1 in TM1 or EVS2 in TM2. We can put additional servers names in the [Server,Workgroup] tag.

As Transfer Manager is not capable of managing load balancing or redundancy, we must pay attention in the definition of the Avid target in IP Director. A good practice is to divide the IP Director stations to specific Transfer Manager Servers with a backup target in case the main Transfer manager is down.

Important Notice : we must use XFile v1.12.01+ in order to refer to the Avid HostName defined in the XML and not the default name defined in XFile configuration. This bug was found in XFile v1.11.02 and solved in v1.12.01!

15 WORKING WITH AVID MEDIA MANAGER (WG 4)

Avid Media Manager is related to Avid Unity WG 4.

It allows easily managing Avid Unity Content thanks to a powerful web browser.


By launching Internet Explorer with the Media Manager URL, you can manage and monitor the content stored on an Unity system from any remote station : Transfer Manager, Media Composer NLE, XFile, etc.

Please refer to Media Manager User's manual for detailed procedure.

15.1 Clips Search and Import to a bin

- Search a list of clips by defining a search criterion
- Right-click on a clip to display its attributes. "Expand" button allows showing all the information related to this clip in Media Manager
- From Media Composer station, drag & drop the selected clip into the bin




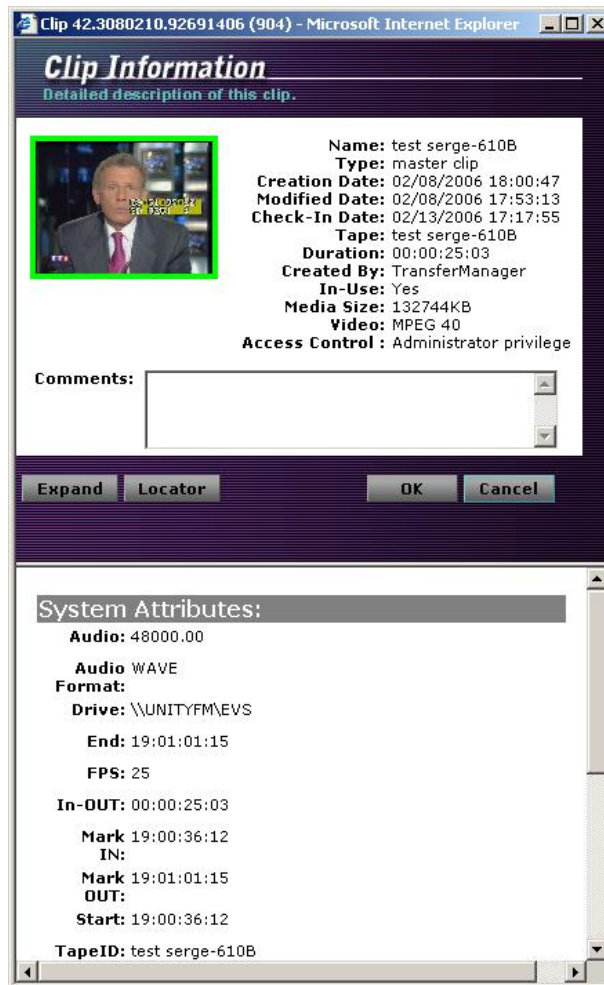

15.2 Transfer Manager

In the Media Manager browser, select “Service” to launch a Transfer Manager Status Internet Explorer window. This monitor provides :

- Status of the transfer with a progress bar
- Logs of the transfer when completed (transfer rate – some bugs!, Transfer Manager server, etc.)

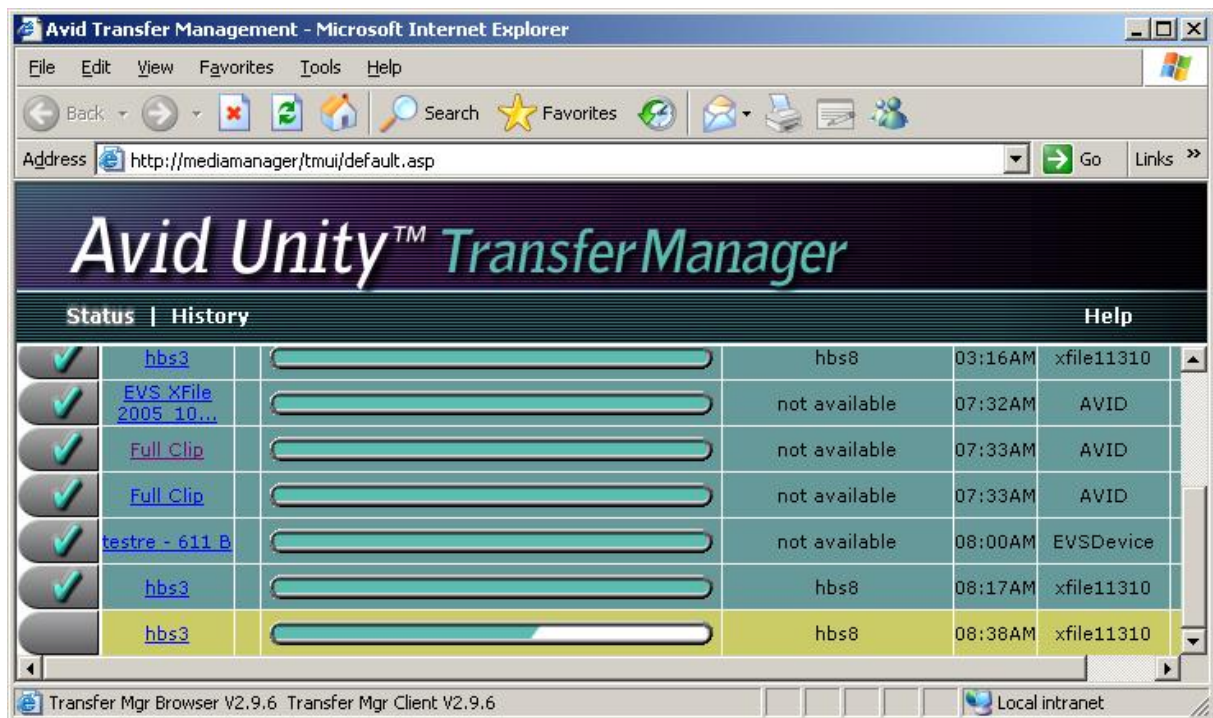

16 WORKING WITH AVID INTERPLAY

Avid Interplay is the new MAM developed by Avid. It replaces the former Avid WG 4 and its related applications like Media Manager.

Avid Interplay is composed of a suite of servers and client applications.

Servers :


- **Avid Interplay Engine** : The Avid Interplay Engine is the power centre of an Interplay real-time nonlinear production environment. It combines an advanced production asset database with workflow management software for instant access to any type of production asset. Built-in project management features enable everyone to perform at peak efficiency, with moment-by-moment status views for managers.
- **Avid Transfer Engine Server** : Ingest media, transfer media between workgroups, or send finished sequences to a playback device while Interplay keeps track of everything. This is the same application as the Avid Transfer Manager server used in WG 4.

Client Applications :

- **Avid Interplay Access** : The Avid Interplay Access asset management client is a direct pipeline into the Interplay media database. Team members can easily search, navigate and organize assets; add or modify media objects such as master clips, sequences, and effects; work with graphics files; and store, track, and modify scripts, spreadsheets, or other project-related files and their version histories—all in their native applications
- **Avid Interplay Assist** : Assistants and interns can review and log video, select shots, and add markers with comments that are automatically visible to producers and editors
- **Avid Interplay Access window in Media Composer** : the same feature provided by Avid Interplay Access but directly integrated into the Media Composer editing application.
- **Avid Transfer Engine Client** : Client related to the Avid Transfer Engine server
- **Avid Interplay Transfer Status** : Tool to monitor the transfer status of Transfer Engine Server

Those applications are Windows based applications to be installed on any Windows client workstations connected to Interplay. There is no Web interface as with Media Manager in WG 4.

16.1 Avid Interplay Access

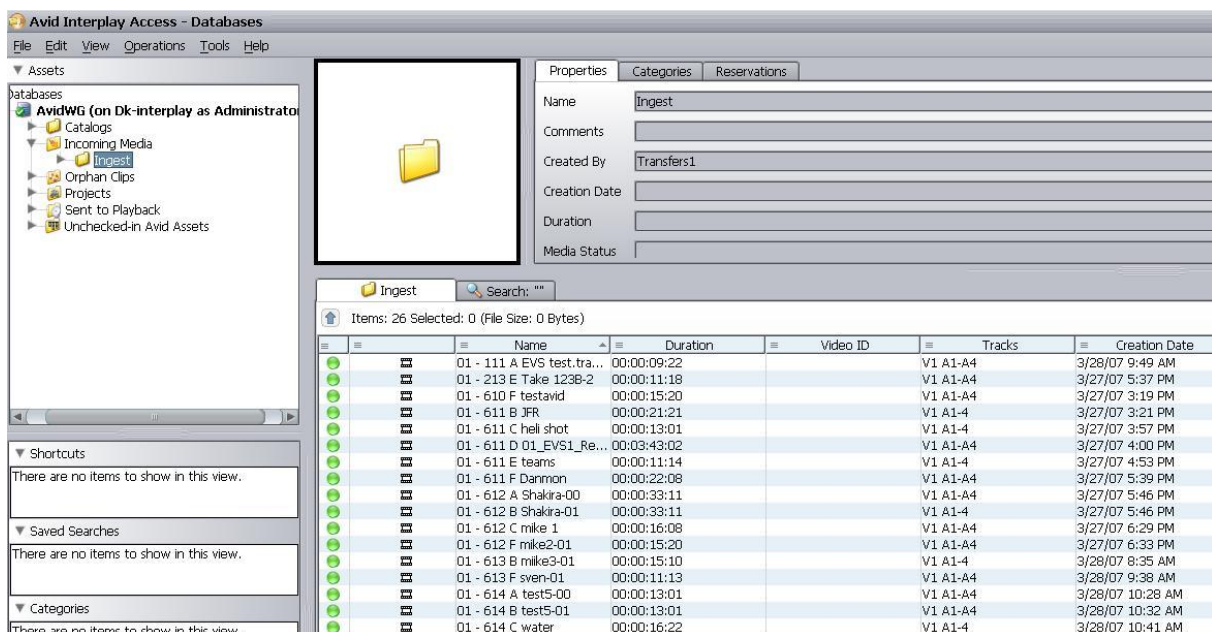

The Avid Interplay Access asset management client is a direct pipeline into the Interplay media database.

This client application can be installed on any workstation connected via a network to the Interplay Engine.

Installed on an IP Director workstation, the EVS operator can easily search, check, and navigate into assets.


Installed on a Media Composer, the Avid Editor can search, check, and navigate into assets, but also drag & drop the assets into its bin or in the timeline to start editing.

16.1.1 Workspace/Folder in Interplay Access


If you want create a folder into Interplay Access with your ingest media, you can configure it in the ingest device




Or since IPD 5: you can configure it in the Workspace Name column

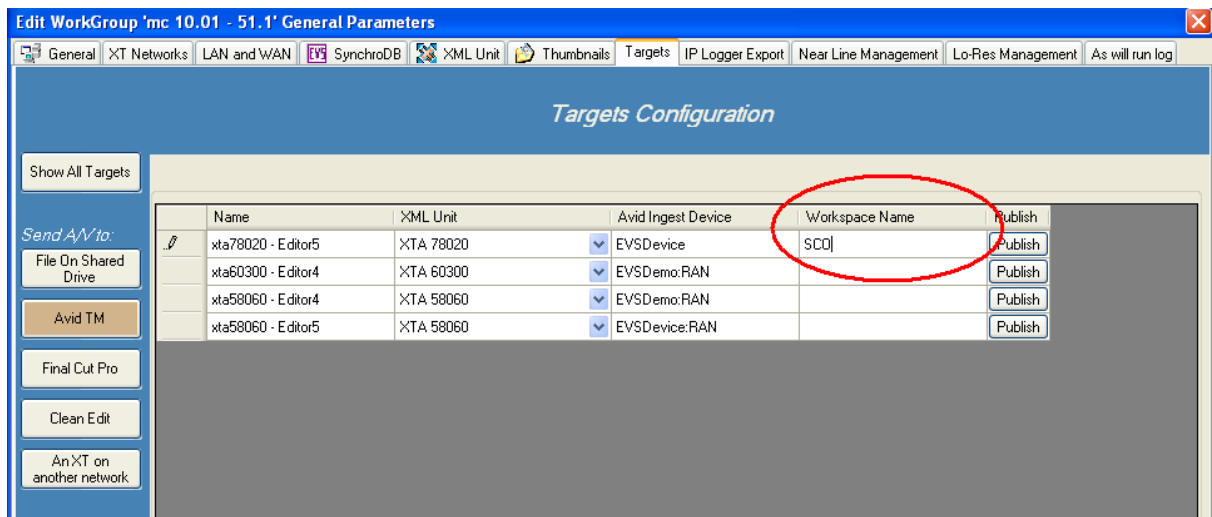

In this example all your media will be sent into the SCO folder under Incoming Media folder.

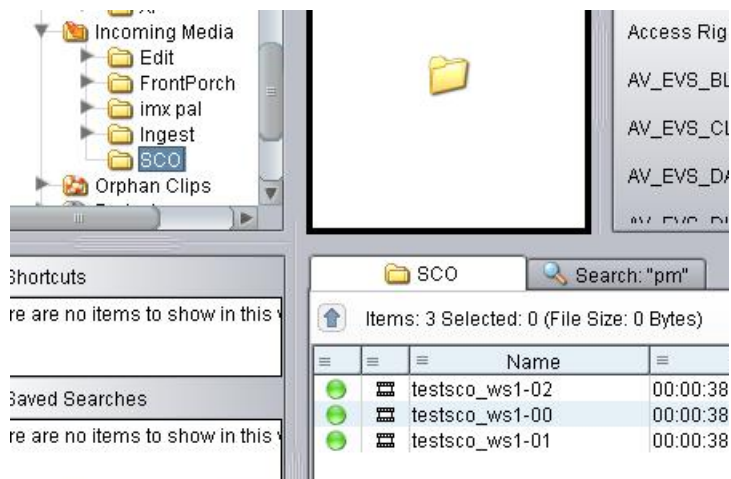

16.2 Avid Interplay Access Window in Media Composer

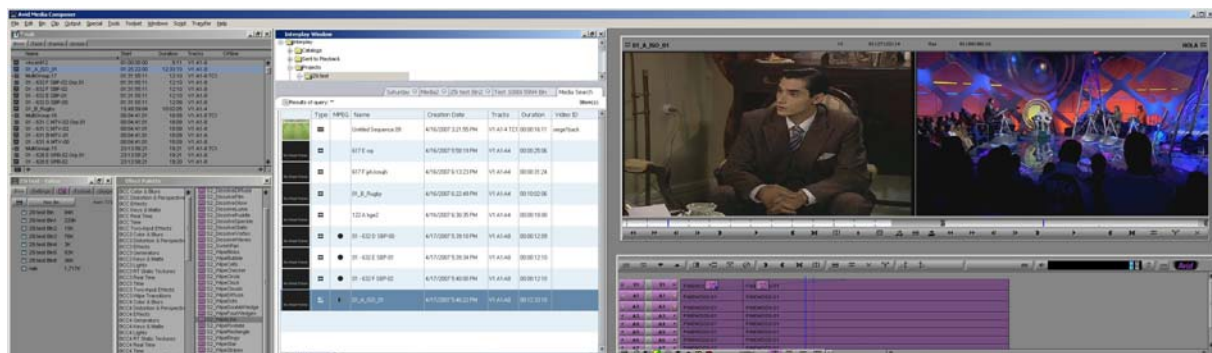


Avid Interplay Access window can be launched from the Media Composer menu.

The Avid Editor can search, check, and navigate into assets, but also drag & drop the assets into its bin or in the timeline to start editing.

Avid does not recommend launching this Access window in Media Composer at the same time as Interplay Access client or Interplay Assist applications to avoid any conflict to access the database.

16.3 Avid Interplay Assist

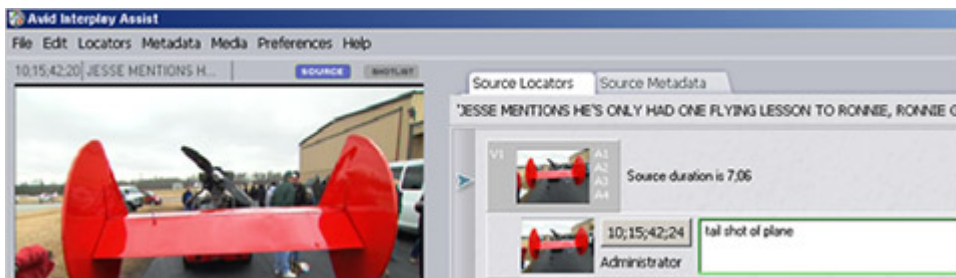


The optional Avid Interplay Assist desktop video tool is a cost-effective way to review and log video, select shots, and add locators and comments using ordinary desktops and laptops on the network.

As Interplay Access, this is an application client that can be installed on any workstation. On an IP Director workstation, Interplay Assist can be used to search, check and preview content on Avid storage.

Note : you need a dongle with appropriate license rights to run this application.

16.4 Avid Interplay Transfer Status

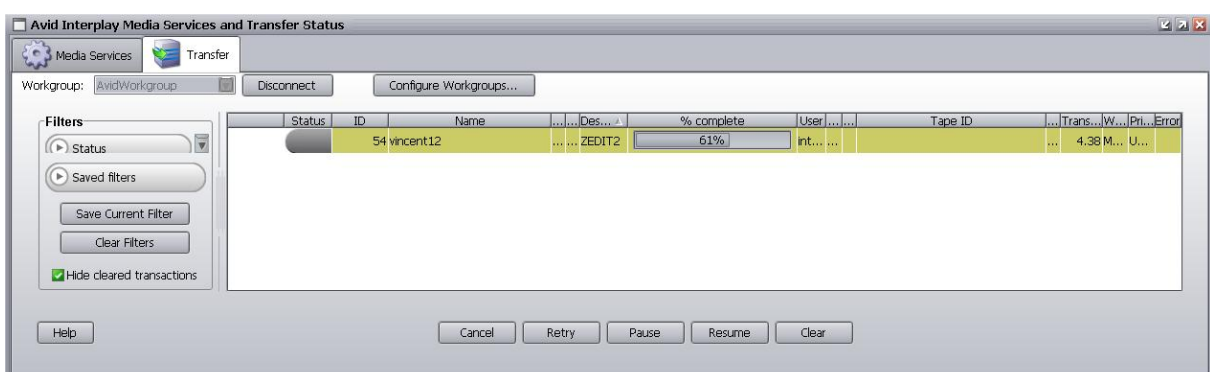

Avid Interplay Media Services and Transfer Status is a tool that can be installed on any workstation connected to Interplay Engine media database.


Running on an IP Director workstation, these tools allows for monitoring the transfer status thanks to its progress bar and check the completeness or failure of the transfer.

16.5 EVS Metadata and logs transfer to Avid Interplay

16.5.1 Metadata


- XTAccess, XFile and XStream support the transfer of EVS CCLIP, EVS IP Director Metadata.
- Avid DHM API is used for this purpose, not Avid Interplay WebServices.
- Metadata are displayed in the User's Properties of a clip in Interplay Access or Interplay Assist
- Metadata are sent to Interplay at the beginning of the transfer. It is not possible to update the metadata during or after the transfer. A new transfer request must be initiated to modify the metadata.
- No metadata are transferred from Avid Interplay to EVS during a send to Playback
- List of Metadata available in Interplay :
 - Clip Metadata (XT server) :
 - EVS_ClipName
 - EVS_TC_IN
 - EVS_Duration
 - EVS_TC_OUT
 - EVS_Clip_Duration
 - EVS_Device_SRC
 - EVS_Audio_Codec
 - EVS_Backup_Time
 - EVS_Creation_Time
 - EVS_Creation_Time_GMT
 - EVS_Material_ID
 - EVS_Nb_Audios_Mono
 - EVS_Nb_Video
 - EVS_Processing_Device
 - EVS_Video_Aspect_Ratio
 - EVS_Video_Codec
 - EVS_Video_Interlaced
 - EVS_Video_STD
 - EVS_Video_System
 - EVS_Camera
 - EVS_Camera_Label
 - EVS_Camera_Pref
 - EVS_Keyword_1
 - EVS_Keyword_2

- EVS_Keyword_3
- EVS_Num_Clip
- EVS_Rating
- EVS_Short_Ref_TC
- EVS_TC_System
- EVS_UmlID
- EVS_User_Nb
- EVS_ClipIDSrc
- IP Director Metadata
 - EVS_LsmSerialNumber
 - EVS_MSListID
 - EVS_MSListPos
 - EVS_Keywords
 - EVS_Participant
 - EVS_Owner
 - EVS_PublishedGroups
 - EVS_TapeID
 - EVS_Users_fields

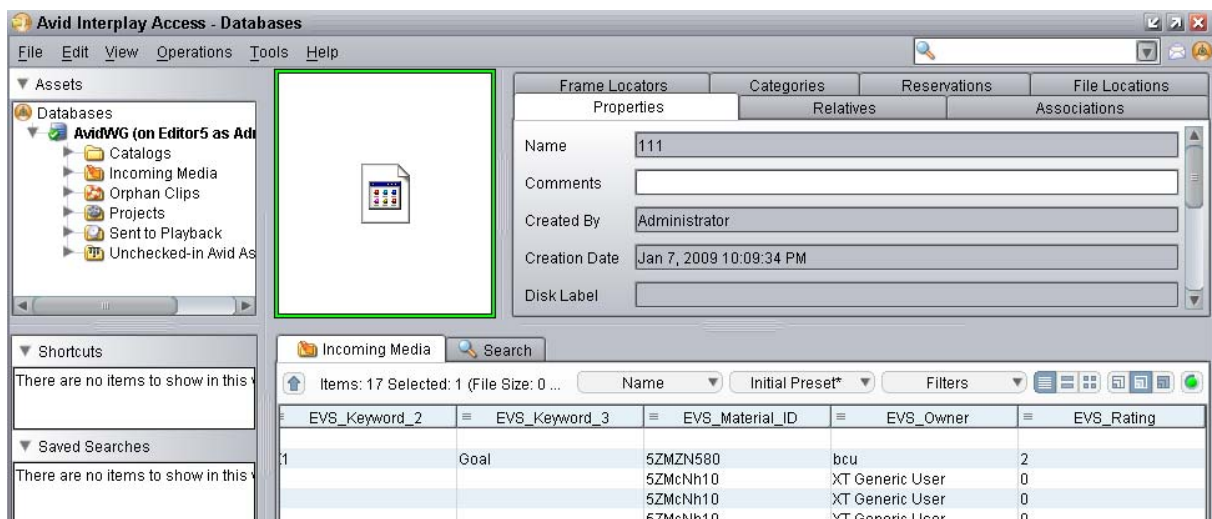

16.5.2 Avid Tape Metadata

The Avid "Tape" Metadata can be set up to contain one of the EVS Metadata Tags.

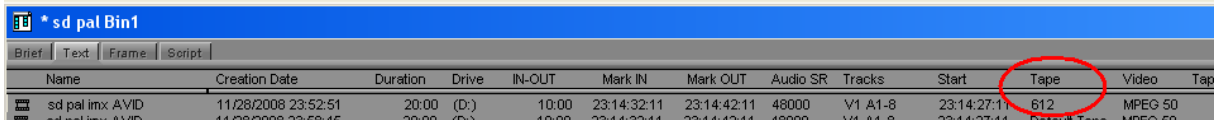


Name	Creation Date	Duration	Drive	IN-OUT	Mark IN	Mark OUT	Audio SR	Tracks	Start	Tape	Video	Tap
sd pal imx AVID	11/28/2008 23:52:51	20:00	(D:)	10:00	23:14:32:11	23:14:42:11	48000	V1 A1-8	23:14:27:11	612	MPEG 50	

To change the EVS Metadata which will be set into the Avid Tape Metadata, you have to change the EVSAvidSetupDll key in the registry of the Ingest (XTAccess/XFile) machine

HKEY_USERS\Software\EVS Broadcast Equipment\EVSAvidSetupDll\

- ClipsTapeNameXPath (for the backup of clips to Avid)

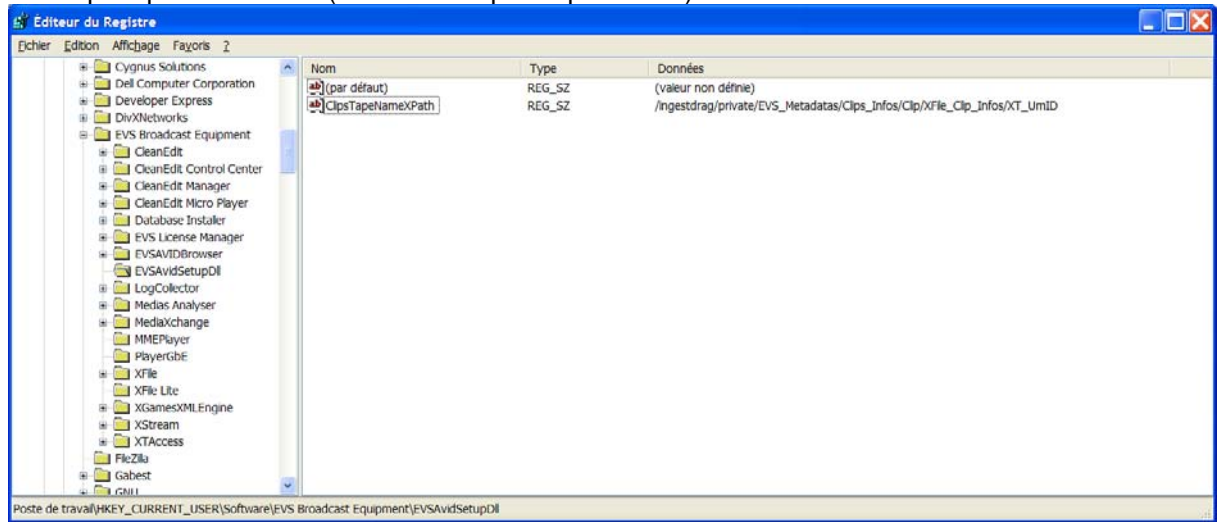

The xxxxxXPath key must contain /ingestdrag/private/ + the XML Path to the EVS XML Metadata you want:

Example

- /ingestdrag/private/EVS_Metadatas/Clips_Infos/Clip/XFile_Clip_Infos/XT_UmID (default value)
- /ingestdrag/private/EVS_Metadatas/Clips_Infos/Clip/XFile_Clip_Infos/XT_ClipName

```
<EVS_Metadatas>
<Clips_Infos>
<Clip>
<XFile_Clip_Infos>
<XT_ClipName>IMX-525i60</XT_ClipName>
<XT_UmID>7tbk5ldW</XT_UmID>
<XT_Name>                </XT_Name>
<XT_NumClip>16</XT_NumClip>
<XT_Camera>A</XT_Camera>
<XT_Short_IN>27393354</XT_Short_IN>
<XT_Short_OUT>27394926</XT_Short_OUT>
<XT_Short_REF>27393354</XT_Short_REF>
<XT_Clip_Duration>00:00:26:06</XT_Clip_Duration>
<XT_Short_IN_str>11:40:12:23</XT_Short_IN_str>
<XT_Short_OUT_str>11:40:38:29</XT_Short_OUT_str>
<XT_Short_REF_TC_str>11:40:12:23</XT_Short_REF_TC_str>
<XT_Offset_TC>-24875108</XT_Offset_TC>
<XT_TC_System>4</XT_TC_System>
<XT_TC_System_str>sys29.97</XT_TC_System_str>
<XT_Keyword_1>            </XT_Keyword_1>
<XT_Keyword_2>            </XT_Keyword_2>
<XT_Keyword_3>            </XT_Keyword_3>
<XT_Keyword_4>            </XT_Keyword_4>
<XT_Keyword_5>            </XT_Keyword_5>
```


```
<XT_ClipIdSrc>7tbj7on1</XT_ClipIdSrc>
<XT_FillAndKey_Type>0</XT_FillAndKey_Type>
<XT_FillAndKey>      </XT_FillAndKey>
<XT_Camera_Pref>1</XT_Camera_Pref>
<XT_Rating>0</XT_Rating>
</XFile_Clip_Infos>
</Clip>
</Clips_Infos>
</EVS_Metadata>
```

- For purposes or relinking inside the AVID system, you MUST ensure whenever possible that the TapeName field is unique.
- For transfer of train the tape will be : CAMLABEL_TCIN_DATE

16.5.3 Locator

Logs created with IPDirector 5 can be sent to Avid as Locator through the Transfer Manager.

If you create logs with IPDirector on the live feed and then consolidated them in one clip (see IPDirector documentation), when you send this clip to Avid all the logs will be sent as locators into the MediaComposer

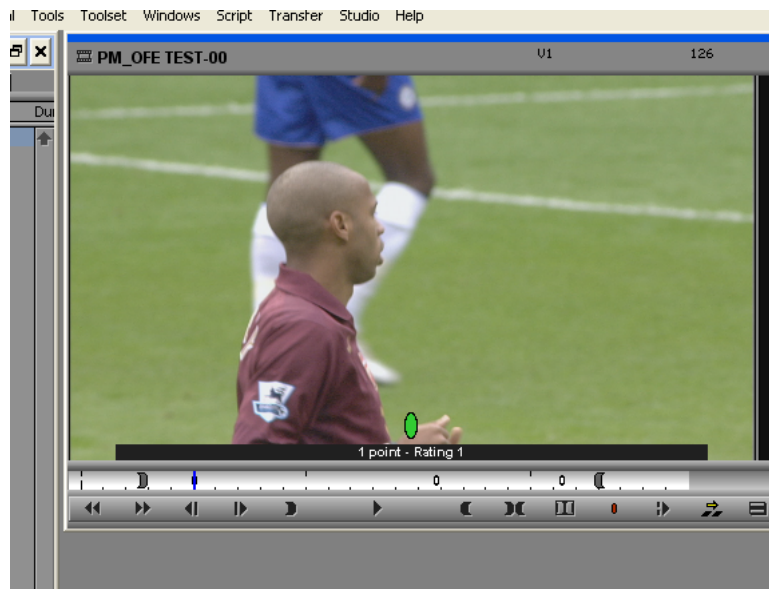

17 ACRONYMS

- AAF : Advanced Authoring Format
- IMX D10 : MPEG-2 I-only video format developed by Sony.
- MCA : Avid Media Composer Adrenaline HD
- MM : Avid Media Manager
- Mob : Abstract class for content. Like a container with information about the content.
- OMF : Open Media Framework. Avid legacy file format in Production.
- NLE : Non Linear Editing (system)
- MXF : Material Exchange Format
- TM : Avid Transfer Manager

EVS Broadcast Equipment

Liège Science Park
16, rue Bois St Jean
B-4102 Ougrée
Belgium



Corporate
Headquarters
+32 4 361 7000

North & Latin America
Headquarters
+1 973 575 7811

Asia & Pacific
Headquarters
+852 2914 2501

Other regional offices
available on
www.evs.tv/contact



To learn more about EVS go to **www.evs.tv**