

CONTENST LIST 3922 496 30581 Service Manual Camera Head LDK 8000 Series

Tab	Part number	Drawing number	Description
1	8926 800 06001 8926 800 06101 8926 800 06x01	8926 800 09901 8927 800 09901	STND HDTV CAMHEAD WRLD HDTV CAMHEAD WIRING&BLOCK DIAGRAM LDK8000
2	3922 406 54321 3922 406 53071	3922 406 54321 3922 406 53071	MOTHERBOARD CAM HD MOTHERBOARD CAM HD
3	3922 407 54421 3922 407 49421 3922 407 54431 3922 407 49931 3922 407 54391 3922 407 49471 3922 407 54371 3922 407 49461	3922 407 49921 3922 407 49921 3922 407 49931 3922 407 49931 3922 407 49471 3922 407 49471 3922 407 49461 3922 407 49461	FRONT 8000 STANDARD version 2 FRONT 8000 STANDARD version 1 FRONT 8000 WORLDCAM version 2 FRONT 8000 WORLDCAM version 1 FRONT MODULE NEXT version 2 FRONT MODULE NEXT version 1 OPTICAL MODULE HDTV version 2 OPTICAL MODULE HDTV version 1
4	3922 406 53531	3922 406 53531	FRONT SWITCH PANEL
5	3922 407 54411 3922 407 54461 3922 407 49811	3922 407 49861 3922 407 49811 3922 407 49811	GNDLS HEAD HDTV NEXT CAMERA HEAD BASIC HDTV NEXT CAMERA HEAD BASIC 8000
6	3922 407 53021 3922 407 49391 3922 406 53101 3922 406 53031	3922 407 53021 3922 407 49391 3922 406 53101 3922 406 53031	COVER RIGHT ASSY LDK8000 version 2 COVER RIGHT ASSY version 1 CONNECTOR BOARD COVER RIGHT DVP BOARD HDTV
7	3922 407 49361 3922 406 53671	3922 407 49361 3922 406 53671	COVER LEFT ASSY LEFT SWITCH PANEL
8	3922 407 22224	3922 407 22224	SHOULDERPAD ASSY
9	3922 407 40211 3922 407 39501 3922 406 50301	3922 407 40211 3922 407 39501 3922 406 50301	HANDGRIP ASSY ZOOM CONTROL ASSY ZOOMGRIP SWITCH BOARD
10	3922 406 54371	3922 406 54371	SYNC. MON. DIG. BRD
11	3922 406 52971	3922 406 52971	DATA BOARD
12	3922 406 51161	3922 406 51161	FRONT DRIVER MULTIFORMAT BOARD
13	3922 407 27241	3922 407 27241	FRONT EXTENDER