

LDK4482/01

1	3922 496 48661	User's Guide
2	8926 448 29901 3922 407 23272 3922 407 23281	Large Lens Adaptor Mechanical Assy LLA Electronic Unit Wiring
3	3922 407 23281 3922 407 20559 3922 407 21793 3922 407 21811 3922 407 21772 3922 407 21823 3922 407 22793 3922 407 21781 3922 496 13321 3922 407 22381 3922 407 20461 3922 496 13331 3922 407 22391 3922 407 20471 3922 496 13341 3922 407 22401 3922 407 20481 3922 496 13351 3922 407 22411 3922 407 20491 3922 496 13421 3922 407 22421 3922 407 21581	Electronic Unit LLA Mech. Assy Electronic Unit LLA Cover Plate Assembly Bottom Assembly Front Panel Assembly Panel Left Assembly Panel Right Assembly Fixing Plate Assembly Triax Conn Version Fischer Triax Interconn. Cam Fischer Flying Lead Triax Fischer Triax Conn. Version ARD Triax Interconn. Cam ARD Flying Lead Triax ARD Triax Conn. Version LEMO Triax Interconn. Cam LEMO Flying Lead Triax LEMO Triax Conn. Version Trilock Triax Interconn. Cam Trilock Flying Lead Triax Trilock Triax Conn. Version BBC LEMO Triax Interconn. Cam BBC LEMO Flying Lead Triax BBC LEMO
4	3922 407 20502 3922 406 83701	Back Panel Assy Control Board LLA
5	3922 407 20431 3922 407 20442 3922 407 20452 3922 406 83791 3922 406 84461	Connector Panel Right Flying Lead Assy VF Cam Flying Lead Assy Lens Cam Power Switch Board Connector Filter Board
6	3922 407 20421 3922 407 20921 3922 406 45361 3922 406 81151 3922 406 83741	Connector Panel Left Loop Through Filetr Box Loop Through Filter Board Script Light Board Back Panel Int Brd
7	3922 406 83711	Interconnection Board LLA
8	3922 406 83761	Power Supply LLA
9	3922 406 84061	Power Extender LLA