

3922 496 48791 Service Manual Camera Head LDK 6000 Series

TAB	Part 12nc	Description
1	8926 600 00001	HDCAMERAHEAD LDK6000
	8926 600 06001	HDCAMERAHEAD LDK6000 MKII
	3922 407 32651	SET OF ADD. SUPPLIES
2	8926 600 00001	WIRING DIAGRAMS LDK6000
	8926 600 06101	WIRING DIAGRAMS LDK6000 MKII
	3922 406 89831	MOTHERBOARD LVDS CAM
	3922 406 88531	MOTHERBOARD CAM
3	3922 407 34791	FRONT MODULE HDTV 50HZ PI
	3922 407 32441	FRONT MODULE HDTV 60HZ PI
	3922 407 33731	FRONT MODULE HDTV 60HZ 1080I
	3922 407 33741	FRONT MODULE HDTV 60HZ 720P
	3922 407 38741	FRONTMODULE HD MULTIFORMAT
	3922 407 37501	FRONTMODULE HD MULTIFORMAT
4	3922 407 32451	OPTICAL MODULE
5	3922 407 32431	CAMERA HEAD BASIC
	3922 407 37511	CAMERA HEAD BASIC MKII
6	3922 406 89251	FRONT SWITCH PANEL
7	3922 407 37701	COVER RIGHT ASSY HD
	3922 407 33661	COVER RIGHT ASSY
	3922 406 84311	CONNECTOR BOARD COVER RIGHT
8	3922 407 31351	COVER LEFT ASSY
	3922 406 84801	SWITCH PANEL COVER LEFT
9	3922 407 22222	SHOLDERPAD ASSY
10	3922 407 33621	HANDGRIP ASSY
	3922 407 25341	HANDGRIP RUBBER ASSY
11	3922 406 89511	DVP BOARD
12	3922 406 50201	DVP with FC BOARD
13	3922 406 89861	SYNC MONITORING
14	3922 406 86791	DATA BOARD
15	3922 406 87851	FRONT DRIVER
16	3922 406 89951	FRONT DRIVER MULTI FORMAT
17	3922 406 50471	FRONT DRIVER MULTI FORMAT
18	3922 406 89141	POWER CONVERTOR
19	3922 406 50051	POWER CONVERTOR 3V3 1V8