

MANUAL SET 071810500

## Master Index

USER MANUAL (071052902)

INSTALLATION MANUAL (071052802)

SERVICE MANUAL (071053102)

CONFIGURATION MANUAL (071053302)

software release **8.0**

**071810600**

FIRST PRINTING: **JULY 2001**

**SERIES 7000**  
SIGNAL MANAGEMENT SYSTEM

# Contacting Grass Valley Group

 
| Region                          | Voice                                    | Fax              | Address                                                                    | Web Site                 |
|---------------------------------|------------------------------------------|------------------|----------------------------------------------------------------------------|--------------------------|
| North America                   | (800) 547-8949<br>530-478-4148           | (530) 478-3347   | Grass Valley Group<br>P.O. Box 599000<br>Nevada City, CA 95959-7900<br>USA | www.grassvalleygroup.com |
| Pacific Operations              | +852-2585-6688<br>Support: 852-2585-6579 | +852-2802-2996   |                                                                            |                          |
| U.K., Europe, Asia, Middle East | +44 1753 218 777                         | +44 1753 218 757 |                                                                            |                          |
| France                          | +33 1 45 29 73 00                        |                  |                                                                            |                          |
| Germany                         | +49 221 1791 234                         | +49 221 1791 235 |                                                                            |                          |

Copyright © Grass Valley Group. All rights reserved.

This document may not be copied, in whole or in part, or otherwise reproduced, except as specifically permitted under U.S. copyright law, without the prior written consent of Grass Valley Group, P.O. Box 599000, Nevada City, CA 95959-7900 USA. GRASS VALLEY GROUP is a registered trademark and Grass Valley is a trademark of Grass Valley Group. All registered trademarks and trademarks are property of their respective holders. Grass Valley Group products are covered by U.S. and foreign patents, issued and pending. Product options and specifications subject to change without notice. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Grass Valley Group. Grass Valley Group assumes no responsibility or liability for any errors or inaccuracies that may appear in this publication.

## Online User Documentation

Current versions of product catalogs, brochures, data sheets, ordering guides, planning guides, manuals, and release notes may be downloaded via the Product Documentation link on the Grass Valley Group home page:

A screenshot of a search bar interface. The search bar contains the text "Product Documentation" and has a dropdown arrow on the right side. To the right of the search bar is a "GO" button.

 
## FAQ Database

Many solutions to problems and troubleshooting efforts can be found by searching our Frequently Asked Questions (FAQ) database. To access:

1. Select the Service/Support link on the Grass Valley Group home page.
2. Select the Online Support & FAQ link on the Service/Support page.
3. Follow the directions provided to access the FAQ database and other online support services.

## Software Downloads

Software updates, drivers and patches may be downloaded via the Download link on the Grass Valley Group home page:

A screenshot of a search bar interface. The search bar contains the text "Download Software, Drivers & Patches" and has a dropdown arrow on the right side. To the right of the search bar is a "GO" button.

# Master Index

## Symbols

^Dest ^, Error Message Usr: A-1

^Salvo ^, Error Message Usr: A-3

## Numerics

128x128 Svc: 1-14, Svc: 1-17, Svc: 1-23, Svc: 1-25

Figure

Audio 128x128 Inputs and Outputs by Module Svc: 1-41

Backplane Busing & Module Placement Svc: 1-40

Expanded 128x128 Signal Flow Svc: 1-24

High Density 128x128 System Signal Flow Svc: 1-29, Svc: 1-31

High Density 128x128 System Signal Path Svc: 1-30, Svc: 1-32

High Density 128x128 System Svc: 1-29

128x128 Audio Matrix Svc: 1-36, Svc: 1-40

128x64 Svc: 1-40

Figure

Audio 128x64 Inputs and Outputs by Module Svc: 1-39

Backplane Busing & Module Placement Svc: 1-38

128x64 Audio Matrix Svc: 1-35, Svc: 1-38

128x64 Video Matrix Svc: 1-23, Svc: 1-31

16x64 Svc: 1-20

Small System Configuration (figure) Svc: 1-20

16x64 Video Matrix Svc: 1-20

20-TEN Router Interface Ins: B-26

32 Button-Per-Source

Control Panel Usr: 1-3

See P32

32 Channel In SDV

Module Svc: 2-17

32x32 AES/EBU Xpt

Module Svc: 2-21

32x32 Analog Audio Xpt

Module Svc: 2-21

32x32 Audio Matrix Svc: 1-36

32x32 Data Matrix

Module Svc: 2-22

32x64 Audio Svc: 1-36

32x64 Crosspoint SDV

Module Svc: 2-17

440 Router Interface Ins: B-16

48 Button-Per-Source

Control Panel Usr: 1-3

See P48

64x32 Audio Svc: 1-36

64x64 Audio Svc: 1-36

64x64 MCPU Functionality Svc: 1-3

## A

AC

circuit breakers Svc: 4-2

fuse Svc: 4-2, Svc: 4-28

fuse replacement (figure) Svc: 4-28

input connection Svc: 4-24

power connections Svc: 4-2

power cord Svc: 3-1

voltage Svc: 4-24

voltmeter Svc: 2-22

AC power Svc: 2-22, Svc: 4-24, Svc: 4-28

Acrobat Reader

checking version manually Ins: 6-32

installing manually Ins: 6-33

required for documentation Ins: 6-32

Action Windows Cfg: 1-6

Add/Remove Programs Ins: 6-11

AES

defined All: G-1

AES/EBU

defined All: G-1

Air Filter

Convection Cooling Unit Svc: 3-4

Expanded System Power Supply Svc: 3-5

Air flow Ins: 1-1, Ins: 2-3

Alarm

command to clear alarm relays Svc: 5-6  
 Commands/Queries Svc: 5-6  
 defined All: G-1  
 event Svc: 4-3  
 Event Log Svc: 5-29  
 Figure  
   Alarm connector Relay Pinout Svc: 4-27  
   Generic Alarm Installation Svc: 4-27  
   Jumper Selection of Active Alarm Relay Svc: 4-26  
 message Svc: 5-16  
 power Svc: 4-24  
 Power Supply Svc: 1-26, Svc: 1-32  
 remote Svc: 4-26  
 status Svc: 5-6  
 system Svc: 4-5  
 Alarm connector pinout Ins: 5-12  
 Alarm relays Ins: 5-11  
 Alarms Cfg: 2-50  
 Alien Matrices  
   defined All: G-1  
 Alien Matrix Ins: B-1  
   Protocols Cfg: 4-27  
   Redundancy Cfg: 4-25  
 Alien Node Controller Configuration Cfg: 4-30  
 All Level  
   P48 Usr: 1-10  
 All Level, Error Message Usr: A-1  
 All-Level Take Usr: 1-2  
   defined All: G-1  
   Illustration Usr: 1-2  
 Amezi  
   defined All: G-1  
 AMEZI (Amezi) Cfg: 4-31  
   Control Cfg: 2-8  
 Analog Audio Svc: 1-1  
   Crosspoint Module Svc: 1-33  
   Gain Adjust Svc: 2-21  
   Output Monitor Svc: 1-35  
 Analog Audio Matrix  
   Figure Svc: 1-33  
 Analog Video Svc: 1-13, Svc: 1-19  
 Analog Video Output Module  
   placement Svc: 3-2  
 ANC  
   defined All: G-1  
 ANCs  
   see Node Controllers  
   Active  
 ANSI  
   defined All: G-1  
 Anti-static precautions Svc: 3-1  
 App Init, Error Message Usr: A-1  
 Applying AC power Ins: 5-1  
 Architecture  
   Compact 64x64 System Svc: 1-21  
   Data Router Svc: 1-43  
   Expanded 128x128 System Svc: 1-23  
   Expanded 128x64 System Svc: 1-23, Svc: 1-31  
 Arguments, View, VSD Cfg: 6-6  
 Assign Colors, View, VSD Cfg: 6-1  
 Assignment  
   defined All: G-1  
 Assignments Cfg: 3-10  
   Configuring Event Log Svc: 5-30  
   Destination Svc: 5-7, Svc: 5-8, Svc: 5-9  
   Input Svc: 5-7  
   Loss of Svc: 1-6  
   Restore Cfg: 3-12  
   Room Cfg: 3-21, Svc: 5-8  
   Save Cfg: 3-12  
   Tally Svc: 5-7  
   Tieline Cfg: 3-11  
 Audio  
   128x128 Svc: 1-36  
   128x128 Analog Frame Ins: 7-27  
   128x64 Svc: 1-35, Svc: 1-38  
   128x64 Analog Frame Ins: 7-22  
   32x32 Svc: 1-33, Svc: 1-36  
   32x64 Svc: 1-36  
   64x32 Svc: 1-34, Svc: 1-36  
   64x64 Svc: 1-36  
   analog Ins: 1-8  
   Architecture  
     Board Level Svc: 1-33  
     System Level Svc: 1-36  
   Crosspoint gain adjustment Svc: 3-3  
   Crosspoint Module Svc: 1-33, Svc: 1-34, Svc: 1-35, Svc: 1-36, Svc: 1-38, Svc: 1-40  
   Analog Svc: 2-21  
   Requirements Table Svc: 1-42  
   digital Ins: 1-9  
   Dual 64x64 Analog Frame Ins: 7-19  
   Figure  
     32x64 Audio System Svc: 1-34

- 64x32 Audio System Svc: 1-34
- Analog Audio Signal Path Svc: 1-33
- Input Expansion
  - 64x32 Svc: 1-34
- Module Svc: 2-21
- Output Expansion Svc: 1-33
  - 32x64 Svc: 1-34
- Output Monitor Svc: 1-35
- Signal Path Svc: 1-33
- Audio connections
  - analog, 128x64 Ins: 7-24
  - analog, 64x64 Ins: 7-19
  - analog, expanded 128 Ins: 7-29
  - digital, 128x128 Ins: 7-41
  - digital, 128x64 Ins: 7-39
  - digital, dual 64 Ins: 7-37
- Audio Gain Adjustment Svc: 3-3
- Auto configuration Cfg: 2-29

## B

- Backplane
  - bus Ins: 3-12
  - defined All: G-1
  - interface Ins: 4-43
- Backplane Interface Mezzanine Svc: 2-7
- Battery
  - Backup Svc: 1-6, Svc: 4-24
  - Node Control back-up battery Svc: 3-6
  - Testing Svc: 3-6
- Battery backup, enable Ins: 5-2
- BNC
  - defined All: G-1
- Boot Device
  - System Diagnostic Command Svc: 5-2
- Booted (system diagnostic command) Svc: 5-2
- BPI
  - defined All: G-1
- BPS
  - defined All: G-1
- BPS32 panel configuration Cfg: 2-106
- Breakaway
  - defined All: G-2
- Breakaway Take Usr: 1-4, Usr: 1-12
  - Illustration Usr: 1-4
- Breakout Panels and Reverse Matrices Svc: 1-44
- BSY

- defined All: G-2
- Bus
  - defined All: G-2
- Bus Prot, Error Message Usr: A-1
- Bus termination Svc: 1-23
- Bus Vers, Error Message Usr: A-1

## C

- Cable
  - 20-TEN Router Interface Ins: 4-61
  - Alien Matrix Interface Ins: 4-59
  - DataTek Interface Ins: 4-62
  - DC power Ins: 3-13
  - digital audio Ins: 7-33
  - Horizon-GPI Ins: 4-59
  - Performer Interface Ins: 4-60, Ins: B-19
  - ProBel Interface Ins: 4-62
- Cable label
  - data router Ins: 7-50
  - digital audio Ins: 7-36
- Cabling
  - analog audio Ins: 7-18
  - audio input/output Ins: 7-17
  - compact video systems Ins: 7-3, Ins: 7-12
  - data router Ins: 7-50
    - large systems Ins: 7-53
  - digital audio Ins: 7-33
    - 128x128 Ins: 7-41
    - 128x64 Ins: 7-39
    - dual 32 Ins: 7-37
    - large systems Ins: 7-43
  - expanded systems Ins: 7-4
  - secondary systems Ins: 7-15
  - video input/output Ins: 7-1
- Calculator layout Usr: 1-4
- Can't Send Or Retrieve A Configuration Ins: 6-42
- Chk +12V, Error Message Usr: A-1
- Chop Usr: 1-16
  - defined All: G-2
  - Window Cfg: 3-20
- Chop Interval Ins: 6-3
- Chop To:, Error Message Usr: A-1
- ChopLock
  - defined Usr: B-1
- ChopLock, Error Message Usr: A-1

Chopping, Error Message Usr: A-1

CIF

- components Ins: 4-43
- connector array Ins: 4-44
- connector channel installation Ins: 4-49
- coprocessor Cfg: 2-8
- defined All: G-2
- expansion Ins: 3-12
- Module Svc: 2-4
- module Ins: 4-45, Cfg: 4-31

CIF Module Svc: 1-2, Svc: 1-4, Svc: 1-7, Svc: 1-8, Svc: 1-9

Circuit breakers Svc: 4-2

Client/Server

- Installation Ins: 8-7

CLN

- defined All: G-2
- Quick Take Usr: 1-13
- Quictake Usr: 1-15
- Take/Take All Usr: 1-13

clock setting Ins: 6-3

Coaxial Cable

- defined All: G-2

Cold Start

- defined All: G-2

Cold Start Memory Loss Cfg: 3-10

Color

- Code, View VSD Usr: 1-13
- Specifications, View VSD Cfg: 6-8
- Washout, View VSD Cfg: 6-9
- Wheel, View VSD Usr: 1-14

Commands/Queries Svc: 5-6

Communication Interface

- Module Svc: 2-4

Compact

- 16x64 System Svc: 1-20
- 64x64 System Architecture Svc: 1-21
- Power Supply Svc: 4-24, Svc: 4-28

Figure

- Core Unit and Board Svc: 4-24

System Connection and Setup Ins: 6-2

System MCPU Functionality Svc: 1-3

Compact system

- video Ins: 1-7

Component Video

- defined All: G-2

Composite Video

- defined All: G-2

Configuration Svc: 1-3, Svc: 1-4, Svc: 1-9, Svc: 1-19, Svc: 1-38, Svc: 1-46, Svc: 2-8, Svc: 2-9, Svc: 4-3, Svc: 4-4, Svc: 4-6, Svc: 5-6, Svc: 5-8, Svc: 5-9, Svc: 5-13, Svc: 5-14, Svc: 5-15, Svc: 5-17, Svc: 5-18, Svc: 5-20, Svc: 5-21, Svc: 5-22, Svc: 5-23, Svc: 5-26, Svc: 5-32

Action Windows Cfg: 1-6

alarms Cfg: 2-50

Alien Node Controller Cfg: 4-30

auto Cfg: 2-29

building new Cfg: 2-1

coprocessor Cfg: 2-11

data matrix Cfg: 2-34

Data Matrix Source and Destination

- Configuration Rules Svc: 1-46

deleting Cfg: 2-118

destination tally Cfg: 4-16

destinations Cfg: 2-43

direct tally Cfg: 4-11

Figure

- Example Configuration (64x96) Svc: 1-27
- Forward and Reverse Matrix Configuration Relationship Svc: 1-46
- MEC Configuration Check Flowchart Svc: 4-20
- Sample Configuration (96x96) Svc: 1-42
- Small System Configuration (16x32) Svc: 1-19
- Small System Configuration (16x64) Svc: 1-20

flow chart Cfg: 2-2

levels Cfg: 2-33

MCPU Flash Cfg: 3-4

new Cfg: 2-1

node controller Cfg: 2-11

overview process Cfg: 1-2

panel keypad Cfg: 2-79

panel suffix set Cfg: 2-77

room Cfg: 2-48

salvo Cfg: 2-71

setting Limits Cfg: 2-8

tally module Cfg: 4-8

terminology Cfg: 1-12

TieLine

- control Cfg: 2-64
- multiple Cfg: 2-69
- reserved Cfg: 2-61

Timed salvo Cfg: 2-73  
 Transfer Cfg: 3-1  
 Tutorial Cfg: 2-1  
 virtual matrix Cfg: 2-31  
 Connection Wizard Ins: 6-13  
 Connection, VSD Usr: 1-2  
 Connector array Svc: 1-9  
 Connector pinout  
   data router input/output Ins: 7-53  
   digital  
     audio Ins: 7-33  
     output monitor Ins: 7-35  
   external clock Ins: 3-18  
   Kaleidoscope/Kadenza Ins: 4-24  
   tally system relay Ins: 4-35  
 connectors Ins: 3-11  
 Container, unpacking Ins: 2-2  
 Control  
   Destination Configuration Rules Svc: 1-46  
   Emulated Node Control Svc: 1-18  
   Figure  
     Control Panel Bus Communications Check  
       Flowchart Svc: 4-18  
     Functional Areas of the Node Control Module Svc: 1-12, Svc: 1-16  
     Node Control Expansion frame Svc: 1-15  
     Series 7000 Control Structure Svc: 1-2  
   Frame Svc: 1-3, Svc: 1-4  
   Level Svc: 1-46  
   Master Control Switchers Svc: 1-3, Svc: 1-5  
   Matrix Element Control Svc: 1-13  
     MEC Control Bus Svc: 1-12, Svc: 1-16  
     MEC Module LED Definitions Svc: 4-21  
   Node Control Svc: 1-5  
     Battery back-up Svc: 3-6  
     Emulated Svc: 1-18  
     Expansion modules Svc: 1-14  
     Functionality Svc: 1-13  
     Module Svc: 1-12  
     Reference Inputs Svc: 4-11  
   Panel  
     Bus Svc: 1-3, Svc: 1-5, Svc: 1-7  
     Commands/Queries Svc: 5-13  
     Problems and Solutions Svc: 4-2  
   Port Svc: 1-46  
   Rear Monitor Control board Svc: 1-26  
   Serial Control Bus Svc: 1-7  
   Switching Problems Svc: 4-4  
   System Svc: 1-1  
     Commands/Queries Svc: 5-8  
 Control Device  
   defined All: G-2  
 Control Interconnect  
   audio 128x128 Ins: 3-2  
   audio dual 128x64 Ins: 3-6, Ins: 3-8  
   secondary system Ins: 3-9  
   video 128x128 Ins: 3-5, Ins: 3-7  
   video 64x64 Ins: 3-3  
 Control Panel  
   32 Button-Per-Source Usr: 1-3  
   48 Button-Per-Source Usr: 1-3  
   connecting CP bus Ins: 8-7  
   Eight Destination Paging Usr: 1-1  
   ground connections Ins: 8-6  
   identifying names Cfg: 1-14  
   Joystick override Ins: 8-4  
   mounting Ins: 8-1  
   Multibus 4 Usr: 1-2  
   Multibus 8 Usr: 1-2  
   operation check Ins: 8-8  
   Power up Ins: 8-8  
   Programmable X-Y Usr: 1-4  
   PXY Panel Set Usr: 1-4  
   salvo permission sets Cfg: 2-8  
   Server and Client Usr: 1-6  
   Simple Usr: 1-5  
   Single Destination Paging Usr: 1-5  
   Universal Usr: 1-6  
 Control Panel Acronyms  
   Table Usr: 1-2  
 Control Panel Bus  
   defined All: G-2  
 Control Panel Function/Mode Buttons  
   Table Usr: 1-2  
 Control Panels  
   Active Cfg: 3-8  
 Control System  
   Commands/Queries Svc: 5-8  
 Controller frame Ins: 1-10, Ins: 3-12  
 Controllers  
   defined All: G-2  
 Convection set Ins: 1-2, Ins: 2-4  
 Cooling Ins: 1-1, Ins: 2-3  
 Coprocessor Ins: B-2, Cfg: 2-11, Cfg: 4-21  
 COS

- defined All: G-2
- CPA# Error Message Usr: A-1
- CPO
  - defined All: G-2
- CPU\_BAD, Error Message Usr: A-1
- Create View File, View VSD Cfg: 6-5
- Create/Edit View, View VSD Cfg: 6-4
- Creating a configuration Cfg: 2-1
- Crosspoint
  - 16x16 Svc: 1-19
  - 16x32 Svc: 1-19
  - 32x64 Svc: 1-33
  - Analog Audio Svc: 1-33
  - Battery Backup Svc: 1-6
  - Commands/Queries Svc: 5-8, Svc: 5-30
  - defined All: G-3
  - Digital Audio Switching Performance Ins: A-7
  - Monitor Svc: 2-18, Svc: 2-19
  - Requirements Table Svc: 1-27, Svc: 1-42
  - Switching Latency Svc: 4-3
- Custom Feature Set 1
  - Enable flag explained Cfg: 2-6

## D

- DA
  - defined All: G-3
- Data Matrix Usr: 1-26
  - configuration Cfg: 2-34
  - connection characteristics Ins: 7-53
  - defined All: G-3
  - Exclusive Connections Usr: 1-26
  - Expansion Svc: 1-45
  - forward level Cfg: 2-37
  - Illustration of Data Matrix Control Usr: 1-26
  - Module Svc: 2-22
  - Protected Connections Usr: 1-27
  - Release Source Disconnects Usr: 1-27
  - reverse level Cfg: 2-37
  - Source and Destination Configuration Rules Svc: 1-46
- Data Router Svc: 1-43
  - 64x64 matrix Svc: 1-43
  - Figure
    - 32x32 Data Router Signal Flow Svc: 1-43
- DataProt
  - defined Usr: B-1

- DataTek
  - Interface Ins: B-34
- DC power Ins: 3-13
- Default
  - defined All: G-3
- default configuration file, saving Ins: 6-39
- Deleting Your Configuration Cfg: 2-118
- Dest Page
  - EDP Usr: 1-20
- Destination Cfg: 2-43
  - configuring Cfg: 2-43
  - defined All: G-3
  - exclusion set Cfg: 2-81
  - tally Ins: 4-26, Ins: 4-28, Cfg: 4-16
  - View VSD Usr: 1-5
- Destination assignments Svc: 5-7, Svc: 5-8, Svc: 5-9
- Destination configuration rules Svc: 1-46
- Destination Exclusion Set
  - defined All: G-3
- Destination Offsets Usr: 1-5
  - Illustration Usr: 1-5
- Destinations Usr: 1-7
- DestLock
  - defined Usr: B-1
- DestLock, Error Message Usr: A-1
- Device, View VSD Usr: 1-6
- DGND
  - defined All: G-3
- Diagnostic
  - power-up Ins: 5-10
  - Terminal Ins: B-2
- Diagnostic Interface Svc: 4-5, Svc: 5-1, Svc: 5-7, Svc: 5-14, Svc: 5-29
- Diagnostic Message
  - Example
    - Error Messages Svc: 5-18
    - Fatal Messages Svc: 5-24
    - Informational Messages Svc: 5-16
    - Other Messages Svc: 5-26
    - Severe Messages Svc: 5-22
    - Warning Messages Svc: 5-17
  - Examples Svc: 5-16
  - Logging Svc: 5-15
- Diagnostic Messages Svc: 5-14
- Diagnostic Terminal Ins: 6-1



Diagnostic Tips Svc: 4-1  
 Dial-up Properties Ins: 6-13  
 Differential Inputs Svc: 1-19  
 Digital  
   modules Ins: 1-9  
 Digital Audio connectors  
   coax type Ins: 7-33  
   input/output 50-pin Ins: 7-33  
 Digital Video Svc: 1-19  
   Specifications Ins: A-2, Ins: A-3  
 Digital Video Crosspoint  
   Module Svc: 2-18  
 Direct Tally Ins: 4-26, Svc: 5-7  
   configuration Cfg: 4-11  
 Disconnect Unavailable Levels  
   Enable flag explained Cfg: 2-6  
 Distribution Amplifier (DA) Ins: 1-13, Ins: 3-9  
 Distribution Amplifier(DA)  
   connectors Ins: 7-15  
 DNS Configuration Ins: 6-13  
 Documentation Installation Ins: 6-32, Ins: 6-33  
 Doors Ins: 1-1  
 DST  
   defined All: G-3  
 Dst>1024, Error Message Usr: A-1  
 DSVOM  
   defined All: G-3  
 Dual 64 Audio Svc: 1-36  
 Dual Sync Video Output Monitor  
   Module Svc: 2-17  
 Dumb Terminal  
   defined All: G-3  
 dummy connection Ins: 6-11

## E

EC I/F  
   defined All: G-3  
 Edit View Menu Cfg: 6-4  
 Edit/Create Vide, View VSD Cfg: 6-4  
 EDP  
   Breakaway Take Usr: 1-12  
   Flag Mode Usr: 1-23  
   Paging Usr: 1-17  
 EDP Dest Page Usr: 1-20

EDP Panel  
   defined All: G-3  
 EDP Salvo Page Usr: 1-21  
 EDP Src Page Usr: 1-19  
 EEPM\_BAD  
   Error Message Usr: A-1  
 Eight Destination Paging  
   Control Panel Usr: 1-1  
   See EDP  
 Eight-Character Displays Usr: 1-4  
 Electronic Documentation  
   installation Ins: 6-32, Ins: 6-33  
 EMI  
   defined All: G-3  
 Emulated Node Control Svc: 1-18  
 Enable  
   flags explained Cfg: 2-6  
 ENC  
   defined All: G-3  
 Encore Control  
   Enable flag explained Cfg: 2-6  
   MCPU FLASH memory Cfg: 3-3  
   recovery from Cfg: 2-8  
 EPROM  
   defined All: G-3  
 Equipment rack  
   depth Ins: 1-9  
   loading Ins: 2-3  
 ERR  
   defined All: G-3  
 Error Message  
   ^Dest ^ Usr: A-1  
   ^Salvo ^ Usr: A-3  
   All Level Usr: A-1  
   App Init Usr: A-1  
   Bus Prot Usr: A-1  
   Bus Vers Usr: A-1  
   Chk +12V Usr: A-1  
   Chop To: Usr: A-1  
   ChopLock Usr: A-1  
   Chopping Usr: A-1  
   CPA# Usr: A-1  
   CPU\_BAD Usr: A-1  
   DestLock Usr: A-1  
   Dst>1024 Usr: A-1  
   EEPM\_BAD Usr: A-1  
   Error Usr: A-1

Excluded Usr: A-2  
 FlashBAD Usr: A-2  
 Inv Lock Usr: A-2  
 LvlLock Usr: A-2  
 Lost Com Usr: A-2  
 LvlLock Usr: A-2  
 Max Group Usr: A-2  
 Min1Lvl Usr: A-2  
 Mon Ctrl Usr: A-2  
 No Comm. Usr: A-2  
 No Prog Usr: A-2, Usr: A-3  
 No Prot Usr: A-2  
 No XPT Usr: A-2  
 NoAssign Usr: A-2  
 NoConfig Usr: A-2  
 NoLevels Usr: A-2  
 Not Ctrl Usr: A-2  
 Not Used Usr: A-3  
 OldOSVer Usr: A-3  
 PanlLock Usr: A-3  
 Prog Bad Usr: A-3  
 ProtLock Usr: A-3  
 SalvExcl Usr: A-3  
 SalvLock Usr: A-3  
 Sel Lvl Usr: A-3  
 SelfProt Usr: A-4  
 Src Lock Usr: A-4  
 SW Reset Usr: A-4  
 TallyLvl Usr: A-4  
 TL Busy Usr: A-4  
 Too Many Usr: A-4  
 Updating Usr: A-4  
 WrongApp Usr: A-5  
 XRAM\_BAD Usr: A-5  
 Error Messages Svc: 5-18  
 Error, Error Message Usr: A-1  
 Ethernet Ins: 3-12, Svc: 1-4, Svc: 2-7, Svc: 4-6,  
     Svc: 5-2  
     defined All: G-3  
     Interface Mezzanine Svc: 2-7  
     Network Cfg: A-7  
 Ethernet connection Ins: 6-6  
 Ethernet Interface Mezzanine Svc: 2-7  
 Event alarm Svc: 4-3  
 Event Log Svc: 4-3  
     alarm Svc: 5-29  
     configuring Svc: 5-30  
     enabling or disabling Svc: 5-29  
     Matrix Error Messages (figure) Svc: 5-32  
     viewing Svc: 5-31  
 Example View Cfg: 6-12  
 Excluded, Error Message Usr: A-2  
 Exclusion Cfg: 2-81  
     defined All: G-3  
     source Cfg: 2-46  
 Exclusive Connections, Data Matrix Usr: 1-26  
 Exhaust Ins: 1-1  
 Exit, VSD Usr: 1-3  
 Exp Type# Cfg: 2-17, Cfg: 4-3  
 Expanded 128x128 System Svc: 1-23  
 Expanded 128x64 System Svc: 1-23, Svc: 1-31  
 Expanded System Power Supply filter Svc: 3-5  
 Expanded Systems Ins: 3-5, Ins: 3-7  
     Video connectors Ins: 7-4  
 Expansion  
     Data Matrix Svc: 1-45  
     Input  
         128x128 Video Svc: 1-23  
         64x32 Audio Svc: 1-34  
     Node Control Expansion frame (figure) Svc:  
         1-15  
     Node Control modules Svc: 1-14  
     Output  
         16x64 Video Svc: 1-20  
         32x64 Audio Svc: 1-34  
         Audio Svc: 1-33  
         Frames Svc: 1-26  
 Export Data, PRINTCFG Cfg: 5-7  
 Extender Module Svc: 3-3  
 External Interface Ins: 4-42  
     coprocessor Cfg: 4-21  
     mezzanine Ins: 3-11, Ins: 3-12  
     compact system Ins: 3-11  
 External Power Supply Svc: 1-26, Svc: 1-32

## F

factory default configuration file, saving Ins:  
     6-39  
 Fans Ins: 1-1, Svc: 3-4  
 Fatal Messages Svc: 5-24  
 Fault detection Ins: 5-11  
 FC  
     defined All: G-3

FC/VI Svc: 1-13, Svc: 1-14, Svc: 4-4  
 FCFS TieLines Cfg: 2-63  
 FET  
     defined All: G-3  
 FIFO buffers Ins: 6-17  
 Filter  
     Cleaning Svc: 3-4  
     Convection Cooling Unit Svc: 3-4  
     Expanded System Power Supply Svc: 3-5  
 Figure  
     Convection Set Filter Location Svc: 3-4  
     Power Supply Filter Location Svc: 3-5  
     Testing Svc: 3-4  
 First Come First Served  
     defined All: G-3  
 Flag  
     defined All: G-4  
 Flag Mode  
     EDP Usr: 1-23  
 Flags  
     enables Cfg: 2-6  
 FLASH memory  
     clearing for Encore Control Cfg: 3-3  
 Flash Memory  
     defined All: G-4  
 Flash ROM Svc: 1-3, Svc: 1-4, Svc: 4-6  
 FlashBAD, Error Message Usr: A-2  
 Flip-flopping  
     defined All: G-4  
 Flow chart  
     configuration Cfg: 2-2  
 Forward level, data matrix Cfg: 2-37  
 Frame  
     controller Ins: 1-10  
     DA power Ins: 3-14  
     digital audio Ins: 1-9  
     expanded systems Ins: 1-10  
     interconnect Ins: 3-1  
         128 video Ins: 3-5, Ins: 3-7  
         compact video/audio Ins: 3-3  
     node expansion Ins: 1-15  
     secondary switch power Ins: 3-14  
     secondary/DA power Ins: 1-15  
 FRU (Field Replaceable Unit) Svc: 3-3  
 Function Buttons Usr: 1-2  
 Functions, View VSD Cfg: 6-9

Fuse Svc: 4-2, Svc: 4-28

## G

Gain Adjust  
     Analog Audio Svc: 2-21  
 GBR  
     defined All: G-4  
 Global Serial Channel Expansion Ins: 4-42  
 Global Serial Channel Mezzanine Svc: 2-8  
 GPI  
     defined All: G-4  
 GPI/TCI Control Cfg: 2-24  
 Graphic User Interface (GUI) Cfg: 2-1  
 Grass Valley Replacement Parts Svc: 3-1  
 Ground lug Ins: 2-6  
 GSC  
     defined All: G-4  
 GUI Svc: 1-3, Svc: 1-4  
     Communication Settings Svc: 4-6  
     Configuration Svc: 4-6  
     control operation Cfg: 3-14  
     defined All: G-4  
     Ethernet Svc: 4-6  
     file topics Cfg: 1-9  
     hardware information Cfg: 2-1  
     Problems and Solutions Svc: 4-2  
 GUI Security Ins: 6-41

## H

Hardwired  
     defined All: G-4  
 HDTV  
     defined All: G-4  
 Heartbeat  
     defined All: G-4  
 Help Svc: 5-1  
 Help system Cfg: 1-11  
 Hide Data, View VSD Usr: 1-15  
 High Density 128x128 System Svc: 1-29  
 Hold Pst  
     defined Usr: B-1  
 HoldRemt  
     defined Usr: B-1  
 Horizon

defined All: G-4  
Horizon (HX) Interface  
  GPI Control Cfg: 2-14  
  GPI/TCI interface Ins: B-2, Ins: B-15  
  Node Controller  
    module installation Ins: 4-21  
  Node Controller I/F Ins: 4-16  
Horizon Node Controller  
  Module Svc: 2-14  
Horizon Node Controller Interface,  
  configuration Ins: 4-22  
Horizon/TCI Interface Ins: B-2  
HOSTS file Ins: 6-30  
HX  
  defined All: G-4  
Hx GPI Control Cfg: 2-14  
HX-GPI Ins: B-2

## I

I/O  
  defined All: G-4  
IBOP  
  audio  
    128x128 Ins: 7-41  
    128x64 Ins: 7-39  
    dual 32 Ins: 7-37  
  data  
    router Ins: 7-53  
    router (rear view) Ins: 7-54  
  defined All: G-4  
  digital audio Ins: 1-9, Ins: 7-35  
ID Button Usr: 1-6  
ID or IDENT  
  defined All: G-4  
ID/Tally Level Button Usr: 1-10  
Identification Routine Usr: 1-6  
Informational Messages Svc: 5-16  
Input Cfg: 2-17, Cfg: 4-3  
  defined All: G-5  
Input assignments Svc: 5-7  
Input characteristics  
  analog audio Ins: 7-17  
  video (analog & digital) Ins: 7-1  
Input Expansion  
  128x128 Video Svc: 1-23  
  64x32 Audio Svc: 1-34

Input Offset Usr: 1-3  
  defined All: G-5  
  Illustration Usr: 1-3  
Installing  
  electronic documentation Ins: 6-32, Ins: 6-33  
  Series 7000 Software Ins: 6-21  
Interconnect, Frame Ins: 3-1  
Interface Protocols Cfg: 4-27  
Inv Lock, Error Message Usr: A-2  
IP addresses Ins: 6-31

## J

J Number  
  defined All: G-5  
Joystick Override  
  P32 Usr: 1-25  
  P48 Usr: 1-25  
Joystick override Ins: 8-4  
Jumper  
  defined All: G-5

## K

Kadenza Svc: 1-12, Svc: 2-9  
  defined All: G-5  
Kaleidoscope  
  defined All: G-5  
  installing submodule Ins: 4-23  
  Router Svc: 5-7  
  router  
    configuration Ins: 4-25, Cfg: 4-7  
    definition Cfg: 4-7  
    parameters Cfg: 4-8  
    source selector Ins: 4-25  
Kaleidoscope and Kadenza submodule Svc: 2-9  
Kaleidoscope/Kadenza  
  connector pinout Ins: 4-24  
  Interface installation Ins: 4-23  
Kaleidoscope/Kadenza interface submodule  
  Svc: 1-12  
Keypad  
  calculator layout Cfg: 2-75  
  telephone layout Cfg: 2-75  
Keypads Usr: 1-4  
KISS  
  defined All: G-5

Krystal  
  defined All: G-5  
KScope  
  defined All: G-5  
K-scope submodule Svc: 2-9

## L

LED  
  defined All: G-5  
Level  
  configuration Cfg: 2-33  
  defined All: G-5  
  View VSD Usr: 1-8  
Level Invert  
  Level Usr: 1-9  
LEVEL/INV Button Usr: 1-9  
Levels Usr: 1-8  
LevlLock, Error Message Usr: A-2  
Limits  
  setting for configuration Cfg: 2-8  
  settings and memory constraints Cfg: 2-8  
Listing Names, ls command Cfg: 1-14  
Local  
  defined All: G-5  
Lost Com, Error Message Usr: A-2  
LvlInvLk  
  defined Usr: B-1  
LvlLock  
  defined Usr: B-1  
LvlLock, Error Message Usr: A-2

## M

Machine Assignment  
  Enable flag explained Cfg: 2-6  
Machine Status Display Ins: 4-38, Svc: 1-3, Svc:  
  1-5  
Maintenance  
  Menu Cfg: 3-24  
Master  
  defined All: G-5  
Matrices  
  defined All: G-5  
Matrix  
  defined All: G-5

Modules Svc: 2-16  
Matrix Element Control (MEC) Ins: 1-15, Ins:  
  3-1, Cfg: 2-11  
Matrix Element Control. See MEC  
Max Group, Error Message Usr: A-2  
MAX Series Frame Ins: 4-30  
MB4  
  defined All: G-5  
MB8  
  defined All: G-5  
MC  
  defined All: G-5  
MCO  
  defined All: G-6  
MCPU  
  Battery Backup Svc: 1-6  
  Configuration Svc: 4-6  
  defined All: G-6  
  Description Svc: 1-3  
  Figure  
    MCPU BPI Mezzanine Position Svc: 1-7  
    MCPU Functionality in Compact Systems  
      Svc: 1-4  
    MCPU Functionality in Expanded Systems  
      Svc: 1-6  
  Frame Alarms Svc: 4-5  
  Functionality  
    Compact System Svc: 1-3  
    Expanded System Svc: 1-4  
  Module Svc: 2-1  
  Regaining crosspoint status Svc: 1-7  
  Removal Svc: 1-6, Svc: 5-19  
  VI Reference Check Svc: 4-7  
MCPU FLASH memory  
  clearing for Encore Control Cfg: 3-3  
MCPU mezzanines Ins: 4-44  
MEC  
  Configuration Check Flowchart Svc: 4-20  
  Control Bus Svc: 1-13  
  defined All: G-6  
  Module Check Flowchart Svc: 4-19  
  Module LED Definitions Svc: 4-21  
MEC connectors Ins: 3-10  
MEDIC  
  defined All: G-6  
Memory constraints  
  impact of settings in Limits Cfg: 2-8

Messages  
   Error Svc: 5-18  
   Fatal Svc: 5-24  
   Informational Svc: 5-16  
   Other Svc: 5-26  
   Severe Svc: 5-22  
   Warning Svc: 5-17  
 Mezzanine  
   Backplane Interface Svc: 2-7  
   defined All: G-6  
   Ethernet Interface Svc: 2-7  
   Global Serial Channel Svc: 2-8  
   Serial Interface Svc: 2-8  
   UART Svc: 2-7  
 Mezzanine cards  
   backplane interface (BPI) Ins: 4-43  
   CIF Ins: 4-43  
   Ethernet Ins: 3-12  
   MCPU Ins: 4-44  
   UART Ins: 3-11  
 Mezzanine Names  
   identifying Cfg: 1-14  
   ls command Cfg: 1-14  
 Min1Levl, Error Message Usr: A-2  
 Mode Buttons Usr: 1-2  
 Module  
   32 Channel In SDV Svc: 2-17  
   32x32 AES/EBU Xpt Svc: 2-21  
   32x32 Analog Audio Xpt Svc: 2-21  
   32x32 Data Matrix Svc: 2-22  
   32x64 Crosspoint SDV Svc: 2-17  
   Audio Svc: 2-21  
   CIF Svc: 2-4  
   Communication Interface Svc: 2-4  
   Data Matrix Svc: 2-22  
   defined All: G-6  
   Digital Video Crosspoint Svc: 2-18  
   Dual Sync Video Output Monitor Svc: 2-17  
   Extender Svc: 3-3  
   Handling Svc: 3-1  
   Horizon Node Controller Module Svc: 2-14  
   Key Svc: 3-2  
   MCPU Svc: 2-1  
   Non-Reclocking Input Svc: 2-18  
   Non-Reclocking Output Svc: 2-18  
   Placement Svc: 3-2  
   Problem isolation Svc: 5-31  
   Reclocking Input Svc: 2-19  
   Reclocking Output Svc: 2-19  
   Requirements Table Svc: 1-27  
   Serial Digital 1x2 DA Svc: 2-21  
   Serial Digital 2x1 SS Svc: 2-21  
   Serial Digital Video Output Svc: 2-19  
   Slot Number Svc: 5-32  
   Subtitution Svc: 4-1  
   Type Svc: 5-32  
   WB Video Input Svc: 2-19  
   WB Video Output Svc: 2-20  
   Wideband Video Crosspoint Svc: 2-20  
 Modules  
   Matrix Svc: 2-16  
 Mon Ctrl, Error Message Usr: A-2  
 Mon.Ctrl  
   defined Usr: B-1  
 MR1 Ins: 3-16  
 MR2 Ins: 3-16  
 Multibus 4  
   Control Panel Usr: 1-2  
   See MB4  
 Multibus 8  
   Control Panel Usr: 1-2  
   See MB8  
 Multiformat  
   defined All: G-6  
 Multi-Level Switching Usr: 1-2  
 MultProt  
   defined Usr: B-1

## N

Name  
   defined All: G-6  
 Name limit for Sources and Destinations Cfg:  
   2-6  
 Name Selection Ins: 6-27  
 Names, View VSD Usr: 1-12  
 Naming Conventions Cfg: 1-13  
 Native Protocol  
   Connection Ins: 4-53  
   RS232 Ins: 4-53  
   RS422 Ins: 4-54  
 NB (Narrow Band)  
   defined All: G-6  
 NB (Node Bus)  
   defined All: G-6  
 NC

- defined All: G-7
- Networked 7000s
  - Enable flag explained Cfg: 2-6
- Networking Systems Cfg: A-1
- New configuration Cfg: 2-1
- No Comm, Error Message Usr: A-2
- No Progm, Error Message Usr: A-2, Usr: A-3
- No Prot, Error Message Usr: A-2
- No XPT, Error Message Usr: A-2
- NoAssign, Error Message Usr: A-2
- NoConfig, Error Message Usr: A-2
- Node Bus Svc: 1-3
- Node Control
  - Emulated Svc: 1-18
  - Expansion modules Svc: 1-14
  - Figure
    - Functional Areas of the Node Control Module Svc: 1-12, Svc: 1-16
    - Node Control Expansion frame Svc: 1-15
  - Functionality Svc: 1-13
  - Reference Inputs Svc: 4-11
- Node control
  - expansion Ins: 1-15, Ins: 3-9
  - reference signal Ins: 3-16
- Node Controller
  - Active Cfg: 3-6
  - communications Cfg: 2-11
  - configuration Cfg: 1-5
  - defined All: G-7, Cfg: 2-11
  - names Cfg: 1-13
  - Rename Cfg: 3-6
  - slice Cfg: 2-17, Cfg: 2-28, Cfg: 2-41, Cfg: 2-42, Cfg: 2-44, Cfg: 2-45, Cfg: 2-66, Cfg: 2-72, Cfg: 2-74, Cfg: 2-78, Cfg: 2-80, Cfg: 2-97, Cfg: 2-99, Cfg: 2-101, Cfg: 2-103, Cfg: 2-104, Cfg: 2-105, Cfg: 2-107, Cfg: 2-109, Cfg: 2-110, Cfg: 2-111, Cfg: 4-3
- NoLevels, Error Message Usr: A-2
- Non-Reclocking Input
  - Module Svc: 2-18
- Non-Reclocking Output
  - Module Svc: 2-18
- Not Ctrl, Error Message Usr: A-2
- Not Used, Error Message Usr: A-3
- NTSC
  - defined All: G-7

- sync signal Ins: 3-16
- Null Modem Ins: 6-16

## O

- OldOSVer, Error Message Usr: A-3
- Operating Flags
  - Panel template Cfg: 2-94
- Operation check
  - control panels Ins: 8-8
  - system Ins: 5-2
- Output
  - defined All: G-7
- Output characteristics
  - analog audio Ins: 7-17
  - video (analog & digital) Ins: 7-2
- Output Expansion
  - 16x64 Video Svc: 1-20
  - 32x64 Audio Svc: 1-34
  - Audio Svc: 1-33
  - Frames Svc: 1-26
- Output Monitor
  - Audio Svc: 1-35
  - digital audio Ins: 7-35
  - video Ins: 4-9
- Output Offsets Usr: 1-5
  - Illustration Usr: 1-5
- OutSize Cfg: 2-17, Cfg: 4-3

## P

- P32
  - defined All: G-7
  - Joystick Override Usr: 1-25
- P32 panel configuration Cfg: 2-106
- P48
  - All Level Usr: 1-10
  - defined All: G-7
  - Joystick Override Usr: 1-25
  - Tally Level Usr: 1-10
- Paging Usr: 1-17
  - EDP Usr: 1-17
  - SDP Usr: 1-17
- PAL
  - defined All: G-7
  - sync signal Ins: 3-16, Ins: 3-17
- Panel Keypad configuration Cfg: 2-79

Panel Prefixes  
     defined All: G-7  
 Panel Suffix Set  
     configuration Cfg: 2-77  
     defined All: G-7  
 Panel Template  
     defined All: G-7  
 Panel template  
     operating flags Cfg: 2-94  
 PanlLock  
     defined Usr: B-1  
 PanlLock, Error Message Usr: A-3  
 Password Selection Ins: 6-27  
 Password, Setting Usr: 1-24  
 Performer  
     cabling Ins: B-21  
     interface Ins: B-19  
 Permission Cfg: 2-82  
 Permission, Salvo Cfg: 2-97, Cfg: 2-98, Cfg: 2-100, Cfg: 2-102, Cfg: 2-108, Cfg: 2-114  
 Phonebook entry box Ins: 6-19  
 Physical Matrix Cfg: 2-14, Cfg: 2-26  
     defined All: G-7  
 PLD  
     defined All: G-7  
 Point-to-Point Ethernet Ins: 6-20  
 Port  
     defined All: G-7  
 Port router  
     configuration Cfg: 4-1  
     limitations Cfg: 4-1  
 Power  
     alarm Ins: 3-13  
     Applying AC Ins: 5-1  
     battery backup Ins: 5-2  
     branch circuit Ins: 5-1  
     distribution amplifiers Ins: 3-14  
     secondary switch Ins: 3-14  
 Power cord Svc: 3-1  
 Power Supply Svc: 1-6, Svc: 1-36, Svc: 1-38, Svc: 1-43, Svc: 2-9, Svc: 2-17, Svc: 2-18, Svc: 2-20, Svc: 3-1, Svc: 3-6, Svc: 4-2, Svc: 4-24, Svc: 4-28  
     alarm Svc: 1-26, Svc: 1-32  
     alarm detection Ins: 5-12  
     Compact Svc: 4-24, Svc: 4-28  
     compact system Ins: 5-2  
     Cooling Svc: 3-5  
     expanded system Ins: 5-3, Ins: 5-4  
     Expanded System filter Svc: 3-5  
     External Svc: 1-26, Svc: 1-32  
     Figure  
         Core Unit and Board Svc: 4-24  
         Filter Location Svc: 3-5  
         Testpoints and Indicators Svc: 4-25  
     frame, secondary/DA Ins: 1-15  
     Jumper Svc: 4-26  
     Secondary System Ins: 5-9  
 Power-up diagnostics Ins: 5-10  
 Preset  
     defined All: G-7  
 Print  
     Preview, PRINTCFG Cfg: 5-5  
 PRINTCFG  
     Export Data Cfg: 5-7  
     Read Cfg: 5-2  
     Report Format Cfg: 5-3  
 Pro-Bel System 3  
     Interface configuration Ins: B-40  
 ProBel System 3 Ins: B-1  
 Prog Bad, Error Message Usr: A-3  
 Programmable X-Y  
     Control Panel Usr: 1-4  
     See PXY  
 Protect Usr: 1-11  
     defined All: G-7  
     Window Cfg: 3-18  
 Protect override Cfg: 2-94  
 Protected Connections  
     Data Matrix Usr: 1-27  
     Identifying Usr: 1-27  
 Protects  
     Enable flag explained Cfg: 2-6  
 ProtLock  
     defined Usr: B-1  
 ProtLock, Error Message Usr: A-3  
 Protocol  
     Alien Matrices Cfg: 4-27  
 PROTOVRD  
     defined All: G-7  
 ProtOvrd  
     defined Usr: B-2  
 PWR



defined All: G-7

PXD

defined All: G-7

PXS

defined All: G-8

PXY

defined All: G-8

Level Invert Usr: 1-9

PXY Panel Set

Control Panel Usr: 1-4

PXYE

defined All: G-8

## Q

Quad 32x32 Audio Matrix Svc: 1-35

Quad32/Dual 64 Audio Matrix System Svc:  
1-36

Queries/Commands Svc: 5-6

Quick Take Usr: 1-14

CLN Usr: 1-13

SVR Usr: 1-13

QuicTake

defined Usr: B-2

Quictake

CLN Usr: 1-15

SCP Usr: 1-15

## R

Rack

defined All: G-8

Rack Unit

defined All: G-8

RAM Svc: 1-6

defined All: G-8

Range, View VSD Cfg: 6-6

RAS

defined All: G-8

RAS Setup dialog box Ins: 6-18

Read, PRINTCFG Cfg: 5-2

Reader See Acrobat Reader Ins: 6-32

Rear Connector Channel

defined All: G-8

Reboot

defined All: G-8

Reclocking Input

Module Svc: 2-19

Reclocking Output

Module Svc: 2-19

Redundant Power Supply

defined All: G-8

Reference

channel Cfg: 2-17, Cfg: 4-3

signal type (NTSC/PAL) Cfg: 2-16, Cfg: 4-3

Reference Inputs

Node Control Svc: 4-11

Relay, Tally Module Ins: 4-35

Release Source Disconnects, Data Matrix Usr:  
1-27

Remote

defined All: G-8

Remote Access Service Ins: 6-17

Remote Alarms Svc: 4-26

Report Format, PRINTCFG Cfg: 5-3

Reserved

defined All: G-8

Reserved TieLine Cfg: 2-62

Reset

defined All: G-8

Resource Group

defined All: G-8

Reverse level Cfg: 2-37

Reverse Matrices and Breakout Panels Svc: 1-44

RGB

defined All: G-8

ROM Svc: 1-3, Svc: 1-4, Svc: 4-6

defined All: G-8

Room

defined All: G-8

TieLines Cfg: 2-62

View Assignments Cfg: 3-21

Room assignments Svc: 5-8

Room Assignments, viewing Cfg: 3-21

Rooms, defined Cfg: 2-48

Rooms, View VSD Usr: 1-12

Router Communication Ins: 6-15

RP

defined All: G-9

RS-232

defined All: G-9

RS-232/RS-422 interface Ins: 6-2

RS-232C

defined All: G-9

RS-485

defined All: G-9

RU

defined All: G-9

## S

SalvExcl, Error Message Usr: A-3

SalvLock

defined Usr: B-2

SalvLock, Error Message Usr: A-3

Salvo Usr: 1-15

configuration Cfg: 2-71

defined All: G-9, Cfg: 2-71

New Online Cfg: 3-16

Permission Set Cfg: 2-8, Cfg: 2-97, Cfg: 2-98,  
Cfg: 2-100, Cfg: 2-102, Cfg: 2-108, Cfg:  
2-114

permission set Cfg: 2-82

Timed, defined Cfg: 2-73

Salvo Elements

adding Cfg: 2-72

defined All: G-9

increasing maximum Cfg: 2-6, Cfg: 2-7, Cfg:  
2-8, Cfg: 3-3

maximum Cfg: 2-8

Salvo Page

EDP Usr: 1-21

Salvo Permission Set

defined All: G-9

Saving Default Configuration Ins: 6-39

SCP

defined All: G-9

Quictake Usr: 1-15

Scroll, View VSD Cfg: 6-7

SDP

defined All: G-9

Paging Usr: 1-17

SDV

defined All: G-9

Secondary

switches Ins: 1-14

systems Ins: 1-13

Secondary Systems

Power Supply Ins: 5-9

Video connectors Ins: 7-15

Security, GUI Ins: 6-41

Sel Lvl's, Error Message Usr: A-3

Select Buttons Usr: 1-5

SelfProt

defined Usr: B-2

SelfProt, Error Message Usr: A-4

Serial Digital 1x2 DA

Module Svc: 2-21

Serial Digital 2x1 SS

Module Svc: 2-21

Serial Digital Video Output Monitor

Module Svc: 2-19

Serial Interface Mezzanine Svc: 2-8

SERIM Ins: B-28

defined All: G-9

Server and Client

Control Panel Usr: 1-6

See CLN

See SVR

set Cfg: 2-81, Cfg: 2-82

Severe Messages Svc: 5-22

SHIFT A Button Usr: 1-4

SHIFT B Button Usr: 1-4

SHIFT Button Usr: 1-4

SID

defined All: G-9

Signal Treatment window Cfg: 2-24

Simple

Control Panel Usr: 1-5

See SCP

Single Destination Paging

Control Panel Usr: 1-5

See SDP

Slave

defined All: G-9

Slice

defined All: G-9

explained Cfg: 2-12

Info Window Cfg: 2-17, Cfg: 2-28, Cfg: 2-41,  
Cfg: 2-42, Cfg: 2-44, Cfg: 2-45, Cfg:  
2-66, Cfg: 2-72, Cfg: 2-74, Cfg: 2-78,  
Cfg: 2-80, Cfg: 2-97, Cfg: 2-99, Cfg:  
2-101, Cfg: 2-103, Cfg: 2-104, Cfg:  
2-105, Cfg: 2-107, Cfg: 2-109, Cfg:

2-110, Cfg: 2-111, Cfg: 4-3  
 SLIP  
     defined All: G-9  
 SLIP connections Ins: 6-16  
 SMPTE  
     defined All: G-10  
 SMS  
     defined All: G-9  
 SMTimeIn  
     defined Usr: B-2  
 Software Version Usr: 1-6  
 Source  
     defined All: G-9  
     Exclusion Cfg: 2-46  
     Tally Ins: 4-28  
     View VSD Usr: 1-7  
 Source Exclusion  
     defined All: G-10  
 Source Exclusions  
     Enable flag explained Cfg: 2-6  
 Source Offset Usr: 1-3  
     Illustration Usr: 1-3  
 Source/Destination name limit Cfg: 2-6  
 Sources Usr: 1-7  
 Specification Examples, View VSD Cfg: 6-11  
 Specifications  
     Digital Video Ins: A-2, Ins: A-3  
     Performance and Environmental Ins: A-2  
 SRC  
     defined All: G-10  
 Src Lock, Error Message Usr: A-4  
 Src Page  
     EDP Usr: 1-19  
 Src/Dst name limit Cfg: 2-6  
 SrcLock  
     defined Usr: B-2  
 SS  
     defined All: G-10  
 Starting a configuration Cfg: 2-1  
 Start-up diagnostics Ins: 5-10  
 Static RAM Svc: 1-6  
 Status  
     defined All: G-10  
 Status Bar  
     Message  
         BKUP CONN Usr: 1-17  
         BKUP SYNC Usr: 1-17  
         LOADING Usr: 1-17  
         MSTR Usr: 1-17  
         OFFLINE Usr: 1-17  
         ONLINE Usr: 1-17  
         View VSD Usr: 1-17  
         VSD Usr: 1-2  
 Status Boxes, Color Code, View VSD Usr: 1-13  
 STB  
     defined All: G-10  
 Strap  
     defined All: G-10  
 STROPCHS  
     defined All: G-10  
 StrOpChs  
     defined Usr: B-2  
 Submodule  
     defined All: G-10  
     Kaleidoscope/Kadenza interface Svc: 1-12,  
         Svc: 2-9  
 Support brackets Ins: 2-5  
 SVO  
     defined All: G-10  
 SVR  
     defined All: G-10  
     Quick Take Usr: 1-13  
     Take/Take All Usr: 1-13  
 SW Reset, Error Message Usr: A-4  
 Switching Latency, Problems Svc: 4-3, Svc: 4-4  
 Sync options Cfg: 2-5  
 Sync pulse Ins: 3-15  
 Synchronization  
     external clock pulse Ins: 3-18  
     video reference Ins: 3-15  
 System Controller  
     defined All: G-10  
 System Diagnostic Interface Ins: 3-12  
  
**T**  
 Table  
     Control Panel Acronyms Usr: 1-2  
     Control Panel Function/Mode Buttons Usr:  
         1-2  
     Diagnostic Terminal Commands Svc: 5-13  
     Event Logging Svc: 5-30  
 Table, Color Value VSD Cfg: 6-9

Take  
   All-Level Usr: 1-2  
   All-Level Illustration Usr: 1-2  
   All-Level, defined All: G-1  
   Breakaway Usr: 1-4  
   Breakaway Illustration Usr: 1-4  
   defined All: G-10  
   Window Cfg: 3-15  
 TAKE ALL Button Usr: 1-13  
 Take Salvo  
   Window Cfg: 3-16  
 Take/Take All  
   CLN Usr: 1-13  
   SVR Usr: 1-13  
 Tally  
   defined All: G-10  
 Tally assignments Svc: 5-7  
 Tally Level Usr: 1-8, Usr: 1-9  
   P48 Usr: 1-10  
 Tally Level, Active  
   defined All: G-10  
 Tally Level, Default  
   defined All: G-10  
 Tally Module Cfg: 4-8  
   defined All: G-10  
   direct tally Cfg: 4-11  
   ID Ins: 4-31  
   ID, clearing Ins: 4-34  
   opto-coupler connector Ins: 4-36  
   rear connector Ins: 4-34  
   relay  
     connector Ins: 4-35  
     specification table Ins: 4-35  
 Tally System  
   conditions Ins: 4-27  
   configuration Ins: 4-38  
   destination Ins: 4-28  
   direct Ins: 4-26  
   installation Ins: 4-29  
   module Ins: 4-29  
   opto-isolators Ins: 4-34  
   relays Ins: 4-34  
   source Ins: 4-26, Ins: 4-28  
   specifications Ins: 4-30  
   tally bus Ins: 4-37  
 TallyLvl, Error Message Usr: A-4  
 TCI  
   defined All: G-11  
 TCP/IP Protocol Ins: 6-12  
 Telephone Layout Usr: 1-4  
 Telnet Communication Ins: 6-15  
 terminal emulation software Ins: 6-1  
 Terminate, Termination  
   defined All: G-11  
 Termination Ins: A-7, Svc: 1-23, Svc: 2-21  
 Third-Party Alien Matrix, Enabling Ins: 6-36  
 Tie Wire  
   defined All: G-11  
 TieLine Cfg: 2-53  
   Control Cfg: 2-64  
   creating multiple Cfg: 2-69  
   defined All: G-11  
   Reservation Cfg: 2-62  
   reserved Cfg: 2-61  
 Tieline  
   Config, View VSD Usr: 1-11  
   Level  
     View VSD Usr: 1-10  
   View Usage Cfg: 3-22  
   View VSD Usr: 1-9  
 TieLine Assignment  
   Enable flag explained Cfg: 2-6  
 TieLine Sharing  
   Enable flag explained Cfg: 2-6  
 TieLine Type  
   defined All: G-11  
 TieLines  
   FCFS Cfg: 2-63  
 Time Code  
   defined All: G-11  
 Timed Salvo  
   Configuration Cfg: 2-8  
   configuration Cfg: 2-73  
 Timing Ins: 3-16  
 Timing Scatter  
   defined All: G-11  
 Title Bar Indicator  
   DR Cfg: 3-5  
   FL Cfg: 3-5  
 TL Busy, Error Message Usr: A-4  
 TLYLVL  
   defined All: G-11  
 TM  
   defined All: G-11

Toggle  
    defined All: G-11  
Too Many, Error Message Usr: A-4  
Toolbar Icons, View VSD Usr: 1-16  
Twisted Pair  
    defined All: G-11

## U

UART  
    defined All: G-11  
UART Mezzanine Svc: 2-7  
UCP  
    defined All: G-11  
UMD  
    defined All: G-11  
Under Monitor Display Svc: 1-3, Svc: 1-5  
    machine status Ins: 4-38  
    opto-isolator Ins: 4-40  
    relay outputs Ins: 4-41  
    tally Ins: 4-40  
    tally indicators Ins: 4-39  
Under Monitor Displays Usr: 1-7  
    See UMD  
Universal  
    Control Panel Usr: 1-6  
    See UCP  
UnProtect  
    Window Cfg: 3-19  
Updating, Error Message Usr: A-4

## V

Ventilation Ins: 1-1  
Verifying Configuration Files Ins: 6-42  
VI  
    defined All: G-11  
VI Reference Check Svc: 4-7  
Video  
    Compact 16x64 System Svc: 1-20  
    Compact 64x64 System Architecture Svc: 1-21  
    Digital Specifications Ins: A-2, Ins: A-3  
    Expanded 128x128 System Svc: 1-23  
    Expanded 128x64 System Svc: 1-23, Svc: 1-31  
    Figure  
        Compact 64x64 System Signal Flow Svc:  
            1-21

    Compact 64x64 System Signal Path Svc: 1-22  
    Expanded 128x128 Signal Flow Svc: 1-24  
    Expanded 128x128 Signal Path Svc: 1-25  
    High Density 128x128 System Signal Flow  
        Svc: 1-29, Svc: 1-31  
    High Density 128x128 System Signal Path  
        Svc: 1-30, Svc: 1-32  
    High Density 128x128 System Svc: 1-29  
    Input Expansion  
        128x128 Svc: 1-23  
    Output Expansion  
        16x64 Svc: 1-20  
Video connectors  
    compact systems Ins: 7-3, Ins: 7-12  
    distribution amplifiers Ins: 7-15  
    expanded systems Ins: 7-4  
    secondary systems Ins: 7-15  
Video Ref Ins: 3-16  
Video Ref 1 Cfg: 2-17  
Video Ref 2 Cfg: 2-17  
Video secondary systems Ins: 1-13  
View  
    Room Assignments Cfg: 3-21  
    Tieline Usage Cfg: 3-22  
VSD  
    Color Code Usr: 1-13  
    Color Specifications Cfg: 6-8  
    Color Washout Cfg: 6-9  
    Color Wheel Usr: 1-14  
    Create View File Cfg: 6-5  
    Create/Edit View Cfg: 6-4  
    Destination Usr: 1-5  
    Device Usr: 1-6  
    Edit View Menu Cfg: 6-4  
    Edit/Create View Cfg: 6-4  
    Example View Cfg: 6-12  
    Hide Data Usr: 1-15  
    Level Usr: 1-8  
    Names Usr: 1-12  
    Range Cfg: 6-6  
    Rooms Usr: 1-12  
    Scroll Cfg: 6-7  
    Selection Usr: 1-4  
    Source Usr: 1-7  
    Specification Examples Cfg: 6-11  
    Status Bar Usr: 1-17  
    Status Boxes,Color Code Usr: 1-13  
    Tieline Usr: 1-9  
    Tieline Config Usr: 1-11

- Tieline Level Usr: 1-10
- Toolbar Icons Usr: 1-16
- VSD Functions Cfg: 6-9
- VSD, Arguments Cfg: 6-6
- VSD, Assign Colors Cfg: 6-1
- View Room Assignments Cfg: 3-21
- Virtual Matrix Cfg: 2-31
  - defined All: G-11
- VISS
  - defined All: G-11
- Visual checks, Fault Detection Ins: 5-12
- VITC
  - defined All: G-12
- Voltmeter Svc: 2-22
- VOM
  - defined All: G-12
- VSD
  - Connection Usr: 1-2
  - defined All: G-12
  - Exit Usr: 1-3
  - Status Bar Usr: 1-2
  - Table, Color Value Cfg: 6-9
  - View
    - Color Code Usr: 1-13
    - Color Specifications Cfg: 6-8
    - Color Washout Cfg: 6-9
    - Color Wheel Usr: 1-14
    - Create View File Cfg: 6-5
    - Create/Edit View Cfg: 6-4
    - Destination Usr: 1-5
    - Device Usr: 1-6
    - Edit View Menu Cfg: 6-4
    - Edit/Create View Cfg: 6-4
    - Example View Cfg: 6-12
    - Functions Cfg: 6-9
    - Hide Data Usr: 1-15
    - Level Usr: 1-8
    - Names Usr: 1-12
    - Range Cfg: 6-6
    - Rooms Usr: 1-12
    - Scroll Cfg: 6-7
    - Selection Usr: 1-4
    - Source Usr: 1-7
    - Specification Examples Cfg: 6-11
    - Status Bar Usr: 1-17
    - Status Boxes, Color Code Usr: 1-13
    - Tieline Usr: 1-9
    - Tieline Config Usr: 1-11

- Tieline Level Usr: 1-10
- Toolbar Icons Usr: 1-16
- View, Arguments Cfg: 6-6
- View, Assign Colors Cfg: 6-1
- VSD.INI Cfg: 6-4
  - Default File Cfg: 6-1
- VSD icon Usr: 1-1
- VSD.INI
  - Default File VSD Cfg: 6-1
  - VSD Cfg: 6-4
- VT100
  - defined All: G-12
- VT-100 terminal Ins: 6-1

## W

- Warm Start
  - defined All: G-12
- Warning Messages Svc: 5-17
- WB Video Input
  - Module Svc: 2-19
- WB Video Output
  - Module Svc: 2-20
- WB Video Output Monitor
  - Module Svc: 2-20
- Welcome Notes Ins: 6-24
- Wideband Video Crosspoint
  - Module Svc: 2-20
- Windows Setup Ins: 6-11
- WO
  - defined All: G-12
- WO (Which Outputs) Cfg: 2-18, Cfg: 4-3
- WrongApp, Error Message Usr: A-5

## X

- XPT
  - defined All: G-12
- XRAM\_BAD, Error Message Usr: A-5

## Y

- YUV
  - defined All: G-12



Grass Valley Group Headquarters  
P.O. Box 599000  
Nevada City, CA 95959-7900  
USA

[www.grassvalleygroup.com](http://www.grassvalleygroup.com)

