 


VM/SI 3000 System Controllers

See page 1–22 for equipment part numbers

Jupiter LE Release 7.2
JupiterPlus Release 7.2



Installation and Operating Manual

Manual part no. 04–045707–002 Rev. AY
August 13, 2003

the most watched worldwide

Headquarters	
Thomson Broadcast Systems 17 rue du Petit Albi – BP 8244 95801 Cergy Pontoise Cedex FRANCE	Thomson Broadcast and Media Solutions, Inc. P.O. Box 599000 Nevada City, CA 95959–7900 USA
Copyright 2003 Thomson Broadcast and Media Solutions, Inc. All rights reserved. AccuSwitch, Broadlinx, Concerto, Dune, Jupiter, Mars, Saturn, Trinx, Triton, Venus, GRASS VALLEY, GVG, E-MEM, HORIZON, 20–TEN, TEN–20, and STREAMLINE are trademarks of Thomson. NVISION is a trademark of NVISION Inc. MICROSOFT, MS–DOS, PowerPoint, and WINDOWS are trademarks of Microsoft, Inc. Intel and Pentium are trademarks of Intel Corp. Specifications subject to change without notice. Printed in USA. For customer service, please call (800) 547–8949. For comments or questions concerning this manual, please contact: Technical Publications Department, P.O. Box 30816, Salt Lake City, Utah 84130 USA. Phone: (801) 972–8000. Fax: (801) 977–1602. Email: SLCTechpubs@THmulti.com	

Contents

= New or revised material

Regulatory Compliance Notices	xxvi
Safety Notices	xxvii
Warranty Statement	xxviii
Parts and Service	xxviii
Related Documentation	xxix
Section 1 – Introduction	1–3
System Controllers	1–3
VM 3000 System Controller	1–3
VM 3000 VGA Status Display	1–3
SI 3000 System Controller	1–4
CM 4000 System Controller	1–4
Control panels	1–4
Machine Control Panels	1–4
Switcher Control Panels	1–5
ESbus Control Panels	1–6
Software Control Panel Suite (GUI Control Panel)	1–6
Tally	1–6
Status Displays	1–6
File Server (Configuration PC)	1–6
System Logger	1–6
Jupiter Configurator (Table Editor)	1–7
Control Functions	1–7
Machine Control	1–7
Distribution Switcher Control	1–7
Pathfinding Option	1–7
Multi-Stage Switching Option	1–7
“Remote” (Serial Control) Router Interface Option	1–7

Integration with Master Control and Automation Systems	1-8
External Control Protocols	1-8
Thomson Party Line Control Option	1-8
Specifications	1-9
Electrical	1-9
VM 3000 Control Processor	1-9
SI 3000 Control Processor	1-11
VTR, Control Panel, General Purpose Interface Buses	1-11
Distribution Switcher Control Buses	1-11
Thomson Party Line Bus	1-12
MI 3040 General Purpose / Tally Interface	1-12
Control Panels	1-13
SD 3x Status Displays	1-14
RP 1/2/3 UMD Monitor Displays	1-14
10 Base 2 Network and File server	1-14
PC 3000 Specifications (Minimum)	1-15
Equipment Dimensions	1-15
VM/SI 3000 Control ProcessorS	1-15
CB 3000 Control Buffer	1-15
Control Panels	1-15
MI 3040 General Purpose / Tally Interface	1-16
Status Displays	1-16
PC 3000 File Server	1-16
Control Panels for Custom Mounting	1-16
System Limitations	1-16
Maximum Number of Logical Levels	1-16
CP 38xx Control Panel	1-18
VM/SI 3000 Serial Bus Loading	1-18
Base Load Factors	1-18
Fixed Load Factors	1-19
Calculating Loading	1-19
Example	1-20
Determine the Base Multiplier:	1-20
Additional MI 3040 Limitations	1-21
Ordering information	1-22
System Hardware Options	1-22
General Purpose Systems Interfaces	1-23
LAN and Control Cables	1-23
Additional Hardware Part Numbers	1-24
Control System Software Options	1-26
AccuSwitch Frame—Accurate Automation Solution	1-26
Software Packages – Key Features	1-27
Software Control Panel Suite Packages	1-31

Section 2 – Hardware Installation 2-1

Unpacking and Inspection	2-1
--------------------------------	-----

110/230 VAC Selection	2-1
CP 3020 Control Panels	2-1
CP 300 Series Control Panels	2-1
File Server	2-1
VM 3000 Switch Settings	2-2
Rack Mounting	2-2
VM 3000 Connection to Distribution Switchers	2-3
Thomson Crosspoint Bus Routers	2-3
Installing Redundant VM 3000 Control Processor	2-4
Crosspoint Bus Router with CB 3000 Control Buffer	2-5
Crosspoint Bus Routers without CB 3000 Control Buffer	2-6
VM 3000 Redundancy Kit Cables	2-7
CC 2010 Matrix (Crosspoint Bus) Cable	2-9
CB 3000 Control Buffer	2-11
VDE EMI/RFI Modifications to Matrix Cables	2-11
Connection to Serial-Control Routers	2-12
Triton Systems	2-14
Software Configuration	2-15
SMS 7000 Connections	2-16
Software Configuration	2-16
Encore Connections	2-18
Software Configuration	2-18
TEN-20, 20-TEN, Serial Interface Connections	2-20
Horizon Connections	2-21
Alpha Image A264S Distribution Switcher	2-22
Datatek D-2000/2166 Connections	2-23
NVISION Distribution Switcher	2-24
PRO-BEL Distribution Switcher	2-24
Utah Scientific Party Line Connection Using UDI-1B	2-25
Utah Scientific AVS-1B with PL-320	2-27
VISTEK Array Switcher	2-28
Nexus Audio Routing Systems	2-30
Logical Level Mapping	2-31
Data Matrix Switching	2-32
Hardware Connections	2-32
Software Configuration	2-32
Connection to Multiple Thomson Crosspoint Bus Distribution Switchers	2-33
Connection Using a Single VM 3000	2-33
Dedicated VM 3000 Per Switcher	2-34
Connection to Multiple Distribution Switchers with Path Finding	2-35
Sequential Path Finding (Path Finding Using Sequential Wiring)	2-35
Non-sequential Path Finding (Path Finding Using Non-sequential Wiring)	2-35
Installing PC	2-38
File Server PC (LAN) System	2-38
User Defined Addresses	2-39
Printer	2-39

Software Installation	2-40
Installing “Remote” PC on LAN	2-40
Installing 10Base2 LAN Cables	2-41
Installing Control Panels	2-45
Connections to VM/SI 3000	2-45
Switcher Control Panels	2-46
CP 300 Series	2-46
CP 300 24 X 1 Single Bus Control Panel	2-46
CP 310 24 X 8 Eight Bus Control Panel	2-47
CP 320 Push Button Control Panel	2-48
CP 328 Push Button Control Panel	2-48
CP 330 Control Panel	2-49
CP 330/6 48 x 6 Six Bus Control Panel	2-49
CP 3000 Switcher Control Panel and CP 3010 Expansion Panel	2-50
CP 3020 Push Button Control Panel	2-51
CP 3021 Push Button Expansion Panel	2-51
CP 3800 Eight Character Control Panel	2-52
CP 3808 Control Panel	2-53
Hardware installation	2-53
Software configuration	2-53
Operation	2-53
CP 3824 Control Panel	2-54
Hardware installation	2-54
Software configuration	2-54
Operation	2-54
CP 3830 Control Panel	2-55
Hardware installation	2-55
Software configuration	2-55
Operation	2-55
CP 3830P (CP 3830 with automatic preview)	2-56
CP 3809 Expansion Panel	2-56
Hardware installation	2-56
Software configuration	2-56
Operation	2-57
CP 3832 Control Panel	2-58
Hardware Installation	2-59
Software Configuration	2-59
CP 3864 Control Panel	2-60
Hardware Installation	2-61
Software Configuration	2-61
Source/Destination Expansion	2-62
CP 3810 Panel	2-63
Hardware Installation	2-63
Software Configuration	2-63
Operation	2-64
Installing Machine Control Panels	2-65

MC 3000 Machine Control Panel and CP 3010 Expansion Panel	2-65
MC 3010 Machine Control Panel	2-66
MC 3020L Linkage Panel	2-67
MC 3020D Delegate Panel	2-69
Panel-per-machine arrangement	2-69
MC 3020D Central Control Arrangement	2-71
Preparing and Installing Button Labels	2-72
Replacing Button Bulbs	2-72
CP 300 Series Control Panels	2-72
CP 3800 Series Control Panels	2-73
Testing Bulbs	2-73
CP/MC/VC 3020	2-73
MC 3010	2-73
CP 300 / 3800 Series Panels	2-73
ESbus Control Panels	2-74
Connection to Thomson DD Series (“Diamond”)	2-75
Connection to External Switcher Control Devices	2-77
Thomson Broadcast Automation Systems	2-77
Other Control Devices Using “ESswitch” Proposed ESbus Routing Switcher Dialect	2-79
Using Thomson ASCII Computer Interface Protocol	2-79
Model 200 production switcher with E-MEM Effects Memory	2-81
Software Configuration	2-81
Connection to VTRs and Other Machines	2-82
Interface Selection Guide	2-82
Connection to Late-model Serial and ESbus VTRs	2-83
Sony Installation Notes	2-84
Ampex Installation Notes	2-84
ESbus Installation Notes	2-85
Other VTRs	2-85
Installing Redundant SI 3000 Control System	2-85
SI 3000 Redundancy Kit Cables	2-87
TCS 1 Interfaces and Control Panels	2-88
Machine Interfaces	2-88
Control Panels	2-88
VM/SI 3000 9-pin to TCS 1 37-pin Cable	2-91
VM/SI 3000 9-pin to BBC 2300 9-pin Cable	2-92
Connection to Parallel-Control Machines Using MI 3040	2-93
Connection to Non-jupiter Machine Control Panel or Computer	2-97
MI 3040 (“MC 3040”) Installation	2-97
Remote Control via Modem	2-101
Jupiter Configuration	2-101
Installing VM 3000 VGA Status Display	2-102
Serial Data Cables	2-102
VDE EMI/RFI Modifications to Serial Data Cables	2-103
Sync Reference Cables	2-103

Time Code Connections	2-103
Connection to Saturn Master Control Switcher	2-104
MI 3040 Tally Installation	2-107
Tally Systems	2-107
MI 3040 Hardware Overview	2-108
Relay Outputs	2-108
Status Inputs (Opto-isolators)	2-108
MPK Bus Connections	2-108
Current Sources	2-108
Example Of Saturn Tally System	2-109
Examples Of Jupiter Tally systems	2-110
Connection to Systems with Saturn / MCS 2000 Master Control Switcher	2-110
Connection to Systems with Non-Saturn, Non-MCS Master Control Switcher .	2-110
Software Configuration	2-110
MI/MC 3040 Hardware Overview	2-117
Optoelectronic Relays	2-117
Relay Control	2-117
Optical Couplers	2-117
Utility Connections	2-118
Under Monitor Displays	2-121
SD 3x Power Supply Requirements	2-122
Connection to Systems with Jupiter-Controlled Router Only	2-123
Connection to Systems with Saturn/MCS Master Control Switcher	2-123
Connection to Systems With Non-Saturn/MCS Master Control or with Production Switcher	2-124
Software Configuration	2-125
Section 3 – Software Installation	3-1
Section 4 – Jupiter Network Suite Control Console	4-1
Installation	4-1
Launching the Control Console	4-1
JNS Applications Group	4-3
JNS Tools Group	4-3
JNS Utilities Group	4-4
Section 5 – Configurator	5-1
Starting the Configurator	5-1
Closing the Configurator	5-2
Configurator Editing Guidelines	5-3
Automatic Table Entry	5-3
Entry/edit Within a Jupiter Table	5-3
Reordering Jupiter Tables	5-4
Find / Fill / Increment	5-5

Copying and Pasting a Block	5-5
Keyboard Shortcuts	5-6
Copy and Paste Rows Between the Windows Clipboard and Jupiter	5-6
Jupiter Naming Rules	5-7
Configuration Set Management	5-8
Modifying and Downloading a System Configuration Set	5-8
Copying a Configuration Set for Editing	5-10
Making the Desired Modifications to the Set	5-11
Using the “Numeric” Sets for Quick Switcher Checkout	5-11
Validating, Compiling, and Activating (Downloading) a Configuration Set	5-13
Troubleshooting	5-15
Error Conditions	5-15
Program Crash Recovery	5-15
Deleting Jupiter Software	5-15
Re-installing Jupiter Software	5-15
Zipping a Configuration Set	5-15
Zipping a Configuration Set with Diagnostic Information (“support Package”)	5-16
Printing	5-16
On-line Help	5-16
Inadvertent Loss of Power	5-16
Disconnecting File Server from LAN	5-16
Passwords	5-17
Changing Passwords	5-20
Setting Password Levels for Control Panels	5-21
Setting Password Levels for Switcher Outputs	5-21
Force Unprotect/Unlock	5-21
Network Description	5-22
Automatic Table Entry	5-23
Entering Descriptions of Controller Boards	5-23
Serial Protocol	5-25
Entering Protocol for Controller Board Ports	5-26
Saturn Video Processor – Entry for MPK Port	5-30
Switcher Description	5-31
Entering Switcher Levels Descriptions	5-32
Point-to-Point Data Switching Options	5-41
Data switching – off time between switches	5-43
Switcher Input	5-44
Split Switching	5-46
Entering or Editing Input Names and Numbers	5-47
Data Switching Applications	5-48
Controller / Tributary Reassignment	5-49
CP Input and Output Sets and Control Panel Operation	5-50
Switcher Output	5-51
Entering or Editing Output Names and Numbers	5-52
Setting Password Levels for Switcher Outputs	5-53
CP Level Set	5-55

A Note Concerning Level Numbering and External Control Computers Using ASCII Protocol	5-57
CP Input Set	5-58
Primary (P) and Indirect (i) Status Instructions (“split Mnemonics”)	5-60
Entering or Editing a CP Input Set	5-62
Copying a CP Input or Output Set for Use with a Different Panel Type	5-74
CP Output Set	5-76
Overview	5-76
Copying a CP Output Set for Use with a Different Panel Type	5-78
Entering or Editing a CP Output Set	5-79
Multiple Switcher Installations	5-96
CP Override Set	5-98
Defining Overrides	5-99
CP Sequence Set	5-101
Defining Sequences	5-102
CP Category Set	5-103
Changing the Category Set Associated with an Input or Output Set	5-107
MPK Devices	5-108
Setting Up a Switcher Control Panel for Full-Matrix, Multi-Bus, or Single-Bus Control	5-113
Setting Password Levels for Control Panels	5-114
VGA Status Display Control Panel Entries	5-115
Force Unprotect / Force Unlock Password	5-115
Displaying Time Code on an MC 3000 Associated with a VGA Status Display .	5-115
MI 3040 General Purpose / Tally Interface Entries	5-116
Machine Interface Applications	5-116
Tally Interface Applications	5-116
External Control of Saturn Master Control Switcher (“MI 3040IO” application)	5-116
MC 3040 (MI 3040) entries	5-117
Non-Thomson Machine Control Panel or Computer Applications	5-117
MC 3020D Delegate Panel Entry	5-118
MC 3020L Linkage Panel Entry	5-118
SD 3x and RP 1/2/3 Under Monitor Display Entries	5-118
Systems with Jupiter-Controlled Distribution Switcher Only	5-119
SD 3x Applications	5-119
RP 1/2/3 Applications	5-120
Systems with Saturn / MCS 2000 Master Control Switcher	5-122
SD 3x Applications	5-122
RP 1/2/3 Applications	5-124
Systems with Non-Saturn / NON-MCS 2000 Master Control or Any Model Production Switcher	5-125
SD 3x Applications	5-125
RP 1/2/3 Applications	5-125
Permanent Display of Mnemonic	5-128
External Control Device Entries	5-129
DD Series Switchers	5-129

Thomson Broadcast Automation Systems – Serial Control	5-130
Computers using “ESswitch” Routing Switcher Dialect or Thomson ASCII protocol	5-130
Model 200 Production Switchers	5-131
CP 3830 Dual Configuration	5-132
Dedicated Output Panel	5-132
CP 3832 / 3864 Multi-Panel Applications	5-133
Single-Bus Application	5-133
128 X 1 control station	5-133
X-Y Application (with Balanced Split Panel)	5-134
48 X 16 control station	5-134
X-Y Application (No Split Panel)	5-135
64 X 32 control station	5-135
X-Y Application (No Split Panel)	5-136
128 X 128 control station	5-136
CP 3810 Applications	5-137
Multi-Bus Control	5-137
Single Bus Control (“CP 3810L”)	5-138
X-Y Application	5-139
Single Bus Status Only (Stand-alone) (“CP-3810L”)	5-140
Machines	5-141
Protocol Dependent Devices	5-144
Saturn Master Control Switcher	5-146
Machine Control	5-148
Saturn Master Control Switcher	5-150
Assigning (Linking) Machines to Control Panels	5-151
Example of Machine Control Tables Setup	5-153
Operational Sequence for Linkage	5-154
Default (Semi-permanent) Linkage	5-156
Linkage for Machines That Do Not Enter the Routing Switcher	5-157
Start/Stop machine control using Expansion Panels	5-158
VGA / MC 3000 Status Display Table Entries	5-158
Saturn Master Control Switcher	5-158
MI 3040 General Purpose Interface Entries	5-159
MC 3040 (MI 3040) Entries	5-159
Delegation Groups	5-161
MPK Devices Table Entries	5-162
Machine Control Devices Table Entries	5-162
Example of Operation	5-162
Saturn Master Control Switcher delegation	5-162
Example of Delegation and Linkage Sequence	5-165
Permanent Delegation	5-167
TCS 1 Device Codes	5-168
Machines Controlled by TCS 1 Interfaces	5-168
Party Line Tables	5-169
Party Line Description	5-169

Party Line Input and Output	5-170
Party Line Levels	5-171
Status Display Headers	5-172
VGA Status Display Table	5-173
Tally	5-174
Relay Description	5-174
Tally Dependency	5-180
Overview	5-180
Basic Tally System with Saturn Master Control Switcher	5-182
Direct Connection to Transmitter	5-182
Saturn ("MCS_TLY") entries	5-182
Indirect Connection to Transmitter	5-184
Unqualified output	5-184
Saturn ("MCS_TLY") entries	5-184
Configuration for Systems with Saturn Master Control Switcher and Production Switcher	5-186
Direct Connection to Transmitter	5-186
Saturn ("MCS_TLY") entries	5-186
Production Switcher Entries	5-188
Indirect Connection to Transmitter	5-190
Unqualified Output	5-190
Saturn ("MCS_TLY") Entries	5-190
Production Switcher Entries	5-190
Configuration for Systems with Non-Saturn Master Control Switcher	5-192
Example of Tally System Operation	5-194
Sequential Path Finding	5-196
Path Finding Data Table	5-197
Switcher Input Tables	5-198
Path Finding for Three or More Switchers	5-200
Path Finding Between Analog and Digital Equipment	5-203
Automatic Conversion of Separate Analog Signals to Combined Digital Signals	5-203
Non-Sequential Path Finding	5-207
Exclusion	5-210
Y Line Table (DM 400/400A)	5-211
Time Standard table	5-212
Video Reference Table	5-212

Section 6 – Control Panel Operation 6-1

CP 300 24 x 1 Single Bus Control Panel	6-1
CP-310 24 x 8 Eight Bus Control Panel	6-2
CP 320 Push Button Control Panel	6-3
CP 328 Push Button Control Panel	6-4
CP 330 Control Panel	6-4
CP 330/6 48 x 6 Six Bus Control Panel	6-5
CP 300 Series Diagnostics	6-6

CP 300/310/330	6-6
Button/Lamp Test	6-6
Lamp Self-Test	6-6
CP 330/6	6-6
CP 320/328	6-6
CP 3000 Switcher Control Panel	6-7
Override Input Selection	6-7
Category and Number Input Selection	6-8
Protect Output	6-9
To Protect an Output	6-9
To Unprotect an Output	6-10
Lock Output	6-11
To Lock an Output	6-11
To Unlock an Output	6-11
Additional Protect/Lock Information	6-12
Chop Inputs	6-13
Additional Chop Information	6-13
Levels Selection (Split Switching)	6-14
De-selecting Switcher Levels	6-14
Switching Different Inputs with a Single TAKE Command	6-15
An Alternate Method of Split Switching	6-15
Menu Selections	6-15
STAT — Display Output Status	6-16
SEQ — Select Input Sequences	6-17
AUD — Audio Modes	6-18
OUT — Display/Change Output	6-20
DIAG — Control Panel Diagnostics	6-20
Display Self-Test	6-20
Keypad Self-Test	6-20
DEF — Re-define Input Overrides	6-21
ID — Display Control Panel Device Address	6-21
Passwords	6-22
Single-Event Password Entry	6-22
Long-Term Password Entry (PWD — Login)	6-22
Raising Password Level to Maximum (for Force Unprotect/Unlock)	6-22
LOG — Logout (CP 3000 Panel Only)	6-23
CP 3008 (FCS 3357) 8-Character Control Panel Operation	6-23
CP 3010 Expansion Panel Operation	6-24
CP 3010 as Companion to CP 3000 Switcher Control Panel	6-24
Dynamic Assignment of Outputs to the TAKE Keys	6-24
Permanent Assignment of Outputs to the TAKE Keys	6-25
Machine Control	6-25
CP 3020 Push Button Control Panel operation	6-26
LOCK Mode	6-26
CHOP Mode	6-26
Button/Lamp Test	6-26

CP 3030 Control Panel	6-26
CP 3800A Eight Character Control Panel	6-27
Overview	6-27
Display	6-28
Soft Key Group	6-28
Menu / Control Group	6-28
Menu Mode Group	6-29
Panel Control Group	6-30
Category and Number Group	6-30
Operation	6-30
Multiple Destination Mode	6-31
Scrolling to Other Pages	6-31
Selecting Destination(s) and Making a Switch	6-32
Adding or Changing a Destination Soft Key Assignment	6-34
Erasing a Destination	6-35
Multiple Destination Mode (cont'd)	6-36
Entering Single Destination Mode	6-36
Single Destination Mode ("Single-Bus Control")	6-37
Scrolling to Other Pages	6-38
Selecting a Destination	6-38
Making a Switch	6-40
Level Selection Mode ("Split" or "Breakaway" Switching)	6-41
Making a Split Switch—Multiple Destination Mode ("DEST" Button OFF) ...	6-42
Making a Split Switch—Single Destination Mode ("DEST" Button ON)	6-42
Audio Control Mode (Venus Special Stereo Switching)	6-43
To Perform a Special Stereo Switch:	6-44
Menu Mode	6-45
VTR Control	6-45
Single Destination VTR Control	6-45
Multiple destination VTR Control	6-46
Scrolling to Other Pages	6-46
Diagnostics	6-47
Info	6-47
Baud Rate	6-47
Panel ID	6-47
MPK Test	6-48
Illumination adjustment	6-48
Burn In	6-48
Keyboard test	6-48
Display test	6-48
LED test	6-48
Chop	6-49
Config	6-50
Sticky Outputs	6-50
Sticky Levels	6-50
Sticky Audio	6-50

Category Prompting	6-51
Password Levels	6-51
Password Level Request During TAKE	6-52
Override Mode	6-53
Executing Overrides	6-53
Defining Overrides	6-54
Entering Define Mode	6-54
Creating the override definition	6-54
Viewing Override Definitions	6-55
Erasing An Override	6-56
Sequence Mode	6-57
Executing Sequences	6-57
Defining Sequences	6-57
Entering Define Mode	6-58
Creating the Sequence Definition	6-58
Viewing Sequence Definitions	6-60
Erasing a Sequence	6-60
Protect/Lock Mode	6-61
Tie Line Status and Operation	6-63
Tie Lines Used Up Warning	6-63
Error Messages	6-63
CP 3808 Control Panel	6-64
Home Mode	6-64
Source Entry Mode	6-64
Destination (Output) Selection	6-65
Source Selection	6-66
Operation with Expansion Panels	6-66
Level Breakaways (Split Switching)	6-67
Level Preset Method	6-67
Level Deselect Method	6-68
Multi-Source, One-Take Splits	6-68
Menu Functions	6-68
Destination Mode — Press MENU Once	6-68
Status Mode — Press MENU Twice	6-69
Audio Status Mode— Press MENU Three Times	6-69
Locking or Unlocking an Output—Press MENU Four Times	6-69
Protecting or Unprotecting an Output—Press MENU Four Times	6-70
Panel ID (Address) Mode—Press MENU Five Times	6-71
Diagnostics Mode — Press MENU Six Times	6-71
LED Test	6-71
Info	6-71
Baud Rate	6-72
Panel ID	6-72
MPK Test	6-72
Illumination Adjustment	6-72
Burn In	6-73

Key test	6-73
Display test	6-73
Audio Switching Mode (Venus Special Stereo Switching)	6-74
Passwords	6-75
CP 3810 Expansion Panel Operation	6-75
CP 3824 Control Panel	6-76
Destination Selection	6-76
Source Selection	6-77
Selecting a Source with PRESET On	6-77
Scrolling Through Override Pages	6-77
Flip-flop Operation	6-78
Locking or Unlocking an Output	6-79
Protecting or Unprotecting an Output	6-79
Chop Outputs	6-80
Level Breakaways (Split Switching)	6-81
Breakaway Using Override Keys (PRESET Off)	6-81
Breakaway Using Category/Number Keys (PRESET Off)	6-82
Breakaway Switching – Multi-Level Take	6-83
Checking Status of Multiple Levels	6-83
Breakaway Switching – Sticky Level(s)	6-83
Defining Overrides	6-85
Restoring Override Keys to Default Assignments (Default Select Mode)	6-86
Menu Functions	6-87
Destination Mode — Press MENU Once	6-87
Default Select Mode — Press MENU Twice	6-87
Sticky Mode — Press MENU Three Times	6-87
Panel Name — Press MENU Four Times	6-87
Panel ID (Address) Mode — Press MENU Five Times	6-87
Diagnostics Mode — Press MENU Six Times	6-87
CP 3830 Control Panel	6-88
CP 3830P (CP 3830 with Automatic Preview)	6-88
Destination Selection	6-89
CP 3830 Dual Configuration—Dedicated Output Panel	6-89
Source Selection	6-90
Operation with Expansion Panels	6-90
Flip-flop Operation	6-91
Locking or Unlocking an Output	6-92
Protecting or Unprotecting an Output	6-92
Chop Outputs	6-93
Level Breakaways (Split Switching)	6-94
Level Preset Method	6-94
Level Deselect Method	6-95
Multi-Source, One-take Splits	6-95
Menu Functions	6-96
Destination Mode — Press MENU Once	6-96
Status Mode — Press MENU Twice	6-96

Audio Mode — Press MENU Three Times	6-96
Panel ID (Address) Mode—Press MENU Four Times	6-97
Diagnostics Mode — Press MENU Five Times	6-97
Audio Switching Mode (Venus Special Stereo Switching)	6-98
To Perform a Special Stereo Switch:	6-98
CP 3832 / 3864 Control Panels	6-100
Passwords	6-100
Single-Bus Operation	6-101
Chop (CP 3864 Only)	6-103
Protecting or Unprotecting an Output	6-103
Locking or Unlocking an Output	6-104
Split Panel Operation	6-106
Operation as a Source or Destination Expansion Panel	6-108
Single-Bus Operation	6-109
Source Expansion Operation (with “balanced Split” 16 x 16 Main Panel) . .	6-110
Destination Expansion Operation	6-111
Menu Functions	6-112
Destination Mode — Press MENU Once	6-112
Audio Status Mode— Press MENU Twice	6-112
Panel Name — Press MENU Three Times	6-112
Panel ID (Address) Mode — Press MENU Four Times	6-112
Diagnostics Mode — Press MENU Five Times	6-112
LED Test	6-113
Info	6-113
Baud Rate	6-113
Panel ID	6-113
MPK Test	6-114
Illumination Adjustment	6-114
Burn In	6-114
Keyboard Test	6-114
Display Test	6-114
Audio Switching Mode (Venus Special Stereo Switching)	6-115
CP 3832L / 3864L Control Panels	6-117
Passwords	6-117
Single-Bus Operation	6-118
Protect/unprotect functions	6-119
CP 3832L	6-119
CP 3864L	6-119
Split Panel Operation	6-120
Diagnostics Mode	6-121
LED Test	6-121
Info	6-121
Baud Rate	6-122
Panel ID	6-122
MPK Test	6-122
Illumination Adjustment	6-122

Burn In	6-123
Keyboard Test	6-123
Display Test	6-123
CP 3809 Expansion Panel Operation	6-124
Dynamic Assignment of Outputs to Expansion Panel Buttons	6-124
Permanent Assignment of Outputs to the Expansion Panel	6-125
Diagnostics Mode	6-125
CP 3810 Expansion Panel Operation	6-126
Multi-Bus Control	6-126
Single-Bus Control	6-129
Switching Procedure	6-129
X-Y Application	6-130
Single-Bus Status Only (Stand-Alone)	6-130
Diagnostics Mode	6-130
MC 3000 Machine Control Panel and CP 3010 Expansion Panel	6-131
MC 3000 Control Functions	6-132
Using the MC 3000 to Access Sony Auto-Edit Mode	6-133
CP 3010 Control Functions	6-134
MC 3010 Machine Control Panel	6-135
Gang Start	6-135
Diagnostics	6-137
MC 3020L Linkage Panel Operation	6-138
MC 3020D Delegate Panel Operation	6-140
VGA Status Display Operation	6-141
Switcher Output Status Page	6-142
Cursor Mode – Selecting an Output for Control	6-142
Force Unprotect / Force Unlock	6-143
Machine & Delegation Status Page	6-143
Cursor Mode – Selecting a Machine for Control	6-144

Section 7 – Software Control Panel Suite 7-1

Software Installation	7-1
Jupiter Table Entries	7-1
Network Description Table	7-2
Serial Protocol Table	7-3
MPK Devices Table	7-4
Machine Control Table	7-5
Main Screen	7-6
Panel Configuration	7-7
Operation	7-8
Paths Full / Protected / Locked / Excluded Messages	7-8
Slaved Machine Control Panel	7-9
Machine Assignment	7-9
Machine Control Buttons	7-10
Time code display	7-10

Full Function Switcher Panel	7-11
To Status a Destination	7-11
To Switch a Source	7-12
Breakaway Switching (“Select” Method)	7-12
Breakaway Switching (“Deselect” Method)	7-13
Audio Modes (Venus Special Stereo Switching)	7-14
Presets	7-16
Direct Take Preset Assignments	7-16
Breakaway Preset Assignments	7-17
Removing a Preset Assignment	7-17
Switching Using the Direct-Take Presets	7-17
Memory	7-18
Saving a Direct Take Setup	7-18
Recalling a Direct Take Setup	7-19
Memory Location Labeling	7-19
Full Function Machine Control	7-20
Machine Assignment	7-20
Machine Control Buttons	7-21
Control Knob and Direction/speed Indicators	7-21
Time Code Display	7-21
Manual Time Code Entry	7-21
Dubs Panel	7-22
To Status a Destination	7-22
Switching Multiple Destinations to the Same Input (Dub Switching)	7-23
Using the Hold Button	7-23
Source/Destination Panel	7-24
To Status a Destination	7-24
To Switch a Source	7-24
Salvo Panel	7-26
Multiple Source/Destination Switching (Salvo)	7-26
Memory	7-27
Saving a Salvo Setup	7-27
Checking a Salvo Setup	7-28
Recalling and taking a Salvo Setup	7-28
Memory Location labeling	7-28
X – Y Panel	7-29
To Status a Destination	7-29
To Switch a Source	7-29
Section 8 – Board Status	8-1
Operation	8-1
Refresh	8-2
Menus	8-2
Section 9 – Control Center	9-1
Board Status	9-1

TFTP Status	9-2
Board Info/Control	9-3
Selecting Boards	9-3
Reboot	9-4
Clear PMEM	9-4
Clear Flash	9-4
Post Mortem	9-4
Start Board Override	9-4
Telnet	9-4
Update Board Info	9-4
Menu Commands	9-5
File	9-5
Exit	9-5
Options	9-5
Scan Rate	9-5
Time Sync	9-5
Help	9-5
Configuration	9-6
Simple Set Activation	9-6
Activation Without a Reboot	9-7
Reboot	9-7
Backup Set	9-7

Section 10 – CP Input/Output Set Editor 10-1

Passwords	10-2
Drop-down Menus	10-2
File	10-2
View	10-3
Options	10-3
Selecting a Set for Editing and Download	10-3
Editing Sets	10-4
Editing Category Names	10-5
Creating and Activating a Group of Sets (Select Group)	10-5
Activating (Downloading) a Single Set	10-7
Logging	10-7
Log In/Log Out	10-8
Logging In	10-8
Logging Out	10-8
Options Menu	10-8
Passwords	10-8
Compare Sets	10-9
Input and Output Set Usage Tables	10-11
Additional Notes	10-11

Section 11 – Force Unlock 11-1

Display	11-1
---------------	------

Unlocking and Unprotecting	11-1
Menus	11-1
Section 12 – Logger and Log Viewer	12-1
Running the JNS Logger	12-1
Running the JNS Log Viewer	12-2
Dynamic Displays	12-3
Static Displays	12-3
Date/Time Filter	12-4
Print/Export	12-4
Notes	12-4
Section 13 – Party Line Download	13-1
Section 14 – Physical Control	14-1
Section 15 – Physical Diagnostic Utility	15-1
Features	15-1
Menus	15-1
File	15-1
View	15-1
Options	15-2
Window	15-2
Help	15-2
Functionality	15-2
File > New	15-2
Selecting By Output	15-4
Selecting By Level	15-5
Physical Data Update	15-6
File > Open	15-6
View Menu	15-6
Input Mapping	15-6
Exception Tables	15-7
Section 16 – Physical Remapping Utility	16-1
Menus	16-1
File	16-1
System Definition	16-2
View – display the Input or Output Exception tables.	16-2
Start Remapping by Entering Physical Numbers	16-2
Comment Field	16-3
Remapping	16-4

Restoring	16-4
System Definition	16-5
Setting Idle Inputs/Outputs	16-5
Exception Tables	16-6
Section 17 – Router Control Utility	17-1
Configuration	17-1
Displaying Status	17-2
Doing Takes	17-2
Menus	17-2
Section 18 – Router Save/Restore	18-1
Operation	18-1
Saving Router Status	18-1
Restoring Router Status	18-1
Selecting Outputs and Levels	18-2
Menus	18-2
Section 19 – Saturn Monitor Follow & Preview	19-1
Appendix A	A-1
VM 3000 VGA Status Display	A-1
Hardware Installation	A-1
Summary of Software Configuration Procedure	A-2
Custom Display Formatting	A-3
VGA Page Description File Definitions	A-3
Basic Rules:	A-3
Field Definitions	A-4
Page Description Examples	A-6
Switcher Output Status Page	A-6
Switcher Input Status Page	A-7
Machine and Delegation Status Page	A-8
System Status Page	A-8
Master Control Status Page	A-9
Tie Line (Path Finding) Page	A-10
Tie Line Status Display	A-11
Appendix B	B-1
Program Restart Procedures	B-1
VM 3000, SI 3000, Saturn Reset	B-1
File Server Restart	B-1
Clearing Battery-Protected Memory (PMEM)	B-1

VM/SI 3000/Saturn	B-1
Clearing Flash Memory (and Forcing Download)	B-2
VM/SI 3000/Saturn Only	B-2
Clearing PMEM and Flash Memory (and Forcing Download)	B-2
VM/SI 3000 Only	B-2
Appendix C	C-1
Probe Connections and Protocol	C-1
Appendix D	D-1
Decimal–Hexadecimal–Binary–ASCII Conversion Chart	D-1
Appendix E	E-1
Mark/Search Commands in Jupiter Control System	E-1
MC 3000 Control Panel Operation	E-1
Jupiter Control with Invalid Time Values	E-2
TCS 1 and GPI Machine Control Interfaces	E-2
Appendix F	F-1
“ESbus” Specifications	F-1
Mechanical and Electrical Characteristics	F-1
Appendix G	G-1
Jupiter Remote PC / Extended	G-1
Overview	G-1
Remote PC	G-1
Remote PC Extended	G-1
Installation	G-3
Running a Remote PC	G-4
Remote Installation	G-6
Remote Configuration	G-6
Appendix H	H-1
Venus Three–stage Switching	H-1
VM 3000 Control System Installation	H-2
Crosspoint board Level Settings	H-2
Crosspoint Board Input Settings	H-2
Crosspoint Board Output Settings	H-2
Software Configuration	H-7
Switcher Size Terminology	H-7
Entries to the Switcher Description Table	H-7
Switcher Input/Output Tables	H-7

Appendix I	I-1
Jupiter ES-bus Commands and the TCS 1 Translator	I-1
Appendix J	J-1
CP 3000 Control Panel Basic Operation	J-1
Input To Output Switching	J-1
Lock	J-5
Protect	J-5
Appendix K	K-1
Redundant VM/SI 3000 Manual Changeover	K-1
Setting Up a System-Loaded VM/SI	K-2
Replacing a Failed Unit	K-3
Appendix L	L-1
Special Configuration Requirements: Venus DM 400/400A Data Matrix Switching	L-1
Hardware Connections	L-1
Switcher Description Table	L-3
Switcher Input and Output Tables	L-5
CP Level Set	L-6
CP Input And Output Sets	L-6
Operation	L-6
Point-to-point Data Switching Options	L-7
Y line Table – VTR Controller/Tributary Selection	L-8
CP Input and Output Sets	L-10
Operation	L-10
Appendix M	M-1
CP 3000/3010 Output Set Worksheet	M-1
Appendix N	N-1
Jupiter ASCII Communications Protocol	N-1
Appendix O	O-1
Venus Monitor Configuration	O-1
Hardware Installation	O-1
Cabling	O-1
VM/DC 400 Combiners	O-1
Software Configuration	O-2
Operational Sequence for Monitoring	O-4
Appendix P	P-1
CE 3000 Matrix Control / PL 3000 Party Line Interface	
SC 3000 Serial Control / VG 3000 Video Display / Status Generator	P-1

Appendix Q	Q-1
PS 300 110/220 VAC Power Adaptor Kit Installation Instructions	Q-1
Mounting Procedure	Q-1
Appendix R	R-1
Changing Jupiter Configuration Sets with Thomson Broadcast Automation ES-LAN (QNX Version) Present	R-1
Appendix S	S-1
Status and Error Codes	S-1
VM/SI 3000 Controller Boards /	S-1
CP 3800 Series Control Panels	S-2
Appendix T	T-1
Running the CP 3200 Control Panel on Remote PCs	T-1
Appendix U	U-1
Production Switcher Input Source Assignment	U-1
Hardware Components	U-2
Routing switcher control panel	U-2
MI 3040 Select Device	U-3
MI 3040 Lock Device	U-3
Software Configuration	U-3
Appendix V	V-1
TSL UMD Setup Guide	V-1

Glossary

Index

Regulatory Compliance Notices

The following information is given to note conformity with these standards:

US FCC Rules

Reference: Part 15 Subparts A and B.

Notice: interference to radio communications in a domestic environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. As temporarily permitted by regulation it has not been tested for compliance with the limits for Class A computing devices pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference. **Operation of this equipment in a residential area is likely to cause interference** in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

EEC EMC (EN series)

Refer to the Declaration of Conformity in the shipping container.

Note: Compliance with the EEC EMC standards listed in Declaration of Conformity qualifies the listed products for CE Mark certification at the time of publication.

UL

UL – 1950

CSA

CSA – C22.2 No. 950–M89

For additional safety information, see the following page.

SAFETY NOTICES

Caution: Electric shock danger. To reduce risk of electric shock, do not perform any servicing other than that contained in the manual unless you are qualified to do so.

Attention: Danger de choc électrique. Pour réduire tout risque de choc électrique, veuillez ne faire aucun entretien à l'appareil autre que ce qui est indiqué dans le manuel, à moins d'être un technicien qualifié.

Caution: No power switch. This equipment relies on the power cord as a disconnect device.

Attention: Pas d'interrupteur. Il faut débrancher l'appareil pour couper le courant.

Electrical code: Equipment used in the USA must be installed in accordance with NEC and local code. Equipment used in Canada must be installed in accordance with the CEC code.

Warranty Statement

THOMSON BROADCAST & MEDIA SOLUTIONS (“TBMS”) warrants that the products purchased will be free from defects in materials and workmanship for the period stated in the Complimentary Warranty Services Summary or when no period is stated for a period ending at the earlier of one (1) year from the date of installation or fifteen (15) months from the date of shipment. If any such product proves defective during this warranty period, TBMS, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, Customer must notify TBMS of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by TBMS, with shipping charges prepaid. TBMS shall pay for the return of the product to Customer.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. TBMS shall not be obligated to reimburse Customer for service provided by personnel other than TBMS representatives or to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than TBMS representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; or c) to service a product that has been modified or integrated with other products without Thomson’s written approval.

THIS WARRANTY IS GIVEN BY TBMS WITH RESPECT TO PRODUCTS PURCHASED UNDER THIS AGREEMENT IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TBMS AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TBMS’S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TBMS AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TBMS OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGE. Furthermore, in no event shall Thomson’s liability to the Customer exceed the purchase price paid for the products.

Parts and Service

Thomson maintains a full stock of replacement parts available for immediate shipment.

NORTH AMERICA PARTS AND SERVICE

Please call toll-free **1-800-547-8949**.

You will be switched automatically to the parts and service representative nearest you.

Internet: www.thomsongrassvalley.com

INTERNATIONAL PARTS AND SERVICE

Contact your local Thomson representative.

Related Documentation

CM 4000 System Controller Installation and Operating Manual	071-8261-00
Describes Jupiter XPress and Jupiter AccuSwitch applications	
Jupiter Getting Started Guide	04-045707-003
Describes simplified software configuration procedures for quick system start-up.	
Multimedia Courses:	
Setting Up, Configuring, and Operating a Basic Jupiter Control System	071818900
Building a Jupiter Tally System from the Ground Up	071818800
Finding Your Path through Path Finding	071818700
CP 3008 (FCS 3357) 8-Character Control Panel Installation/Operating Manual	04-883357-002
For assembly drawings, see “CP 3000” on Technical Publications Library CD-ROM.	
CP 3030 Control Panel Installation and Operating Manual	04-046299-002
BSD 2000 Under Monitor Status Displays Installation Manual	04-041602-004
Includes SD 3x technical information and DIP switch settings.	
FCS 3306/1/2 Control Panel (1200/2400 baud)	04-883306-001/2
Describes software running in a CP 3000 Control Panel PROM. This software can be used to talk to remote panels through modems using MPK protocol at 1200 or 2400 Baud.	
FCS 3343 Custom Switcher Control Panel Technical Manual	04-883343-001
FCS 3360 (TNN CP 3030) Control Panel Installation/Operating Manual	04-883360-002
Triton to Jupiter Serial Control Kit Installation Instructions	04-051254-001
MNC Technical Publications Library CD-ROM	46-050812-001
Includes installation/operating manuals, assembly drawings, and Field Engineering Bulletins for most Thomson products developed at the Salt Lake City design center.	

Advanced Tally Techniques for Studios with Jupiter Control and DD-35
Series Production Switchers.

Technical paper

CP 2002 Control Panel series
Trinix / Venus / Triton routing switchers
Saturn / M2100 master control switchers
DD Series production switchers
Concerto Flexframe Routing Matrix

Contact Thomson