

Hyperlinks to Jupiter Installation and Operating Manual

Table of Contents [iii](#)

Jupiter tables

CP category set table	5-103
CP input set table	5-58
CP level set table	5-55
CP output set table	5-76
CP override set table	5-98
CP sequence set table	5-101
Delegation groups table	5-161
Exclusion table	5-210
Machines table	5-141
Machine Control table	5-148
MPK devices table	5-108
Network description table	5-22
Non-sequential path finding data table	5-207
Party line	5-169
Passwords table	5-17
Path finding tables	5-196
Protocol Dependent Devices	5-144
Serial Protocol table	5-25
Status display header table	5-172
Switcher description table	5-31
Switcher input table	5-44
Switcher output table	5-51
Tally tables	5-174
TCS-1 Device Codes	5-168
VGA status display table	5-173
Y Line Table (DM 400/400A)	5-211

Index [Index-1](#)

To access documentation for other Thomson Salt Lake City products, insert the “Technical Publications” CD-ROM supplied with your manual. Then:

- If your CD-ROM drive is mapped as Drive “E,” click [here](#) to launch your web browser and open the first CD page.
- Or, use Windows Explorer to browse to the appropriate drive letter and follow the instructions printed on the CD-ROM label.