

KALEIDO SOFTWARE

UNMATCHED PICTURE QUALITY AND LAYOUT FLEXIBILITY

User's Manual

M770-2800-144

2018-09-07

Copyright & Trademark Notice

Copyright © 2007–2018, Grass Valley Canada. All rights reserved.

Belden, Belden Sending All The Right Signals, and the Belden logo are trademarks or registered trademarks of Belden Inc. or its affiliated companies in the United States and other jurisdictions. Grass Valley, Kaleido, Kaleido-X, iControl, NVISION, and Densité are trademarks or registered trademarks of Grass Valley Canada. Belden Inc., Grass Valley Canada, and other parties may also have trademark rights in other terms used herein.

Terms and Conditions

Please read the following terms and conditions carefully. By using Kaleido multiviewer documentation, you agree to the following terms and conditions.

Grass Valley hereby grants permission and license to owners of Kaleido multiviewers to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available from the Legal Terms and Conditions section of Grass Valley's website (www.grassvalley.com).

Title	Kaleido Software User's Manual
Part Number	M770-2800-144
Revision	2018-09-07, 13:12

toc

Table of Contents

1	Introduction	13
	Introduction.....	13
	About this Document.....	13
	Related Documentation	13
	Software and Firmware Updates	14
	Feature Availability and Multiviewer Specifications	14
	XEdit Application Shortcuts.....	15
2	Getting Started.....	17
	Introduction.....	17
	Multiviewer Signal Flow Overview	18
	Multiviewer Sources	19
	Logical Sources.....	20
	Monitors	20
	Layouts	20
	Rooms and Displays	21
3	Managing Kaleido Multiviewer Systems.....	23
	Introduction.....	23
	Key Concepts.....	23
	Representation of Multiviewer Models in Kaleido Software.....	27
	Opening XEdit Software	28
	Difference between Online and Offline Modes	31
	Using XEdit in Online Mode.....	32
	Connecting to a Multiviewer.....	32
	Disconnecting from a Multiviewer	33
	Enabling Access Control in XEdit.....	34
	Disabling Access Control in XEdit	34
	Importing a Database.....	35
	Exporting a Database	37
	Exporting a Single-Multiviewer Database.....	37
	Exporting a Cluster Database	37
	Creating a Backup	40
	Backing Up the Current Database.....	40
	Backing Up Resolutions.....	40
	Backing Up Audio Scales.....	40
	Restoring a Backup	41
	Restoring a Database from a Backup	41
	Restoring Resolutions or Audio Scales from a Backup	41
	Creating a Single Multiviewer System	42

Cluster	45
Creating a Cluster	45
Cascade	52
Configuring the System Representation	53
Managing Cards in a Kaleido-X or KMX-3901 System Representation	54
Emptying card slots	55
Populating card slots	55
Restoring the Factory-Default Configuration	57
To restore the XEdit factory defaults for a multiviewer model	57
To restore the XEdit factory defaults for a multiviewer cluster	58
Managing Multiple Databases Efficiently	60
Working online	60
Working offline	60
Applying a backup database to the multiviewer	61
 4 Managing Sources in a Kaleido-IP System	 63
Introduction	63
Input Types - Network Sources Versus Virtual Inputs Explained	63
Kaleido-IP Multiviewer Ethernet Port Usage	65
Default Kaleido-IP Network Source Configuration in XEdit	65
Configuration Prerequisites	65
Configuring Network Sources	66
Adding Any-Source Multicast Transport Stream Sources	66
Adding Source-Specific or Source-Filtered Multicast Transport Stream Sources	68
Adding Unicast Transport Stream Sources	70
Adding HLS Playlist Sources	71
Adding RTSP Transport Stream Sources	73
Adding RTMP Transport Stream Sources	74
Modifying transport streams and HLS playlists	75
Removing transport streams and HLS playlists	77
Importing an Input Configuration from a Spreadsheet	78
Configuring Virtual Inputs	84
Adding Virtual Inputs	84
Modifying Virtual Inputs	86
Removing Virtual Inputs	87
 5 Logical Sources	 89
Introduction	89
Key Concepts	89
Creating and Configuring Logical Sources	90
Automatically Adding Logical Sources	90
Managing Logical Sources Associated with Programs in a Transport Stream	92
Adding logical sources for new programs in a transport stream	92
Manually adding a Logical Source	94
Managing Levels	95
Managing Logical Source Count Prompts	97
Defining Physical Assignments	98
Making Further Assignments by Incremental Copy	102

Sorting the Sources Table.....	104
Filtering the Sources Table.....	104
Resizing the Sources Table's Columns.....	105
Monitoring Internal-Router Outputs on the Monitor Wall (Sample Scenario).....	106

6 Calibrating the Kaleido Software 107

Introduction.....	107
Key Concepts.....	107
Profiles.....	107
Multiviewer Output Calibrations.....	108
Multiviewer Input Calibrations.....	109
Router Output Calibrations.....	111
GPI/Genlock Calibrations.....	111
Alarm Debouncing.....	111
Managing Calibration Profiles.....	113
Creating Calibration Profiles.....	113
Deleting Calibration Profiles.....	113
Configuring Calibration Profiles.....	113
Assigning Calibration Profiles.....	114
Configuring Alarm Thresholds.....	116
Configuring Alarm Debouncing.....	121
Multiviewer Input Calibrations.....	123
Configuring Audio Programs.....	123
Calibrating Loudness Measurement.....	124
Calibrating Loudness Probe Assignments.....	127
Calibrating Dolby Dialog Loudness Measurement.....	128
Configuring Sources for Dolby E Audio Metadata.....	130
Calibrating Zero VU Reference Levels for Embedded Audio Sources.....	131
Calibrating Zero VU Reference Level for an ABT Audio Source.....	132
Calibrating Aspect Ratio Decoding.....	133
Calibrating Detail Enhancement.....	134
Calibrating HDR.....	135
Calibrating Dynamic Range.....	137
Calibrating Subtitling/Closed Captioning.....	138
Calibrating Metadata Holding Time.....	140
Calibrating DTMF Tone Sequences.....	143
Calibrating SCTE 35 Event Reporting Duration.....	144
Calibrating SCTE 104 Message Events.....	146
Multiviewer Output Calibrations.....	148
Calibrating the Brightness and Contrast.....	148
Calibrating Color Saturation.....	149
Calibrating the DVI Keying Mode.....	151
Calibrating the Audio Monitoring Delay.....	152
Calibrating the Audio Monitoring Color.....	154
Router Output Calibrations.....	156
Calibrating Switch Field Selection.....	156
Calibrating SDI Signal Reclocking.....	156
GPI/Genlock Calibrations.....	158

7	Configuring Alarms.....	159
	Introduction.....	159
	Key Concepts.....	159
	Alarm.....	159
	General Status Manager (GSM).....	159
	Alarm Logging.....	160
	Alarm Browser.....	160
	Alarm Status.....	160
	External Alarm Provider.....	162
	Lookup Service.....	162
	Alarm Suppression.....	162
	Global Alarms.....	162
	Virtual Alarm.....	163
	Sub-Alarm.....	164
	Alarm Monitor.....	164
	Simple Network Management Protocol (SNMP).....	164
	Teletext, Subtitles, and Closed Captions.....	166
	Dolby E/AC-3 Metadata.....	168
	Microphone Loudness Measurement.....	170
	SCTE 35 Digital Program Insertion (DPI) Signaling.....	170
	Bit Rate Measurement.....	170
	Transport Stream Monitoring.....	170
	Managing Alarm Providers.....	172
	Managing Virtual Alarms.....	174
	Creating Virtual Alarms.....	174
	Modifying Virtual Alarms.....	179
	Deleting Virtual Alarms.....	180
	Managing Alarm Logging.....	182
	Adding a GSM log plug-in.....	182
	Specifying your multiviewer as a lookup server for iControl.....	183
	Enabling logging for a native alarm.....	185
	Disabling logging for a virtual alarm.....	186
	Publishing Alarms to SNMP Managers.....	187
	Identifying Target SNMP Managers.....	187
	Enabling SNMP Traps.....	188
8	Setting Up Rooms.....	191
	Introduction.....	191
	Key Concepts.....	191
	Managing Rooms.....	192
	Creating a Room.....	192
	Creating a 4K UHD Room.....	193
	Opening Rooms.....	195
	Closing Rooms.....	196
	Deleting Rooms.....	196
	Adding Displays.....	197
	Removing Displays.....	199
	Adding Full Screen Zones.....	200

Removing Full Screen Zones	200
Configuring Displays	201
Viewing Room Display Properties	201
Enabling EDID Auto-Detection in XEdit	202
Configuring Custom Resolutions from the Tools Menu	202
Configuring a Custom Resolution from a Specific Display in a Room	205
Changing Room Display Resolutions	207
Configuring the Primary and Secondary Multiviewer Outputs	208
Scan Format	209
Enabling HDR or WCG Monitoring Output for a Display	209
Enabling Phase Locking at the Monitoring Output	210
Disabling the Dashboard	210
Changing a Display's Aspect Ratio	211
Changing a Display's Diagonal Size	211
Changing a Display's Height	211
Changing a Display's Width	212
Changing a Display's Rotation	212
Changing a Display's Position	213
Managing Display Libraries	214
Creating Custom Display Libraries	214
Adding Displays to Custom Libraries	215
Removing Displays from Custom Libraries	215
Closing Display Libraries	216
Opening Display Libraries	216

9 Creating Layouts 217

Introduction	217
Key Concepts	217
Layouts and Layout Elements	217
Aspect Ratio	219
Cropping Mode	220
Spanning	222
4K UHD Spanning	224
Managing Layouts	225
Opening Layouts	225
Loading a Layout on the Monitor Wall	227
Closing Layouts	227
Creating Room Layouts	227
Creating 4K UHD Upscale Layouts	229
Creating Layouts to Monitor 4K UHD Quad Link Sources	230
Creating Full Screen Layouts	233
Deleting Layouts	234
Copying Layouts	236
Rearranging Layouts Across Displays	237
Exporting Layouts	239
Importing Layouts	239
Adding Monitors to a Layout	240
Removing Monitors	242
Duplicating Monitors	242

Assigning Logical Sources or Monitor Wall Destinations to Monitors	242
Automatically Populating a Grid-Type Layout	244
Selecting a Background Image for a Layout	245
Setting up a Layout for Background Keying from the DVI Input	246
Zooming and Panning a View	247
Showing and Hiding the Layout Navigator	248
Configuring Video Monitors	249
Setting Monitored Levels for a Video Monitor	249
Resizing a Video Monitor	250
Setting a Video Monitor's Aspect Ratio	250
Adding Safe Area Markers	251
Adding a Custom Safe Area Image	251
Video Cropping/Zooming	254
Configuring Automatic Aspect Ratios	256
Configuring a Video Monitor's Alarm Reporting Behavior	257
Configuring a Video Monitor's Source Reporting Behavior	258
Setting a Video Monitor's Text Mode	260
Configuring Audio Monitors	265
Configuring Loudness Monitors	268
Configuring Audio Scales	270
Configuring Audio Scales from the Tools Menu	270
Configuring Time Code Monitors	274
Configuring Timers	276
Adding Timers to the System	276
Adding a Timer Monitor to a Layout	279
Configuring UMDs	282
Setting Monitored Alarm and Text Levels for a UMD	282
Configuring a UMD's Alarm Reporting Behavior	283
Configuring a UMD's Source Reporting Behavior	285
Configuring Static UMD Text	286
Configuring Dynamic UMD Text	287
Setting the Text Font	288
Configuring Alarm Monitors	290
Configuring an Alarm Monitor's Source Reporting Behavior	291
Configuring Subtitling Monitors	294
Configuring Metadata Monitors	299
Configuring V-Chip Monitors	301
Configuring Clocks	303
Inserting a Clock Logo	306
Working with Composite Monitors	308
Creating a Composite Monitor	308
Resizing a Composite Monitor	312
Unlocking a Composite Monitor	313
Using the Region Editor	314
Opening the Region Editor	314
Configuring a Monitor's Position Using the Region Editor	314
Configuring a Monitor's Dimensions Using the Region Editor	315
Format Painting	316
Copying Properties from one Monitor to Another	316
Copying Size from one Monitor to Another	316

Copying Actions from one Monitor to Another	317
Managing Monitor Libraries	318
Creating Monitor Libraries	318
Closing a Monitor Library	318
Opening a Monitor Library	318
10 Creating Actions.	321
Introduction	321
Overview	321
Key Concepts	321
Creating Monitor Wall Actions	324
Assigning a monitor wall action to a monitor	324
Assigning a monitor wall action to a layout	325
Creating Background Actions	327
Creating a Background Action from the Actions Tab	327
Creating a Background Action from the System List	329
Creating an Action that can be Triggered through a Gateway Command	330
Editing an Action	331
Removing Action Items from an Action	331
Deleting an Action	332
11 Managing RCP Users.	333
Introduction	333
XEdit Quick Start Task List	333
Key Concepts	333
Managing RCP Users	334
Adding RCP Users	334
Removing RCP Users from the System	334
Managing Room Access	336
Granting Room Access to RCP Users	336
Removing RCP Users from Rooms	336
Setting Room Preferences	337
Assigning Room Layouts to the Kaleido-RCP2 Preset buttons	337
Assigning an Audio Output to the Remote Control Panel's AUDIO MONITORING Button	338
Enabling the Large Mouse Pointer for a Room	338
Assigning a Timer to a Room	339
Setting RCP User Preferences	339
Assigning Room Layouts to a Kaleido-RCP2 User's Presets	341
Assigning a Full Screen Layout to an RCP User	341
Assigning Audio Output to an RCP User	342
Setting the Keyboard Language	343
Assigning a Timer to an RCP User	344
Changing an RCP User's Name or Password	345
12 Routers & Kaleido Multiviewers	347
Introduction	347

Overview.....	347
Key Concepts.....	348
Router Control Configurations.....	350
Router Configuration Scenarios.....	351
Router Connections.....	354
Signal Path Viewer.....	356
Router Protocols.....	357
Optional Drivers for Controlling Routing Devices from the Multiviewer.....	357
Built-in Communications Protocols.....	358
Serial Connections.....	359
Q & A.....	361
Importing Router Configurations from an NV9000 System Controller.....	363
Renaming Physical Routers.....	370
Configuring an External Router.....	371
Step 1 – Defining a Physical Router.....	371
Step 2 – Adding Physical Levels.....	374
Step 3 – Adding Logical Routers.....	376
Configuring a Router Controller.....	384
Adding a Simple Router Controller.....	384
Adding an Intelligent Router Controller.....	386
Configuring a Multiviewer’s Internal Router.....	390
Configuring the Internal Router in a Kaleido-X16.....	390
Configuring the Internal Router in a Kaleido-X (7RU).....	392
Configuring the Internal Router in a Kaleido-X (14RU).....	396
Configuring Router Connections.....	398
 13 Tally Interface Devices & Timer Systems.....	 401
Introduction.....	401
Overview.....	401
Key Concepts.....	401
Drivers for Controlling Tally Interface Devices from the Multiviewer.....	401
Drivers for Scoreboards and Timers.....	402
Plura (Alpermann+Velte) Studio Production Timer.....	404
Adding a Timer System to your Multiviewer Configuration.....	404
Assigning Timer System Information to Logical Sources.....	406
Configuring Layout Elements.....	407
GPI-1501 General Purpose Interface I/O Module.....	410
Adding a GPI-1501 Module to your Multiviewer Configuration.....	410
Configuring Layout Elements.....	414
Configuring Serial Tally Systems.....	416
TSL IP UMD Controller.....	418
Ross Video Production Switcher.....	419
Sony Production Switcher.....	424
Setting Up a Sony Switcher.....	424
Setting Up a Multiviewer to Interface with a Sony Production Switcher.....	425
Kahuna Production Switcher.....	428
Kayak Production Switcher.....	434
Configuring the Kayak Switcher.....	434
Configuring the Multiviewer.....	435

Kayenne Production Switcher.	442
Configuring the Kayenne Switcher.	442
Configuring the Multiviewer.	443
K-Frame Switchers.	451
Configuring the K-Frame Switcher.	451
Configuring the Multiviewer.	451
Zodiak Production Switcher.	459
Configuring the Zodiak Switcher.	459
Configuring the Multiviewer.	460
Daktronics Scoreboards.	467
Adding a Daktronics Scoreboard to your Multiviewer Configuration.	467
Assigning Scoreboard Information to Logical Sources.	469
Configuring Layout Elements.	470
Serial Port Test Agent.	473

14 Operation of the Monitor Wall. 475

Introduction.	475
Key Concepts.	475
Logging on to the Monitor Wall Using a Remote Control Panel.	480
Logging on to the Monitor Wall Using the Kaleido-RCP2.	480
Logging on to the Monitor Wall Using the RCP-200.	481
Using On-Screen Wall Control.	483
Locating the Mouse Pointer on the Monitor Wall.	483
Using On-Screen Wall Control from the RCP-200.	483
Synchronizing the RCP-200's Head View with the Monitor Wall.	483
Displaying the Dashboard.	484
Hiding the Dashboard.	485
Loading Layouts.	486
Loading a Layout by Using the Mouse.	486
Loading a Layout by Using the Kaleido-RCP2.	486
Using Layouts Presets.	487
Loading a Layout by Using the RCP-200.	487
Refreshing a Layout.	487
Displaying a Source in Full Screen Mode.	489
Changing a Source's Aspect Ratio.	490
Video Cropping/Zooming.	491
Toggling Safe Area Markers.	493
Displaying Subtitles and Closed Caption Text.	494
Setting the Text Mode.	494
Switching Closed Captioning On/Off.	496
Setting the DVB Subtitling Language from the Monitor Wall.	496
Setting the SCTE 27 Subtitling Language from the Monitor Wall.	497
Selecting a Teletext/Subtitling Page from the Monitor Wall.	497
Editing UMD Text.	499
Selecting an Input Method.	500
Assigning Sources to Monitors.	501
Assigning a Logical Source to a Monitor by Using the Kaleido-RCP2.	501
Assigning a Logical Source to a Monitor by Using the RCP-200.	501
Assigning a Logical Source to a Monitor by Using the Mouse.	503

Changing Crosspoints	505
Changing Logical Sources Assignments on a Kaleido-X Configured as a Router	505
Viewing Assignment Information	505
Changing an Internal Router Crosspoint	506
Changing an External Router Crosspoint	507
Using Timers	509
Controlling a Timer by Using the Timer Monitor's Buttons and the Menu	509
Controlling a Timer by Using an External Numeric Keypad	511
Triggering Actions	512
Triggering an Action from the RCP-200	512
Triggering GPI Output Events	513
Acknowledging Alarms	514
Acknowledging Alarms on the Monitor Wall	514
Acknowledging Alarms by Using an Action	515
Monitoring Audio	516
Triggering Audio Monitoring by Using the mouse, the RCP-200, or the Kaleido-RCP2	516
Controlling the Volume at the Audio Monitoring Output	517
 15 Maintenance & Troubleshooting	 519
Introduction	519
Troubleshooting Common Issues	519
 16 Acronyms Used in this Document	 521
 Index	 527
 Contact Us	 536

1 Introduction

Introduction

This chapter provides an overview of the different Kaleido multiviewer models.

About this Document

The *Kaleido Software User's Manual* is intended to help you leverage the full working potential of the Kaleido Software and XEdit application for controlling and monitoring audio, and video broadcast signal paths for interfacing, routing distribution and other peripheral devices.

For specific installation instructions for your multiviewer model, refer to the multiviewer's *Installation & Service Manual*. The *Installation & Service Manual* document lists all related documentation for the multiviewer model. This document presumes that you have made the multiviewer functional according to the *Installation & Service Manual* document. Then use this document to complete your system configuration until it meets your monitoring requirements.

Related Documentation

Use the following related documentation to configure the multiviewer and to better understand the features available with this multiviewer. You can obtain the latest product documentation from the Documentation Library section of Grass Valley's website (www.grassvalley.com/docs/multiviewers). The multiviewer's *Installation & Service Manual* lists the specific documentation set for a given multiviewer model. The *Kaleido Multiviewers Documentation Resource Guide* (part number M770-9905) provides an overview of available documentation and explains how to access it from the Grass Valley website.

Document Number / Documentation Library	Title
M770-2800	Kaleido Software User's Manual
M770-2103	Kaleido Software Release Notes
M770-9904	Kaleido Software Product Comparison Charts
See www.grassvalley.com/docs/multiviewers	Kaleido multiviewer Documentation Library
M735-9902	Kaleido-RCP2 Guide to Installation and Operation
M876-9900	RCP-200 Guide to Installation and Operation
M770-0900	Kaleido Remote Control Protocol (Gateway) User's Guide

Document Number / Documentation Library	Title
M796-9902	Audio Bridge Terminal Guide to Installation and Operation
M407-9900	iControl Router User Guide
Published online	iControl Online Help iControl Solo Online Help
See https://www.grassvalley.com/products/nv9000/	NV9000 Control System Documentation Library

Software and Firmware Updates

You can obtain the latest software, drivers, and sample databases from the *Downloads* section of the Grass Valley's website (www.grassvalley.com/dl/multiviewers).

Feature Availability and Multiviewer Specifications

This user manual shows features and capacities that are not supported by all multiviewer models. To better understand the features that are available for your multiviewer, see the *Kaleido Multiviewer Product Comparison Guide* (part number M770-9904). The multiviewer's Installation & Service Manual has the full specifications for a given multiviewer model.

Feature Availability

When a feature shown in this document does not apply to all multiviewer models, a table is used to identify the multiviewer models that do support the feature. An example of such a table is shown below that indicates that the feature applies to the Kaleido-MX series, Kaleido-Modular-X, KMX-3921, and the KMX-49N1 multiviewers only.

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●				●

XEdit Application Shortcuts

The following is a list of shortcut keys available in XEdit to execute specific actions.

Action	Shortcut key
Save	Ctrl+S
Import sources from spreadsheet ^a	Ctrl+I
Toggle the status bar	Ctrl+Shift+B
Toggle the layout navigator	Ctrl+Shift+N
Toggle the grid	Ctrl+Shift+G
Toggle the Tools pane	Ctrl+Shift+T
Toggle the Properties pane	Ctrl+Shift+P
Toggle the Tips pane	Ctrl+Shift+H
Undo last operation	Ctrl+Z
Redo last operation	Ctrl+Y
Cut	Ctrl+X
Copy	Ctrl+C
Paste	Ctrl+V
Delete selection	Delete
Duplicate	Ctrl+D
New	Ctrl+N
Open	Ctrl+O
Save as	Ctrl+Shift+S
Close	Ctrl+W
Create grid-type layout based on selection (Auto-layout)	Ctrl+M
Select all	Ctrl+A
Send to back	Ctrl+B
Send to front	Ctrl+R
Unlock composite	F2
Zoom in	Ctrl+plus sign
Zoom out	Ctrl+minus sign

a. Available for Kaleido-IP only (see [Importing an Input Configuration from a Spreadsheet](#) on page 78).

2

Getting Started


Introduction

This chapter provides an overview of how to configure a Kaleido multiviewer.

Once the multiviewer has been connected and powered up, according to the multiviewer's Installation & Service Manual, you must use XEdit to configure the multiviewer to make the monitoring output functional. To start XEdit, refer to the multiviewer's Installation & Service Manual.

Multiviewer Signal Flow Overview

The following diagrams shows how a signal proceeds through the multiviewer. However, note that the order in which you configure the multiviewer is different from the way the signal flows through the multiviewer.

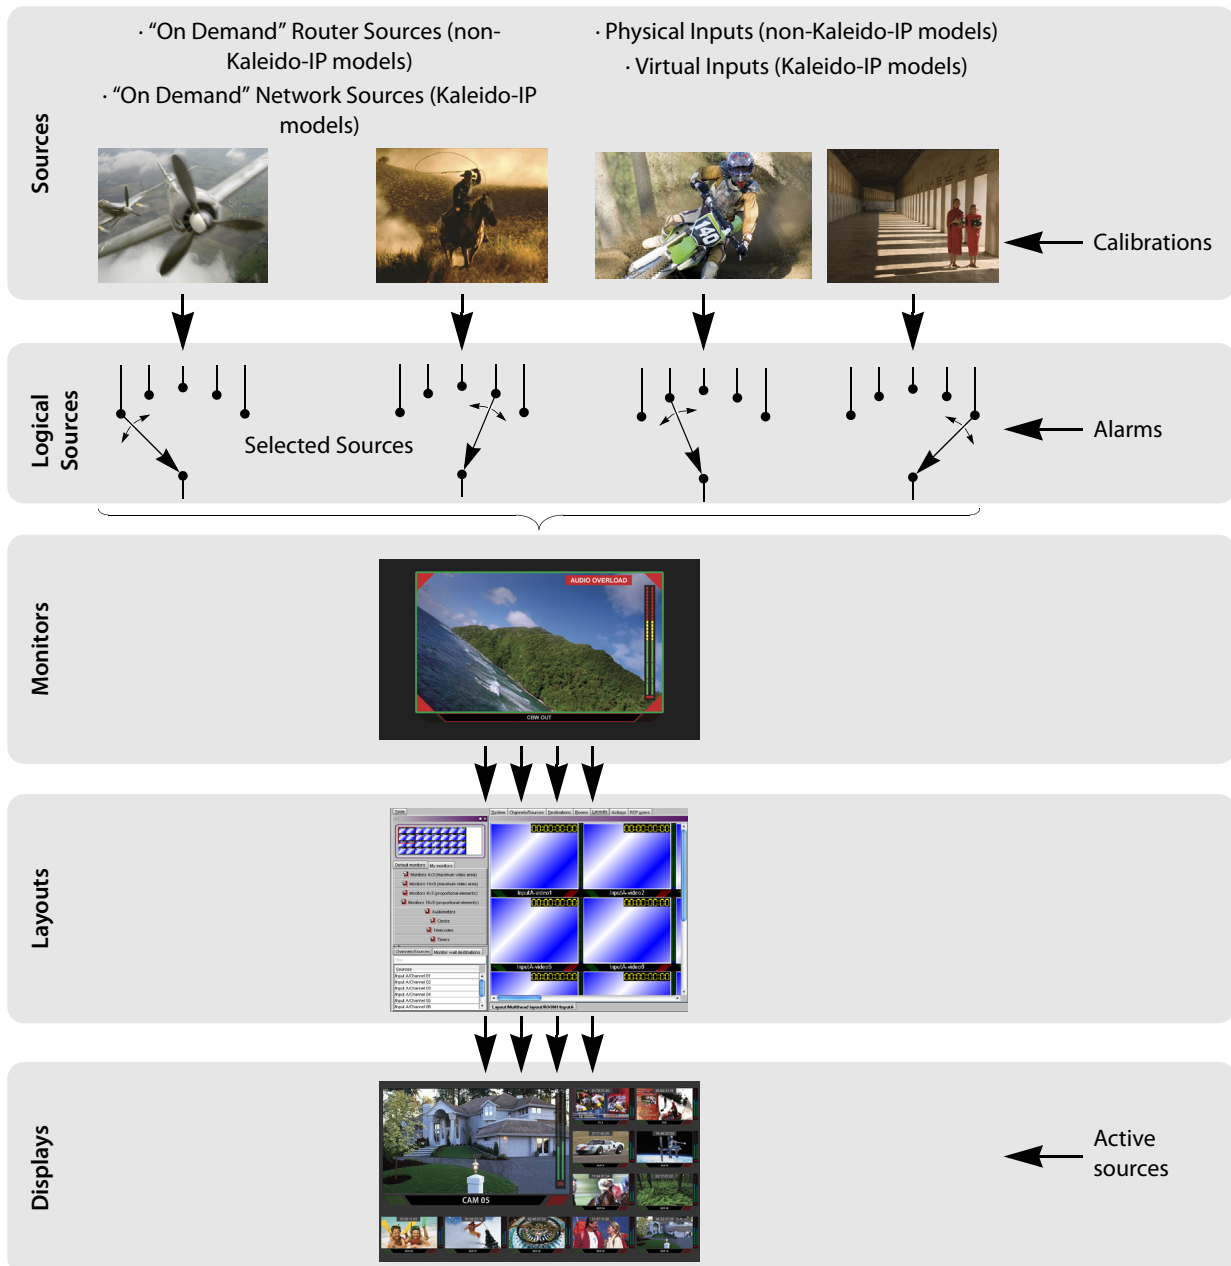


Multiviewer Sources

Depending on the multiviewer model, the source signal type and how it arrives at the multiviewer varies.

Source	Multiviewer Models	Description
"On Demand" Network Sources	Kaleido-IP series	These sources represent streams that are available to the multiviewer but are only used when they are displayed through a logical source. When these streams are not currently being displayed, the multiviewer will still periodically inspect these sources to determine their content.
Virtual Inputs	Kaleido-IP series	Virtual inputs aren't actual sources but instead represent multiviewer resources that are actively receiving streams from the moment they are configured with a valid stream IP address or URL. As a result, these streams will continuously use network bandwidth, and your network link must be scaled appropriately to handle the number of simultaneous streams you want to make available to the multiviewer.
"On Demand" Router Sources	Non-Kaleido-IP	These sources represent Router Sources available to the multiviewer through the available cabling between the multiviewer and the router (See Router Connections , on page 354). These sources are routed to the multiviewer only when they are put on a display through a logical source. Even if they are not currently used, the multiviewer will periodically poll the router control system to determine the source names (if the protocol allows it).
Physical Inputs	Non-Kaleido-IP	These sources represent physical inputs that are actively receiving SDI or analog signals.

Logical Sources

A *logical source* organizes a group of audio, video, or metadata sources, as well as alarms generated by these sources, into a series of levels. See [Logical Sources](#), on page 89.

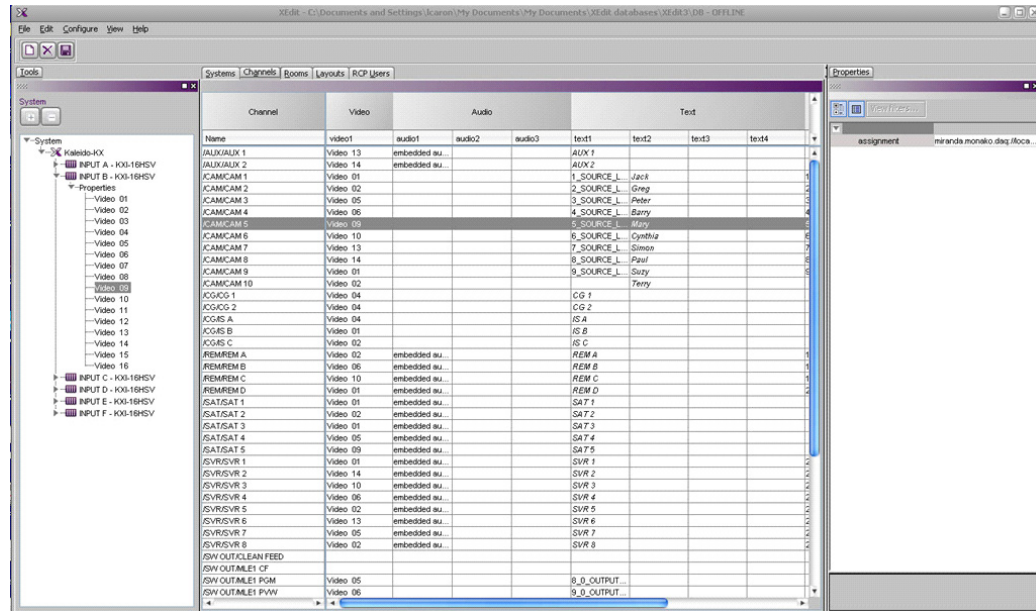


Monitors

A *monitor* is an element that is part of a layout and displays a level from a logical source. The Kaleido Software supports several types of layout elements (for example, clocks, video monitors, audio monitors, UMDs, time code monitors, etc.), as well as composite monitors. See [Adding Monitors to a Layout](#), on page 240.

Layouts


A *layout* is a visual grouping of monitors that appear on displays within a room. A layout includes different types of monitors in a variety of placements and sizes. There are two

types of layouts: *room layouts*, and *full screen layouts*. See [Managing Layouts](#), on page 225.

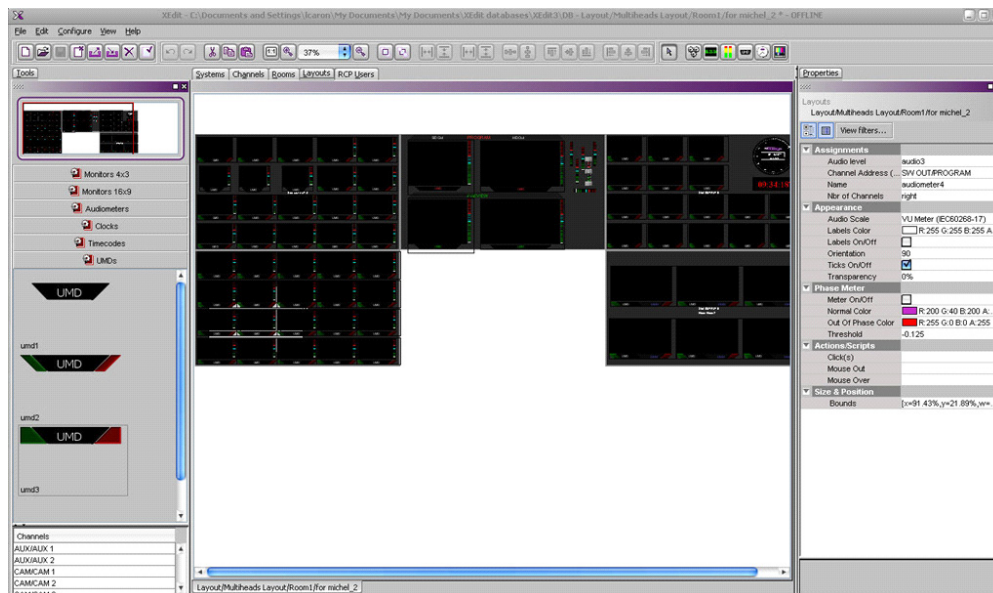

Rooms and Displays

Each *Display* forms one of the multiviewer's monitoring outputs. Add two or more *Displays* to a *Room*, to represent a physical display monitor's orientation (portrait / landscape), to establish the display's location with respect to other displays, to integrate mouse cursor movement between the displays, and so on. See [Setting Up Rooms](#), on page 191.

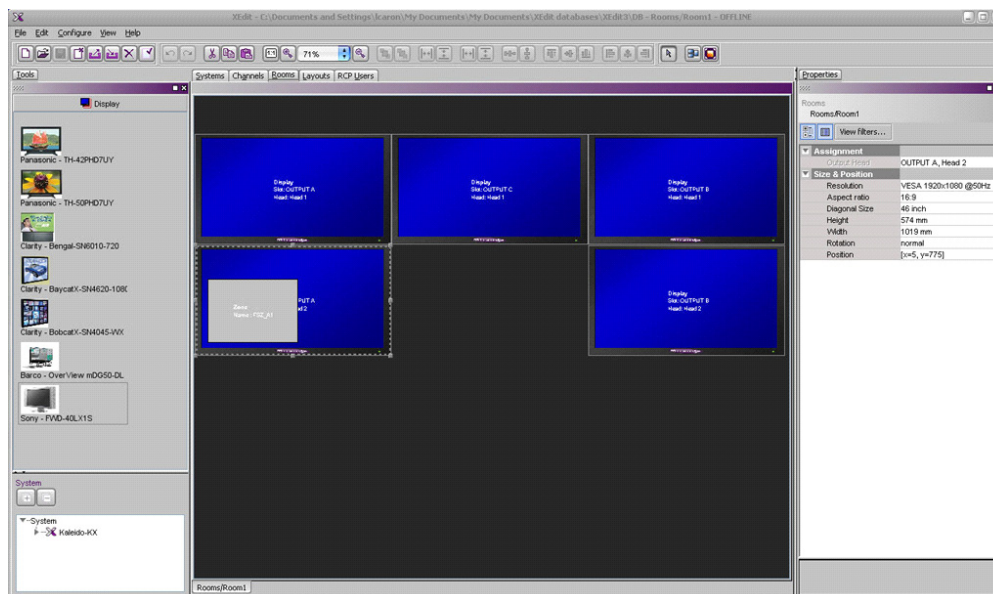

Room Configuration

Managing Kaleido Multiviewer Systems

Introduction

This section explains what constitutes a Kaleido multiviewer system, and the related workflow.

Creating and maintaining a Kaleido multiviewer system involves a number of file management tasks, including backup and restore operations. The XEdit software is used to perform these tasks. Some tasks are done in online mode, others in offline mode. Most are available in both modes.

A local database is used as a workspace to save layouts and related configuration data temporarily while you are building your Kaleido multiviewer system in offline mode. If you need to build more than one system, you can keep working with the same database, and use the backup tool to save the data for each system separately. To further work on a specific system you would then use the restore backup tool. See [Managing Multiple Databases Efficiently](#) on page 60 for an overview of the recommended workflow.

Key Concepts

The name used in the Kaleido Software to represent a multiviewer model is shown in [Representation of Multiviewer Models in Kaleido Software](#), on page 27. See the *Kaleido Multiviewer Product Comparison Guide* for detailed information about the capacities of each multiviewer model. See the multiviewer's Installation & Service Guide for the multiviewer's specifications. See [Related Documentation](#), on page 13.

Term	Description
System	A <i>Kaleido-X</i> system represents a grouping of equipment, including one or more multiviewers that use the <i>Kaleido Software</i> , and a number of peripheral devices such as routers, production switchers, UMD controllers, or automation systems. In XEdit, you work on one multiviewer at a time. Each multiviewer is stored as a separate database.
Kaleido-X	The compact Kaleido-X (4RU) multiviewer supports 32 inputs and 4 multi-image outputs. The Kaleido-X (7RU) multiviewer can display 96 inputs over up to 8 displays of any resolution and orientation. The Kaleido-X (7RU) built-in routing capability offers switching of 96 unprocessed inputs to 48 HD/SD outputs for feeding monitors, test equipment, master control or production switchers, ISO recorders, or other multi-image processors.
Expansion system	By using a mid-plane expansion module, two <i>Kaleido-X (7RU)</i> frames can be connected to display up to 192 video inputs over up to 12 displays. In XEdit, an expansion system is identified as <i>Kaleido-X (14RU)</i> .

Term	Description
KMX-3921	Each KMX-3921 card can display up to nine 3Gbps, HD, or SD inputs in up to nine video windows across one or two high-resolution outputs. For certain frame models, combine up to six KMX-3921 cards, to configure a dual- or quad-output system supporting up to 54 inputs. In XEdit, system presets are available for KMX-3921 9×2, KMX-3921 18×4, KMX-3921 27×4, KMX-3921 36×4, and KMX-3921 54×4.
KMX-49N1	Each KMX-4911 or KMX-4921 card can display up to nine SMPTE ST 2022-6, ST 2110, 3Gbps, HD, or SD inputs in up to nine video windows across one or two high-resolution outputs. Combine up to six KMX-49N1 cards, to configure a dual- or quad-output system supporting up to 54 inputs. In XEdit, system presets are available for KMX-49N1 9×2, KMX-49N1 18×4, KMX-49N1 27×4, KMX-49N1 36×4, and KMX-49N1 54×4.
Kaleido-MX	The Kaleido-MX is available in two form factors (1 RU, and 3 RU), the Kaleido-MX supports up to 64 video inputs, and up to four multiviewer outputs.
Kaleido-MX 4K	Available in two form factors (1 RU, and 3 RU), and four configurations, the Kaleido-MX 4K ultra high-definition multiviewer can monitor up to 64 video inputs, on a 4K UHD display, without visible quadrants.
Kaleido-Modular-X	The Kaleido-Modular-X can use FlexBridge coax cable bridging between the input and output modules which allows for the installation of the input stage next to the router or sources, and the output stage next to displays, for simpler, cost-effective cabling with none of the risk associated with HDMI extenders. The Kaleido-Modular-X supports up to 64 video inputs, and up to four multiviewer outputs.
Kaleido-X16	The Kaleido-X16 is a compact, ultra-quiet multiviewer in a 1RU frame, with 16 inputs and two outputs. It provides a subset of the features of the Kaleido-X 4RU and 7RU models. There are two types of Kaleido-X16: Kaleido-X16-S (single head) and Kaleido-X16-D (dual head).
KMV-3901/3911	The KMV-3901, the first member of the Kaleido-Modular series, is a multiviewer on a single Densité card, with eight inputs and two outputs. Designed to address production-type applications, it supports a subset of the features offered by the other Kaleido multiviewer models: • Processing: Video scaling, Video cropping, 3Gbps (level A only) support, KXI-DVI-Bridge support. • Probing: Display of audio levels (up to 16 audio signals per head), time codes (based on URS signal from a REF-1801 Densité card, or on embedded reference signal), video format and audio format. • GPIO interface: Support for 8 GPI inputs and 2 GPI outputs. The KMV-3911 multiviewer also supports up to two monitoring outputs.
Kaleido-IP	The Kaleido-IP can monitor and display 4K, HD and SD television programs distributed over IP, across two 4K or HDTV displays— or, in the case of a Kaleido-IP VM, through one streaming output. It supports a variety of compressed and uncompressed video and audio formats over IP.

Term	Description
Kaleido-XQUAD	The Kaleido-XQUAD is available in two versions: the Kaleido-XQUAD features four 3Gbps/HD inputs and a single multiviewer output (HDMI/HD-SDI), and the Kaleido-XQUAD-DUAL offers eight 3Gbps/HD inputs and two multiviewer outputs. Both versions offer exceptional display flexibility and outstanding space and energy efficiency, using a 1RU half width frame with silent ventilation for installation within studios. The multiviewer can be used for small installations with one or two displays, and in much larger configurations using multiple Kaleido-XQUADs.
XEdit	XEdit is the Kaleido Software's layout editor, a software that is run on a remote computer. Its purpose is to define your Kaleido multiviewer system components, including external devices, create rooms, logical sources, layouts, and RCP user definitions, and perform all the configurations required for successful operation of the multiviewer. XEdit has two modes of operation: you can work <i>offline</i> in a local workspace and then apply your changes by exporting them to the multiviewer, or you can connect to a multiviewer and work in online mode, directly on the system. Changes made in online mode take effect immediately on the monitor wall.
Database	Layouts and related configurations for your Kaleido multiviewer system are created in XEdit. All this information is stored in a database. When you work in offline mode, you load the appropriate database in a local workspace on the PC where XEdit is used. XEdit can export this database to a multiviewer, or import the current layouts and configurations from a multiviewer into the local workspace on your PC. For changes you make in offline mode to take effect on the monitor wall, you must export the database to a multiviewer. Conversely, any configuration change you make in online mode must be imported from the multiviewer into your local workspace if you want to be able to make further changes in offline mode.
Cluster	A cluster refers to multiple multiviewers, configured so that they can be operated as a single system from a room comprising up to 48 displays fed by the different multiviewers' outputs. The complete cluster system can include up to 128 displays. See Creating a Cluster on page 45.
Cascade	A cascade refers to up to three <i>Kaleido-X16</i> or up to three <i>KMV-3901/3911</i> multiviewers, configured so that they can be operated as a single system from a room. The cascade makes it possible to monitor up to 48 video inputs for a <i>Kaleido-X16</i> cascade, or up to 24 video inputs for a <i>KMV-3901/3911</i> cascade, on a single monitor wall display. Depending on your purposes, you may want to monitor both baseband and IP sources at once, on the same monitor wall display. This can be achieved by configuring a hybrid cascade system, involving one <i>Kaleido-IP</i> multiviewer and one <i>Kaleido-X</i> or <i>Kaleido-X16</i> multiviewer. Refer to the <i>Kaleido-X</i> or <i>Kaleido-X16</i> Installation & Service manual for more information. See Related Documentation , on page 13.

Term	Description
Logical source	A <i>logical source</i> (called a <i>channel</i> , in earlier versions of the software and documentation) refers to a group of physical audio, video, or metadata sources, and text attributes. A logical source can be used as a whole, and assigned to a virtual monitor. See Logical Sources on page 89, for details.
Cards	Cards are added to, and removed from a Kaleido-X, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X multiviewer (see Managing Cards in a Kaleido-X or KMX-3901 System Representation on page 54). There are different, specialized types of cards: input cards, output cards, a GPI/genlock card, expansion cards and internal router cards. Refer to the appropriate <i>Installation & Service Manual</i> , for more information. See Related Documentation , on page 13.
Virtual card slots	Certain cards now integrate features that previously would have been implemented on two or more physically separate cards. From a software point of view, these integrated cards still exist as separate cards that are located in virtual card slots. For example, in XEdit, the Kaleido-X16 virtual card slots contain representations of GPI/genlock, input, output, and internal router cards that are equivalent to their physical counterparts on the Kaleido-X (4RU) and Kaleido-X (7RU) models. Likewise, the KMV-3901/3911 multiviewers have virtual card slots with representations of GPI/genlock, input, and output cards. There are, however, some differences in how the Kaleido-X16 and KMV-3901/3911 multiviewer models are presented in XEdit, compared to the Kaleido-X models: • Cards in virtual slots are always present by default, and cannot be removed in XEdit. • There are no status icons next to a virtual card slot (e.g., inserted or empty card slot icon). In XAdmin the virtual slot/card concept is represented as follows: • Cards in virtual slots have no name. • There is no reset button associated with each card. Instead, there is a single multiviewer reset button that sends a reboot command to the multiviewer. • Cards in virtual slots have no serial number. Instead, there is one serial number for the multiviewer. • Cards in virtual slots do not have individual IP addresses. There is only one IP address, which is associated with the multiviewer.
Calibration	Calibration refers to the configuration of different card attributes. For example, an output card's <i>Brightness</i> and <i>Contrast</i> attributes can be calibrated, or an input card's <i>Silence threshold</i> attribute. See Calibrating the Kaleido Software on page 107, for details.
Peripheral devices	A peripheral device is an external piece of equipment, such as a router or production switcher, that can be connected to the multiviewer.

Representation of Multiviewer Models in Kaleido Software

The name used in Kaleido Software to represent a multiviewer model is shown in the table below.

In XEdit Select	In XAdmin Select	To represent
Kaleido-X16-S	Kaleido-X16-S	A Kaleido-X16 (single output) frame
Kaleido-X16-D	Kaleido-X16-D	A Kaleido-X16 (dual output) frame
Kaleido-X (4RU)	Kaleido-X (4RU)	A Kaleido-X (4RU) frame
Kaleido-X (7RU)	Kaleido-X (7RU)	A Kaleido-X (7RU) frame
Kaleido-X (14RU)	Kaleido-X (14RU)	Two Kaleido-X (7RU) frames, with expansion cards
KMV-3911	KMV-3911	Any Kaleido-XQUAD, or Kaleido-XQUAD-DUAL system
KMX-3901 / KMV-3911	KMX-3901	A KMX-3901 system
KMX-3901 / KMV-3911	KMX-3901 / KMV-3911	KMX-3901 / KMV-3911 system
KMX-3901	KMX-3901	Any Kaleido-Modular-X system, Kaleido-MX, or Kaleido-MX 4K system
KMX-3921-9x2	KMX-3921-9x2	A KMX-3921 9 × 2 or 9 × 1 system
KMX-3921-18x4	KMX-3921-18x4	A KMX-3921 18 × 4, 18 × 3, 18 × 2, or 18 × 1 system
KMX-3921-27x4	KMX-3921-27x4	A KMX-3921 27 × 4, 27 × 3, 27 × 2, or 27 × 1 system
KMX-3921-36x4	KMX-3921-36x4	A KMX-3921 36 × 4, 36 × 3, 36 × 2, or 36 × 1 system
KMX-3921-54x4	KMX-3921-54x4	A KMX-3921 54 × 4, 54 × 3, 54 × 2, or 54 × 1 system
KMX-49N1-9x2	KMX-49N1-9x2	A KMX-49N1 9 × 2 or 9 × 1 system
KMX-49N1-18x4	KMX-49N1-18x4	A KMX-49N1 18 × 4, 18 × 3, 18 × 2, or 18 × 1 system
KMX-49N1-27x4	KMX-49N1-27x4	A KMX-49N1 27 × 4, 27 × 3, 27 × 2, or 27 × 1 system
KMX-49N1-36x4	KMX-49N1-36x4	A KMX-49N1 36 × 4, 36 × 3, 36 × 2, or 36 × 1 system
KMX-49N1-54x4	KMX-49N1-54x4	A KMX-49N1 54 × 4, 54 × 3, 54 × 2, or 54 × 1 system
Kaleido-IP-2	Kaleido-IP-2	A Kaleido-IP X300, or X100 frame with two LAN connections
Kaleido-IP-4	Kaleido-IP-4	A Kaleido-IP X120, X110, X320, X310, or X300 frame with four LAN connections
Kaleido-IP-6	Kaleido-IP-6	A Kaleido-IP X320, X310, or X300 frame with six LAN connections


Opening XEdit Software

When using XEdit offline, you work inside a workspace located on your client PC. When you first open XEdit, a window will prompt you for the location for this workspace. It is recommended to consider this workspace as a sandbox into which you will always first import the database you want to work on during the current session, and from which you will export the database at the end of the session.

To open XEdit

- 1 Double-click the XEdit icon on your desktop: .


Note: If you have installed multiple versions of XEdit, the launcher icon on your desktop opens the last version you installed. To open a specific version of XEdit, use the launcher icon on the Start menu (under **All Programs**).

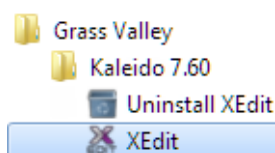


A startup screen appears, followed by the **Database Location** window.



- 2 When prompted to specify the database location, click **Browse**.

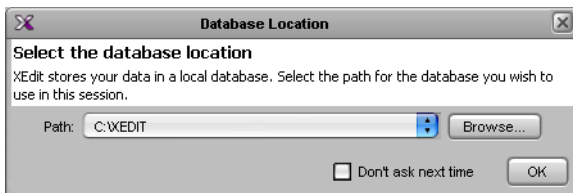


- 3 In **Select the database location**, locate an appropriate directory for your workspace, and then click **Open**.

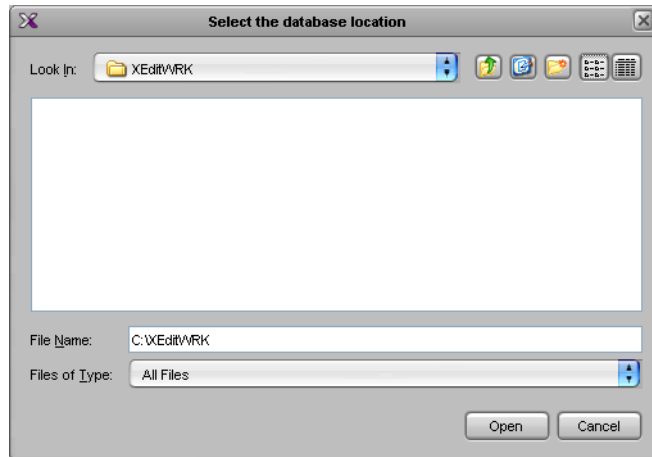

If this is not the first time you open XEdit, and you are satisfied with the location of your local workspace, then select the **Don't ask next time** check box, to avoid being prompted every time you open XEdit.

- 4 Click **OK** to close the **Database Location** window.


XEdit's main application window appears. This may take a few seconds.

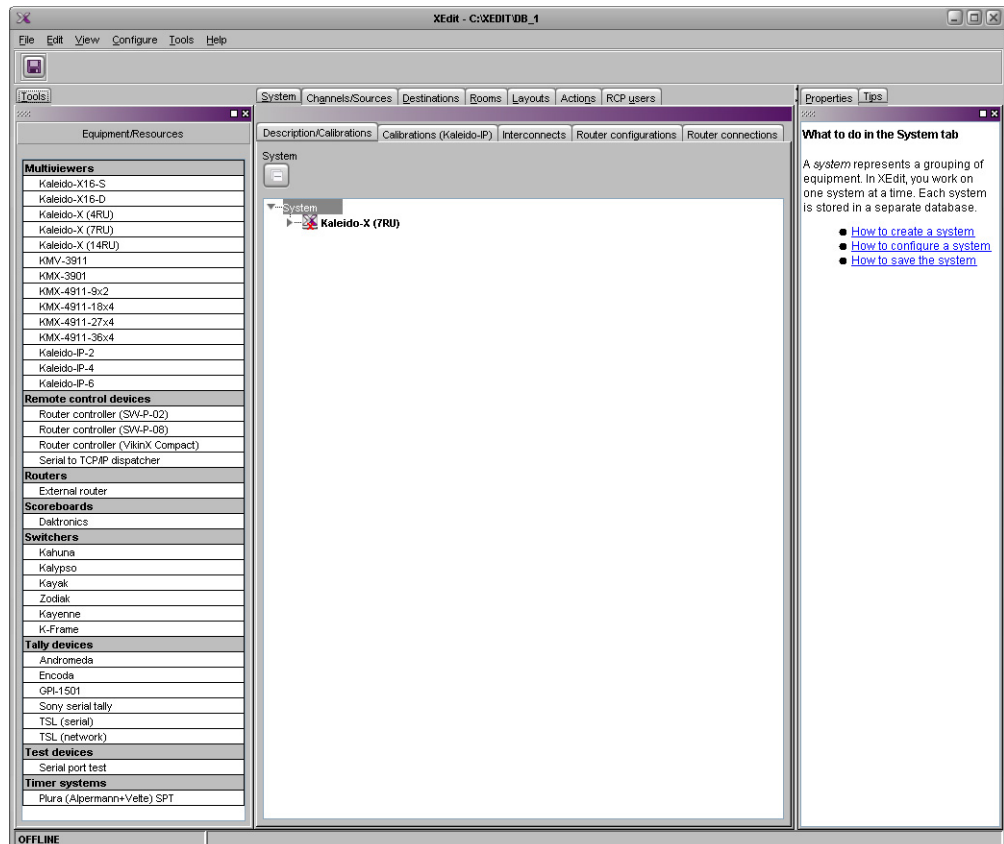

When first opening XEdit in offline mode, the database contains the default configuration for a Kaleido-X (7RU) system, including a fully-populated frame (all cards present) and a set of predefined logical sources.

To customize the layout of the XEdit application window

- Resize the window, and its three panes, by dragging the window's borders, corners, and pane splitters.
- Move the **Tips**, **Tools**, and **Properties** panes between the left and right panes, and reorder them, by clicking their handle and dragging them to their final location.
- Close the **Tips**, **Tools**, and **Properties** panes by clicking their x button.
- Undock the **Tips**, **Tools**, and **Properties** panes from the main window, by clicking their square button.

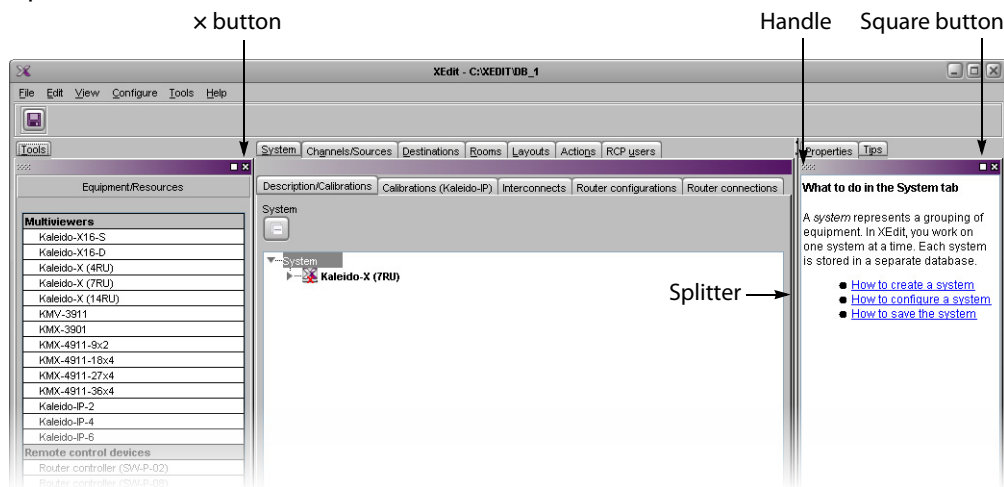

To restore the default application layout

- 1 Dock the **Tips**, **Tools**, and **Properties** panes, if they are undocked, by clicking their x button.
- 2 On the **View** menu, point to **Panes and tabs**, and then click **Restore default window settings**.

To close XEdit

- On the **File** menu, click **Exit**. Alternatively, click the x button in the upper right corner of the main application window.

Difference between Online and Offline Modes

When using XEdit in *online* mode, any changes made are applied and stored directly on the multiviewer and any change you make to your multiviewer's configuration takes effect immediately *on the multiviewer* itself; your local database is not involved. The online mode is not limited to basic system configuration; changes can also be made to existing logical sources, rooms, layouts, RCP users, etc.

Note: In the case of a Kaleido-IP, you must work in online mode at least once, to obtain the list of programs and elementary streams under each transport stream.

When using XEdit in *offline* mode, all changes are stored locally on your PC, and the database must be exported to the multiviewer for the changes to take effect.


Using XEdit in Online Mode

Once XEdit is open, proceed as follows.


Connecting to a Multiviewer

To connect to a multiviewer


- 1 On the **Configure** menu, click **Connect**.

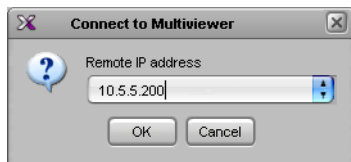

- 2 In **Connect to Multiviewer**, Enter the *management* IP address for the multiviewer you want to configure or select a multiviewer from the drop-down list, and then click **OK**.
Your recent connections, and all the multiviewers that are on the same subnet as your PC are automatically included in the list.
- 3 If access control is enabled for this multiviewer, then XEdit prompts you for a password. Type the password associated with the RCP user "Admin", and then click **Log on**.

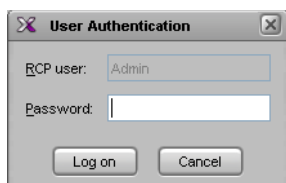

The selected system's hierarchical list appears in XEdit's main pane, showing the multiviewer model, system name and IP address, and the status bar shows the connection status.

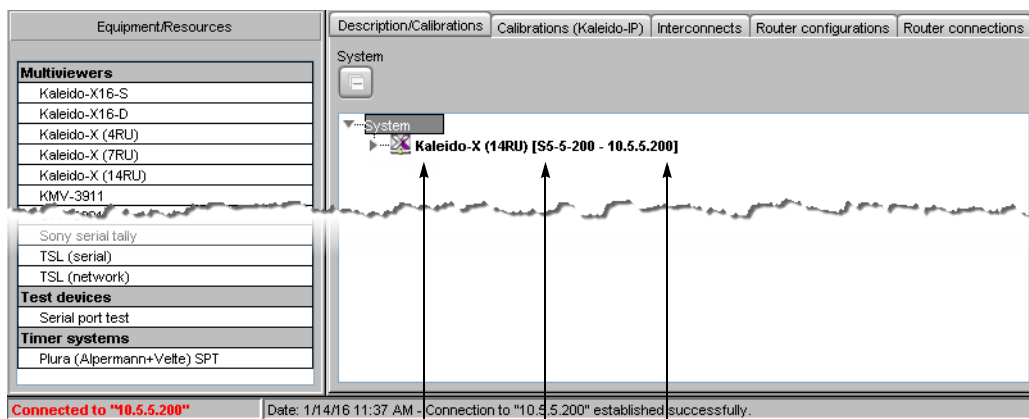


Connection status

Multiviewer model


System name

System IP address

 It is also possible to verify which version of the Kaleido Software is installed on this multiviewer, by moving the pointer to the system name in the System list. A tip appears, showing this information.



In the case of a cluster system, cluster members are listed in alphabetical order based on the system name, which appears first, and the multiviewer you are currently connected to is highlighted.

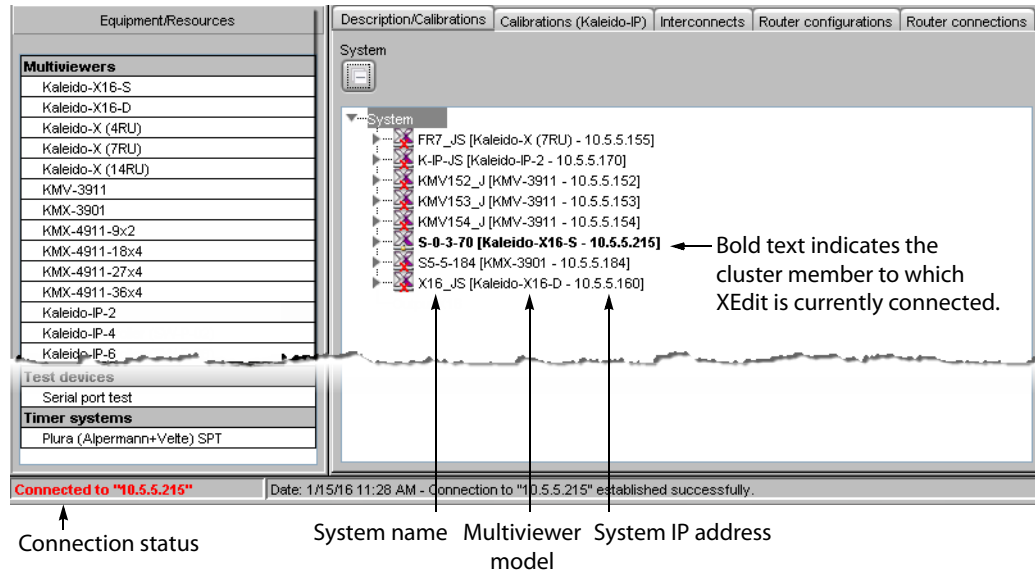

Notes

- When using XEdit in online mode, some database functions, such as **Export**, **Import**, and **Restore backup**, are not available. Any changes made by the user are not kept locally on the user's PC, but applied directly on the multiviewer. To retrieve the data set from the multiviewer, either disconnect from the multiviewer, and then use the **Import** function, or use the **Create backup** function to save a copy of the database. A database can be restored from a backup repository to your local workspace later. See [Managing Multiple Databases Efficiently](#) on page 60 for a description of the recommended workflow.
- It is not recommended to have two or more users simultaneously connected online to the same multiviewer system for editing.

Disconnecting from a Multiviewer

To disconnect from a multiviewer

- On the **Configure** menu, click **Disconnect**.

XEdit switches to its local workspace, and displays the **OFFLINE** status on the status bar.




Enabling Access Control in XEdit

XEdit supports a simple authentication mechanism to prevent unauthorized users from connecting or exporting to a multiviewer. When access control is enabled, the password associated with the RCP user *Admin* (see [Changing an RCP User's Name or Password](#) on page 345) is enforced.

To enable access control in XEdit

- 1 Connect to the multiviewer you want to protect (see [Connecting to a Multiviewer](#) on page 32).
- 2 On the **Configure** menu, select the **Access control** check box.
XEdit prompts you for a password.

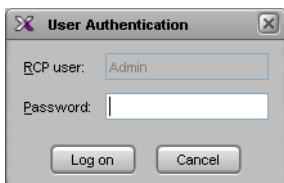


- 3 Type the password associated with the RCP user *Admin*, and then click **Log on**.
Access control is now enabled for this multiviewer.

Disabling Access Control in XEdit

To disable access control in XEdit

- 1 Connect to the multiviewer you want to unprotect (see [Connecting to a Multiviewer](#) on page 32).
XEdit prompts you for a password.

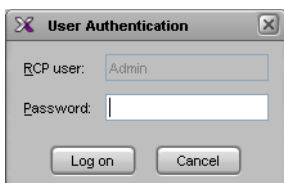

- 2 Type the password associated with the RCP user *Admin*, and then click **Log on**.
- 3 On the **Configure** menu, clear the **Access control** check box.
Access control is now disabled for this multiviewer.

Importing a Database

To import a database


- 1 On the **Configure** menu, point to **Database**, and then click **Import**.

The **Import from Multiviewer** window appears, prompting you for the IP address of the multiviewer whose database you want to import.

Your recent connections, and all the multiviewers that are on the same subnet as your PC are automatically included in the list.


- 2 Select the multiviewer from the list (if present), or type the appropriate IP address in the box, and then click **OK**.

A window appears, prompting you to confirm that you really want to import the database from the multiviewer.

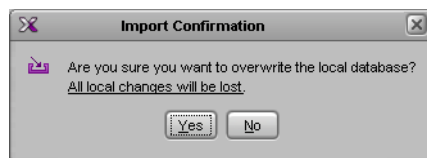


- 3 Click **Yes**.

A progress window appears, followed by a message stating whether the import succeeded or not.

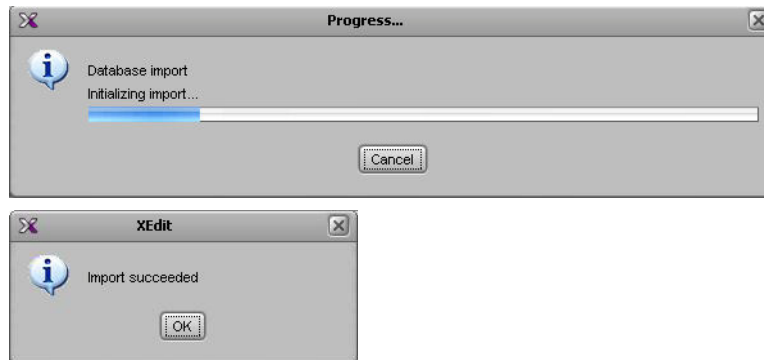


- 4 Click **OK**.

The imported data has replaced the former content in your local workspace. The originating system's multiviewer model and IP address now appear in the System list.

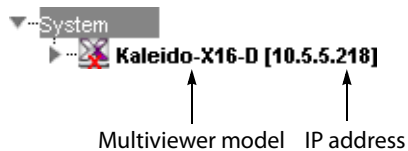

In the case of a cluster system, the System list shows cluster members in alphabetical order based on their system name, which appears first and is followed by the multiviewer model and IP address.

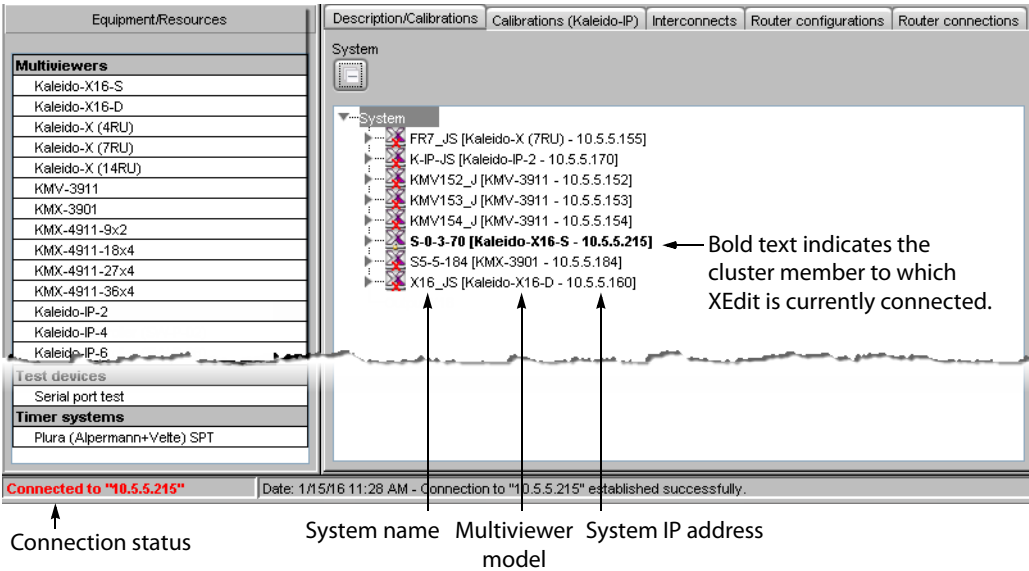

Exporting a Database

Exporting a Single-Multiviewer Database

To export a single-multiviewer database


- 1 On the **Configure** menu, point to **Database**, and then click **Export**.

The **Export to Multiviewer** window appears, prompting you for the IP address of the multiviewer to which you want to transfer the database.

Your recent connections, and all the multiviewers that are on the same subnet as your PC are automatically included in the list.

- 2 Select the multiviewer from the list (if present), or type the appropriate IP address in the box, and then click **OK**.

A window appears, prompting you to confirm that you really want to export data to the multiviewer.

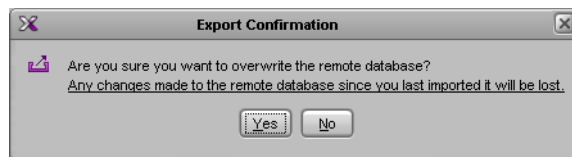


- 3 Click **Yes**.

- 4 If access control is enabled for this multiviewer, then XEdit prompts you for a password. Type the password associated with the RCP user "Admin", and then click **Log on**.



A progress window appears, followed by a message stating whether the export succeeded or not.

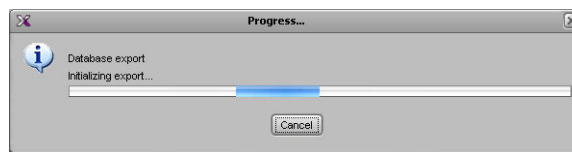

- 5 Click **OK**.


All data on the remote system is now replaced with content from the local workspace.

Exporting a Cluster Database

To export a cluster database

- 1 On the **Configure** menu, point to **Database**, and then click **Export**.

The **Export Cluster** window appears, prompting you to confirm the set of multiviewers to which you want to transfer the database.

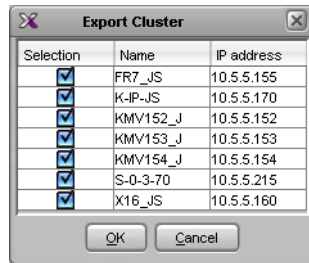

If you were working in offline mode on a database imported from your existing cluster system, and all cluster members are currently available, then click **OK** to proceed.

On the other hand, if a cluster member happens to be unavailable, or if you are cloning a cluster configuration to a different set of multiviewers, you may need to remove members from the selection and change IP addresses.


IMPORTANT

Partial exports should be limited to cases where you had to replace a defective cluster member and need to bring its replacement into service without disrupting operations.

Before performing a partial export, you must verify that the cluster configuration has remained unchanged between your local version and the online version currently on the system. See below.


- a To change an IP address, double-click an IP address, and then type the IP address of the actual multiviewer that is to receive the corresponding database shown under Name.
- b When a cluster member is not currently online, clear the corresponding check box. Similarly, you may remove members if your target cluster does not have as many members as the current database does, or if you wish to update members that were previously unavailable with the same database you already exported to the other cluster members.
- c Once the selected IP addresses match the actual multiviewers that are set to receive the database, click **OK**.
In the case of a partial export, a warning appears prompting you to confirm your choice; click **OK** to proceed.

A window appears, prompting you to confirm that you really want to export the database.


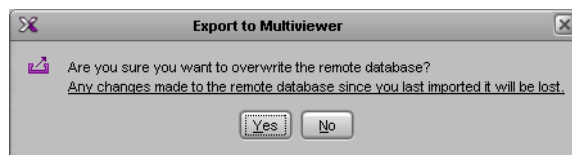


- 2 Click **Yes**.

- 3 If access control is enabled for a multiviewer, then XEdit prompts you for a password. Type the password associated with the RCP user “Admin”, and then click **Log on**.

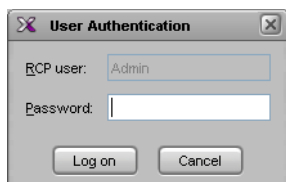

 A progress window appears, followed by a message stating whether the export succeeded or not.

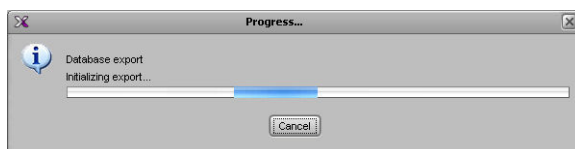

- 4 Click **OK**.
All selected cluster members now have the latest configuration from the local workspace.

Creating a Backup

Use the **Create backup** and **Restore backup** functions to manage copies of your system database on your PC. This is equivalent to the usual **Save as** and **Open** functions, and is useful not only for data recovery purposes but also on sites where more than one system must be maintained.

Backing Up the Current Database

To back up the current system database

- 1 On the **Configure** menu, point to **Database**, then to **Create backup** and click **All**.
The **Create Backup** window appears.
- 2 In **Create Backup**, select the location on your PC where you want to save a backup copy of the current database content, and then click **Save**.
The database is saved as a ZIP file.

Backing Up Resolutions

To back up resolutions from the current system

- 1 On the **Configure** menu, point to **Database**, then to **Create backup** and click **Resolutions**.
The **Create Backup** window appears.
- 2 In **Create Backup**, select the location on your PC where you want to save a backup copy of the resolutions from the current database, and then click **Save**.
The resolutions are saved as an XEdit collection file, with a `.xcol` extension.

Backing Up Audio Scales

To back up audio scales from the current system

- 1 On the **Configure** menu, point to **Database**, then to **Create backup** and click **Audio scales**.
The **Create Backup** window appears.
- 2 In **Create Backup**, select the location on your PC where you want to save a backup copy of the audio scales from the current database, and then click **Save**.
The audio scales are saved as an XEdit collection file, with a `.xcol` extension.


Restoring a Backup

Restoring a Database from a Backup

Note: When XEdit restores a *database backup*, it replaces the content of the local workspace with data from the backup (saved as a file on your PC). This cannot be undone. Always create a backup of the current data before restoring data from a different source. See [Managing Multiple Databases Efficiently](#) on page 60 for an overview of the recommended workflow.

To restore a backup database

- 1 On the **Configure** menu, point to **Database**, and then click **Restore backup**.
The **Select Backup** window appears.
- 2 In **Select Backup**, navigate to the appropriate backup file on your PC (a ZIP archive, in the case of a full database backup), select it, and then click **Open**.
A message appears prompting you to confirm your choice.

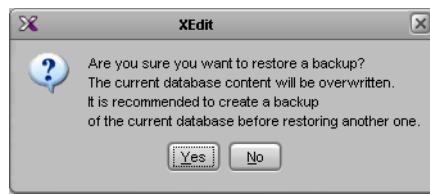

- 3 Click **Yes**.
- 4 Once the operation has completed, click **OK** to continue.
The former content of the local workspace is entirely replaced with data from the backup.

Restoring Resolutions or Audio Scales from a Backup

To restore resolutions or audio scales from a backup

- 1 On the **Configure** menu, point to **Database**, and then click **Restore backup**.
The **Select Backup** window appears.
- 2 In **Select Backup**, navigate to the appropriate backup file on your PC (an XEdit collection file, with a `.xcol` extension), select it, and then click **Open**.
The content of the local workspace is updated with data from the backup.

Note: XEdit will *not* prompt for confirmation.

Creating a Single Multiviewer System

When first opening XEdit in offline mode, the database contains the default configuration for a Kaleido-X (7RU) system, including a fully-populated frame (all cards present) as a starting point. If you have a different multiviewer model that is not a Kaleido-X (7RU) system, then you must replace this initial configuration with one that matches your actual system with the following procedure.


Notes

- The name used in Kaleido Software to represent a multiviewer model is shown in [Representation of Multiviewer Models in Kaleido Software](#), on page 27.
- For the purpose of creating a Kaleido-X (14RU) expansion system, this model is considered as a single multiviewer.
- For instructions on creating a *cluster* system, see [Creating a Cluster](#), on page 45.
- For instructions on creating a *cascade* system, refer to the appropriate *Cascade Step-by-Step Configuration* guide. See [Related Documentation](#), on page 13.


To create a system with a single multiviewer

- 1 Open XEdit.
- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.

The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.

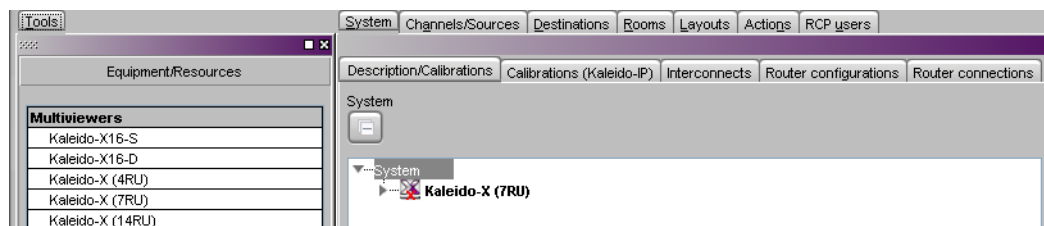

- 3 Right-click the current multiviewer in the System list, and then select the appropriate multiviewer model, from the **replace with** options on the menu.

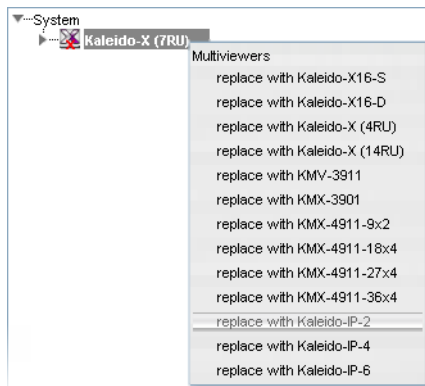


Notes

If you are working in the online mode, the available multiviewer models shown in the menu varies according to the current model. If the current model is a Kaleido-IP, then only other Kaleido-IP models can be selected.




Conversely, if the current model is *not* a Kaleido-IP, then *none* of the Kaleido-IP models can be selected.

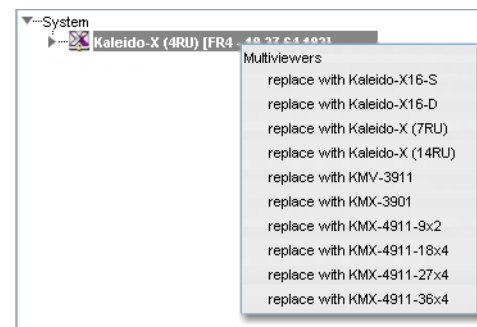

See [Using XEdit in Online Mode](#), on page 32 and [Managing Multiple Databases Efficiently](#), on page 60 for more information about the online and offline modes.


The name used in Kaleido Software to represent a multiviewer model is shown in [Representation of Multiviewer Models in Kaleido Software](#), on page 27.

A message appears, prompting you to confirm your choice.

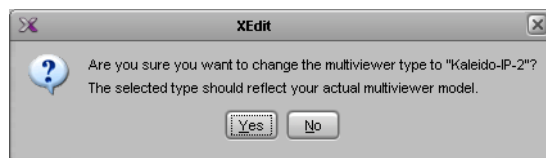

4 Click **Yes**.

The next message prompts you about populating the database with a factory-default configuration for the selected multiviewer model.

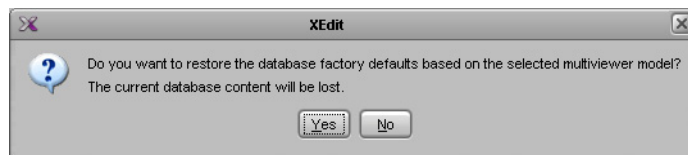

5 Click **Yes** to have the system populated with factory defaults for the selected multiviewer model. See [Restoring the Factory-Default Configuration](#) on page 57 for more information.

Click **No**, if you want to reuse the current room and layout configuration with the new multiviewer model. For instance, you may want to convert two 7RU multiviewers into an expansion system. Refer to the "Kaleido-X (7RU) Expansion" chapter in the

Kaleido-X (7RU) Installation & Service Manual for more information. See [Related Documentation](#), on page 13.

IMPORTANT

Databases created for different multiviewer models are incompatible with each other. It is important to select the proper model at this stage for the actual hardware you are using.

- 6 Select the relevant peripheral devices in the equipment library and drag them onto the root of the System hierarchical list in the main window. Alternatively, right-click the list root, and then select the appropriate peripheral device from the “insert...” options on the menu.

All peripheral devices added to the system appear in the System list.

- 7 If you are going to control the multiviewer, from a device using one of the supported TCP/IP router protocols — SW-P-02, SW-P-08, Network Modular, or NVEP Router (NP0016) —, then configure the router level to be controlled: click the multiviewer in the System list, and then, in the **Properties** pane, specify the logical router and level you want to control, by selecting the appropriate values in the **Router** and **Router level** lists under **TCP/IP Router control**.


Notes

- As of version 5.00 of the Kaleido Software, the router selected by default for TCP/IP control is the *KX Router* logical router
 - To control the *KX Router* logical router from an external device or application, this device or application must support the *NVEP Router (NP0016)* protocol (see [Built-in Communications Protocols](#) on page 358, for more information).
-

- 8 On the **File** menu, click **Save**. Alternatively, click the toolbar’s Save button.
Changes to the system are saved.

Cluster

As of version 4.00 of the Kaleido Software, it is possible to configure a *cluster system*, allowing operation of layouts sharing output signals from multiple multiviewers fed by a router, while using only one mouse, and one Kaleido-RCP2 or RCP-200. See [Creating a Cluster](#), on page 45, for more information.

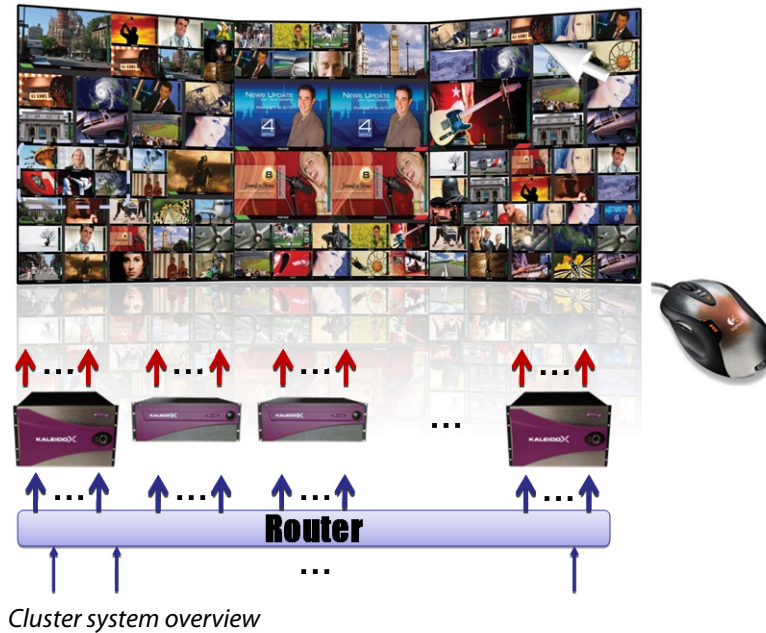

Creating a Cluster

Clusters can be created and configured in both online and offline modes. Creating a cluster involves the following steps:

- 1 add multiviewers to your system
- 2 configure new rooms that include displays fed by the different multiviewers
- 3 create layouts for the new rooms
- 4 replicate RCP users from one multiviewer to all other systems that are part of the cluster
- 5 replicate custom display resolutions from one multiviewer to all others
- 6 make a backup of your cluster configuration

IMPORTANT

It is important to follow the indicated sequence: **first** add the multiviewers to your system, then create **new** rooms, and only then create the layouts. Although first copying the same single-multiviewer database to the multiviewers you wish to join in a cluster may look like an option, this method is not supported.

Adding Multiviewers to a Cluster

Notes

- Any multiviewer you want to add to a cluster must have the Kaleido Software version 4.00 or later, and all members of a cluster must have the same Kaleido Software version.
- Each multiviewer you want to add to a cluster must have a unique name.
- If you change the system name or IP address of a cluster member while another cluster member is offline or otherwise unavailable, the cluster's integrity will be broken. If you attempt to make such a change, XAdmin will alert you of the situation, prompting you to cancel the operation and try again later, when all cluster members are available. If you choose to force the change, then you will need to repair the cluster (see [Repairing a Cluster System](#) on page 50).
- Changing the system name or IP address of a KMV-3901/3911 multiviewer associated with a cluster, by using the card's control panel on the Densité housing frame, or by using the KMV-3901/3911 control panel in iControl, is not supported. If this happens, then you will need to repair the cluster (see [Repairing a Cluster System](#) on page 50).
- A multiviewer can only be part of one cluster system at any time. XEdit will not let you add a multiviewer that is already included in a different cluster system.
- The name used in Kaleido Software to represent a multiviewer model is shown in [Representation of Multiviewer Models in Kaleido Software](#), on page 27.


Creating a cluster in online mode

To create a system with multiple multiviewers in online mode

- 1 Open XEdit, and then click **Connect** on the **Configure** menu, to access one of the multiviewers you want to be part of the cluster system. See [Connecting to a Multiviewer](#) on page 32.

You are now ready to add more multiviewers to the system.

- 2 In the equipment library, select *any* multiviewer model, and then drag it onto the root of the System hierarchical list.

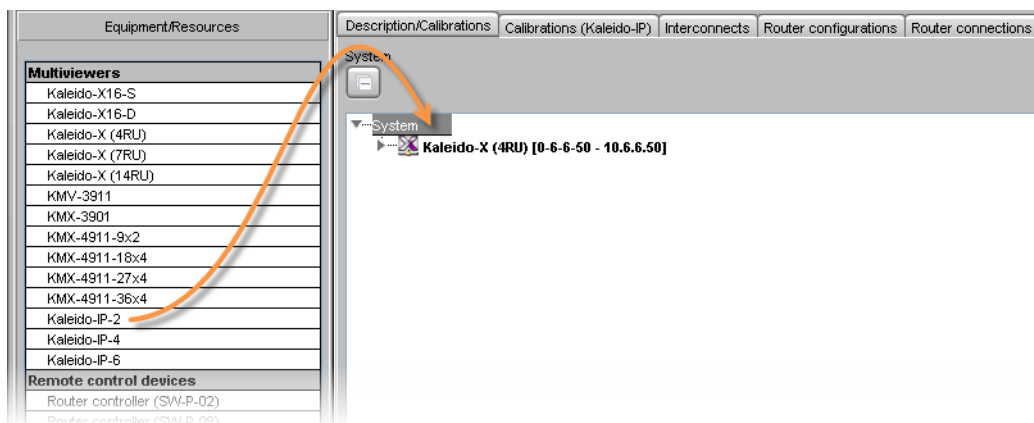

The **Add Multiviewer to Cluster** window appears.



Your recent connections, and all the multiviewers that are on the same subnet as your PC are automatically included in the list.

- 3 Select the multiviewer you want to add from the list (if present), or type the appropriate IP address in the box, and then click **OK**.

The multiviewer is added to the System list.




Note: The appropriate multiviewer model is automatically selected, based on the actual target system.


- 4 Repeat from [step 2](#) until you have added all the required devices to the cluster.
- 5 If further system configuration is required on the individual members of the cluster, start with the current system (i.e., the one you are connected to). See [Configuring the System Representation](#) on page 53, for detailed instructions on adding cards to a Kaleido-X (4RU, 7RU, or 14RU), or on adding streams to a Kaleido-IP configuration. See [Routers & Kaleido Multiviewers](#), on page 347, and [Tally Interface Devices & Timer Systems](#), on page 401, for instructions on adding other routing and control devices.

Note: Each member of a cluster has its own database where both common information about the cluster and information local to the individual cluster member are stored. Room and layout definitions are automatically replicated to all cluster members, whereas the logical sources and the configuration of devices connected to a specific cluster member are only stored in this member's database.

- 6 Once you have completed the current system's specific configuration, save it, and then connect to the next cluster member you need to configure: right-click the appropriate multiviewer node and then click **Connect to this system**.

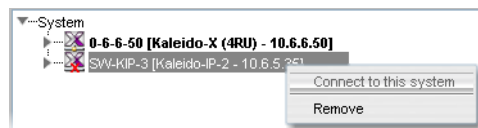

Once the connection is established, the selected system becomes highlighted in the System list, and the message “Connected to...” appears in the status bar.

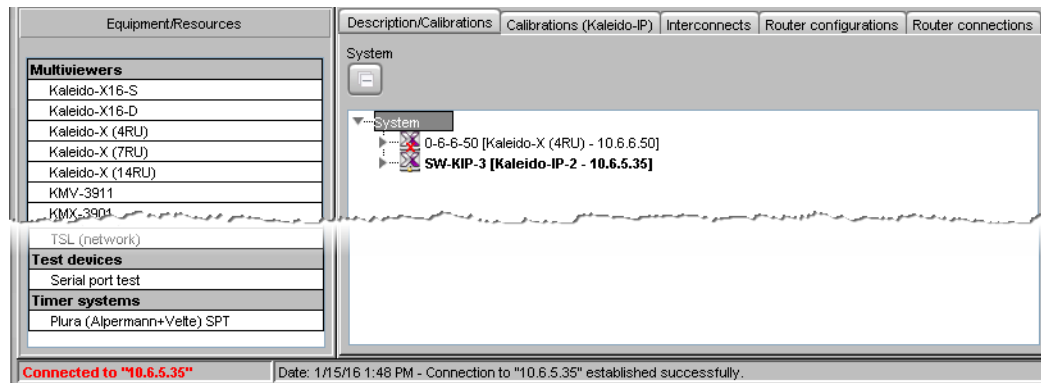

- 7 Repeat from [step 5](#) until all cluster members are configured.

Note: In the hierarchical list for a cluster, an unavailable system is indicated by a dimmed icon and cannot be expanded. It can take up to 15 seconds before a multiviewer’s status icon is updated in the System list.

Creating a cluster in offline mode


To create a system with multiple multiviewers in offline mode

- 1 Open XEdit, and load the database for one of the multiviewers you want to be part of the cluster system, if it is not already in your local workspace (see [Restoring a Database from a Backup](#) on page 41, or [Importing a Database](#), on page 35).


You are now ready to add more multiviewers to the system.

- 2 In the equipment library, select the appropriate multiviewer model and drag it onto the root of the System hierarchical list.

Alternatively, right-click the list root, and then click the appropriate multiviewer model on the “insert...” menu.

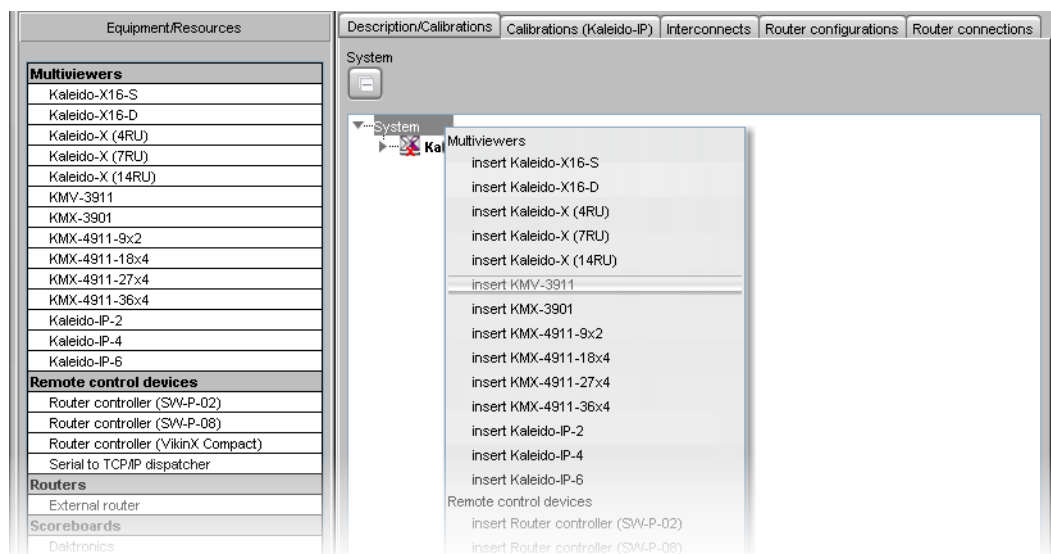


 A multiviewer of the selected model is added to the System list.




- 3 On the **File** menu, click **Save**.

A progress window appears while XEdit applies default settings to your new cluster configuration.

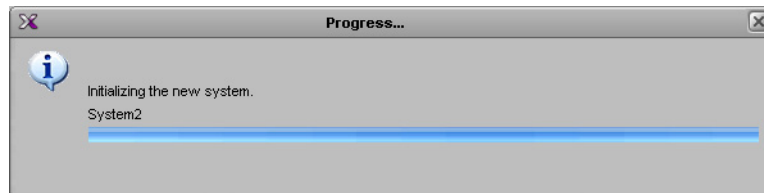

 
- 4 Repeat from [step 2](#) until you have added all the required devices to the cluster.




- 5 If further system configuration is required on the individual members of the cluster, start with the current system (i.e., the one that is highlighted). See [Configuring the System Representation](#) on page 53, for detailed instructions on adding cards to a Kaleido-X (4RU, 7RU, or 14RU), or on adding streams to a Kaleido-IP configuration. See [Routers & Kaleido Multiviewers](#), on page 347, and [Tally Interface Devices & Timer Systems](#), on page 401, for instructions on adding other routing and control devices.

Note: Each member of a cluster has its own database where both common information about the cluster and information local to the individual cluster member are stored. Room and layout definitions are automatically replicated to all cluster members, whereas the logical sources and the configuration of devices connected to a specific cluster member are only stored in this system's database.

- 6 Once you have completed the current system's specific configuration, save it, and then switch to the next cluster member you need to configure: right-click the appropriate multiviewer node and then click **Switch to this system**.

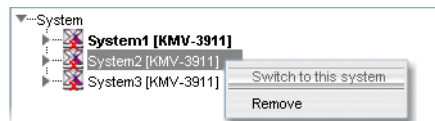

 The selected cluster member becomes highlighted in the System list.



- 7 Repeat from [step 5](#) until all cluster members are configured.
- 8 On the **File** menu, click **Save**.

Eventually, you will want to export this cluster configuration to the appropriate set of multiviewers. See [Exporting a Cluster Database](#) on page 37 for details.

Creating Rooms for a Cluster System

Create rooms for the cluster system, by adding displays associated with the different multiviewers as appropriate. See [Setting Up Rooms](#) on page 191, for details.

Notes

- Each room must have a unique name across the cluster system. XEdit will not let you use a name if there is already a room with this name associated with one of the multiviewers within the cluster.
 - All multiviewers associated with the cluster system must be available. If one of the member multiviewers becomes unavailable while you were configuring a room for the cluster system, then XEdit will not let you save the room. If you want to save the room anyway, first remove any unavailable system from the cluster.
-

Creating Layouts for a Cluster System

It is possible to create a partial layout for a cluster system in offline mode, and then export it to the appropriate multiviewer for further online configuration. When configuring a layout for a room that is associated with a cluster system, you only work on one part at a time: the part that is associated with the current multiviewer's output heads. See [Creating Layouts](#) on page 217 for detailed instructions.

Note: Each layout must have a unique name across the cluster system. XEdit will not let you export a layout to a cluster system if there is already a layout with this name associated with one of the multiviewers within the cluster. As a workaround, you could make a copy of one of the conflicting layouts under a different name, and then delete the original before proceeding with the export (see [Copying Layouts](#), on page 236, [Deleting Layouts](#), on page 234).

Replicating RCP Users Across a Cluster System

RCP Users are not automatically propagated to all multiviewers. Before a user can log on to a room associated with a cluster system, the corresponding RCP user configuration must be manually replicated on all member multiviewers across the cluster. See [Managing RCP Users](#), on page 334.

Repairing a Cluster System

Note: In the procedure below, *System A* refers to the system whose name or IP address was changed while another cluster member, referred to as *System B*, was unavailable.

To repair the cluster configuration

- 1 In XEdit, connect to *System B*, the multiviewer that was unavailable when the change was made, once it is available again.
- 2 In the **Description/Calibrations** tab, remove *System A* from the cluster, and then add it back to the cluster.

- 3 If other cluster members were unavailable when the change was made (e.g., if *System A* is a KMV-3901/3911 whose name or IP address was changed from the Densité frame's control panel, or from the KMV-3901/3911 control panel in iControl, then repeat the previous steps for each.

If only the IP address was changed then no further action is required. Otherwise, if the system name was changed, then proceed as follows.

- 4 Connect to *System A*.
- 5 Change something in every room (e.g., move a display and then bring it back to its initial position) to enable the **Save** button.
- 6 Save the room.

This will replicate the proper room configuration to the other members of the cluster. (At the same time, the layouts will also be updated on all multiviewers in the cluster.)

Cascade

It is possible to configure up to three Kaleido-X16 or KMV-3901/3911 multiviewers as a cascade system. Unlike the cluster, whose purpose is to increase the number of output heads in a room, the cascade increases the maximum number of inputs that can be displayed to a single monitor wall display. It is also possible to configure a hybrid cascade system, involving one Kaleido-IP and one Kaleido-X, or one Kaleido-IP and one Kaleido-X16, to monitor both baseband and IP sources at once, on the same monitor wall display. For more information, refer to the appropriate *Cascade Step-by-Step Configuration* guide. See [Related Documentation](#), on page 13.

Configuring the System Representation


- The **Kaleido-IP** has two, four, or six LAN connections, depending on the model, and two multiviewer outputs. The multiviewer's output can optionally be output over IP streaming. Configuring your Kaleido-IP's system representation in XEdit involves adding or removing transport streams until the representation matches the set of transport streams you want to monitor. See [Managing Sources in a Kaleido-IP System](#) on page 63, for details.
- The **Kaleido-IP VM** has a single multiviewer output over IP streaming, associated with output *Head 1*, in the system representation. Configuring your Kaleido-IP VM's system representation in XEdit involves adding or removing transport streams until the representation matches the set of transport streams you want to monitor. See [Managing Sources in a Kaleido-IP System](#) on page 63, for details.
- In the case of a **Kaleido-MX**, **Kaleido-MX 4K**, **Kaleido-Modular-X**, **Kaleido-X (4RU)**, **Kaleido-X (7RU)**, or **Kaleido-X (14RU)** expansion system, configuring your system's representation in XEdit involves adding or removing cards until the representation matches the hardware configuration of your actual multiviewer. The name used in Kaleido Software to represent a multiviewer model is shown in [Representation of Multiviewer Models in Kaleido Software](#), on page 27. See [Managing Cards in a Kaleido-X or KMX-3901 System Representation](#) on page 54, for details.
- This section *does not* apply to the **KMX-3921**, **KMX-49N1**, **Kaleido-X16**, **Kaleido-XQUAD**, and **KMV-3901/3911**, which have a set number of card slots. In the case of the Kaleido-X16, Kaleido-XQUAD, and KMX-3901/3911, these slots are *virtual card slots* that represent hardware features integrated within their main board. In XEdit, the virtual card slots are, for the most part, equivalent to their physical counterparts on the Kaleido-X models (See [Virtual card slots](#) on page 26).

Managing Cards in a Kaleido-X or KMX-3901 System Representation

To configure a Kaleido-X or KMX-3901 system

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.


The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.

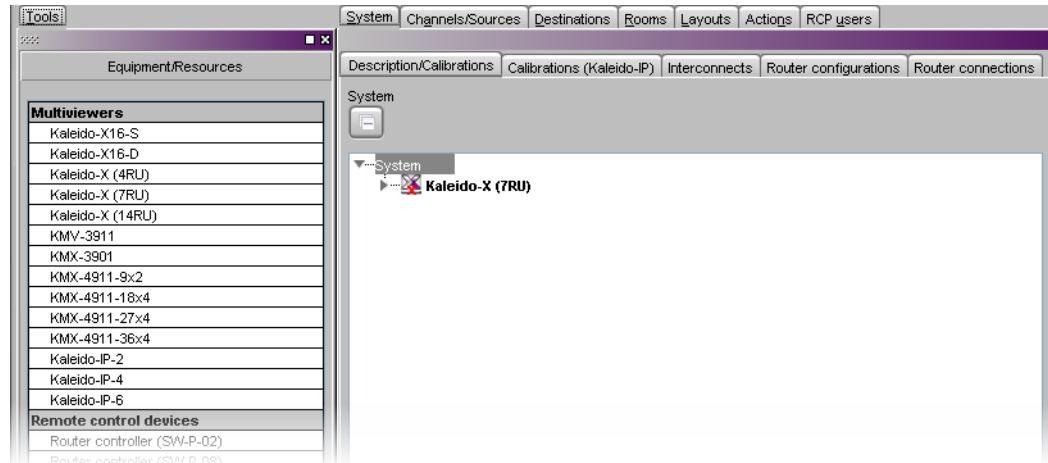

- 2 Expand the **System** root, and the multiviewer you want to configure.

Note: In the case of a Kaleido-X (14RU) expansion system, then you need to first expand the dual frame element, under which both frames A and B are listed. You can then configure each of the two frames as described below.

The card slots appear in the hierarchical list.

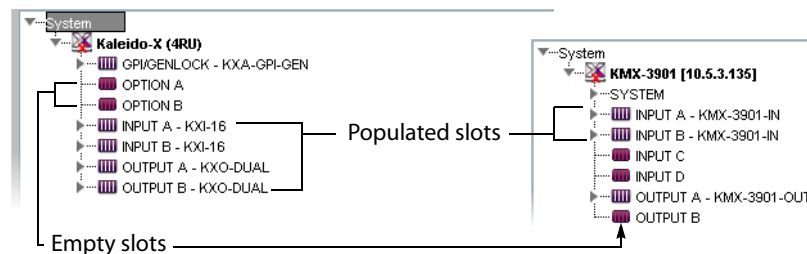

If you used the XEdit factory default configuration or the sample database for your multiviewer model (see [Restoring the Factory-Default Configuration](#) on page 57), then the appropriate slots may already be populated with cards.

- 3 Add or remove cards until the system's card slots are populated with cards that match the hardware configuration of your multiviewer. See [Emptying card slots](#), on page 55, and [Populating card slots](#), on page 55, for details.


- 4 On the **File** menu, click **Save**.

Your new system configuration is saved.

Emptying card slots

To empty card slots in a Kaleido-X or Kaleido-MX system representation


- 1 In the System list, right-click the populated slot you want to empty.
- 2 If you want to empty multiple slots in a single operation, extend your selection by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts. In this case, XEdit will prompt you to confirm your choice.
- 3 Right-click your selection and then click **Remove** on the menu.

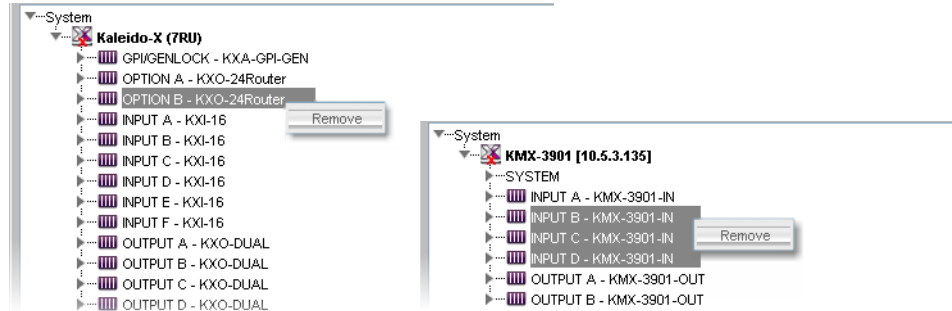

Alternatively click the populated card slot, and then press Delete on your keyboard.

Note: Pressing Delete to empty card slots is only supported in the case of a single-card selection.

The slots are now empty and the card type does not appear any more next to the slot name.

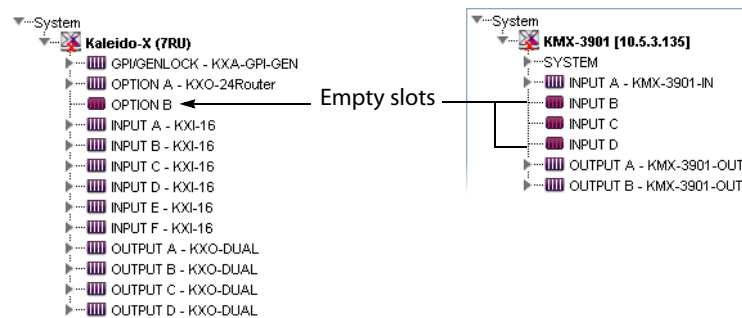


Populating card slots

To populate slots with cards in a Kaleido-X or Kaleido-MX system representation

- 1 In the System list, right-click the slot you want to populate.
- 2 If you want to populate multiple slots in a single operation, extend your selection to other slots of the same type by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts. In this case, XEdit will prompt you to confirm your choice.


3 Right-click your selection and then click **Insert [card type]** on the menu.

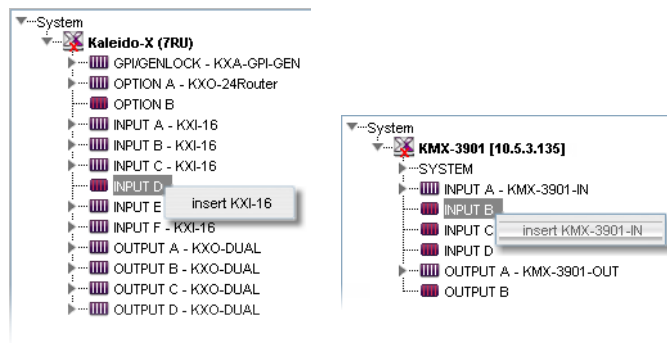

Alternatively drag the card from the equipment library onto the empty card slot.

Note: Dragging a card from the equipment library is only supported in the case of a single-card selection.

The slot name is now appended with the card type. For example: *INPUT D - KXI-16*, or *INPUT B - KMX-3901-IN*.

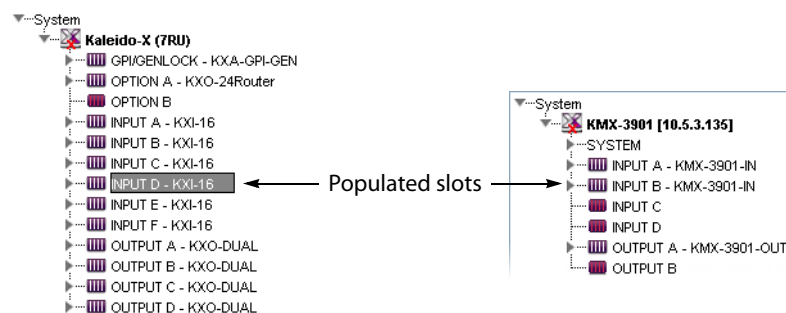

Restoring the Factory-Default Configuration

A number of predefined rooms and layouts are available on the multiviewer when you first receive your system. This is the factory-default configuration. If after modifying the multiviewer's configuration, you are not satisfied with the results, there are the following methods to revert the multiviewer's configuration back to the factory-default configuration in order to start over.

- A menu option allows you to directly restore the multiviewer's factory-default configuration. See [To restore the XEdit factory defaults for a multiviewer model](#), on page 57.
- If the current multiviewer is a cluster then you can directly restore the multiviewer cluster to its factory-default configuration. See [To restore the XEdit factory defaults for a multiviewer cluster](#), on page 58.

Restoring the factory database does not modify the multiviewer's current IP addresses and system name. If these parameters need to be changed, it must be done using XAdmin. See the multiviewer's Installation & Service Manual. See [Related Documentation](#), on page 13.

In the case of a KMX-3921 / KMX-49N1 system, you can also reset some card settings to their factory-default values, by using the KMX-3921 / KMX-49N1 service panel, in iControl or iControl Solo. See the KMX-3921 Installation & Service Manual or KMX-49N1 Installation & Service Manual.

IMPORTANT

If you already have layouts that you want to keep, make sure to back up the XEdit database or export the layout before restoring the factory defaults. See [Creating a Backup](#), on page 40 and [Exporting Layouts](#), on page 239.


To restore the XEdit factory defaults for a multiviewer model

Note: If XEdit is offline from the multiviewer and the current model of multiviewer in XEdit does not match the actual multiviewer model, then you can replace the current configuration with one that matches your actual system and restore the multiviewer's factory-default configuration at the same time using the **replace with** option. See [Creating a Single Multiviewer System](#), on page 42.


For this procedure, XEdit can be online with the multiviewer or offline from the multiviewer.

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then select the multiviewer that you want to restore to its factory-default configuration.

- 3 On the **Configure** menu, click **Database** and then **Restore factory default**.

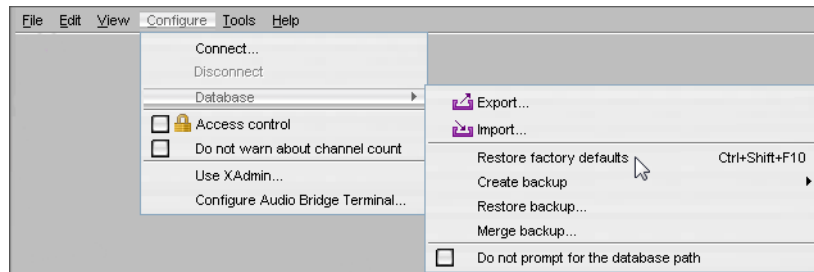

XEdit then prompts you to confirm that you want to restore the factory defaults for the selected multiviewer model.

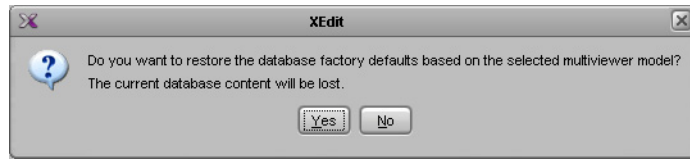

- 4 Click **Yes**.

The configuration of the selected multiviewer model is reset to the factory default.

 
- 5 The local layout must be refreshed on the multiviewer's wall. See [Refreshing a Layout](#), on page 487.

The multiviewer's wall is now showing the factory-default configuration.


To restore the XEdit factory defaults for a multiviewer cluster

For this procedure, XEdit can be online with the multiviewer or offline from the multiviewer. Each multiviewer member that forms the cluster must be restored to its factory default for this procedure to be successful. Otherwise, the layouts will come back from any cluster member that has not been reset to factory defaults and you save the multiviewer's configuration.


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then select a member of the multiviewer cluster to restore to its factory-default configuration.




If the multiviewer you want to restore to factory defaults is a member of a cluster that is greyed-out, right-click the appropriate multiviewer node and then click **Switch to this system**.

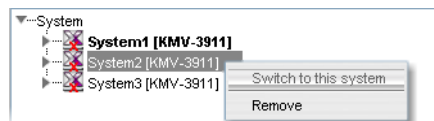

 
The selected cluster member becomes highlighted in the System list.



- 3 On the **Configure** menu, click **Database** and then **Restore factory default**.

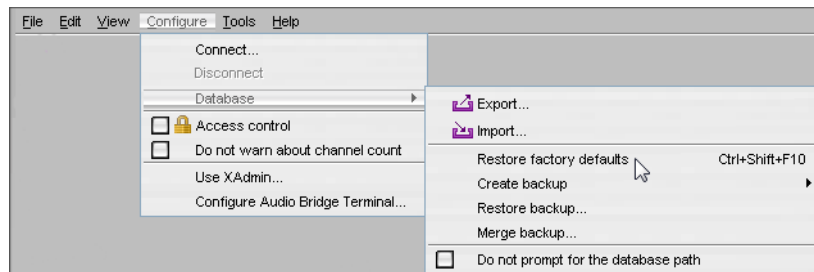

XEdit then prompts you to confirm that you want to restore the factory defaults for the selected multiviewer model.

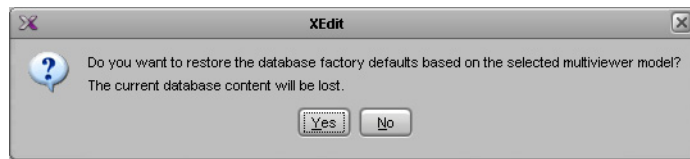

- 4 Click **Yes**.
- The configuration of the selected multiviewer model is reset to the factory default.
- 5 Repeat steps 2 to 4 on each member of the multiviewer cluster.
- 6 Create a clustered room. See [Creating a Cluster](#), on page 45.
- 7 The local layout must be refreshed on the multiviewer's wall. See [Refreshing a Layout](#), on page 487.

The multiviewer's wall is now showing the factory-default configuration.

Managing Multiple Databases Efficiently

To avoid mistakes in managing databases, especially when multiple multiviewers are involved, it is recommended to follow the rules below:

- Back up the database for each system to a central repository, separate from the local workspace you use when working in XEdit offline.
- When using XEdit, limit yourself to a single workspace. When working online, the local workspace is not used. When working offline, first either import the database from the appropriate multiviewer into your XEdit workspace, or restore the latest backup for the system you want to work on.
- When your work session in XEdit is complete, always create a new backup of the database, regardless of whether you were working online or offline.

The next sections describe three typical situations, summarized below:

Online	Offline	System restore from backup (offline)
1 Work in XEdit.	1 Import database from multiviewer into local workspace.	1 Restore backup from central repository into local workspace.
2 Back up database from multiviewer to central repository.	2 Work in XEdit.	2 Work in XEdit, if needed... ...and then back up database from local workspace to central repository.
	3 Back up database from local workspace to central repository.	
	4 Export database from local workspace to multiviewer.	3 Export database from local workspace to multiviewer.

Working online

If you are connected to a multiviewer, and working online in XEdit, you are actually editing the database that is located inside the multiviewer's file system. There is one database per multiviewer. An expansion system, comprising two Kaleido-X (7RU) frames, is also managed through a single database. A cluster system includes one database for each multiviewer in the cluster, which are backed up or restored as a single operation. When you have completed your changes, create a backup of the current system and store it in a secure location on your PC.

To back up the current Kaleido multiviewer system

- 1 On the **Configure** menu, point to **Database**, to **Create backup**, and then click **All**.
- 2 Browse to the secure location on your PC where you store all your database backups (e.g., `multiviewerDatabaseBackups`), and type a name for the new backup, preferably a name that includes the multiviewer name and the date (e.g., `KX_A&B_08_12_02.zip`).

Working offline

When using XEdit offline, you work inside a workspace located on your client PC. You set the location for this workspace when you first opened XEdit. It is recommended to consider this workspace as a "sandbox" into which you import the database you want to work on during this session, and from which you export the database at the end of the session.

TIP

Once you are satisfied with the location of your local workspace, on the **Configure** menu, point to **Database**, and then select the **Do not prompt for the database path** check box, to avoid being prompted every time you open XEdit.

See [Importing a Database](#) on page 35, for instructions on how to import the database from a specific multiviewer into your workspace. Once the import is completed, you can work locally, in your XEdit workspace. When you have completed your changes, export the database from the workspace, back to the multiviewer.

Applying a backup database to the multiviewer

To restore a backup database, you must use XEdit in offline mode. A backup database must first be restored to your local workspace before it can be exported back to the appropriate multiviewer.

To restore a backup database

- 1 On the **Configure** menu, point to **Database**, and then click **Restore backup**.
A window appears, prompting you to locate a backup database.
- 2 Navigate to your central backup storage area, select the backup database you want to restore, and then click **Open**.
A message appears prompting you to confirm your choice.
- 3 Click **Yes**.

Once the operation completes, your XEdit workspace area will contain the restored database. You can now work on this database in offline mode, or export it back to the multiviewer.

4 Managing Sources in a Kaleido-IP System

Introduction

In order to obtain the list of programs and elementary streams under each transport stream, you must connect to your Kaleido-IP / Kaleido-IP VM in online mode (see [Using XEdit in Online Mode](#) on page 32).


The supported stream types are:

- Any-Source Multicast (ASM)
- Source-specific multicast
- Source-filtered multicast (filtering limited to a single source IP in include mode only)
- Unicast
- RTSP
- RTMP
- HTTP Live Streaming (HLS)
- Uncompressed 2022-6

Input Types - Network Sources Versus Virtual Inputs Explained

As of Kaleido Software version 9.20, Virtual Inputs are a new concept that has been added to Kaleido-IP multiviewers that differs from the traditional network Sources concept in a few ways.

In XEdit, both network Sources and virtual inputs are found in the main window, under the **System** tab, and then the **Description/Calibrations** on the second level tab bar as shown below.

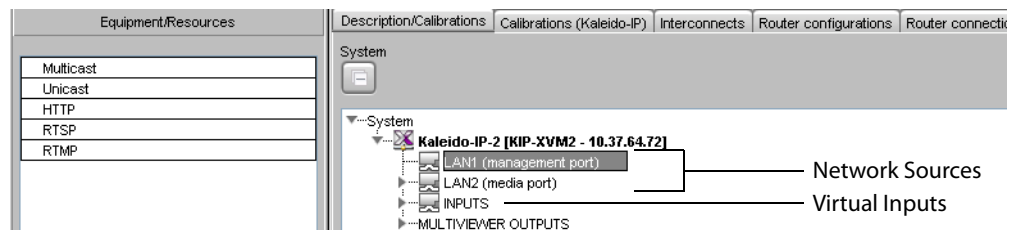

The differences between network Sources and virtual inputs are described below.

What is a Network Source?

Sources are representations of streams that are available to the Kaleido-IP multiviewer. In XEdit, sources are placed into folders labelled **LAN1** to **LAN6**. Each of these folders corresponds to one of the multiviewer's physical network adapter interfaces. Each physical network adapter interface is connected to an independent LAN (Local Area Network or IP switch) on which the source stream is made available.

Once a stream has been added to a LAN, the Kaleido-IP multiviewer will periodically join the stream to analyze its structure (for example, to determine the amount and type of elementary streams and their associated PIDs) to make the information available in XEdit to allow users to make logical sources out of them. Typically, there is one monitoring logical source per video program, so a stream consisting in a Multi-Program Transport Stream (MPTS) with four video programs will need to be spread over four logical sources. Another example is a HLS stream consisting in four compression profiles. Each profile can be monitored by associating it with its own logical source.

Note that the Kaleido-IP multiviewer cannot discover the existence of a stream. The multicast address, unicast receiving port or HTTP URL must be manually specified or imported through a spreadsheet (for more information, see [Importing an Input Configuration from a Spreadsheet](#), on page 78).

When a source is associated with a logical source, and that logical source is assigned to a monitor on the monitor wall, the stream becomes active. The transport stream is joined or HTTP downloads begin (depending on the type of source) and alarms like TS Loss are valid. Individual elementary streams composing the transport stream are only decoded if a corresponding monitor is present on the wall, in which case associated alarms are also valid. If an elementary stream is not displayed on the wall through a monitor, its alarms are in the pending state (unknown).

A network Source does not support uncompressed streams.

Adding Network Source Streams to the Multiviewer - Overview

If you have connected your Kaleido-IP to more than one *Media Network*, or you want to monitor sources from Unicast streams or from other types of transport streams, or more sources from Multicast streams, then you need to add transport streams to the basic system configuration. See:

- To add Any-Source Multicast (ASM) transport streams, see [Adding Any-Source Multicast Transport Stream Sources](#) on page 66.
- To add Source-Specific Multicast or Source-Filtered Multicast (SSM or SFM) transport streams, see [Adding Source-Specific or Source-Filtered Multicast Transport Stream Sources](#) on page 68.
- To add unicast transport streams, see [Adding Unicast Transport Stream Sources](#) on page 70.
- To add HTTP Live Streaming (HLS) playlists, see [Adding HLS Playlist Sources](#) on page 71.
- To add RTSP streams, see [Adding RTSP Transport Stream Sources](#) on page 73.
- To add RTMP streams, see [Adding RTMP Transport Stream Sources](#) on page 74.

What is a Virtual Input?

A virtual input is like a physical input of traditional SDI multiviewers. It represents a port that receives a stream and decodes it.

A virtual input must be associated with a logical source to be able to view it on the wall. Typically, there is one logical source per virtual input.

When using virtual inputs, the Kaleido-IP multiviewer does not know the existence of a stream until it has been instructed to join it, at which point it becomes immediately active (joined immediately) whether the logical source is viewed on the wall through a monitor or

not (this behavior is different from a Network Source). Some alarms like stream presence are immediately valid, whereas other alarms are pending until the stream is displayed on the wall.

To add uncompressed 2022-6 stream Inputs, see [Adding Virtual Inputs](#) on page 84.

Migration from Software Versions prior to Kaleido Software Version 9.20.

Virtual inputs were first introduced in Kaleido Software version 8.40. Prior to Kaleido Software version 9.20, they were configured in XEdit as *NMOS DEVICES*, found in the main window, under the **System** tab, and then the **Description/Calibrations** on the second level tab bar. When upgrading to Kaleido Software version 9.20 or higher, any *NMOS DEVICES* are converted into *INPUTS*. Such an upgrade will bring changes that are not backwards compatible with Kaleido Software versions earlier than 9.20. If a user installs Kaleido Software version 9.20 or higher and then decides to downgrade to a Kaleido Software version earlier than 9.20, the *INPUTS* folder will be empty and you will have to recreate the inputs or see *Workaround* below. The same applies to a user that exports a database from Kaleido Software version 9.20 (or higher) to a Kaleido Software version earlier than 9.20.

Workaround: Before upgrading to Kaleido Software version 9.20 (or higher), make a database backup. When downgrading to a Kaleido Software version earlier than 9.20, restore this database backup to the multiviewer.

Kaleido-IP Multiviewer Ethernet Port Usage

For non-virtual machine (VM) Kaleido-IP multiviewers, refer to the multiviewer's Installation & Service Manual for the correct multiviewer Ethernet port wiring connections. See [Related Documentation](#), on page 13.

Default Kaleido-IP Network Source Configuration in XEdit

The default configuration for a Kaleido-IP system includes eight predefined any-source multicast (ASM) streams, located under **LAN2**. Before you can use these streams, you must adjust their settings to match the actual transport streams you want to monitor. To modify previously configured streams and playlists, see [Modifying transport streams and HLS playlists](#) on page 75.

To remove streams from your system configuration, see [Removing transport streams and HLS playlists](#) on page 77.

Configuration Prerequisites

A URL path can be used to identify a source located on a remoter server to access HTTP, RTSP, RTMP, or Input streams. When using a URL, the multiviewer's DNS server configuration must have been previously configured in XAdmin to allow the multiviewer to be able to resolve the URL to the stream server's current network IP address.

To configure the multiviewer's DNS setting, open XAdmin, and navigate to *DNS and proxy configuration* under *System configuration*. Refer to *Configuring a Multiviewer's IP, Date, and Time Settings with XAdmin* in the multiviewer's Installation & Service Manual. See [Related Documentation](#), on page 13.

Configuring Network Sources

For more information about a Virtual Input, see [What is a Network Source?](#), on page 63.


Adding Any-Source Multicast Transport Stream Sources

To add an Any-Source Multicast (ASM) Transport Stream

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.


The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.

- 3 Drag **Multicast** from the **Tools** pane onto the **LAN** adapter.

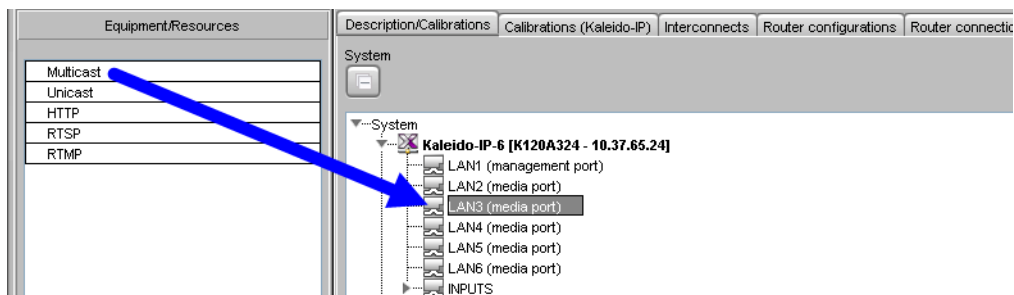

The **Multicast Stream Configuration** window appears.


- 4 In **Multicast Stream Configuration**, to replace the default stream name if necessary, select the appropriate protocol (RTP, UDP), and type the multicast group address and port number associated with the transport stream you want to add.

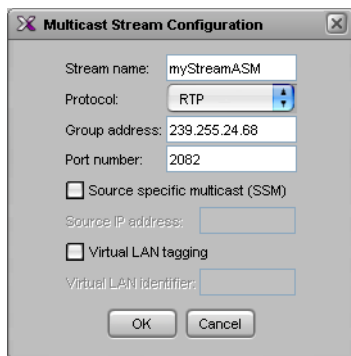

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
- Verify the protocol you selected. Registering an RTP stream as UDP instead of RTP may result in the decoded video appearing jerky or accelerated on the monitor wall.


- 5 If the stream you want to add is constrained to a virtual LAN, select **Virtual LAN tagging**, and then type the appropriate VLAN identifier.

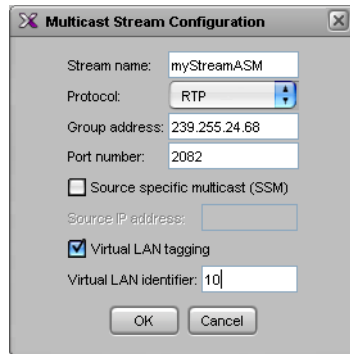

Note: VLAN adapter settings must have been previously configured in XAdmin. See *Configuring Virtual LAN Adapters on a Kaleido-IP* in the Kaleido-IP's *Installation & Service Manual* for more information. See see [Related Documentation](#) on page 13.

- 6 Click **OK**.

The Kaleido-IP establishes a connection with the selected stream. All programs that are part of the stream, and the elementary streams included in these programs, automatically appear under the transport stream element in the System list.

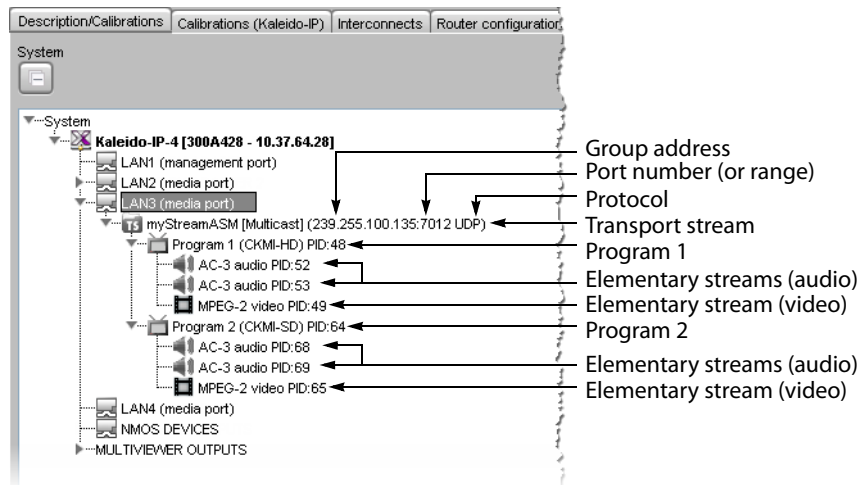

Note: Under the **LAN** elements, transport streams are listed in alphabetical order.

- 7 Repeat this procedure until you have added all required ASM transport streams to your system configuration.
- 8 On the **File** menu, click **Save**. Alternatively, click the toolbar's Save button. Changes to the system are saved.


Adding Source-Specific or Source-Filtered Multicast Transport Stream Sources

To add a source-specific, or source-filtered multicast (SSM/SFM) transport stream


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.

The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.

- 3 Drag **Multicast** from the **Tools** pane onto the **LAN** adapter.

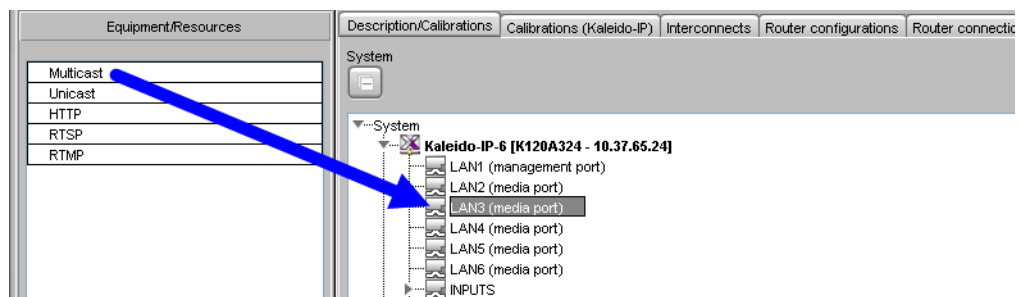

The **Multicast Stream Configuration** window appears.

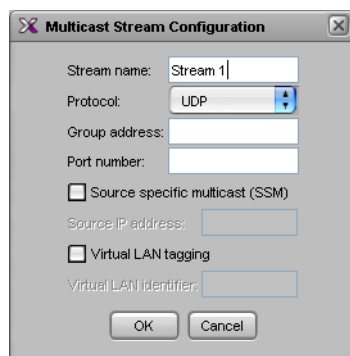


- 4 In **Multicast Stream Configuration**, to replace the default stream name if necessary, select the appropriate protocol (RTP, UDP), and type the multicast group address and port number associated with the transport stream you want to add.

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
- Verify the protocol you selected. Registering an RTP stream as UDP instead of RTP may result in the decoded video appearing jerky or accelerated on the monitor wall.

- 5 Select the **Source specific multicast (SSM)** check box, and then type the IP address associated with the specific source you want to monitor in the **Source IP address** box.

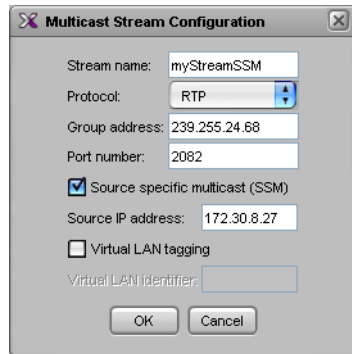


The screenshot shows the 'Multicast Stream Configuration' dialog box. It has the following fields and settings:

- Stream name: myStreamSSM
- Protocol: RTP (dropdown menu)
- Group address: 239.255.24.68
- Port number: 2082
- ☒ Source specific multicast (SSM)
- Source IP address: 172.30.8.27
- ☐ Virtual LAN tagging
- Virtual LAN identifier: (empty field)

At the bottom are 'OK' and 'Cancel' buttons.

Note: In the case of streams that are available from the same multicast group address and port number, you must enter the source IP address associated with a stream before you can add the next one.

- 6 If the stream you want to add is constrained to a virtual LAN, select **Virtual LAN tagging**, and then type the appropriate VLAN identifier.

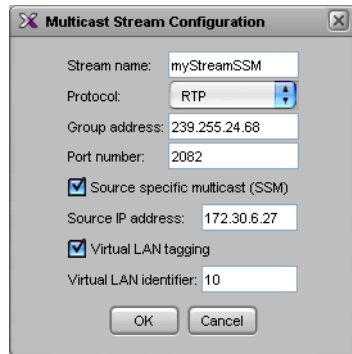

The screenshot shows the 'Multicast Stream Configuration' dialog box with the following fields and settings:

- Stream name: myStreamSSM
- Protocol: RTP (dropdown menu)
- Group address: 239.255.24.68
- Port number: 2082
- ☒ Source specific multicast (SSM)
- Source IP address: 172.30.6.27
- ☒ Virtual LAN tagging
- Virtual LAN identifier: 10


At the bottom are 'OK' and 'Cancel' buttons.

Note: VLAN adapter settings must have been previously configured in XAdmin. See *Configuring Virtual LAN Adapters on a Kaleido-IP* in the multiviewer's *Installation & Service Manual* for more information. See see [Related Documentation](#) on page 13.

- 7 Click **OK**.

The Kaleido-IP establishes a connection with the selected SSM/SFM stream. All programs that are part of the selected stream, and the elementary streams included in

these programs, automatically appear under the transport stream element in the System list.

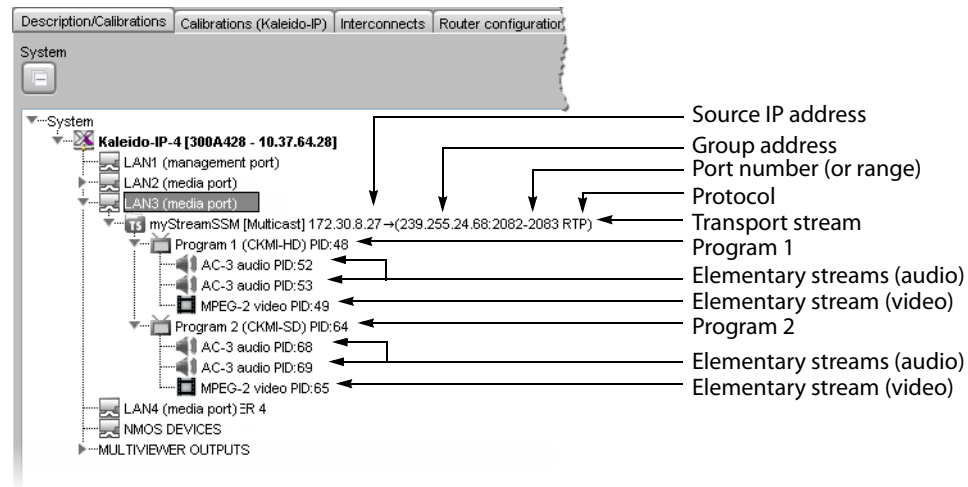

Note: Under the **LAN** elements, transport streams are listed in alphabetical order.

- 8 Repeat this procedure until you have added all required SSM/SFM transport streams to your system configuration.
- 9 On the **File** menu, click **Save**. Alternatively, click the toolbar's Save button. Changes to the system are saved.


Adding Unicast Transport Stream Sources

To add a unicast transport stream

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.


The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.

- 3 Drag **Unicast** from the **Tools** pane onto the **LAN** element.

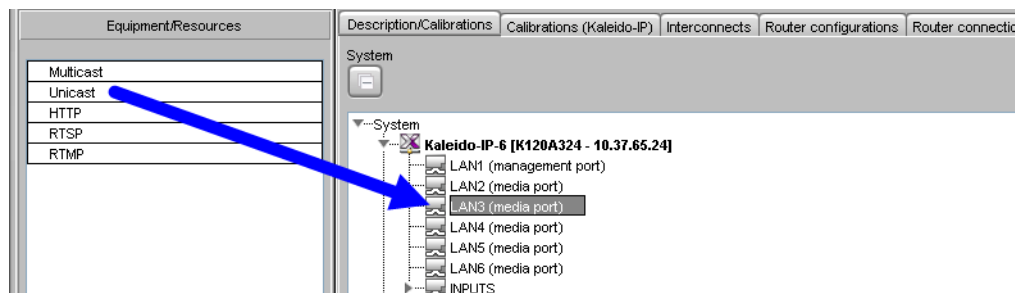

The **Unicast Stream Configuration** window appears.

- 4 In **Unicast Stream Configuration**, to replace the default stream name if necessary, select the appropriate protocol (RTP, UDP), type the port number associated with the transport stream you want to add, and then click **OK**.

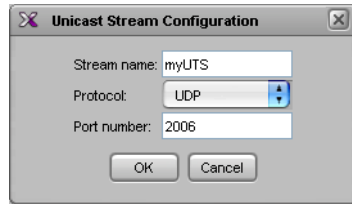

The Kaleido-IP establishes a connection with the selected stream. All programs that are part of the stream, and the elementary streams included in these programs, automatically appear under the transport stream element in the System list.

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
- Verify the protocol you selected. Registering an RTP stream as UDP instead of RTP may result in the decoded video appearing jerky or accelerated on the monitor wall.
- Under the **LAN** elements, transport streams are listed in alphabetical order.

- 5 Repeat this procedure until you have added all required unicast transport streams to your system configuration.
- 6 On the **File** menu, click **Save**. Alternatively, click the toolbar's Save button. Changes to the system are saved.

Adding HLS Playlist Sources


Note: Make sure the multiviewer's DNS and proxy settings are properly configured for your network, and that NTP synchronization is enabled. Refer to the *Kaleido-IP Installation & Service Manual* for more information. See [Related Documentation](#), on page 13.

To add an HLS playlist


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.

The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.

- 3 Drag **HTTP** from the **Tools** pane onto the **LAN** element.

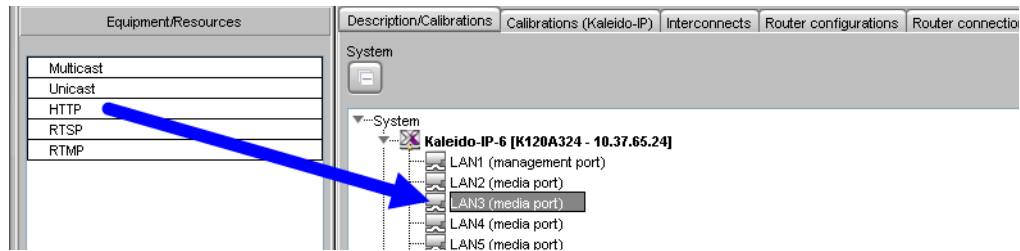

The **HTTP Stream Configuration** window appears.

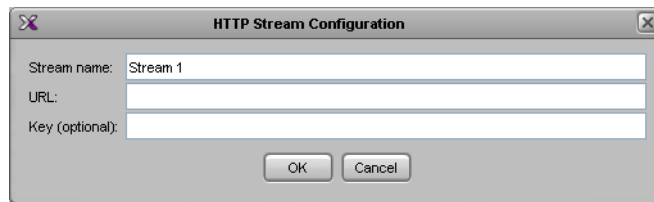


- 4 In **HTTP Stream Configuration**, to replace the default stream name if necessary, type the URL of the playlist you want to monitor, provide the appropriate authentication key if required, and then click **OK**.

In the URL, include the HTTP prefix: `http://`, for example:

`http://example.com/stream`

The Kaleido-IP establishes a connection with the stream provider. In the System list, a *master playlist* element including all *media playlists* specified in the master playlist automatically appears under the **LAN** elements. All programs that are part of a media playlist, and the elementary streams included in these programs, automatically appear under the media playlist element.

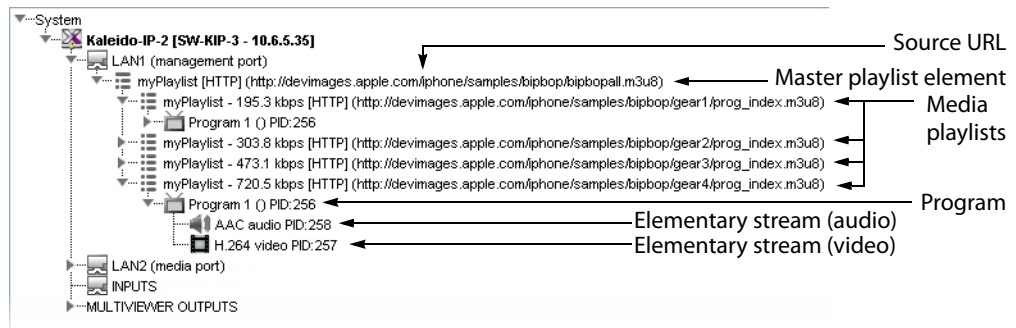

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
- Both HTTP and HTTPS protocols are supported. If HTTPS is used, there must be a valid certificate for the connection to be established.
- Under the **LAN** elements, HLS master playlists and media playlists are listed in alphabetical order.

- 5 Repeat this procedure until you have added all required HLS playlists to your system configuration.


- 6 On the **File** menu, click **Save**. Alternatively, click the toolbar's **Save** button.
Changes to the system are saved.

Adding RTSP Transport Stream Sources


Note: Make sure the multiviewer's DNS and proxy settings are properly configured for your network. Refer to the *Kaleido-IP Installation & Service Manual* for more information. See [Related Documentation](#), on page 13.

To add an RTSP transport stream

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.
The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.
- 3 Drag **RTSP** from the **Tools** pane onto the **LAN** element.

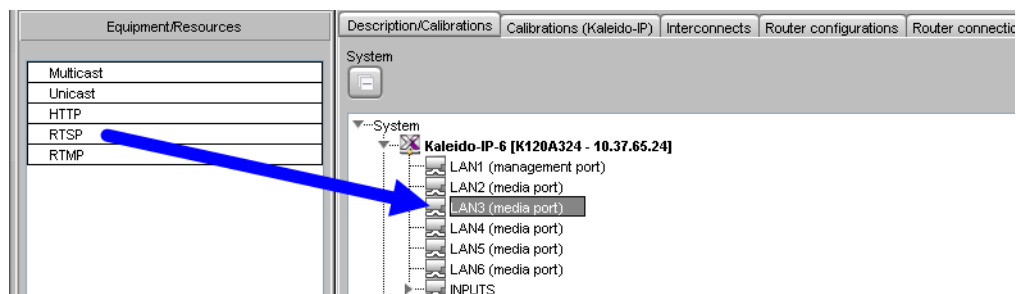

The **RTSP Stream Configuration** window appears.

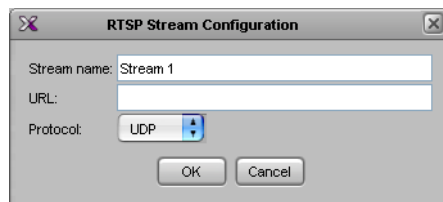

- 4 In **RTSP Stream Configuration**, to replace the default stream name if necessary, type the URL of the stream you want to monitor, select the appropriate protocol (RTP, UDP), and then click **OK**.

In the URL, include the RTSP prefix: `rtsp://`, for example:
`rtsp://example.com/stream`

The Kaleido-IP establishes a connection with the selected stream. All programs that are part of the stream, and the elementary streams included in these programs, automatically appear under the transport stream element.

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: `@` `/` `\` `'` and `"`.

Notes (continued)

- Verify the protocol you selected. Registering an RTP stream as UDP instead of RTP may result in the decoded video appearing jerky or accelerated on the monitor wall.
 - Under the **LAN** elements, transport streams are listed in alphabetical order.
-

- 5 Repeat this procedure until you have added all required RTSP transport streams to your system configuration.
- 6 On the **File** menu, click **Save**. Alternatively, click the toolbar's **Save** button. Changes to the system are saved.

Adding RTMP Transport Stream Sources


Note: Make sure the multiviewer's DNS and proxy settings are properly configured for your network. Refer to the *Kaleido-IP Installation & Service Manual* for more information. See [Related Documentation](#), on page 13.

To add an RTMP transport stream


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the appropriate **LAN** element, for the stream you want to add. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.

The supported stream types (**Multicast**, **Unicast**, **HTTP**, **RTSP**, **RTMP**) are listed on the **Tools** pane.

- 3 Drag **RTMP** from the **Tools** pane onto the **LAN** element.

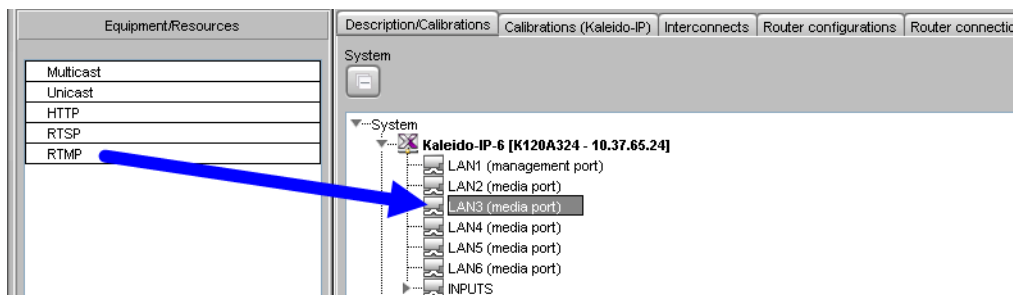

The **RTMP Stream Configuration** window appears.

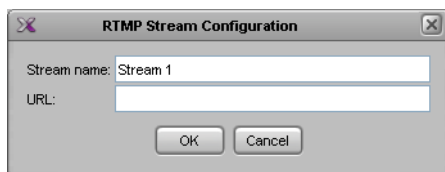

- 4 In **RTMP Stream Configuration**, to replace the default stream name if necessary, type the URL of the stream you want to monitor, and then click **OK**.

In the URL, include the RTMP prefix: `rtmp://`, for example:
`rtmp://example.com/stream`

The Kaleido-IP establishes a connection with the selected stream. All programs that are part of the stream, and the elementary streams included in these programs, automatically appear under the transport stream element.

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
- Under the **LAN** elements, transport streams are listed in alphabetical order.

- 5 Repeat this procedure until you have added all required RTMP transport streams to your system configuration.
- 6 On the **File** menu, click **Save**. Alternatively, click the toolbar's **Save** button. Changes to the system are saved.


Modifying transport streams and HLS playlists

You may need to modify previously created stream information:


- One or more transport streams or HLS playlists have been added to a **LAN** element.
- The default configuration for a Kaleido-IP system includes eight predefined any-source multicast (ASM) streams, under **LAN2**. Before you can use these streams, you must adjust their settings to match the actual transport streams you want to monitor.

To modify transport stream or HLS playlist settings


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then navigate to the transport stream or master playlist you want to modify found under a **LAN** network interface. For example, a default multicast transport stream found under **LAN2**. See also [Kaleido-IP Multiviewer Ethernet Port Usage](#), on page 65.

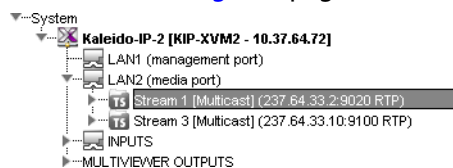

The settings for the selected stream or master playlist appear in the **Properties** pane.

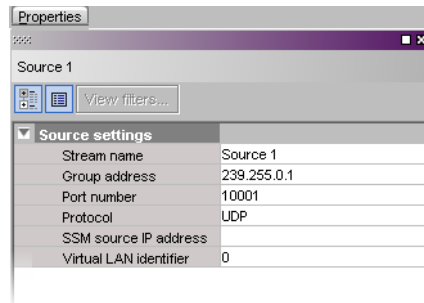

Source settings (example showing settings for an any-source multicast stream)

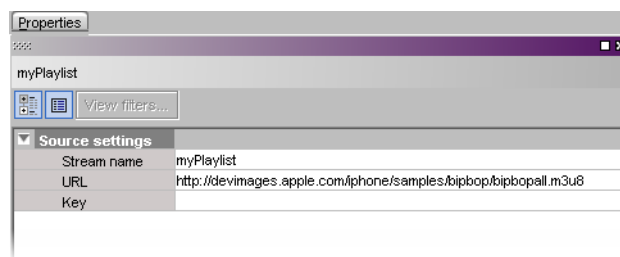

Source settings (example showing settings for an HLS master playlist)

- 3 Replace the stream name if necessary and then, depending on the stream type:
 - Select the appropriate protocol (RTP, UDP).
 - Enter the multicast group IP address (in the case of a multicast stream) and port number associated with the actual transport stream you want to monitor.
 - In the case of an SSM (or SFM) stream, enter the IP address associated with the specific source you want to monitor in the **SSM source IP address** box.
 - In the case of a multicast stream constrained to a virtual LAN, enter the appropriate VLAN identifier.


Note: VLAN adapter settings must have been previously configured in XAdmin. Refer to *Configuring Virtual LAN Adapters on a Kaleido-IP* in the *Kaleido-IP Installation & Service Manual* for more information. See [Related Documentation](#), on page 13.

- In the case of an HLS master playlist, RTSP stream, or RTMP stream, enter the new URL.

Notes

- The Kaleido Software supports UTF-8 encoded stream names. The only characters, which cannot be used in a stream name are: @ / \ ' and ".
 - Verify the protocol you selected. Registering an RTP stream as UDP instead of RTP may result in the decoded video appearing jerky or accelerated on the monitor wall.
 - For HLS playlists, both HTTP and HTTPS protocols are supported.
-

The Kaleido-IP establishes a connection with the stream provider. In the case of an HLS playlist, a *master playlist* element including all *media playlists* specified in the master playlist automatically appears under the **LAN** elements, in the System list. All programs that are part of a transport stream or specified in a media playlist, and the elementary streams included in these programs, automatically appear under the transport stream or media playlist element.

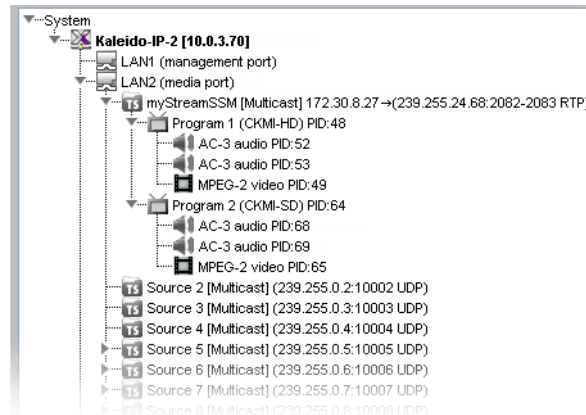

Example showing programs and elementary streams for a single-source multicast stream


- 4 Repeat this until you have completed the required configuration changes to match the set of transport streams you want to monitor.
- 5 If there are default transport streams left, which you will not use, see [Removing transport streams and HLS playlists](#), on page 77.
- 6 On the **File** menu, click **Save**. Alternatively, click the Save button on the toolbar. Changes to the system are saved.

Removing transport streams and HLS playlists

To remove transport streams or HLS playlists from your system configuration

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then navigate to the master playlist or transport stream you want to remove.
- 3 If you want to remove multiple transport streams and master playlists in a single operation, then extend your selection by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts.

- 4 Right-click the selection, and then click **Remove**.

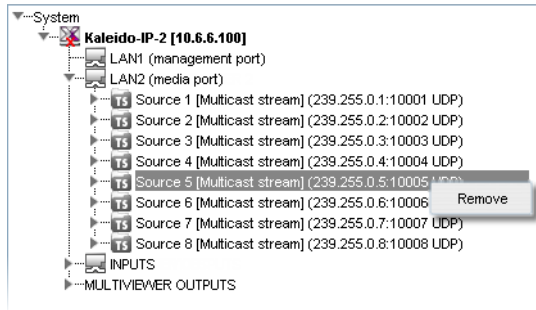

- 5 When prompted to confirm, click **Yes**.

- 6 On the **File** menu, click **Save**.

Changes to the system are saved. If you are not planning on adding the removed streams back to your system, then you might now want to remove logical sources that were based on them: see [Removing logical sources for removed programs in a transport stream](#) on page 93.

Importing an Input Configuration from a Spreadsheet

This feature only applies to creating Network Sources.

If you need to monitor a large number of programs, you may find it convenient to import related configuration information from a spreadsheet in XLS or XLSX format. Once this file has been imported, the logical sources associated with the programs specified in the spreadsheet will be automatically added to the sources table. A sample spreadsheet is available. See [Software and Firmware Updates](#), on page 14.

WARNING

Grass Valley recommends making a backup of your system before importing stream configuration information from a spreadsheet. When you import streams from a spreadsheet, this erases all previously imported streams and associated logical sources. It may also overwrite streams that you had manually added (and logical sources) if they have the same name or index as a stream whose configuration is being imported.

Preparing a spreadsheet with stream lineup information

The spreadsheet file must contain the following:

- information about the *programs* you want to monitor, and the *transport streams* to which they belong,
- information about the *logical sources* that will be added to the sources table for these programs, including any *static text levels* you may want to add.

Notes

- Kaleido-IP X320, X310, X120 and X110 multiviewers support 6000 logical sources.

Notes (continued)

- In the case of the Kaleido-IP X300, to support more than 1500 sources, or to be able to use Kaleido Software version 7.90 or higher, the multiviewer's RAM must be upgraded to 24 GB. To order an upgrade kit, contact [Grass Valley Technical Support](#), on page 536 and order part number *KIP-X300-MEMORY-UPGRADE*. The document *Kaleido-IP X300 Memory Upgrade* (M926-9907) procedure is supplied with the kit.
 - The Kaleido-IP X100 is limited to 1500 sources. To be able to use Kaleido Software version 7.90 or higher, the multiviewer's RAM must be upgraded to 16 GB. To order an upgrade kit, contact [Grass Valley Technical Support](#), on page 536 and order part number *KIP-X100-MEMORY-UPGRADE*. The document *Kaleido-IP X100 Memory Upgrade* (M926-9807) procedure is supplied with the kit.
 - RTSP, RTMP, HTTP or HTTPS streams cannot be imported from a spreadsheet.
-

The spreadsheet is organized as follows:

- Two heading rows. The first heading row divides the spreadsheet into four main areas:
 - Programs. This area occupies the first column (A).
 - Transport streams. This area spans columns B–G.
 - Logical sources. This area spans columns H–J.
 - Additional static text levels (optional). This area starts at column K, and can extend to as many columns as you need. Text you enter on the second heading row in this area will be imported.
- One row for every program you want to monitor.

To prepare the spreadsheet file

- 1 Using your spreadsheet software, either open a copy of the sample spreadsheet file or create a new spreadsheet.
- 2 Enter the information about a program, and the transport stream to which it belongs:

In this column...		Enter this information...
A	Program number	The program number (MPEG ID), for the program you want to monitor.
B	Stream name	A name to identify the transport stream that includes this program. Alternatively, you can leave this cell blank, in which case a default name will be created. Stream names that only contain digits <i>and have decimal positions that are all zeros</i> must be preceded with an apostrophe in the spreadsheet.
C	Multicast group IP address	The multicast group IP address. In the case of a unicast stream, leave the cell blank.
D	Port number	The appropriate port number.
E	SSM/SFM source IP address	In the case of a source-specific multicast (SSM) or source-filtered multicast (SFM) transport stream, enter the source IP address.

In this column...		Enter this information...
F	Protocol	RTP or UDP.
G	NIC	The LAN identifier: see Kaleido-IP Multiviewer Ethernet Port Usage , on page 65 for Ethernet port usage information. The number of LANs varies depending on the Kaleido-IP model (see Representation of Multiviewer Models in Kaleido Software on page 27).

	A	B	C	D	E	F	G
1	Programs	Transport streams (SPTS or MPTS)					
2	Program number (MPEG ID)	Stream name (if left blank a default name will be created)	Multicast group IP address (leave blank for unicast stream)	Port number	SSM/SFM source IP address (leave blank if not used)	Protocol (RTP/UDP)	NIC (LAN1 to LAN6)
3	101	MAIN-MUX1	239.255.0.101	10001		UDP	LAN2
4	201	MAIN-MUX1	239.255.0.101	10001		UDP	LAN2
5	101	BACKUP-MUX1	239.255.0.101	10001		UDP	LAN3
6	201	BACKUP-MUX1	239.255.0.101	10001		UDP	LAN3
7	10001	SPTS1	239.255.0.101	10050		UDP	LAN2
8	505	SPTS2_SSM1	239.255.0.106	10060	192.168.1.1	UDP	LAN2
9	505	SPTS2_SSM2	239.255.0.106	10060	192.168.1.2	UDP	LAN2
10	1	UNICAST		2000		UDP	LAN2
11	1	UNICAST_RTP		1002		RTP	LAN2
12							
13							

Sample spreadsheet: Programs, and Transport streams areas

- Enter the information that will be used to create the logical source associated with this program:

In this column...		Enter this information...
H	Index	If your system involves a control panel from which you control your multiviewer as a router, set a source number for the logical source associated with this program to be available through the <i>KX Router</i> logical router, by entering the appropriate number in this column. Source numbers must be unique.
I	Category	Text in this column can be used to group related logical sources together, when you sort the sources table in XEdit (see Sorting the Sources Table on page 104). The category text can have up to 200 characters.
J	Name	The name of the logical source. Names are limited to 48 characters. Logical source names that only contain digits <i>and have decimal positions that are all zeros</i> must be preceded with an apostrophe in the spreadsheet.

H	I	J
Logical sources		
Category/Name must be unique		
Index must be unique		
Index	Category	Name
41	MAIN-MUX1	101
42	MAIN-MUX1	201
43	BACKUP-MUX1	101
44	BACKUP-MUX1	201
45	MyCategory	Example1
46	MyCategory	Example2
47	MyCategory	Example3
48	MyCategory	Example4
49	MyCategory	Example5

Sample spreadsheet: Logical sources area

- 4 Optionally, use the columns, starting at column K, to add static text levels. Enter the level name on the second heading row.

K	L	M	N
Additional static text levels for logical sources			
[Name of static text level 1]	[Name of static text level 2]	[Name of static text level 3]	[Name of static text level 4]
MyText1	st2-1	st3-1	st4-1
MyText2	st2-2	st3-2	st4-2
MyText3	st2-3	st3-3	st4-3
MyText4	st2-4	st3-4	st4-4
MyText5	st2-5	st3-5	st4-5
MyText6	st2-6	st3-6	st4-6
MyText7	st2-7	st3-7	st4-7
MyText8	st2-8	st3-8	st4-8
MyText9	st2-9	st3-9	st4-9

Sample spreadsheet: Additional static text levels area


Static text level names and data that only contain digits *and have decimal positions that are all zeros* must be preceded with an apostrophe in the spreadsheet.

- 5 Repeat this procedure until you have added the required information for all the programs you want to monitor.

To import a set of streams from a spreadsheet file


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 On the **File** menu, click **Import**.

XEdit prompts you for confirmation.

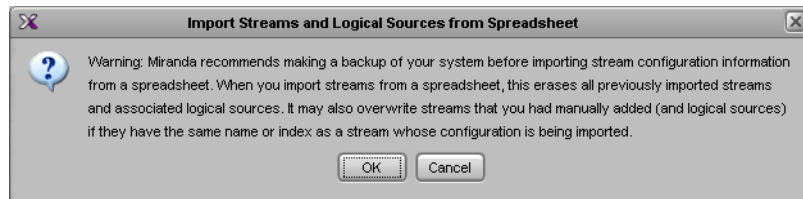


- 3 Click **OK** to continue, if you are confident that you have a backup so that you can restore your system if needed - see [Creating a Backup](#), on page 40.
- 4 Navigate to the spreadsheet file you want to import, select it, and then click **Open**.

XEdit validates the following: IP address range, LAN number, protocol, consistency of stream name vs. stream information (group and source IP addresses + port), duplicate stream names, duplicate logical source information (category + name), duplicate logical source index, and will report any error. If no errors were found, then the following message appears.

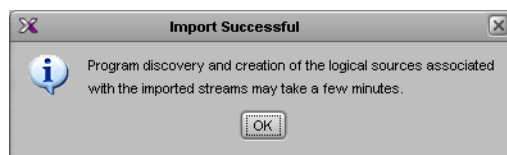

5 Click **OK** to continue.

The streams appear under the specified LANs.

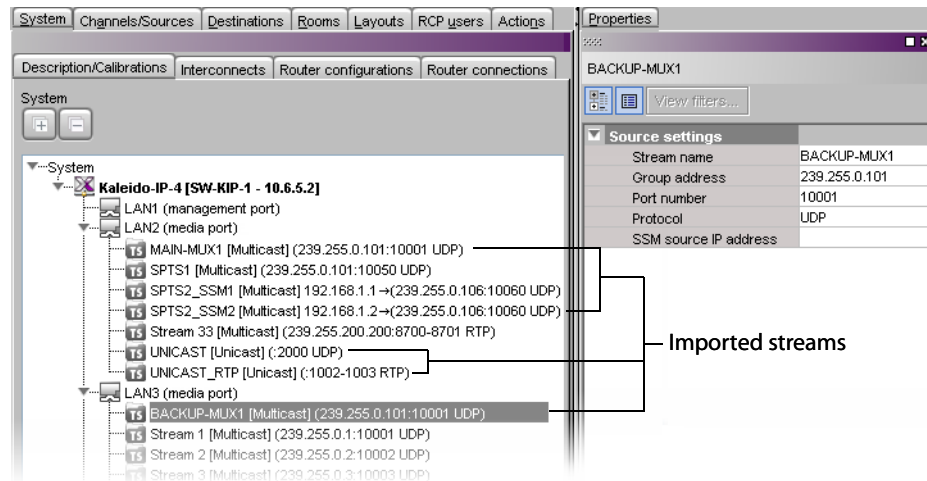

Example showing streams imported from the sample spreadsheet file.

After a few minutes, if XEdit is connected to the multiviewer, all programs included in the transport streams are discovered.

Note: The set of discovered programs does not necessarily match the programs listed in the spreadsheet. The discovery being a dynamic process, it may find more (or less) programs.

In addition, logical sources for the programs listed in the spreadsheet you imported are automatically added to the sources table. If XEdit is not connected to the multiviewer, then the new sources' video levels appear in red in the sources table. In such case, the sources table will be updated when you work in online mode once you have exported the database to the multiviewer.

System Channels/Sources Destinations Rooms Layouts RCP users Actions				
Channels/Sources		Source info		Video
	#	Cat.	Name	video1
/BACKUP-MUX1/101	43	BACKUP-MUX1	101	PG-NUM:101 ES-PID-ORD:1
/BACKUP-MUX1/201	44	BACKUP-MUX1	201	PG-NUM:201 ES-PID-ORD:1
/MAIN-MUX1/101	41	MAIN-MUX1	101	PG-NUM:101 ES-PID-ORD:1
/MAIN-MUX1/201	42	MAIN-MUX1	201	PG-NUM:201 ES-PID-ORD:1
/MyCategory/Example1	45	MyCategory	Example1	PG-NUM:10001 ES-PID-ORD:1
/MyCategory/Example2	46	MyCategory	Example2	PG-NUM:505 ES-PID-ORD:1
/MyCategory/Example3	47	MyCategory	Example3	PG-NUM:505 ES-PID-ORD:1
/MyCategory/Example4	48	MyCategory	Example4	PG-NUM:1 ES-PID-ORD:1
/MyCategory/Example5	49	MyCategory	Example5	PG-NUM:1 ES-PID-ORD:1
/Stream 1/PG-NUM1	1	Stream 1	PG-NUM1	PG-NUM:1 ES-PID-ORD:1
/Stream 1/PG-NUM137	1	Stream 1	PG-NUM137	PG-NUM:137 ES-PID-ORD:1
/Stream 1/PG-NUM138	2	Stream 1	PG-NUM138	PG-NUM:138 ES-PID-ORD:1
/Stream 1/PG-NUM139	3	Stream 1	PG-NUM139	PG-NUM:139 ES-PID-ORD:1
/Stream 1/PG-NUM163	4	Stream 1	PG-NUM163	PG-NUM:163 ES-PID-ORD:1
/Stream 1/PG-NUM165		Stream 1	PG-NUM165	PG-NUM:165 ES-PID-ORD:1

Logical sources created from imported programs

Should you want to add audio, dynamic text, alarm and time code levels to these logical sources, you may complete all physical assignments for one logical source, which you can then designate as the *template*. By applying the template, you will be able to populate the remaining levels in a single operation. See [Defining Physical Assignments](#) on page 98, for more information.


Configuring Virtual Inputs

For more information about a Virtual Input, see [What is a Virtual Input?](#), on page 64.


Adding Virtual Inputs

To add an Input device

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then click the **INPUTS** element.
- 3 Drag **Input Device** from the **Tools** pane onto the **INPUTS** element.

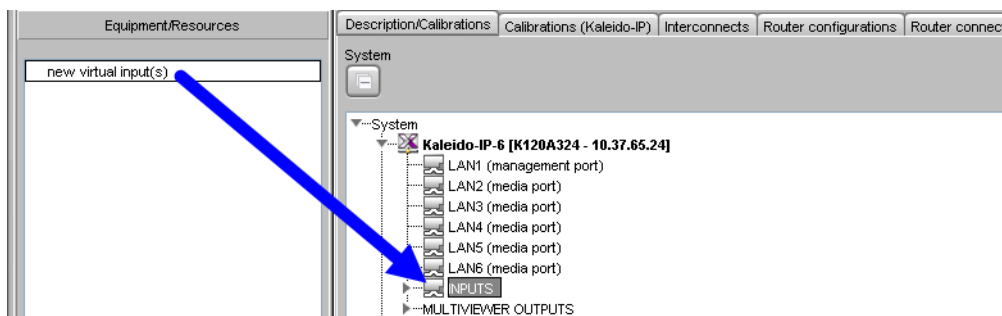


- 4 In **Insert virtual input(s)**, set the quantity of virtual inputs to create, and then click **OK**.

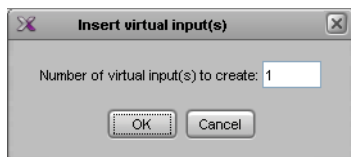


A predefined Input device skeleton appears under **INPUTS**, in the System list. The source stream must be configured for each individual **INPUT**.

- 5 Expand the System hierarchical list and select a numbered input.

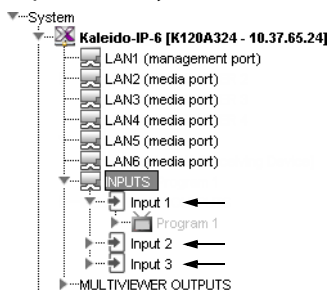


The settings for the selected input appear in the **Properties** pane.

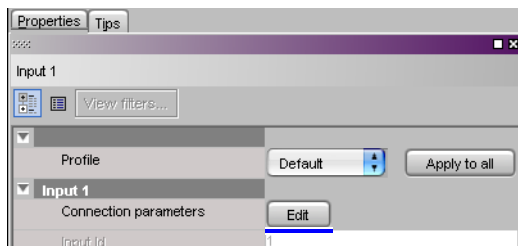

- 6 Click **Edit** in the **Properties** pane.

The *Virtual Input Configuration* screen opens.

7 Configure the input stream's source.

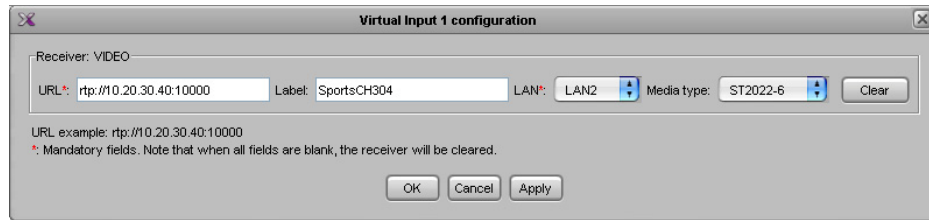


Virtual Input Configuration settings

Parameter	Description
URL	Enter the Real-time Transport Protocol (RTP) URL (In the form rtp://<ip_address>:<port>) associated with the transport stream you want to monitor.
Label	Optionally enter a descriptive label for the stream.
LAN	Select the LAN port (and the network) that has IP connectivity to the stream's source. See also Kaleido-IP Multiviewer Ethernet Port Usage , on page 65.
Media type	The transport standard used by the stream: ST2022-6: Standard to transport video over IP network.
Clear	Click to deallocate this virtual input. This stops the currently-configured stream from using network bandwidth.

8 Click **OK**.

The configuration information for this input is shown in the **Properties** pane.

The Kaleido-IP starts receiving the stream. Stream elements that are present will be shown in black. Unavailable elements will be grayed out.

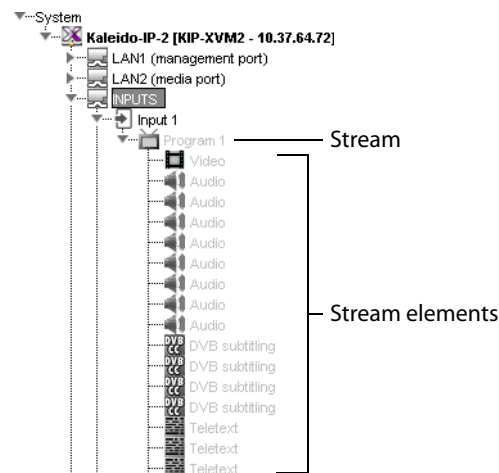

Example showing the programs and elementary streams of a Virtual Input

Once an input has been created for each source, you can assign these logical sources to monitors in a layout.

Modifying Virtual Inputs


You may need to modify previously created virtual inputs that have been added to an **INPUT** element.

To modify virtual inputs settings


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and under **INPUTS**, navigate to the virtual input you want to modify.



The settings for the selected virtual input appears in the **Properties** pane.

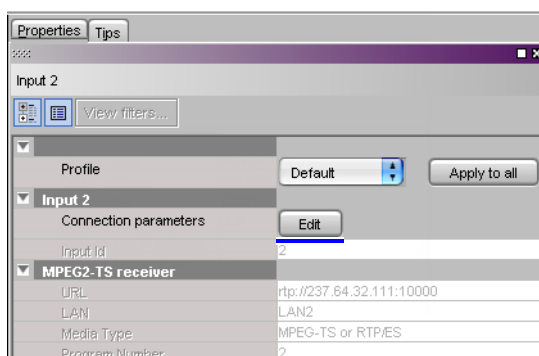

- 3 Click **Edit** in the **Properties** pane.
The *Virtual Input Configuration* screen opens.
- 4 Configure the input stream's source.

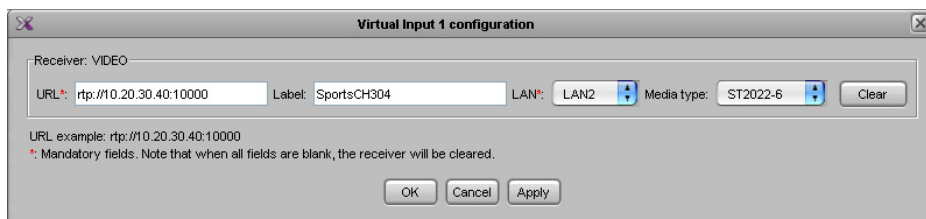

Virtual Input Configuration settings


Parameter	Description
URL	Enter the Real-time Transport Protocol (RTP) URL (In the form rtp://<ip_address>:<port>) associated with the transport stream you want to monitor.
Label	Optionally enter a descriptive label for the stream.
LAN	Select the LAN port (and the network) that has IP connectivity to the stream's source. See also Kaleido-IP Multiviewer Ethernet Port Usage , on page 65.

Parameter	Description
Media type	The transport standard used by the stream: ST2022-6: Standard to transport video over IP network.
Clear	Click to deallocate this virtual input. This stops the currently-configured stream from using network bandwidth.

5 Click **OK**.

The configuration information for this input is shown in the **Properties** pane.

The Kaleido-IP starts receiving the stream. Stream elements that are present will be shown in black. Unavailable elements will be grayed out.

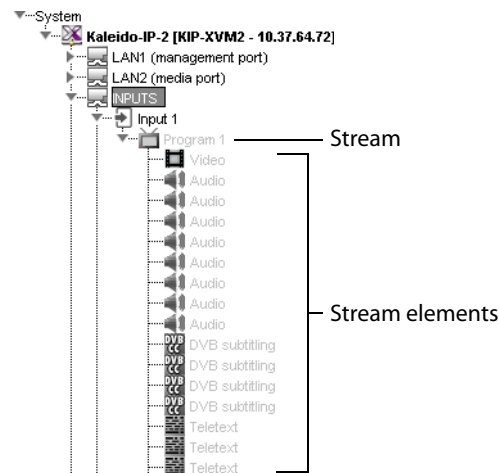

Example showing the programs and elementary streams of a Virtual Input


- 6 Repeat this until you have completed the required configuration changes to match the set of virtual inputs you want to monitor.
- 7 If there are virtual inputs left which you will not use, see [Removing Virtual Inputs](#), on page 87.
- 8 On the **File** menu, click **Save**. Alternatively, click the Save button on the toolbar.
Changes to the system are saved.

Removing Virtual Inputs

To remove virtual inputs from your system configuration

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second level tab bar.
- 2 Expand the System hierarchical list, and then navigate to the virtual input you want to remove.
- 3 If you want to remove multiple virtual inputs in a single operation, then extend your selection by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts.

- 4 Right-click the selection, and then click **Remove**.

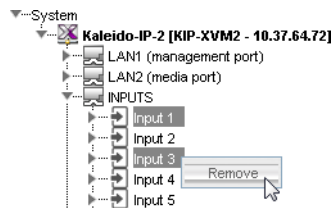

- 5 When prompted to confirm, click **Yes**.

- 6 On the **File** menu, click **Save**.

Changes to the system are saved. If you are not planning on adding the removed streams back to your system, then you might now want to remove logical sources that were based on them: see [Removing logical sources for removed programs in a transport stream](#) on page 93.

5

Logical Sources

Introduction

This chapter explain how to configure logical sources for your multiviewer system.

Key Concepts

Term	Description
Logical source	A <i>logical source</i> (called a <i>channel</i>, in earlier versions of the Kaleido Software user interface, and related documentation) refers to a group of physical audio, video, or metadata sources, and text attributes. A logical source can be used as a whole, and assigned to a virtual monitor. The Kaleido Software supports up 7000 logical sources. Notes: • The KMV-3901/3911, Kaleido-MX, Kaleido-MX 4K, Kaleido-IP X100, KMX-49N1, KMX-3921, and Kaleido-Modular-X support up to 1500 logical sources. • Kaleido-IP X320, X310, X120, X110, Kaleido-X, and Kaleido-X16 multiviewers support up to 6000 logical sources. In the case of the Kaleido-IP X300, to support more than 1500 sources, or to be able to use Kaleido Software version 7.90 or higher, the multiviewer's RAM must be upgraded to 24 GB. To order an upgrade kit, contact Grass Valley Technical Support, on page 536 and order part number <i>KIP-X300-MEMORY-UPGRADE</i>. The document <i>Kaleido-IP X300 Memory Upgrade</i> (M926-9907) procedure is supplied with the kit. • If you choose to configure your multiviewer system with a large number of logical sources (i.e., more than 1500), you should disable global alarm contribution for all alarm levels in the sources table (see Global Alarms on page 162), to improve the system performance. When you save the sources table, if there are more than 1500 sources, XEdit prompts you to let it disable these contributions for you (see Managing Logical Source Count Prompts on page 97).
Level	Within a logical source, attributes are organized by <i>levels</i> belonging to either of the following categories: Source info, Video, Audio, Text, Alarm, Time code, and Color. For example, the video level category may comprise multiple levels, each representing a specific physical part of a video signal.

Term	Description
Incremental copy	Once a logical source (channel) is configured, it is possible to use incremental copy to automatically propagate appropriate physical assignments to other adjacent logical sources. For instance, if the current logical source's levels are assigned from Video 1, then the incremental copy tool will automatically assign corresponding physical elements from Video 2 to the next logical source's levels, and so on. Alternatively, if only one or a few specific levels are to be similarly configured, it is possible to use incremental copy on the corresponding level column only.
Incremental copy handle	In the sources table, the incremental copy handle is indicated by a small square  at the bottom right of the selected cell.

 
Creating and Configuring Logical Sources

When opening XEdit in offline mode, the initial database is populated with the default configuration for a Kaleido-X (7RU) system, including a fully-populated frame (all cards present) and a set of predefined logical sources. The *KX Router* logical router is also created as a 96×80 router where the 96 inputs are the multiviewer's logical sources, the first 48 outputs are those from the two router cards, and the last 32 outputs are monitor wall destinations.

Likewise, when you replace the initial Kaleido-X (7RU) with the appropriate multiviewer model that matches your actual system, you can choose to have your local database populated with a default set of logical sources and a preconfigured *KX Router* logical router.

Automatically Adding Logical Sources

A set of logical sources based on external video router sources or on multiviewer inputs can be added to the sources table, as a single operation, by clicking **Create logical sources** on the menu that appears when you right-click supported elements in the filtered system list.



Alternatively, in the case of a Kaleido-IP, a set of logical sources is also automatically created if you import the stream lineup from a spreadsheet file (see [Importing an Input Configuration from a Spreadsheet](#) on page 78).

About Automatic Sources Creation

From the same menu, you can also set *Activate automatic sources creation* if you want the multiviewer to create new logical sources automatically with the same settings as existing programs when the multiviewer detects new program elements as they become available in the transport stream. Similarly, when sources are added or modified in a router's own configuration environment, logical sources will be added or updated automatically in the multiviewer's sources table.

The *Activate automatic sources creation* option only creates new logical sources from newly detected program streams. When a program stream is no longer present, or when a router source is no longer present, this feature does not automatically remove the corresponding


logical source that was automatically created. You must do this manually. See [Removing logical sources for removed programs in a transport stream](#), on page 93. Only remove logical sources for programs that you know will never return, as a rediscovered program stream will be created with a new internal ID that will not match up with the ID of the first instance. This means that you will have to reassign the channel/sources to the monitors.

To define logical sources for a transport stream


This procedure shows how to add "On Demand" Network Sources and "On Demand" Router Sources which are activated only when they are displayed through a logical source. See also [Logical Sources](#), on page 20

A Kaleido-IP multiviewer is used to illustrate the following procedure, however, the same procedure applies to all types of multiviewer inputs, including inputs from "On Demand" Router Sources.

- 1 In the main window, click the **Channels/Sources** tab.

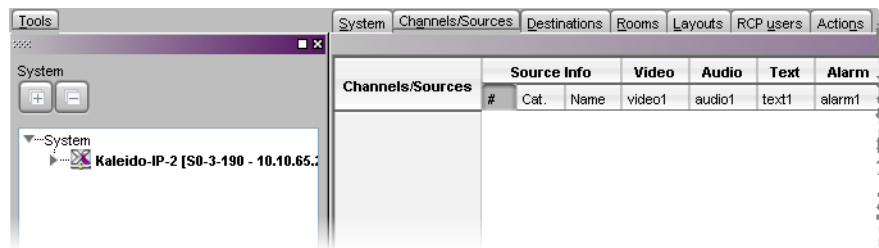

- 2 On the **Tools** pane, expand the multiviewer, and navigate to the transport stream for which you want to define logical sources.
- 3 Right-click the transport stream, and then click **Create logical sources** on the menu. See also [About Automatic Sources Creation](#), on page 90.

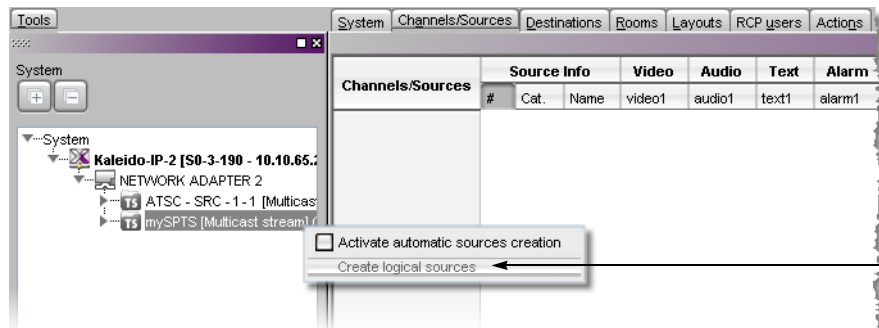

Logical sources are automatically created for every program signal found in the selected transport stream.

Channels/Sources	Source Info			Video	Audio	Program Number
	#	Cat.	Name	video1	audio1	
mySPTS:PG-NUM1		mySPTS	PG-NUM1	PG-NUM1 ES-IDX:1	PG-NUM1 ES-PID:52	PG-Num: 1

Notes

- Under **Source info**, dynamic and static names resulting from the **Name** level assignments are limited to 48 characters and automatically truncated as needed.
- If the case of router sources, if the router is subject to frequent dimension changes, then you may want to select **Activate automatic sources creation**.
- Auto detected Level assignments follow reference “template” channel, identified by a “T” icon.

- 4 Repeat until you have added logical sources for every stream you want to monitor.
- 5 If your system involves a control panel from which you will control your multiviewer as a router, then configure source numbers for the *KX Router* logical router, by typing the appropriate numbers in the first column (#) under **Source info**, and using the incremental copy tool as needed.

Channels/Sources	Source Info			Video
	#	Cat.	Name	video1
 /ATSC - SRC - 1/PG-NUM2	1	ATSC - SRC - 1	PG-NUM2	PG-NUM:1 ES-IDX:1
 /ATSC - SRC - 1/PG-NUM3	2	ATSC - SRC - 1	PG-NUM3	PG-NUM:1 ES-IDX:1
 /ATSC - SRC - 1/PG-NUM4	3	ATSC - SRC - 1	PG-NUM4	PG-NUM:1 ES-IDX:1
 /ATSC - SRC - 1/PG-NUM6	4	ATSC - SRC - 1	PG-NUM6	PG-NUM:1 ES-IDX:1
 /ATSC - SRC - 1/PG-NUM7	5	ATSC - SRC - 1	PG-NUM7	PG-NUM:1 ES-IDX:1

- 6 On the **File** menu, click **Save**.


Managing Logical Sources Associated with Programs in a Transport Stream

In the case of a Kaleido-IP system, you may need to add or remove sources, from time to time, when programs are added or removed from a transport stream.

Adding logical sources for new programs in a transport stream

To add a logical source for a new program in a transport stream

- 1 Connect XEdit to the Kaleido-IP (see [Using XEdit in Online Mode](#) on page 32), and then click the **Channels/Sources** tab.
- 2 On the **Tools** pane, navigate to the transport stream that includes the new program.
- 3 Right-click the program, and then click **Create logical sources** on the menu.

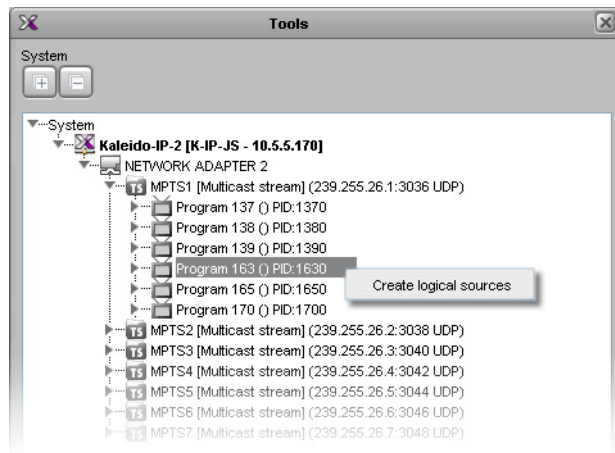

A new entry appears in the sources table, with all assignments based on the logical source template (see [Defining Physical Assignments](#) on page 98).

Note: Under **Source info**, dynamic and static names resulting from the **Name** level assignments are limited to 48 characters and automatically truncated as needed.

- 4 On the **File** menu, click **Save**.

Removing logical sources for removed programs in a transport stream

To remove logical sources associated with programs that are not present anymore

- 1 Connect XEdit to the Kaleido-IP (see [Using XEdit in Online Mode](#) on page 32) and then click the **Channels/Sources** tab.

Logical sources associated with programs that have been removed from a transport stream will have elements marked in red.

System Channels/Sources Destinations Rooms Layouts RCP users Actions					
Channels/Sources	Source info		Video		Audio
	#	Cat.	Name	video1	audio1
☐ MPTS1	1		MPTS1	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1
☐ MPTS2	2		MPTS2	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1
☐ MPTS3	3		MPTS3	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1
☐ MPTS4	4		MPTS4	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ MPTS5	5		MPTS5	PG-IDX:3 ES-IDX:1	PG-IDX:3 ES-IDX:1
☐ MPTS6	6		MPTS6	PG-IDX:5 ES-IDX:1	PG-IDX:5 ES-IDX:1
☐ MPTS7	7		MPTS7	PG-IDX:7 ES-IDX:1	PG-IDX:7 ES-IDX:1
☐ SPTS1	8		SPTS1	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ SPTS2	9		SPTS2	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ SPTS3	10		SPTS3	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ SPTS4	11		SPTS4	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ SPTS5	12		SPTS5	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1
☐ SPTS6	13		SPTS6	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1

- 2 Select these sources (using the multi-selection Shift+click or Ctrl+click keyboard shortcuts to extend your selection as needed).
- 3 Right-click the selection, and then click **Delete selected sources** on the menu.

System	Channels/Sources	Destinations	Rooms	Layouts	RCP users	Actions
Channels/Sources		Source info		Video	Audio	
	#	Cat.	Name	video1	audio1	
☐	MPTS1	1	MPTS1	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1	
☐	MPTS2	2	MPTS2	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1	
☐	MPTS3	3	MPTS3	PG-IDX:2 ES-IDX:1	PG-IDX:2 ES-IDX:1	
☐	MPTS4	4	MPTS4	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	MPTS5	5	MPTS5	PG-IDX:3 ES-IDX:1	PG-IDX:3 ES-IDX:1	
☐	MPTS6	6	MPTS6	PG-IDX:5 ES-IDX:1	PG-IDX:5 ES-IDX:1	
☐	MPTS7	7	MPTS7	PG-IDX:7 ES-IDX:1	PG-IDX:7 ES-IDX:1	
☐	SPTS1	8	SPTS1	PG-IDX:1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	SPTS2			C1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	SPTS3			C1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	SPTS4			C1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	SPTS5			C1 ES-IDX:1	PG-IDX:1 ES-IDX:1	
☐	SPTS6			C1 ES-IDX:1	PG-IDX:1 ES-IDX:1	

Add source
Delete selected sources
Set source as template
Apply template to all sources
Apply template to selected sources

- On the **File** menu, click **Save**.
- Click the **Layouts** tab, open the appropriate layouts, locate any monitors that included assignments based on the sources you just deleted, and update their configuration as required (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).

Manually adding a Logical Source

To add a logical source

- Click the **Channels/Sources** tab in the main window.

The sources table appears.

System	Channels/Sources	Destinations	Rooms	Layouts	RCP users	Actions				
Channels/Sources	Source info			Video	Audio	Text	Alarm	Time code	Color	
	#	Cat.	Name	video1	audio1	text1	Loss	timecode1	color	
 Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video loss	A01 Vid. TC		
 Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2	A02 Video loss	A02 Vid. TC		
 Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3	A03 Video loss	A03 Vid. TC		
 Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4	A04 Video loss	A04 Vid. TC		
 Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5	A05 Video loss	A05 Vid. TC		
 Input A/Channel 06	6	Input A	Channel 06	A06	A06 Emb 1	InputA-video6	A06 Video loss	A06 Vid. TC		
 Input A/Channel 07	7	Input A	Channel 07	A07	A07 Emb 1	InputA-video7	A07 Video loss	A07 Vid. TC		
 Input A/Channel 08	8	Input A	Channel 08	A08	A08 Emb 1	InputA-video8	A08 Video loss	A08 Vid. TC		
 Input A/Channel 09	9	Input A	Channel 09	A09	A09 Emb 1	InputA-video9	A09 Video loss	A09 Vid. TC		
 Input A/Channel 10	10	Input A	Channel 10	A10	A10 Emb 1	InputA-video10	A10 Video loss	A10 Vid. TC		
 Input A/Channel 11	11	Input A	Channel 11	A11	A11 Emb 1	InputA-video11	A11 Video loss	A11 Vid. TC		
 Input A/Channel 12	12	Input A	Channel 12	A12	A12 Emb 1	InputA-video12	A12 Video loss	A12 Vid. TC		
 Input A/Channel 13	13	Input A	Channel 13	A13	A13 Emb 1	InputA-video13	A13 Video loss	A13 Vid. TC		
 Input A/Channel 14	14	Input A	Channel 14	A14	A14 Emb 1	InputA-video14	A14 Video loss	A14 Vid. TC		
 Input A/Channel 15	15	Input A	Channel 15	A15	A15 Emb 1	InputA-video15	A15 Video loss	A15 Vid. TC		
 Input A/Channel 16	16	Input A	Channel 16	A16	A16 Emb 1	InputA-video16	A16 Video loss	A16 Vid. TC		
 Input B/Channel 01	17	Input B	Channel 01	B01	B01 Emb 1	InputB-video1	B01 Video loss	B01 Vid. TC		
 Input B/Channel 02	18	Input B	Channel 02	B02	B02 Emb 1	InputB-video2	B02 Video loss	B02 Vid. TC		
 Input B/Channel 03	19	Input B	Channel 03	B03	B03 Emb 1	InputB-video3	B03 Video loss	B03 Vid. TC		
 Input B/Channel 04	20	Input B	Channel 04	B04	B04 Emb 1	InputB-video4	B04 Video loss	B04 Vid. TC		

Note: The sources table is preconfigured with a set of default assignments, including at least one level under each level category. A symbol indicates the physical source for each assignment: for example, "A16" indicates input signal 16 on input card A. In the case of an expansion system, the symbol is prefixed with a frame identifier: either "FRA-" or "FRB-". On the Kaleido-X16, only the input numbers 01 to 16 appear. On a KMV-3901/3911, the input numbers 1 to 8 (or 1 to 4, in the case of the 4 × 1 and 4 × 2 models) appear.

2 On the **File** menu, click **New**.

Alternatively right-click the **Channels/Sources** column heading, and then click **Add source** on the menu.

System	Channels/Sources	Destinations	Rooms	Layouts	RCP users	Actions
Channels/Sources		Source info	Video	Audio	Text	
		Name	video1	audio1	text1	
Input A/Channel 0		Channel 01	A01	A01 Emb 1	InputA-video1	
Input A/Channel 1		Channel 02	A02	A02 Emb 1	InputA-video2	
Input A/Channel 03		Channel 03	A03	A03 Emb 1	InputA-video3	
Input A/Channel 04		Channel 04	A04	A04 Emb 1	InputA-video4	
Input A/Channel 05		Channel 05	A05	A05 Emb 1	InputA-video5	
Input A/Channel 06		Channel 06	A06	A06 Emb 1	InputA-video6	

A logical source is added at the bottom of the sources table.

Input F/Channel 10	90	Input F	Channel 10	F10	F10 Emb 1	InputF-video10	F10 Vid. TC
Input F/Channel 11	91	Input F	Channel 11	F11	F11 Emb 1	InputF-video11	F11 Vid. TC
Input F/Channel 12	92	Input F	Channel 12	F12	F12 Emb 1	InputF-video12	F12 Vid. TC
Input F/Channel 13	93	Input F	Channel 13	F13	F13 Emb 1	InputF-video13	F13 Vid. TC
Input F/Channel 14	94	Input F	Channel 14	F14	F14 Emb 1	InputF-video14	F14 Vid. TC
Input F/Channel 15	95	Input F	Channel 15	F15	F15 Emb 1	InputF-video15	F15 Vid. TC
Input F/Channel 16	96	Input F	Channel 16	F16	F16 Emb 1	InputF-video16	F16 Vid. TC
Channel1			Channel1				

Notes

- Under **Source info**, you can change the logical source name and path, resulting from the **Name** and **Cat.** level assignments. For example, "Channel 1" can be renamed "Cam 1" or assigned a dynamic name. You can group related logical sources together, by adding static or dynamic text elements to the **Cat.** level, and then sorting the table as needed, to suit your purposes (see [Sorting the Sources Table](#) on page 104). You can also apply a filter to the table, so that sources that do not match the filter be hidden from view (see [Filtering the Sources Table](#) on page 104).
- When a logical source's name or category changes, the row header is updated accordingly.
- When applying an *overall* incremental copy (from the row header), the **Source info** columns and the Video levels are excluded. These columns must be incremented individually. The overall incremental copy features relies on a video level having been populated first.

3 On the **File** menu, click **Save**.

The sources table is saved.

Managing Levels

Adding a level

Note: To be able to monitor a 3D stereoscopic signal, you must first add a second video level to your logical sources (so you have a level for each eye), and then for each video monitor or composite you want to use for 3D monitoring, you must assign the left-eye and right-eye levels.

To add a level

- 1 Click the **Channels/Sources** tab in the main window.

The level categories Video, Audio, Text, Alarm, Time code, and Color appear as main column headings in the sources table.

System Channels/Sources Destinations Rooms Layouts RCP users Actions									
Channels/Sources	Source info			Video	Audio	Text	Alarm	Time code	Color
	#	Cat.	Name	video1	audio1	text1	alarm1	timecode1	color1
Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video loss	A01 Vid. TC	
Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2	A02 Video loss	A02 Vid. TC	
Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3	A03 Video loss	A03 Vid. TC	
Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4	A04 Video loss	A04 Vid. TC	
Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5	A05 Video loss	A05 Vid. TC	
Input A/Channel 06	6	Input A	Channel 06	A06	A06 Emb 1	InputA-video6	A06 Video loss	A06 Vid. TC	

← Level categories

- 2 Right-click the appropriate level category, and then click **Add level** on the menu.

Add level

Channels/Sources	Source info			Video	Audio	Text	Alarm	Time code	Color
	#	Cat.	Name	video1	audio1	text1	alarm1	timecode1	color1
Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video loss	A01 Vid. TC	
Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2	A02 Video loss	A02 Vid. TC	
Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3	A03 Video loss	A03 Vid. TC	
Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4	A04 Video loss	A04 Vid. TC	
Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5	A05 Video loss	A05 Vid. TC	
Input A/Channel 06	6	Input A	Channel 06	A06	A06 Emb 1	InputA-video6	A06 Video loss	A06 Vid. TC	

A new level appears under the selected category.

Channels/Sources	Source info			Video	Audio	Text		Alarm	Time code	Color
	#	Cat.	Name	video1	audio1	text1	text2	alarm1	timecode1	color1
 Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1		A01 Video loss	A01 Vid. TC	
 Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2		A02 Video loss	A02 Vid. TC	
 Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3		A03 Video loss	A03 Vid. TC	
 Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4		A04 Video loss	A04 Vid. TC	
 Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5		A05 Video loss	A05 Vid. TC	
 Input A/Channel 06	6	Input A	Channel 06	A06	A06 Emb 1	InputA-video6		A06 Video loss	A06 Vid. TC	

- 3 If you want to change the level name, click the level header, and then, in the **Properties** pane, type the new name in the **Level name** box.

In the case of an alarm level, you may also set its contribution to your system's global alarms. See [Configuring an alarm level's contribution](#) below.

- 4 On the **File** menu, click **Save**.


The sources table is saved.

Configuring an alarm level's contribution


You can select which alarm levels contribute to the global alarm associated with every logical source (see [Global Alarms](#) on page 162), and rank their individual contribution.

To configure an alarm level's contribution to your system's global alarms

- In the sources table, click the column header for the level you want to configure. The **Properties** pane shows the name of the selected alarm level, and its current contribution settings.

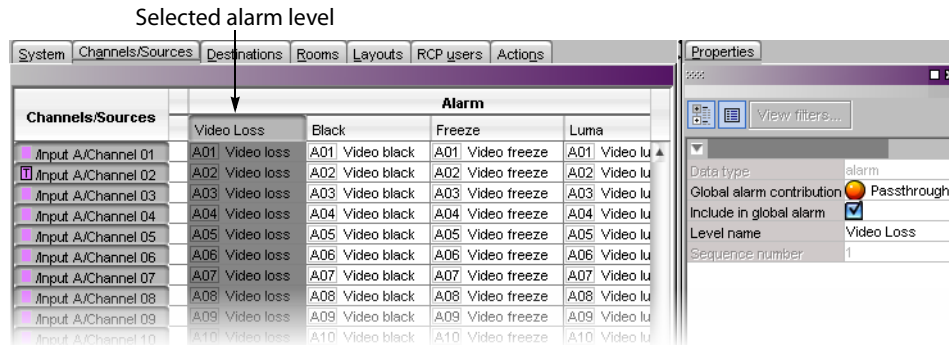

- If you want to exclude alarms in this level from the global alarm calculation, then clear the **Include in global alarm** check box.
- To rank this level's contribution to your system's global alarms, click the **Global alarm contribution** box, and then select the appropriate value from the list.

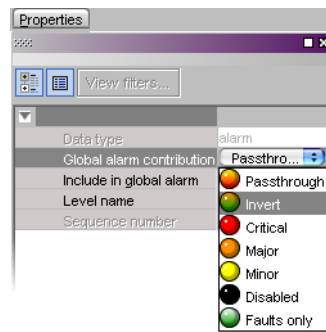

- **Passthrough:** This is the default value. Alarms in this level will pass their status unaltered to the global alarms.
- **Critical, Major, Minor, Disabled:** It is possible to override the error status of alarms when they are triggered. This is useful when, for example, a device is only able to report a status of either normal or error, but you want the error condition to be considered as minor in the global alarm calculation.
- **Invert:** Alarms in this level will pass the opposite of their status to the global alarms. This can be used, for example, to report alarms from GPI inputs, or to handle cases where an error is expected, and not seeing an error is a sign that something probably went wrong. See [Inverting an alarm](#), on page 174.
- **Faults only:** Alarms in this level will be mapped to normal unless their status is one of the fault statuses—usually critical, major, and minor.¹

Managing Logical Source Count Prompts

Note: This section applies to KMX-49N1, Kaleido-IP (except Kaleido-IP X100), Kaleido-X, and Kaleido-X16. All other multiviewer models are limited to 1500 logical sources.

¹ The list of fault status can be modified by scripting.

When you save the sources table, if there are more than 1500 sources, XEdit prompts you to let it disable global alarm contributions, for you (see [Logical source](#) on page 89).



- Regardless of whether you clicked **Yes** or **No**, XEdit will not prompt you again, unless the number of logical sources or the global alarm contribution settings changed.
- If you select the **Do not ask me again** check box, XEdit will no longer prompt you.

To restore logical source count prompting

- On the **Configure** menu, clear the **Do not warn about channel count** check box.

To disable logical source count prompting

- On the **Configure** menu, select the **Do not warn about channel count** check box.


Defining Physical Assignments

Once you have created a logical source, you must make the physical assignments. This is required before you can create a layout.

To make the physical assignments for a logical source

- 1 In the sources table, click the cell that corresponds to the level you want to define for this logical source.
- 2 On the **Tools** pane, expand the filtered System list, and then drag the appropriate element from the list, to the selected level in the sources table.

For a typical logical source, you will normally start by making a video assignment, set the appropriate category and source ID (under **Source info**) if you want to control your multiviewer system as a router, and then proceed with the audio, text, alarm, time code, and color levels. See, for example, [Configuring text level assignments](#), on page 99, [Configuring alarm level assignments](#), on page 100, [Configuring logical sources based on external alarm providers](#), on page 100, and [Configuring color level assignments](#), on page 101.

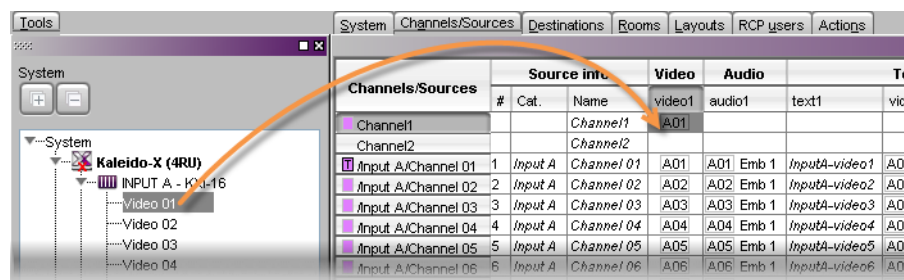

Sources table with a selected cell in the Video level category for Channel1

- 3 Repeat this procedure until all required physical assignments are completed for this logical source.

Note: Under **Source info**, dynamic and static names resulting from the **Name** level assignments are limited to 48 characters and automatically truncated as needed.

- If you want to be able to use this logical source as a template, right-click the source header and then click **Set source as template** on the menu.


System Channels/Sources Destinations Rooms Layouts RCP users Actions						
Channels/Sources						
	Info	Video	Audio	Text	Alarm	
Channel 01	Name	video1	audio1	text1	alarm1	timecode1
Input A/Channel 01	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video loss	A01 Vid. TC
Input A/Channel 02	Add source			InputA-video2	A02 Video loss	A02 Vid. TC
Input A/Channel 03	Delete selected sources			InputA-video3	A03 Video loss	A03 Vid. TC
Input A/Channel 04	Set source as template			InputA-video4	A04 Video loss	A04 Vid. TC
Input A/Channel 05	Apply template to all sources			InputA-video5	A05 Video loss	A05 Vid. TC
Input A/Channel 06	Apply template to selected sources			InputA-video6	A06 Video loss	A06 Vid. TC
Input A/Channel 07				InputA-video7	A07 Video loss	A07 Vid. TC
Channel 08	Channel 08	A08	A08 Emb 1	InputA-video8	A08 Video loss	A08 Vid. TC
Channel 09	Channel 09	A09	A09 Emb 1	InputA-video9	A09 Video loss	A09 Vid. TC
Channel 10	Channel 10	A10	A10 Emb 1	InputA-video10	A10 Video loss	A10 Vid. TC

Once you have added the required number of logical sources, and made appropriate video assignments, you will be able to populate remaining levels in a single operation by applying the template. If you have enabled automatic sources creation for an external router, then automatically-created logical sources will be based on the template.

Configuring text level assignments

To assign a text element to a logical source's text level

- Click the **Channels/Sources** tab in the main window.
- In the sources table, click the cell that corresponds to the logical source and text level you want to configure.
- Expand the filtered System list on the **Tools** pane, locate the text element, and then drag it onto the selected cell in the sources table.

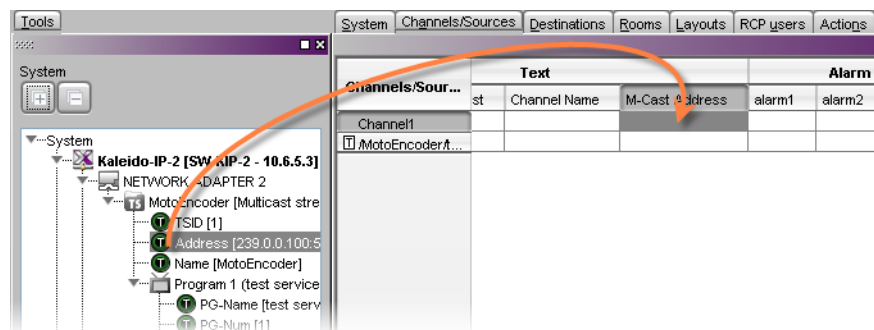


Note: Under **Source info**, dynamic and static names resulting from the **Name** level assignments are limited to 48 characters and automatically truncated as needed.

- On the **File** menu, click **Save**.
The sources table is saved.

Configuring alarm level assignments

To assign an alarm to a logical source's alarm level

- 1 Click the **Channels/Sources** tab in the main window.
- 2 In the sources table, click the cell that corresponds to the logical source and alarm level you want to configure.
- 3 Expand the filtered System list on the **Tools** pane, locate the alarm, and drag it onto the selected cell in the sources table.

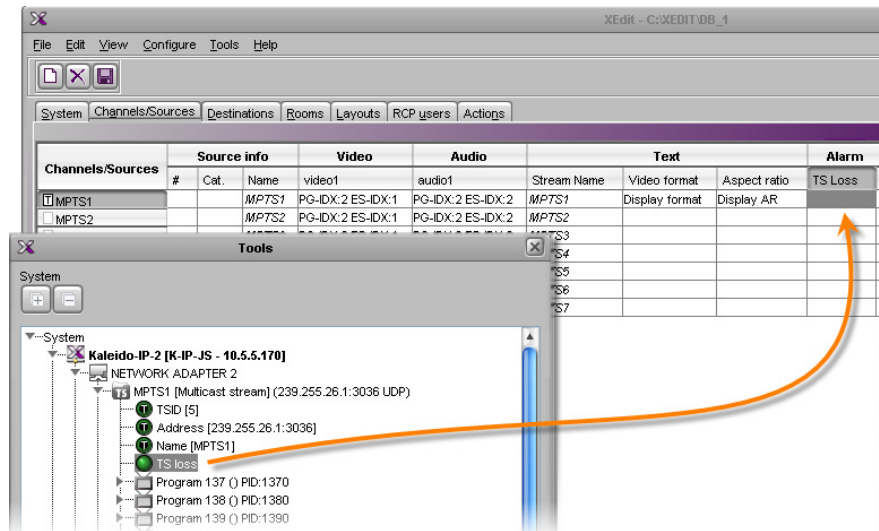

- 4 On the **File** menu, click **Save**.
The sources table is saved.

Configuring logical sources based on external alarm providers

To have access to alarms and text elements from an external alarm provider, you must have specified this provider in your multiviewer system configuration (see [Managing Alarm Providers](#) on page 172).

To assign an alarm or a text element from an external provider

- 1 Open a GSM alarm browser associated with the alarm provider you want to use.
For example, after opening iControl Navigator, click **General status managers** on the **View** menu. Refer to the iControl User Guide for more information. See [Related Documentation](#), on page 13.
- 2 In XEdit, click the **Channels/Sources** tab in the main window.
- 3 In the GSM alarm browser, navigate to the element you want to assign, and then drag it onto the cell that corresponds to the alarm or text level you want to configure in the sources table.

In the selected cell, the prefix "EXT" indicates that the assignment is from an external source and is followed with information such as the device class and a name.

Notes

- You can select multiple elements in the GSM alarm browser (by pressing Shift+click or Ctrl+click as needed) and assign them to consecutive logical sources at once, by dragging the multiple selection to the appropriate level for the first logical source you want to configure. The elements are inserted in the same order you selected them.
 - Drag an alarm folder to an alarm level to monitor the folder's status. Dragging an alarm folder to a text level is not supported.
 - GSM alarms are not available as triggers for background actions (see [Creating Background Actions](#) on page 327).
 - Incremental copy is not supported in the case of assignments from external providers (see [Making Further Assignments by Incremental Copy](#) on page 102).
-

- 4 On the **File** menu, click **Save**.


The sources table is saved.

Configuring color level assignments

You may configure sources with color levels so that you can distinguish them at a glance on the monitor wall. For example, your sources could have three color levels: one that you would apply to a monitor's border color, one to a UMD's background, and one to the UMD text.

To configure a logical source's color levels

- 1 Click the **Channels/Sources** tab in the main window.
- 2 In the sources table, double-click the cell that corresponds to the logical source and color level you want to configure.
The color picker window opens.
- 3 In **Colors**, click the tab that corresponds to the color space you want to use, and then choose the color that will be associated with the selected source and color level.

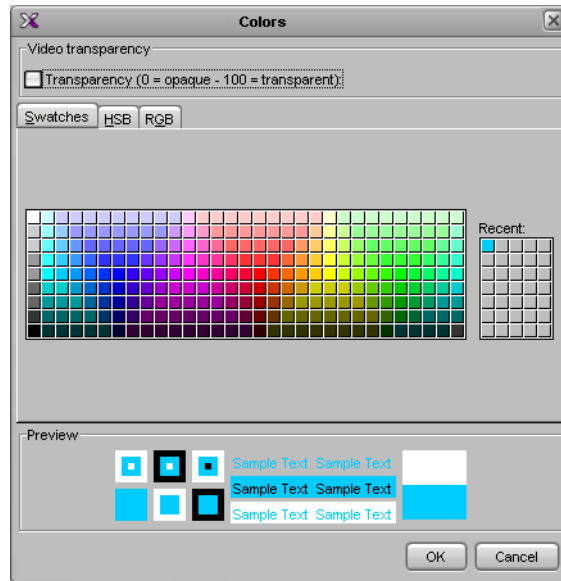

- 4 Click **OK** to close the color picker window.

The color you chose appears in the sources table.

Channels/Sources	Source info			Video	Audio	Text	Alarm	Time code	Color
	#	Cat.	Name	video1	audio1	text1	Loss	timecode1	color1
Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video loss	A01 Vid. TC	R:0 G:204 B:255
Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2	A02 Video loss	A02 Vid. TC	
Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3	A03 Video loss	A03 Vid. TC	

- 5 Repeat from [step 2](#) until you have configured all color levels for this source.
- 6 On the **File** menu, click **Save**.

The sources table is saved.

Making Further Assignments by Incremental Copy

Once done with a first logical source, if the next logical source is to be similar to the first one, it is possible to use incremental copy to automatically create it. Alternatively, if only one or a few specific levels are to be similarly configured, it is possible to use incremental copy on the corresponding level column only.

Note: Color levels are not subject to incremental copy.

To use the incremental copy tool to propagate physical assignments to adjacent logical sources

- 1 Click the row header for the logical source whose assignments you want to propagate.
A small square, the *incremental copy handle*, appears in the bottom right corner of the header cell.

System	Channels/Sources	Destinations	Rooms	Layouts	RCP users	Actions
Channels/Sources	Source ID	Video	Audio	Text	Alarm	Time code
		video1	audio1	text1	alarm1	timecode1
/Input A/Channel 14	14	A14	A14 Emb 1	InputA-video14		A14 Vid. TC
/Input A/Channel 15	15	A15	A15 Emb 1	InputA-video15		A15 Vid. TC
/Input A/Channel 16	16	A16	A16 Emb 1	InputA-video16		A16 Vid. TC
/Input B/Channel 01	17	B01	B01 Emb 1	InputB-video1		B01 Vid. TC
/Input B/Channel 02						
/Input B/Channel 03						

Incremental copy handle

- 2 Move the pointer to the incremental copy handle. The pointer changes to crosshairs.

Channels/Sources	Source ID	Video	Audio	Text	Alarm	Time code
		video1	audio1	text1	alarm1	timecode1
/Input A/Channel 13	13	A13	A13 Emb 1	InputA-video13		A13 Vid. TC
/Input A/Channel 14	14	A14	A14 Emb 1	InputA-video14		A14 Vid. TC
/Input A/Channel 15	15	A15	A15 Emb 1	InputA-video15		A15 Vid. TC
/Input A/Channel 16	16	A16	A16 Emb 1	InputA-video16		A16 Vid. TC
/Input B/Channel 01	17	B01	B01 Emb 1	InputB-video1		B01 Vid. TC
/Input B/Channel 02						
/Input B/Channel 03	/Input B/Channel 01					
/Input B/Channel 04						
/Input B/Channel 05						
/Input B/Channel 06						

- 3 Click and drag to propagate the selected logical source's physical assignments to the next logical sources' levels.

The source cells are highlighted with a green border and the target cells with a red border.

/Input A/Channel 15	15	A15	A15 Emb 1	InputA-video15		A15 Vid. TC
/Input A/Channel 16	16	A16	A16 Emb 1	InputA-video16		A16 Vid. TC
/Input B/Channel 01	17	B01	B01 Emb 1	InputB-video1		B01 Vid. TC
/Input B/Channel 02						
/Input B/Channel 03						
/Input B/Channel 04						
/Input B/Channel 05						
/Input B/Channel 06						
/Input B/Channel 07						

- 4 Release the mouse button once you have reached the last logical source to be configured.

The level cells are now populated with "incremented" physical assignments.

/Input A/Channel 14	14	A14	A14 Emb 1	InputA-video14		A14 Vid. TC
/Input A/Channel 15	15	A15	A15 Emb 1	InputA-video15		A15 Vid. TC
/Input A/Channel 16	16	A16	A16 Emb 1	InputA-video16		A16 Vid. TC
/Input B/Channel 01	17	B01	B01 Emb 1	InputB-video1		B01 Vid. TC
/Input B/Channel 02	18	B02	B02 Emb 1	InputB-video2		B02 Vid. TC
/Input B/Channel 03	19	B03	B03 Emb 1	InputB-video3		B03 Vid. TC
/Input B/Channel 04	20	B04	B04 Emb 1	InputB-video4		B04 Vid. TC
/Input B/Channel 05	21	B05	B05 Emb 1	InputB-video5		B05 Vid. TC
/Input B/Channel 06	22	B06	B06 Emb 1	InputB-video6		B06 Vid. TC
/Input B/Channel 07	23	B07	B07 Emb 1	InputB-video7		B07 Vid. TC
/Input B/Channel 08						
/Input B/Channel 09						

Note: It is possible to drag the incremental copy handle up, or down. The physical assignments will be decremented or incremented accordingly.

Sorting the Sources Table

To sort the sources table

- Right-click the heading of the column you want to sort by (i.e., either **Source ID**, or any of the level headings), and then click **Sort** on the menu.

System Channels/Sources Destinations Rooms Layouts RCP users Actions						
Channels/Sources		Video	Audio	Text	Alarm	Time code
Source ID	video1	audio1	text1	alarm1	timecode1	
/Input A/Channel 01	1	A01	Sort	InputA-video1	A01 Vid. TC	
/Input A/Channel 03	3	A03	Delete level	InputA-video3	A03 Vid. TC	
/Input A/Channel 04	4	A04		InputA-video4	A04 Vid. TC	
/Input A/Channel 02	2	A02 Emb 1		InputA-video2	A02 Vid. TC	
/Input A/Channel 05	5	A05 Emb 1		InputA-video5	A05 Vid. TC	
/Input A/Channel 06	6	A06 Emb 1		InputA-video6	A06 Vid. TC	
/Input A/Channel 07	7	A07 Emb 1		InputA-video7	A07 Vid. TC	

The sources table is sorted, based on the elements in the selected level.

Filtering the Sources Table

To filter the sources table

- Type in the **Cat./Name filter** box, located above the sources table.

Cat./Name filter →

System Channels/Sources Destinations Rooms Layouts RCP users Actions						
Cat./Name filter...						
Channels/Sources	#	Cat.	Name	Video	Audio	
/Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1
/Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2
/Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3
/Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4
/Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5
/Input A/Channel 06	6	Input A	Channel 06	A06	A06 Emb 1	InputA-video6
/Input A/Channel 07	7	Input A	Channel 07	A07	A07 Emb 1	InputA-video7
/Input A/Channel 08	8	Input A	Channel 08	A08	A08 Emb 1	InputA-video8

Logical sources with categories and names that do not match the text or regular expression are hidden as you type.

Filter text →

Example: Type "input f" to view only the sources that belong to Input F.

System Channels/Sources Destinations Rooms Layouts RCP users Actions						
input f						
Channels/Sources	#	Cat.	Name	Video	Audio	
/Input F/Channel 01	81	Input F	Channel 01	F01	F01 Emb 1	InputF-video1
/Input F/Channel 02	82	Input F	Channel 02	F02	F02 Emb 1	InputF-video2
/Input F/Channel 03	83	Input F	Channel 03	F03	F03 Emb 1	InputF-video3
/Input F/Channel 04	84	Input F	Channel 04	F04	F04 Emb 1	InputF-video4
/Input F/Channel 05	85	Input F	Channel 05	F05	F05 Emb 1	InputF-video5
/Input F/Channel 06	86	Input F	Channel 06	F06	F06 Emb 1	InputF-video6
/Input F/Channel 07	87	Input F	Channel 07	F07	F07 Emb 1	InputF-video7
/Input F/Channel 08	88	Input F	Channel 08	F08	F08 Emb 1	InputF-video8
/Input F/Channel 09	89	Input F	Channel 09	F09	F09 Emb 1	InputF-video9
/Input F/Channel 10	90	Input F	Channel 10	F10	F10 Emb 1	InputF-video10
/Input F/Channel 11	91	Input F	Channel 11	F11	F11 Emb 1	InputF-video11
/Input F/Channel 12	92	Input F	Channel 12	F12	F12 Emb 1	InputF-video12
/Input F/Channel 13	93	Input F	Channel 13	F13	F13 Emb 1	InputF-video13
/Input F/Channel 14	94	Input F	Channel 14	F14	F14 Emb 1	InputF-video14
/Input F/Channel 15	95	Input F	Channel 15	F15	F15 Emb 1	InputF-video15
/Input F/Channel 16	96	Input F	Channel 16	F16	F16 Emb 1	InputF-video16

Notes

- The filter is not applied to new logical sources that have yet to be saved. They will remain visible, until you saved the sources table.

Notes (continued)

- It is always possible to apply the template source to other logical sources, even when this specific source is hidden.
 - **Apply template to all sources** affects all logical sources, regardless of filtering.
 - The incremental copy tool affects visible sources only.
-

Resizing the Sources Table's Columns

To resize a column manually

- In the category or level heading row, point the column boundary you want to move until the pointer becomes a resize pointer (↔), and then drag the boundary to resize.

To resize a column to the width of its content

- In the category or level heading row, point either boundary for the column you want to resize to fit, until the pointer becomes a resize pointer (↔), and then double-click.
The column width is adjusted to fit the content.

To resize all columns to the width of their content

- In the category or level heading row, point any column boundary until the pointer becomes a resize pointer (↔), and then triple-click.
All columns are resized to fit their content.


Note: If there are more than 250 rows in the sources tables, when you double- or triple-click, the columns are adjusted to fit the content of the currently visible rows only.

Monitoring Internal-Router Outputs on the Monitor Wall (Sample Scenario)

It is possible, for specific monitoring purposes, to configure a video monitor so that it displays the current signal at a physical output from the multiviewer's internal router, by assigning this router output to a logical source's video level.

To configure a monitor to follow an internal-router output on the monitor wall

- 1 Click the **Channels/Sources** tab in the main window.
- 2 Add a logical source to the table (see [Manually adding a Logical Source](#), on page 94).
- 3 In the new logical source row, click the cell that corresponds to the first video level.
- 4 Expand the filtered System list on the **Tools** pane, locate the router output you want to monitor, and then drag it onto the selected cell in the sources table.
- 5 On the **File** menu, click **Save**.
The sources table is saved.
- 6 Click the **Layouts** tab, and open the appropriate layout.
- 7 From the **Channel/Sources** list on the **Tools** pane, drag the new logical source onto the monitor you want to configure, and then save the layout.

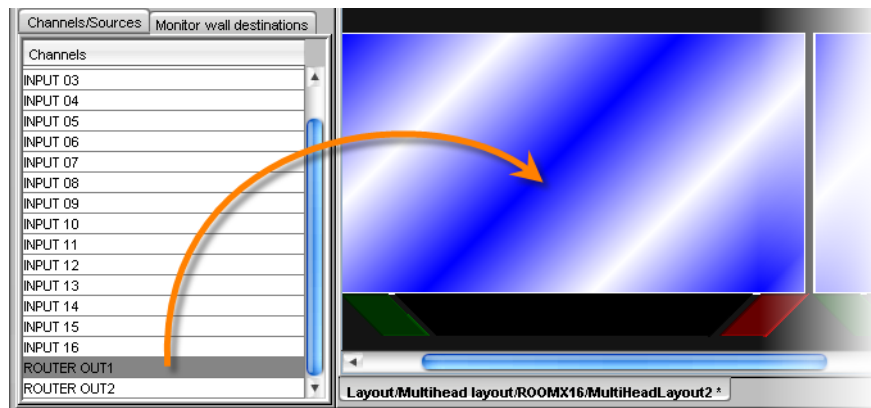

Once such a logical source is available, you can also assign it to other composite or video monitors, directly on the monitor wall, and their video window will dynamically follow the video signal sent to that router output.

Note: The current version of the Kaleido Software does not support monitoring of the associated audio signal.

6 Calibrating the Kaleido Software

Introduction

A Kaleido multiviewer system includes a number of cards or modules that process a variety of signal types. This section explains how to calibrate features related with the different signal types.

Key Concepts

IMPORTANT

Calibration changes are applied immediately

Unlike other elements in a multiviewer configuration, system calibrations do not need to be saved.

- When using XEdit in *online* mode, calibration changes become immediately effective.
- When using XEdit in *offline* mode, calibration changes are applied to the system representation in your local workspace.

Calibration changes are synchronized

When you export a database to a multiviewer, the *latest* calibrations prevail (i.e., if the database you export is from a backup that included earlier calibration changes, or if calibrations were changed by using XEdit in *offline* mode, then any calibrations that were also changed in the meantime on the multiviewer itself, by using XEdit in *online* mode, will remain effective after the export).

Profiles

Profile	With the current version of the Kaleido Software, profiles are available for Kaleido-IP multiviewers only. A profile is a group of calibrations that you configure for a specific purpose, and then apply to specific elementary streams, or transport streams, as needed. A default audio profile, a default video profile, a default teletext profile, a default SCTE 35 profile, and a default transport stream profile are available with set calibrations. You may add custom profiles to your system, and configure them as needed. See Managing Calibration Profiles on page 113.
Video profile	Video profiles include video input calibrations: alarm debouncing, metadata holding time, and presence timeout parameters.
Audio profile	Audio profiles include audio input calibrations: a zero VU reference level calibration, alarm threshold calibrations, alarm debouncing, and loudness calibrations.

Teletext profile	Teletext profiles include calibrations for page selection, subtitling holding time, alarm debouncing, and text presence timeout parameters.
SCTE 35 profile	SCTE 35 profiles include calibrations for digital program insertion (DPI) signaling (e.g., splice events, DTMF break sequences, timing information), and a signaling timeout calibration.
Transport stream profile	Transport stream (TS) profiles include calibrations for TR 101 290 first- and second-priority fault-reporting indicators.

Multiviewer Output Calibrations

Brightness	The green, red, and blue brightness parameters determine the black level of the RGB output signals shown on the corresponding display. See Calibrating the Brightness and Contrast on page 148.
Contrast	The green, red, and blue contrast parameters determine the white level of the RGB output signals shown on the corresponding display. See Calibrating the Brightness and Contrast on page 148.
Color saturation	The color saturation of an RGB output signal can be adjusted so that colors in the video windows will match the surrounding graphical elements on the corresponding display. See Calibrating Color Saturation on page 149.
DVI keying mode	Kaleido-X and Kaleido-X16 multiviewers have a DVI input connector for every output head. Using these connectors, it is possible to feed keying material to the multiviewer. Depending on your purposes, the content provided through the DVI input can be set either as a background or as a foreground for the layout shown on the monitor wall. See Calibrating the DVI Keying Mode , on page 151, and Setting up a Layout for Background Keying from the DVI Input , on page 246.
Audio monitoring delay	Each of the output heads in a Kaleido-X, or Kaleido-X16 multiviewer is associated with two audio output channels. The monitoring output is simultaneously available on one AES and two analog connections. For each head, output parameters can be adjusted to optimize the relative timing of the audio and video signals on the monitor wall display. The Audio monitoring delay calibration provides this function. See Calibrating the Audio Monitoring Delay on page 152.
Audio monitoring color	Audio monitors can have an indicator that changes color depending on the output display where audio monitoring of the associated audio level is taking place. The default color is a shade of blue. See Calibrating the Audio Monitoring Color on page 154.

Multiviewer Input Calibrations

Detail enhancer	The purpose of the detail enhancer parameter is to recover sharpness that may have been lost in the de-interlacing and scaling process. See Calibrating Detail Enhancement on page 134.
HDR (and Wide Color Gamut)	The HDR parameter determines which HDR and WCG standard should be used to interpret the input signal's format. This supports a mix of multiviewer signal input types (SDR, HDR, color gamut) to be viewed in the multiviewer's monitoring output at the same time in a coherent manner, consistent with the limits of the current monitoring output's SDR, HDR, and color gamut display settings. See Calibrating HDR , on page 135 and see Configuring Displays , on page 201.
Dynamic range	The dynamic range parameter determines the color model to be applied: either full-range RGB (0-255) or video RGB (16-235). Full-range RGB is also called <i>computer RGB</i> ; video RGB is also called <i>studio RGB</i> . See Calibrating Dynamic Range on page 137.
Aspect ratio	Unlike <i>HD</i> signals where aspect ratio information, when available, always follows the SMPTE ST 2016 standard, there are different standards for encoding aspect ratio information in <i>SD</i> signals. The AFD & WSS calibrations determine which standard will be applied by default to SD signals feeding the selected multiviewer input. The aspect ratio of video windows on the monitor wall can then be automatically adjusted, based on the current source assignment. See Calibrating Aspect Ratio Decoding on page 133. Note: In the case of the Kaleido-IP, aspect ratio information can be extracted and monitored. No calibration is needed for the Kaleido-IP, since it supports decoding of a signal's aspect ratio from AFD metadata only. However, the Kaleido Software does not support automatic aspect ratio adjustment <i>based on the decoded information</i> for signals originating from these multiviewers.
NTSC standard	The NTSC and NTSC-J standards are different with regard to their black level. This parameter determines which standard is to be applied to the selected analog input signal. Available for Kaleido-X, and Kaleido-X16 only.
Subtitling/closed captioning	Presence alarms can be configured for up to four preset Teletext (WST) subtitle pages for each input signal. There are also subtitling calibrations for the CEA-608 CC and the DTVCC alarms. See Calibrating Subtitling/Closed Captioning on page 138.
Metadata holding time	The holding time parameters determine the delay after which decoded metadata such as closed captions, teletext subtitles, or XDS metadata will be cleared. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Calibrating Metadata Holding Time , on page 140 for details.

Zero VU (dBu)	The Zero VU (dBu) parameters determine the reference level to be applied to the selected analog input signal, from an Audio Bridge Terminal (ABT). Its default value is 4 dBu, on a range of -24 dBu to 8 dBu. See Calibrating Zero VU Reference Level for an ABT Audio Source on page 132.
Zero VU (dBFS)	The Zero VU (dBFS) parameters determine the reference level to be applied to the selected digital (embedded, or from ABT) audio signal. dBFS stands for <i>decibels full scale</i> . Zero dBFS corresponds to the maximum possible level. By default the reference level for it is set to -20 dBFS, on a range of -24 dBFS to -8 dBFS. The extraction of digital audio This requires the KXS-HD-EMB or KXS-SD-EMB option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Calibrating Zero VU Reference Levels for Embedded Audio Sources , on page 131 for details.
Audio program	Loudness measurement is based on audio program calibrations for certain multiviewer models. See Configuring Audio Programs on page 123.
Audio loudness	A measure of the perceived loudness of a group of audio channels (an <i>audio program</i>). Various measurement modes are available depending on the hardware being used. It is possible to configure an alarm that will be triggered when the measured loudness deviates too far from a target specified either by a standard or by your organization. In the case of the Kaleido-X, and Kaleido-X16 multiviewers, an alarm can also be triggered when the measured loudness deviates too far from the dialnorm value found in the VANC audio metadata (SMPTE ST 2020-A). Depending on the hardware, the loudness measurement mode will either be: Compliant with recommendations from Dolby regarding dialog loudness measurement (ATSC A/53) and provide a short term value referred to as <i>loudness</i>, with a limit of one measurement per video channel. This applies to Kaleido-X with <i>first-generation</i> input cards (KXI-16SV rev. 599 and earlier, KXI-16HS, and KXI-16HSV), only. See Calibrating Dolby Dialog Loudness Measurement on page 128. OR,

	- Compliant with recent standards (EBU R128, ATSC A/85, ARIB TR-B32) and provide two measures (short term, and momentary) per audio program. This applies to Kaleido-IP, KMX-39N1, KMX-49N1, Kaleido-X16, and Kaleido-X with <i>second-generation</i> input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3). See Calibrating Loudness Measurement on page 124. - The Kaleido-IP supports loudness probing of audio streams with a sampling rate of 48 kHz only. - For the Kaleido-X and Kaleido-X16, although two audio programs can be defined per video input, there is a limitation on the number of concurrent measurements that can be made. See Calibrating Loudness Probe Assignments on page 127.
Dolby E selection	Decoding support for Dolby E. See Configuring Sources for Dolby E Audio Metadata, on page 130 for details. - Dolby E decoding requires the Dolby E option to be enabled. See the multiviewer's <i>Installation & Service Manual</i> for more information. - Dolby E decoding is <i>not</i> supported on the Audio Bridge Terminal (ABT).

Router Output Calibrations

Switch field selection	The switch field parameter determines whether the router module will perform clean crosspoint changes on the odd (field 1) on the even (field 2) field, or on any field. See Calibrating Switch Field Selection on page 156.
SDI output reclocking	The SDI output reclocking parameter determine whether digital video signals will have their timing restored at the selected output, to eliminate jitter. Reclocking is typically used in installations with large routing devices or long cables in the signal path. See Calibrating SDI Signal Reclocking on page 156.

GPI/Genlock Calibrations

GPI line direction	The GPI line direction can be set on certain multiviewer models. The state of any GPI output can be set manually for test purposes, by using their ON/OFF calibration. See GPI/Genlock Calibrations on page 158.

Alarm Debouncing

Alarm debouncing allows the filtering of false alarms. Two parameters can be calibrated: the time required for an alarm event to be present before the system considers it to be valid (to avoid false triggering of alarms), and the time required for an alarm state to be normal before the system actually clears the alarm (to avoid false releasing of alarms).

An alarm is triggered when a probe is in a continuous error state for the number of seconds specified in the **Set duration** debouncing parameter. In most cases, the alarm status will

revert to normal by default, as soon as the probe returns a normal state. To delay the releasing of an alarm, you can change its **Clear duration** parameter.

- For TR 101 290 fault-reporting indicators, the default debouncing parameters are as follows:

Attribute	Default value	Range	Description
Set duration	0 seconds	0 s–300 s	By default, TR 101 290 faults are reported as soon as they are detected.
Clear duration	5 seconds	0 s–90 s	Once the fault condition is no longer detected, this is the time interval to wait before resetting the alarm.

- For all other alarms, the default debouncing parameters are as follows:

Attribute	Default value	Range	Description
Set duration	15 seconds	0 s–300 s	This is the time interval to wait before triggering an alarm once a probe has been in a continuous error state.
Clear duration	0 seconds	0 s–90 s	Once a probe has returned to a normal state (the alarm condition is no longer detected), this is the time interval to wait before resetting the alarm.

Notes

- In the case of *video freeze* alarms, the default debouncing settings are appropriate for most purposes, when the intention is to detect a freeze. Note, however, that it may take up to one second (two seconds, in the case of a Kaleido-IP) more than the value of the **Set duration** parameter to trigger a video freeze alarm. On the other hand, if your situation requires detecting movement (e.g. to detect that nothing is put on air during an off-air period) then you may need to set an appropriate reset delay for this alarm (e.g., 5 seconds) by using the **Clear Duration** parameter.
- In the case of *video black*, *video luma too high*, and *teletext presence* alarms, it may take up to one second more than the value of the **Set duration** parameter to trigger these alarms, and it may take up to one second more than the value of the **Clear duration** parameter before the system clears them.
- In the case of *V-chip loss* alarms, the **Set duration** parameter should be *at least 3 seconds*, in order to avoid false alarms.
- As of version 6.60 of the Kaleido Software, the former **Occurrences** and **Detection window** debouncing parameters have been removed. You may need to revise your system's alarm debouncing calibrations when you upgrade to version 6.60 (or later) from version 6.50 (or earlier). Refer to the upgrade instructions in the *Installation & Service Manual*, for details. See [Related Documentation](#), on page 13.

See [Configuring Alarm Debouncing](#) on page 121, for more information.

Managing Calibration Profiles

Creating Calibration Profiles

To create a calibration profile

- 1 In XEdit's main window, click the **System** tab, and then click **Calibrations (Kaleido-IP)** on the second-level tab bar.
- 2 On the **File** menu, click **Add TS profile**, **Add video profile**, **Add audio profile**, **Add teletext profile**, or **Add SCTE 35 profile** depending on the type of calibration profile you want to create.
The new profile appears on the **Tools** pane.
- 3 Click the profile to rename it as necessary.

Deleting Calibration Profiles

To delete a calibration profile

- 1 In XEdit's main window, click the **System** tab, and then click **Calibrations (Kaleido-IP)** on the second-level tab bar.
- 2 On the **Tools** pane, click the profile you want to delete.
- 3 On the **File** menu, click **Delete profile**.

Configuring Calibration Profiles

To configure a calibration profile

- 1 In XEdit's main window, click the **System** tab, and then click **Calibrations (Kaleido-IP)** on the second-level tab bar.
- 2 On the **Tools** pane, click the profile you want to configure.
A hierarchical list representing all applicable calibrations appears in the main window.
- 3 Navigate to the element you want to calibrate, and select it.

The related attributes appear in the **Properties** pane.


- See [Configuring Alarm Debouncing](#) on page 121, if you need to change debouncing parameters for teletext, audio, video, or transport stream alarms, and see [Configuring Alarm Thresholds](#) on page 116, to adjust alarm thresholds.
- For a TS profile:
 - See [Transport Calibration](#), on page 120, if you need to change alarm thresholds for TR 101 290 fault indicators.
- For an audio profile:
 - See [Audio Calibrations](#), on page 119, if you need to change audio alarm thresholds.
 - See [Calibrating Loudness Measurement](#) on page 124, for detailed instructions on calibrating loudness measurement.
 - See [Calibrating Zero VU Reference Levels for Embedded Audio Sources](#) on page 131, if you need to change the Zero Vu reference level for all sources associated with the current profile.

- For a video profile:
 - See [Calibrating Metadata Holding Time](#) on page 140, if you need to change the holding time for XDS metadata, CC or DTVCC captions.
 - See [Metadata Calibration](#), on page 120, if you need to change the presence timeout value for DTVCC services and text.
 - For a teletext profile:
 - See [Calibrating Metadata Holding Time](#) on page 140, if you need to change the holding time for teletext subtitles.
 - See [Calibrating Subtitling/Closed Captioning](#) on page 138, to configure the teletext page selection parameters.
 - For a SCTE 35 profile:
 - See [Metadata Calibration](#), on page 120, if you need to change the presence timeout value for SCTE 35 signaling.
 - See [Calibrating DTMF Tone Sequences](#) on page 143, to register the out-of-network, and in-network DTMF sequences you need to monitor.
 - See [Calibrating SCTE 35 Event Reporting Duration](#) on page 144, if you want to adjust the delay after which alarms triggered when SCTE 35 commands are detected return to normal.
- 4 Repeat [step 3](#) until the profile is properly configured for your purposes.


Assigning Calibration Profiles

To assign a calibration profile

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list.
- 2 Navigate to the elementary stream, or transport stream you want to calibrate and select it.
- 3 In the **Properties** pane, click **Profile**, and then select the calibration profile you want to apply to this stream.

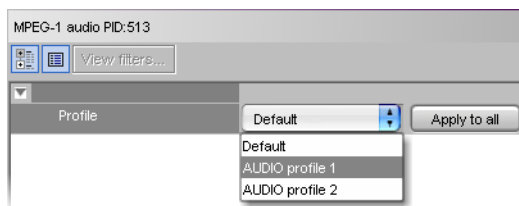

Elementary stream profile assignment example

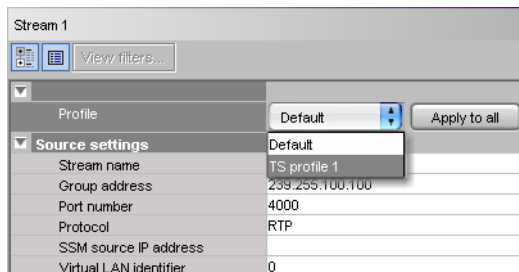

Transport stream profile assignment example

- 4 To apply the same profile to all elementary streams of a compatible type (e.g., all audio elementary streams), click **Apply to all**.
Alternatively, you can drag a profile from the **Tools** pane, onto an elementary stream, or transport stream in the System list.

Configuring Alarm Thresholds


Note: With the current version of the Kaleido Software, the KMV-3901/3911, and Kaleido-XQUAD support *audio* alarm threshold calibrations only. The Kaleido-IP supports threshold calibrations for *audio*, *teletext*, *SCTE 35*, and *TR 101 290* alarms.

To configure the threshold for an alarm


- 1 Connect to the multiviewer you want to configure, if you want to apply the changes in real time (see [Connecting to a Multiviewer](#) on page 32).

Note: If this step is omitted, then you will need to export the database to apply the calibration changes.

- 2 In the main window, click the **System** tab, and then:
 - In the case of a Kaleido-IP, click **Calibrations (Kaleido-IP)** on the second-level tab bar, select the appropriate calibration profile on the **Tools** pane, and then click the alarm whose threshold you want to calibrate in the main pane.

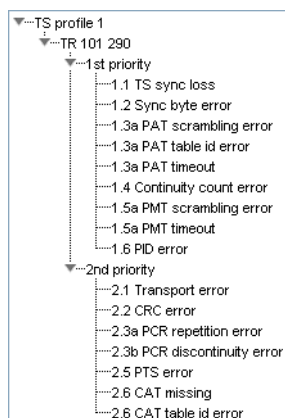

A transport stream profile

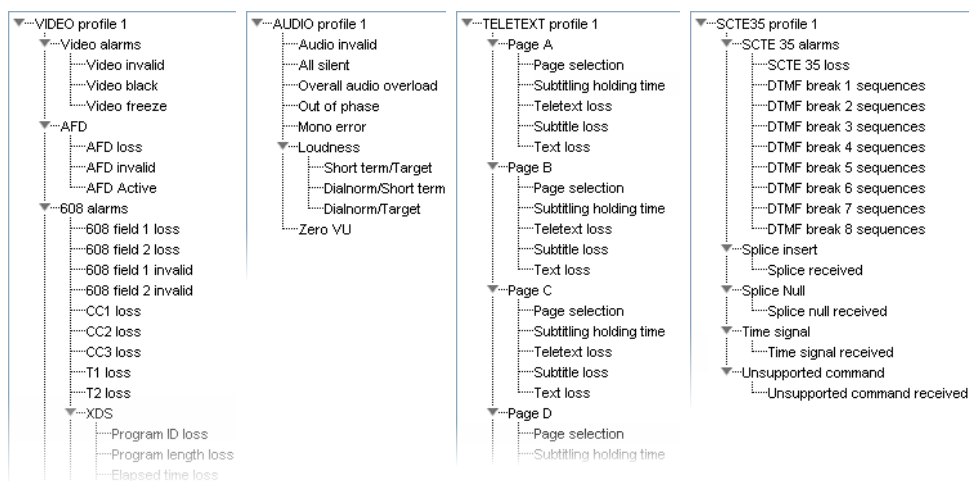

Elementary stream profiles

 
 
 
- For all other multiviewer models, click **Description/Calibrations** on the second-level tab bar, navigate to the alarm whose threshold you want to calibrate, by expanding the appropriate multiviewer input, one of its Video elements, and then the alarm-related elements (or the ABT element, and then one of the ABT's audio elements).



Example of alarms related to video and embedded audio input signals, for Kaleido-X, Kaleido-X16, and KMV-3901/3911 multiviewers.

- 3 In the **Properties** pane, set the relevant values under **Calibration**.

Video Calibrations

Black detection threshold	Set the level (in IRE, sample values, or mV) below which the signal will be considered to be black. By default the threshold is set at 8 IRE, or 0 mV, depending on the multiviewer model.  Note: The IRE scale assumes a 7.5 IRE setup.
Freeze sensitivity	Freeze detection is done by comparing successive frames. Noise in the signal could disrupt this process, so filtering is added to remove it. Adjust the sensitivity according to the signal being monitored, on a range of 0 (for a noisy signal) to 16 (for a clean signal). By default the sensitivity is set at 8, and the alarm will be triggered after at least 15 seconds of continuous freeze. Once the alarm is triggered it will only be released if no other freeze condition is detected over the period determined by the Clear duration parameter (by default, there is no delay), to avoid unwanted alarm flickering that could be caused by glitches on the signal.  Note that when setting the Clear duration parameter to any value other than 0, it may happen that the freeze alarm will only be released after a long time (longer than the value of the period determined by the Clear duration parameter) if the video has short-duration freezes during this period.
SD/HD detection zone	Determine the video window area to be monitored for Freeze and Black detection. Two detection zones can be configured: one for SD signals, one for HD signals. 
Luma too high detection threshold	Set the level (in IRE, sample values, or mV) above which <i>Luma too high</i> will be reported. By default the threshold is set at 100 IRE, or 700 mV, depending on the multiviewer model.  Note: The IRE scale assumes a 7.5 IRE setup.

Audio Calibrations

Silence left/right/center	Select the level (in dB or dBFS for digital audio sources, in dB or dBu for analog audio sources) below which the audio signal will be considered silenced. The default value is –55 dBFS, on a range of -63 to 0. 
All silent / All silent program 2	Select the level (in dB or dBFS for digital audio sources, in dB or dBu for analog audio sources) below which an audio signal will be considered silenced. An alarm is raised if all available channels are below the threshold. The default value is –55 dBFS, on a range of -63 to 0. 
Overload left/right	Select the level (in dB or dBFS for digital audio sources, in dB or dBu for analog audio sources) above which the audio signal will be considered overloaded. The default value is –5 dBFS, on a range of -63 to 0. 
Overall audio overload	Select the level (in dB or dBFS) above which an audio signal will be considered overloaded. An alarm is raised if any available speaker is above the threshold. The default value is –5 dBFS, on a range of -63 to 0. Available for Kaleido-IP only. 
Out of phase	Select the sensitivity level below which the audio signal will be considered out of phase. The sensitivity is a value between -1 and +1, where -1 means completely out of phase and +1 means perfectly in phase. The default value is 0. 
Mono	An audio source is considered to be mono if the left and right signals are perfectly in phase (i.e., more likely to be the same). Select the sensitivity level above which audio will be considered mono. The sensitivity is a value between -1 and +1, where -1 means that everything is considered to be mono, and +1 means that only perfectly in phase audio will be considered mono. The default value is 1 (Perfectly in phase). 

Metadata Calibration

DTVCC service presence timeout	Set the delay (in seconds) after which a <i>Service loss</i> alarm will be triggered, if the multiviewer has not received any DTVCC data blocks for the given service. This calibration applies to the six standard services. The default value is 30 seconds, on a range of 1 to 360. 
DTVCC text presence timeout	Set the delay (in seconds) after which a <i>Text loss</i> alarm will be triggered, if the multiviewer has not received any characters for the given service. This calibration applies to the six standard services. The default value is 30 seconds, on a range of 1 to 360. 
Teletext/subtitling text loss	Set the delay (in seconds) after which a <i>Text loss</i> alarm will be triggered for the configured WST subtitling page. The default value is 30 seconds, on a range of 1 to 360. 
SCTE 35 loss	Set the delay (in minutes) after which a <i>SCTE 35 loss</i> alarm will be triggered to report that no new SCTE 35 messages were detected during this much time. The default value is 60 minutes, on a range of 1 to 360. 

Transport Calibration

1.3a PAT timeout	Set the delay (in millisecond) after which a timeout alarm will be triggered to report that no Program Association Table (PAT) was found in the transport stream during this much time. The default value is 500 ms, on a range of 10 to 2500. 
1.5a PMT timeout	Set the delay (in millisecond) after which a timeout alarm will be triggered to report that no Program Map Table (PMT) was found on the Packet Identifier (PID) specified in the PAT during this much time. The default value is 500 ms, on a range of 10 to 2500. 
1.6 PID error	Set the delay (in millisecond) after which an alarm will be triggered to report that the data stream associated with a PID has not occurred in the transport stream during this much time. The default value is 5000 ms, on a range of 10 to 25000. 

2.3a PCR repetition error	Set the delay (in millisecond) after which an alarm will be triggered to report that the interval between two consecutive Primary Clock Reference (PCR) values has exceeded the specified time. The default value is 40 ms, on a range of 10 to 200. 
2.5 PTS error	Set the delay (in millisecond) after which an alarm will be triggered to report that no Presentation Time Stamp (PTS) was found in the transport stream during this much time. The default value is 700 ms, on a range of 10 to 3500. 


Configuring Alarm Debouncing

To configure alarm debouncing


- 1 Connect to the multiviewer you want to configure, if you want to apply the changes in real time (see [Connecting to a Multiviewer](#) on page 32).

Note: If this step is omitted, then you will need to export the database to apply the new calibrations to the multiviewer.

- 2 In the main window, click the **System** tab, and then:
 - In the case of a Kaleido-IP, click **Calibrations (Kaleido-IP)** on the second-level tab bar, select the appropriate calibration profile on the **Tools** pane, and then click the alarm whose debouncing you want to calibrate in the main pane.

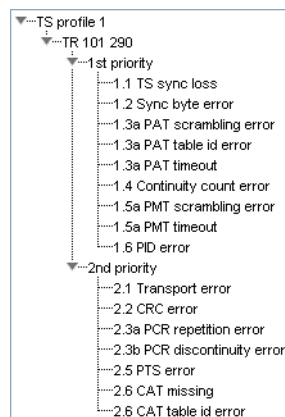

A transport stream profile

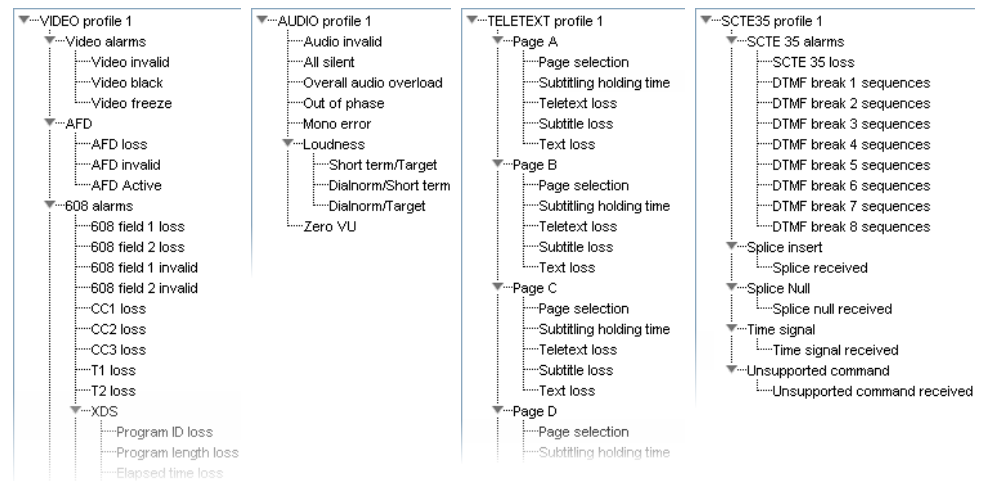

Elementary stream profiles

- For all other multiviewer models, click **Description/Calibrations** on the second-level tab bar, navigate to the alarm whose debouncing you want to calibrate, by expanding the appropriate multiviewer input, one of its Video elements, and then the alarm-related elements (or the ABT element, and then one of the ABT's audio elements).

- In the **Properties** pane, under **Debouncing**, set appropriate values (see [page 111](#)) for the **Set duration** and **Clear duration** attributes.

The screenshot shows the 'Debouncing' section of the software interface. It contains two rows of controls:

- Set duration (sec):** A slider set to 15, with an 'Apply to all' button.
- Clear duration (sec):** A slider set to 0, with an 'Apply to all' button.

Multiviewer Input Calibrations

To calibrate your multiviewer inputs, you navigate a hierarchical representation of your system in XEdit, and set parameters to match your monitoring purposes.

- In the case of a Kaleido-IP, default audio, video, teletext, SCTE 35, and transport stream profiles are available with preset calibrations, which cannot be modified. You can add custom profiles, and configure them as needed, from XEdit's **Calibrations (Kaleido-IP)** tab. You can apply a profile to an elementary stream in the **Description/Calibrations** tab. See [Profiles](#) on page 107.
- For all other multiviewer models, you can modify calibrations for every multiviewer input, from the System list in XEdit's **Description/Calibrations** tab. To apply a specific calibration to all inputs at once, click the corresponding **Apply to all** button.

Configuring Audio Programs

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		● ¹		● ²

1. Applies to the Kaleido-X16, and to Kaleido-X multiviewers with *second-generation* input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3), only. You can define up to two groups of audio channels, for each video input—each group, itself, constituting an audio program.
2. You can define up to four group of audio channels, for each video source.


Note: If you have a Kaleido-X with first-generation input cards (KXI-16HSV, KXI-16HS, or KXI-16SV rev. 599 and earlier), see [Calibrating Dolby Dialog Loudness Measurement](#), on page 128.

To configure an audio program

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input.
- 4 Expand **Audio programs & loudness**, and then click **Program 1**.

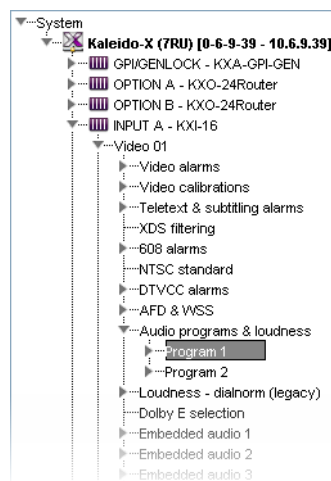

5 In the **Properties** pane, select the embedded audio channels that you want to be part of the audio program.

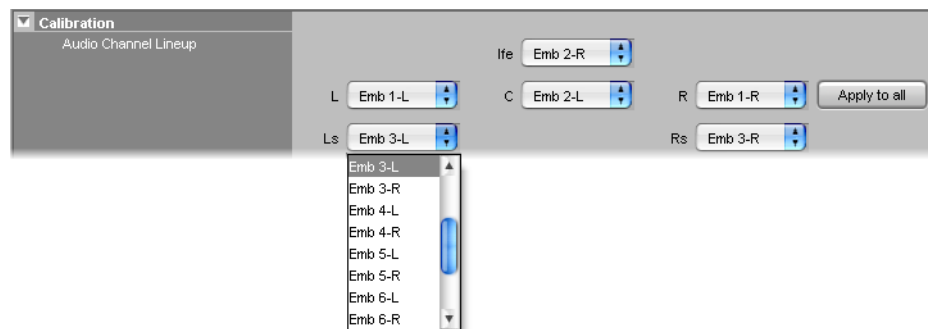

- Each channel is assigned a specific role in the program (left, right, center, etc).
- 6 Repeat this procedure to define a second audio program (**Program 2**) if necessary. Audio channels can be reused to define the second program or they can be made mutually exclusive as required.

Calibrating Loudness Measurement

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		● ¹	●	●	●

1. With second-generation input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3)

To calibrate loudness measurement

- 1 Navigate to the appropriate input's **Loudness** element in the System list or audio profile, and select it.
 - In the case of a Kaleido-IP, see [Navigating to the loudness calibration in a Kaleido-IP calibration profile](#), on page 126.

- For a Kaleido-X16 or a Kaleido-X, see [Navigating to the loudness calibration in a Kaleido-X16 or Kaleido-X System list](#), on page 126.

2 In the **Properties** pane, set the appropriate values for your installation.

The following values are involved:

Parameter	Description
Mode	Select the loudness standard you want to apply: EBU R128, ATSC A/85, or ARIB TR-B32. Alternatively, you can define a custom mode to gain more control.
Short term window	This parameter determines the integration time of the short term loudness measurement. It is configurable when using ATSC A/85 or a custom measurement mode, with a value on a scale ranging between 1 and 15 seconds.
Max. lower deviation	The Max. lower deviation parameter determines the tolerated excursion range of the short term loudness below the target value. The measured short term loudness and the encoded dialnorm can be compared against each other and against a standard or your organization's target value, and alarms will be triggered in case of too much deviation. In <i>custom</i> mode, possible values range from -70 dB to 0 dB. ¹
Max. upper deviation	The Max. upper deviation parameter determines the tolerated excursion range of the short term loudness above the target value. The measured short term loudness and the encoded dialnorm can be compared against each other and against a standard or your organization's target value, and alarms will be triggered in case of too much deviation. In <i>custom</i> mode, the possible values range from 0 dB to 15 dB.
Target	Type the appropriate loudness value for your custom standard, in the box, or set it using the slider. The default value is -24, on a scale of -70 LUFS/LKFS to 0 LUFS/LKFS. ² This value can then be compared against the measured loudness, and against the encoded dialnorm found in the VANC audio metadata (SMPTE ST 2020-A).

1. Setting this parameter to its lowest value (-70 dB) will prevent the short term/Target alarm from being triggered when silence is detected.

2. On the monitor wall, loudness monitors using a custom measurement mode have their scale labeled *LU*, or *LUFS*. There is no functional difference between the LU vs. LK, or LUFS vs. LKFS scales.


Navigating to the loudness calibration in a Kaleido-IP calibration profile

To navigate to the loudness calibration in a Kaleido-IP calibration profile

- 1 In XEdit's main window, click the **System** tab, and then click **Calibrations (Kaleido-IP)** on the second-level tab bar.
- 2 On the **Tools** tab, select the audio profile whose loudness measurement you would like to calibrate.

A hierarchical list representing all applicable calibrations for this profile appears in the main window.


- 3 Expand the list, and then click **Loudness**.

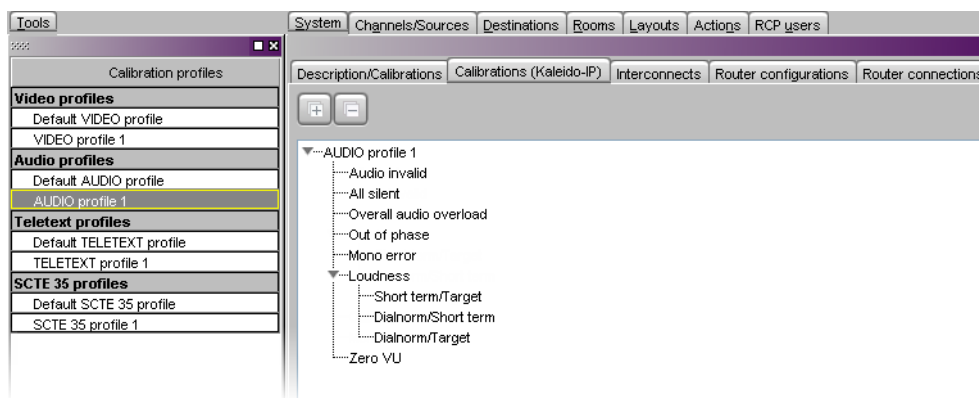

Navigating to the loudness calibration in a Kaleido-X16 or Kaleido-X System list

To navigate to the loudness calibration in a Kaleido-X16 or Kaleido-X System list

- 1 In the main window, click the **System** tab, and then click the **Description/Calibrations** second-level tab.
- 2 Expand the appropriate input module, then the video input you want to calibrate, the **Audio programs & loudness** element, the Program element you want to configure (**Program 1**, or **Program 2**), and then click **Loudness**.

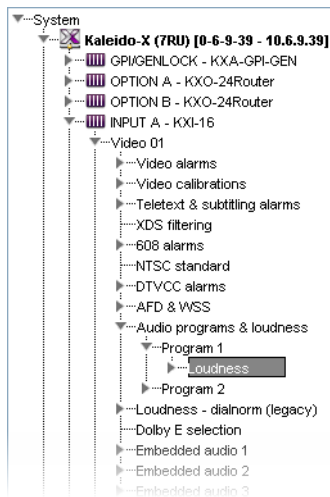

Calibrating Loudness Probe Assignments


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		● ¹	●		


1. With second-generation input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3)

To calibrate loudness probe assignments

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, and then click **Loudness probe assignment**.

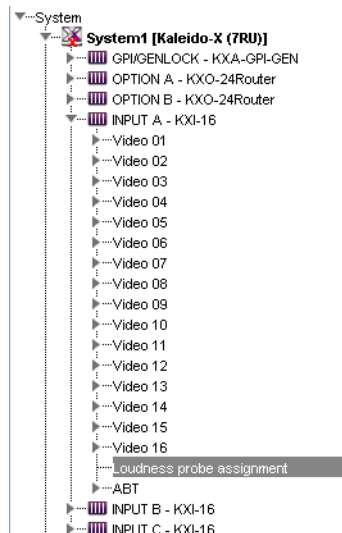

- 4 In the **Properties** pane, assign an audio program to one of the 16 available probes.
The default is **Program 1** for all video inputs.

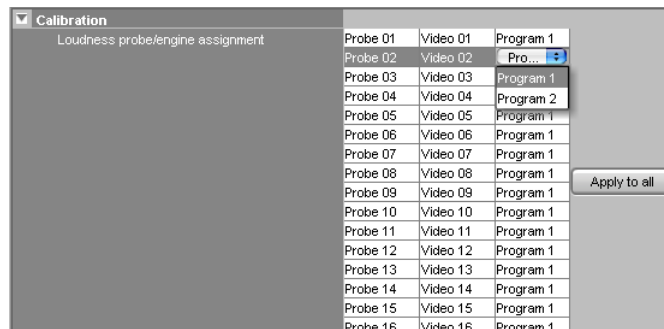

Note: If you choose to measure the second program for a specific video input, you will not be able to measure audio programs on all inputs.

Calibrating Dolby Dialog Loudness Measurement

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		● ¹			

1. With first-generation input cards (KXI-16SV rev. 599 and earlier, KXI-16HS, and KXI-16HSV)


Note: If you have a Kaleido-X16, and to Kaleido-X multiviewers with second-generation input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3), see [Configuring Audio Programs](#), on page 123.

To calibrate loudness measurement for an audio source

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
- A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, and then click **Loudness - dialnorm (legacy)**.

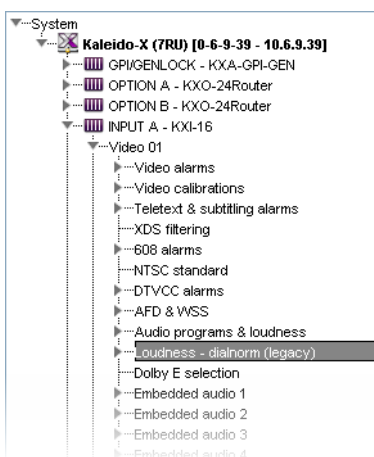

- 4 In the **Properties** pane, set the appropriate values for your installation.

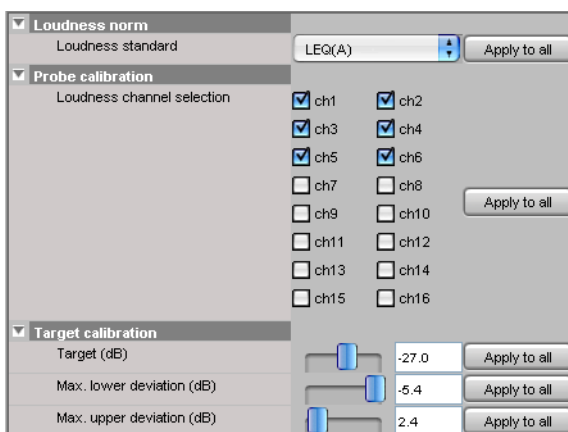

The following values are involved:

Parameter	Description
Loudness standard	Select the standard you want to apply: either the A-weighted LEQ (LEQ(A)) or the ITU-R BS.1770 filter. Note: Mixing standards for different inputs is not supported.
Loudness channel selection	Select the check boxes corresponding to the audio channels that should contribute to the loudness measurement. Note: The Kaleido Software can measure loudness against a maximum of 8 channels. If you select more than 8 channels, only the first 8 will be used.
Target	Type your organization's reference dialnorm value in the box, or set it using the slider. The default value is -27 dB, on a scale of -60 dB to 0 dB. This value can then be compared against the measured loudness, and against the encoded dialnorm found in the VANC audio metadata (SMPTE ST 2020-A).
Max. lower deviation	The Max. lower deviation parameter determines the tolerated excursion range below the reference value. The measured levels and the encoded dialnorm can be compared against each other and against your organization's target, and alarms triggered in case of too much deviation. The default value is -5.4 dB, on a scale of -64 dB to 0 dB. Note: Setting this parameter to its lowest value (-64 dB) will prevent the Loudness/Target alarm from being triggered when silence is detected.
Max. upper deviation	The Max. upper deviation parameter determines the tolerated excursion range above the reference value. The measured levels and the encoded dialnorm can be compared against each other and against your organization's target, and alarms triggered in case of too much deviation. The default value is 2.4 dB, on a scale of 0 dB to 15 dB.

Configuring Sources for Dolby E Audio Metadata

This feature applies to:

Kaleido-MX Series	Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
● ¹			● ²		

1. Dolby E metadata can be decoded from all eight embedded pairs within a video source.


2. Dolby E audio can be decoded from two of eight AES pairs within a signal's embedded audio stream. The Dolby E selection parameters determine which AES pairs will be used.

Notes


- Dolby E decoding requires the Dolby E option to be enabled. See the multiviewer's *Installation & Service Manual* for more information.
- Dolby E decoding is *not* supported on the Audio Bridge Terminal (ABT).

To configure sources for Dolby E audio metadata

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, and then click **Dolby E selection**.

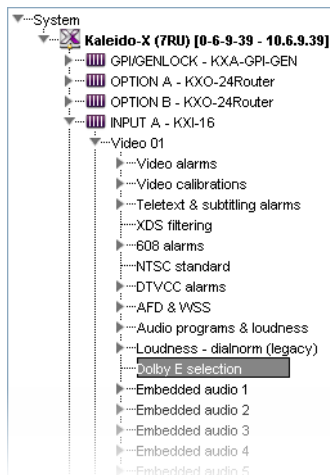

- 4 In the **Properties** pane, select the AES pairs (among **Embedded audio 1** to **Embedded audio 8**) associated with the two Dolby E programs to be decoded, from the two lists: **Dolby E selection 1** and **Dolby E selection 2**.

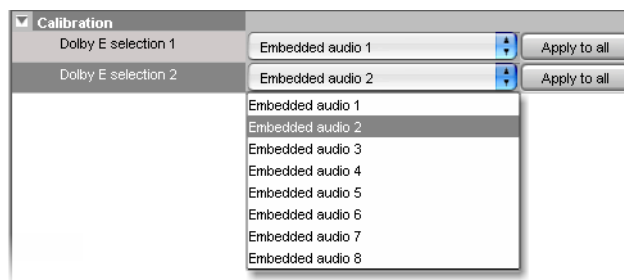

Calibrating Zero VU Reference Levels for Embedded Audio Sources


This feature applies to:

Kaleido-MX Series	Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
				●	


To calibrate a Zero VU reference level

1 In the main window, click the **System** tab, and then:

- In the case of a Kaleido-IP, click the **Calibrations (Kaleido-IP)** tab, select the audio profile you want to configure, and then click **Zero VU**.

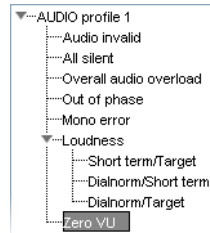

- For all other multiviewer models, click **Description/Calibrations** on the second-level tab bar, expand the appropriate input, then one of its embedded audio elements, and select **Zero VU**.

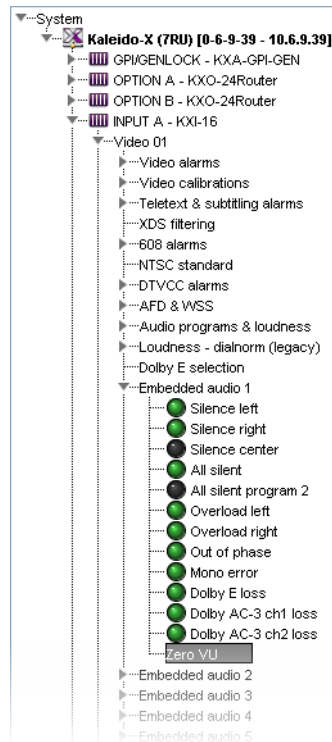

2 In the **Properties** pane, set the reference level to the appropriate value (in dBFS), using the **Zero VU** slider, under **Calibration**.

Alternatively, type the value directly in the **Zero VU** box.



Calibrating Zero VU Reference Level for an ABT Audio Source

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
●		●		

Notes

- The KMX-3901/3911 only supports embedded audio, not discrete audio sources from an ABT.

To calibrate an ABT audio source

- In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- In the list, expand the multiviewer whose inputs you want to calibrate.
- Expand the appropriate input, its **ABT** element, and then one of the ABT's audio elements. Select **Zero VU**.

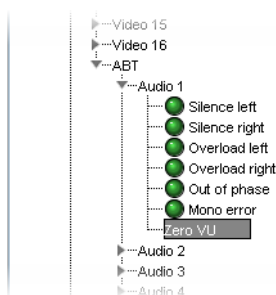

- In the **Properties** pane, set the reference levels to the appropriate values (in dBFS, and in dBu), using the **Zero VU** sliders, under **Calibration**. Alternatively, type the values directly in the **Zero VU** boxes.

Calibration	
Zero VU (dBFS)	-20
Zero VU (dBu)	4

Calibrating Aspect Ratio Decoding

Note: This section applies to multiviewers that are used to monitor **SD signals**. In the case of HD signals, since the AFD information always follows AFD 2016, no calibration is needed. No calibration is needed for the Kaleido-IP either, since it supports decoding of a signal's aspect ratio from AFD metadata only. See [Aspect ratio](#), on page 109 for more information.


Aspect ratio information can be encoded following different standards: AFD 2016, AFD VI, or WSS. The following table shows the different standards and their availability according to the signal type:

Signal type	AFD 2016	Video index (AFD VI)	Wide screen signaling (WSS)
HD	Yes	—	—
SD 525	Yes	Yes	—
SD 625	Yes	Yes	Yes


AFD VI information can be encoded as 4 bits or 3 bits (legacy).

To select the AFD source for an SD signal

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, and then click **AFD & WSS**.

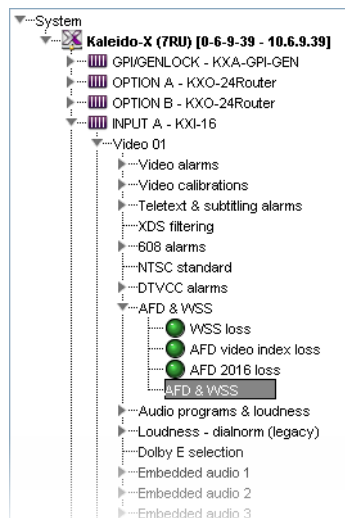

- 4 In the **Properties** pane, select **Legacy AFD 3 bits** to support the legacy AFD 3-bit format for the video index, if appropriate.
- 5 Select the appropriate value from the **SD AFD source** list.

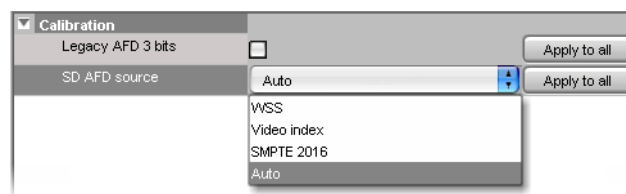

The default value is **Auto**, which means that the multiviewer will automatically detect what is present in the signal and use it to report AFD. If more than one AFD type is present in the signal, and **SD AFD source** is set to **Auto**, then the AFD type is selected in this order: (1) AFD 2016, (2) AFD VI, or (3) WSS.

Calibrating Detail Enhancement

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
●		●		●

Notes

- KMX-39N1, KMX-49N1, Kaleido-MX and Kaleido-Modular-X configured for 4K UHD output, and Kaleido-MX 4K do not support *detail enhancement* for video windows spanned across multiple heads (see [4K UHD Spanning](#) on page 224). Make sure the corresponding multiviewer inputs are calibrated with the **Detail Enhancer** parameter set to 0, which is the default value.

To configure detail enhancement for a video input

- In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- In the list, expand the multiviewer whose inputs you want to calibrate.
- Expand the appropriate input, then one of its Video elements.
- Under **Video calibrations**, click **Detail enhancer**.

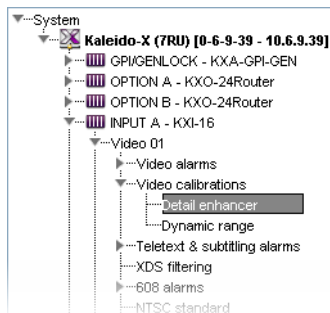

- In the **Properties** pane, set the appropriate value (between 0 and 15).



- Click **Apply to all** to apply the associated setting to all video inputs on your multiviewer.

Calibrating HDR

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-4911	KMX-39N1 KMX-4921
					●


The HDR parameter determines which HDR and WCG standard should be used to interpret the input signal's format. This supports a mix of multiviewer signal input types (SDR, HDR, color gamut) to be viewed in the monitoring output at the same time in a coherent manner, consistent with the limits of the current monitoring output's SDR, HDR, color gamut display settings; see [Configuring Displays](#), on page 201.

To configure HDR and WCG for a video input

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.

A hierarchical list representing the current system appears.


- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, then one of its Video elements.
- 4 Under **Video calibrations**, click **HDR**.

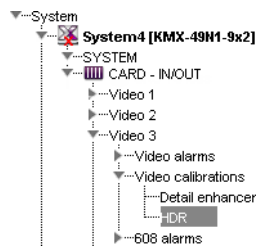

- 5 In the **Properties** pane, click



- 6 Set the values in **HDR Options**.

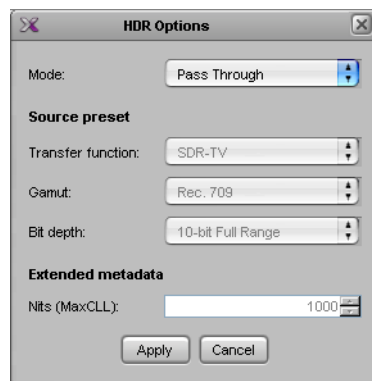

The following values need to be configured:

Parameter	Description
Mode	Pass Through (default): the input signal is passed through the multiviewer without any HDR or WCG processing. This mode is used under the following situations: • when there is a need to display the input signal without any processing (as-is) • for any KMX-4911 multiviewer card which does not support HDR • any KMX-39N1 / KMX-4921 multiviewer card that is not currently licensed for the HDR option internally uses the Pass Through mode even when Mode is set to another option setting In Pass Through, none of the parameters shown below can be set. Auto: automatically detect the input video signal's HDR and WCG format and adjust the input settings accordingly. The Nits (MaxCLL) parameter must be set below if you expect that any PQ video stream may be received. Preset: manually set a number of fixed parameters needed to process the HDR and WCG input signal.
Transfer function	SDR-TV: the HD input video signal meets the Rec. 709 standard. HLG: the Hybrid Log-Gamma input video signal meets the BT.2100 standard. PQ: the Perceptual Quantizer input video signal meets the SMPTE ST 2084 standard. S-Log3: the input video signal is in S-Log3 format.
Gamut	Rec. 709: the input video signal's color gamut meets the Rec. 709 standard. Rec. 2020: the input video signal's color gamut meets the Rec. 2020 standard. S-Gamut3: the input video signal's color gamut is in S-Gamut3 format.
Bit depth	10-bit Full Range: 0 to 1023 image mapping range according to SMPTE RP. 2077. This is also called <i>computer RGB</i>. 10-bit (narrow range): the standard 64 to 940 image mapping range. This is also called <i>studio RGB</i>.
Nits (MaxCLL)	The MaxCLL corresponds to the brightest pixel to be expected in the stream. This is represented in nits. The value 0 is internally interpreted as 1000.

7 Click **Apply**.

8 Click **Apply to all** to apply the associated setting to all video inputs on your multiviewer.

Calibrating Dynamic Range


Full-range RGB (0-255) is also called *computer RGB*. Video RGB (16-235) is also called *studio RGB*.

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
●		●		

To configure dynamic range for a video input

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, then one of its Video elements.
- 4 Under **Video calibrations**, click **Dynamic range**.

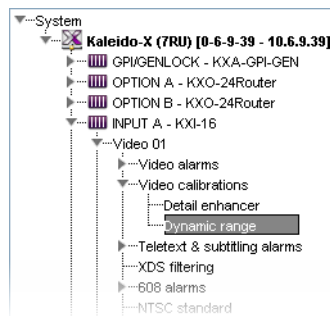

 - 5 In the **Properties** pane, set the appropriate value (either **Full range** or **Video range**).



- 6 Click **Apply to all** to apply the associated setting to all video inputs on your multiviewer.

Calibrating Subtitling/Closed Captioning

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
●		●	●	●

In the case of a Kaleido-IP, presence alarms can be configured for up to eight preset Teletext (WST) subtitle pages for each input signal and all eight teletext pages (page A to page H) can be decoded.

The subtitling page selection parameters determine which pages will be monitored. In the case of the KMX-39N1, KMX-49N1, Kaleido-MX, Kaleido-MX 4K, Kaleido-Modular-X, Kaleido-X, and Kaleido-X16 multiviewers, the teletext page set as *page A* will also be decoded, and its content can be displayed in a video window.


This requires the CC/XDS option to be enabled (see the multiviewer's *Installation & Service Manual* for more information).

For a Kaleido-IP, see [Configuring Teletext/Subtitling Page Selection for a Kaleido-IP](#) below. For other multiviewer models, see [Configuring Teletext/Subtitling Page Selection for a KMX-39N1, KMX-49N1, Kaleido-X, Kaleido-X16, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X](#), on page 139.

Configuring Teletext/Subtitling Page Selection for a Kaleido-IP

To configure Teletext/Subtitling page selection for a Kaleido-IP

- 1 In the main window, click the **System** tab, and then click the **Calibrations (Kaleido-IP)** tab.
- 2 Select the teletext profile you want to configure, expand the **Page A** element, and then click **Page selection**.

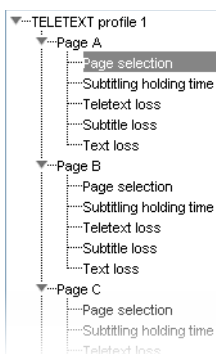

- 3 In the **Properties** pane, type the page number you want to be the default selection for Page A, in the **Teletext page A selection** box. Alternatively, use the slider to set the page number.




- 4 If you want to enable or disable teletext decoding for this page, then select or clear the **Enabled** check box accordingly.
Only decoding of Page A is enabled by default.
- 5 Repeat this procedure for the Page B, to Page H elements.

Note: Alarms can be configured for all eight preset pages (see [Configuring Alarm Debouncing](#) on page 121 for instructions on how to configure the alarms).

Configuring Teletext/Subtitling Page Selection for a KMX-39N1, KMX-49N1, Kaleido-X, Kaleido-X16, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X

To configure Teletext/Subtitling page selection for a KMX-39N1, KMX-49N1, Kaleido-X, Kaleido-X16, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose inputs you want to calibrate.
- 3 Expand the appropriate input, then one of its Video elements.
- 4 Under **Teletext & subtitling alarms**, expand the **Page A** element, and then click **Page selection**.

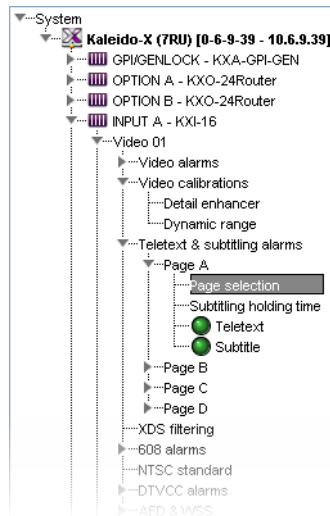

- 5 In the **Properties** pane, type the page number you want to be the default selection for Page A, in the **Teletext page A selection** box. Alternatively, use the slider to set the page number.



- 6 Click **Apply to all** if you want this setting to be the default Page A selection for every video signal on your system.
- 7 Repeat this procedure for the Page B, C, and D elements.

Note: Alarms can be configured for all four preset pages (see [Configuring Alarm Debouncing](#) on page 121 for instructions on how to configure the alarms). The Teletext page set as Page A will also be decoded, and its content can be displayed in a video window.


Calibrating Metadata Holding Time

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
●		●	●	●


To calibrate metadata holding time

- In the main window, click the **System** tab, and then:
 - In the case of a Kaleido-IP, click the **Calibrations (Kaleido-IP)** tab, select the video or teletext profile you want to configure, and then click **CC Caption holding time**, **XDS filtering**, **DTVCC holding time** (for a video profile), or **Subtitling holding time** (for a teletext profile).

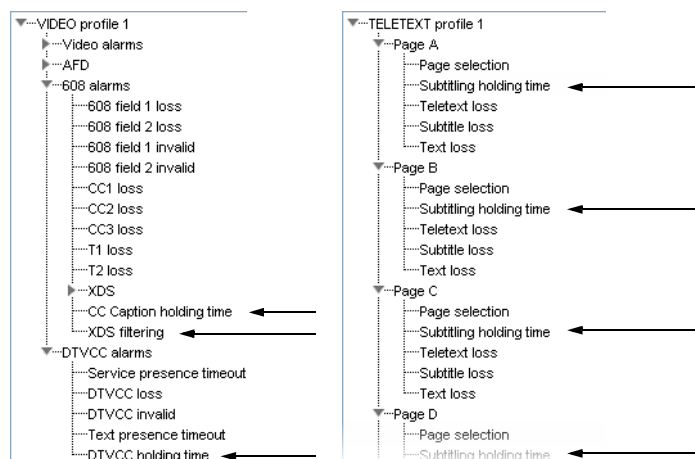

- For all other multiviewer models, click **Description/Calibrations** on the second-level tab bar, expand the appropriate input module, then the video input you want to calibrate, and select the metadata element whose holding time you want to configure.
- In the **Properties** pane, set the value by typing it directly in the box, or by using the slider (refer to the table below as needed).


Subtitling holding time

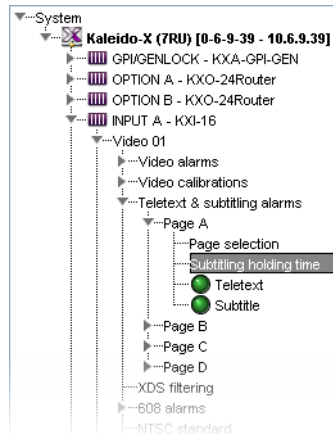

Set the delay (between 5 and 360 seconds, default value is 16 seconds) after which subtitles are cleared.

The 'Calibration' dialog shows 'Subtitling holding time (sec)' with a slider and a text box containing the value '16'. An 'Apply to all' button is present.

XDS filtering

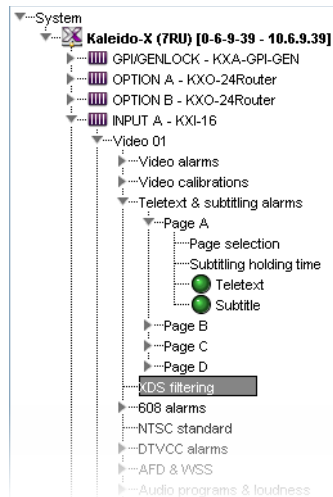


Set the holding time (between 5 and 360 seconds, default value is 30 seconds) for each XDS metadata element (APS, ASB, CGMS-A; channel number; elapsed time; network name; program description, ID, name, length, and type; station ID; TSID name; time of day; time zone; V-chip rating).

The 'Calibration' dialog shows a list of XDS metadata elements with their respective holding times. Each row has a slider, a text box with the default value (30), and an 'Apply to all' button.

Element	Holding time (sec)	Apply to all
APS holding time (sec)	30	Apply to all
ASB holding time (sec)	30	Apply to all
CGMS-A holding time (sec)	30	Apply to all
Channel number holding time (sec)	30	Apply to all
Elapse time holding time (sec)	30	Apply to all
Network name holding time (sec)	30	Apply to all
Program description holding time (sec)	30	Apply to all
Program ID holding time (sec)	30	Apply to all
Program length holding time (sec)	30	Apply to all
Program name holding time (sec)	30	Apply to all
Program type holding time (sec)	30	Apply to all
Station ID holding time (sec)	30	Apply to all
Time of day holding time (sec)	30	Apply to all
Time zone holding time (sec)	30	Apply to all
TSID name holding time (sec)	30	Apply to all
V-chip holding time (sec)	30	Apply to all


CC holding time

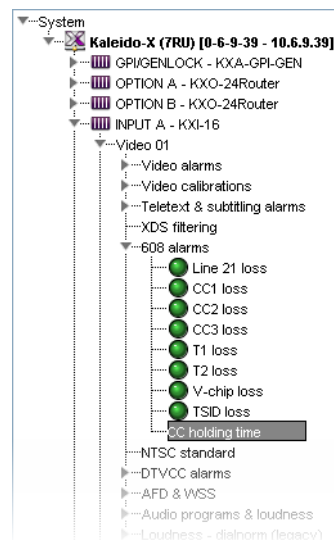

Set the delay (between 5 and 360 seconds, default value is 16 seconds) after which closed captions (608) are cleared.



DTVCC holding time

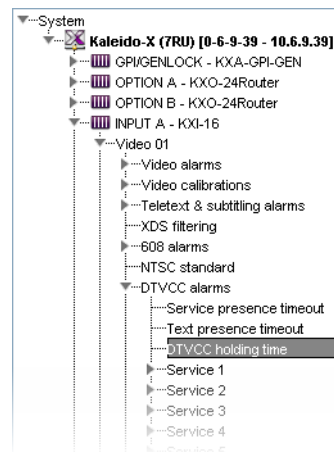

Set the amount of time (between 15 and 360 seconds, default value is 30 seconds) during which DTVCC closed captions (708) should persist on the monitor wall, if the multiviewer has not received a clear message block for the corresponding DTVCC service. When this delay expires the text is forcibly cleared on the monitor wall.



Calibrating DTMF Tone Sequences

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
			●	

The Kaleido-IP can detect 16 specific DTMF sequences in a SCTE 35 stream, to trigger up to 8 DTMF break alarms and to return their status to normal. Define the sequences, matching those used in the actual programs you want to monitor.

To calibrate out-of-network, and in-network DTMF tone sequences

- 1 In the main window, click the **System** tab, and then click the **Calibrations (Kaleido-IP)** tab on the second-level tab bar.

- 2 On the **Tools** pane, select the SCTE 35 profile you want to configure, and then click **DTMF break 1 sequences**.

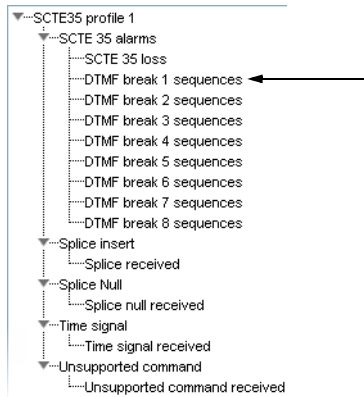

- 3 In the **Properties** pane, set the appropriate values for the out-of-network, and in-network DTMF sequences.

Calibration	
Out of network	902*11
In network	902#10

Allowed characters: 0–9, A–D, *, and #.

- 4 Proceed in the same fashion with **DTMF break 2 sequences** to **DTMF break 8 sequences**, as needed, to define the remaining DTMF sequences you want to monitor.

Calibrating SCTE 35 Event Reporting Duration


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
			●	

When the Kaleido-IP detects a SCTE 35 command in a transport stream, it momentarily triggers the corresponding alarm. The alarm status returns to normal after a delay, which you can configure for your specific purposes if needed.

To calibrate SCTE 35 event reporting duration

- 1 In the main window, click the **System** tab, and then click the **Calibrations (Kaleido-IP)** tab on the second-level tab bar.
- 2 On the **Tools** pane, select the SCTE 35 profile you want to configure.
- 3 In the main pane, click **Splice received**, **Splice null received**, **Time signal received**, or **Unsupported command received**.

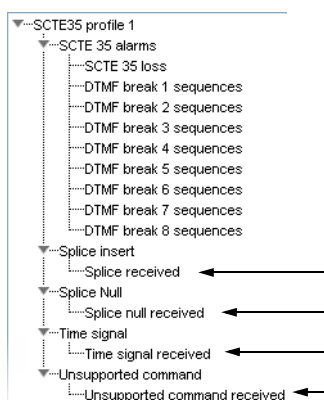

4 In the **Properties** pane, set the relevant values under **Calibration**.

Splice received timeout	Set the delay (in seconds) after which the <i>splice received</i> alarm will be cleared. The splice received alarm is triggered immediately whenever the Kaleido-IP detects a <i>splice insert</i> command. The default value is 120 seconds, on a range of 1 to 3600. 
Splice null received timeout	Set the delay (in seconds) after which the <i>splice null received</i> alarm will be cleared. The splice null received alarm is triggered immediately whenever the Kaleido-IP detects a <i>splice null</i> command. The default value is 60 seconds, on a range of 1 to 3600. 
Time signal received timeout	Set the delay (in seconds) after which the <i>time signal received</i> alarm will be cleared. The time signal received alarm is triggered immediately whenever the Kaleido-IP detects a <i>time signal</i> command. The default value is 60 seconds, on a range of 1 to 3600. 
Unsupported command received timeout	Set the delay (in seconds) after which the <i>unsupported command received</i> alarm will be cleared. The unsupported command received alarm is triggered immediately whenever the Kaleido-IP detects a command that does not belong to the set of supported commands. The default value is 60 seconds, on a range of 1 to 3600. 

Calibrating SCTE 104 Message Events


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
				●



When the Kaleido-IP detects a SCTE 104 command in a transport stream, it momentarily triggers the corresponding alarm. The alarm status returns to normal after a delay, which you can configure for your specific purposes if needed.




To calibrate SCTE 104 event reporting duration

- 1 In the main window, click the **System** tab, and then click the **Descriptions/Calibrations** tab on the second-level tab bar.
- 2 On the **Tools** pane, select the SCTE 104 profile you want to configure.
- 3 In the main pane, click **Insertion Line**, **SCTE 104 loss**, **Splice received**, **Splice null received**, **Time signal received**, or **Unsupported command received**.

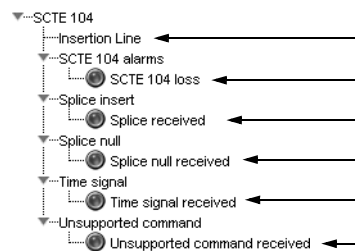

- 4 In the **Properties** pane, set the relevant values under **Calibration**.

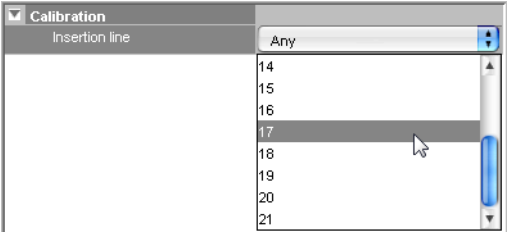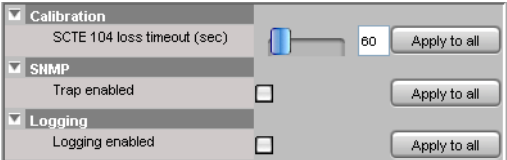Insertion Line	Set the VANC line to use for SCTE 104 data transmission detection. Any detects SCTE 104 data on any VANC line from 9 to 21. 
SCTE 104 loss	Calibration, SCTE 104 loss timeout: Set the delay (in seconds) after which the <i>SCTE 104 loss alarm</i> will be cleared. The splice received alarm is triggered immediately whenever the Kaleido-IP detects a <i>splice insert</i> command. The default value is 60 seconds, on a range of 1 to 360. 

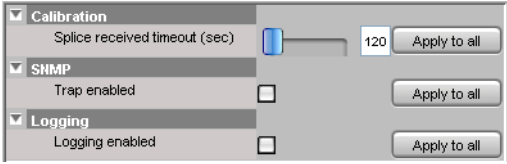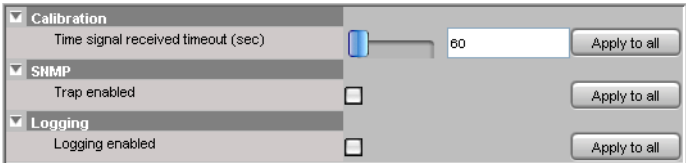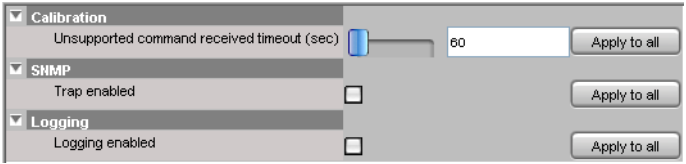Splice received timeout	Set the delay (in seconds) after which the <i>splice received alarm</i> will be cleared. The splice received alarm is triggered immediately whenever the Kaleido-IP detects a <i>splice insert</i> command. The default value is 120 seconds, on a range of 1 to 300. 
Splice null received timeout	Set the delay (in seconds) after which the <i>splice null received alarm</i> will be cleared. The splice null received alarm is triggered immediately whenever the Kaleido-IP detects a <i>splice null</i> command. The default value is 60 seconds, on a range of 1 to 3600. 
Time signal received timeout	Set the delay (in seconds) after which the <i>time signal received alarm</i> will be cleared. The time signal received alarm is triggered immediately whenever the Kaleido-IP detects a <i>time signal</i> command. The default value is 60 seconds, on a range of 1 to 3600. 
Unsupported command received timeout	Set the delay (in seconds) after which the <i>unsupported command received alarm</i> will be cleared. The unsupported command received alarm is triggered immediately whenever the Kaleido-IP detects a command that does not belong to the set of supported commands. The default value is 60 seconds, on a range of 1 to 3600. 

- 5 In the **Properties** pane, select the **Trap enabled** check box to have the multiviewer issue an SNMP trap each time this alarm is triggered. See [Simple Network Management Protocol \(SNMP\)](#), on page 164. The default is disabled.
- 6 In the **Properties** pane, select the **Logging enabled** check box to have the multiviewer publish this alarm to the application server's log, each time this alarm is triggered. The default is disabled. See [Enabling logging for a native alarm](#), on page 185.
- 7 When **Apply to all** is available, click it if you want to apply the corresponding setting to every video signal on your system.

Multiviewer Output Calibrations

Calibrating the Brightness and Contrast

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		●		


Each of the output heads in the multiviewer can drive a monitor wall display. For each head, output parameters can be adjusted to optimize the image on the monitor wall display: the brightness parameters set the black offsets of the RGB output signals; and the contrast parameters set the gain offsets of these signals.

To calibrate the brightness and contrast parameters

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.


A hierarchical list representing the current system appears.

- 2 In the list, expand the multiviewer whose output heads you want to calibrate.

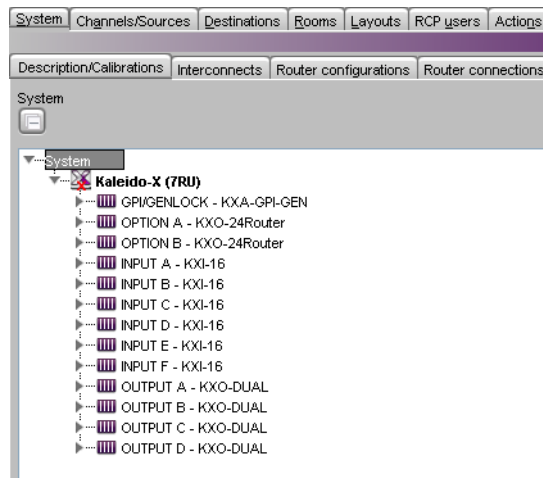

- 3 Expand the appropriate output module.

The expanded module will show the output heads. Depending on the multiviewer model, other items may also appear.

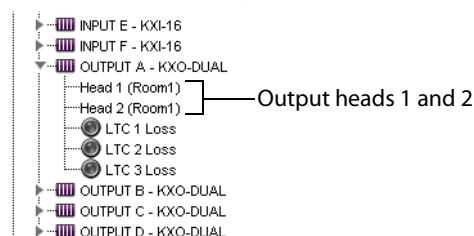

- 4 Select the head you want to calibrate.

The brightness and contrast adjustment controls appear in the **Properties** pane.

- 5 Expand the headings to show the controls if they are not visible.

The screenshot shows two expandable sections in the Kaleido software interface. The first section, 'Brightness (black offsets)', is expanded and shows three rows: 'Red', 'Green (master)', and 'Blue'. Each row has a slider, a numerical input box (all showing '50'), and an 'Apply to all' button. The second section, 'Contrast (gain offsets)', is also expanded and shows the same three rows with identical sliders, input boxes (all showing '50'), and 'Apply to all' buttons.

- 6 Use the sliders to adjust the brightness and contrast until you obtain a pleasing presentation of the video elements on the monitor wall display driven by the selected head.

Alternatively, type values directly in the **Red**, **Green (master)**, and **Blue** boxes.

Note: Moving the **Green (master)** slider will move the **Red** and the **Blue** sliders by the same amount.

The values must be between **0** and **100**.

A good approach is to set all values the same using the **Red** and **Blue** sliders, then to adjust for the best overall presentation using the **Green (master)** slider, and finally to fine-tune the color balance using the **Red** and the **Blue** sliders.

- 7 If appropriate, you may copy settings from this head *to every output head in the system*. For each value you want to apply globally throughout your system, click the corresponding **Apply to all** button.

This has the same effect as selecting every output head one by one, and adjusting the sliders to the same value for the selected parameter.

Note: If you want to apply the same values to all the other output heads in your system, you must click the **Apply to all** button for **Green (master)** FIRST, and then the **Apply to all** buttons for blue and red in any order. Otherwise the values for blue and red would be modified following the application of the value for green.

Calibrating Color Saturation

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		●		

Each of the output heads in the multiviewer can drive a monitor wall display. The image on the monitor wall contains both graphical elements created by the Kaleido multiviewer system, and video signals that are passed through the system. It is often useful to be able to modify the color saturation of the video so that its appearance within the graphical environment is pleasing. The **Color saturation** calibration control provides this function.


The color saturation calibration does not affect the graphical elements within the monitor wall display.

To calibrate the color saturation

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.


A hierarchical list representing the current system appears.

- 2 In the list, expand the multiviewer whose output heads you want to calibrate.

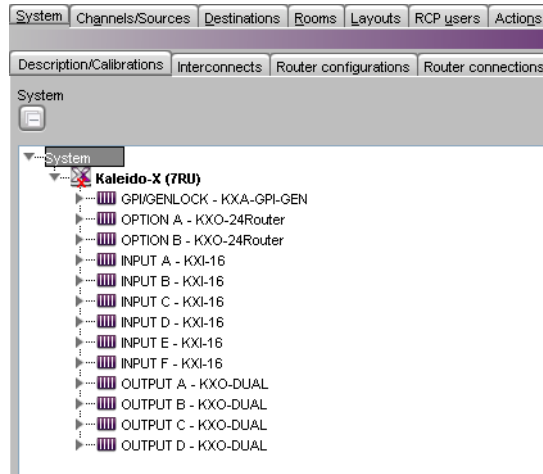

- 3 Expand the appropriate output module.


The expanded module will show the output heads. (Depending on the multiviewer model, other items may also appear.)

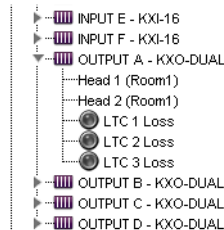

- 4 Select the head you want to calibrate.

The color saturation adjustment control appears in the **Properties** pane.

- 5 Expand the **Calibration** heading to show the control if it is not visible.

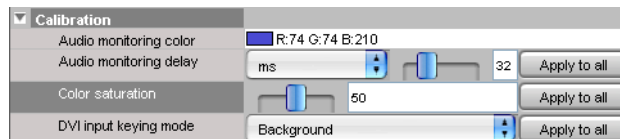

- 6 Use the slider to adjust the color saturation until you obtain a pleasing presentation of the video elements on the monitor wall display driven by the selected head.
Alternatively, type a value (between 0 and 100) directly in the **Color saturation** box.

Note: All videos on the monitor wall display controlled by the selected head are adjusted simultaneously.

- 7 If appropriate, you may copy the settings from this head to *every output head* in the system. To apply the color saturation settings globally throughout your system, click **Apply to all**.

This has the same effect as selecting every output head one by one, and adjusting the **Color saturation** slider to the same value.

Calibrating the DVI Keying Mode

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		●		

Notes


- Background keying is enabled by default, and should remain enabled when no actual keying is involved. Enabling the foreground keying mode when there is no signal at the associated DVI input is not supported.
- For more information about using content from the DVI input as background, see [Setting up a Layout for Background Keying from the DVI Input](#), on page 246.

To calibrate the DVI keying mode


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose output heads you want to calibrate.

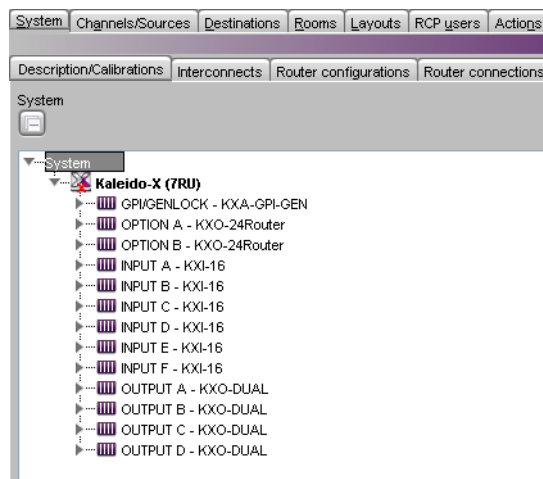

- 3 Expand the appropriate output module.
The expanded module will show the output heads. (Depending on the multiviewer model, other items may also appear.)

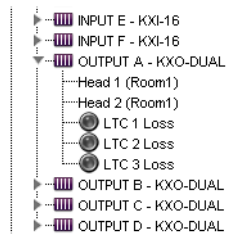

- 4 Select the head you want to calibrate.
- 5 In the **Properties** pane, select the appropriate value from the **DVI Input Keying Mode** list.

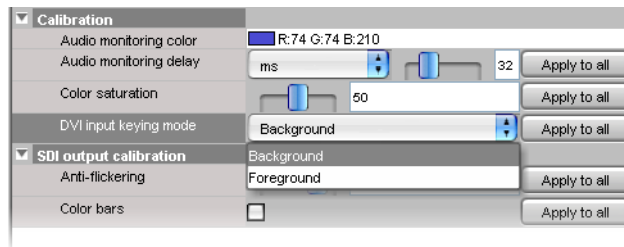

- 6 If appropriate, you may copy the settings from this head to *every output head* in the system: to apply the selected DVI input keying mode globally throughout your system, click **Apply to all**.

This has the same effect as configuring every output head one by one, and selecting the same keying mode for each.

Calibrating the Audio Monitoring Delay

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
		●		

Notes

- By design, the audio signal is approximately 37 ms ahead of the video.


To calibrate the audio monitoring delay for a head

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer whose output heads you want to calibrate.

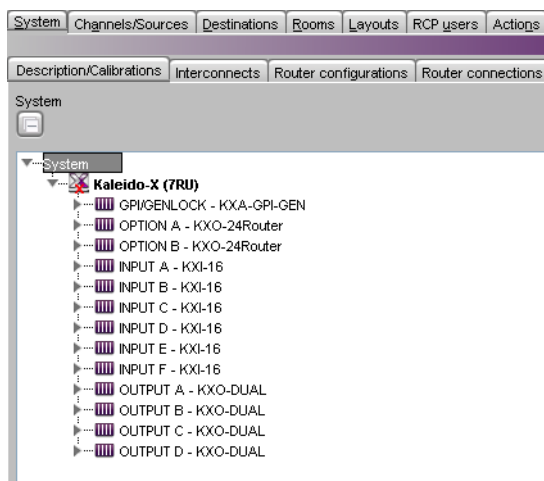


3 Expand the appropriate output module.

The expanded module will show the output heads. (Depending on the multiviewer model, other items may also appear.)

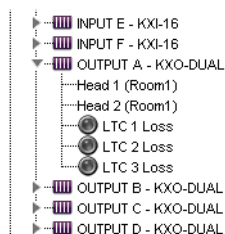


4 Select the head you want to calibrate.

The audio monitoring delay adjustment control appears in the **Properties** pane. Expand the **Calibration** heading to show the control if it is not visible.

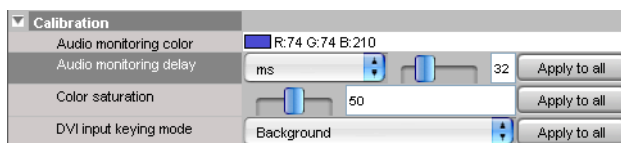

5 Select the appropriate unit (milliseconds or AES samples), and then use the slider to adjust the audio monitoring delay until the audio and video are well synchronized on the monitor wall display driven by the selected head.

Alternatively, type a value (between 0 and 100 ms, or between 4 and 4800 AES samples) directly in the **Audio monitoring delay** box.

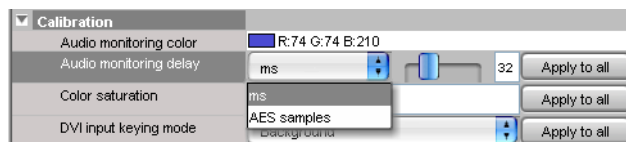

Note: All videos on the monitor wall display controlled by the selected head are adjusted simultaneously.

- 6 If appropriate, you may copy the settings from this head to *every output head* in the system. To apply the audio monitoring delay calibration globally throughout your system, click **Apply to all**.

This has the same effect as selecting every output head one by one, and adjusting the audio monitoring delay settings to the same values.

Calibrating the Audio Monitoring Color


When the **Monitoring indicator** check box is selected (see [Configuring Audio Monitors](#), on page 265), a color-keyed rectangle is shown below the VU meter that is the same color set below in **Audio Monitoring Color** when that display head is being monitored. See also [Triggering Audio Monitoring by Using the mouse, the RCP-200, or the Kaleido-RCP2](#), on page 516.

To calibrate the audio monitoring color

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.


A hierarchical list representing the current system appears.

- 2 In the list, expand the multiviewer whose output heads you want to calibrate.

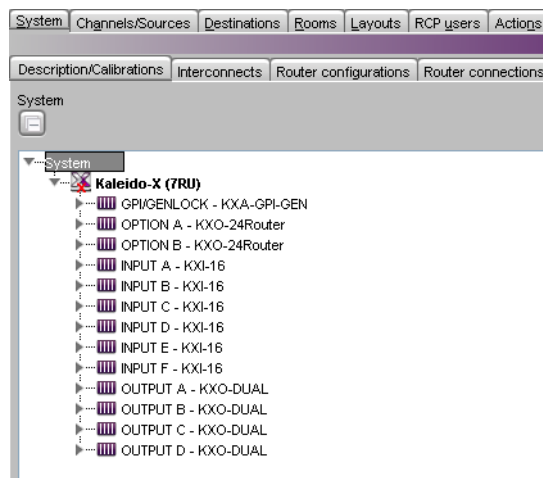

- 3 Expand the appropriate output module.


The expanded module will show the output heads. (Depending on the multiviewer model, other items may also appear.)

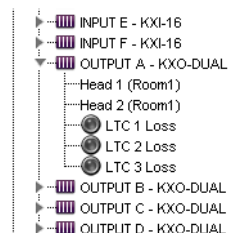

- 4 Select the head you want to calibrate.
- 5 In the **Properties** pane, click the **Audio Monitoring Color** box, and then click the button that appears at the end of the line.



The color picker window opens.

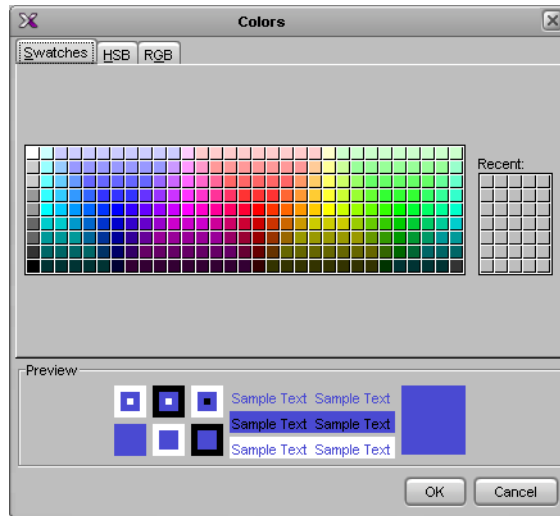

- 6 In **Colors**, click the tab that corresponds to the color space you want to use, and then choose the color that will be associated with the selected output head.
- 7 Click **OK** to close the color picker window.

Router Output Calibrations


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X 4RU	Kaleido-X 7RU & 14RU	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
			●	●		

Calibrating Switch Field Selection

To calibrate switch field selection for a router module

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer you want to calibrate.
- 3 Expand the appropriate router module, and then click **Switch field selection**.

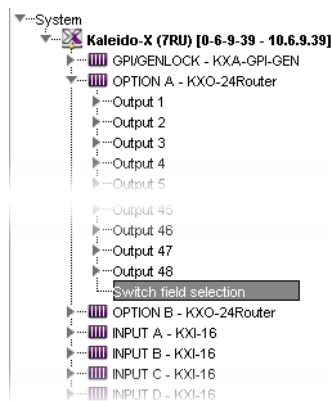

- 4 In the **Properties** pane, click the **Switch field selection** box, and then select the appropriate field value from the list.



Calibrating SDI Signal Reclocking

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X 4RU	Kaleido-X 7RU & 14RU	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
			●	●		

To calibrate reclocking of a router module's output signal


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.

A hierarchical list representing the current system appears.

- 2 In the list, expand the multiviewer you want to calibrate.
- 3 Expand the appropriate router output, and then click **SDI output reclocking**.

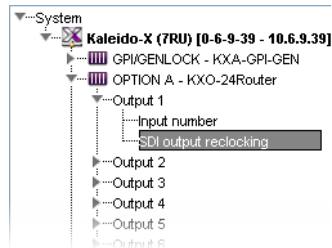

- 4 In the **Properties** pane, click the **SDI output reclocking** box, and then select **ON** or **OFF** from the list.

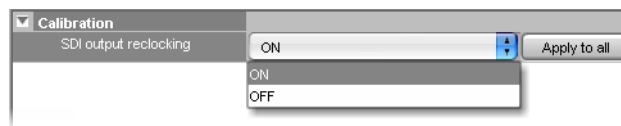

- 5 Click **Apply to all** to apply the chosen value throughout the system.

GPI/Genlock Calibrations

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-39N1 KMX-4921 KMX-4911
	● ¹	● ²	● ³		

- 1.the GPI lines are unidirectional (2 out and 8 in).
- 2.On Kaleido-X systems with a GPI/genlock module, GPI lines can be configured as inputs or outputs.
- 3.the GPI lines are unidirectional (4 out and 32 in).


You can define actions that change the state of a GPI output line, and assign them to a monitor. In all cases, the state of any GPI output can be set manually for test purposes, by using their ON/OFF calibration.

To configure a GPI line's direction as an output


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 In the list, expand the multiviewer you want to calibrate.
- 3 Expand the GPI/GENLOCK module, and then click a GPI line element.

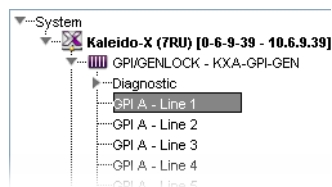

- 4 In the **Properties** pane, click the **GPI direction** box, and then select **output** from the list.

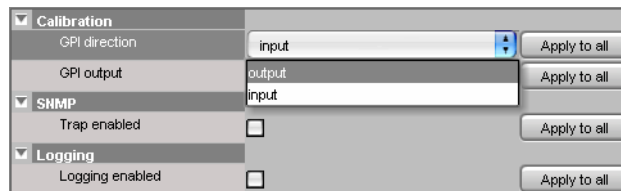

- 5 Click **Apply to all**, if every GPI line in your system is to be configured as an output.
- 6 To set this GPI output line's ON/OFF state set manually for test purposes, click the **GPI output** box, and then select either ON or OFF from the list.

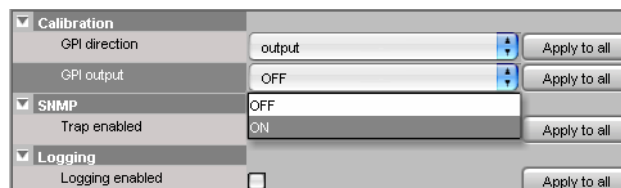

7 Configuring Alarms

Introduction

Your Kaleido multiviewer system can help you monitor alarm conditions efficiently. This section describes how to configure alarm detection and alarm sharing parameters for your system. This configuration is made in XEdit.

Key Concepts

Alarm

An *alarm* is a report on a single, defined condition (generated by a device or service) within a multiviewer system. A multiviewer analyses the signals that pass through it, and can detect and flag problems by raising alarms. Each alarm can be individually configured. Most alarm definitions specify detection thresholds, a *set duration*, and a *clear duration*, in order to exclude transient events. See [Configuring Alarm Thresholds](#) on page 116, and [Configuring Alarm Debouncing](#), on page 121.

When XEdit is connected to a multiviewer in online mode, alarms generated by the current multiviewer are displayed in the System list and you can review their status in real time. You can manage additional alarms, including health monitoring alarms, or alarms generated by external devices, by using an alarm browser such as iControl's GSM alarm browser or the alarm browser pane in XEdit's **Build Virtual Alarm** window (see [Virtual Alarm](#) on page 163).

As part of the alarm calibration process, you can specify that an alarm, when triggered, be sent as an *SNMP trap*. See [Simple Network Management Protocol \(SNMP\)](#) on page 164.

General Status Manager (GSM)

The general status manager (GSM) is the service responsible for central management of all alarm conditions within a monitoring and control system. Every Kaleido multiviewer has a GSM and can be configured to share GSM information with other multiviewers and iControl systems. For example:

- Display alarm status information from Densité cards on the monitor wall.
- Display alarms detected within a Kaleido multiviewer system on an iControl Web page.
- Display EdgeVision alarms along with the stream coming from the EdgeVision on a Kaleido-IP multiviewer.
- Display alarm status information in XEdit (online mode).
- Create virtual alarms that combine a number of alarm statuses, not only within a single system, but also from different devices within multiple Kaleido multiviewers and iControl systems. See [Creating Virtual Alarms](#) on page 174.

In addition, as of version 6.40 of the Kaleido Software, it is possible to assign elements from any GSM alarm browser to alarm levels in the sources table, directly, by a drag-and-drop operation (see [Configuring logical sources based on external alarm providers](#) on page 100).

Alarm Logging

As part of the alarm calibration process, you can specify that an alarm, when triggered, be logged to an iControl application server. This requires adding a log plug-in to your multiviewer's GSM configuration (see [Adding a GSM log plug-in](#) on page 182). As of version 6.50 of the Kaleido Software, alarms logged to an iControl application server include time code information from the corresponding video signal (ATC or VITC, depending on the signal format).

- By default, native alarms are *not* logged. See [Enabling logging for a native alarm](#) on page 185.
- Virtual alarms are logged by default. See [Disabling logging for a virtual alarm](#) on page 186. When a virtual alarm status changes, then the native sub-alarms that triggered the change are logged even if logging is disabled for these sub-alarms.
- Global alarms are always logged. It is possible, however, to disable alarm logging for a global alarm, by editing the corresponding plug-in from the iControl application server's GSM alarm browser. Refer to the iControl User Guide, for more information. See [Related Documentation](#), on page 13.

Alarm Browser

The alarm browser is a window, accessible from within iControl Navigator and other iControl applications. XEdit's **Build Virtual Alarm** window features an alarm browser pane. The information that appears in the Alarm Browser is generated by a specific GSM. The alarm browser displays a hierarchical view of all the alarms that have been discovered by the GSM. The alarms may be related to Grass Valley devices, or other supported third-party devices, and are organized into folders. The current status of each alarm is shown as an icon next to its name. These status are dynamically updated.

Alarm Status

The current status of an alarm determines the color of the LED-like icon to the left of its name, in XEdit, in GSM alarm browsers, and in iControl log viewers. Video monitors, UMDs and alarm monitors have alarm reporting features (e.g., border color and thickness, blink mode, latch) that can be customized in XEdit, when you create a layout.

Each possible alarm status is represented by a color. Alarm statuses are dynamically updated. The following alarm status values are supported as described in the table below: *pending*, *normal* (or *OK*), *warning* (or *minor*), *major*, *critical*, *unknown*, *nonexistent*, and *disabled*. In a multiviewer's System list and on the monitor wall, *nonexistent* and *unknown* alarms are considered *disabled*.

Status	Color	Description
Pending	White	Alarm exists but was not reported yet: The software is waiting for the hardware or driver to update the alarm.
Normal (or OK)	Green	No error detected.
Warning (or Minor)	Yellow	Supported for Gateway alarms only (see Gateway on page 323).
Major	Orange	Supported for Gateway alarms only (see Gateway on page 323).
Critical	Red	Error detected.
Unknown	Gray	Could not get status: Failed to communicate with device to get status. It could happen for example, if the network connection is lost. Another example is a loss of signal that would trigger a critical alarm for signal presence while the alarm state for all other parameters would become unknown. The freeze or black status is disabled if the signal is not present.
Nonexistent	Blue	Alarm that has been removed (or was never added): It can happen if the alarm reference in XEdit does not exist on the multiviewer—for example, if an input card is removed from a Kaleido-X multiviewer. All associated alarms will disappear from the GSM and become disabled on the multiviewer.
Disabled	Black	No alarm assigned to the status indicator: Alarm exists but is disabled at the source by the user. The Kaleido Software has the ability to deactivate some alarms on the multiviewer hardware itself.

A multiviewer alarm status is only visible in iControl's GSM alarm browser when at least one of the following conditions apply:

- The alarm is already monitored on the monitor wall.
- Someone navigated to this alarm by expanding the System list in iControl or XEdit.
- The alarm is associated with a background action.
- The alarm contributes to a virtual alarm.

TIP

Create a virtual alarm, based on the alarms whose status you want to be able to monitor in real time. See [Virtual Alarm](#) on page 163.

When navigating a multiviewer's GSM, by using the alarm browser in iControl, some alarm folders may show a disabled (black) status, until you expand them to reveal the alarms they contain, at which point the folder color will be updated to reflect the status of the alarms.

In the case of a **Kaleido-IP**, alarm status and text information for a source is available only when the corresponding source is being monitored on the wall. For SCTE 35 alarm status and text information to be available (and logged to iControl, if applicable), make sure to assign at least *one text or alarm level from every SCTE 35 stream you want to monitor*, to UMD components (tally or text) on the monitor wall layout. Alarms associated with sources that are currently not assigned to any layout element on the monitor wall appear with a pending (white) status in a Kaleido-IP System list or GSM alarm browser.

External Alarm Provider

Once you have declared a device (e.g., an iControl application server, an EdgeVision quality of experience monitoring system, another multiviewer) as an external alarm provider to your multiviewer system, any alarms registered with this device's GSM, in addition to the alarms generated by the current multiviewer system, can contribute to your monitoring and control purposes. See [Managing Alarm Providers](#) on page 172.

IMPORTANT

iControl application server requirement

In the case of an iControl system involving multiple application servers, there will typically be only one or two of the servers with a lookup service enabled. To qualify as an external alarm provider, an iControl application server must have its lookup service enabled (i.e., it must be a *lookup server*). Refer to the iControl User Guide for more information. See [Related Documentation](#), on page 13.

Lookup Service

Grass Valley's monitoring and control products implement a lookup service for discovery and information sharing over a network. A program on one device can use a lookup service to obtain information from remote applications or devices, including alarm-related information from a device's GSM. By default, every multiviewer has a lookup service and can therefore be considered a *lookup server*. For example, before you can use an RCP-200 control panel to operate your monitor wall, the multiviewer must be specified as a lookup server in the RCP-200's configuration (see *Specifying lookup servers for the RCP-200* in the multiviewer's *Installation & Service Manual* for more information).

Alarm Suppression

Alarms that are not relevant—momentarily or on a recurrent basis—can be squelched, either manually or by defining schedules, so that only meaningful alarm information remains to be monitored. A schedule can put an alarm in either of the following operational modes: *offline*, *in maintenance*, or *inverted*.

Note: A background action triggered by an alarm is executed, regardless of the alarm's operational mode (see [Creating Background Actions](#) on page 327).

Global Alarms

A logical source comprises different level categories, including alarms (see [Logical source](#) on page 89). Each logical source can include multiple alarm levels: one for each alarm state that can be reported to the Kaleido multiviewer system. In many cases, a single, combined status, based on all the alarms in every alarm level for a logical source, is more useful than having to individually assess each and every alarm condition detected. Such a global alarm combines all the individual alarm statuses into an overall status, where the most critical events take precedence.

Example: Three alarms occur, two of which can be acknowledged without further action, while the other one is considered an Error. In such a case, the overall alarm status would be Error.

The Kaleido Software creates one global alarm for every logical source. The global alarms are not directly exposed in the **Channels/Sources** tab, but you can configure which alarm levels contribute to them (see [Configuring an alarm level's contribution](#) on page 96). If you have disabled global alarm contribution for all alarm levels, then the global alarms are *not* generated.

Note: If you choose to configure your multiviewer system with a large number of logical sources (i.e., more than 1500), you should disable global alarm contribution for all alarm levels in the sources table, to improve the system performance.

In the **Layouts** tab, you can assign a global alarm to a layout element that supports alarm reporting, like a UMD or an alarm monitor: in the **Properties** pane, the lists of alarm levels that can be assigned to a monitor include the item *GlobalAlarm*, along with all the individual alarm levels.

You can select this global alarm not only as an alarm status, but also as a text label. When an individual alarm is in Error, its friendly name will contribute to the global alarm text value. When the global alarm level is assigned to an alarm monitor, the text values for all contributing alarms currently in Error will be visible.

See [Configuring Video Monitors](#), on page 249, [Configuring UMDs](#), on page 282, [Configuring Alarm Monitors](#), on page 290, and [Configuring Subtitling Monitors](#), on page 294), for detailed instructions.

Virtual Alarm

A virtual alarm allows you to derive a result from the status of one or more existing alarms. Any alarms — including other virtual alarms — can be combined together to form a new, higher-level virtual alarm. Since a virtual alarm can be composed of virtual alarms other than itself, there can be many levels of virtual alarms within a particular virtual alarm. At this time there is no limit to the number of levels that a virtual alarm can have. See [Creating Virtual Alarms](#) on page 174.

Notes

- *Do not* include the reserved text *GlobalAlarm* in a virtual alarm name.
 - Creating a virtual alarm that includes itself as a sub-alarm, directly or indirectly, creates a circular reference. XEdit does not automatically check for this dependency. Your multiviewer will, however, perform cycle validation and will record an error in `vroom.log` if such a condition is detected.
-

Sub-Alarm

A sub-alarm is an alarm that contributes to the status of a higher-level virtual alarm. The effect of a sub-alarm's contribution is determined by the way in which the higher-level alarm is configured.

Alarm Monitor

Alarm monitors help you see the status of global and virtual alarms, but their use is not limited to this type of alarms. When any alarm level is assigned to an alarm monitor, the status of this alarm will be shown. When using the global alarm at the text label level, it will display the text value of the alarm, which is a readable name. See [Configuring Alarm Monitors](#) on page 290, for more information.

Simple Network Management Protocol (SNMP)

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	

Certain multiviewers support at least one *SNMP agent*, which is capable of sending *SNMP traps* to notify external *SNMP managers* of significant events. Within your multiviewer system, these significant events are reported as alarms (see [Alarm](#) on page 159).

Some text status data (e.g., AFD/WSS format, Dolby E or Dolby VANC encoded dialnorm or program configuration, etc.) only become available to SNMP managers once they have been displayed on the monitor wall. In the case of a **Kaleido-IP** multiviewer, the SNMP status for an alarm is only valid, if the corresponding source is monitored on the monitor wall.

TIP

To make text status available to SNMP managers

- 1 In XEdit, add the text status element from the appropriate source signal to a logical source (channel).
 - 2 Assign the logical source to a UMD.
 - 3 Load the layout that includes this UMD on the monitor wall.
-

SNMP traps

Setting up your multiviewer's SNMP trap process involves the following actions:

- Identify the targets (SNMP managers) to which SNMP traps will be sent (see [Identifying Target SNMP Managers](#) on page 187).
- Choose the traps that will be sent to the selected SNMP managers (see [Enabling SNMP Traps](#) on page 188). *Not available for Kaleido-IP.*

Traps are automatically sent for all logical sources' *global alarms* (see [Global Alarms](#) on page 162), and for *virtual alarms* (see [Virtual Alarm](#) on page 163). Each trap contains a cause, and the name of the logical source. Health-related traps for Kaleido-X, Kaleido-X16,

Kaleido-MX, Kaleido-MX 4K, and Kaleido-Modular-X are also automatically sent. Kaleido-IP X100 and Kaleido-IP X300 multiviewers *cannot* send health-related SNMP traps. To send health-related traps, a Kaleido-IP X120, X110, X320, or X310 requires advanced server configuration, for which you might need assistance from Technical Support ([Grass Valley Technical Support](#), on page 536).

TIP

Create *virtual alarms* based on health-related alarms from your Kaleido-IP to make this information automatically available to your target SNMP managers.

To make Kaleido-IP health-related status available to SNMP managers

- 1 Connect XEdit to the Kaleido-IP.
 - 2 On the **Tools** menu, click **New virtual alarm**.
 - 3 In **Build Virtual Alarm**, select your Kaleido-IP from the list in the left-hand part of the GSM alarm browser pane.
 - 4 In the right-hand part of the alarm browser pane, expand the MULTIVIEWER OUTPUTS element to navigate to the health-related alarms you want to monitor.
 - 5 Proceed with the creation of the new virtual alarm (see [Creating Virtual Alarms](#) on page 174, for detailed instructions).
-

MIB documents

Before you can use a network management system (NMS) to send SNMP requests (e.g., `Get`, `GetNext`, `Set`) to your multiviewer, and to process the multiviewer's responses and traps, you need to download the appropriate MIBs from your multiviewer, and then load them into the NMS.

Note: The Kaleido Software does not support the SNMP v2 `GetBulk` command. Performing a `GetBulk` on `kxVideoTable` returns "There is no such instance in this MIB" instead of the data for the table.

To obtain MIBs from your multiviewer, point your browser to the URLs indicated below.

Kaleido-X, Kaleido-X16, Kaleido-MX, Kaleido-MX 4K, Kaleido-Modular-X

To manage these multiviewers (through port 161), or process any SNMP traps they might send, NMSs require both KALEIDO-KX-MIB, and MIRANDA-MIB.

- `http://<your multiviewer's IP address>/pub/KALEIDO-KX-MIB.mib`
- `http://<your multiviewer's IP address>/pub/MIRANDA-MIB.mib`

Kaleido-IP

To manage these multiviewers (through port 161), or process any SNMP traps they might send, NMSs require both Kaleido-IP-MIB, and MIRANDA-MIB.

- `http://<your multiviewer's IP address>/pub/Kaleido-IP-MIB.mib`
- `http://<your multiviewer's IP address>/pub/MIRANDA-MIB.mib`

In addition, health-related status information from a **Kaleido-IP X320**, **Kaleido-IP X310**, **Kaleido-IP X120**, or **Kaleido-IP X110** multiviewer is available through port 1161, for which your NMS will need the `basebrd7_v5.mib` MIB.

- `http://<your multiviewer's IP address>/pub/basebrd7_v5.mib`

Health-related status information from a **Kaleido-IP X300**, or **Kaleido-IP X100** multiviewer is available through port 1161, for which your NMS will need the `SUPERMICRO-HEALTH-MIB`, and `SUPERMICRO-SMI` MIBs.

- `http://<your multiviewer's IP address>/pub/SUPERMICRO-HEALTH-MIB.my`
- `http://<your multiviewer's IP address>/pub/SUPERMICRO-SMI.my`

In the case of a Kaleido-IP, publishing signal/service probing alarms to SNMP managers is not fully supported. `Kaleido-IP-MIB` is a subset of `KALEIDO-KX-MIB`. The Kaleido-IP can report service/signal status to an SNMP manager through the `Kaleido-IP-MIB` file's `kxVirtualAlarmTable`. This table includes entries for all virtual alarms and logical sources created in XEdit for your multiviewer. For each logical source, the global alarm and associated text information is available. Refer to the MIB-embedded descriptions for exceptions.

TIP

If an iControl Application Server is available to your system, configure it to relay your Kaleido-IP alarm status information to the target devices. See [General Status Manager \(GSM\)](#) on page 159, and refer to *iControl and SNMP* in the iControl User Guide, for more information. See [Related Documentation](#), on page 13.

Teletext, Subtitles, and Closed Captions

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		● ^a	●	●	●

a. With second-generation input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3)

Multiviewer	Supports
Kaleido-MX Kaleido-MX 4K Kaleido-Modular-X Kaleido-X Kaleido-X16 KMX-49N1 KMX-3921	Can monitor teletext subtitling (compliant with WST, or SMPTE RDD 8 / Free TV Australia OP-47), NTSC closed captioning (CEA-608), and ATSC Digital Television Closed Captioning (CEA-708 DTVCC) can be displayed on the monitor wall, allowing visual monitoring of decoded text from an analog or SDI video source. The lines of text extracted from the video source metadata are displayed within the corresponding video window.

Multiviewer	Supports
Kaleido-X ^a Kaleido-X16 KMX-49N1 KMX-3921	Can monitor teletext subtitling compliant with SMPTE ST 2031
Kaleido-IP	Can monitor teletext and subtitling from DVB streams, and subtitling from SCTE 27 streams. The lines of text extracted from a DVB subtitling stream compliant with ETSI EN 300 743 V 1.2.1 (2002-10), or from a SCTE 27 subtitling stream can be displayed within the corresponding video window, or in a subtitling monitor. In the case of DVB teletext streams, the lines of text are displayed within the corresponding video window.

a. With second-generation input cards (KXI-16SV rev. 600 and later, KXI-16HS3, and KXI-16HSV3)

Teletext may comprise up to 799 pages of displayable data (numbered from page 100 to 899). Teletext subtitles are decoded as described by the ETSI EN 300 472 V1.3.1 (2003-05) standard (for Kaleido-IP) or ETSI ETS 300 706 (for other multiviewer models). The Kaleido-IP can decode up to eight pages from a DVB teletext stream, and monitor teletext, subtitle, and text presence for each of the selected pages. In the case of the Kaleido-X, Kaleido-X16, KMX-3921, KMX-49N1, Kaleido-MX, Kaleido-MX 4K, and Kaleido-Modular-X, only one page can be decoded per video monitor and only one page can be decoded per video source, for monitoring purposes. However, these multiviewers can monitor the presence of up to four pages. See [Setting a Video Monitor's Text Mode](#), on page 260, and [Displaying Subtitles and Closed Caption Text](#), on page 494, for more information.

Decoding Precedence

The CEA-708 standard supports legacy CEA-608 data. In the case of an HD-SDI source carrying both 708 captions and 608 legacy caption data, the multiviewer will display the 708 captions, and automatically fall back to displaying the 608 captions only if the 708 data becomes unavailable.

In the case of a Kaleido-IP, when a video or subtitling monitor's *text mode* is set to **Auto sense**, and the associated source carries more than one type of captioning, teletext or subtitling data, decoding precedence is as follows: DVB subtitling, SCTE 27 subtitling, DVB teletext (WST), CC (608). For example, DVB teletext is only decoded if there is no DVB subtitling, and no SCTE 27 subtitling available.

For the other multiviewer models, the following table shows which of captioning, teletext, or subtitling data is decoded by default for each supported video format, when a video monitor's text mode is set to **Auto sense**: DTVCC (708), CC (608), teletext (RDD 8/OP-47, ST 2031, or WST).

Video format	Decoded data	Video format	Decoded data
SDI 525	CC (608)	1080i59.94	DTVCC (708)
SDI 625	Teletext	1080PsF23.98	N/A
NTSC ^a	CC (608)	1080PsF24	N/A
PAL ^b	Teletext	1080PsF25	Teletext

Video format	Decoded data	Video format	Decoded data
SECAM	Teletext	1080PsF29.97	DTVCC (708)
720p24	N/A	1080p23.98	N/A
720p25	N/A	1080p24	N/A
720p29.97	DTVCC (708)	1080p25	N/A
720p50	Teletext	1080p29.97	DTVCC (708)
720p59.94	DTVCC (708)	1080p50	Teletext
1080i50	Teletext	1080p59.94	DTVCC (708)

a. All supported NTSC formats.
b. All supported PAL formats.

CEA-608 CC Alarm Definitions

Line 21 loss	CEA-608 preamble presence indicator
CC1 loss – CC3 loss	Closed caption data presence indicators

CEA-708 DTVCC Alarm Definitions

Service loss	Reports, after a configurable amount of time (see DTVCC service presence timeout on page 120), the absence of DTVCC data blocks in the video signal for the given DTVCC service
Text loss	Reports, after a configurable amount of time (see DTVCC text presence timeout on page 120), the absence of characters for the given DTVCC service

Dolby E/AC-3 Metadata

In the case of a KMX-3921, KMX-49N1, Kaleido-MX, Kaleido-MX 4K, Kaleido-Modular-X, Kaleido-X, or Kaleido-X16 multiviewer, metadata contained in a Dolby E audio stream can be exposed on the monitor wall in text form. Dolby E and PCM audio levels can be displayed through audio monitors. The Kaleido-X and Kaleido-X16 also support decoding of audio metadata embedded as ancillary data (VANC) compliant with SMPTE ST 2020-A, in the video stream.

- If multichannel audio (up to 8 channels) is coded in a Dolby E stream and transported over a single AES channel, metadata and audio levels are extracted from the Dolby E stream:
 - in the case of Kaleido-X and Kaleido-X16, extraction is limited to two embedded audio sources, selectable
 - KMX-3921, KMX-49N1, Kaleido-MX, Kaleido-MX 4K, and Kaleido-Modular-X support extraction of Dolby E metadata from all 8 embedded audio source
 - no ABT support
 - VU and Peak meters (8 channels), for each source
 - Program configuration, for each source
 - Dialnorm for program 1, for each source

- If multichannel audio (up to 16 channels) is transported as regular AES channels (up to 8) in the SDI embedded audio, metadata is extracted from VANC packets:
 - Program configuration
 - Dialnorm for program 1
 - VU and Peak meters come from the AES in PCM

Definitions

Term	Definition
Dolby E stream	A coded (compressed) 8-channel digital stream that fits inside an AES channel (L/R)
Dolby E metadata	Metadata such as <i>dialnorm</i> and <i>program config</i> extracted from a Dolby E stream. Includes audio level data from encoded audio data
VANC metadata	Audio metadata extracted from SMPTE ST 2020-A VANC packets. Audio level data is probed directly from the PCM AES signal
Embedded audio source or channel	Any of the 8 SDI or HD-SDI embedded audio AES signals
AES signal or source	A bitstream for audio service
Multichannel audio	Audio service or essence composed of more than 2 channels of audio (more than Left and Right)

Audio Format

The format of each audio channel (PCM, Dolby AC-3, Dolby E, other or Unavailable) is reported as a text attribute, that can be assigned to a text level within a logical source.

Audio Metadata

The metadata extracted from the VANC and from the Dolby E is available as text in the XEdit hierarchical system list, and therefore can be exposed through any layout element capable of displaying text levels from logical sources (currently only UMDs).

Dialnorm is displayed as a numeric value between -31 and -1 dB. *Program Config* is displayed as the Dolby E Program Config description. *Unavailable* is displayed if the source is not being decoded, or is not Dolby E.

Logical Source Assignment

Logical source assignment is performed by dragging an AES pair onto a logical source's audio level.

If the AES pair is calibrated as a Dolby E source, then the 8 channels are available to be displayed by an audio monitor. The channel displayed by the audio monitor depends on how the monitor was configured.

For Dolby VANC, if the audio monitor is set to **Auto** or **Dolby VANC**, the VANC metadata from the video of the assigned AES will be decoded. The audio monitor will have access to all amended audio peaks depending on VANC program configuration (regardless of which AES pair was assigned to the logical source).

Microphone Loudness Measurement

Kaleido-X and Kaleido-X16 multiviewers are capable of providing *microphone loudness* measurement as dynamic text values, for Audio Bridge Terminal (ABT) sources. Values are available for every ABT channel, and can be displayed in a UMD (or in an alarm status monitor), provided you configured logical sources with the appropriate text levels (see [Configuring Dynamic UMD Text](#) on page 287, for example). Support is limited to one ABT per multiviewer. *Playout is assumed to be mono*. The measurement is optimized for voice content. The values (in dBFS) are updated every second, and have a precision of 0.5 dB.


SCTE 35 Digital Program Insertion (DPI) Signaling

The Kaleido-IP can monitor digital program insertion (DPI) signaling from SCTE 35 streams. It supports a splice break alarm, eight DTMF break alarms, and text information for logging purposes.

Bit Rate Measurement

The Kaleido-IP reports bit rate measurements as text values, for every type of elementary streams. Measurements are performed based on guidelines from ETSI TR 101 290. A 188-byte packet format is assumed. (With the current version of the Kaleido Software, bit rate values reported for streams encoded with a 204-byte packet format are therefore not accurate.)

Note: Do not confuse the *video bit rate* (measured value) with the bit rate reported under **Video encoder metadata** (extracted information).

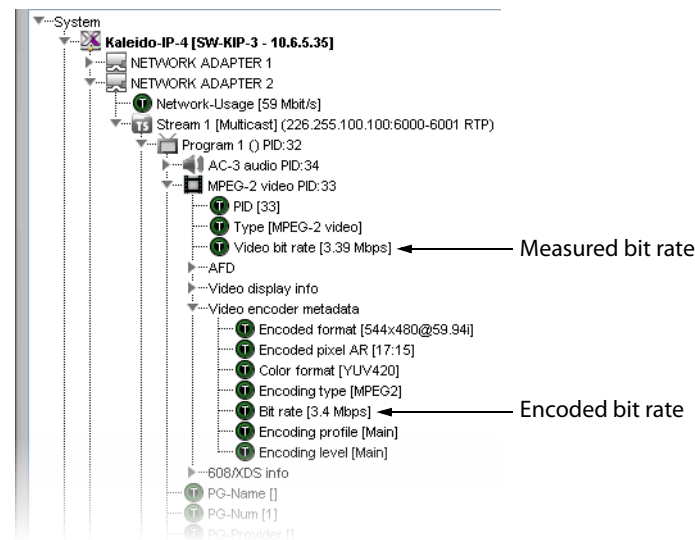

Transport Stream Monitoring

The Kaleido-IP reports TR 101 290 first- and second-priority faults, as alarms and text values, for every type of transport streams. Measurements are performed based on guidelines from ETSI TR 101 290. Second-priority indicator 2.5 (PTS_error) is available for video and audio


elementary streams, only. Second-priority indicator 2.4 (PCR_accuracy_error) is *not* available.

Note: Text values are not persisted and should not be displayed in monitor wall layouts. They are suitable for logging purposes only.

Managing Alarm Providers

To add alarm providers to your Kaleido multiviewer system


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 Click the multiviewer whose alarm providers you want to define.
- 3 In the **Properties** pane, click the **Alarm providers list** box.

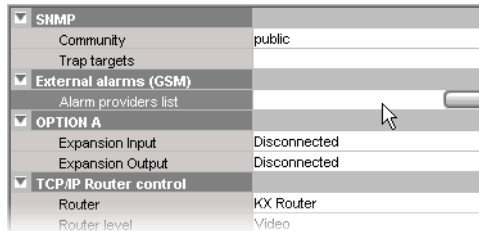

- 4 Click the button that appeared at the end of the box to open the **External Alarm Providers Configuration** window.



- 5 In **External Alarm Providers Configuration**, review the alarm providers list, and then add or remove devices, as required.

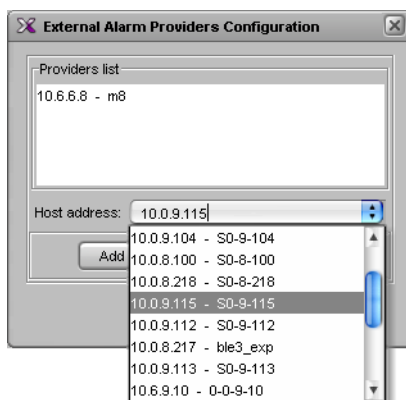

- To add a device to the providers list, select the device from the **Host address** list, or type the appropriate IP address in the box, and then click **Add**.
- To remove a device from the alarm providers list, select it, and then click **Remove**.

Note: To qualify as an external alarm provider, an iControl application server must have its lookup service enabled. See [External Alarm Provider](#) on page 162.

- 6 Once you have added all devices required for your purposes, click **OK** to close the window.
- 7 On the **File** menu, click **Save**.

Managing Virtual Alarms

Creating Virtual Alarms


Inverting an alarm

The **Invert** contribution allows performing a logical “NOT” calculation on sub-alarms. This feature can be used, for example, to report alarms from GPI inputs. It can also be used to handle cases where an error is expected, and *not* seeing an error is a sign that something probably went wrong. The table below describes the result of inverting sub-alarms:

Sub-alarm status	Inverted contribution
NORMAL	ERROR
MINOR	NORMAL
MAJOR	NORMAL
CRITICAL	NORMAL
NON-EXISTENT	NON-EXISTENT
PENDING	PENDING
DISABLED	DISABLED
UNKNOWN	UNKNOWN


To create a virtual alarm

- 1 Connect XEdit to the multiviewer (see [Using XEdit in Online Mode](#) on page 32).
- 2 On the **Tools** menu, click **New virtual alarm**.

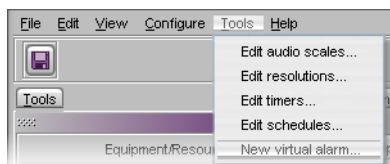

Alternatively, after clicking the Actions tab, or while a *text* or *alarm* level is selected in the sources table you can:

- Right-click **Virtual alarms** in the filtered System list, point to **Virtual alarm**, and then click **New**.

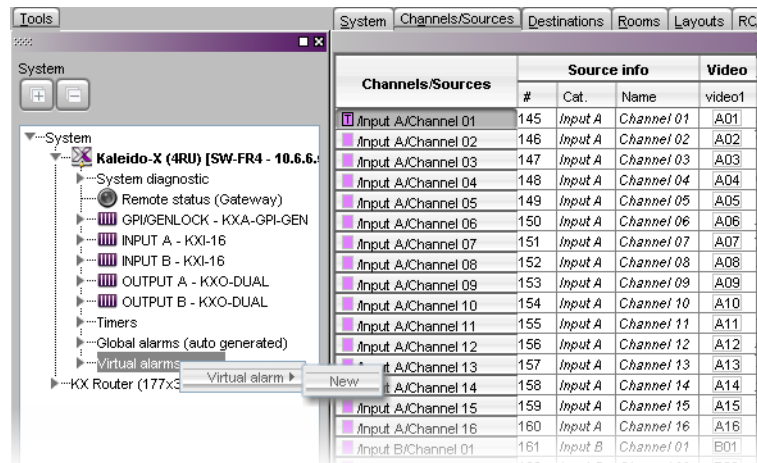


- Expand **Virtual alarms** in the filtered System list, right-click any existing virtual alarm, point to **Virtual alarm**, and then click **New**.

The **Build Virtual Alarm** window appears.

Alarm providers

Alarm browser

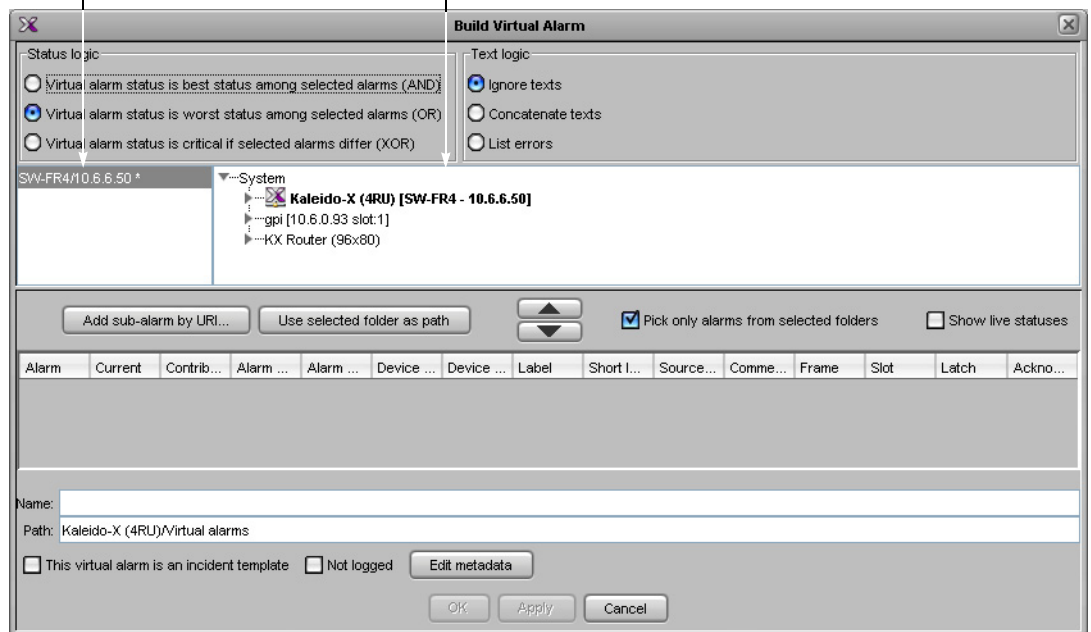

3 In the **Status logic** section, select one of the following three options:

Virtual alarm status is best status among selected alarms (AND) — Choose this option to have the contribution of the sub-alarms calculated using the *optimistic* version of the alarm logic tables.

Virtual alarm status is worst status among selected alarms (OR) — Choose this option to have the contribution of the sub-alarms calculated using the *pessimistic* version of the alarm logic tables. This is the most common option, since it brings changes in the status of any sub-alarms to the attention of the operators.

Virtual alarm status is critical if selected alarms differ (XOR) — Choose this option to have the contribution of the sub-alarms calculated using the *XOR* version of the alarm

logic tables. This causes the virtual alarm to reflect whether or not all of its sub-alarms have the same status. If all sub-alarms are the same, the virtual alarm will be green. Otherwise, it will be red.

For a more detailed description of the difference between these options, refer to “Understanding the Alarm Logic Tables” in the iControl User Guide. See [Related Documentation](#), on page 13.


- 4 In the **Text logic** section, determine what to include in this virtual alarm’s text attribute by selecting one of the following three options:

Ignore texts — No text logic (default).

Concatenate texts — Concatenate the text attributes from all sub-alarms.

List errors — List the text attributes from the sub-alarms that are in error.


- 5 Select the alarm provider you want to use from the list in the left-hand part of the GSM alarm browser pane.
- 6 In the right-hand part of the alarm browser, select the alarms that are to be sub-alarms of the new virtual alarm, and then click the large down arrow button to transfer them to the table in the bottom half of the window.

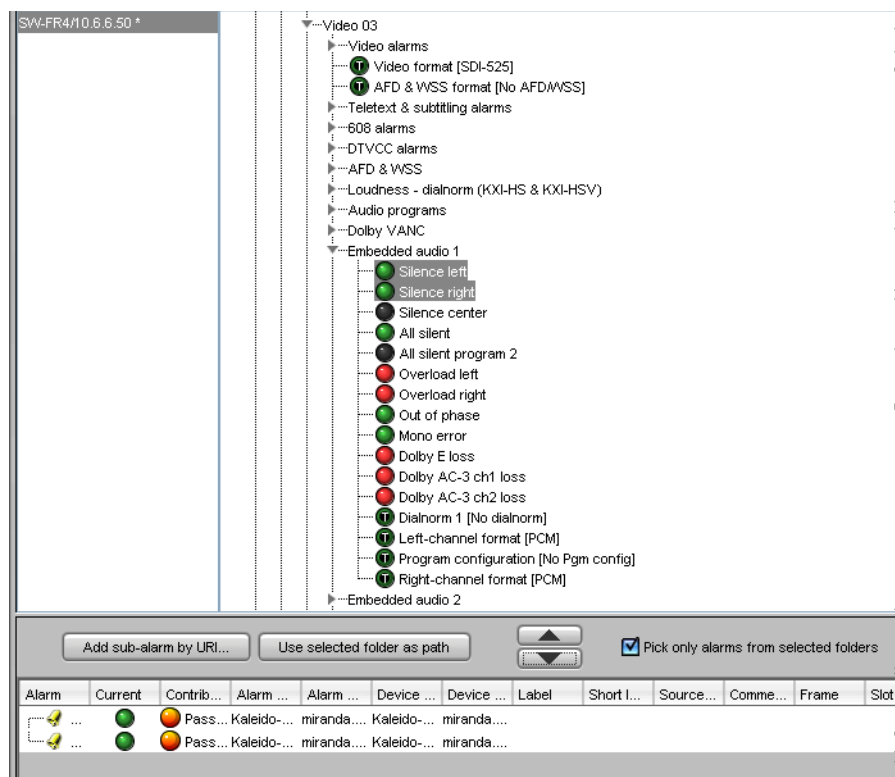

- 7 The table displays various details about the sub-alarms you have selected, including their *contribution*, which defines how a sub-alarm will pass its status on to the virtual alarm. The default contribution value is **Passthrough**, which means the sub-alarm will pass its status unaltered to the overall calculation of the virtual alarm.

It is possible to override the error status of sub-alarms when they are triggered. This is useful when, for example, a device is only able to report a status of either *normal* (green) or *error* (red), but you want the error condition to be considered as *minor* (yellow) in the virtual alarm calculation. To change a sub-alarm’s contribution, click in

the **Contribution** column, and then select the status you want the virtual alarm to use when an error occurs.

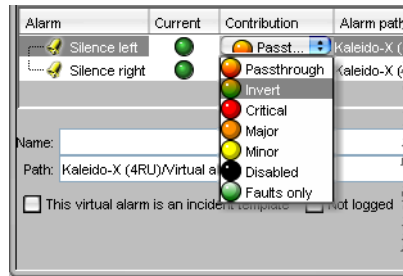

For example, if a sub-alarm goes from green to orange or red, but the selected contribution is yellow, the virtual alarm will “see” yellow (the virtual alarm’s overall status may still depend on other sub-alarms).

The **Invert** contribution allows performing a logical “NOT” calculation on sub-alarms. This feature can be used, for example, to report alarms from GPI inputs. It can also be used to handle cases where an error is expected, and *not* seeing an error is a sign that something probably went wrong. See [Inverting an alarm](#), on page 174.


Selecting the **Faults only** contribution causes a sub-alarm to be mapped to NORMAL unless it is in one of the fault statuses—usually CRITICAL, MAJOR, and MINOR. Refer to the iControl User Guide for more information. See [Related Documentation](#), on page 13.

Note: If the sub-alarm’s fault condition is cleared, its contribution will always be *green* (NORMAL), unless the value specified in the **Contribution** column is *black* (DISABLED).


- 8 Repeat from [step 5](#), until you have added all the required sub-alarms.
- 9 Specify a name for the new virtual alarm in the **Name** box.

Note: *Do not* include the reserved text *GlobalAlarm* in a virtual alarm name.

- 10 Optionally, change the default path as needed in order to logically group alarms together.

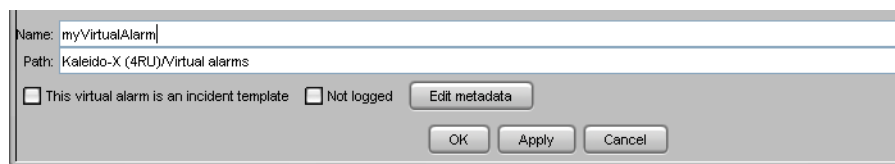

- 11 Configure logging behavior as required (see [Alarm Logging](#) on page 160):
 - If you want to disable logging for this virtual alarm, then select **Not logged**.
 - If you want to have occurrences of this virtual alarm logged as *incidents*, select **This virtual alarm is an incident template**. Refer to the iControl User Guide for more information. See [Related Documentation](#), on page 13.
 - To add relevant information for your logging purposes, click **Edit metadata**. The **Virtual Alarm Metadata** window appears.

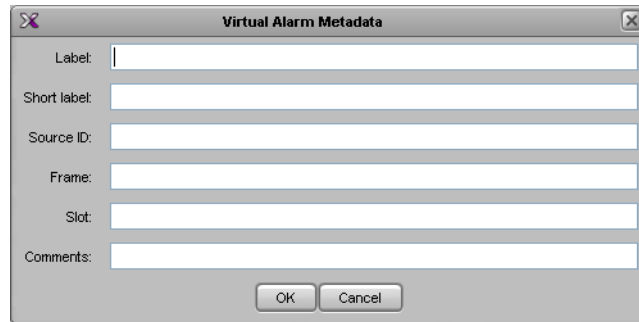


The image shows a dialog box titled "Virtual Alarm Metadata". It contains several text input fields: "Label", "Short label", "Source ID", "Frame", "Slot", and "Comments". At the bottom right, there are two buttons: "OK" and "Cancel".

The information you provide for this virtual alarm can be used to sort and locate events and incidents in the iControl log viewers. For example, a meaningful Source ID may help you distinguish this virtual alarm's sub-alarms from other alarms. Click **OK** to close the window.


12 Click **OK**.

The **Build Virtual Alarm** window closes and the newly created alarm appears at the specified path, under **Virtual alarms**, in your multiviewer's filtered System list (e.g., when a text or alarm level is selected in the sources table).

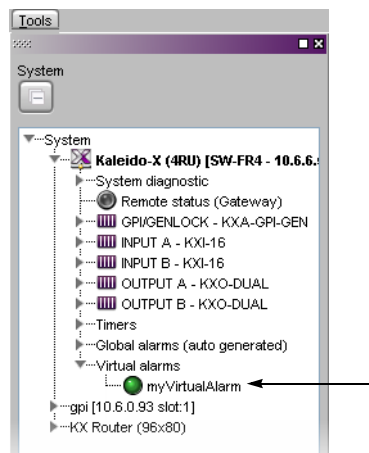

If the multiviewer's IP address was added to an iControl applications server's **Service and alarm discovery** table² you will also be able to manage your multiviewer's virtual alarms from the multiviewer's GSM, by using the iControl GSM alarm browser.


2. To access the iControl Lookup locations page, where you can review and update the **Service and alarm discovery** table, click **System tools** on the Startup page, and then click **Edit service locations**.

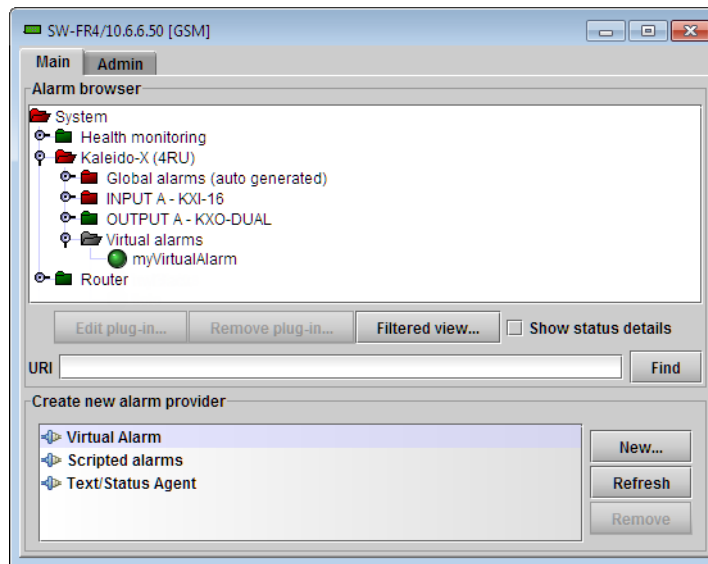


Modifying Virtual Alarms

To modify a virtual alarm

- 1 In the sources table, select a text or alarm level.
Alternatively, click the **Actions** tab.
- 2 Expand the filtered System list, and navigate to the virtual alarm you want to modify.
- 3 Right-click the alarm, point to **Virtual alarm**, and then click **Edit**.

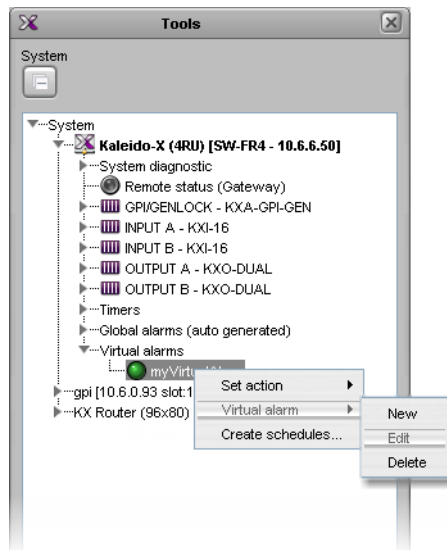

The **Build Virtual Alarm** window appears.

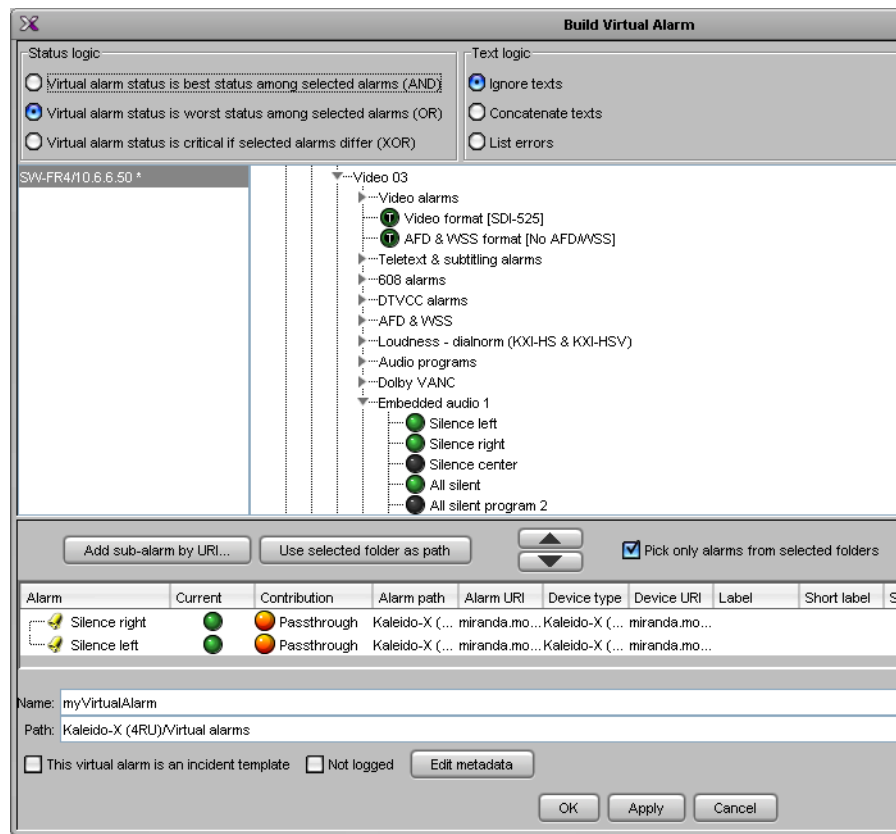


- 4 Modify your virtual alarm, by adding or removing sub-alarms, changing their contribution, the alarm name or path, etc. See [Creating Virtual Alarms](#), on page 174, as needed. For example:
 - after selecting the sub-alarms you want to remove from the table in the bottom half of the window, click the large up arrow button.
 - after selecting the appropriate alarm provider from the list in the left-hand part of the GSM alarm browser pane, select the sub-alarms you want to add, from the right-hand part of the alarm browser, and then click the large down arrow button to transfer them to the table in the bottom half of the window.
- 5 Once you have completed your changes, click **OK** to close the **Build Virtual Alarm** window.


Deleting Virtual Alarms

To delete a virtual alarm

- 1 In the sources table, select a text or alarm level.
Alternatively, click the **Actions** tab.
- 2 Expand the filtered System list, and navigate to the virtual alarm you want to delete.
- 3 Right-click the alarm, point to **Virtual alarm**, and then click **Delete**.

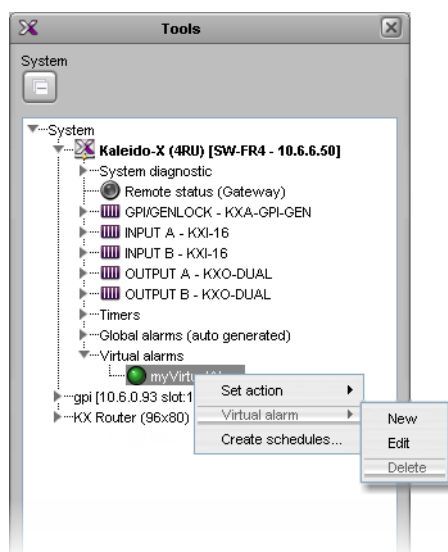

XEdit prompts you to confirm.

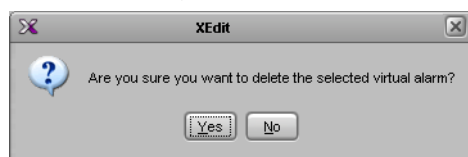

4 Click **Yes** to proceed.


The selected virtual alarm is removed from your configuration.

Managing Alarm Logging


Adding a GSM log plug-in

To add a log plug-in to your multiviewer's GSM


- 1 Make sure your multiviewer is specified as a lookup server in the iControl application server's configuration. See [Specifying your multiviewer as a lookup server for iControl](#), below.
- 2 Open iC Navigator. Refer to *Starting iC Navigator*, in the iControl User Guide, if needed. See [Related Documentation](#), on page 13.
- 3 On the **View** menu, click **General status managers**.
The **General Status Managers** window appears.
- 4 In the left pane, click your multiviewer's GSM.
- 5 In the main pane, click the **Admin** tab, and then click **Actions** on the second-level tab bar.

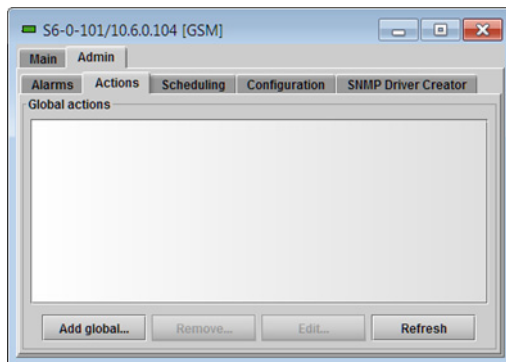

- 6 Click **Add global**.
The **New Action** window appears.

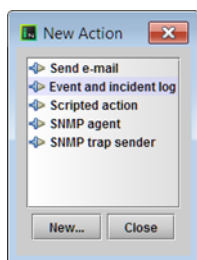


- 7 Click **Event and Incident log**, and then click **New**.
The **Event and Incident Log Configuration** window appears.
- 8 In **Host name (or IP address)**, type the iControl application server's IP address.
- 9 Under **Advanced options**, *clear* **Enable incident log**.

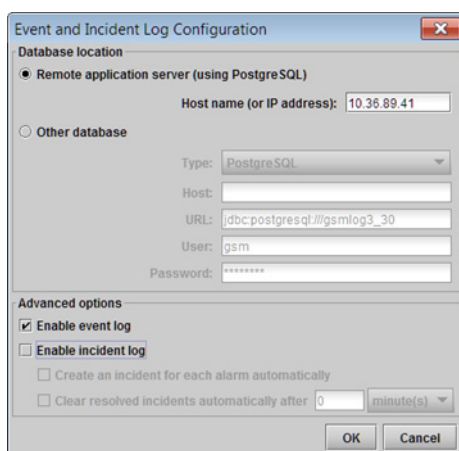

10 Click **OK**.

Your new log plug-in appears under **Global actions**.

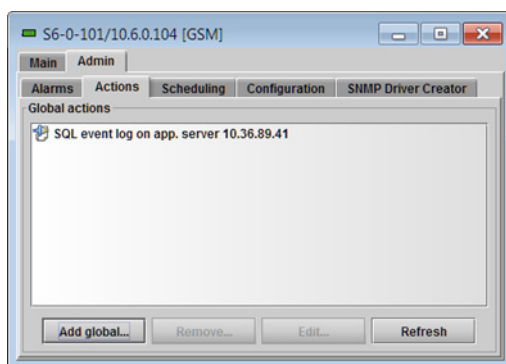

11 Close **General Status Managers**.

In iControl Navigator, you may now open **Event Log Viewer**, and search the application server's event log database for any relevant alarm information logged by your multiviewer. Refer to the iControl User Guide for more information. See [Related Documentation](#), on page 13.


Specifying your multiviewer as a lookup server for iControl

To specify your multiviewer as a lookup server for iControl

- 1 Open a Web browser window, and enter the IP address or host name of the iControl application server whose event log you want to use, in the address bar.
iControl's Startup page appears.

Configuring Alarms


Specifying your multiviewer as a lookup server for iControl

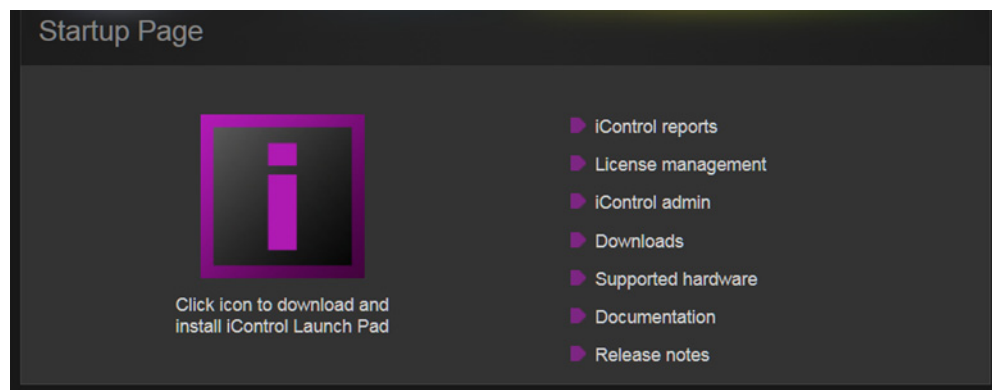

- 2 Click **iControl admin**.
- 3 If the iControl admin login page appears, type the appropriate user name and password, and then click **Log In**.

The iControl admin page appears.

- 4 Click **Lookup locations**.

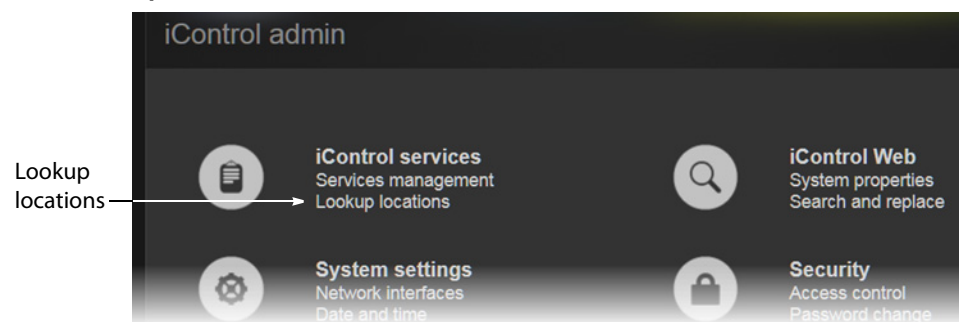

The Lookup location page appears.

- 5 In the **Service and alarm discovery** area, type your multiviewer's IP address, and then click **Add lookup**.

The image shows the 'Service and alarm discovery' form. At the top, it has the title 'Service and alarm discovery'. Below the title, there is a paragraph of text: 'If you would like your client applications such as IC Navigator and IC Web to discover services and alarms originating from Application Servers not belonging to your client PC's subnet, include the IP addresses of each Application Server hosting the lookup services where these services are registered.' Below this text is a section titled 'Details/Examples'. In this section, there are two input fields: 'IP address:' with the value '10.6.0.104' entered, and 'Name (optional):' which is empty. Below these fields is a button labeled 'Add lookup'. Below the button, it says 'Current lookup entries are:' followed by 'No entries provided.'

Your multiviewer's IP address appears as a lookup entry, at the bottom of the **Service and alarm discovery** area.

IP address:

Name (optional):

Current lookup entries are:

IP address	Name	
10.6.0.104		Delete


Enabling logging for a native alarm

To allow an alarm to be logged to the GSM log plug-in configured for this system

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.

A hierarchical list representing the current system appears.

- 2 Expand the multiviewer whose alarms you want to log, navigate to the appropriate alarm, and then click the alarm to select it.

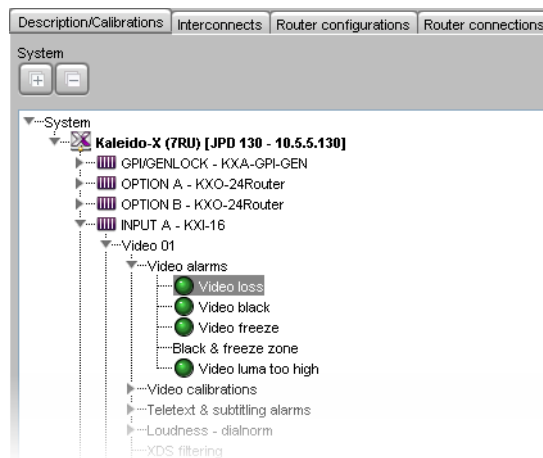

- 3 In the **Properties** pane, select the **Logging enabled** check box to have the multiviewer publish this alarm to the application server's log, each time this alarm is triggered.



- 4 Click **Apply to all** if you want to apply this setting to *all other alarms with the same name*, throughout the system.

In the example, clicking **Apply to all** will enable logging for the *Video Loss* alarm on every multiviewer input in your system.

- 5 Repeat this procedure until logging is enabled for all alarms that require it.
- 6 On the **File** menu, click **Save**.

Disabling logging for a virtual alarm

To prevent a virtual alarm from being logged to the GSM log plug-in

- 1 In the sources table, select a text or alarm level.
Alternatively, click the **Actions** tab.
- 2 Expand the filtered System list, and navigate to the virtual alarm you want to modify.
- 3 Right-click the alarm, point to **Virtual alarm**, and then click **Edit**.
The **Build Virtual Alarm** window appears.
- 4 In the bottom area of the window, select **Not logged**.
- 5 Click **OK** to close the **Build Virtual Alarm** window.

Publishing Alarms to SNMP Managers


Identifying Target SNMP Managers

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	

To identify the target SNMP managers

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.
A hierarchical list representing the current system appears.
- 2 Click the multiviewer whose SNMP trap targets you want to identify.
- 3 If your target SNMP managers filter traps based on a specific community string, then the **Properties** pane, click the **Community** box (which contains "public" by default), and type the appropriate string.

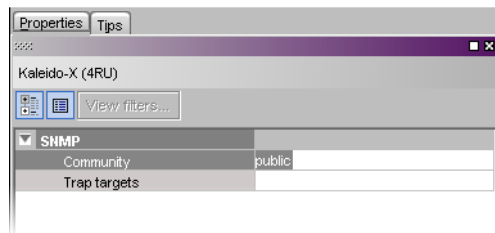

- 4 Click the **Trap targets** box.




- 5 Click the button that appeared at the end of the box to open the **SNMP Configuration** window.

The trap targets list shows all trap targets currently identified for the selected multiviewer.

SNMP Managers that are trap targets for this multiviewer are identified by their host address and port number.

- 6 Add, remove, or modify trap targets as needed, and then click **OK** to confirm and apply the changes, or click **Cancel** to close the **SNMP Configuration** window without saving your changes to the trap targets list.

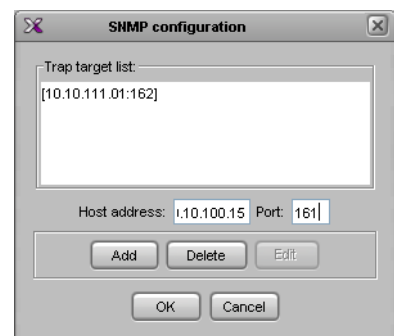

To add a trap target to the list


- 1 In the **Host address** box, type the IP address of the device that has the target SNMP manager.
- 2 In the **Port** box, type the port number through which the SNMP manager will be accessed.
- 3 Click **Add**.

The new trap target is added to the list.

To modify an existing trap target

- 1 Click the trap target you want to modify in the list.
It becomes highlighted and its host address and port number appear in the data boxes, and the **Edit** button is available.
- 2 Type new or revised data in the data boxes.
- 3 Click **Edit**.

The revised data appears in the target list.

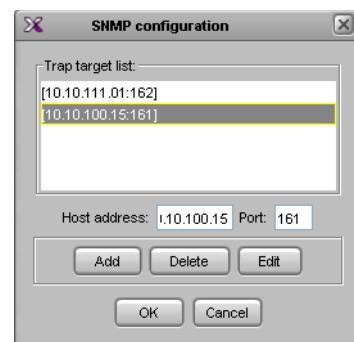

To remove a trap target from the list

- 1 Click the trap target you want to remove in the list.
It becomes highlighted and its host address and port number appear in the data boxes.
- 2 Click **Delete**.

The trap target is removed from the list.

TIP

The host address and port number remain in the data boxes. Hence the trap target can easily be added back to the list, by clicking **Add**, if it was removed in error.

Enabling SNMP Traps

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	

Notes


- **Kaleido-X:** Traps for individual physical inputs are disabled by default. These traps only provide physical input information, with no correlation to a logical source. Enabling a large number of SNMP traps can degrade the performance of a *Kaleido-X* multiviewer system. If you must monitor a large number of traps, then avoid setting the related alarm thresholds to short durations—for example, 1 second for a freeze detection is too low; 10 seconds is adequate (see [Alarm Debouncing](#) on page 111).

To choose the traps that will be sent to the selected trap targets for this system

- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar.

A hierarchical list representing the current system appears.

- 2 Expand the multiviewer whose traps you want to enable, navigate to the appropriate alarm, and then click the alarm to select it.

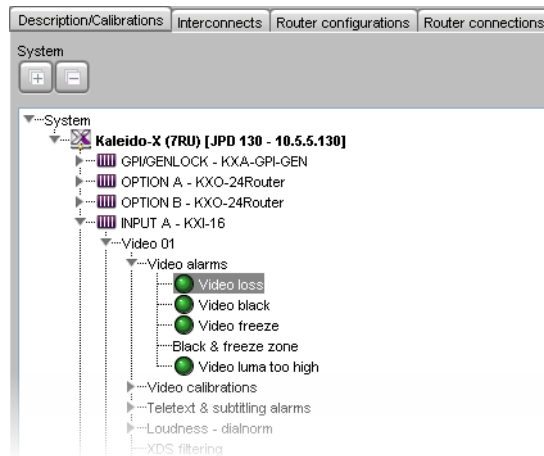

- 3 In the **Properties** pane, select the **Trap enabled** check box to have the multiviewer issue an SNMP trap each time this alarm is triggered.



- 4 Click **Apply to all** to apply this setting to *all other alarms with the same name*, throughout the system.

In the example, clicking **Apply to all** will enable Video Loss SNMP traps for every input in your system. This is particularly useful for audio input errors, because of the large number of channels arriving at the multiviewer.

- 5 Repeat this procedure until all required SNMP traps have been enabled.
- 6 On the **File** menu, click **Save**.

8

Setting Up Rooms

Introduction

This section describes Kaleido multiviewer rooms and their configuration.

Key Concepts

Term	Description
Room	A room is a visual grouping of displays that represent the physical displays positioned and sized as they are installed in an actual room. Multiple operators can share the same room. Display grouping creates a large virtual monitor wall that operators see as a single large display. The room definition specifies display resolutions and sizes, as well as zones that are used to display full screen layouts. See Managing Rooms , on page 192.
4K UHD room	4K UHD output is available with Kaleido-Modular-X 4K, Kaleido-MX 4K, KMX-3921, and KMX-49N1 multiviewers. A 4K UHD room is a visual grouping of displays that represents one of the following: • four 1080p borderless displays positioned as a 2×2 grid • a single quad link 4K UHD display See Creating a 4K UHD Room on page 193. A Kaleido-IP X320 / X120 uses displays to output one or two 4K UHDTV mosaic images. See Creating a Room , on page 192.
HDR (and Wide Color Gamut)	The High Dynamic Range (HDR) parameter determines which SDR, HDR, color gamut standard should be used to generate the multiviewer's monitoring output signal format. The HDR setting includes options for Wide Color Gamut (WCG), which permits an extended color space gama range of an image. See Enabling HDR or WCG Monitoring Output for a Display , on page 209.
Display versus monitor	Within the XEdit workflow, a <i>display</i> refers to the representation of a physical display monitor (such as a flat screen display) within a room, whereas a <i>monitor</i> represents a physical signal within a layout: for example, a video monitor displaying a specific video signal.
Full screen zone	A full screen zone is a sub-section of a room. It can be any size and it can be positioned on any of the displays in the room. A full screen zone can be associated with one or more full screen layouts assigned to specific users.
Display library	A display library contains a collection of predefined displays that can be conveniently reused to configure your system's rooms. More than one display library can exist.

Managing Rooms

In XEdit, a room represents a grouping of displays on the monitor wall driven by your Kaleido multiviewer system. When creating a room, you add displays, and assign each of them an output head. You can also define full screen zones.

To configure non-4K UHD rooms, proceed with [Creating a Room](#), below. To configure a 4K UHD room, different procedures apply according to the multiviewer's model shown in the following table.

Kaleido-MX Series 4K Kaleido-Modular-X 4K	KMX-3921 ^a KMX-4921 ^a KMX-4911 ^a	Kaleido-IP Series
See Creating a 4K UHD Room , on page 193		See Creating a Room , below

a. For multiviewers to be configured for a 4K UHD room only.

Note: In the case of a cluster system, it is possible to view a room configuration in offline mode. However, to create and configure a room, XEdit must be connected to one of the cluster members (for more information, see [Using XEdit in Online Mode](#) on page 32).

Creating a Room

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-MX Series 4K Kaleido-Modular-X 4K	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	●	● ^a


a. For multiviewers to be configured for a non-4K UHD room only.

When the multiviewer feeds one or more individual displays, use the following procedure to configure each output head individually. Each display can have different resolutions and orientations.

When configuring a Kaleido-IP X320 / X120 4K multiviewer, configure it to use one or two displays that are later set to use the 4K display resolution parameter (**UHDTV-1**), which is available for this model's HDMI outputs. See [Changing Room Display Resolutions](#), on page 207.

To create a room

- 1 Click the **Rooms** tab in the main window.
- 2 On the **File** menu, click **New**.
An empty room with a black background appears in the main window.
- 3 Add the appropriate number of displays, and configure them to match your actual installation. See [Adding Displays](#), on page 197, and [Configuring Displays](#), on page 201.
- 4 Optionally add full screen zones (see [Adding Full Screen Zones](#) on page 200).
- 5 On the **File** menu, click **Save**.
The **Save Room** window appears.

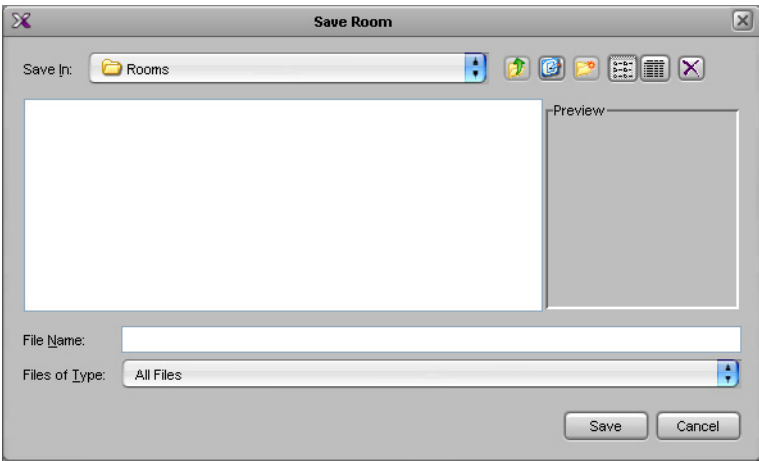

6 Type a name for the new room, and then click **Save**.

Notes

- A room name cannot exceed 7 characters.
- A room can only be saved once every display has been assigned an output head (see [Adding Displays](#) on page 197).
- In a cluster system, each room must have a unique name across the whole system. XEdit will not let you use a name if there is already a room with this name associated with one of the multiviewers within the cluster.
- In a cluster system, if one of the member multiviewers becomes unavailable while you were configuring a room, then XEdit will not let you save the room. If you want to save the room anyway, first remove any unavailable multiviewer from the cluster.

Creating a 4K UHD Room

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-MX Series 4K Kaleido-Modular-X 4K	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
	●				● ^a

a. For multiviewers to be configured for a 4K UHD room only.

When the multiviewer feeds 4K UHD output to four 1080p borderless displays, to a single quad link 4K UHD display, the room you configure in XEdit requires four output heads assigned to four 1080p displays: one for each quadrant.

Notes

- On the monitor wall, you may notice a lack of fluidity in the mouse pointer movement at the junctions between quadrants.

Notes (continued)

- If you are configuring this room for a single quad link 4K UHD display, you may want to disable the dashboard for the displays associated with the top-left, top-right and bottom-left quadrants in XEdit, and leave it enabled for the display associated with the bottom-right quadrant only (see [Disabling the Dashboard](#) on page 210).
-

To create a 4K UHD room


- 1 Click the **Rooms** tab in the main window.
- 2 On the **File** menu, click **New**.
An empty room with a black background appears in the main window.
- 3 Add *four* displays, and assign your system's four output heads as illustrated below.
See [Adding Displays](#) on page 197, for more information. See also the multiviewer's Installation & Service Manual for more information about how to make the multiviewer cable connections to the displays.

Kaleido-Modular-X, Kaleido-MX, Kaleido-MX 4K

Top left	OUTPUT A, Head 1	Top right	OUTPUT B, Head 1
Bottom left	OUTPUT A, Head 2	Bottom right	OUTPUT B, Head 2

KMX-3921, KMX-49N1

Top left	CARD A, Head 1	Top right	CARD B, Head 1
Bottom left	CARD A, Head 2	Bottom right	CARD B, Head 2

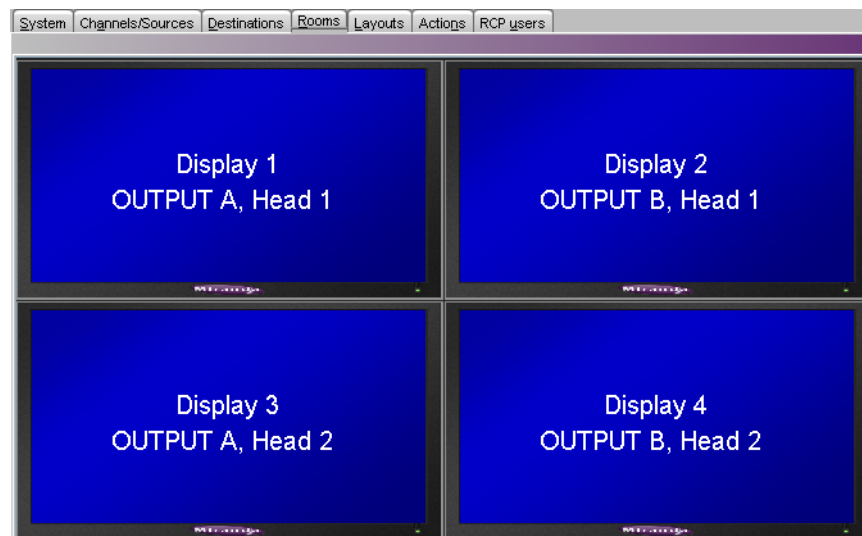

4K UHD room example (with a KMX-3921 or KMX-49N1 system, CARD A and CARD B would appear, instead of OUTPUT A and OUTPUT B)

- 4 Make sure all four displays are configured with the same 1080p output resolution (see [Changing Room Display Resolutions](#), on page 207, and [Configuring the Primary and Secondary Multiviewer Outputs](#), on page 208).

Note: For multiviewers equipped with SDI outputs, a *seamless* output is only supported at the SDI monitoring outputs, which must be configured for a *progressive* scan format (see [Configuring the Primary and Secondary Multiviewer Outputs](#), on page 208). If you connect a 4K UHD monitor to the multiviewer's HDMI outputs instead, you might notice a discontinuity in the image at the junctions between the quadrants.


- 5 Position the four displays as a tight 2×2 grid: select the four displays and use the **Remove horizontal space**, **Remove vertical space**, and the appropriate **Align** toolbar buttons as needed, to make sure there is no gap between the displays (see also: [Changing a Display's Position](#), on page 213).
- 6 On the **File** menu, click **Save**.
The **Save Room** window appears.
- 7 Type a name for the new room (maximum 7 characters), and then click **Save**.

Opening Rooms


To open an existing room

- 1 Click the **Rooms** tab in the main window.
- 2 On the **File** menu, click **Open**.

The **Open Room** window appears.

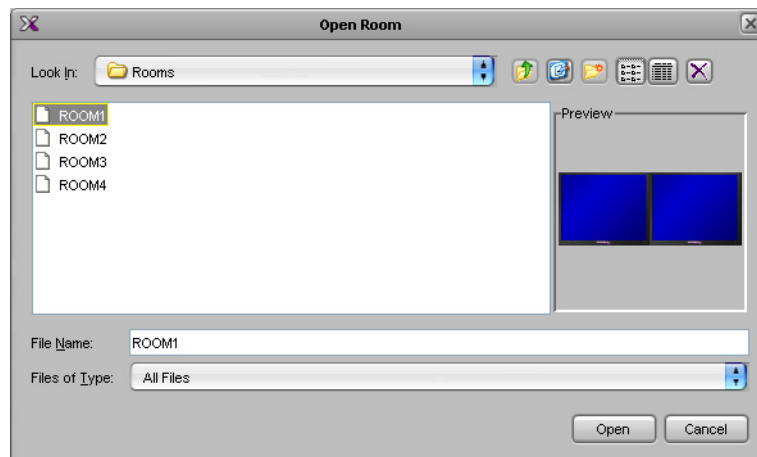


- 3 Select the room you want to open, and then click **Open**.
The selected room appears in the **Rooms** tab.

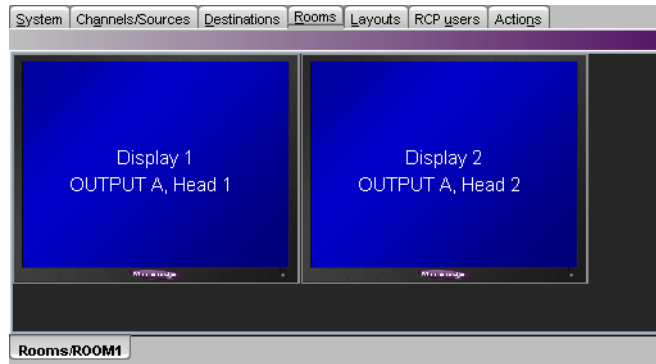

Notes

- When you have more than one room open, you can switch from one to another by clicking the tabs at the bottom of the window.

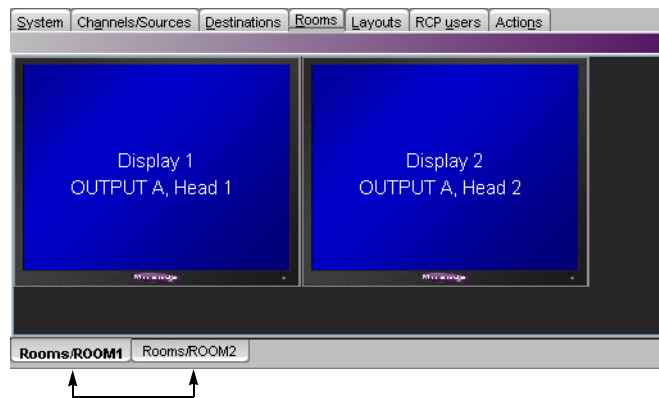

- In the case of a cluster system, it is possible to view a room configuration in offline mode, but any changes must be made in online mode.

Closing Rooms

To close a room


- On the **File** menu, click **Close**. Alternatively, click the toolbar's Close button .

Deleting Rooms

Before deleting a room, make sure you have exported any layouts you might want to save from that room (see [Exporting Layouts](#) on page 239), or that you have copied them to another room (see [Copying Layouts](#) on page 236).

To delete a room

- 1 Open the room you want to delete (see [Opening Rooms](#) on page 195).
 - 2 On the **File** menu, click **Delete**. Alternatively, click the toolbar's Delete button .
- The system prompts you to confirm.

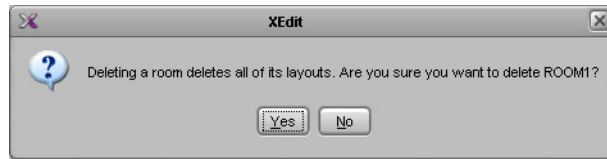

- 3 Click **Yes** to proceed.


The room and all the layouts that were associated with it are removed from your system configuration.

Adding Displays

To add a display to a room


- 1 Select a display from the display library and drag it onto the room area.

Alternatively, click the toolbar's Display button , and then click the room area to add a custom display.

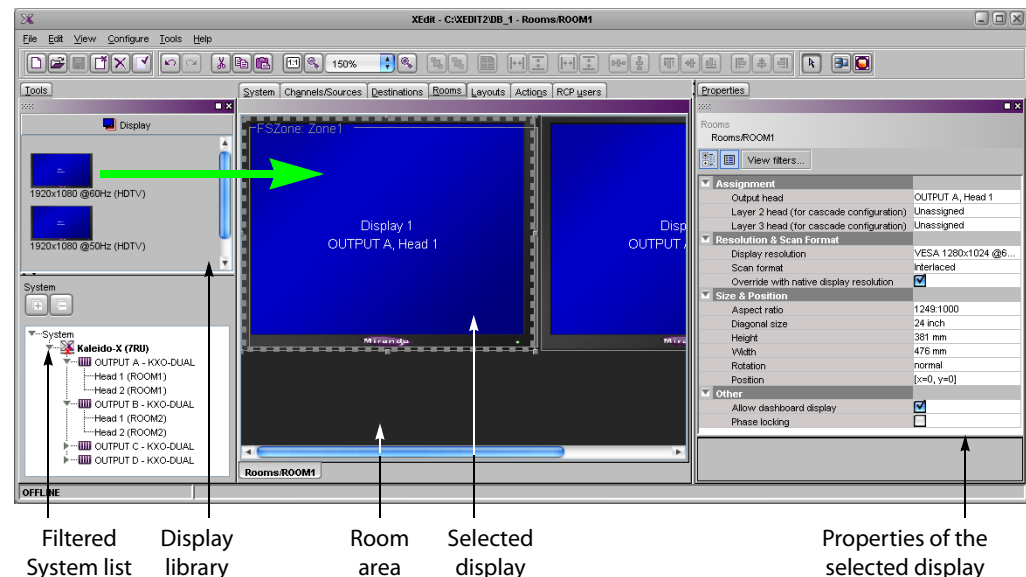


Note: All currently open display libraries appear on the **Tools** pane. Custom display libraries are stored separately from the XEdit workspace.
See [Managing Display Libraries](#) on page 214 for details.

- 2 Expand the filtered System list on the **Tools** pane, and then drag the appropriate output head onto the display in the **Rooms** tab.

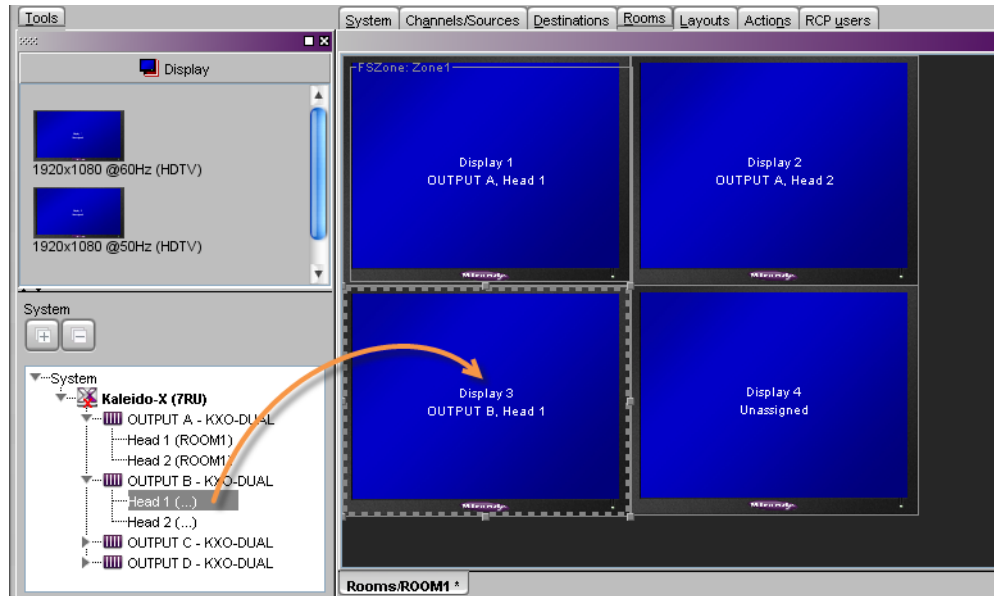


The name of the output head is indicated on the display. In the case of a Kaleido-X (4RU) or Kaleido-X (7RU), the card slot is also indicated. In the case of a cluster system, the name of the originating multiviewer also appears.

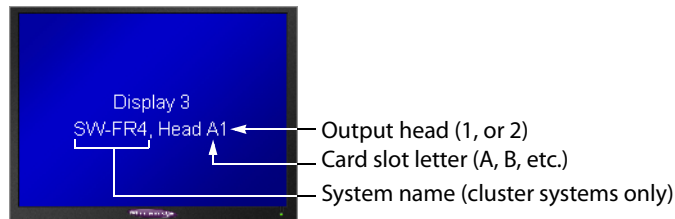

One output head cannot be assigned to more than one display at a time. When different displays are assigned the same output head, if the displays are part of the same room, then XEdit will issue an error message and prevent you from saving the room until the head assignment is corrected.

However, to facilitate room management — for example, in a cluster system where rooms and layouts have been created based on configurations from earlier standalone systems — XEdit will let you assign the same head to displays that are located *in different rooms*, but such *conflicting assignments will be marked in red* in the filtered System list displayed on the **Tools** pane, and should be resolved by removing a conflicting display (see [Removing Displays](#) on page 199), or by deleting the conflicting room (see [Deleting Rooms](#) on page 196).

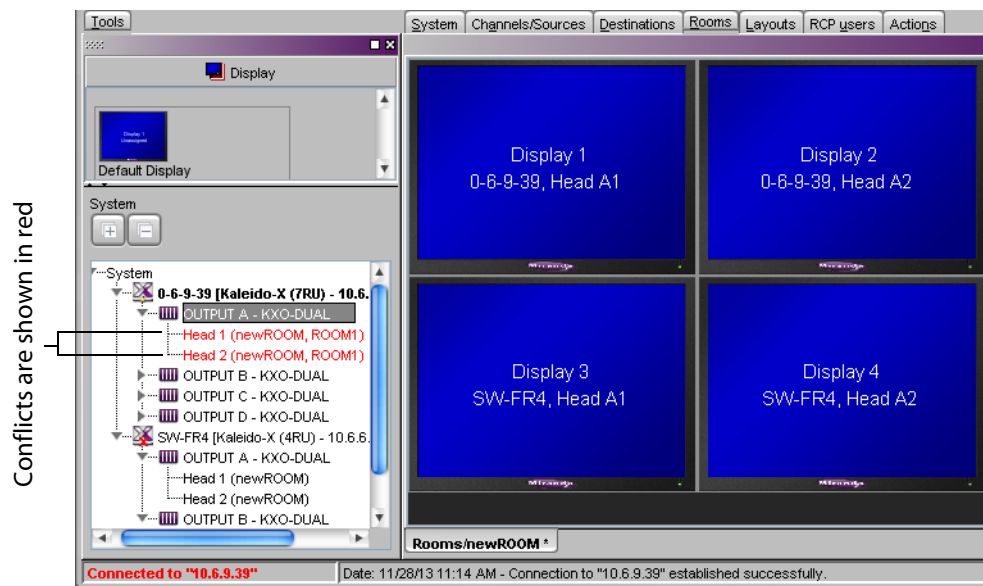

IMPORTANT

Conflicting head assignments

Neglecting to resolve conflicting head assignments could result in distorted layout elements on the monitor wall (which would happen, for example, if the same output head is assigned to two displays with different resolutions), or, in the case of a cluster, in the dashboard showing the wrong room name (from one of the earlier standalone configurations you may have used to create the cluster).

To prevent this from happening, open the old room configuration, and look for red *Head* elements in the filtered **System** list that appears at the bottom of the **Tools** pane. Clear the unwanted head assignments, either by removing the corresponding displays from the room layout (see [Removing Displays](#) on page 199), or by completely deleting the old room configuration if you do not need it anymore (see [Deleting Rooms](#) on page 196).

- 3 On the **File** menu, click **Save**.

The updated room configuration is saved.

Removing Displays

Before removing a display, you might consider copying layout parts associated with this display to other display areas (see [Display layout](#) on page 217).

To remove a display from a room

- 1 Open the room that contains the display you want to remove (see [Opening Rooms](#) on page 195).
- 2 If there is a full screen zone associated with this display, click it, and then press Delete on your keyboard to remove it.
- 3 Click the display and then press Delete on your keyboard.

- 4 On the **File** menu, click **Save**.
The updated room configuration is saved.


Adding Full Screen Zones

Notes

- Adding full screen zones to a room is optional.
 - Do not span a full screen zone across more than one display; use spanned video monitors instead. See [Spanning](#) on page 222 for more information.
-

To add a full screen zone to a room

- 1 Click the Full screen zone button  in the toolbar, and then click the room area to create the full screen zone.
- 2 Position and resize the zone as appropriate.
- 3 In the **Properties** pane, click the **Friendly name** box, and then type a name for the zone.

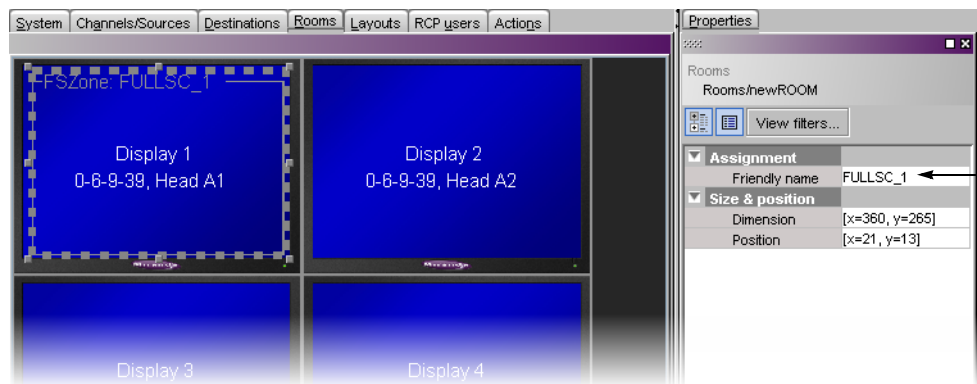

- 4 Press Enter on your keyboard to validate the new name, and then click **Save** on the **File** menu.
The room configuration is saved.

Removing Full Screen Zones

Before removing a full screen zone, make sure there are no *full screen layouts* associated with this zone in your system configuration. If there are still full screen layouts for this zone, then XEdit will issue an error message and prevent you from saving the room. See [Deleting Layouts](#) on page 234.

To remove a full screen zone from a room

- 1 Open the room that contains the full screen zone you want to remove (see [Opening Rooms](#) on page 195).
- 2 Click the full screen zone, and then press Delete on your keyboard.
- 3 On the **File** menu, click **Save**.
The updated room configuration is saved.

Configuring Displays

The monitor wall driven by your Kaleido multiviewer system may include displays of various shapes and sizes, each with its specific characteristics. The displays you add to your rooms in XEdit must be configured to match the attributes of their physical counterparts. The Kaleido Software includes a set of predefined resolutions that cover most standard displays. Any custom resolutions you add to this set will be available throughout the system, and can be reused when configuring any display in any room.

You can manually configure display resolutions in two ways: either globally, from the **Tools** menu, or by clicking a specific display in a room.

In addition to monitor wall displays, your system can include other monitors connected to the multiviewer's monitoring outputs (one for each output head). The monitoring output format on a given head depends on the resolution configured for the corresponding multiviewer output, and, in the case of a 1080-line resolution, on the selected scan format (interlaced, progressive) for this output head. In the case of a KMV-3911 or Kaleido-X16 multiviewer, you can enable phase-locking at the output head level, to support production switchers (or other equipment) connected to the multiviewer's SDI monitoring outputs.

Viewing Room Display Properties

To view the properties for one of the displays in a room

- 1 Click the display whose properties you want to view.
- 2 Review the attributes and values that appear in the **Properties** pane.

The screenshot shows the 'Properties' window in XEdit. The window has a title bar with 'Properties' and standard window controls. Below the title bar, it shows 'Rooms' and 'Rooms/Room1'. There is a 'View filters...' button. The main area is divided into several sections, each with a collapsed icon (a small triangle) to its left:

- Assignment**
 - Output head: System1 , OUTPUT A, Head 1
 - Layer 2 head (for cascade co...: Unassigned
 - Layer 3 head (for cascade co...: Unassigned
- Resolution & Scan Format**
 - Display resolution: 1920x1080 @60Hz (HDTV)
 - Scan format: Progressive
 - Override with native display re...: ☒
- High Dynamic Range**
 - HDR Mode: SDR
 - Diffuse White (PQ/HLG): N/A
- Size & Position**
 - Aspect ratio: 16:9
 - Diagonal size: 65 inch
 - Height: 809 mm
 - Width: 1439 mm
 - Rotation: normal
 - Position: [x=0, y=0]
- Other**
 - Allow dashboard display: ☒
 - Phase locking: ☐

Enabling EDID Auto-Detection in XEdit


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP X320 / X120	Kaleido-IP VM	KMX-3921 KMX-4921 KMX-4911
●	●	●	●		●

The monitor EDID auto-detection feature is enabled by default in order to facilitate the initial setup of a Kaleido system. Setting an output head to a specific resolution, from a multiviewer service panel in iControl (if available), from the monitor wall (Kaleido-X, Kaleido-X16), or from a Densité controller's local control panel (Kaleido-MX, Kaleido-MX 4K, Kaleido-Modular-X, KMX-3901/3911, Kaleido-XQUAD) disables the EDID auto-detection for this head.

To enable EDID auto-detection for a display

 - 1 In the Rooms tab, click the display you want to configure.
- 2 In the **Properties** pane, select the **Override with native display resolution** check box.



Select to enable automatic detection of EDID information

- 3 On the **File** menu, click **Save**.


Configuring Custom Resolutions from the Tools Menu

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●	●	●	●	●	

To create a custom display resolution from the Tools menu

- 1 On the **Tools** menu, click **Edit resolutions**.

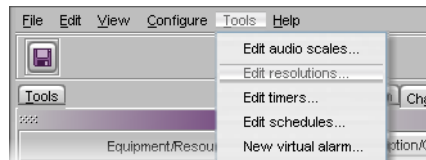


The **Edit Resolution Settings** window appears.

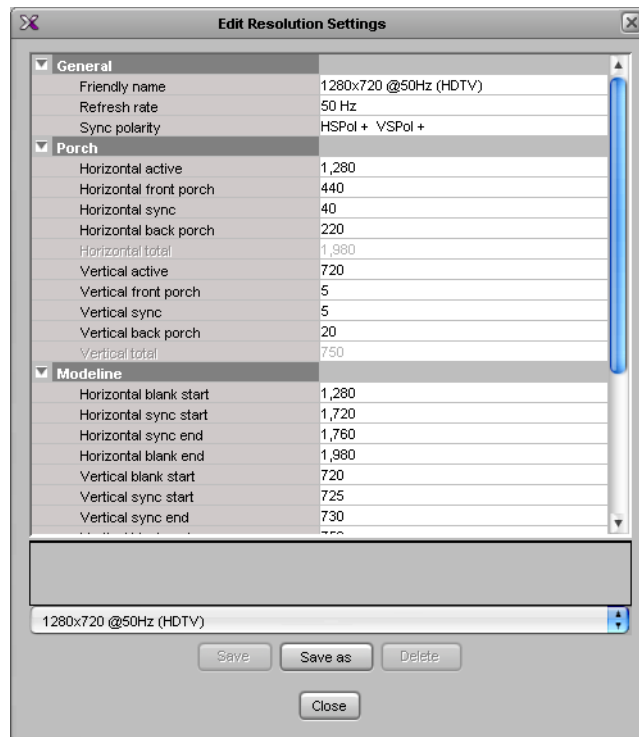

- 2 Select the resolution you want to customize (or the one on which you want to base a new resolution), from the list at the bottom of the window.


Note: When you modify one of the default resolutions, you can only save your changes as a new resolution. On the other hand, custom resolutions can be tweaked and saved repeatedly until the final configuration is achieved. However, make sure that the active width and active height values you specify match those of one of the default resolutions, otherwise your custom resolution will be ignored.

- 3 Under either the **Porch** or the **Modeline** section—depending on whether you prefer to specify front porch, back porch, sync, and active values, or blank start, sync start, sync end and blank end—, set the refresh rate and other timing parameters so that they match those of the physical display you need to configure.

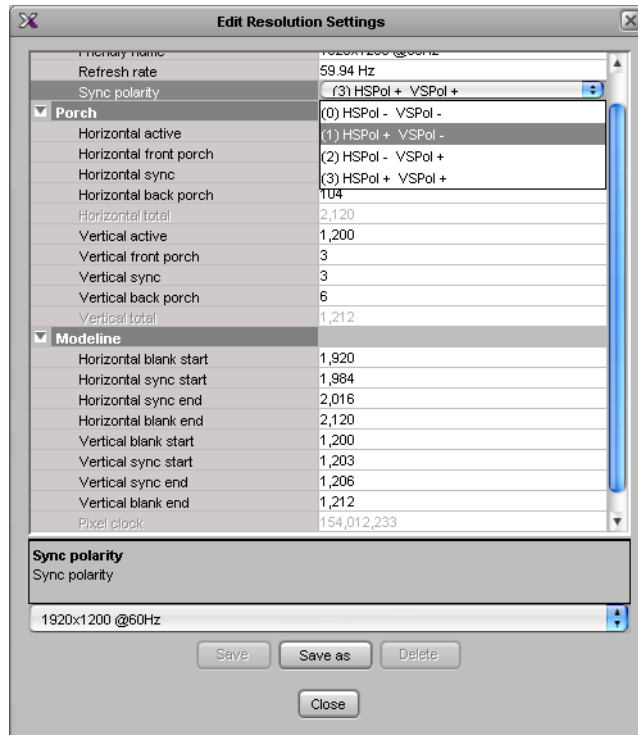


Note: In XAdmin's **Status and Options** page, these parameters are listed under the corresponding output card information, according to the blank/sync start/end modeline system, and with the sync polarity expressed as a number between 0 and 3. See *Viewing a Multiviewer's Status Information* in the multiviewer's *Installation & Service Manual* for more information.

Example: Suppose you want to configure the display that is connected to *head 1* of a Kaleido-X multiviewer's OUTPUT A card. The image below shows the relevant data you need to copy to the **Modeline** section of the **Edit Resolution Settings** window.

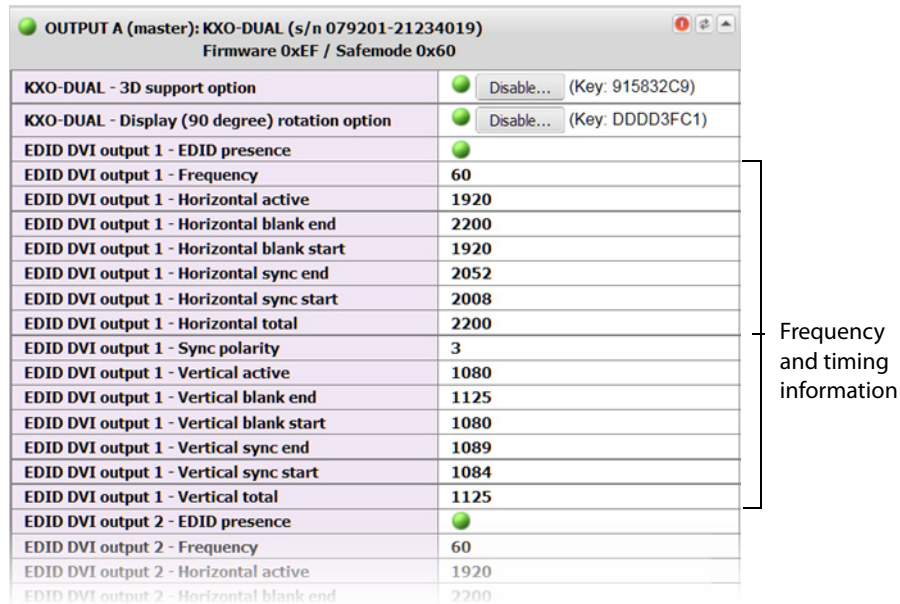

- 4 Type a name for the new resolution in the **Friendly name** box, and then click **Save as** to close the **Edit Resolution Settings** window. Alternatively, if you are modifying an existing custom resolution, you can click the **Save** button.

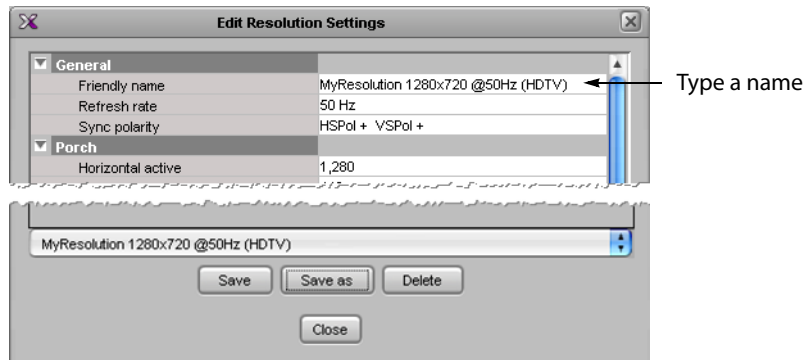


Configuring a Custom Resolution from a Specific Display in a Room

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●	●	●	●	

To configure a custom resolution from a specific display in a room

 - 1 Click the display whose resolution you want to configure.
- 2 Click the **Display resolution** box in the **Properties** pane, and then click the button that appeared on the right side of the resolution presets.



The **Edit Resolution Settings** window appears.

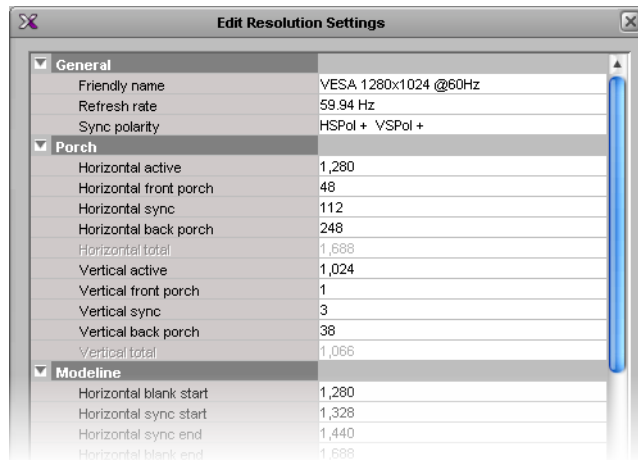

- Under either the **Porch** or the **Modeline** section, depending on whether you prefer to specify front porch, back porch, sync, and active values; or blank start, sync start, sync end and blank end, set the refresh rate and other timing parameters so that they match those of the physical display you need to configure.


Note: In XAdmin's **Status and Options** page, these parameters are listed under the corresponding output card information, according to the blank/sync start/end modeline system, and with the sync polarity expressed as a number between 0 and 3. Refer to *Viewing a Multiviewer's Status Information* in the multiviewer's *Installation & Service Manual* for more information. See [Related Documentation](#), on page 13.

Example: Suppose you want to configure the display that is connected to *head 1* of a Kaleido-X multiviewer's OUTPUT A card. The image below shows the relevant data you need to copy to the **Modeline** section of the **Edit Resolution Settings** window.

OUTPUT A (master): KXO-DUAL (s/n 079201-21234019) Firmware 0xEF / Safemode 0x60	
KXO-DUAL - 3D support option	☒ Disable... (Key: 915832C9)
KXO-DUAL - Display (90 degree) rotation option	☒ Disable... (Key: DDDD3FC1)
EDID DVI output 1 - EDID presence	☒
EDID DVI output 1 - Frequency	60
EDID DVI output 1 - Horizontal active	1920
EDID DVI output 1 - Horizontal blank end	2200
EDID DVI output 1 - Horizontal blank start	1920
EDID DVI output 1 - Horizontal sync end	2052
EDID DVI output 1 - Horizontal sync start	2008
EDID DVI output 1 - Horizontal total	2200
EDID DVI output 1 - Sync polarity	3
EDID DVI output 1 - Vertical active	1080
EDID DVI output 1 - Vertical blank end	1125
EDID DVI output 1 - Vertical blank start	1080
EDID DVI output 1 - Vertical sync end	1089
EDID DVI output 1 - Vertical sync start	1084
EDID DVI output 1 - Vertical total	1125
EDID DVI output 2 - EDID presence	☒
EDID DVI output 2 - Frequency	60
EDID DVI output 2 - Horizontal active	1920
EDID DVI output 2 - Horizontal blank end	2200

Frequency and timing information, as listed in XAdmin

- 4 Type a name for the new resolution in the **Friendly name** box, and then click **Save as** to close the **Edit Resolution Settings** window. Alternatively, if you are modifying an existing custom resolution, you can click the **Save** button.

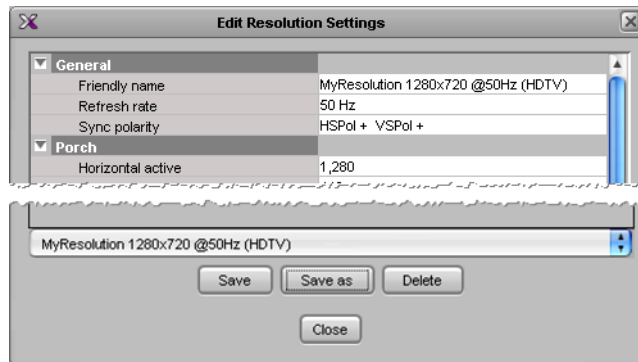


- 5 On the **File** menu, click **Save**.

Changing Room Display Resolutions

To change the resolution for a display in a room

- 1 Click the display you want to configure.
- 2 In the **Properties** pane, expand the **Display resolution** list, and then select the appropriate resolution from the list.

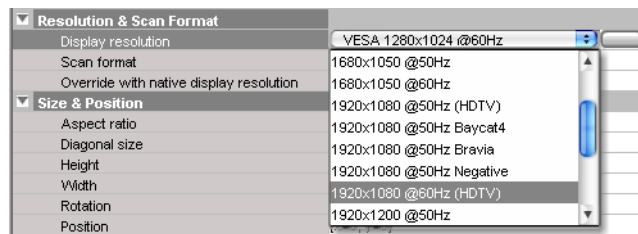

For example, to configure a Kaleido-IP X320 / X120 multiviewer's display for a 4K display DVI / HDMI output, select **UHDTV-1** from the **Display resolution** list.

Note: Even when a Kaleido-IP X320 / X120 multiviewer's display output is set to 4K output resolution, the maximum streaming output resolution is HD (1920 × 1080p).

- 3 On the **File** menu, click **Save**.

Note: In the case of a KMX-3921 / KMX-49N1 multiviewer, the refresh rates indicated in the names of the available display resolutions are ignored—the frame reference signal's refresh rate is always used.

Configuring the Primary and Secondary Multiviewer Outputs

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●	●	●		

These multiviewer models have two or more sets of physical output connectors on their rear panels. The following shows the difference in behavior between these primary and secondary output types:

- the HDMI / DVI / RGBHV are the multiviewer's primary output connectors.
 - the display resolution can be set to any available resolution. See [Changing Room Display Resolutions](#), on page 207. However, only specific display resolutions can be used (listed below) if the secondary output connectors are to be used.
 - the scan format is always progressive (the setting of the **Scan format** parameter has no effect on the primary output connectors).
- the SFP / SDI are the multiviewer's secondary output connectors. These outputs are only enabled when one of the following display resolutions is used (see the **Display resolution** parameter in [Changing Room Display Resolutions](#), on page 207):
 - 1280×720 @50Hz (HDTV)**: the scan format is always progressive (the setting of the **Scan format** parameter has no effect).
 - 1280×720 @60Hz (HDTV)**: the scan format is always progressive (the setting of the **Scan format** parameter has no effect).
 - 1920×1080 @50Hz (HDTV)**: the scan format can be either interlaced or progressive as set in the following procedure.
 - 1920×1080 @60Hz (HDTV)**: the scan format can be either interlaced or progressive as set in the following procedure.

To configure the scan format for a 1080-line signal at the secondary output

 - In the Room area, click the display associated with the multiviewer output head whose properties you want to configure.
- In the **Properties** pane, verify that the selected display resolution for the multiviewer output head is one of the **HDTV** resolutions listed above, and make sure that the **Override with native display resolution** option is disabled.



- Click the **Scan format** box, and then select the appropriate scan format: **Progressive** or **Interlaced**.



- On the **File** menu, click **Save**.

Scan Format


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
			●	●

The scan format parameter determines if the video output is to be in interlaced or progressive scan format.

To configure the scan format

- 1 In the Room area, click the display associated with the multiviewer output head whose properties you want to configure.
- 2 Click the **Scan format** box, and then select the appropriate scan format: **Progressive** or **Interlaced**.

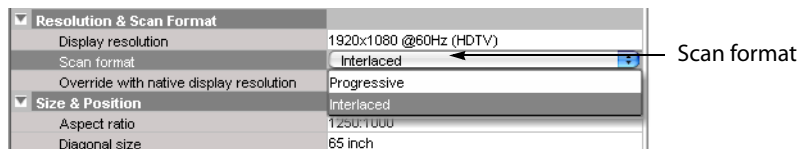

- 3 On the **File** menu, click **Save**.

Enabling HDR or WCG Monitoring Output for a Display

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-4911	KMX-3921 KMX-4921
					●


The **HDR Mode** parameter determines which Standard Dynamic Range (SDR or Rec. 709), High Dynamic Range (HDR), color gamut standard should be used to generate the multiviewer's monitoring output signal format. Internally, the multiviewer cross-maps the SDR, HDR, and color gamut format of each multiviewer input signal to the current mosaic's output format set below in the room configuration for a display.

According to the signal input types supported by the currently-connected monitor for the multiviewer's monitoring output, set the appropriate SDR, HDR, color gamut mode of operation.

For HDR and WCG operation, the display's scan format must be set to **Progressive** as shown below.

To enable HDR and WCG for a Monitor Output

- 1 In the Rooms tab, click the display you want to configure for HDR / WCG.
- 2 In the **Properties** pane, set the **Scan format** to **Progressive**.

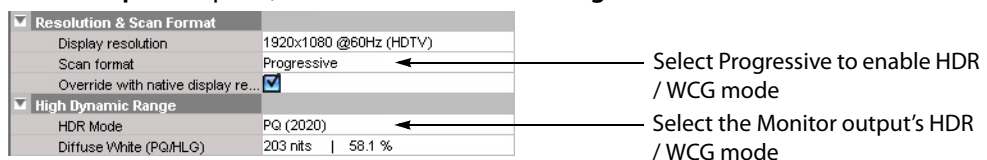

- 3 In HDR Mode, select the appropriate SDR, HDR, color gamut mode of operation supported by the currently-connected monitor for this monitoring output.
- 4 For the PQ HDR mode, set the **Diffuse White (PQ/HLG)** level (brightness) in nits. Consult your display manufacturer's documentation for more information about this parameter. This parameter also sets the brightness of the white used for on-screen multiviewer-generated graphics such as clocks, borders, and so on.
- 5 On the **File** menu, click **Save**.

Enabling Phase Locking at the Monitoring Output

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-Modular KMV-3911	Kaleido-X	Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
		●		●		●

These multiviewers can feed production switchers (or other equipment) through their monitoring output. If your downstream equipment requires input signals that are in phase with the facility's genlock reference, then you need to enable phase locking at the corresponding output head. This increases the processing delay equally at the monitoring output and corresponding HDMI output.

Note: Phase locking is disabled by default, to allow for a minimal processing delay. Leave it disabled for all other multiviewer models, or if your system does not involve downstream equipment requiring phase-locked signals.

To enable phase locking at the monitoring output for a specific output head

- 1 Click the display associated with the head whose monitoring output you want to configure, and then select the **Phase locking** check box in the **Properties** pane.



- 2 On the **File** menu, click **Save**.

 
Disabling the Dashboard

A room can be configured to prevent the dashboard from appearing on specific displays. For instance, in a production control room, or if the multiviewer is used in the studio backdrop you may not want the dashboard to pop up, regardless of alarm conditions.

Note: Make sure the dashboard remains enabled on a least one display, in a room where alarm conditions can be monitored, since it is your only way to be notified in case of a card booting in offline mode, a duplicate IP address, a defective fan, a power supply alarm, etc.

To disable the dashboard for a specific display

- 1 Click the display on which you do not want the dashboard to appear, and then clear the **Allow dashboard display** check box in the **Properties** pane.



- 2 On the **File** menu, click **Save**.


Changing a Display's Aspect Ratio

Notes

- It is important to properly set the aspect ratio of a display, since this will affect the proportions of every component you will use to create layouts for this room. For instance, if the aspect ratio of a display does not match the aspect ratio of the actual display in the physical room, then a video window inside a layout will show distorted images.
- If you change the display aspect ratio later in the process, layouts created before the change will be broken.

To change the aspect ratio of a display in a room

- 1 Click the display whose aspect ratio you want to set.
- 2 In the **Properties** pane, expand the **Aspect ratio** list, and then select the appropriate aspect ratio preset from the list.

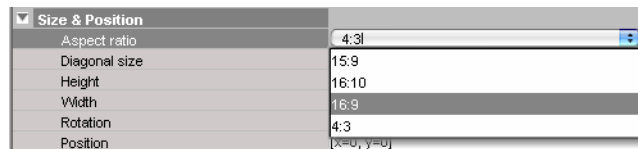


Alternatively, type the ratio directly in the box.

- 3 On the **File** menu, click **Save**.

Changing a Display's Diagonal Size

To change the diagonal size of a display in a room

- 1 Click the display whose size you want to configure.
- 2 Click the **Diagonal size** box in the **Properties** pane.

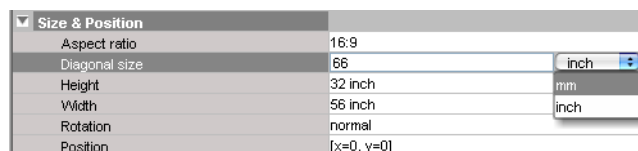


- 3 Select the appropriate unit of measurement from the list that appears inside the **Diagonal size** box, and type the size.
- 4 On the **File** menu, click **Save**.

Changing a Display's Height

To change the height of a display in a room

- 1 Click the display whose height you want to configure.
- 2 Click the **Height** box in the **Properties** pane.

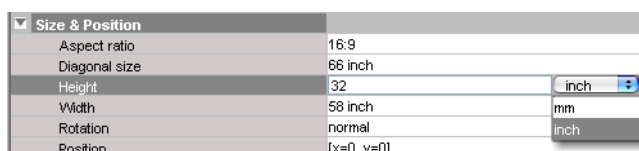


- 3 Select the appropriate unit of measurement from the list that appears inside the **Height** box and type the height.
- 4 On the **File** menu, click **Save**.

Changing a Display's Width

To change the width of a display in a room

- 1 Click the display whose width you want to configure.
- 2 Click the **Width** box in the **Properties** pane.

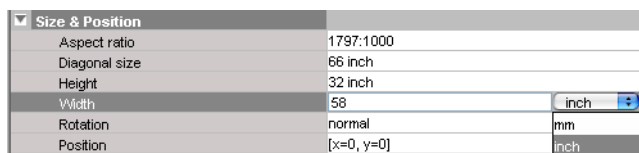

- 3 Select the appropriate unit of measurement from the list that appears inside the **Width** box and type the width.
- 4 On the **File** menu, click **Save**.

Changing a Display's Rotation

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	●


Notes

- For rotation to work properly on the monitor wall, the *Display Rotation* option must be enabled on the corresponding output card (in the case of a Kaleido-X, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X multiviewer) or HDMI output port (in the case of a Kaleido-X16). This option must be enabled (see the multiviewer's *Installation & Service Manual* for more information).

To change the rotation setting for a display in a room

- 1 Click the display you want to configure.
- 2 In the **Properties** pane, expand the **Rotation** list, and then select the configuration that matches the way the actual display is mounted in the physical room:
 - normal
 - rotated 90 degrees clockwise

- rotated 90 degrees counterclockwise

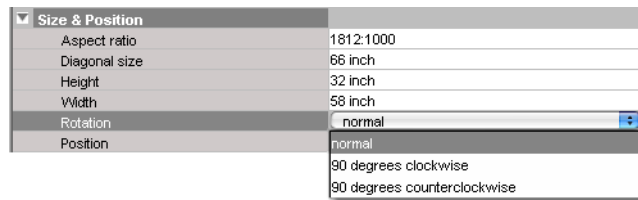


- 3 On the **File** menu, click **Save**.

If you already had created layouts for the room associated with the display whose rotation setting you just changed, you may need to adjust layout elements in these layouts (see [Creating Layouts](#) on page 217).


Changing a Display's Position

To change position of a display in a room

- 1 Click the display whose position you want to configure.
- 2 Click the **Position** box in the **Properties** pane, then click the button that appears inside the box.

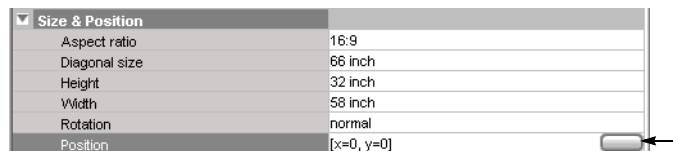

The **Specify Position** window appears.

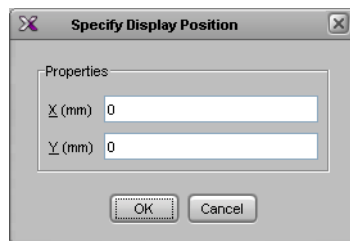

- 3 Type the appropriate values in the **X (mm)**, and **Y (mm)** boxes, and then click **OK**.
The values appear in the **Position** box.
- 4 On the **File** menu, click **Save**.

Managing Display Libraries


The default display library includes configurations for the most popular display models. You can also create your own display configurations, and add them to custom display libraries. All open display libraries appear on the **Tools** pane. The default display library is always open. Custom display libraries are stored separately from the XEdit workspace, and must be opened explicitly.

Creating Custom Display Libraries


To create a custom display library

- 1 Click the **Rooms** tab in the main window.
- 2 On the **File** menu, click **New**. Alternatively, click **Open** to open an existing room.
- 3 On the **File** menu, click **New display library**.

Alternatively, right-click anywhere inside the **Tools** pane's display library area, and then click **New display library** on the menu.

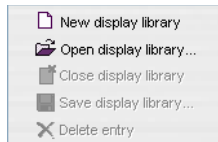

 
The new display library appears below the default display library area on the **Tools** pane.



New (empty) display library

- 4 Right-click anywhere in the display library area, and then click **Save Display Library** on the menu.

The **Save Display Library** window appears.

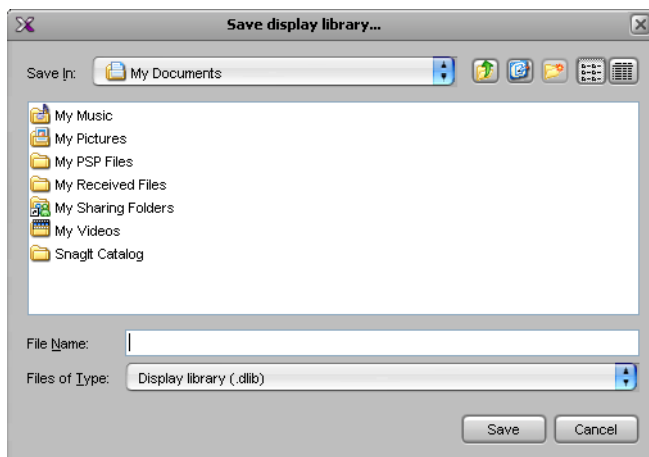


- 5 Type a name for the new custom display library, and then click **Save**.

Custom display libraries are stored separately from the XEdit workspace. They have a `.dlib` extension.

Adding Displays to Custom Libraries

To add a display to a custom display library

- 1 Click the Display button  on the toolbar, and then click the room background to add a display. Alternatively drag a display from a display library onto the room, or choose a display within an existing room.
- 2 Customize the display as needed, and then drag it onto the display library *while holding the Ctrl key*.

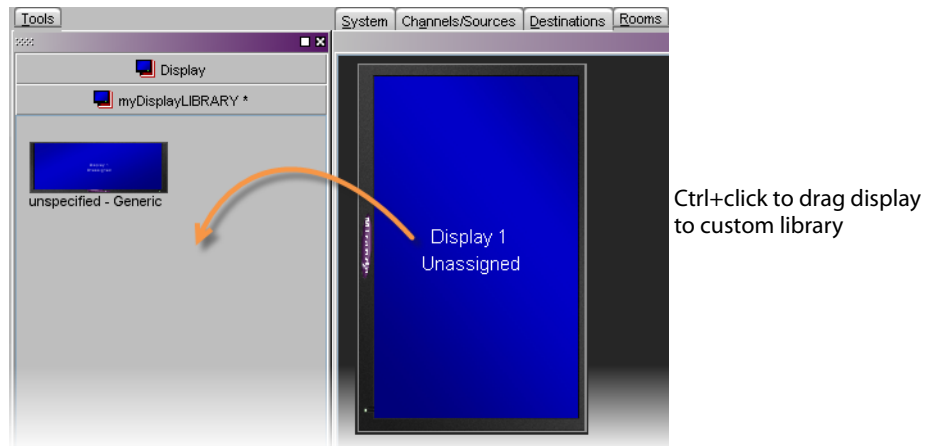


Note: It is not possible to further customize a display once it is inside a library. Should you need to do so, drag the display to the room area, apply the required changes, and then Ctrl+drag the modified display to the display library. You can then remove the obsolete display from the library.

Removing Displays from Custom Libraries

To remove a display from a custom library


- Click the display you want to remove and then press Delete.
- Alternatively, right-click its icon and then click **Delete entry** on the menu.

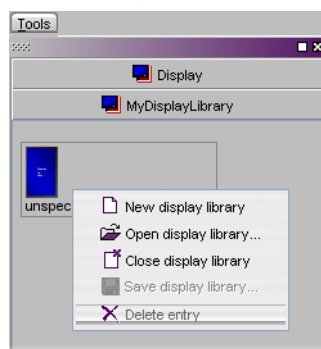

Closing Display Libraries

To close a display library

- Once the custom library is saved, you can right-click in the library area, and then click **Close display library** on the menu.
- Alternatively, click **Close display library**, on the **File** menu.

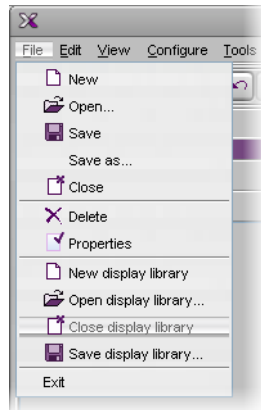

Opening Display Libraries

To open a custom display library

- On the **Tools** pane, right-click anywhere in the display library area, and then click **Open display library** on the menu.
- Alternatively, click **Open display library**, on the **File** menu.

Note: It is possible to have multiple custom libraries open at the same time.

9

Creating Layouts

Introduction


This section describes layout elements and their purposes, and provides detailed configuration instructions.

Key Concepts

Layouts and Layout Elements

Layout elements

Term	Description
Layout	A <i>layout</i> is a visual grouping of monitors that appear on displays within a room. A layout includes different types of monitors in a variety of placements and sizes. There are two types of layouts: <i>room layouts</i>, and <i>full screen layouts</i>. See Managing Layouts on page 225. Note: Before creating layouts, you may want to review your room configurations. Should a display be rotated in a room (see Changing a Display's Rotation on page 212), some layout elements in your existing room layouts may require adjustments.
Display layout	In a <i>room layout</i>, the parts that cover the room displays can be managed separately. You can consider each of these parts as a <i>display layout</i>. You can duplicate a display layout to another display area within the same layout, or to any other layout, in any room within your system. You can mix and match individual display layouts to create a new room layout. Use the Copy layout to feature, to build a display layout library from your most useful display layouts. See Copying Layouts on page 236. If your system does not include a single-display room, you might consider momentarily creating one for this purpose. Alternatively, copy your display layouts, one by one, to <i>Display 1</i>, in separate room layouts. Once you have isolated a display layout to a separate room layout, consider exporting this room layout as a file, so you can reuse it in other multiviewer systems. See Exporting Layouts on page 239, Importing Layouts, on page 239, and Rearranging Layouts Across Displays, on page 237.
Monitor	A <i>monitor</i> is an element that is part of a layout. The Kaleido Software supports several types of layout elements (e.g., clocks, video monitors, audio monitors, UMDs, time code monitors, etc.), as well as composite monitors. All layout elements, except for the video monitors and subtitling monitors are <i>graphical</i> layout elements. See Adding Monitors to a Layout on page 240.

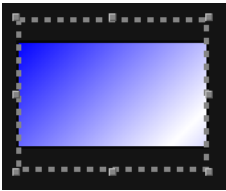Term	Description
Video monitor	A <i>video monitor</i> is a layout element used to define an area for displaying a video signal. It is represented in XEdit by the boundary box made visible by clicking the element. Within a video monitor, the <i>video window</i> is the active area where the video signal is displayed, possibly including closed captions or teletext. The <i>video window</i> is represented in XEdit by the blue rectangle inside a video monitor. The video window does not necessarily cover the complete video monitor's area. See Configuring Video Monitors on page 249. 
Composite monitor	A <i>composite monitor</i> is a group of primary elements that can be seen as a single object within a layout. Composite monitors typically include a video window, one or more audio level meters, and a UMD with two tallies.
Time code monitor	A <i>time code monitor</i> displays the Ancillary Time Code (ATC) from an HD video signal, or the time code found in an embedded SDI video signal, part of the vertical interval of an analog signal (VITC), or other external Linear Time Code (LTC). This monitor also supports time code information from external providers (see Configuring logical sources based on external alarm providers on page 100). Time code monitors can be used for monitoring the duration of programs. See Configuring Time Code Monitors on page 274.
Timer	A <i>timer</i> can be slaved to a production timer, controlled from the Kaleido-RCP2 (with start, stop and reset control through GPI inputs), and/or used for monitoring the duration of programs. Three <i>timer modes</i> are available: (1) UP: timer counts up starting from zero up to a preset time, (2) DOWN: timer counts down from a preset time to zero, and (3) REMAINING: timer counts down from the current time until it reaches a preset time. A <i>timer monitor</i> is based on a timer defined within the Kaleido Software. Timers are defined and configured in XEdit. Timer monitors can be configured directly on the monitor wall. See Configuring Timers on page 276.
Audio monitor	An <i>audio monitor</i> (also called <i>audio level meter</i> or <i>ALM</i>) is a graphical layout element that provides a visual representation of sound. See Configuring Audio Monitors, on page 265, and Configuring Audio Scales, on page 270.
Loudness monitor	A <i>loudness monitor</i> is a graphical layout element that provides a visual representation of the perceived loudness of an audio program. It provides two measures (short-term, and momentary loudness) per audio program. See Configuring Loudness Monitors on page 268.
UMD	An <i>under monitor display (UMD)</i> has a <i>text label</i> that can be static or dynamically updated by a peripheral device. It can also have <i>left and right tally indicators</i>. The UMD typically indicates the name of the video source seen in a video monitor. See Configuring UMDs on page 282.
Alarm monitor	<i>Alarm monitors</i> help you see the status of global and virtual alarms, but their use is not limited to this type of alarms. When any alarm level is assigned to an alarm monitor, the status of this alarm is shown. When using the global alarm at the text label level, the alarm monitor displays the text value of the alarm, which is a readable name. See Configuring Alarm Monitors, on page 290 and Alarm latch, on page 477 for more information.

Term	Description
Subtitling monitor	A <i>subtitling monitor</i> defines an area for displaying subtitles extracted from a video signal. By using a subtitling monitor you can monitor subtitling from a specific DVB or SCTE 27 stream, independently from the associated video stream. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Configuring Subtitling Monitors on page 294. Note: With the current version of the Kaleido Software, the subtitling monitor supports DVB and SCTE 27 subtitles, from Kaleido-IP sources only.
Metadata monitor	A <i>metadata monitor</i> defines an area for displaying XDS, or digital content advisory descriptor (CAD) information compliant with CEA-766-D, extracted from a video signal. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Configuring Metadata Monitors on page 299.
V-chip monitor	The <i>V-chip monitor</i> provides a visual indication of the V-chip rating from the CC (608) metadata in an SD video signal, or from the CC (608) legacy caption data, when such data is present within an HD video signal. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Configuring V-Chip Monitors, on page 301.
Clock	A <i>clock</i> is the visual representation of time in a video or display. It can be based on a reference LTC signal or on the multiviewer system time. See Configuring Clocks on page 303.
Monitor library	A <i>monitor library</i> is a collection of predefined layout elements. Monitors from a library can be used to help construct a layout. Default monitor libraries are available from XEdit's Tools pane. You can also create your own libraries. See Managing Monitor Libraries on page 318. Note: As of version 7.40 of the Kaleido Software, two new 16:9, and 4:3 composite monitor libraries with <i>proportional elements</i> are available. In these libraries, the primary monitors within each composite have all their dimensions defined as a percentage, which allows intuitive resizing, whereas, in the legacy <i>maximum video area</i> libraries, some primary monitors have fixed height or width, to allow more space for the video window. The new composite monitors with proportional elements suit most purposes. It is preferable to always use them, unless you specifically require monitors with fixed dimensions.

Aspect Ratio

Aspect ratio information can be encoded within a video signal following different standards: AFD 2016, AFD VI, or WSS. The Kaleido Software may use this information to render the video raster in the target video window on the monitor wall.

Term	Description
AFD VI	Active format description encoded in the video index.
AFD 2016	Active format description encoded in the ancillary data (according to the SMPTE ST 2016 standard).

Term	Description
WSS	Wide Screen Signaling.
Video raster	Video signal that is displayed inside the video monitor on a monitor wall.

The aspect ratio of video displayed on the monitor wall can be automatically adjusted. With multiple video players (monitors) on a monitor wall, in multiple formats/aspect ratios, this makes it easy to switch from one format to another in the same player. Automatic adjustment can be accomplished in two ways:

- **Video monitor slaved to input:** A video monitor can be slaved to the input format such that the video monitor will change its aspect ratio according to the input signal type (e.g., SD, HD, DVI).
- **Video raster follows AFD/WSS:** A video monitor can be configured so that WSS, AFD VI, or AFD 2016 metadata is used to crop (and/or add black bars to) the video signal, giving the video raster the correct aspect ratio.

Note: The Kaleido Software does not support automatic aspect ratio adjustment based on decoded AFD/WSS information for signals originating from Kaleido-IP multiviewers.

This metadata can be reported as text inside a UMD. Its presence can also be made available in alarms as well as through SNMP traps.

See [Configuring Automatic Aspect Ratios](#) on page 256, for more information.

Note: Aspect ratio decoding can also be configured for each multiviewer input, based on decoded AFD or WSS metadata when such information is available within the input signal (see [Calibrating Aspect Ratio Decoding](#) on page 132).

Cropping Mode

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP X320 / X120	Kaleido-IP VM	KMX-3921 KMX-4921 KMX-4911
●	●	●	●		●

The display of a video signal can be cropped to remove unwanted portions, or to zoom in on a specific portion of the image. In XEdit, you can configure a video monitor to display signals in underscan or overscan mode (see [Video Cropping/Zooming](#) on page 254).

Underscan: When a video window is in underscan mode, it displays the full signal without cropping any of the image.

Overscan: When a video window is in overscan mode, it displays a selected area of the image, typically zoomed and cropped to fit the window. By default, the overscan mode crops the left, right, top and bottom margins by 5% each.

Note: Kaleido-MX, and Kaleido-Modular-X configured for 4K UHD output, and Kaleido-MX 4K do not support the *overscan* mode for video windows spanned across multiple heads (see [4K UHD Spanning](#) on page 224).

Changing the underscan/overscan mode dynamically

It is possible to dynamically change the overscan/underscan mode based on the current feed assigned to a video monitor. For example, you can change logical sources in a video monitor using Gateway commands, where a video source requires the monitor to be in overscan mode but a graphics source requires the monitor to be in underscan mode to avoid cropping the image. A custom action script can make the monitor change its scan mode depending on the format detected. For information on how to create such a script, contact Technical Support ([Grass Valley Technical Support](#), on page 536).

Custom overscan

The amount of overscan applied can be customized to some extent, which will depend on the original signal resolution, relative to the size of the video window where the image is displayed. Excessive cropping may result in a loss of video image on the monitor wall. Likewise, when a layout has several monitors with heavy cropping settings on the same display head, some video windows may turn blank.

The examples listed below may be used as guidelines. Unless specified otherwise, these are based on a *1080p display resolution*. Displays with a lower resolution can afford more cropping.


- In the case of a *full screen* video window:
 - The KMV-3901/3911 supports cropping up to **6%** in both directions (i.e., 6% vertically, and 6% horizontally).
 - The Kaleido-X and Kaleido-X16 support cropping up to **18%** in both directions.
 - Kaleido-MX, Kaleido-MX 4K, and Kaleido-Modular-X support cropping up to **40%** in both directions, for *SD 525 sources* in a 1920×1200 monitor.
- In the case of a video window occupying $1/16^{th}$ of the display area:
 - The KMV-3901/3911 supports cropping up to **17%** in both directions for a *1080i HD source*, or up to **38%** for an SD source.
 - The Kaleido-X and Kaleido-X16 support cropping up to **42%** in both directions.

Spanning


This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP X320 / X120	Kaleido-IP VM	KMX-3921 KMX-4921 KMX-4911
●	●	●	●		●

Graphical layout elements (UMDs, audio monitors, etc.) and video monitors can be made to span across multiple heads, on up to 4 displays, portrait or landscape, in any combination. On displays that fit perfectly side by side, this gives the impression of having one large screen. When any layout element is spanned across displays, an icon automatically appears in the top right corner.

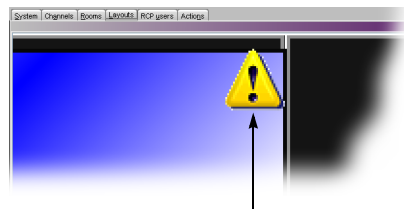

Warning icon appears even if monitor is one pixel over the edge

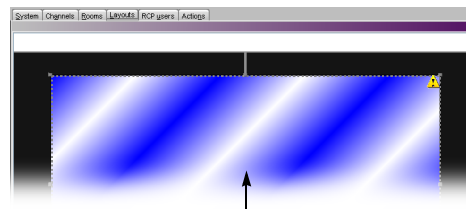

Video monitor spanned over two displays with warning icon in top right corner

To avoid pixel cropping on spanned monitors, you must position room displays so that there is no gap between them. Use XEdit's **Remove horizontal space** and/or **Remove vertical space** buttons to make sure your displays are perfectly positioned for spanning.

You must also ensure that each display has the same pixel-per-inch (or -per-mm) ratio, calculated as horizontal resolution (pixels) divided by display width (inches or mm) and vertical resolution divided by display height. Ideally, you should use displays that have the same physical size and resolution.

The figure below shows two displays properly sized and positioned for monitor spanning.

System Channels/Sources Destinations Rooms Layouts RCP users Actions

Display 1
OUTPUT A, Head 1

Display 2
OUTPUT A, Head 2

Assignment

Output head

Layer 2 head (for cascade configuration)

Layer 3 head (for cascade configuration)

OUTPUT A, Head 1

Unassigned

Unassigned

Size & Position

Default DVIRGBHV resolution

Use detected monitor resolution

SDI Resolution

Aspect ratio

Diagonal size

Height

Width

Rotation

Position

VESA 1600x1200 @60Hz

☒

Interlaced

4:3

1000 mm

600 mm

800 mm

normal

[x=0, y=0]

Assignment

Output head

Layer 2 head (for cascade configuration)

Layer 3 head (for cascade configuration)

OUTPUT A, Head 2

Unassigned

Unassigned

Size & Position

Default DVIRGBHV resolution

Use detected monitor resolution

SDI Resolution

Aspect ratio

Diagonal size

Height

Width

Rotation

Position

1366x768 @60Hz

☒

Interlaced

16:9

784 mm

384 mm

683 mm

normal


[x=802, y=0]

Horizontal: 1600 pixels ÷ 800 mm = 2 pixels/mm
Vertical: 1200 pixels ÷ 600 mm = 2 pixels/mm

Horizontal: 1366 pixels ÷ 683 mm = 2 pixels/mm
Vertical: 768 pixels ÷ 384 mm = 2 pixels/mm

Notes

- In the case of KMV-3901/3911 and Kaleido-XQUAD multiviewers, which support a maximum of eight video monitors over two displays, a spanned video monitor counts as two (i.e., if you have one spanned video monitor, you can only add six other video monitors to your layout; if you span two video monitors, you can add only four other video monitors).
- Monitors can extend outside the edge of a display, but not completely.
- The use of a mouse is not completely supported with spanned video monitors.
- Do not span a layout element beyond a maximum of 3000×1800 pixels. When spanning or scaling video monitors in a layout, avoid heavy cropping settings (generally avoid exceeding 15% in any direction).

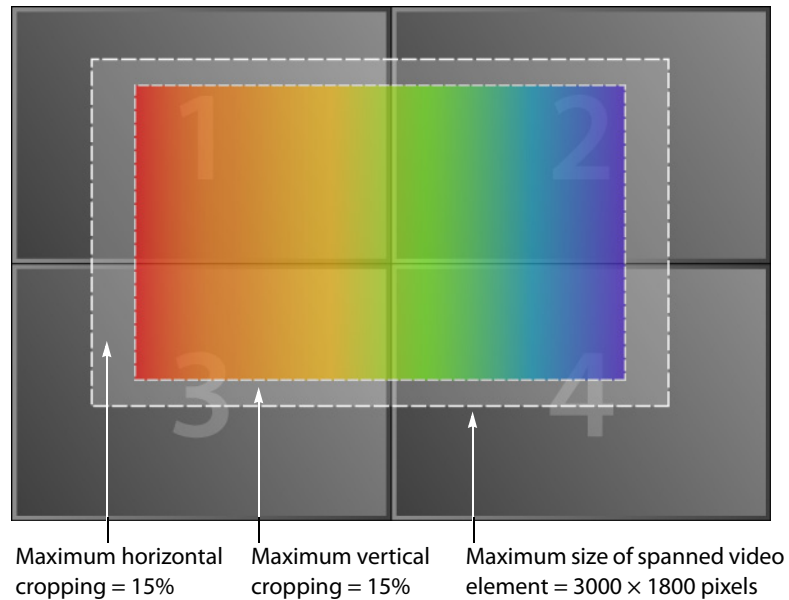

4K UHD Spanning

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-MX Series 4K Kaleido-Modular-X 4K	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
	●				● ^a

a. Multiviewers to be configured for a 4K UHD room only.

Kaleido-MX, and Kaleido-Modular-X multiviewers support seamless 4K UHD output, to either four 1080p borderless displays, or a single quad link 4K UHD display. Kaleido-MX 4K, KMX-3921, and KMX-49N1 multiviewers support seamless 4K UHD output to a single HDMI 2.0 4K UHD display. For best results, avoid spanning layout elements across multiple heads. For example, a layout with 9 or 25 monitors positioned as a 3×3 or 5×5 grid will require more processing.

If you must use a layout with composite monitors spanning multiple heads, make sure that graphical elements such as time code monitors and audio monitors, within the composites, are placed in a way that they do not straddle head boundaries.

In the case of a Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X, you should also make sure that any video windows horizontally straddling head boundaries have at least ¼ of their width on either side.

See [Creating a 4K UHD Room](#) on page 193, [Creating 4K UHD Upscale Layouts](#), on page 229, and [Creating Layouts to Monitor 4K UHD Quad Link Sources](#), on page 230.

Notes

- Kaleido-MX and Kaleido-Modular-X configured for 4K UHD output, and Kaleido-MX 4K do not support the *overscan mode* for video windows spanned across multiple heads (see [Cropping Mode](#) on page 220).
 - KMX-3921, KMX-49N1, Kaleido-MX and Kaleido-Modular-X configured for 4K UHD output, and Kaleido-MX 4K do not support *detail enhancement* for video windows spanned across multiple heads (see [Detail enhancer](#) on page 109).
 - Kaleido-MX and Kaleido-Modular-X configured for 4K UHD output to a *single quad link 4K UHD display*, and Kaleido-MX 4K do not support spanning SD or 720p sources across multiple heads.
 - 4K UHD spanning is not supported for *sources that are not referenced* within the multiviewer system.
-

Managing Layouts


Note: Before creating or modifying a layout for a Kaleido-IP system, review the guidelines listed in *Network Considerations* in the multiviewer's *Installation & Service Manual* for more information.

Opening Layouts

To open an existing layout


- 1 Click the **Layouts** tab.
- 2 On the **File** menu, click **Open**. Alternatively, click the toolbar's Open button .

The **Open Layout** window appears.

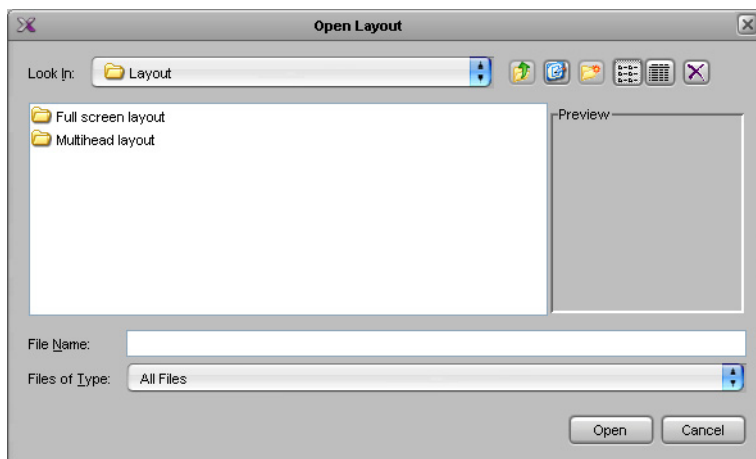


- Double-click **Full screen layout**, to open a full screen layout.
- Double-click **Multihead layout**, to open a room layout.

- 3 Double-click the appropriate room.

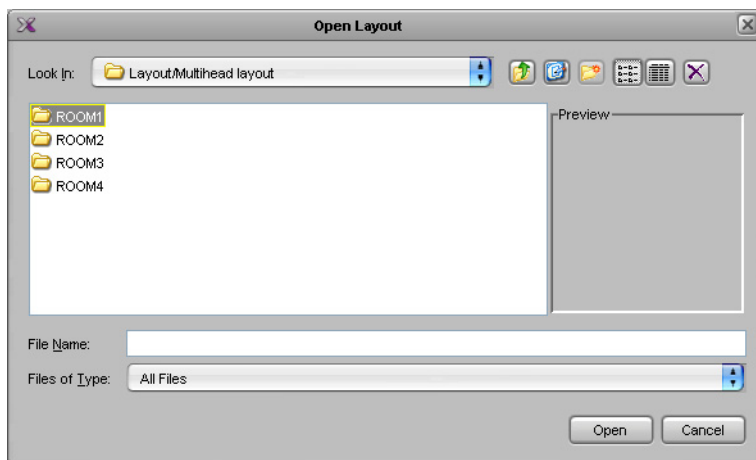


- 4 Click the layout you want to open.

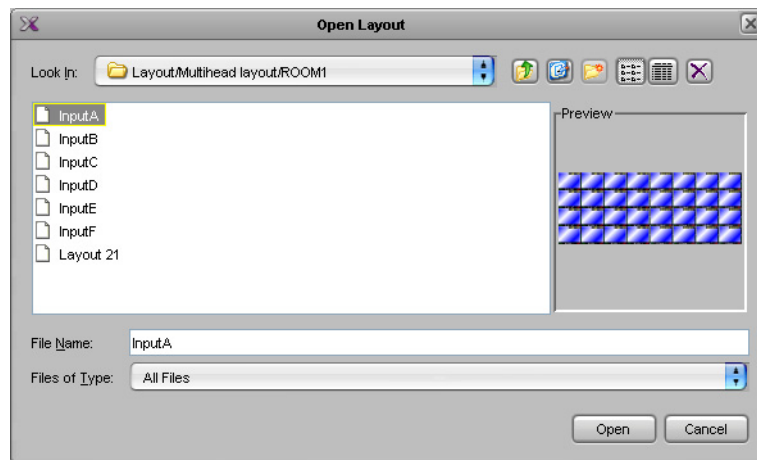

5 If you want to open multiple layouts in a single operation, extend your selection by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts.


6 Click **Open**.

The selected layouts appear in the **Layouts** tab.

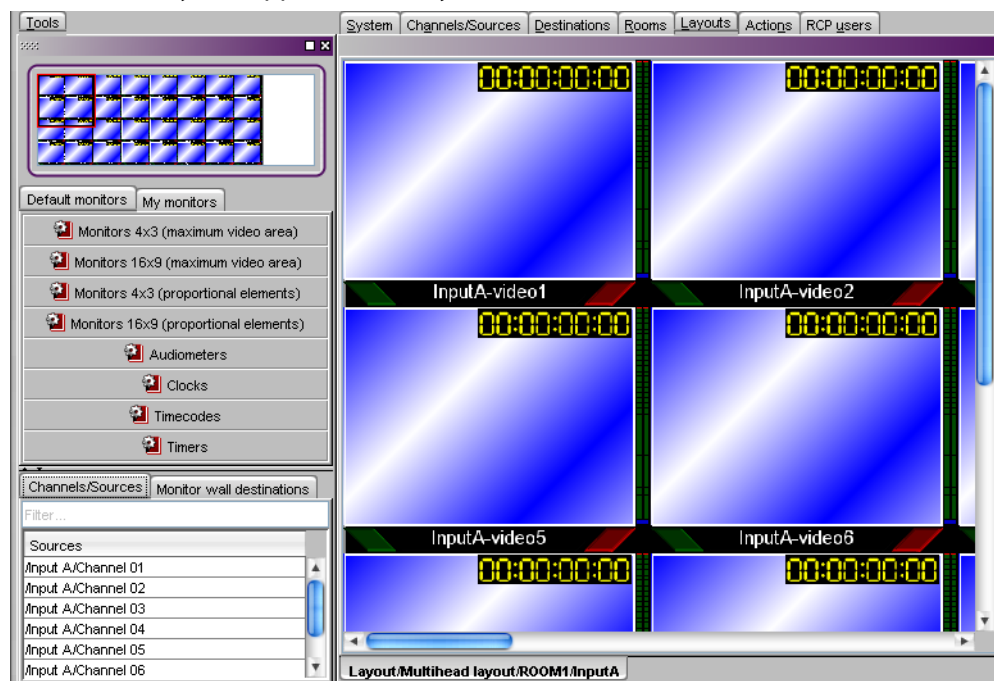

TIP


When you have opened more than one layout, you can switch from one to another by clicking the tabs at the bottom of the window.

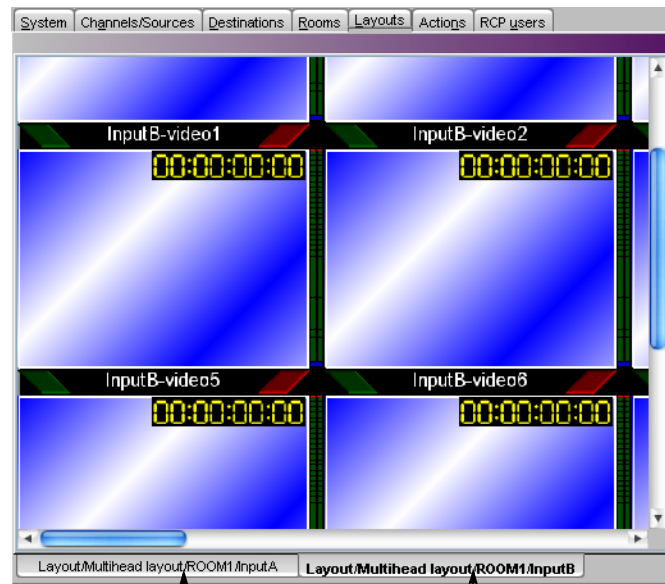

Loading a Layout on the Monitor Wall

To load the current layout on the monitor wall, directly from XEdit, in online mode

- Click **LOAD** button on the toolbar.

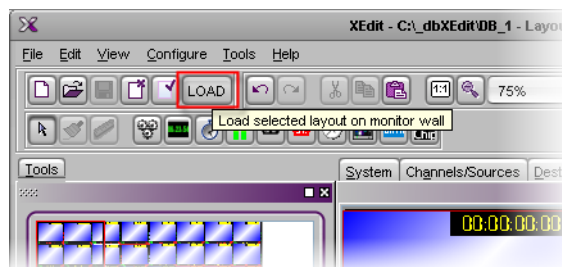

The current layout appears on the monitor wall.

Closing Layouts

To close the current layout

- On the **File** menu, click **Close**. Alternatively, click the toolbar's Close button .


Creating Room Layouts

To create a room layout

- 1 Click the **Layouts** tab in the main window.
- 2 On the **File** menu, click **New**.

The **Create a New Layout** window appears. It lists all the existing rooms and full screen zones in your system.


- 3 Click the name of the room where this layout will be displayed.

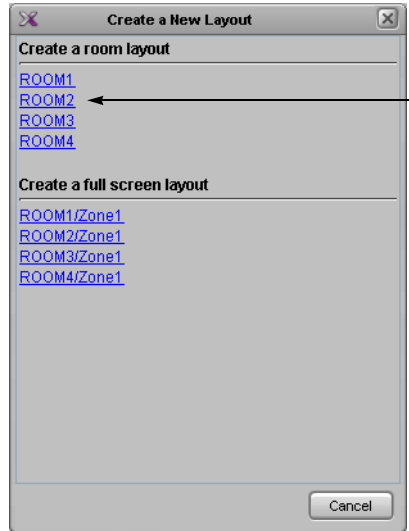

An empty layout appears.

- 4 Add at least one monitor to the layout (see [Adding Monitors to a Layout](#) on page 240).
- 5 Assign every monitor a logical source (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).
- 6 On the **File** menu, click **Save**.

The **Save Layout** window appears.

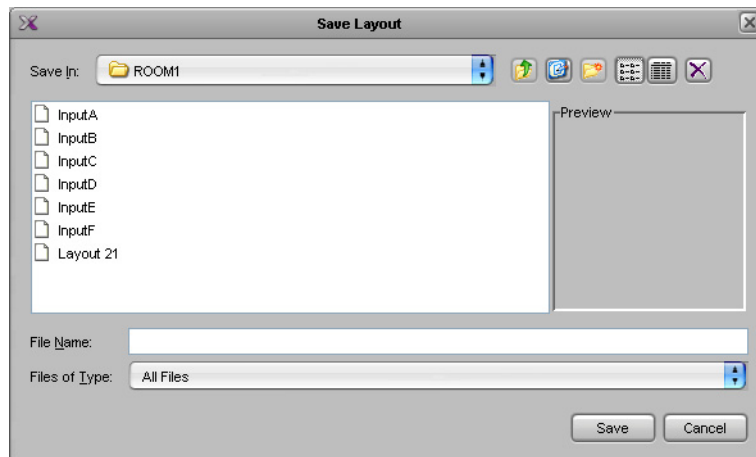

- 7 Type a name for the layout, and then click **Save**.

Creating 4K UHD Upscale Layouts

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911



This section explains how to create a layout, to monitor an HD source (1080i, 1080p, or 720p) upscaled to 4K UHD. You must have first created your 4K UHD room (see [Creating a 4K UHD Room](#) on page 193).


- To configure a layout you might use to monitor a 4K UHD quad link (square division) source in a 4K UHD room, see [Creating Layouts to Monitor 4K UHD Quad Link Sources](#), on page 230.
- To configure a regular layout, see [Creating Room Layouts](#), on page 227.
- To configure a layout for a full screen zone, see [Creating Full Screen Layouts](#), on page 233.

To create a 4K UHD upscale layout

- 1 Click the **Layouts** tab in the main window.
- 2 On the **File** menu, click **New**.


The **Create a New Layout** window appears. It lists all the existing rooms and full screen zones in your system.

- 3 Click the name of the 4K UHD room where this layout will be displayed.

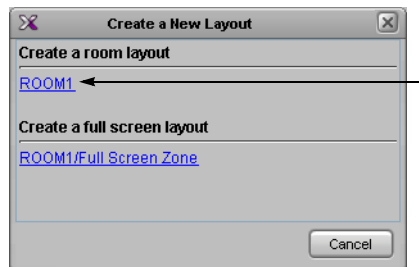


An empty layout appears.

- 4 Add a *single video monitor* to the layout (see [Adding Monitors to a Layout](#) on page 240), and make it span the *entire area* of the four room displays.
- 5 Verify the dimensions and position of the monitor by switching to the expert view:
 - a Click the **View filters** button at the top of the **Properties** pane, and then select the **Expert view** check box.

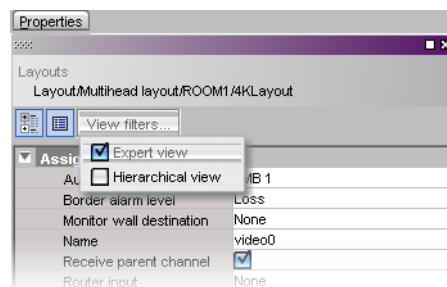

- b Open the region editor, and set the monitor's position to Left = 0, Right = 0, and its dimensions to Width = 200%, Height = 200% (see [Using the Region Editor](#) on page 314).

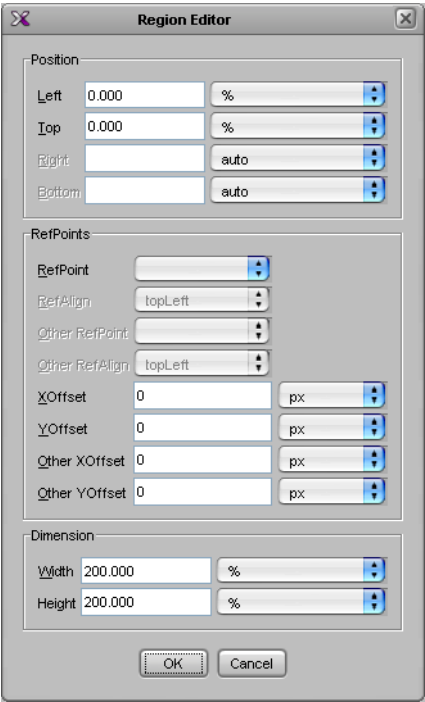

- c Click OK to close the region editor.
- 6 Assign the monitor a logical source (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).
- 7 On the **File** menu, click **Save**.
The **Save Layout** window appears.
- 8 Type a name for the layout, and then click **Save**.

Creating Layouts to Monitor 4K UHD Quad Link Sources

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●				●

This section explains how to create a layout, to monitor a 4K UHD quad link (square division) source in a 4K UHD room. You must have first created your 4K UHD room (see [Creating a 4K UHD Room](#) on page 193). If there are two 4K UHD quad link sources connected to your multiviewer’s inputs, you will need to use a router control application or device configured with salvos to change the source assignments.


- To configure a layout you might use to monitor an HD source (1080i, 1080p, or 720p) upscaled to 4K UHD, see [Creating 4K UHD Upscale Layouts](#), on page 229.
- To configure a regular layout, see [Creating Room Layouts](#), on page 227.
- To configure a layout for a full screen zone, see [Creating Full Screen Layouts](#), on page 233.

To create a layout to monitor a 4K UHD quad link source

- 1 Click the **Layouts** tab in the main window.
- 2 On the **File** menu, click **New**.


The **Create a New Layout** window appears. It lists all the existing rooms and full screen zones in your system.

- 3 Click the name of the 4K UHD room where this layout will be displayed.

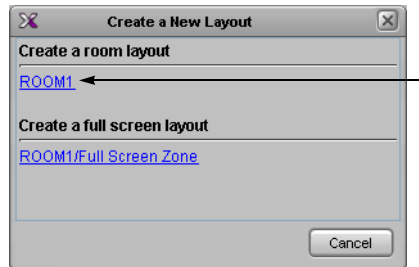


An empty layout appears.


- 4 Add a *video monitor* to the layout (see [Adding Monitors to a Layout](#) on page 240), and make it span the *entire area* of one room display, by switching to the expert view:
 - a Click the **View filters** button at the top of the **Properties** pane, and then select the **Expert view** check box.

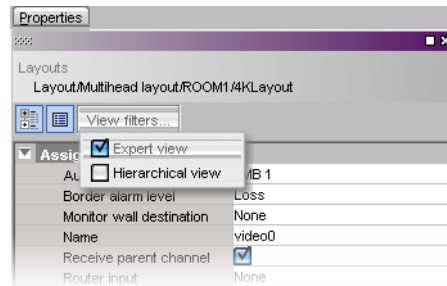

- b Open the region editor, and set the monitor's position to Left = 0, Right = 0, and its dimensions to Width = 100%, Height = 100% (see [Using the Region Editor](#) on page 314).

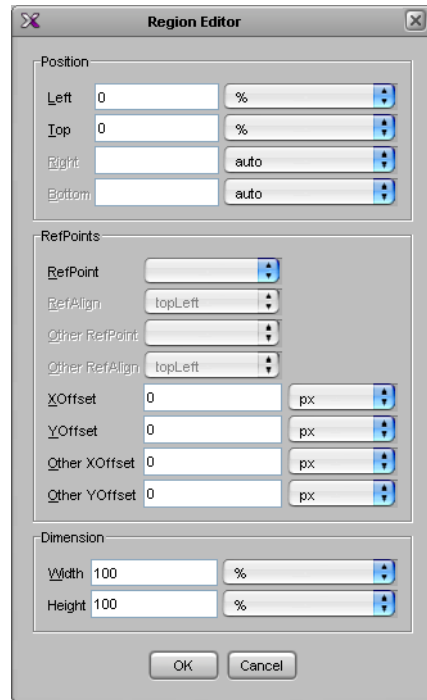

- c Click OK to close the region editor.
- d With the monitor still selected in the main pane, remove the preconfigured borders, at least for the *Normal/OK* alarm state, by clicking the **Border thickness – Normal/OK thickness** box, and then selecting “0” from the list.

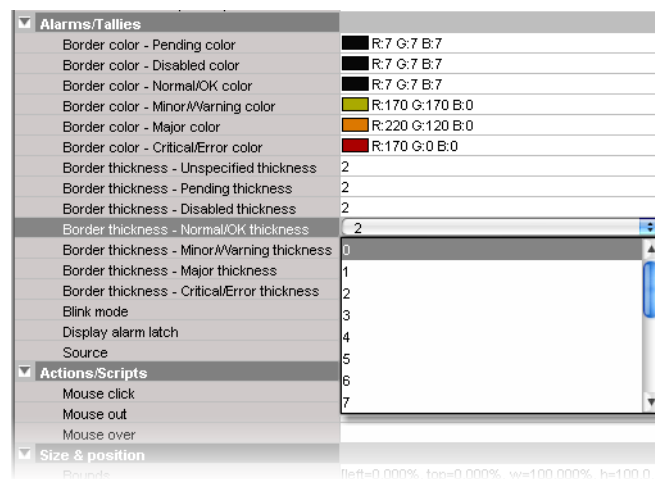

- 5 Add three more video monitors to the layout in the same fashion.

Note: Each video monitor must span an entire room display. This is the only supported configuration for monitoring 4K UHD sources on a 4K UHD display.


- 6 Assign each monitor the logical source associated with the matching quadrant (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).

- 7 Also assign each monitor the monitor wall destination you will use when making crosspoint changes, if needed.
- 8 On the **File** menu, click **Save**.
The **Save Layout** window appears.
- 9 Type a name for the layout, and then click **Save**.

Creating Full Screen Layouts


To create a full screen layout

- 1 Click the **Layouts** tab in the main window.
- 2 On the **File** menu, click **New**.
The **Create a New Layout** window appears. It lists all the existing rooms and full screen zones in your system.
- 3 Click the name of the full screen zone in which this layout will be displayed.

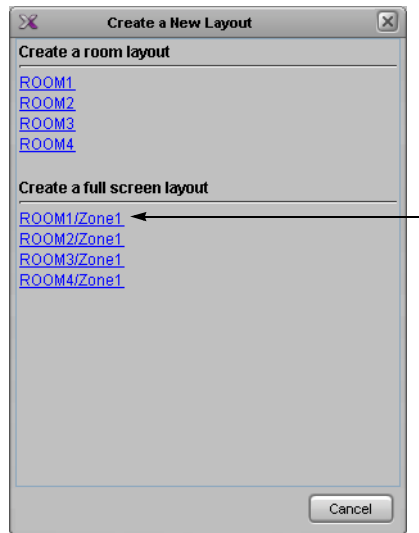

An empty layout area appears.

- 4 Add at least one monitor to the layout (see [Adding Monitors to a Layout](#) on page 240).
If the full screen layout includes more than one composite monitor, you can designate one of them who will receive its source assignments from the monitor under the mouse pointer on the monitor wall, by selecting the **Full screen layout monitor** option in the **Properties** pane.

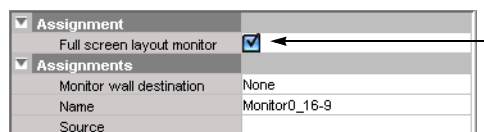

Make the appropriate assignments for the other elements in the layout (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).


- 5 On the **File** menu, click **Save**.
The **Save Layout** window appears.
- 6 Type a name for the full screen layout, and then click **Save**.

Deleting Layouts


Deleting an open layout

To delete an open layout

- 1 If you have opened more than one layout (see [Opening Layouts](#) on page 225), select the layout you want to delete by clicking the appropriate tab at the bottom of the window.

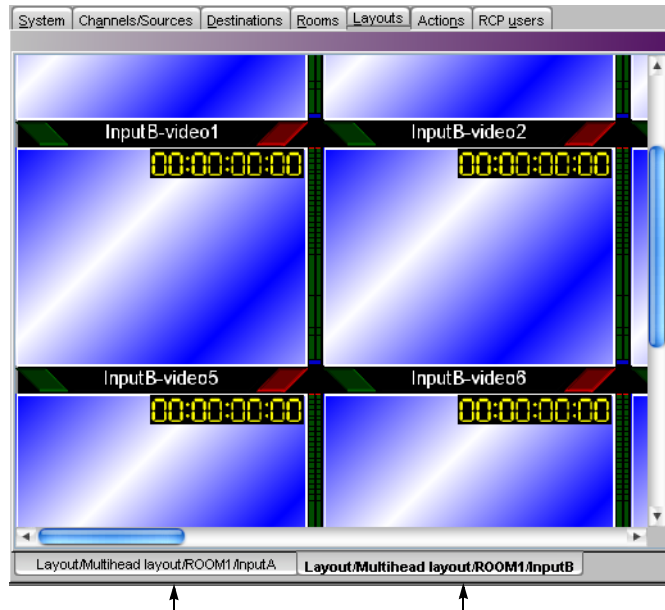

- 2 On the **File** menu, click **Delete**.
The system prompts you to confirm.

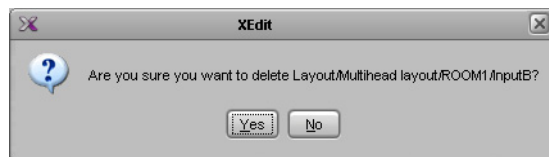


- 3 Click **Yes** to proceed.
The layout is removed from your system configuration.

Deleting layouts from the Open Layout window


To delete layouts from the Open Layout window

- 1 Click the **Layouts** tab.
- 2 On the **File** menu, click **Open**. Alternatively, click the toolbar's Open button .
The **Open Layout** window appears.

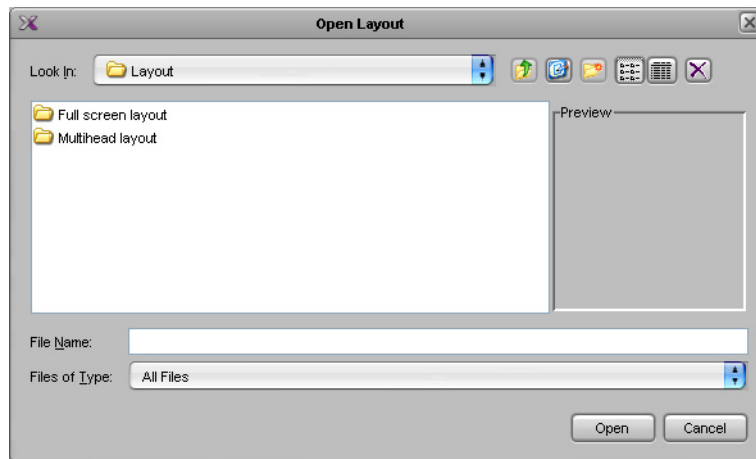


- Double-click **Full screen layout**, to delete a full screen layout.
- Double-click **Multihead layout**, to delete a room layout.

3 Double-click the appropriate room.

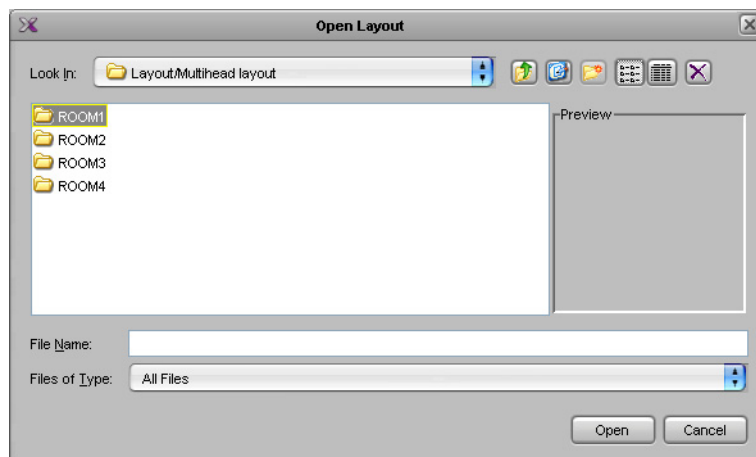


The layouts associated with the selected room appear.

4 Click the layout you want to delete.

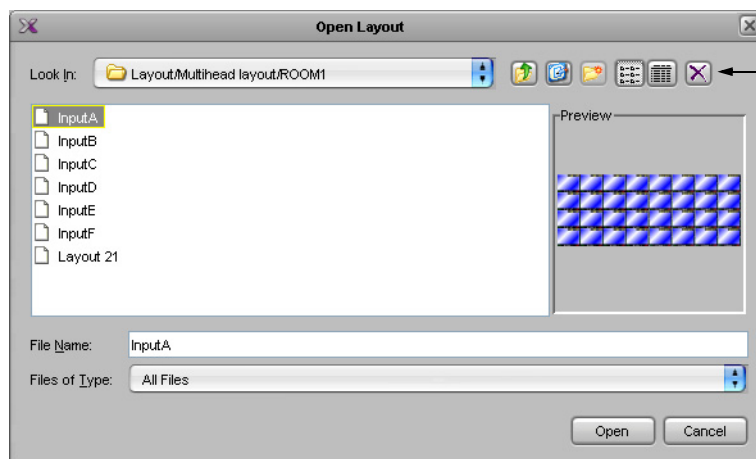

- 5 If you want to delete multiple layouts in a single operation, extend your selection by using the multi-selection Shift+click or Ctrl+click keyboard shortcuts.
- 6 Click the Delete button  on the toolbar.
The system prompts you to confirm.

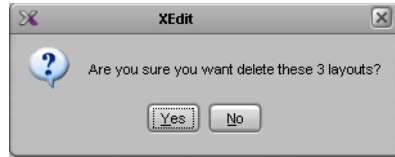


- 7 Click **Yes** to proceed.
The selected layouts are removed from your system configuration.
- 8 Click **Cancel** to close the **Open Layout** window.


Copying Layouts

To copy a layout


- 1 Open the layout you want to duplicate.
- 2 On the **File** menu, click **Copy layout to**, point to the appropriate room, and then either select an existing layout from the list, or click **Empty layout**.

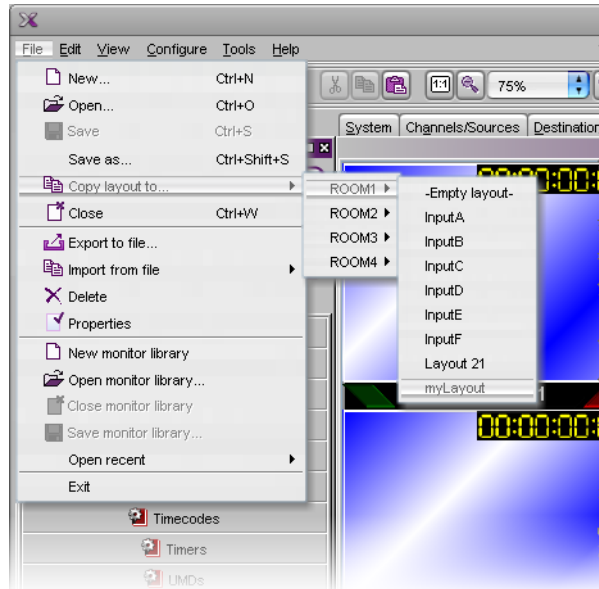

A two-pane window appears. The left pane represents the source layout, and the right pane represents the destination layout.

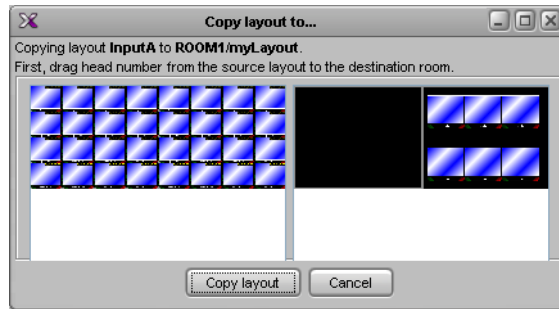

- 3 Drag one head from the source pane to the destination pane.

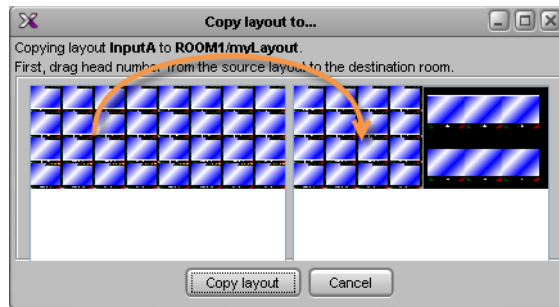


- 4 Repeat until every part of the source layout you want to copy has been dragged onto the appropriate head in the destination pane, and then click **Copy layout**.
 - If you selected an existing layout as your destination layout, the updated destination layout is automatically saved, and appears in the **Layouts** tab.
 - If you selected **Empty layout** as your destination layout, the **Save Layout** window appears.
 - In **Save Layout**, type a name for the new layout, and then click **Save**.
Alternatively, you can replace an existing layout with the new layout.

Rearranging Layouts Across Displays


In a room layout, the parts that cover the room displays can be managed separately. You can consider each of these parts as a *display layout* (see [Display layout](#) on page 217). In some situations, you might want to move these parts around, within a room layout, or from one room layout to another. The following procedure describes how to swap two display layouts.

To rearrange a layout


- 1 Open the layout you want to rearrange (see [Opening Layouts](#) on page 225).
- 2 On the **File** menu, click **Copy layout to**, point to the appropriate room, and then click the name of the current layout (i.e., the layout you want to rearrange).

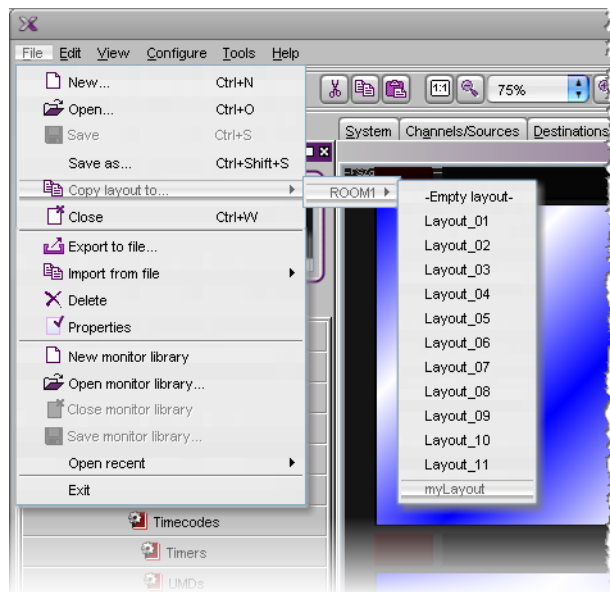


A two-pane window appears. The left pane represents the source layout, and the right pane represents the destination layout.

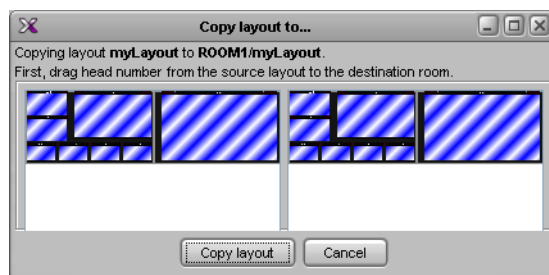

- 3 Drag one head from the source pane to a head in the destination pane.

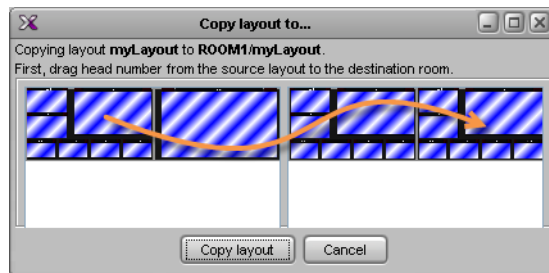

- 4 Repeat until every part of the source layout you want to copy has been dragged to the appropriate head in the destination pane, and then click **Copy layout**.

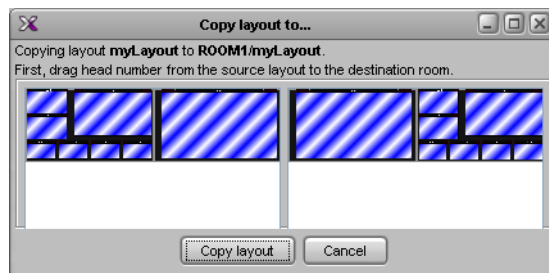

Your rearranged layout is automatically saved, and appears in the **Layouts** tab.

Exporting Layouts


To export a room layout

- 1 Open the room layout you want to export (see [Opening Layouts](#) on page 225).

Note: XEdit does not support exporting full screen layouts.

If you have opened more than one layout, select the layout you want to export by clicking the appropriate tab at the bottom of the window.

- 2 On the **File** menu, click **Export to file**.

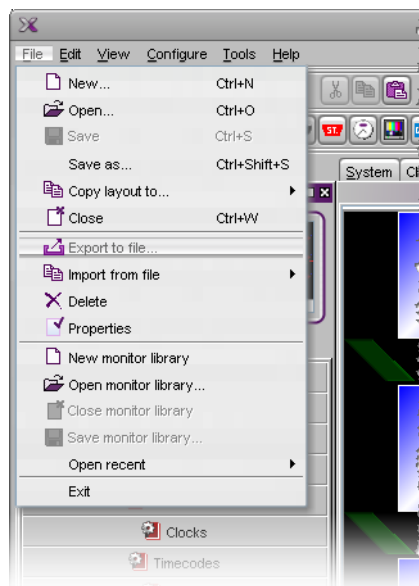

The **Export to File** window opens.

- 3 Navigate to the location where you want to save the layout file, change the file name, if necessary, and then click **Save**.


The layout is saved to your file system as a Kaleido Room Layout (KRL) file. You can use this file as a backup, or reuse it by importing it to another room or to another system.

Note: Logical source and monitor wall destination assignment are not exported.

Importing Layouts

To import a layout

- 1 On the **File** menu, point to **Import from file**, and then click the room into which you want to import the layout.

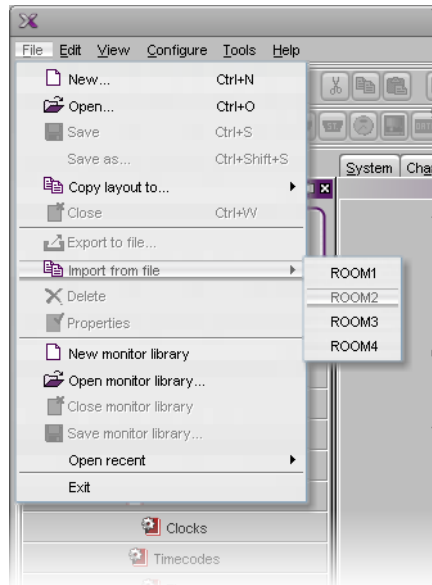

The **Import from File to Room** window opens.

- 2 Navigate to the Kaleido Room Layout (KRL) file you want to import, click it, and then click **Open**.

The layout appears in the **Layouts** tab.

If the number of displays in the target room (or their position), does not match the original room configuration, the imported layout is mapped to the target room's display areas, on a best effort basis. Layout elements associated with Display 1 in the originating room, appear on Display 1 in the target room, elements from Display 2 appear on the target room's Display 2 area, and so on.

- 3 Rearrange the different parts of your layout across the display areas, if needed (see [Rearranging Layouts Across Displays](#) on page 237).
- 4 Assign logical sources and monitor wall destinations to the monitors, if necessary (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).
- 5 On the **File** menu, click **Save** to add the layout to the selected room.

Alternatively, use **Save as**, to save the layout under a different name.

Adding Monitors to a Layout

Monitor Limitations in a Layout

Notes

- When adding monitors to a layout, avoid overlapping graphical layout elements with one another. For example, making sure that there be no overlap between UMDs and audio monitors in a layout will ensure optimal performance.
- Before creating or modifying a layout for a **Kaleido-IP** system, review the guidelines listed in *Network Considerations* in the multiviewer's *Installation & Service Manual* for more information.

Notes (*continued*)

- In the case of a **KMV-3901/3911** or **Kaleido-XQUAD** multiviewer, layouts are subject to the following limitations:
 - up to eight video monitors over two displays (overlapping is not supported),
 - up to four stereo audio level meters per video monitor,
 - one time code per video monitor,
 - only digital clocks are supported,
 - XDS metadata monitors are not supported.
 - In the case of the **Kaleido-X**, **Kaleido-X16**, and **Kaleido-IP** multiviewers, every *output head* supports up to 64 video monitors, across both the current layout and a full screen layout when used.
 - In the case of a **Kaleido-X** or **Kaleido-X16**, the minimum *width* supported for a video window is 1/16th of the original signal's *horizontal* resolution.
 - In the case of a **Kaleido-X**, the minimum *height* supported for a video window is 91 pixels.
 - In the case of a **Kaleido-MX**, **Kaleido-MX 4K**, or **Kaleido-Modular-X** multiviewer, every *output head* supports up to 64 video monitors. However, if every monitor is associated with audio meters and a time code monitor, then the maximum is 24 video windows per output head. If a layout is used to monitor color teletext, then it should be limited to 16 windows per output head. The image can be scaled down to 1/8 of the original signal's resolution. The minimum width supported for a video window is 128 pixels.
 - In the case of a **KMX-3921 / KMX-49N1** multiviewer, the maximum number of video monitors supported in a layout is the number of physical inputs of the specific KMX-3921 / KMX-49N1 model. Video windows must not exceed 1920 × 1080 pixels.
Best practice: For full flexibility, assign your logical sources to *no more than one* monitor each, in a layout. On the monitor wall, manage source assignments through the GV Node's built-in router.
-

To add monitors to a layout

- 1 Drag components from the monitor libraries onto the layout, or create custom components, using the toolbar buttons ().

Note: All open monitor libraries appear on the **Tools** pane. See [Monitor library](#) on page 219.

- 2 Resize, move and configure the monitors until you achieve the layout you want.
 For detailed configuration instructions on the different monitor types, see:
 - [Configuring Video Monitors](#), on page 249
 - [Configuring Audio Monitors](#), on page 265
 - [Configuring Loudness Monitors](#), on page 268
 - [Configuring Time Code Monitors](#), on page 274
 - [Configuring Timers](#), on page 276

- [Configuring UMDs](#), on page 282
- [Configuring Alarm Monitors](#), on page 290
- [Configuring Subtitling Monitors](#), on page 294
- [Configuring Metadata Monitors](#), on page 299
- [Configuring V-Chip Monitors](#), on page 301
- [Configuring Clocks](#), on page 303
- [Working with Composite Monitors](#), on page 308
- [Managing Monitor Libraries](#), on page 318

Removing Monitors

To remove a monitor from a layout

- Click the monitor you want to remove, and then press Delete on your keyboard.

TIP

To remove multiple monitors in a single operation, extend your selection by using the standard Ctrl+click keyboard shortcut.

Duplicating Monitors

To duplicate a monitor within a layout


- 1 Click the monitor you want to duplicate.
- 2 On the **Edit** menu, click **Duplicate**. Alternatively, press Ctrl+D.
A copy of the monitor is added to the layout.
- 3 Move the new monitor to the appropriate position on the layout.
- 4 Press Ctrl+D again, and repeat until the number of copies of the monitor are added to the layout.

The new copies are automatically positioned at intervals matching the relative positions of the original monitor and its first duplicate.

Assigning Logical Sources or Monitor Wall Destinations to Monitors

When you load a layout to the monitor wall, monitors that are not configured with a logical source assignment may be blank (until you manually set the assignment) but, if a monitor was configured as a monitor wall destination, then it will remember its last source assignment (if any). Keep in mind that, if two monitors are assigned the *same* monitor wall destination, they will both reflect source assignments made to any of them during operation. You may want to keep track of already assigned monitor wall destinations, if this is something you want to avoid, and carefully review any layouts you create or modify based on elements from other layouts.

The **Tools** pane includes lists from which you can make assignments by dragging logical sources and monitor wall destinations onto monitors (you do not need to select the monitor first).

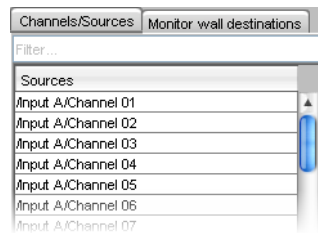


To assign a logical source to a monitor

- Select a logical source from the **Channels/Sources** list, on the **Tools** pane, and then drag it onto the appropriate monitor.

To assign a monitor wall destination to a monitor

- Select a destination from the **Monitor wall destinations** list, on the **Tools** pane, and then drag it onto the appropriate monitor.


Type in the filter box located above the **Channels/Sources**, and **Monitor wall destinations** lists, to hide sources or destinations that do not match the filter text or regular expression.

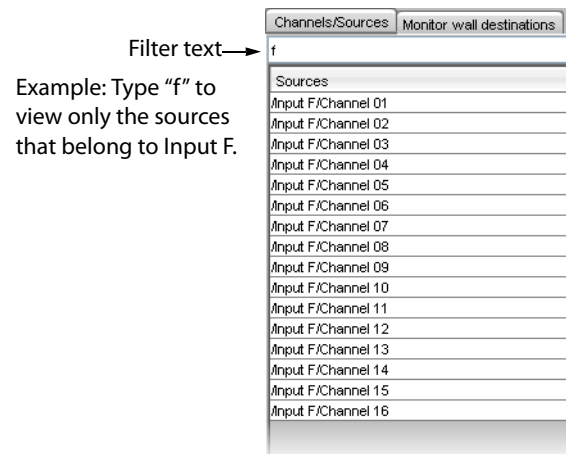

When assigning logical sources or monitor wall destinations to monitors in a layout, it may happen that the selection migrates to an adjacent element from the **Channels/Sources** or **Monitor wall destinations** list during the drag-and-drop operation. Once you selected a logical source or monitor wall destination from the corresponding list, dragging the selected element horizontally until the pointer exits the **Tools** pane, or performing a slower drag-and-drop may help.

To assign different monitor wall destinations to *individual* components within a composite monitor

- 1 Click the composite monitor.
The current assignments for this composite appear in the **Properties** pane.
- 2 Make sure **Monitor wall destination** is set to *None*.

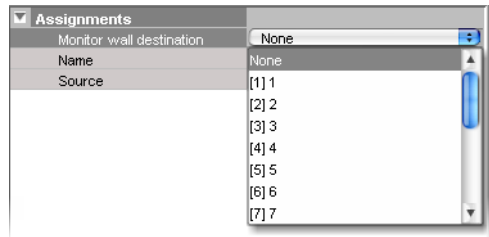

- 3 Double-click the composite monitor to unlock it.
- 4 Click a component you want to configure as a monitor wall destination, within the unlocked composite.
- 5 In the **Properties** pane, click the **Monitor wall destination** box, and then select the appropriate destination from the list.
- 6 Repeat from [step 4](#) until you have made the required assignments for this composite.
- 7 Click outside the composite monitor to lock it.

Automatically Populating a Grid-Type Layout

Use the *Auto-layout* tool to quickly create a layout containing a grid of up to 256 identical composites. To use the *Auto-layout* tool, you first add a monitor to the layout. This first monitor is resized and replicated until the grid area is populated with the specified number of monitors, spread over the area delimited by the upper left corner of the current monitor and the bottom right corner of the current head.

By assigning a channel or a Monitor Wall Destination to the first monitor, the channel number or monitor wall destination number will automatically increment as each monitor is added to the layout. If the current number of channels (as set in the **Channels/Sources** tab, see [Creating and Configuring Logical Sources](#), on page 90) is insufficient for the number of monitors to be created by auto-layout, the remaining monitors will use the last available channel in the list.

To automatically populate a grid-type layout

- 1 Add a first monitor to the layout (see [Adding Monitors to a Layout](#), on page 240, and [Working with Composite Monitors](#), on page 308). Assign a channel number or a Monitor Wall Destination to the first monitor. See [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#), on page 242.
- 2 Position the monitor so that its upper left corner marks the location where you want to start populating the grid.
- 3 Click the monitor, and then click the Auto-layout button  on the toolbar.
- 4 In the **Auto-Layout** window, type the total number of monitors you want to add to the layout, and then click **OK**.

Note: To undo this action, you will need to press Ctrl+Z twice: once to remove the copies, and then once more to restore the first monitor's initial size.

Selecting a Background Image for a Layout

For some purposes, you may want to display a layout's elements layered over a specific static image.


To select a background image for a layout

- 1 Click the **Layouts** tab, and open the layout whose background you want to set.
- 2 Click the display background on the layout.
- 3 In the **Properties** pane, click the **Background image** box, under **Appearance**, and then click the button that appeared at the end of the box.

The **Select Image** window appears.



- 4 If the image you want to use is not already listed in **Select Image**, then click the Open button  to open the **Browse Image** window. Locate the image, select it, and then click **Open**.

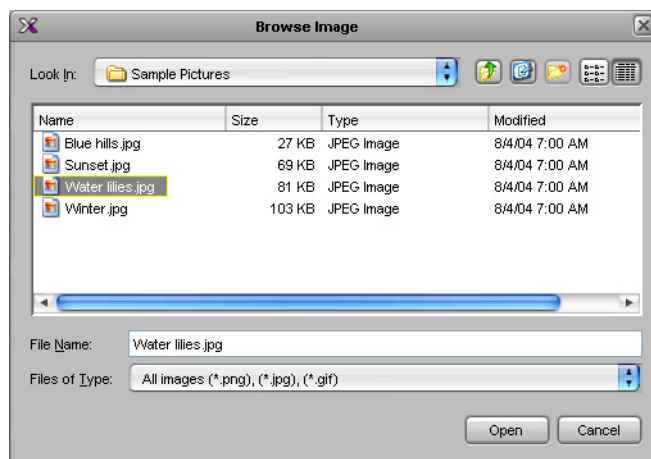


The image is imported into the database.

Notes

- The maximum size for each image is 256 KB, and the maximum overall size for all images is 10 MB. The image can be in PNG, GIF, or JPEG format. Images can be used on multiple layouts and only need to be imported to the database once.
 - With a **KMV-3901/3911** multiviewer, a layout background image in a PNG format that includes embedded metadata may fail to appear on the monitor wall. *Workaround:* Remove the metadata from the PNG image file, recreate the image without metadata, or convert the PNG file to another format such as JPEG. Freeware tools can be downloaded from the Web to remove metadata from an image.
-

- 5 In **Select image**, select the image from the **Image selection** list, and then click **OK**.

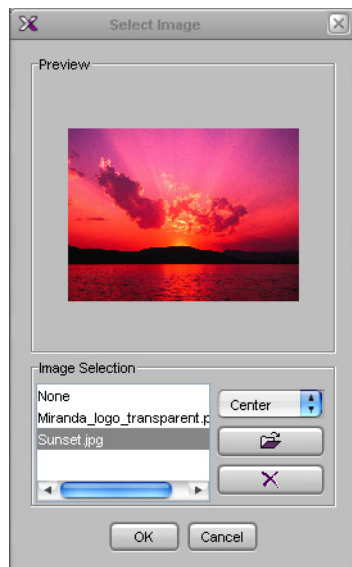

The image appears in the layout background.

Setting up a Layout for Background Keying from the DVI Input

 
This section explains how to set up a layout's background to be keyed out and replaced with content from the DVI input (see [DVI keying mode](#) on page 108).

Notes


- The Kaleido-IP, Kaleido-MX, Kaleido-MX 4K, Kaleido-Modular-X, KMV-3901/3911, and Kaleido-XQUAD multiviewers do not support DVI keying.
 - Since the DVI input cannot be resized, the resolution on the PC that feeds this input is best set to match the selected display's (head) resolution. The DVI background is always positioned from the top-left corner of the display and is drawn pixel for pixel. If the resolutions do not match, some part of the DVI input might be missing or noise might be displayed.
-

To use the DVI input as the background in a layout

- 1 Click the background of the layout.
- 2 In the **Properties** pane, click the **Background color** box, and then click the button that appears inside the box to open the color picker window.



- 3 In **Colors**, click the **RGB** tab, and then set the **Red** to 254, **Green** to 0 and **Blue** to 254.

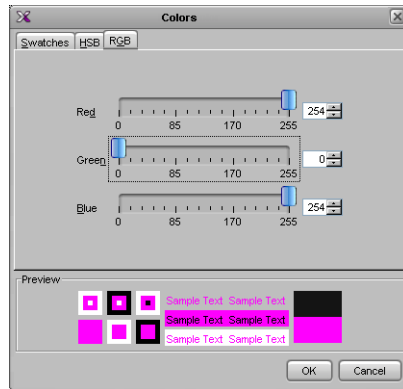

Note: Since bright pink colors matching the RGB values listed below are considered pass-through colors, and since background keying is always enabled, if a layout's background color (or any monitor's color attribute) is set to any of these RGB values, the DVI input will be displayed in the corresponding areas on the monitor wall. If there is no signal at the associated DVI input (or the multiviewer does not support DVI keying), residual data may be visible in such areas.

- **Pass-through colors:** RGB (254,0,254), (254,0,255), (254,1,254), (254,1,255), (255,0,254), (255,0,255), (255,1,254), (255,1,255)

Do not use these colors for any monitor's color attributes. A layout's background should only be set to such a color if a DVI input will be contributing the actual background for this layout on the monitor wall.

- 4 Click **OK**.
- 5 If the area you want to configure for background keying covers more than one head, repeat this procedure for the remaining heads, by clicking the corresponding areas in the layout.
- 6 On the **File** menu, click **Save**.

Zooming and Panning a View

To adjust the portion of a layout or room that is shown in the main window


- Press and hold the Ctrl key, then press the plus key (+) to zoom in or the minus key (–) to zoom out.
- Press and hold the Ctrl key, then rotate the mouse wheel to zoom in or out.
- Type the zoom factor you want to apply (in the range of 2% to 1600%) directly in the zoom box.

- Press and hold the spacebar, then click and drag to pan.
- Use the scroll bars at the right side and bottom of the **Layouts** or **Rooms** tab.
- In the case of a layout view, click and drag the layout navigator's red rectangle on the **Tools** pane.

Showing and Hiding the Layout Navigator

To show or hide the layout navigator

- On the **View** menu, click **Navigator**. Alternatively, press Ctrl+Shift+N.
The layout navigator will appear on the **Tools** pane if it was hidden, and vice versa.

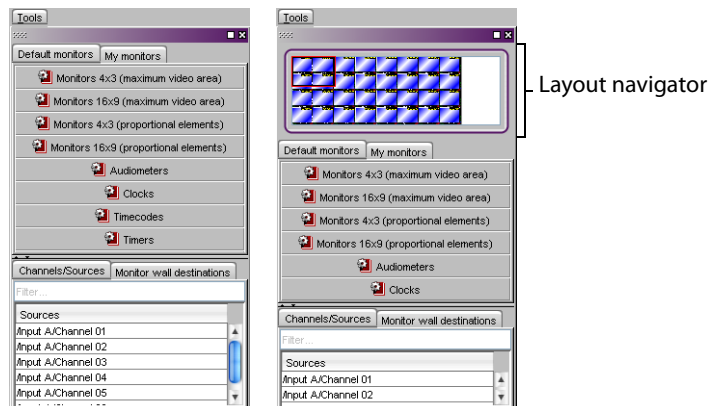

Configuring Video Monitors

In XEdit, you can configure several properties for a video monitor in a layout.

To configure a video monitor


- 1 In XEdit, click the **Layouts** tab, and then open a layout.
- 2 Unlock the appropriate composite monitor if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 3 Click the video monitor you want to configure.
- 4 To pre-assign a logical source to be monitored by default, to configure a video monitor as a monitor wall destination, or to configure reporting behaviors, see:
 - [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#), on page 242.
 - [Setting Monitored Levels for a Video Monitor](#), on page 249.
 - [Setting a Video Monitor's Text Mode](#), on page 260.
 - [Configuring a Video Monitor's Alarm Reporting Behavior](#), on page 257.
 - [Configuring a Video Monitor's Source Reporting Behavior](#), on page 258.
- 5 To configure dimensions, and resizing behavior, see:
 - [Resizing a Video Monitor](#), on page 250.
 - [Setting a Video Monitor's Aspect Ratio](#), on page 250.
 - [Adding Safe Area Markers](#), on page 251.
 - [Adding a Custom Safe Area Image](#), on page 251.
 - [Video Cropping/Zooming](#), on page 254.
 - [Configuring Automatic Aspect Ratios](#), on page 256.
- 6 Click outside the composite monitor to lock it, if applicable.
- 7 On the **File** menu, click **Save**.

Setting Monitored Levels for a Video Monitor


When a system's logical sources include more than one level under a given category, the first level is selected by default for monitoring. In the case of a video monitor, you may change the default assignments for video, audio, and alarm levels.

To change the default levels selected for a video monitor


- 1 If your system's logical sources include more than one video level (e.g., to monitor 3D stereoscopic signals), select the ones you want to monitor from the **Video level (left/mono)**, and **Video level (right)** lists.

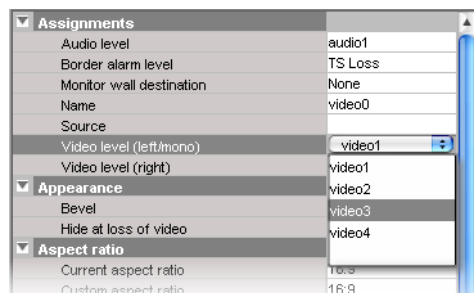

- 2 To monitor a different alarm level, or the source's global alarm, select the appropriate level from the **Border alarm level** list.

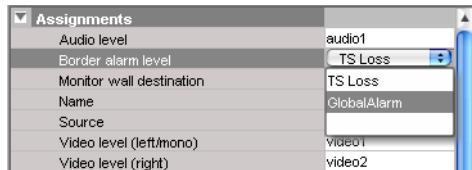

- 3 If you want the default *Monitor audio* action associated with this video monitor to use a different audio level, select a level from the **Audio level** list.

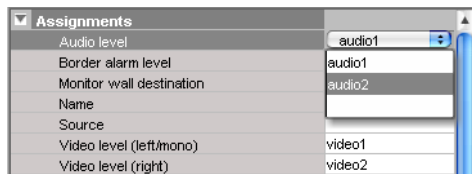

Resizing a Video Monitor


To resize a video monitor

- Drag any of the corner handles, inwards or outwards.
The video monitor, and the associated video window, will become smaller or larger, and they will both keep their aspect ratio.
- Drag any of the side handles, inwards or outwards.
The bounds of the video monitor will change, while the video window will still keep its aspect ratio.
- Change the aspect ratio property of the video monitor. See [Setting a Video Monitor's Aspect Ratio](#) below.
The video monitor will keep its bounds, and the video window will be resized to fill as much of the video monitor area as possible, given the new aspect ratio. Certain multiviewer models have limitations as to the minimum allowed monitor size. See [Monitor Limitations in a Layout](#), on page 240.

Setting a Video Monitor's Aspect Ratio

To set a video monitor's aspect ratio


- 1 Click the video monitor whose aspect ratio you want to configure.

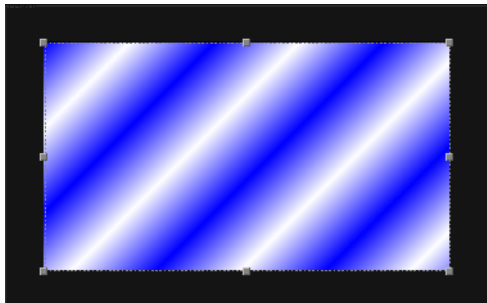


Video monitor with an aspect ratio of 16:9

Note: Double-click the video monitor, if it is part of a composite monitor.

- 2 In the **Properties** pane, click the **Current aspect ratio** box, and then select the appropriate aspect ratio from the list.

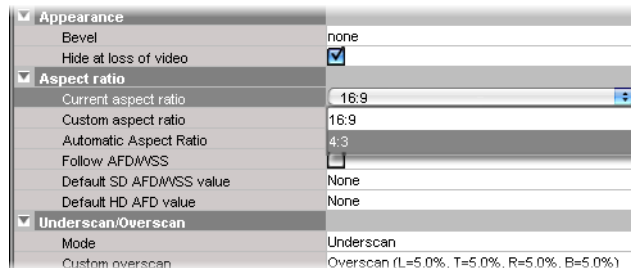

The selected aspect ratio is applied to the video window, within the video monitor.

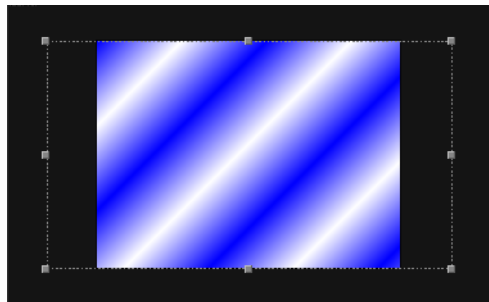

Video window's aspect ratio changed to 4:3, within a 16:9 video monitor

To set a custom aspect ratio for a video monitor

- 1 In the **Properties** pane, click the **Custom aspect ratio** box.

The box becomes editable.

- 2 Type the appropriate aspect ratio, and then press Enter.

The new aspect ratio is applied to the video window, within the video monitor, and it is added to both the **Current aspect ratio**, and **Custom aspect ratio** lists.

Note: The custom values are appended to the **Custom aspect ratio** list on an ongoing basis. They can then be applied to other monitors in other layouts. **Current aspect ratio** only lists the current custom ratio, if any, in addition to the default 16:9, and 4:3 values.

Adding Safe Area Markers

To add safe area markers for a video monitor in a layout

- In the **Properties** pane, select the appropriate options, under **Safe area markers**.

Adding a Custom Safe Area Image

XEdit allows you to superimpose an image, e.g., a brand graphics, on top of a video monitor in such a way that a video signal will show through the transparent areas in the graphics.


This is accomplished by adding a free-form safe area image to the video monitor. The image can be in PNG, GIF, or JPEG format.

Notes

- The maximum **size** for each image is 256 KB, and the maximum overall size for all images is 10 MB. Images can be used on multiple layouts and only need to be imported to the database once.
- To ensure that the **aspect ratio** of the imported image is preserved, you should position the graphics on a fully transparent background with the same aspect ratio as the video monitor on which it is to appear.
- In the case of a **cascade** system, XEdit must be connected to the multiviewer that will provide the source for the corresponding video monitor. A monitor that is not associated with a specific source is displayed by the system closest to the display.


To add a free-form safe area image to a video monitor

- 1 In the **Properties** pane, select the **Show markers** check box, under **Safe area markers**.

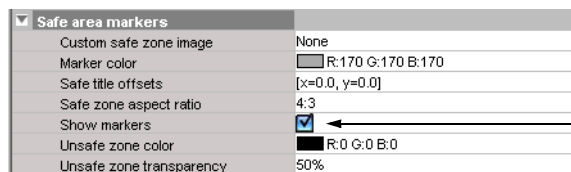

- 2 Click the **Custom safe zone image** box.


A button appears inside the box.

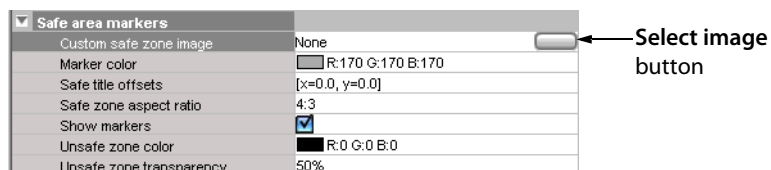

- 3 Click the button to open the **Select Image** window.




- 4 If the image you want to use is not already listed in **Select Image**, then click the Open button  to open the **Browse Image** window. Locate the image, select it, and then click **Open**.

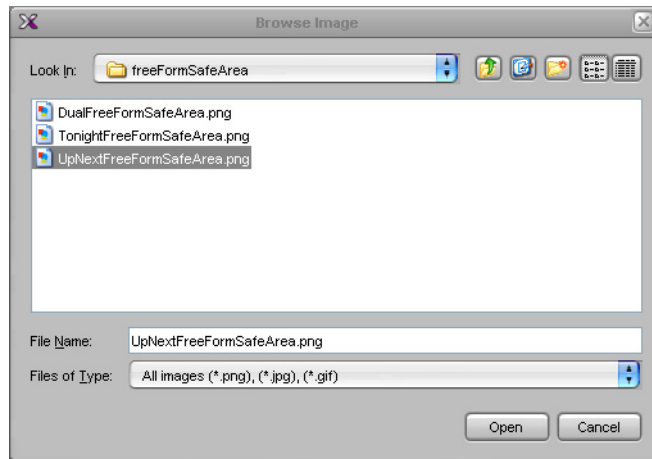


The image is imported into the database.

- 5 In **Select image**, select the image from the **Image selection** list, and then click **OK**.

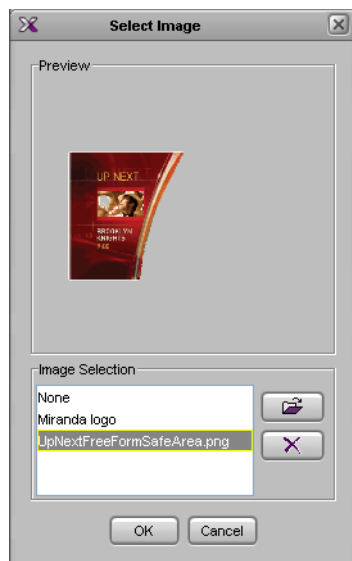

- 6 The image appears on the video monitor.

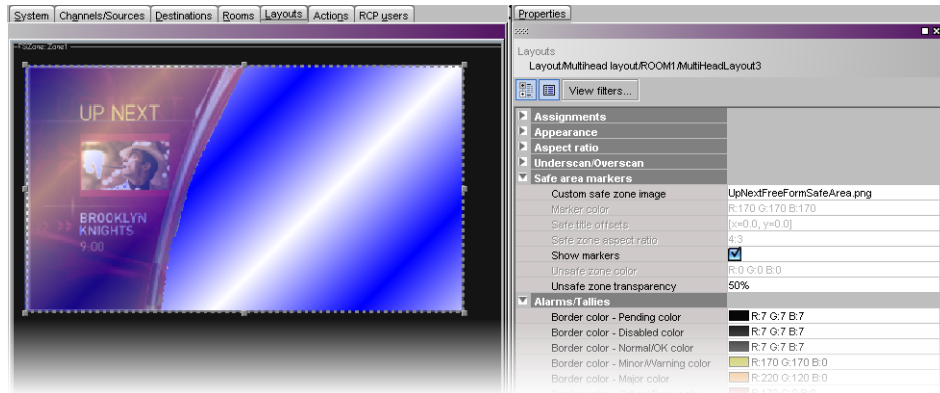

- 7 To adjust the transparency level of the image, click the **Unsafe zone transparency** box, then move the slider or type a transparency value directly in the box. At 0% the portions of the image that correspond to the unsafe area are opaque; at 100% the entire image is transparent.

Note: When a custom safe zone image is selected, the following attributes are not available: **Marker color**, **Safe title offsets**, **Safe zone aspect ratio**, and **Unsafe zone color**.


Video Cropping/Zooming

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP X320 / X120	Kaleido-IP VM	KMX-3921 KMX-4921 KMX-4911
●	●	●	●		●


Note: The Kaleido-IP VM does not support cropping and zooming.

To set the underscan/overscan properties of a video monitor


- 1 In the **Properties** pane, scroll down to the **Underscan/Overscan** section.

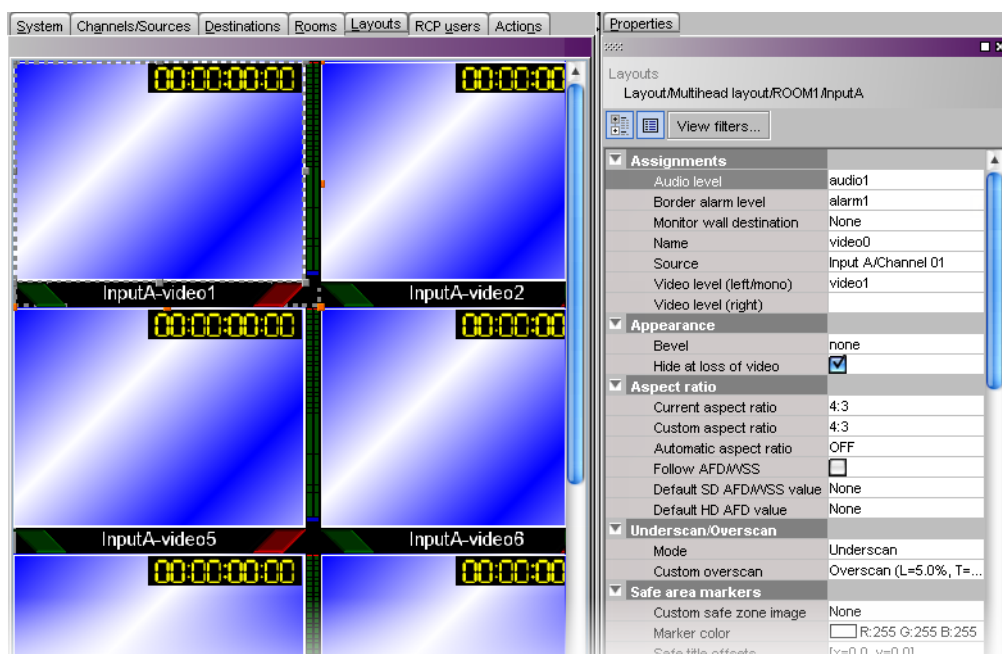


- 2 In the **Mode** list, select **Underscan** (to display the entire video signal) or **Overscan** (to display a cropped video signal).

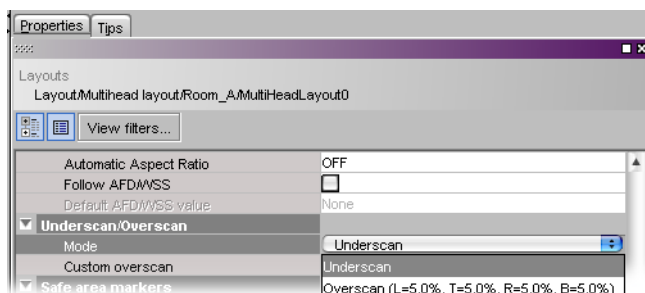

- 3 To specify custom crop settings, click in the white area to the right of **Custom overscan**, then click the button that appears.

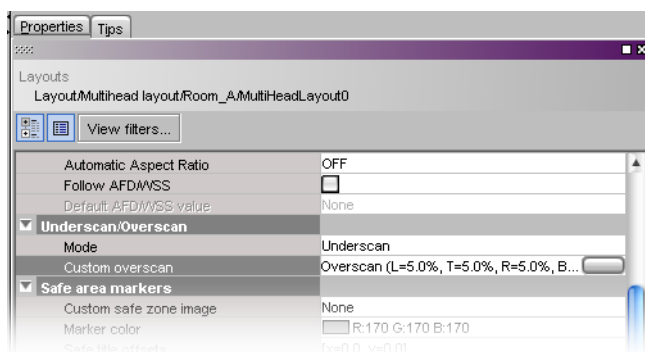

- 4 In the **Custom Overscan** window, specify new percentage values for **Left**, **Right**, **Top**, and **Bottom** overscan margins, then click **OK**.

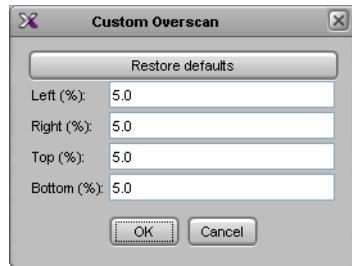


Note: Generally avoid exceeding 15% in any direction. You can click **Restore defaults** to enter the default overscan values (left, right, top and bottom = 5%). Safe title area and aspect ratio markers follow the video signal (e.g., if the safe title is within 5% of top, left, right and bottom, then when the video is in default overscan mode, the safe title will not appear).

When the layout is loaded on the monitor wall, the updated overscan/underscan properties become available.

Configuring Automatic Aspect Ratios

To slave a video monitor to the input signal aspect ratio

- In the **Properties** pane, select the appropriate value from the **Automatic Aspect Ratio** list.

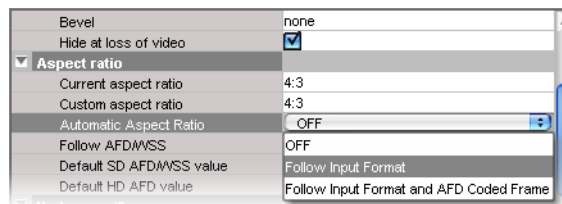


- The default value is **OFF**.
- If the **Automatic Aspect Ratio** property is set to **Follow Input Format**, then the video monitor will change its aspect ratio based on the input feed's format.
- If the **Automatic Aspect Ratio** property is set to **Follow Input Format and AFD Coded Frame**, then the video monitor will change its aspect ratio according to the AFD coded frame. If there is no AFD present, the default value for the current format will be used (see [Configuring the default aspect ratio for HD and SD signals](#) on page 257):
 - the default HD AFD value, if the input is HD;
 - the default SD AFD/WSS value if the input is not HD;
 - if the default value for the current input format is **None**, then the video monitor will change its aspect ratio based on the input feed's format.

Note: In the case of the Kaleido-IP, aspect ratio information can be extracted and monitored. However, the Kaleido Software does not support automatic aspect ratio adjustment *based on the decoded information* for signals originating from these multiviewers.


Configuring the default aspect ratio for HD and SD signals

To have a video raster follow a video signal's AFD/WSS metadata


- 1 Click to put a check mark in the box labeled **Follow AFD/WSS**.

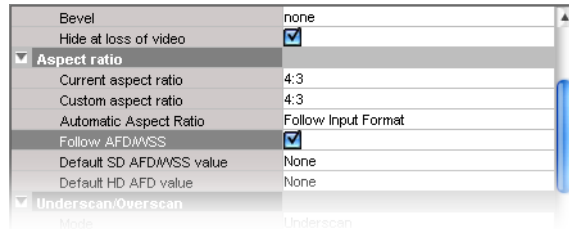

- 2 In the **Default SD AFD/WSS value** list, select the aspect ratio to use when there is no AFD or WSS in an SD signal. Select **Keep Last** to have the video window maintain the last decoded AFD or WSS value if the signal is paused.

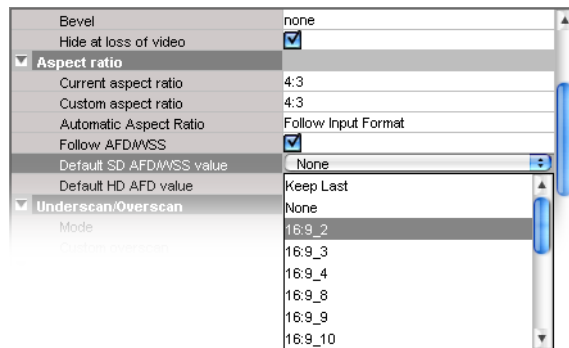

- 3 In the **Default HD AFD value** list, select the aspect ratio to use when there is no AFD or WSS in an SD signal. Select **Keep Last** to have the video window maintain the last decoded AFD value if the signal is paused.

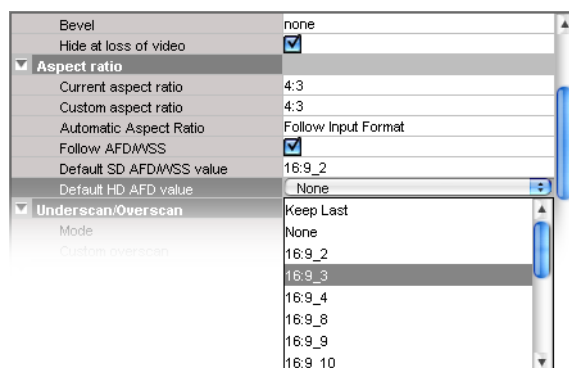


Configuring a Video Monitor's Alarm Reporting Behavior

To prevent users from missing temporary alarms on the monitor wall, monitors that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can be configured with a latching mechanism. An alarm latch will keep the error state visible until someone acknowledges the associated alarm. Video monitors can provide alarm status information through their borders' color and blinking behavior, and show the latched state as small indicators in each corner of the video window. See also:


[Configuring a Video Monitor's Source Reporting Behavior](#), on page 258.

To set the alarm reporting features for a video monitor

- 1 In the **Properties** pane, scroll down to the **Alarms/Tallies** section.

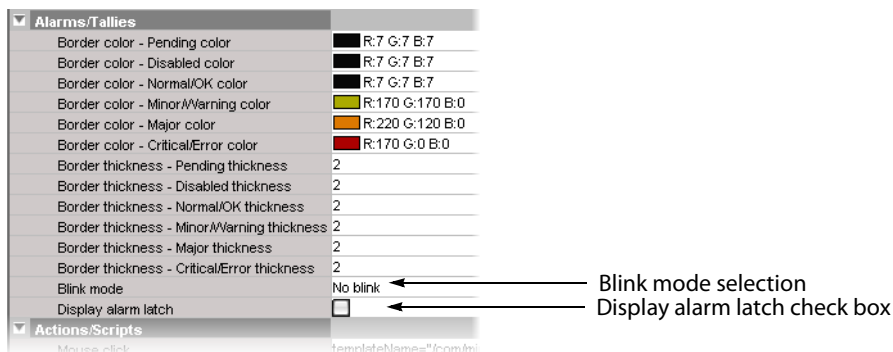

- 2 Set the appropriate border color scheme and associated thickness attributes.
- 3 Click the **Blink mode** box, and then select the appropriate blinking behavior, for your purposes.

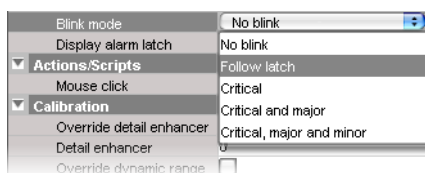

- 4 The Kaleido multiviewer supports the following blinking modes:

Blink mode	Description
Off	The status indicator will never blink.
Follow Latch	The status indicator's blinking will follow the latch status. The indicator will blink until someone unlatches the alarm.
Critical	The status indicator will blink when the current status is critical.
Critical or Major	The status indicator will blink when the current status is critical or major.
Critical, Major and Minor	The status indicator will blink when the current status is critical, major or minor.


- 5 Select the **Display alarm latch** check box to enable the latched status indicators in each corner of the video window.

Configuring a Video Monitor's Source Reporting Behavior


To help you distinguish which sources are currently active on the monitor wall, monitors that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can have their borders, background or text configured to appear in a specific color, based on their current source. Video monitors can provide this information through their borders' color. See also: [Configuring a Video Monitor's Alarm Reporting Behavior](#), on page 257.

To configure a video monitor's border colors for source reporting


- 1 In the **Properties** pane, scroll down to the **Alarms/Tallies** section.

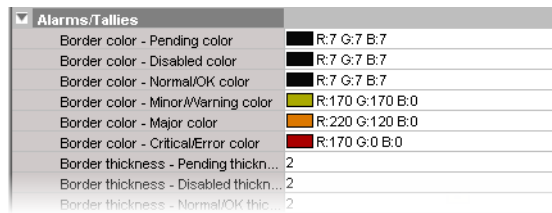

- 2 Set the border thickness attributes as necessary.
- 3 Click the border color box for an alarm state you want associated with a distinctive color, based on the monitor's current source.
- 4 Click the button that appeared at the end of the box.

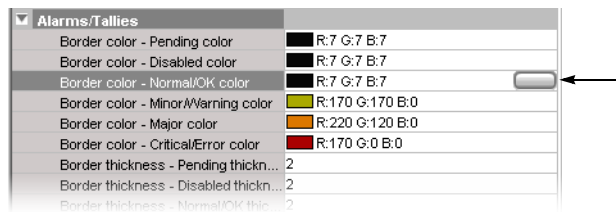


- 5 In **Colors**, select the appropriate level from the **Source color level** list. See [Configuring color level assignments](#) on page 101, for more information.

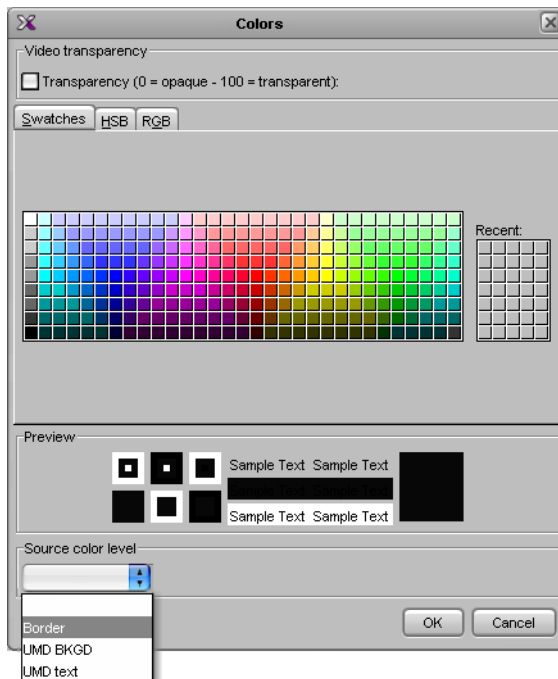

- 6 Set the color's transparency as necessary.
- 7 Set the color to be used for sources whose color levels might not be defined, by clicking the tab that corresponds to the color space you want to use, and then choose a color (see [Configuring a Video Monitor's Alarm Reporting Behavior](#) on page 257, for more information).

8 Click **OK** to close the color picker window.

In the **Properties** pane, the name of the selected source-based color level appears next to the fallback color (and transparency, if used).

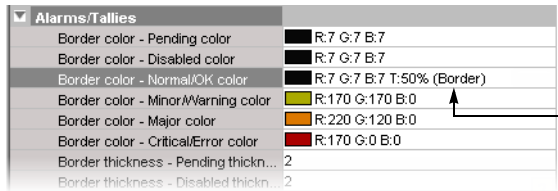

9 Repeat from [step 3](#) for the remaining colors you want to set.

Setting a Video Monitor's Text Mode

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	●

Notes


- Closed captioning/subtitling text services can be enabled by purchasing the *CC/XDS* option. This requires the *CC/XDS* option to be enabled (see the multiviewer's *Installation & Service Manual* for more information).
- The Kaleido-IP supports extraction of CC/subtitling and XDS data (1 license/program). It is not possible to enable or verify the *CC/XDS* option in XAdmin's Status and Options page, for this multiviewer model. Contact [Technical Support](#) for activation and configuration instructions ([Grass Valley Technical Support](#), on page 536).

To set the subtitling properties of a video monitor


1 In the **Properties** pane, scroll down to the **CC/Subtitling** section.

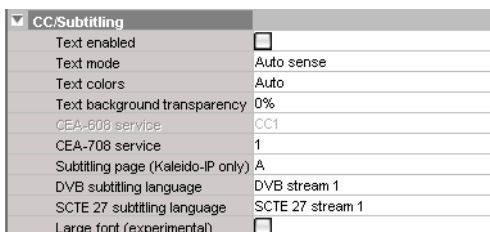


2 Select the **Text enabled** check box.

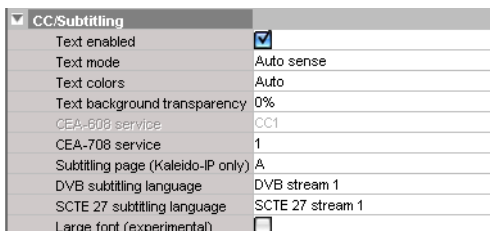

3 Select a value from the **Text mode** list.

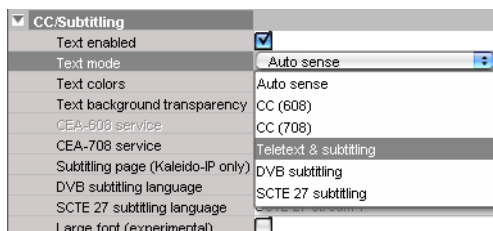


4 Select the appropriate option from the **Text colors** list.

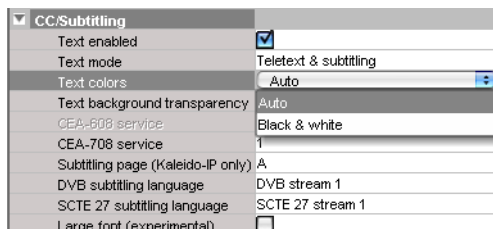


- **Auto:** To display text in colors, as defined in the signal.
- **Black & white:** To display white characters against a black background, regardless of what is specified in the signal.

5 To adjust the transparency level of the text background, click the **Text background transparency** box, and then move the slider, or type a transparency value directly in the box.

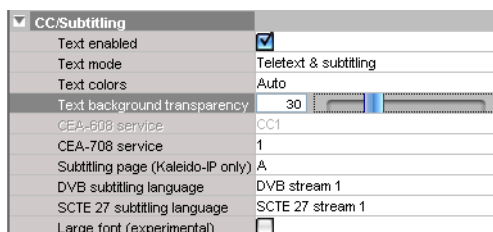


At 0% the text will appear against an opaque background; at 100% the fully transparent background will let the text appear directly against the video. This applies to CEA-608, CEA-708 captions, WST, ST 2031, and RDD 8/OP-47 text.

6 Specify a CEA-708 service value, if necessary, and then click **Apply**.

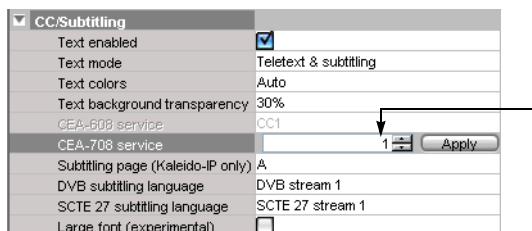


7 In the case of a Kaleido-IP, if you want to pre-select a specific DVB teletext subtitling language for this monitor, select a page from the **Subtitling page** list.

Make sure the selected page is configured (see [Configuring Teletext/Subtitling Page Selection for a Kaleido-IP](#) on page 138). For other multiviewer models, make sure page A remains selected.

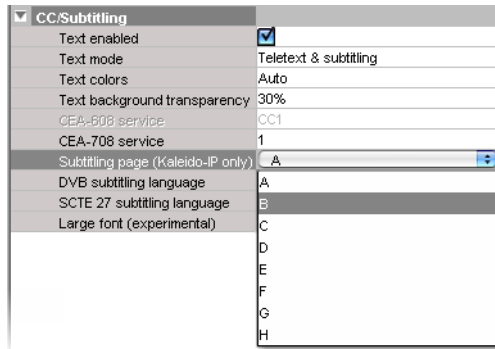


- 8 If you want to pre-select a specific DVB subtitling language for this monitor, click to expand the **DVB subtitling language** list and then select the appropriate language or DVB stream you want to monitor.

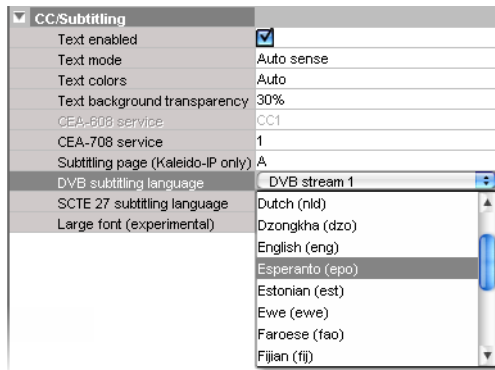


The list of subtitling streams and languages contains the following:

- A series of DVB streams identified by their relative number: **DVB stream 1** to **DVB stream 12**. Choose from this series if you want to always monitor the third available subtitling stream, for example.
- A list of all supported languages, in alphabetical order based on the English name, which is followed with the corresponding ISO 639-2 alpha-3 code. Choose from this series if you want to monitor subtitling in a specific language.


When XEdit is connected to the multiviewer, the available languages are indicated in bold text. The ISO 639-2 alpha-3 code for each available language, and the corresponding PID appear in the list of relative subtitling streams.

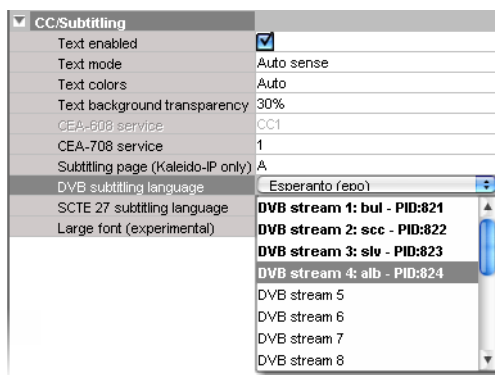

Then, following **DVB stream 12**, for each of the currently available languages, the name, the 3-letter code, and the corresponding PID appear in bold text before the list of all supported languages.

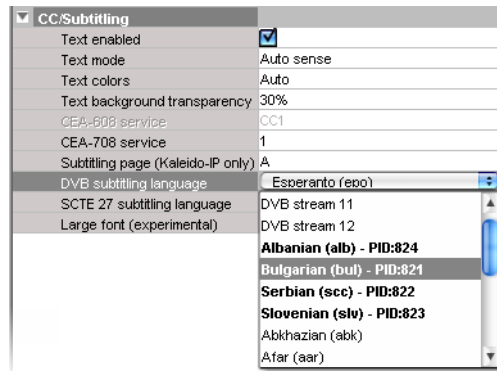

- 9 If you want to pre-select a specific SCTE 27 subtitling language for this monitor, click to expand the **SCTE 27 subtitling language** list and then select the appropriate language or SCTE 27 stream you want to monitor.

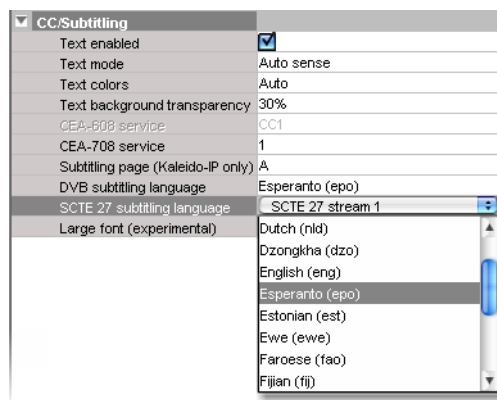

The list of subtitling streams and languages contains the following:

- A series of SCTE 27 streams identified by their relative number: **SCTE 27 stream 1** to **SCTE 27 stream 12**. Choose from this series if you want to always monitor the third available subtitling stream, for example.
- A list of all supported languages, in alphabetical order based on the English name, which is followed with the corresponding ISO 639-2 alpha-3 code. Choose from this series if you want to monitor subtitling in a specific language.

When XEdit is connected to the multiviewer, the available languages are indicated in bold text. The ISO 639-2 alpha-3 code for each available language, and the corresponding PID appear in the list of relative subtitling streams.

Then, following **SCTE 27 stream 12**, for each of the currently available languages, the name, the 3-letter code, and the corresponding PID appear in bold text before the list of all supported languages.

Notes

- The current version of the Kaleido Software supports foreground colors for teletext (WST, OP-47) only. Closed captions (CC, DTVCC) will appear in white against a black background.

Notes (*continued*)

- If you do not need teletext to be displayed in colors, then you may find that selecting **Black & white** will improve your system's performance.
 - In the case of the Subtitling (WST) text services, the Kaleido-IP supports decoding of up to eight preset pages (page *A* to page *H*) per video signal on the monitor wall. The other multiviewer models support decoding of a single preset page (i.e., page *A*) per video signal.
 - In the case of CEA-608, only CC1 subtitles can be decoded.
 - The current version of the Kaleido Software supports DVB and SCTE 27 subtitles, from Kaleido-IP sources only.
-

- 10 If you want to see CC/subtitling text in a larger, more readable font size, select the **Large font (experimental)** check box.

▼ CC/Subtitling	
Text enabled	☒
Text mode	Auto sense
Text colors	Auto
Text background transparency	30%
CEA-608 service	CC1
CEA-708 service	1
Subtitling page (Kaleido-IP only)	A
DVB subtitling language	Esperanto (epo)
SCTE 27 subtitling language	Esperanto (epo)
Large font (experimental)	☒


Note: The large font option is in a beta stage, and works best with an aspect ratio of 16:9.

Configuring Audio Monitors

Note: To decode Dolby E audio metadata, the *Dolby E* option is required. This requires this option to be enabled (see the multiviewer's *Installation & Service Manual* for more information).


To configure an audio monitor

- 1 In the **Layouts** tab, click the audio monitor you want to configure.
- 2 In the **Properties** pane, click the **Audio scale** box, under **Appearance**, and then select the appropriate audio scale from the list.

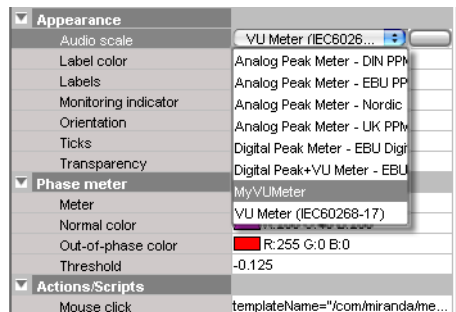


Note: See [Configuring Audio Scales](#) on page 270 for more information.

- 3 The **Monitoring indicator** check box is selected by default. When enabled, a color-keyed rectangle is shown below the VU meter that is the same color set for the display from which the audio is being monitored. To set a display's color, see [Calibrating the Audio Monitoring Color](#), on page 153. See also [Triggering Audio Monitoring by Using the mouse, the RCP-200, or the Kaleido-RCP2](#), on page 516. Clear the check box to remove this rectangle.

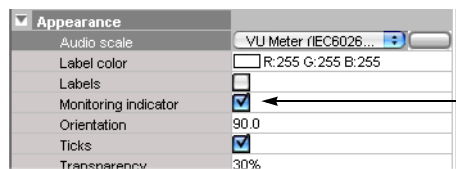


Monitoring indicator check box

 - 4 If you want your audio monitor to include a stereo phase meter: under **Phase meter**, select the **Meter** check box, and then configure the threshold and colors as needed.



Meter check box

- 5 Under **Assignments**, click the **Audio format** box, and then select the appropriate format from the list: Auto, PCM, Dolby E or Dolby VANC.

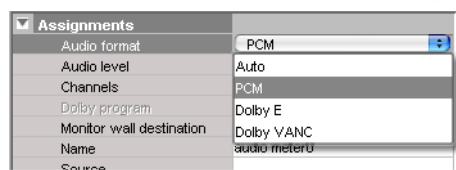


By default, audio monitors added to a layout by using the toolbar button have this attribute set to *Auto*.


Notes

- If the actual audio source assigned to this audio monitor is not of the same format configured here, then the audio data will not be shown.
 - In the case of a Kaleido-IP, the current version of the Kaleido Software does not support audio monitors configured to monitor PCM audio signals. For every audio monitor in your layout, the **Audio format** property should be set to **Auto**.
-

6 Choose an **Audio level**.

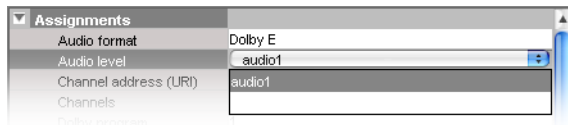

7 Choose a value from the **Channels** list to indicate which channel to display.

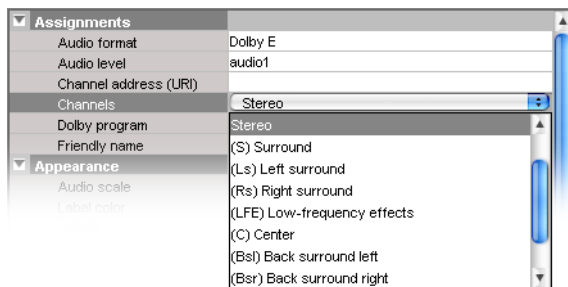

- If the **Audio format** is set to **PCM**, then the available choices are *(L) Left*, *(R) Right*, and *Stereo*.
 - If the **Audio format** is set to **Auto**, **Dolby E** or **Dolby VANC**, then the available choices are *(L) Left*, *(R) Right*, *Stereo*, *(S) Surround*, *(Ls) Left surround*, *(Rs) Right surround*, *(LFE) Low-frequency effects*, *(C) Center*, *(Bsl) Back surround left*, *(Bsr) Back surround right*, *(Le) Left extra*, and *(Re) Right extra*.
- 8 If your monitoring purposes may involve decoding Dolby E audio metadata, then select the appropriate program number (1–8) from the **Dolby program** list.

Note: The number of programs included in a Dolby E metadata bitstream depends on the program configuration. For example, a Dolby E stream with the 7.1 program configuration only has one program available for selection in its metadata bitstream; a 5.1+2 stream has two programs; a 8x1 stream has eight program selections possible.

- 9 Make the appropriate assignments (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).
- 10 Set the other attributes, as needed (see [Creating Actions](#) on page 321 for more information).


Assignments	
Audio format	PCM
Audio level	audio1
Channels	Stereo
Dolby program	1
Monitor wall destination	None
Name	audio meter0
Source	Input A/Channel 01
Appearance	
Audio scale	VU Meter (IEC60268-17)
Label color	☐ R:255 G:255 B:255
Labels	☒
Monitoring indicator	☒
Orientation	90.0
Ticks	☒
Transparency	30%
Phase meter	
Meter	☒
Normal color	☒ R:200 G:40 B:200
Out-of-phase color	☒ R:255 G:0 B:0
Threshold	-0.125
Actions/Scripts	
Mouse click	templateName="/com/miranda/me...

11 On the **File** menu, click **Save**.


Configuring Loudness Monitors

To configure a loudness monitor

- 1 In XEdit, click the **Layouts** tab, and then open a layout.
- 2 Unlock the appropriate composite monitor if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 3 Click the loudness monitor you want to configure.

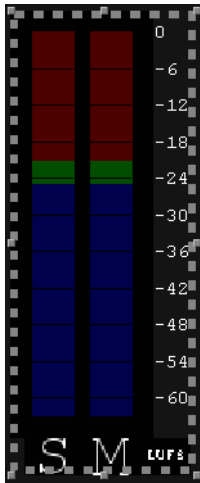

- 4 In the **Properties** pane, click the **Audio scale** box, under **Appearance**, and then select the appropriate audio scale from the list.

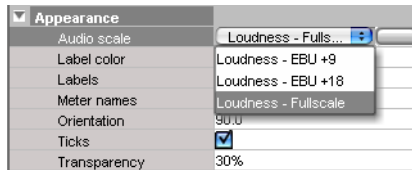

Three predefined audio scales are available for loudness monitors:

- Full scale (default)
- EBU +9
- EBU +18

Note: The audio scales applicable to loudness monitors have fixed upper and lower limits. Only the colors can be changed (see [Configuring Audio Scales](#) on page 270).

- 5 Choose the **Audio level** you want to monitor.



Note: The selected audio level must be associated with an *audio program* (not with an embedded audio pair). See [Audio program](#) on page 110.

- 6 Make the appropriate source and destination assignments (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242).
- 7 Set other attributes, as needed (see [Creating Actions](#) on page 321 for more information).

Assignments	
Audio level	audio1
Monitor wall destination	None
Name	loudness0
Source	
Appearance	
Audio scale	Loudness - Fullscale
Label color	R:255 G:255 B:255
Labels	☒
Meter names	☒
Orientation	90.0
Ticks	☒
Transparency	30%
Actions/Scripts	
Mouse click	

- 8 On the **File** menu, click **Save**.


Configuring Audio Scales

You can configure audio scales in two ways: either globally, from the **Tools** menu, or by clicking a specific audio monitor in a layout.


Configuring Audio Scales from the Tools Menu

To configure an audio scale from the Tools menu

- 1 On the **Tools** menu, click **Edit audio scales**:

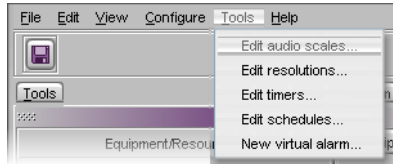

The **Edit Audio Scale** window appears.

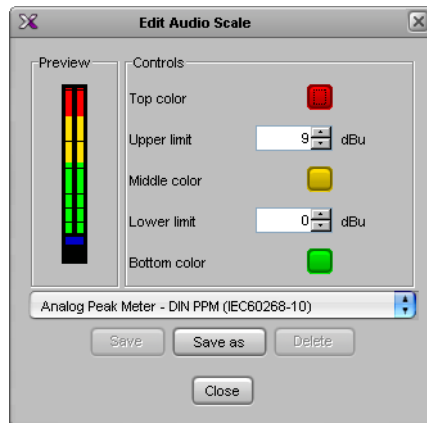


- 2 Select the audio scale you want to customize (or the one on which you want to base a new audio scale), from the list at the bottom of the window.

Note: When you modify one of the default audio scales, you can only save your changes as a new audio scale. On the other hand, custom audio scales can be tweaked and saved repeatedly until the required configuration is achieved.

- 3 Click one of the **Top color**, **Middle color**, or **Bottom color** buttons, depending on the part of the audio scale you want to configure.

The color picker window appears.

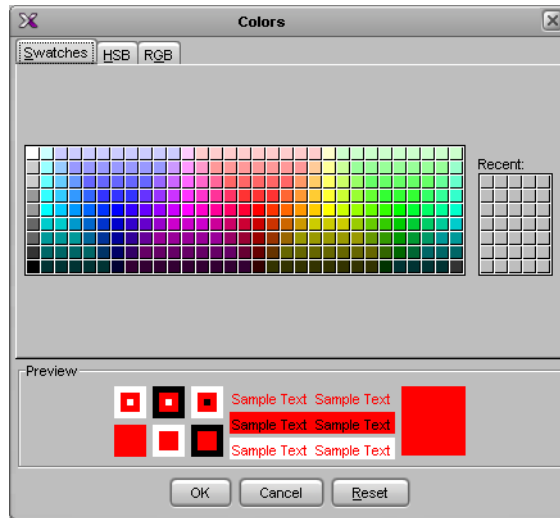


- 4 In **Colors**, click the tab that corresponds to the color space you want to use, and then choose a color.
Swatches in the selected color appear under **Preview**.
- 5 Click **OK** to close the color picker window.
In **Edit Audio Scale**, the corresponding button and the corresponding part of the audio monitor preview show the selected color.
- 6 Repeat this procedure until all three colors are set.
- 7 Enter the audio thresholds in **Upper limit** and **Lower limit**.
- 8 Type a name for the new audio scale in the box at the bottom, and then click the **Save as** button. Alternatively, if you are modifying an existing custom audio scale, you can click the **Save** button.

Configuring an Audio Scale from a Specific Audio Monitor


To configure an audio scale from a specific audio monitor

- 1 In the **Layouts** tab, click the audio monitor you want to configure.
- 2 In the **Properties** pane, click the **Audio scale** box, under **Appearance**, and then click the button that appeared at the end of the box.
The **Edit Audio Scale** window appears.

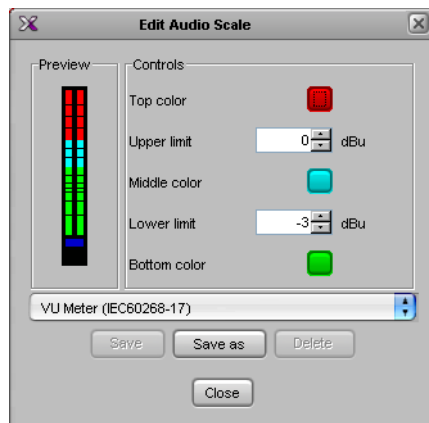

- 3 Click one of the Top color, Middle color, or Bottom color buttons, depending on the part of the audio scale you want to configure.

The color picker window appears.

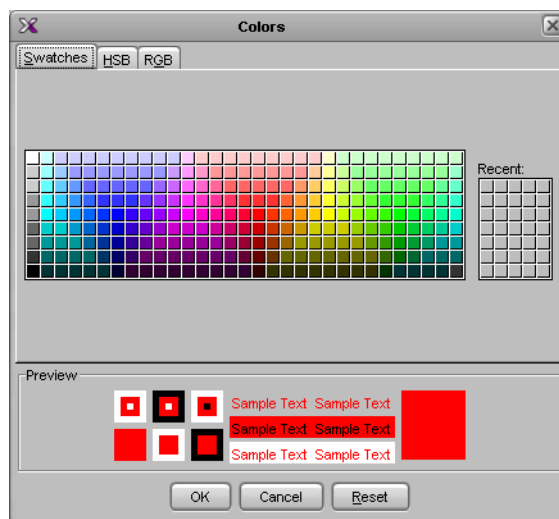


- 4 In **Colors**, click the tab that corresponds to the color space you want to use, and then choose a color.
Swatches in the selected color appear under **Preview**.
- 5 Click **OK** to close the color picker window.
In **Edit Audio Scale**, the corresponding button and the corresponding part of the audio monitor preview show the selected color.
- 6 Repeat this procedure until all three colors are set.
- 7 Enter the audio thresholds in **Upper limit** and **Lower limit**.
- 8 Type a name for the new audio scale in the box at the bottom, and then click the **Save as** button.

Note: When you modify one of the default audio scales, you can only save your changes as a new audio scale. On the other hand, custom audio scales can be tweaked and saved repeatedly until the required configuration is achieved.

Removing Audio Scales from the System


To remove a custom audio scale from the system

- 1 On the **Tools** menu, click **Edit audio scales**.

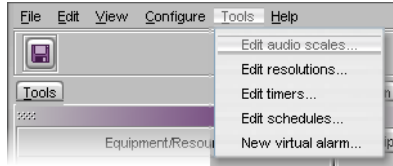

The **Edit Audio Scale** window appears.

- 2 In **Edit Audio Scale**, select the custom scale you want to remove, from the list at the bottom of the window, and then click **Delete**.

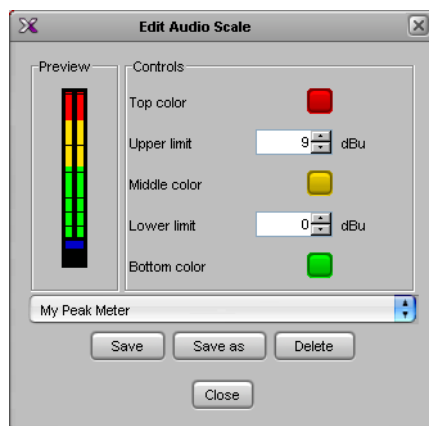

Note: The default audio scales cannot be removed from the system.

Configuring Time Code Monitors


To configure a time code monitor in a layout

- 1 To add a time code monitor to a layout, click the “Time code monitor” button  on the toolbar, and then click and drag to draw a time code monitor on the layout.


Alternatively, you can drag a time code monitor from a monitor library to the layout.

- 2 Click the time code monitor you want to configure.


The time code’s attributes appear in the **Properties** pane.

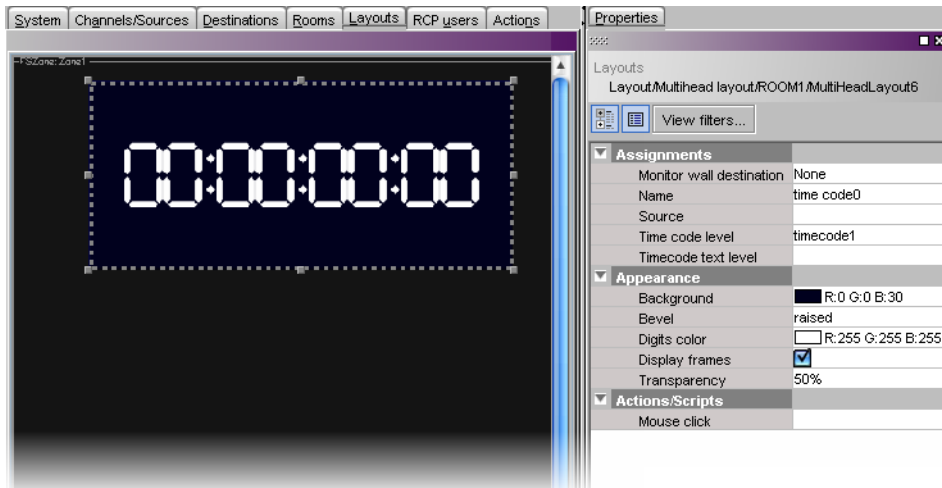


- To replace the default name, type a new name in the **Name** box.

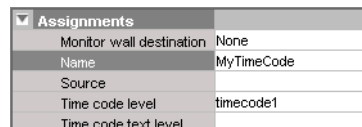

- If you want to assign a logical source, drag the appropriate element from the **Channels/Sources** list that appears on the **Tools** pane, to the time code monitor.

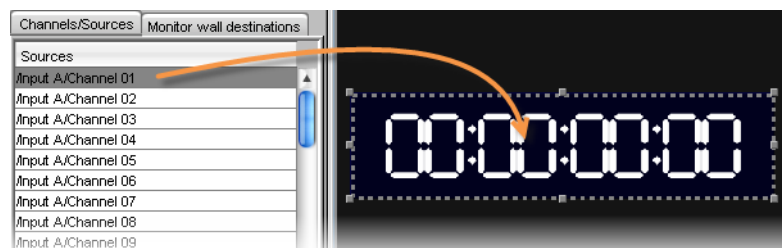


The selected logical source’s name appears in the **Source** box.

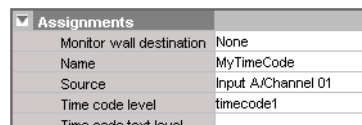

Note: The first time code level applies by default. If your system’s logical sources include more than one time code level, select the one you want to apply from the **Time code level** list.

- If you want to assign time code information from an external provider (see [Configuring logical sources based on external alarm providers](#) on page 100), then select the appropriate text level from the **Time code text level** list.

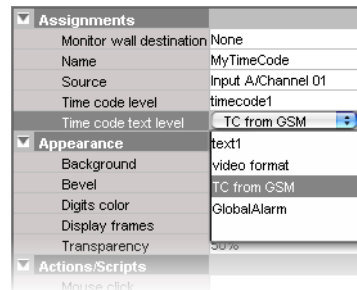

If the time code monitor is configured with both a time code level and a text level, it will show the most recently updated value (i.e., if the multiviewer received time code data, followed by a text update from the GSM, then the monitor will display the GSM alarm text). If a text value from the GSM does not meet the supported formats, then the value is ignored. The supported formats are:

- HH:MM:SS (showing the hours, minutes, and seconds, as 2-digit values)
- HH:MM:SS:FF (showing the hours, minutes, seconds, and frames, as 2-digit values)
- HH:MM:SS;FF (showing the hours, minutes, seconds, and drop frames, as 2-digit values)

Note: With the current implementation of this feature, you may observe a 200-270 ms delay, depending on your multiviewer system topology, and on the network load.

Configuring Timers


Building a countdown timer involves defining the timer itself (name, behavior, time reference, etc.), and then creating one or more timer monitors to display the timer on a monitor wall. Timers can be created, modified, deleted, added to a layout, assigned to logical sources, rooms or individual RCP users, and controlled from the Kaleido-RCP2.

Note: In addition to timer monitors, Gateway commands (see [Gateway](#) on page 323) can be used to interact with timers. Refer to the *Kaleido Remote Control Protocol (Gateway) User's guide*. See [Related Documentation](#), on page 13.


Adding Timers to the System

To define a timer


- 1 On the **Tools** menu, click **Edit timers**.

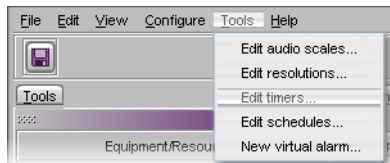

- 2 In **Timer Editor**, click **New**.

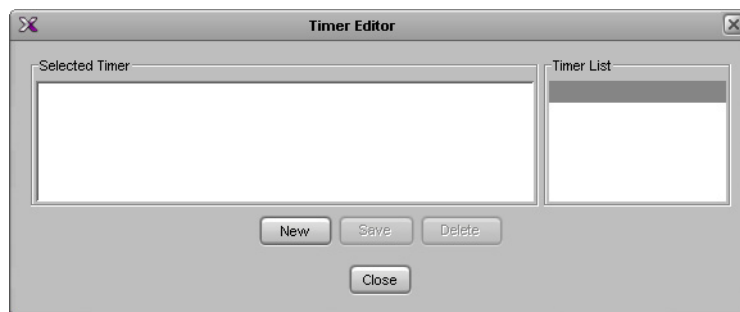

- 3 Type a name for your new timer in the **Timer name** box.

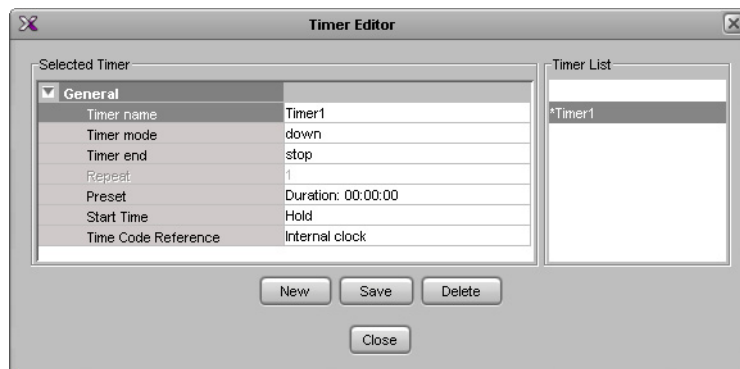

- 4 Choose the appropriate mode, from the **Timer mode** list.

General	
Timer name	Timer1
Timer mode	down
Timer end	up
Repeat	down
Preset	remaining
Start Time	Hold
Time Code Reference	Internal clock

- **Up:** The timer counts up starting from zero up to the Preset time.
- **Down:** The timer counts down from the Preset time to zero.
- **Remaining:** The timer counts down from the current time until it reaches the Preset time. This mode is a one-shot mode—the timer will not automatically restart the next day at the same start time. To restart it, you must either reset the timer monitor on the monitor wall, or set and specify a new start time.

5 Choose what happens when the timer reaches the end of its countdown period, from the **Timer end** list.

General	
Timer name	Timer1
Timer mode	down
Timer end	stop
Repeat	stop
Preset	overrun
Start Time	loop
Time Code Reference	Internal clock

- **Loop:** The timer restarts and repeats its cycle (not available with the **Remaining** timer mode).
- **Stop:** The timer stops.
- **Overrun:** The timer counts through its specified end point, and then continues (when **Overrun** is specified, the timer always counts up).

6 If you chose **Loop** as a timer end mode, specify the number of times the loop should repeat.

General	
Timer name	Timer1
Timer mode	down
Timer end	loop
Repeat	1
Preset	Duration: 00:00:00
Start Time	Hold
Time Code Reference	Internal clock


7 Specify a **Preset** duration.

General	
Timer name	Timer1
Timer mode	down
Timer end	loop
Repeat	1
Preset	Duration: 00:00:00
Start Time	Hold
Time Code Reference	Internal clock

8 Specify a **Start** time.

General	
Timer name	Timer1
Timer mode	down
Timer end	loop
Repeat	1
Preset	Duration: 00:00:00
Start Time	Hold 6/5/08 6:20 PM
Time Code Reference	Hold
	Time

- 9 Choose a synchronization source from the **Time code reference** list— either an embedded time code signal from a video source, an LTC input (if available), or the internal clock time (default).

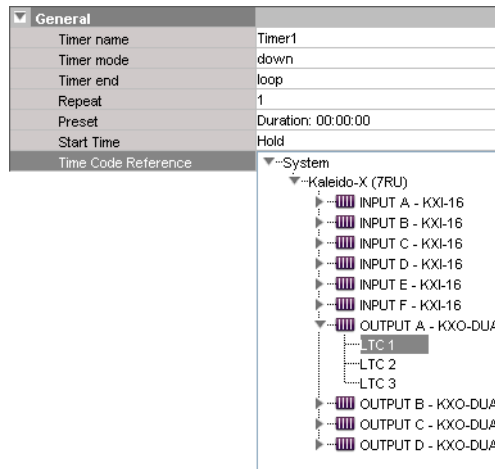


IMPORTANT

Before setting a timer's start time in XEdit, review the following:


- If the selected time code reference *includes time zone information*, then make sure that the PC that has XEdit is configured for the same time zone.
- If the selected time code reference *does not include time zone information*, or you chose to bind the timer to the multiviewer's *internal clock*, then the multiviewer's system time will apply.
 - In the case of a Kaleido-X or Kaleido-X16 multiviewer model, make sure the time zone settings are the same, on the multiviewer, and on the PC that has XEdit.
 - In the case of a KMV-3901/3911, when you save or export the timer to the multiviewer, XEdit automatically converts the start time you specified to UTC, based on your computer's time zone settings.

Note: In the case of a Kaleido-X or Kaleido-X16 multiviewer model, the system's time zone is configured in XAdmin. In the case of a KMV-3901/3911, time is always based on UTC. On a Windows PC, the time zone is configured in the Date and Time control panel.

- 10 Click **Save** to save your new timer and close the **Timer Editor** window.
- 11 Under the **Channels/Sources** tab, create a new logical source to associate with the timer, and name it.

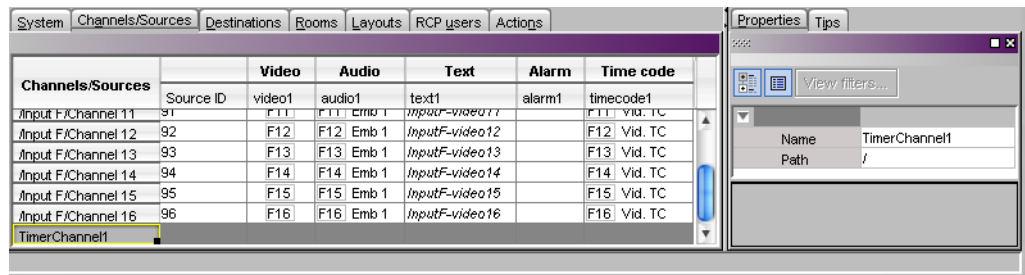

- Click a cell in the time code level of the new logical source, and drag the timer you want to assign to this logical source from the filtered System list that appears on the **Tools** pane, to the selected cell in the sources table.

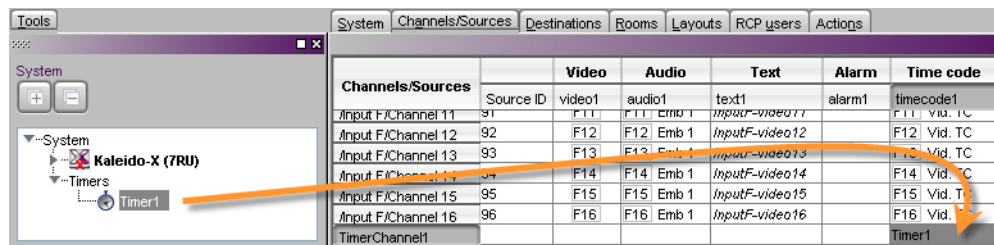


- Click **Save**.

Adding a Timer Monitor to a Layout

To create a timer monitor

- In XEdit, open a layout and click the Timer button .
- Click and drag to draw a timer monitor on the layout.

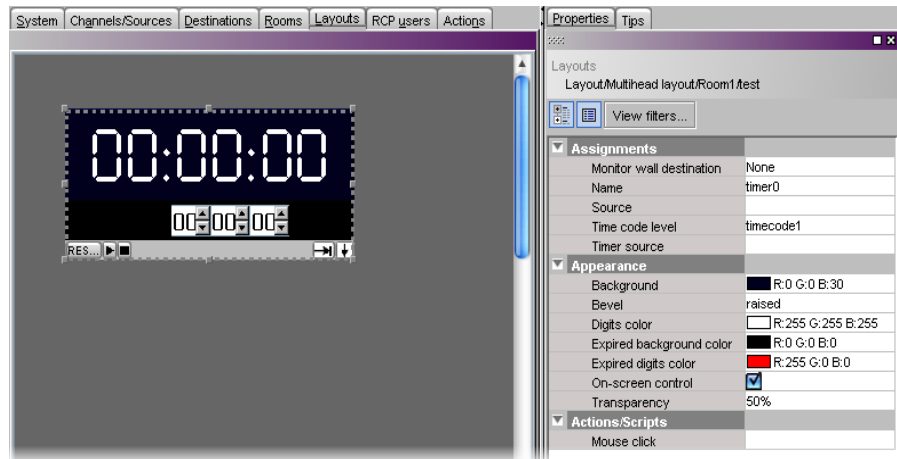


Alternatively, you can drag a timer monitor from the Timers library to the layout.

The timer's attributes appear in the **Properties** pane.

- Replace the default name, by typing a new name in the **Name** box.

Assignments	
Monitor wall destination	None
Name	myTimer
Source	
Time code level	timecode1
Timer source	
Appearance	
Background	R:0 G:0 B:30

- 4 If you want to assign a logical source, drag the appropriate element from the **Channels/Sources** list that appears on the **Tools** pane, to the timer monitor.

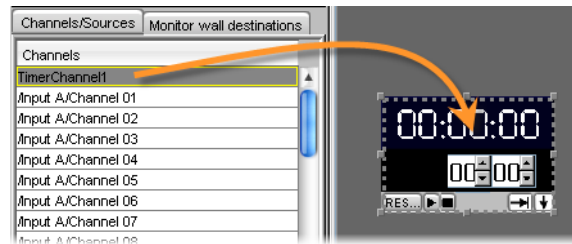

The selected logical source's name appears in the **Source** box, and the **Timer source** box shows the value of the corresponding time code level.

Assignments	
Monitor wall destination	None
Name	myTimer
Source	Input A/Channel 01
Time code level	timecode1
Timer source	INPUT_A/Video_01/Timecode
Appearance	
Background	R:0 G:0 B:30

Assigned logical source name

Time code level value from assigned logical source

Note: The first time code level applies by default. If your system's logical sources include more than one time code level, select the one you want to apply from the **Time code level** list.

- 5 Click the button beside **Timer source**.

Assignments	
Channel address (URI)	
Friendly name	timer0
Source	
Time code level	timecode1
Appearance	
Background	R:0 G:0 B:30

The **Timer Editor** window appears.

- 6 Choose a timer (see [Configuring Timers](#) on page 276) from the **Timer List**.

Timer Editor	
Selected Timer	
General	
Timer name	Timer1
Timer mode	down
Timer end	stop
Repeat	1
Preset	Duration: 00:00:00
Start Time	Hold
Time Code Reference	Internal clock
Timer List	
*Timer1	
New Save Delete	
Ok Cancel	

It is also possible to assign a timer to a timer monitor by dragging an existing logical source (containing a timer assignment) to the monitor.

Note: Each timer monitor is assigned to exactly one timer. Multiple timer monitors can be assigned to the same timer. Start/stop/reset or mode changes applied to one monitor affect all other monitors assigned to the same timer.

- 7 Click **Save**.
- 8 Modify the timer's **Appearance** properties as needed.

Appearance	
Background	R:0 G:0 B:30
Bevel	raised
Digits color	R:255 G:255 B:255
Expired background color	R:0 G:0 B:0
Expired digits color	R:255 G:0 B:0
On-screen control	
Transparency	50%

- 9 To attach an action to the timer, click the button beside **Mouse click**.

Actions/Scripts	
Mouse click	

The **Action Editor** window appears.

- 10 Drag an action from the left pane to the middle pane, then specify the action's behavior in the right pane.

For more information on creating actions, see [Creating Actions](#), on page 321.

- 11 Click **OK** to save the action assignment and close the **Action Editor** window.
- 12 Click **Save** to save the layout with the new timer monitor.
- 13 Export the database to a Kaleido-X, and load the layout.

The interactive timer monitor appears on the monitor wall. See [Using Timers](#), on page 509, [Assigning a Timer to a Room](#), on page 339, and [Assigning a Timer to an RCP User](#), on page 344, for more information.

Configuring UMDs

UMDs can serve various purposes: in addition to displaying the name of the video source seen in a video monitor, they can report operational status and error conditions in real time, by showing dynamic alarm and text attributes associated with a source.

Note: UMDs configured to show static text are editable in XEdit, and on the monitor wall, whereas UMDs configured to show dynamic text are not editable.

To configure a UMD


- 1 In XEdit, click the **Layouts** tab, and then open a layout.
- 2 Unlock the appropriate composite monitor if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 3 Click the UMD you want to configure.
- 4 To pre-assign a logical source to be monitored by default, to configure the selected UMD as a monitor wall destination, or to configure its reporting behaviors, see:
 - [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#), on page 242.
 - [Setting Monitored Alarm and Text Levels for a UMD](#), on page 282.
 - [Configuring a UMD's Alarm Reporting Behavior](#), on page 283.
 - [Configuring a UMD's Source Reporting Behavior](#), on page 285.
- 5 To configure UMD text properties, see:
 - [Configuring Static UMD Text](#), on page 286.
 - [Configuring Dynamic UMD Text](#), on page 287.
 - [Setting the Text Font](#), on page 288.
- 6 Click outside the composite monitor to lock it, if applicable.
- 7 On the **File** menu, click **Save**.

Setting Monitored Alarm and Text Levels for a UMD


When a system's logical sources include more than one level under a given category, the first level is selected by default for monitoring. In the case of a UMD, you may change the alarm levels associated with the UMD itself, and with its left and right tallies, and the text level from which the UMD label will be retrieved.

To change the default alarm and text levels selected for a UMD

- 1 To monitor a different alarm level, or the source's global alarm, select the appropriate level from the **UMD alarm level** list.

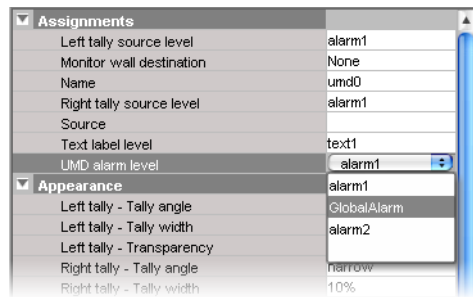

- 2 To have the UMD report alarm text (or other dynamic text), select the level from the **Text label level** list.

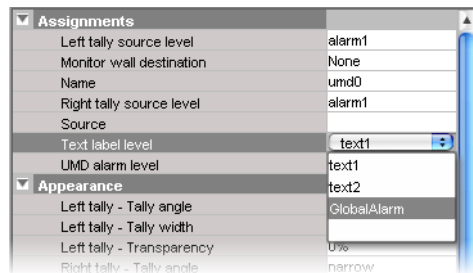

See [Configuring Dynamic UMD Text](#) on page 287, for more information.

- 3 If you want to monitor tallies, select the levels from the **Left tally source level**, and **Right tally source level** lists.

See [Tally Interface Devices & Timer Systems](#) on page 401, for examples of such configurations.

Configuring a UMD's Alarm Reporting Behavior

To prevent users from missing temporary alarms on the monitor wall, monitors that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can be configured with a latching mechanism. An alarm latch will keep the error state visible until someone acknowledges the associated alarm. For UMDs, the latch color can be set to follow the background or the text color configuration. See also: [Configuring a UMD's Source Reporting Behavior](#), on page 285.


To set the alarm reporting features for a UMD (text and tallies)

- 1 In XEdit, open a layout, and click the UMD whose alarm reporting behavior you want to configure.


Note: Double-click the UMD, if it is part of a composite monitor.

- 2 If you want to use the UMD's alarm latching mechanism, make sure the UMD is configured with a bevel.

In the **Properties** pane, the **UMD bevel** attribute should be set to either *lowered*, or *raised*.

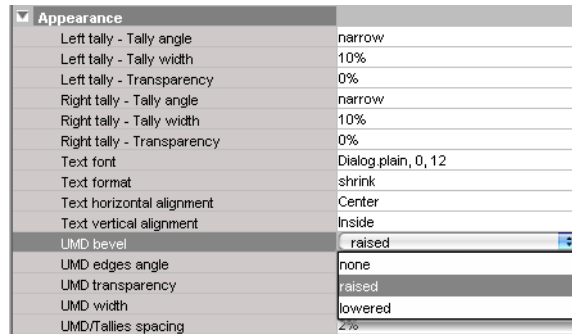

- 3 Scroll down to the **Alarms/Tallies** section, in the **Properties** pane, to set the appropriate text and background color scheme.

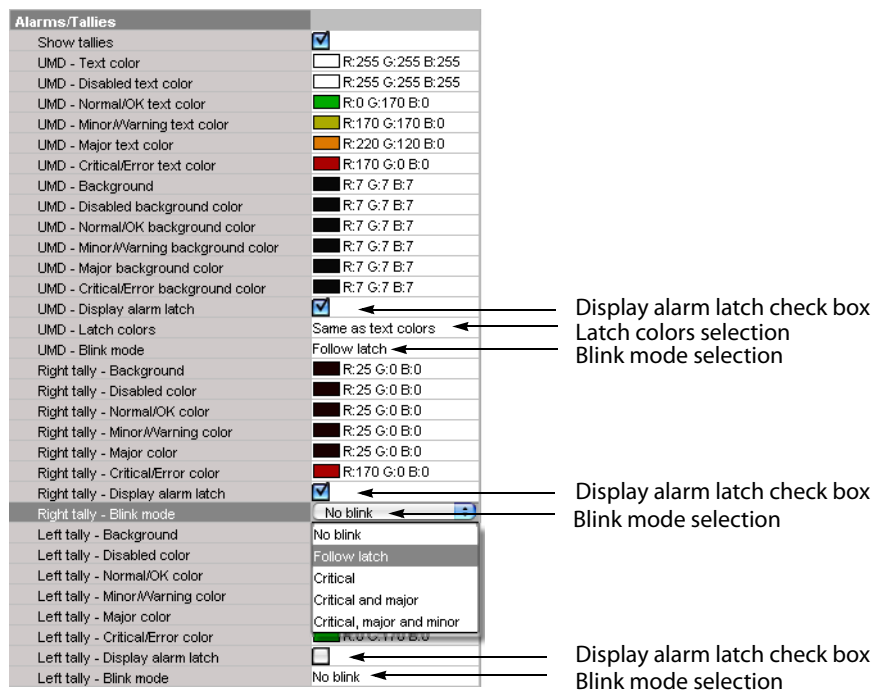

- 4 Click the **Blink mode** boxes, and then select the appropriate blinking behavior, for your purposes:

Blink mode	Description
Off	The status indicator will never blink.
Follow latch	The status indicator's blinking will follow the latch status. The indicator will blink until someone unlatches the alarm.
Critical	The status indicator will blink when the current status is critical.
Critical and major	The status indicator will blink when the current status is critical or major.
Critical, major and minor	The status indicator will blink when the current status is critical, major or minor.

- 5 Select the **Display alarm latch** check box to enable the latched status indicators.

Configuring a UMD's Source Reporting Behavior

To help you distinguish which sources are currently active on the monitor wall, monitors that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can have their borders, background or text configured to appear in a specific color, based on their current source. UMDs can provide this information through their text and background colors. See also: [Configuring a UMD's Alarm Reporting Behavior](#), on page 283.

To configure a UMD's background or text colors for source reporting

- 1 In XEdit, open a layout, and click the UMD whose source reporting behavior you want to configure.

Note: Double-click the UMD, if it is part of a composite monitor.


- 2 In the **Properties** pane, scroll down to the **Alarms/Tallies** section.

Alarms/Tallies	
Show tallies	☒
UMD - Text color	R:255 G:255 B:255
UMD - Disabled text color	R:255 G:255 B:255
UMD - Normal/OK text color	R:0 G:170 B:0
UMD - Minor/Warning text color	R:170 G:170 B:0
UMD - Major text color	R:220 G:120 B:0
UMD - Critical/Error text color	R:170 G:0 B:0
UMD - Background	R:7 G:7 B:7
UMD - Disabled background color	R:7 G:7 B:7
UMD - Normal/OK background color	R:7 G:7 B:7
UMD - Minor/Warning background ...	R:7 G:7 B:7
UMD - Major background color	R:7 G:7 B:7
UMD - Critical/Error background c...	R:7 G:7 B:7
UMD - Display alarm latch	☐
UMD - Latch colors	Same as text colors
UMD - Blink mode	No blink
Right tally - Background	R:25 G:0 B:0
Right tally - Disabled color	R:25 G:0 B:0
Right tally - Normal/OK color	R:25 G:0 B:0
Right tally - Minor/Warning color	R:25 G:0 B:0
Right tally - Major color	R:25 G:0 B:0
Right tally - Critical/Error color	R:170 G:0 B:0
Right tally - Display alarm latch	☐
Right tally - Blink mode	No blink
Left tally - Background	R:0 G:25 B:0
Left tally - Disabled color	R:0 G:25 B:0
Left tally - Normal/OK color	R:0 G:25 B:0
Left tally - Minor/Warning color	R:0 G:25 B:0
Left tally - Major color	R:0 G:25 B:0
Left tally - Critical/Error color	R:0 G:170 B:0
Left tally - Display alarm latch	☐
Left tally - Blink mode	No blink

- 3 Click the text or background color box for a state you want associated with a distinctive color, based on the monitor's current source.
- 4 Click the button that appeared at the end of the box.


Alarms/Tallies	
Show tallies	☒
UMD - Text color	R:255 G:255 B:255 
UMD - Disabled text color	R:255 G:255 B:255
UMD - Normal/OK text color	R:0 G:170 B:0
UMD - Minor/Warning text color	R:170 G:170 B:0
UMD - Major text color	R:220 G:120 B:0
UMD - Critical/Error text color	R:170 G:0 B:0
UMD - Background	R:7 G:7 B:7
UMD - Disabled background color	R:7 G:7 B:7
UMD - Normal/OK background color	R:7 G:7 B:7

- 5 In **Colors**, select the appropriate level from the **Source color level** list. See [Configuring color level assignments](#) on page 101, for more information.

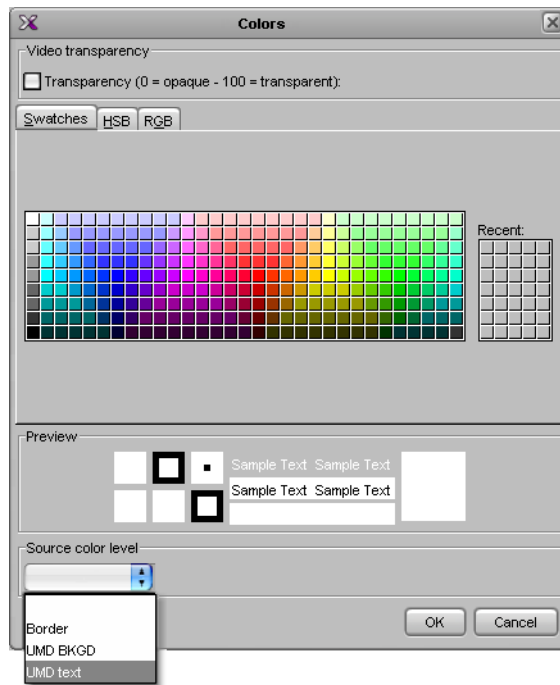

- 6 Set the color's transparency as necessary.
- 7 Set the color to be used for sources whose color levels might not be defined, by clicking the tab that corresponds to the color space you want to use, and then choosing a color (see [Configuring a UMD's Alarm Reporting Behavior](#) on page 283, for more information).
- 8 Click **OK** to close the color picker window.

In the **Properties** pane, the name of the selected source-based color level appears next to the fallback color (and transparency, if used).

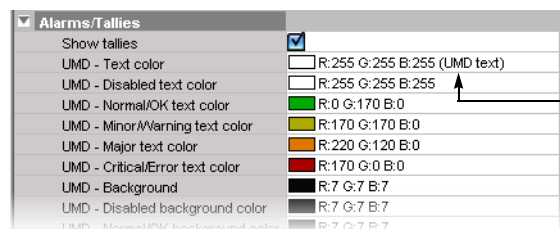

- 9 Repeat from [step 3](#) for the remaining colors you want to set.

Configuring Static UMD Text

A UMD can show two types of static text:

- static text that you typed directly on a layout, in XEdit (see below), or on the monitor wall (see [Editing UMD Text](#) on page 499);
- static text associated with the current logical source assigned to the UMD, which you entered in the sources table.

In the first case, the static text is tied to a specific layout whereas, in the other case, the text is tied to a specific input signal.

To configure static text for a specific UMD in a layout

- 1 In the **Layouts** tab, double-click the UMD whose static text you want to set.
- 2 Make sure the appropriate input language and method are set in your operating system.
- 3 Type some text.

To configure static UMD text from the sources table


- 1 In the **Channels/Sources** tab, click the cell that corresponds to the appropriate text level of the logical source that is assigned to the UMD whose static text you want to set.
- 2 Type the new static text.

Configuring Dynamic UMD Text


Assuming you have created logical sources (see [Creating and Configuring Logical Sources](#) on page 90) and a layout in XEdit, you can further configure UMDs in your layout to report dynamic text labels, associated with the sources you want to monitor.

To configure dynamic UMD text

- 1 In the **Channels/Sources** tab, click a cell that corresponds to the appropriate text level of a logical source.
- 2 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.

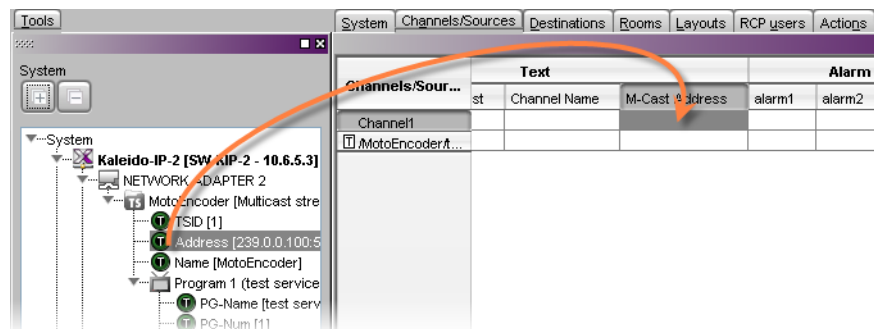

- 3 Make corresponding assignments to other logical sources by incremental copy, if necessary (see [Making Further Assignments by Incremental Copy](#) on page 102).
- 4 On the **File** menu, click **Save**.
Changes to the sources table are saved.
- 5 Click the **Layouts** tab, and then open the layout you want to configure.
- 6 Unlock the appropriate composite monitor if applicable (see [Unlocking a Composite Monitor](#) on page 313), and then click the UMD whose dynamic text reporting behavior you want to set.
- 7 In the **Properties** pane, click the **Text label level** box, and then select the text level you configured in [step 2](#).

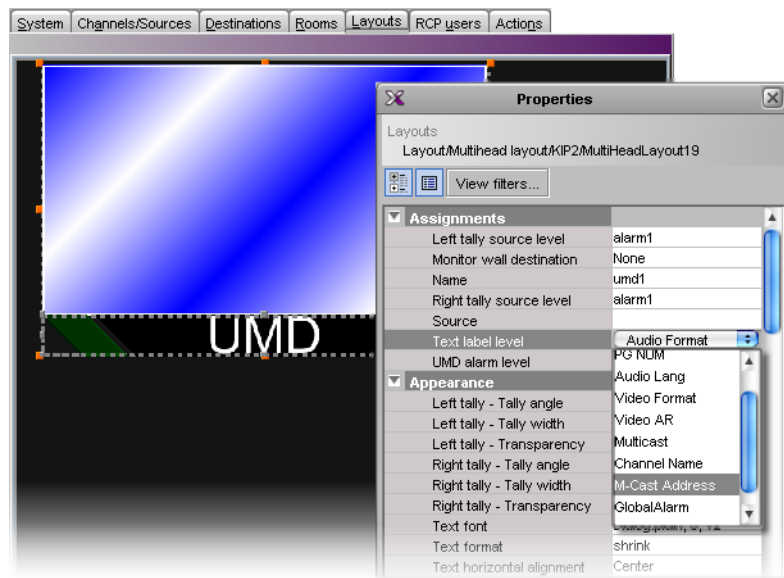


- 8 Click outside the composite to lock it, if applicable.
- 9 Repeat [step 6](#) – [step 8](#) until you have configured all UMDs that are to display dynamic text when this layout is loaded on the monitor wall.
- 10 On the **File** menu, click **Save**.

Setting the Text Font

To set the text font for a UMD in a layout

- 1 In the **Layouts** tab, click the UMD whose text font you want to set.
- 2 In the **Properties** pane, click the **Text font** box, under **Appearance**, then click the button that appeared at the end of the box.

The **Select a Font** window appears.

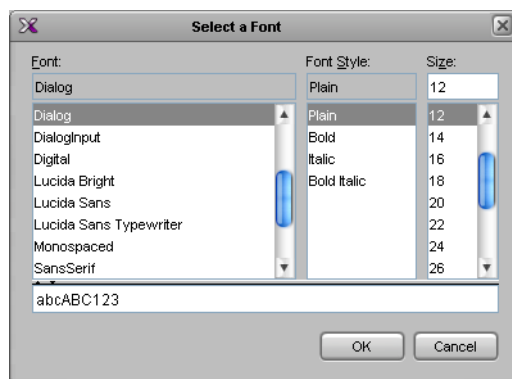

- 3 Select the appropriate values from the **Font**, **Font Style** and **Size** lists.

Note: On a monitor wall display connected to a KMV-3901/3911 multiviewer output, there is no difference in the rendering between bold and regular text.


4 Click **OK**.

Configuring Alarm Monitors

To add an alarm monitor to a layout

- 1 Click the Alarm monitor button  on the toolbar, click the layout, and then move or resize the monitor as needed.


You may choose to layer this monitor on top of the video window within a composite. See [Working with Composite Monitors](#) on page 308, for instructions on how to add elements to a composite.

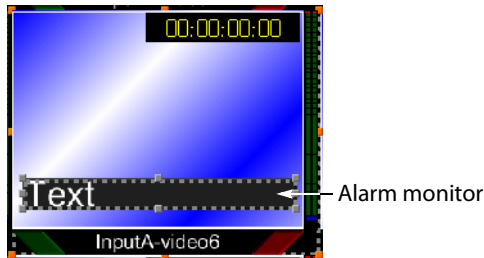

Note: On the monitor wall, an alarm monitor positioned over a video window has the following default behavior:


- If the source assigned to the alarm monitor is an active alarm (red), the alarm monitor is visible. The video transparency settings configured in XEdit for this alarm monitor apply to the part of the monitor that overlaps the video window.
 - If the source assigned to the alarm monitor is an inactive alarm (green), the alarm monitor is not visible on the monitor wall. If the alarm monitor partially overlaps the video window, then the part of the monitor that does not cover the video window remains visible (green).
-

- 2 In the **Properties** pane, set the transparency attribute to the appropriate value for your purposes, by clicking the **Transparency** box, and then using the slider or typing a value directly into the box.

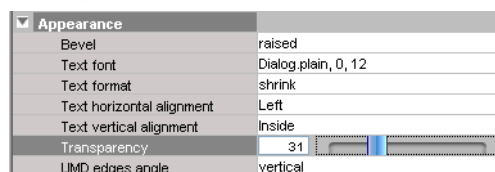

Set the other appearance attributes as necessary.

- 3 In the **Alarms/Tallies** section, set the appropriate color and video transparency scheme for the text and background, to achieve the required alarm reporting and source reporting behaviors (see [Configuring an Alarm Monitor's Source Reporting Behavior](#), on page 291, for details).

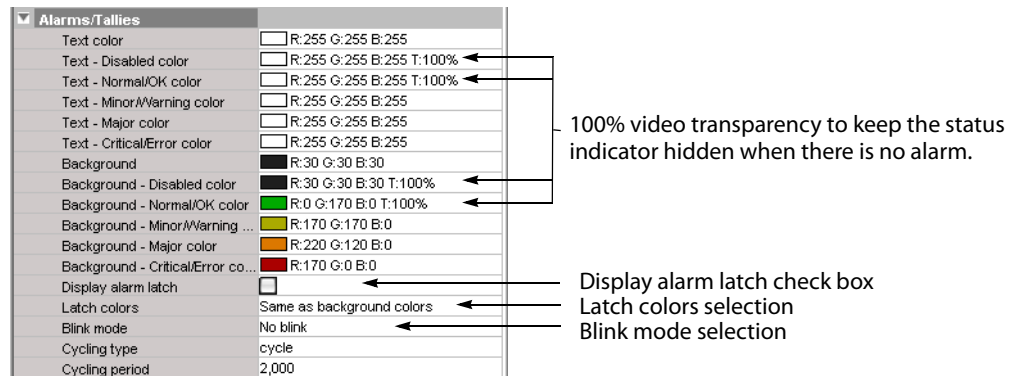

- 4 Click the **Blink mode** box, and then select the appropriate blinking behavior, for your purposes:

Blink mode	Description
Off	The status indicator will never blink.
Follow latch	The status indicator's blinking will follow the latch status. The indicator will blink until someone unlatches the alarm.
Critical	The status indicator will blink when the current status is critical.
Critical and major	The status indicator will blink when the current status is critical or major.
Critical, major and minor	The status indicator will blink when the current status is critical, major or minor.

- 5 To enable the latched status indicators, select the **Display alarm latch** check box, click the **Latch colors** box, and then select the appropriate color scheme for your purposes: either **Same as text colors**, or **Same as background colors**.
- 6 Choose from two display modes: **Cycle** and **Marquee**.
In cycle mode, the alarm monitor displays text from each alarm, one after the other. In marquee mode, the alarm text scrolls across the monitor. In addition, you can control the cycling speed and the scroll rate by setting the cycling period, in milliseconds.
- 7 Make the appropriate assignments (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242), and select the required alarm and text label levels, if necessary.

Assignments	
Alarm level	GlobalAlarm
Monitor wall destination	None
Name	text0
Source	
Text label level	GlobalAlarm

- 8 On the **File** menu, click **Save**.

Configuring an Alarm Monitor's Source Reporting Behavior

To help you distinguish which sources are currently active on the monitor wall, monitors that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can have their borders, background or text configured to appear in

a specific color, based on their current source. Alarm monitors can provide this information through their text and background colors.

To configure an alarm monitor's background or text colors for source reporting

- 1 In XEdit, open a layout, and click the alarm monitor whose source reporting behavior you want to configure.

Note: Double-click the alarm monitor, if it is part of a composite monitor.


- 2 In the **Properties** pane, scroll down to the **Alarms/Tallies** section.

Alarms/Tallies	
Text color	R:255 G:255 B:255
Text - Disabled color	R:255 G:255 B:255 T:100%
Text - Normal/OK color	R:255 G:255 B:255 T:100%
Text - Minor/Warning color	R:255 G:255 B:255
Text - Major color	R:255 G:255 B:255
Text - Critical/Error color	R:255 G:255 B:255
Background	R:30 G:30 B:30
Background - Disabled color	R:30 G:30 B:30 T:100%
Background - Normal/OK color	R:0 G:170 B:0 T:100%
Background - Minor/Warning color	R:170 G:170 B:0
Background - Major color	R:220 G:120 B:0
Background - Critical/Error color	R:170 G:0 B:0
Display alarm latch	☐
Latch colors	Same as background colors
Blink mode	No blink
Cycling type	cycle
Cycling period	2,000

- 3 Click the text or background color box for a state you want associated with a distinctive color, based on the monitor's current source.
- 4 Click the button that appeared at the end of the box.


Alarms/Tallies	
Text color	R:255 G:255 B:255 
Text - Disabled color	R:255 G:255 B:255 T:100%
Text - Normal/OK color	R:255 G:255 B:255 T:100%
Text - Minor/Warning color	R:255 G:255 B:255
Text - Major color	R:255 G:255 B:255
Text - Critical/Error color	R:255 G:255 B:255
Background	R:30 G:30 B:30
Background - Disabled color	R:30 G:30 B:30 T:100%
Background - Normal/OK color	R:0 G:170 B:0 T:100%
Background - Minor/Warning color	R:170 G:170 B:0

- 5 In **Colors**, select the appropriate level from the **Source color level** list. See [Configuring color level assignments](#) on page 101, for more information.

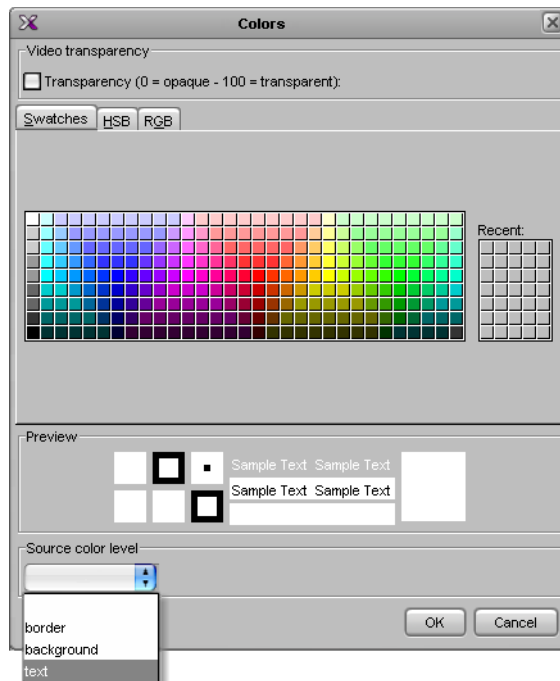

- 6 Set the color's transparency as required.
- 7 Set the color to be used for sources whose color levels might not be defined, by clicking the tab that corresponds to the color space you want to use, and then choosing a color.
- 8 Click **OK** to close the color picker window.

In the **Properties** pane, the name of the selected source-based color level appears next to the fallback color (and transparency, if used).

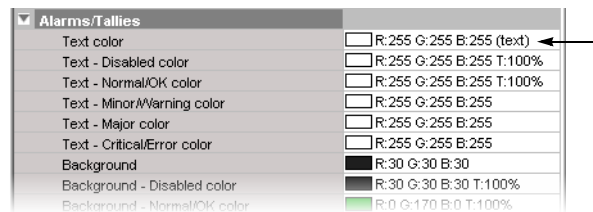

- 9 Repeat from [step 3](#) for the remaining colors you want to set.

Configuring Subtitling Monitors

To monitor subtitling from a DVB or SCTE 27 stream

- 1 To add a subtitling monitor, click the Subtitling monitor button  on the toolbar, click the layout, and then move or resize the monitor as needed.
- 2 Click the subtitling monitor you want to configure.



The subtitling monitor's attributes appear in the **Properties** pane.

Assignments	
Border alarm level	TS Loss
Monitor wall destination	None
Name	subtitling0
Source	
Video level	video1
Appearance	
Background color	 R:0 G:0 B:0
Bevel	none
Hide at loss of subtitling	☒
Aspect ratio	
Default aspect ratio	16:9
Custom aspect ratio	16:9
Alarms/Tallies	
Border color - Pending color	 R:7 G:7 B:7
Border color - Disabled color	 R:7 G:7 B:7
Border color - Normal/OK color	 R:7 G:7 B:7
Border color - Minor/Warning color	 R:170 G:170 B:0
Border color - Major color	 R:220 G:120 B:0
Border color - Critical/Error color	 R:170 G:0 B:0
Border thickness - Pending thickness	2
Border thickness - Disabled thickness	2
Border thickness - Normal/OK thickness	2
Border thickness - Minor/Warning thickness	2
Border thickness - Major thickness	2
Border thickness - Critical/Error thickness	2
Blink mode	No blink
Display alarm latch	☐
Actions/Scripts	
Mouse click	
CC/Subtitling	
Text mode	Auto sense
DVB subtitling language	DVB stream 1
SCTE 27 subtitling language	SCTE 27 stream 1


The first alarm level is selected by default for alarm reporting.

- 3 If you want to monitor a different alarm level, or the source's global alarm, select the appropriate level from the **Border alarm level** list.


Assignments	
Border alarm level	
Monitor wall destination	TS Loss
Name	GlobalAlarm
Source	All Silent
Video level	
Appearance	
Background color	 R:0 G:0 B:0

The first video level applies by default.


- 4 If your system's logical sources include more than one video level, select the one you want to monitor from the **Video level** list.

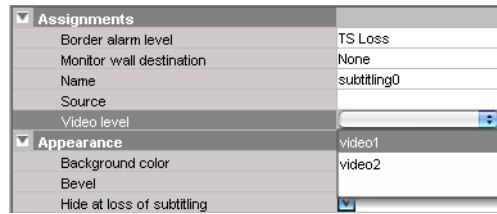

- 5 If you want to replace the default name, type a new name in the **Name** box.

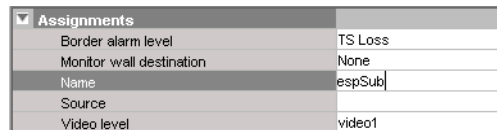


- 6 If you want to assign a logical source, drag the appropriate element from the **Channels/Sources** list that appears on the **Tools** pane, to the subtling monitor.

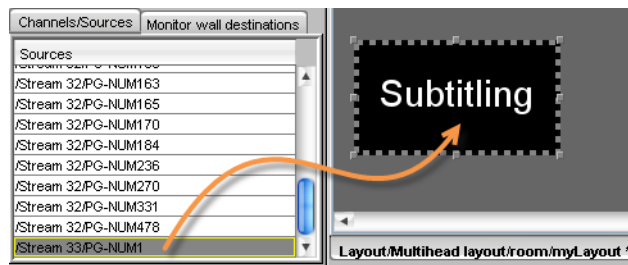


The selected logical source's name appears in the **Source** box.



- 7 If you want to pre-select a specific text mode for this monitor, select a value from the **Text mode** list (see [Teletext](#), [Subtitles](#), and [Closed Captions](#) on page 166).

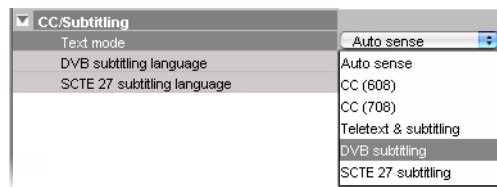


- 8 If you want to pre-select a specific DVB subtitles language for this monitor, click to expand the **DVB subtitles language** list, and then select the appropriate language or DVB stream you want to monitor.

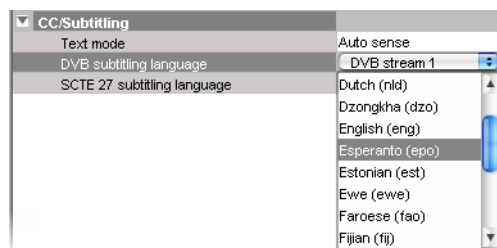

The list of subtitles streams and languages contains the following:

- A series of DVB streams identified by their relative number: **DVB stream 1** to **DVB stream 12**. Choose from this series if you want to always monitor the third available subtitling stream, for example.
- A list of all supported languages, in alphabetical order based on the English name, which is followed with the corresponding ISO 639-2 alpha-3 code. Choose from this series if you want to monitor subtitling in a specific language.

When XEdit is connected to the multiviewer, the available languages are indicated in bold text. The ISO 639-2 alpha-3 code for each available language, and the corresponding PID appear in the list of relative subtitling streams.

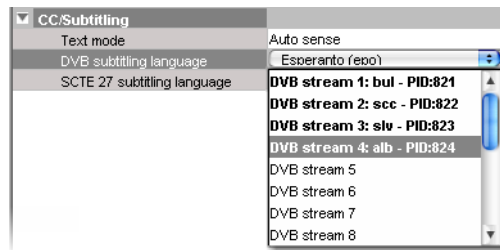

Then, following **DVB stream 12**, for each of the currently available languages, the name, the 3-letter code, and the corresponding PID appear in bold text before the list of all supported languages.



- 9 If you want to pre-select a specific SCTE 27 subtitling language for this monitor, click to expand the **SCTE 27 subtitling language** list, and then select the appropriate language or SCTE 27 stream you want to monitor.



 
The list of subtitling streams and languages contains the following:

- A series of SCTE 27 streams identified by their relative number: **SCTE 27 stream 1** to **SCTE 27 stream 12**. Choose from this series if you want to always monitor the third available subtitling stream, for example.
- A list of all supported languages, in alphabetical order based on the English name, which is followed with the corresponding ISO 639-2 alpha-3 code. Choose from this series if you want to monitor subtitling in a specific language.

When XEdit is connected to the multiviewer, the available languages are indicated in bold text. The ISO 639-2 alpha-3 code for each available language, and the corresponding PID appear in the list of relative subtitling streams.

Then, following **SCTE 27 stream 12**, for each of the currently available languages, the name, the 3-letter code, and the corresponding PID appear in bold text before the list of all supported languages.


- 10 Modify the subtitling monitor's **Appearance** properties as needed.




- 11 If you want to use the subtitling monitor's background color for source reporting:
 - a Click the **Background color** box, and then click the button that appeared at the end of the box.




- b In **Colors**, select the appropriate level from the **Source color level** list. See [Configuring color level assignments](#) on page 101, for more information.

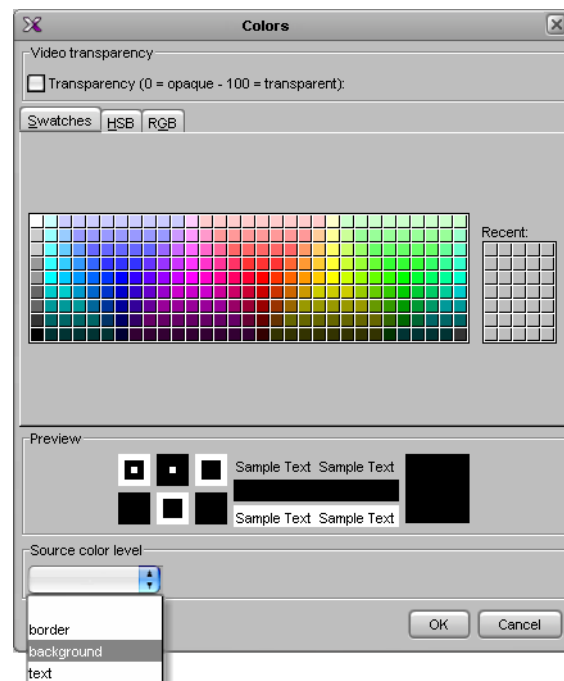

- c Set the color's transparency as required.
 - d Set the color to be used for sources whose color levels might not be defined, by clicking the tab that corresponds to the color space you want to use, and then choosing a color.
 - e Click **OK** to close the color picker window.
 - f In the **Properties** pane, the name of the selected source-based color level appears next to the fallback color (and transparency, if used).

 


 - 12 Change the **Default aspect ratio** as needed.



This value is used in the absence of aspect ratio information in the DVB or SCTE 27 subtitling stream, when the associated video stream is not decoded. When the video is decoded, the video signal's aspect ratio is used, in the absence of aspect ratio information in the subtitling stream. See [Setting a Video Monitor's Aspect Ratio](#) on page 250 for more information, including on selecting a custom aspect ratio.

- 13 See [Configuring a Video Monitor's Alarm Reporting Behavior](#), on page 257, and to [Configuring a Video Monitor's Source Reporting Behavior](#), on page 258, to configure the subtitling monitor's other alarm reporting, and source reporting features.

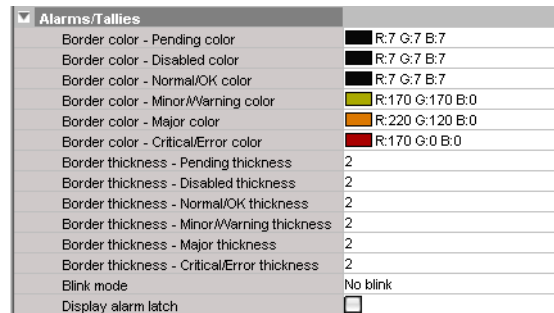

- 14 See [Creating Monitor Wall Actions](#), on page 324 to configure mouse-click actions for this subtitling monitor.




- 15 On the **File** menu, click **Save**.

Configuring Metadata Monitors


To monitor XDS data, or digital content advisory descriptor (CAD) information

- 1 Click the Metadata monitor button  on the toolbar, click the layout, and then move or resize the monitor as needed.

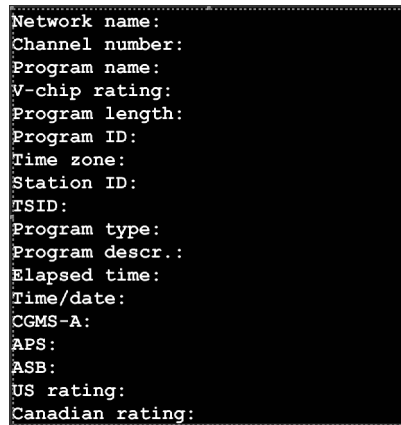


Alternatively, you may choose to layer this monitor on top of the video window within a composite. See [Working with Composite Monitors](#) on page 308, for instructions on how to add elements to a composite.

- 2 In the **Properties** pane, select the check boxes that correspond to the data elements you want the monitor to display.
 - XDS data: APS, ASB, CGMS-A; channel number; elapsed time; network name; program description, ID, name, length, and type; station ID; TSID; time/date; time zone; V-chip rating
 - CAD information: US rating, Canadian rating

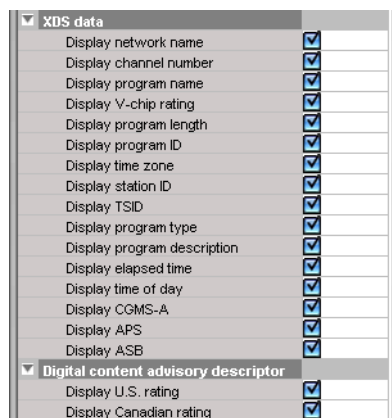

- 3 You can also set appearance properties, including the font and size of the text labels, or choose not to display the labels by clearing the **Display legend** check box.

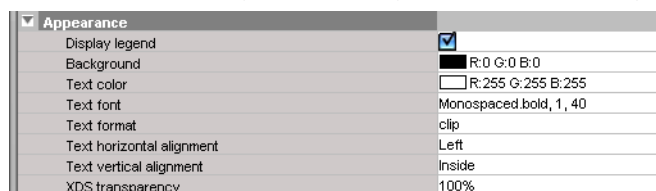

The selected monitor is updated accordingly in the layout.

- 4 Make the appropriate assignments (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242), and select a video level, if necessary.

Assignments	
Monitor wall destination	None
Name	metadata display0
Source	
Video level	video1

- 5 Click the Save button on the toolbar.

Configuring V-Chip Monitors


A V-chip monitor provides a visual indication of the V-chip rating from the CC (608) metadata in an SD video signal, or from the CC (608) legacy caption data when such data is present within an HD video signal.

Note: Extraction of CC (608) captions and CC (608) legacy captions is available with the *Extraction of CC, Subtitling and XDS metadata* option (CC/XDS). This requires this option to be enabled (see the multiviewer's *Installation & Service Manual* for more information).

To add a V-chip monitor to a layout

- 1 Click the V-chip monitor button  on the toolbar, click the layout, and then move or resize the monitor as needed.


You may choose to layer this monitor on top of the video window within a composite. See [Working with Composite Monitors](#) on page 308, for instructions on how to add elements to a composite.

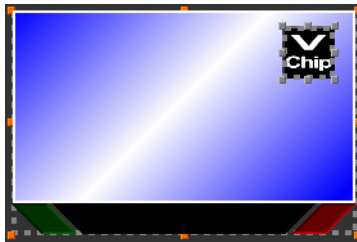

- 2 In the **Properties** pane, set the transparency attribute to the appropriate value for your purposes, by clicking the V-chip transparency box, and then using the slider or typing a value directly into the box.




- 3 If you want to preview the logo associated with a specific V-chip rating, select it from the **V-chip rating preview** list. For example:

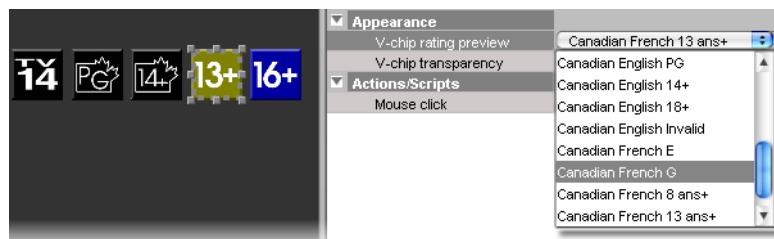

Note: As its name implies, the V-chip rating preview is only a preview, and its value is not saved with the layout.

 - 4 Make the appropriate assignments (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242), and select a video level if necessary.



5 On the **File** menu, click **Save**.

Notes

- Unlike alarms, the V-chip rating associated with a video signal that is currently monitored on the monitor wall is not relayed to the XEdit user interface, when working in online mode.
 - The V-chip monitor uses the holding time configured with the **XDS filtering** calibrations for the associated video source (see [Calibrating Metadata Holding Time](#) on page 140). Once the specified holding time has expired, the V-chip monitor displays the N/A logo ().
 - When V-chip data cannot be extracted from the current video signal, the V-chip monitor displays the N/A logo ().
-

Configuring Clocks


In addition to the default combo-type clock that can be added to a layout by using the Clock button  on the toolbar, the predefined monitor library includes a selection of analog and digital clocks.

Notes

- The KMV-3901/3911 and Kaleido-XQUAD do not support analog clocks.
- In the case of a KMV-3901/3911, Kaleido-XQUAD, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X, the system time is always based on UTC. However, if you want to see the time from different time zones on the monitor wall, you can configure different clocks accordingly.

To configure a clock

- 1 In the **Layouts** tab, click the clock you want to configure.

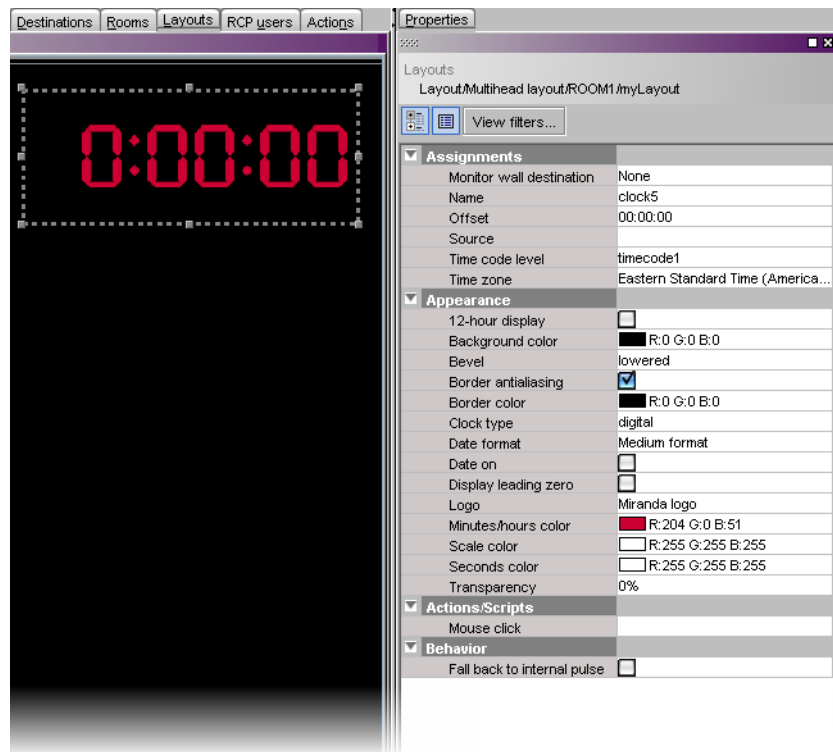


- 2 In the **Properties** pane, make the appropriate assignments:

- Determine the time source (see [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242), and select a time code level if necessary.

Assignments	
Monitor wall destination	None
Name	clock5
Offset	00:00:00
Source	Input A/Channel 01
Time code level	timecode1
Time zone	Eastern Standard Time (America...

- Select the appropriate time zone for your purposes.

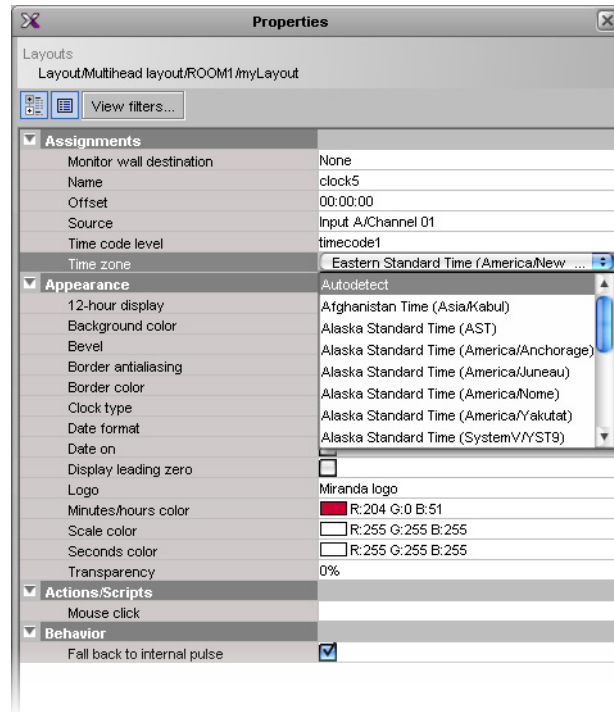

If you select **Autodetect**, then the clock will use the time zone from the assigned source, based on the following rules:

- If the clock is bound to an LTC or DVITC time code that includes time zone information, then the time zone is decoded from the time code.
 - If the clock is bound to the system time, or to an LTC or DVITC time code that *does not* include time zone information, then:
 - in the case of a Kaleido-X or Kaleido-X16 multiviewer model, the time zone configured in XAdmin applies;
 - in the case of a KMV-3901/3911 or Kaleido-MX, the system time is always based on UTC.
- 3 If the clock is bound to an LTC or DVITC time code, and you want it to momentarily use the multiviewer's internal clock for reference should the assigned time code become unavailable, then select **Fall back to internal pulse**.



When a clock configured with this option loses its time reference, it will not stop but keep working to the beat of the multiviewer internal clock instead.

Notes


- When a clock switches between the LTC or DVITC signal, and the multiviewer's internal clock reference, you may notice a one-second offset on the monitor wall.

Notes (continued)


- Refreshing the current layout (or switching to another layout and then back) cancels the fallback mechanism. When this happens, the clock that had lost its time reference halts, showing the time it was at the moment the layout was refreshed (or loaded again), based on the multiviewer system clock.

4 Modify the clock's **Appearance** properties as needed:


- From the **Clock type** list, select between a digital, an analog or a combo-type clock.

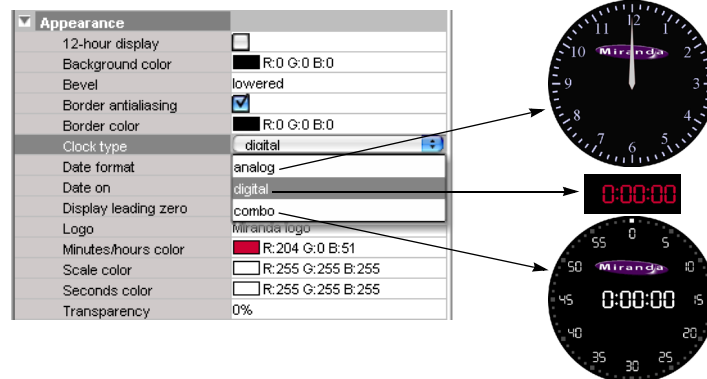

- Resize the clock as needed, set color attributes, and select the appropriate date and time formats.
- In the case of a digital or combo-type clock, select the **Display leading zero** check box, if you want to see the time with a leading zero when it is before 10:00 a.m. or 10:00 p.m.

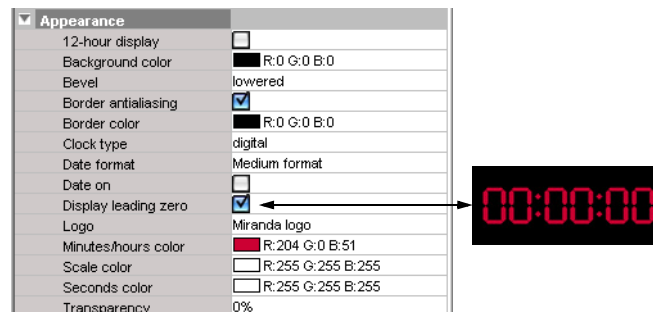

- In the case of an analog or combo-type clock, you can also add a clock logo (see [Inserting a Clock Logo](#) on page 306).
- In the case of an analog or combo clock, if the clock is to be displayed against a pink background— RGB (255, 0, 255) or similar—, or if the current layout belongs to a cascade room (see [page 25](#)), then make sure to clear the **Border antialiasing** check box.

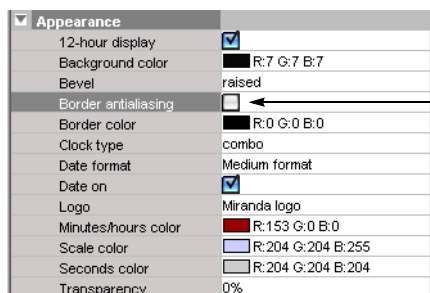

In such cases, if border antialiasing remains enabled, the clock will have a pink outline on the monitor wall.

- 5 Define actions associated to this layout element (see [Creating Monitor Wall Actions](#) on page 324).
- 6 On the **File** menu, click **Save**.


Inserting a Clock Logo

Notes

- The maximum **size** for each image is 256 KB, and the maximum overall size for all images is 10 MB. The image can be in PNG, GIF, or JPEG format. Images can be used on multiple layouts and only need to be imported to the database once.
 - In the case of a **cascade** system, XEdit must be connected to the multiviewer that will provide the source for the corresponding clock. A clock that is not associated with a specific source is displayed by the system closest to the display.
-


To insert a clock logo

- 1 In the **Properties** pane, click the **Logo** box, under **Appearance**.
- 2 Click the button that appeared at the end of the box.

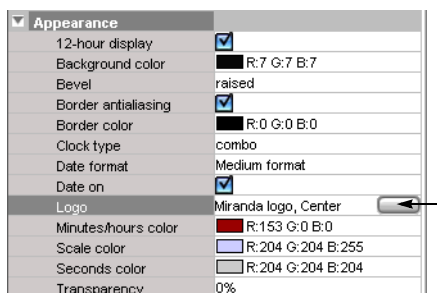

The **Select Image** window appears.

- 3 If the logo you want to use is not already listed in **Select Image**, then click the **Open**  button to open the **Browse Image** window. Locate the image, select it, and then click **Open**.

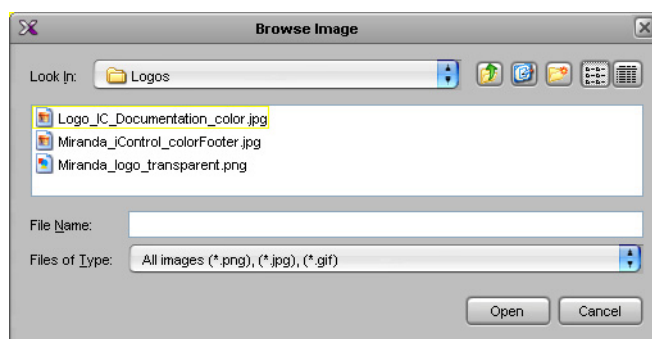

The image is imported into the database.

- 4 In **Select image**, select the logo you want to use from the **Image selection** list, and then click **OK**.



The logo appears on the clock background.

Working with Composite Monitors

Creating a Composite Monitor

Composite monitors encapsulate a number of primary elements (e.g., a video monitor, one or two audio monitors, a UMD, and a time code) that can then be managed as a single object. The following example outlines the basic rules to follow, in order to create composite monitors that can be resized elegantly.

To create a composite monitor

- 1 Open an existing layout or create a new one.
- 2 Click the Composite button  on the toolbar, and then click the layout. Resize the empty composite box approximately, to a size that will be appropriate for the display where it is to appear.



Empty composite


- 3 Right-click the empty box, and then click **Unlock** on the menu.
Notice that the handles around the box boundary line become orange.



Unlocked empty composite

Note: If you double-click a composite monitor, the handles also become orange. However, in such a case, you cannot move or resize individual components within the composite (see [Unlocking a Composite Monitor](#) on page 313).


- 4 Add a monitor to the composite, either using a button on the toolbar or dragging an element from a monitor library. For example, click the Video monitor button  on the toolbar, and then click inside the composite to add a video monitor.

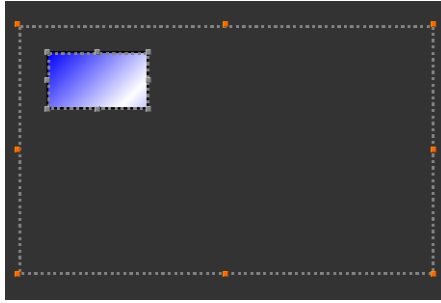

Video monitor within unlocked composite


Note: Only primary monitors (not composite) can be part of a composite.

- 5 Click the Audio monitor button  on the toolbar, and then click inside the composite to add an audio level meter.

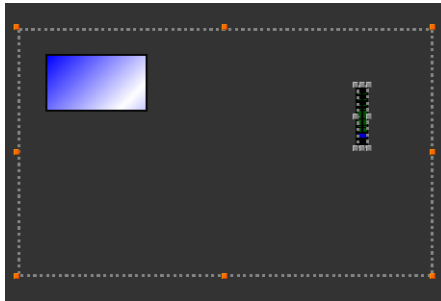


Audio level meter within unlocked composite

- 6 Click the UMD button  on the toolbar, and then click inside the composite to add a UMD.

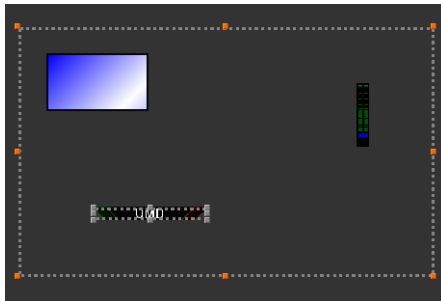


UMD within unlocked composite

- 7 Move the audio level meter *to the very edge* of the composite, using the mouse and then finishing with the arrow keys, and resize it as appropriate.

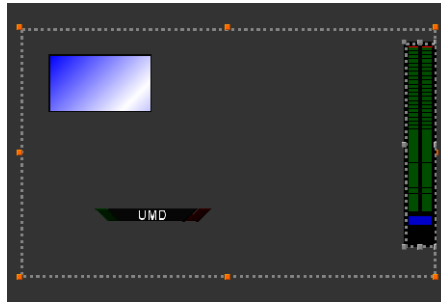

Audio level meter resized and moved to the side

- 8 Move the UMD to the very bottom of the composite, using the mouse and then finishing with the arrow keys, and resize it if needed.

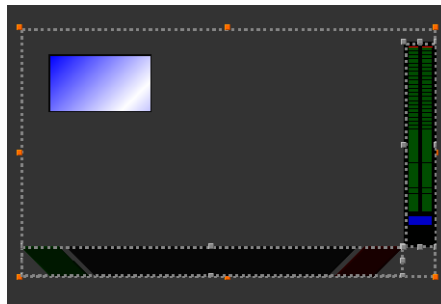


UMD resized and moved to the bottom, with its upper right handle matching the audio level meter's lower left handle

Notes


- Making sure that UMDs and audio monitors do not overlap one another in a composite monitor will ensure optimal performance of any layout where several copies of this composite might appear. As a rule, avoid overlapping graphical elements in a layout.
- To align a monitor more precisely against another, select one of them, and then click the second one while holding the Shift key. It is then possible to drag any of the sizing handles (the larger gray dots) to resize any of the selected monitors, while their relative position remains visible. Whenever appropriate, matching adjacent monitors' corner or center handles together will help achieve a composite that can be resized elegantly.

- 9 Move the video monitor to the top-left corner of the composite, then click its bottom-right corner handle, and drag it to stretch the video until one of its dimensions completely fills the empty area (vertically or horizontally).

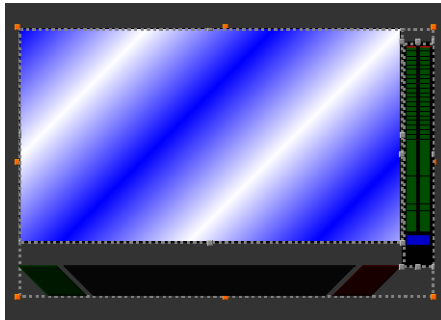

Video monitor stretched to fill the remaining horizontal area


- 10 Drag the video monitor's bottom-center handle until it meets the UMD's bounds.

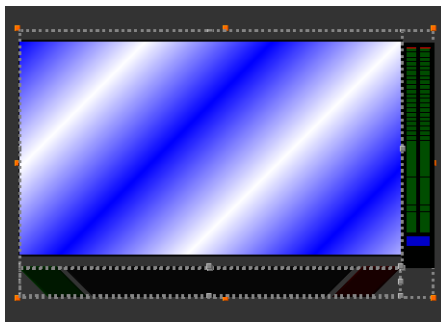

Video monitor stretched vertically with its bounds matching the UMD's


Note: Resizing the video monitor is easier with the UMD's bounds visible: first click the video monitor, and then click the UMD while holding the Shift key.

- 11 Adjust the size and position of the components some more if needed, making sure to keep the peripheral monitors at the very edges of the composite's boundary box, while minimizing empty space within the composite.
- 12 Click outside the composite to lock it.

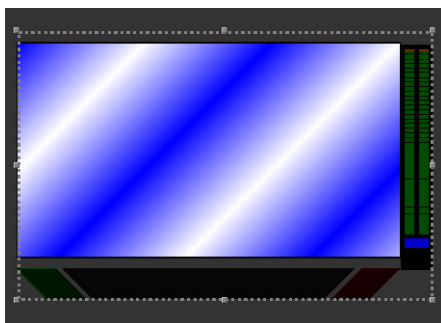

Locked composite

- 13 Drag the composite's top or bottom center handle inwards, until there is no more empty space above and below the video monitor.

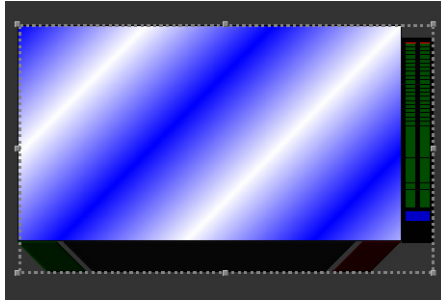


Composite resized to remove remaining empty space around video monitor

- 14 To be able to reuse the new composite in other layouts, drag it onto the appropriate monitor library while *holding the Ctrl key*. See [Creating Monitor Libraries](#) on page 318 for more information.
- 15 On the **File** menu, click **Save**.

Resizing a Composite Monitor

To resize a composite

- Click the composite monitor, and drag any of its *corner handles* outwards or inwards. The composite expands or shrinks while its individual elements maintain their relative position and aspect ratio. Certain multiviewer models have limitations as to the minimum allowed monitor size. See [Monitor Limitations in a Layout](#), on page 240.

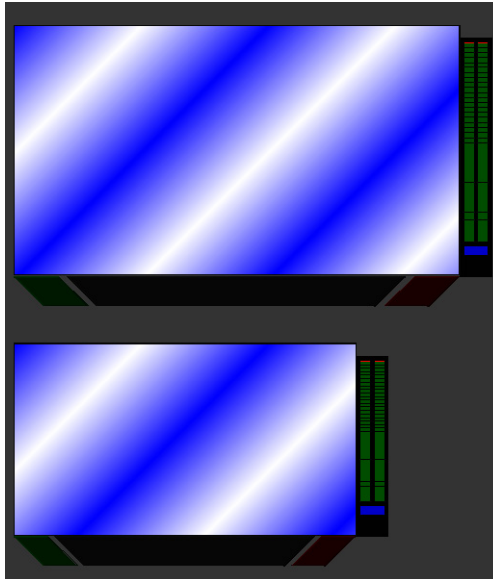

Larger and smaller copies of the original composite

Composite monitors configured for maximum video area

In the case of composite monitors from the legacy *maximum video area* monitor libraries, or that were created with a version of XEdit earlier than 7.40, individual monitors within a composite are resized according to the following rules:


- Video monitors are scaled proportionally, in both width and height.
- Vertical audio monitors are scaled vertically, but their width does not change.
- Horizontal audio monitors, time codes, timers, and UMDs are scaled horizontally, but their height does not change.
- Clocks are not resized.

The following table summarizes these rules:

Monitor type	Height	Width
Video	Scalable	Scalable
Vertical audio monitor	Scalable	Fixed
Horizontal audio monitor, UMD, time code, timer	Fixed	Scalable
Clock	Fixed	Fixed

Unlocking a Composite Monitor

Since a composite monitor functions as a single entity, its individual components are locked together. If you want to configure individual components within a composite monitor, you need to first unlock the monitor. There are two ways in which a composite monitor can be unlocked, one of which prevents you from moving or resizing individual components. An unlocked composite monitor has orange handles around its boundary line.

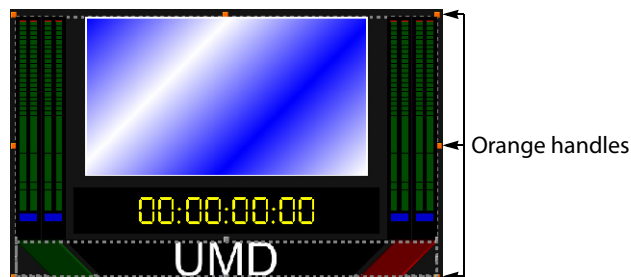

If you want to configure properties for individual components within a composite monitor

- Double-click the composite monitor whose primary elements you want to configure. Notice that the handles around the boundary line become orange. When using this method, you cannot move or resize the monitor's individual components.

If you want to add, move, or resize individual components within a composite monitor

- Right-click the composite monitor you want to modify, and then click **Unlock** on the menu. Alternatively, click the monitor, and then press F2. Notice that the handles around the boundary line become orange.


Using the Region Editor

Opening the Region Editor

Note: The region editor is part of the expert view. To show the expert view, click the **View filters** button on the **Properties** pane's toolbar, and then select the **Expert view** check box. Using the region editor is not recommended. To accomplish most configurations, the standard tools available in the layout editor are sufficient.

To open the region editor


- 1 Click the monitor whose properties you want to see.
- 2 In the **Properties** pane, click the **Bounds** box, under **Size & Position**.
Click the button that appeared inside the box to open the **Region Editor** window.

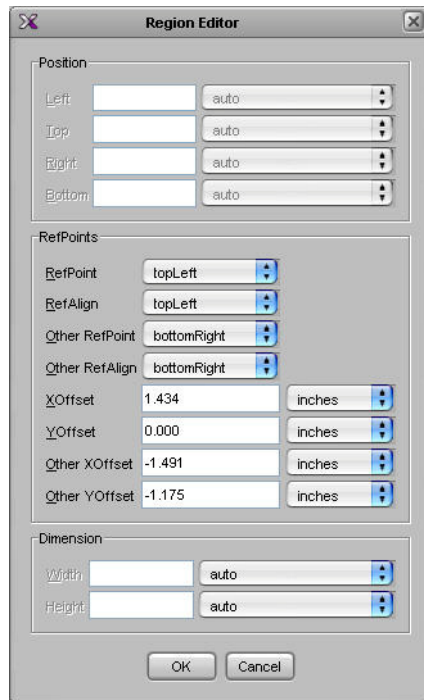

Configuring a Monitor's Position Using the Region Editor

To set a monitor's position on the layout

- 1 For each position, first select the appropriate unit.

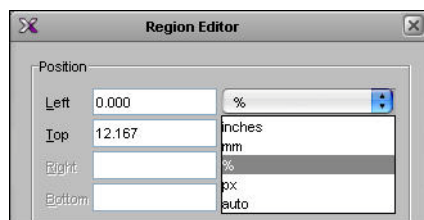


- 2 Type values in the **Left**, **Top**, **Right**, and **Bottom** boxes, relative to the upper-left corner of the display.
- 3 Click **OK** to close the editor.
- 4 On the **File** menu, click **Save**.

Configuring a Monitor's Dimensions Using the Region Editor

To configure a monitor's dimensions

- 1 For each dimension, first select the appropriate unit.

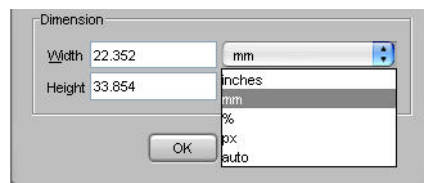

- 2 Type values in the **Width** and **Height** boxes.
- 3 Click **OK** to close the editor.
- 4 On the **File** menu, click **Save**.

Format Painting

Copying Properties from one Monitor to Another

Every monitor in a layout has properties related to its appearance that you can configure in the **Properties** pane. The *Copy properties* tool  copies most of these properties from one monitor *to another of the same type* (e.g., audio monitor to audio monitor, clock to clock, etc.). Assignments, and actions are not copied. Size is not copied by default (see [TIP](#), below). To copy actions, use the *Copy actions* tool (see [Copying Actions from one Monitor to Another](#) on page 317). To copy size only, use the *Copy size* tool (see [Copying Size from one Monitor to Another](#) on page 316).

To use the Copy properties tool

- 1 In the **Layouts** tab, click the monitor whose properties you want to copy to another monitor of the same type.
The monitor's boundary box appears.
The Copy properties button  becomes available on the toolbar.
- 2 Click the Copy Properties button to switch to format-painting mode.
- 3 Point to another monitor of the same type in the layout.
The pointer changes to a hand with the index finger pointing , indicating that the properties of the first monitor (whose boundary box is still shown) can be copied onto the monitor beneath the pointer.
- 4 Click the monitor beneath the pointer to copy the properties onto that monitor.
The monitor's appearance changes to reflect the new properties.

TIP

To have the width and height copied as well, press and hold the Ctrl key while clicking the monitor.

- 5 Repeat this for every monitor whose properties you want to change.
- 6 Click the Select button  on the toolbar to exit format-painting mode when you have finished.

Copying Size from one Monitor to Another

The size of every monitor in a layout can be adjusted by the user, by dragging handles on the boundary box that appears when the monitor is selected. The *Copy size* tool  copies the size from one monitor *to another monitor of the same type*. The Copy size tool does not copy any other properties from one monitor to another.

To use the Copy size tool

- 1 In the **Layouts** tab, click the monitor whose size you want to copy to another monitor of the same type.
The monitor's boundary box appears.
The Copy size button  becomes available on the toolbar.
- 2 Click the Copy size button to switch to size-painting mode.

- 3 Point to another monitor of the same type in the layout.
The pointer changes to a hand with the index finger pointing , indicating that the size of the first monitor (whose boundary box is still shown) can be copied onto the monitor beneath the pointer.
- 4 Click the monitor beneath the pointer to copy the size onto that monitor.
The monitor's size changes to match that of the first monitor.
- 5 Repeat this for every monitor whose size you want to change.
- 6 Click the Select button  on the toolbar to exit size-painting mode when you have finished.

Copying Actions from one Monitor to Another

The *Copy actions* tool  copies the single-click and double-click actions from one monitor *to another monitor of the same type*. The Copy actions tool does not copy any other properties from one monitor to another.

To use the Copy actions tool


- 1 In the **Layouts** tab, click the monitor whose actions you want to copy to another monitor of the same type.
The monitor's boundary box appears.
The Copy actions button  becomes available on the toolbar.
- 2 Click the Copy actions button to switch to action-painting mode.
- 3 Point to another monitor of the same type in the layout.
The pointer changes to a hand with the index finger pointing , indicating that the actions of the first monitor (whose boundary box is still shown) can be copied onto the monitor beneath the pointer.
- 4 Click the monitor beneath the pointer to copy the actions onto that monitor.
The monitor's actions change to match that of the first monitor.
- 5 Repeat this for every monitor whose actions you want to change.
- 6 Click the Select button  on the toolbar to exit action-painting mode when you have finished.

Managing Monitor Libraries

Creating Monitor Libraries

To create a monitor library

- 1 Click the **Layouts** tab.
- 2 On the **Tools** pane, click **My monitors**.
- 3 Right-click inside the custom monitor libraries area, and then click **New monitor library** on the menu. Alternatively, click **New monitor library** on the **File** menu.

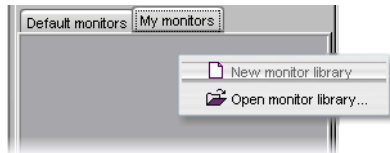

The new monitor library appears in the custom monitor libraries area on the **Tools** pane.

- 4 On the **File** menu, click **New**. Alternatively, click **Open** to open an existing layout.
- 5 Click the appropriate toolbar button, then click the layout to add a monitor of the selected type. Alternatively drag a monitor from one of the existing libraries onto the layout, or choose an existing monitor within the layout.
- 6 Customize the monitor if necessary, and then drag it onto the new monitor library while *holding the Ctrl key*.

Note: It is not possible to customize a monitor once it is inside a library.

- 7 Right-click anywhere inside the monitor library, and then click **Save monitor library** on the menu.

The **Save Monitor Library** window appears.

- 8 Type a name for the new custom monitor library, and then click **Save**.

Closing a Monitor Library

To close a monitor library

- Once the custom library is saved, you can right-click in the library area, and then click **Close monitor library** on the menu. Alternatively, on the **File** menu, click **Close monitor library**.

Opening a Monitor Library

To open a custom library

- Right-click inside the custom monitor libraries area, on the **Tools** pane, and then click **Open monitor library** on the menu.
- On the **File** menu, click **Open monitor library**.
- On the **File** menu, point to **Open recent**, and then select from the list of recently used monitor libraries.

Note: It is possible to have multiple custom libraries open at the same time.

10

Creating Actions

Introduction

This chapter describes how to configure and trigger monitor wall actions, and background actions.

Overview

An action is an operation automatically performed in response to a specific trigger. A *monitor wall action* is associated with a monitor belonging to a specific layout, or directly with a specific layout. It can only be activated when that layout is loaded on the monitor wall, whereas a *background action* can be triggered at any time by any alarm on the multiviewer. Unlike monitor wall actions, background actions are always available within a multiviewer system, regardless of what layouts are currently loaded.

Note: Version 5.30 of the Kaleido Software fixed a bug fix that required changes to the JavaScript code associated with all predefined actions elements in XEdit. For the fix to be applied to actions created with an earlier version of XEdit, open them with version 5.30 or later, and view the underlying JavaScript code by selecting every action element in turn, and then clicking the **View source** button in the **Properties** pane. XEdit will automatically update the JavaScript code. Verify that the first lines in the code start with `var param_<xxx> = <value>`, before saving the action.

Key Concepts

Term	Description
Layout	A group of monitors (or composite monitors) arranged for display on a monitor wall.
Composite monitor	A group of primary monitors.
Monitor	A graphical component used in the creation of a layout. Typical monitors include UMDs, time code monitors, audio monitors, video monitors, and clocks.
System list	Refers to the hierarchical list visible under XEdit's System tab, which gives a virtual representation of the system hardware (i.e., multiviewers and peripheral devices).

Term	Description
Action item	Action elements are associated with a specific action. When defining an action for a monitor, you could specify, for instance, that a specific full screen layout be displayed on the monitor wall in response to the trigger. Multiple action items can be combined as a single action. The following action items are available: • Toggle destination overlay • Unlatch / Acknowledge all • Reset a timer • Pause a timer • Start a timer • Load layout • Monitor audio • Switch router crosspoint • Set GPI output • Show full screen layout • Hide full screen layout • Assign source • Custom (<i>JavaScript</i>)
Trigger	Refers to the event that causes an action to be invoked. For a monitor wall action, a trigger could be a single click or a double click on a monitor, the loading of a layout to the monitor wall, or the unloading of a layout. Background actions are triggered by alarms, or by Gateway commands: • On Disabled: background action is triggered when an alarm is disabled • On Normal/OK: background action is triggered when an alarm reverts to normal • On Minor/Warning: <i>supported for Gateway alarms only</i> • On Major: <i>supported for Gateway alarms only</i> • On Critical/Error: background action is triggered by a critical alarm • On Change / Gateway: background action is triggered by any change in alarms status, or by the <code>setKFireAction</code> Gateway command
Triggering of background actions	Any multiviewer alarm can be used as a trigger to invoke a background action. The end event of any countdown timer can be used as a trigger to invoke a background action. Any GPI input from the multiviewer can trigger a background action. Gateway commands sent by an external device can be used to trigger actions created in XEdit. The system verifies alarm states after a multiviewer has restarted, and every time you create or modify a background action. Consequently, if—for example—an alarm's <i>Normal</i> state was selected as the trigger for a background action, and this alarm's state is <i>Normal</i>, when the action is created, or when the multiviewer has restarted, the action will be executed. Note: A background action triggered by an alarm is always executed, regardless of the alarm's operational mode (see Alarm Suppression on page 162).

Term	Description
Triggering of GPI outputs	Any multiviewer alarm can be used to trigger a GPI output change.
Gateway	Kaleido multiviewers can execute commands received through the <i>Kaleido Remote Control Protocol (Gateway)</i> interface, allowing third-party developers and individual users remote access to some Kaleido functions. Refer to the <i>Kaleido Remote Control Protocol (Gateway) User's Guide</i> , for more information. See Related Documentation , on page 13.

Creating Monitor Wall Actions

Monitor wall actions can be assigned to a specific monitor on a layout, or to the layout itself. Actions associated with a monitor on a layout can only be triggered when the layout is loaded on the monitor wall. Actions associated with a layout, are triggered either upon loading the layout to the monitor wall, or when the layout is being replaced with another one.

 
Assigning a monitor wall action to a monitor

To assign a monitor wall action to a monitor


- 1 Open the layout that contains the monitor to which you want to assign an action, or create a new layout.
- 2 In the **Layouts** tab, unlock the appropriate composite monitor if applicable (see [Unlocking a Composite Monitor](#) on page 313), and then click the monitor you want to configure.
- 3 In the **Properties** pane, click the **Mouse click** box, under **Actions/Scripts**.



Note: For a UMD, three action types can be set, and there is a box for each under **Actions/Scripts**: **Left tally - Mouse click**, **Right tally - Mouse click**, and **UMD click**.




- 4 Click the button that appeared at the end of the box you clicked.
The **Action Editor** window appears.
- 5 In **Action Editor**, drag the appropriate action item from the **Action List** pane to the middle pane under either the **Single Click** or **Double Click** tab.

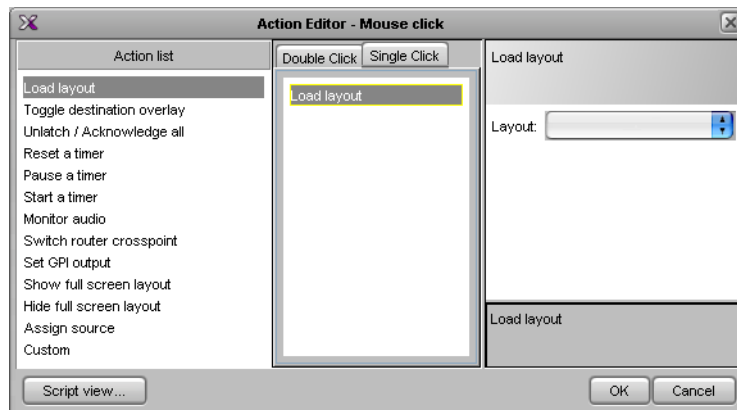

- 6 Select the action in the middle pane.
- 7 In the right pane, specify the attributes of the action.

- 8 Repeat this procedure if you want to add action items. If multiple actions are specified, the trigger (e.g., single click on UMD) will cause all of these actions to be executed in order.

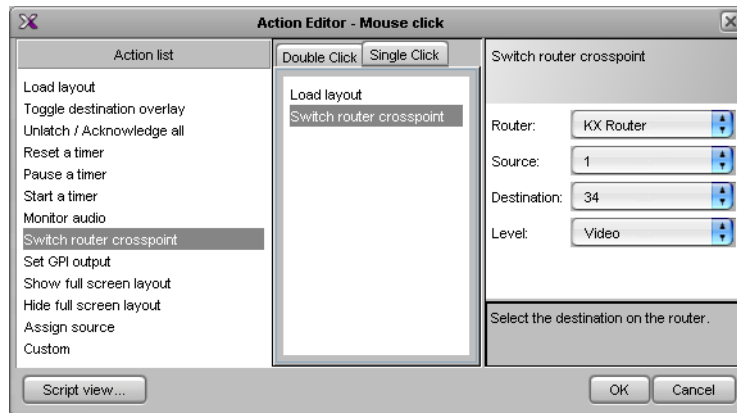

- 9 When finished, click **OK** to close the window, and then click the Save toolbar button. The next time the layout is loaded on the monitor wall, the actions will be available.

Note: When you click a monitor on the monitor wall, all the actions associated with the single-click event are triggered. When you double-click a monitor, all the actions associated with the single-click AND the double-click events are triggered.

Assigning a monitor wall action to a layout

To assign a monitor wall action to a layout

- 1 Open the layout to which you want to assign an action, or create a new layout.
- 2 In the **Layouts** tab, click the layout background.
- 3 In the **Properties** pane, click the box that matches the type of action you want to set:
 - **On layout exiting**—to define an action to be executed when the layout is unloaded (i.e., when it is about to be replaced with another one, on the monitor wall), or
 - **On layout loading**—to define an action to be executed when the layout is loaded to the monitor wall.
- 4 Click the button that appeared at the end of the box you clicked.




The **Action Editor** window appears.


- 5 In **Action Editor**, drag the appropriate action item from the **Action List** pane to the middle pane (named either **On Unload** or **On Load** depending on the type of action you have selected at [step 3](#)).

Creating Actions

Assigning a monitor wall action to a layout

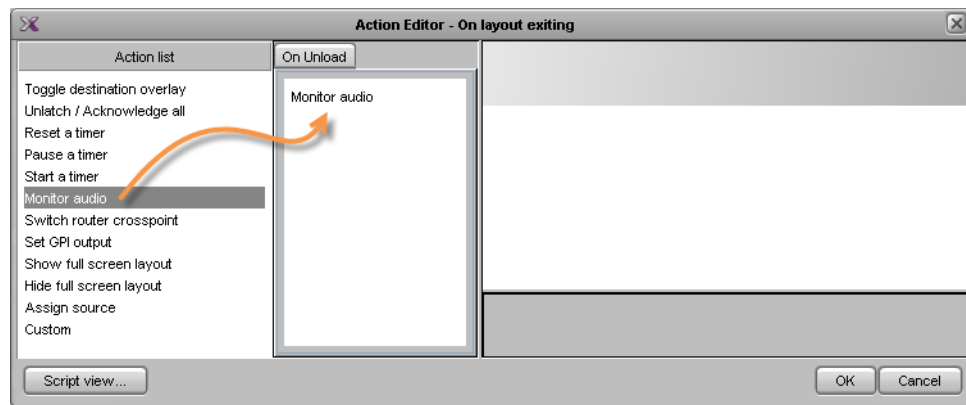

- 6 Select the action in the middle pane.
- 7 In the right pane, specify the attributes of the action.

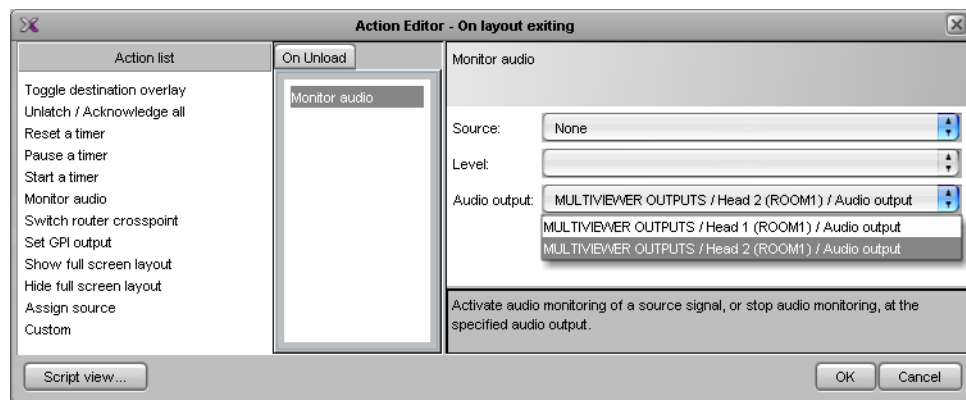


- 8 Repeat this procedure, if you want to add action items.
If multiple actions are specified, the trigger (i.e., the loading or unloading of the layout) will cause all of these actions to be executed in order.
- 9 When finished, click **OK** to close the window, and then click the Save toolbar button.

Creating Background Actions


Creating a Background Action from the Actions Tab

To create a background action

- 1 Open XEdit and load the database associated with the multiviewer for which you want to create a background action. Alternatively, click **Connect** on the **Configure** menu, to work online (see [Using XEdit in Online Mode](#) on page 32).
- 2 Click the **Actions** tab.

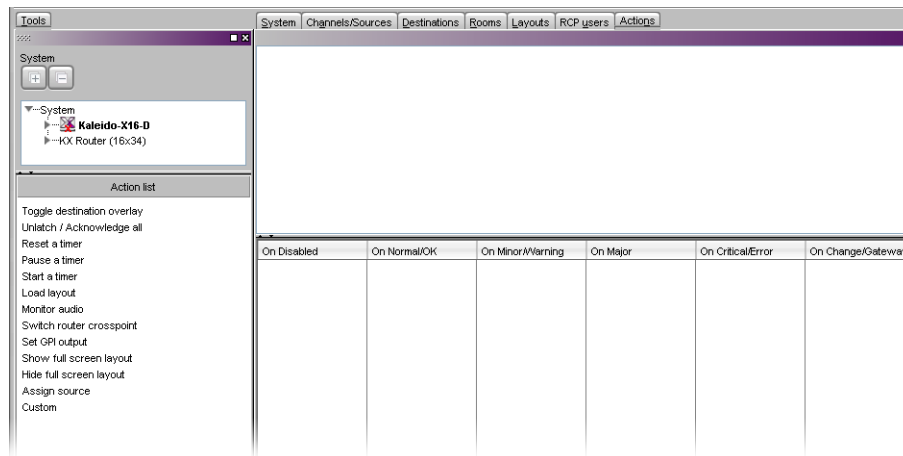


- 3 Click the New toolbar button.

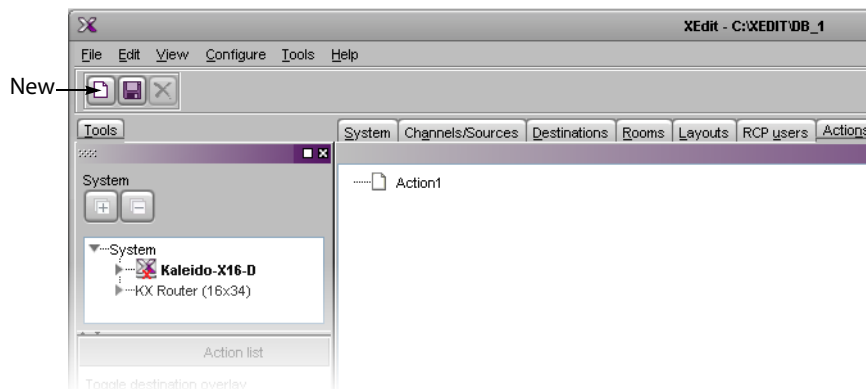

- 4 On the **Tools** pane, click and drag an alarm from the filtered System list onto the new action. This defines the alarm as the trigger for the action.


Creating Actions

Creating a Background Action from the Actions Tab

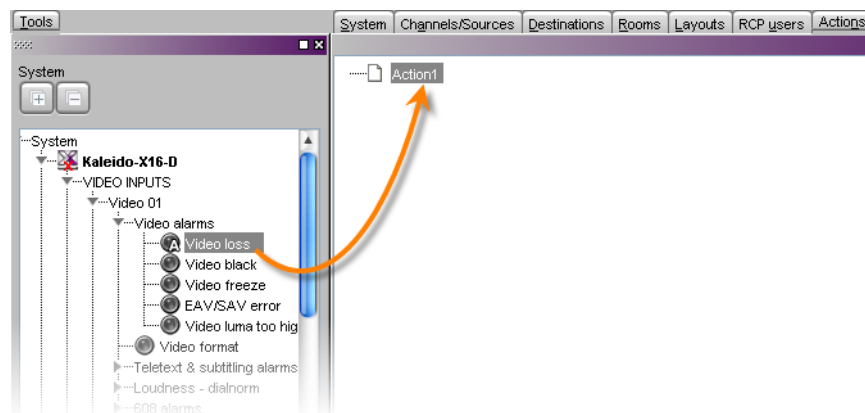


Note: You do not have to perform this step for actions triggered by Gateway commands, because the Gateway alarm itself acts as the trigger. See [Creating an Action that can be Triggered through a Gateway Command](#), on page 330.

- 5 From the **Action list** area of the **Tools** pane, drag one of the available action items onto one of the six columns at the bottom of the **Actions** tab.

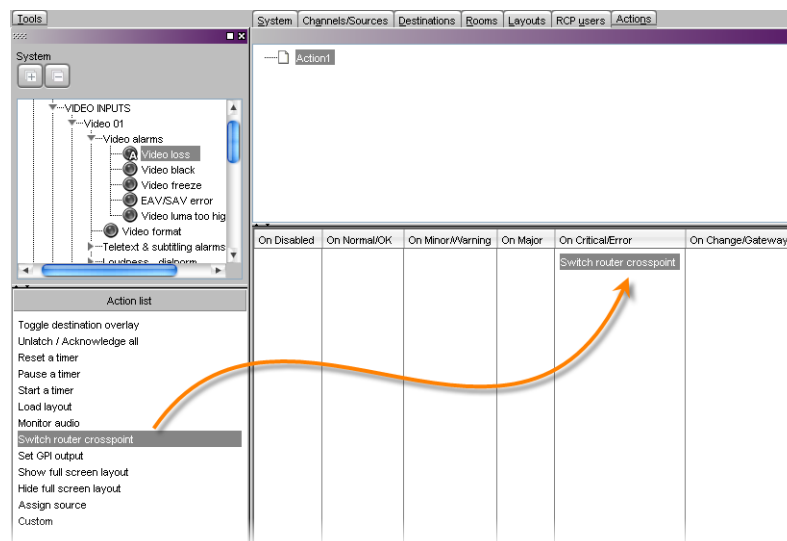

- 6 Configure the action's properties in the **Properties** pane.

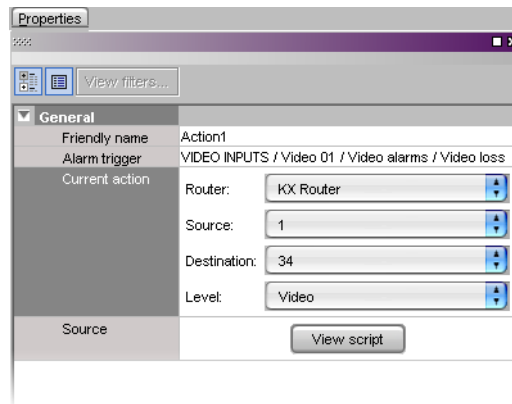

- 7 Repeat [step 5](#) and [step 6](#) as necessary.


Note: If you assign multiple action items to a trigger, you can change the order of execution by dragging items to higher or lower positions in the list. When the background action is triggered, its associated action items are executed in order from top to bottom.

- 8 Click the Save toolbar button.

Creating a Background Action from the System List

To create a background action from the System list

- 1 In the **Description/Calibration** tab (or in any other tab that shows a filtered System list with alarms), right-click the alarm you want to associate with an action.

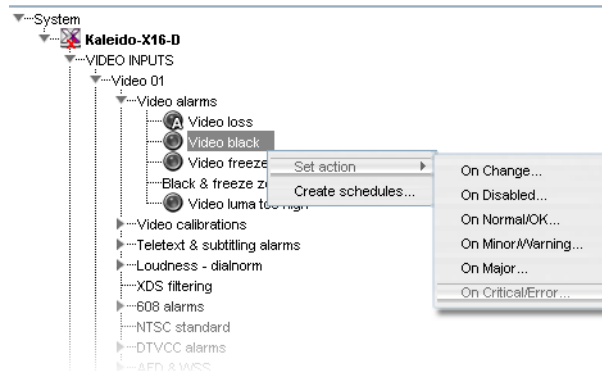

- 2 On the **Set action** menu, select the appropriate trigger condition:
- On Change
 - On Disabled
 - On Normal/OK
 - On Critical/Error


Note: The trigger conditions **on Minor/Warning** and **on Major** are supported for Gateway alarms only.

The **Action Editor** window appears.

Creating Actions

Creating an Action that can be Triggered through a Gateway Command

- 3 From the **Action list** pane, drag one of the available action items to the middle column, and then set the action item's properties in the **Properties** pane.

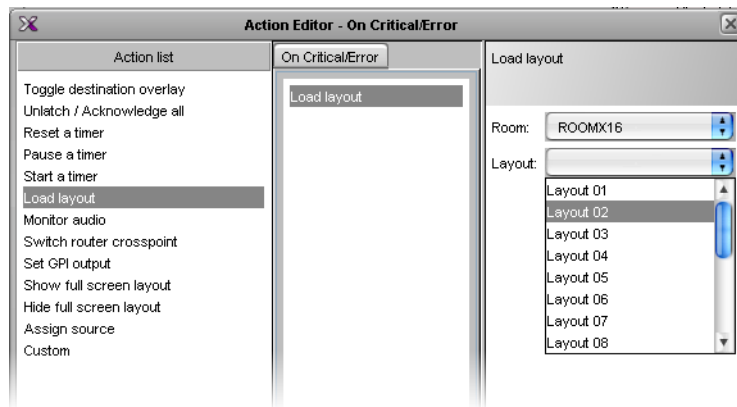


- 4 Repeat [step 3](#) as needed.
- 5 Click **OK** to close the window, and then click the Save toolbar button, to save the action.


Creating an Action that can be Triggered through a Gateway Command

To create an action that can be triggered through the Gateway

- 1 Perform [step 1](#) to [step 3](#) from [Creating Background Actions](#), on page 327.
- 2 From the **Action list** area of the **Tools** pane, drag one of the available action items onto the **On Change / Gateway** column at the bottom of the **Actions** pane.

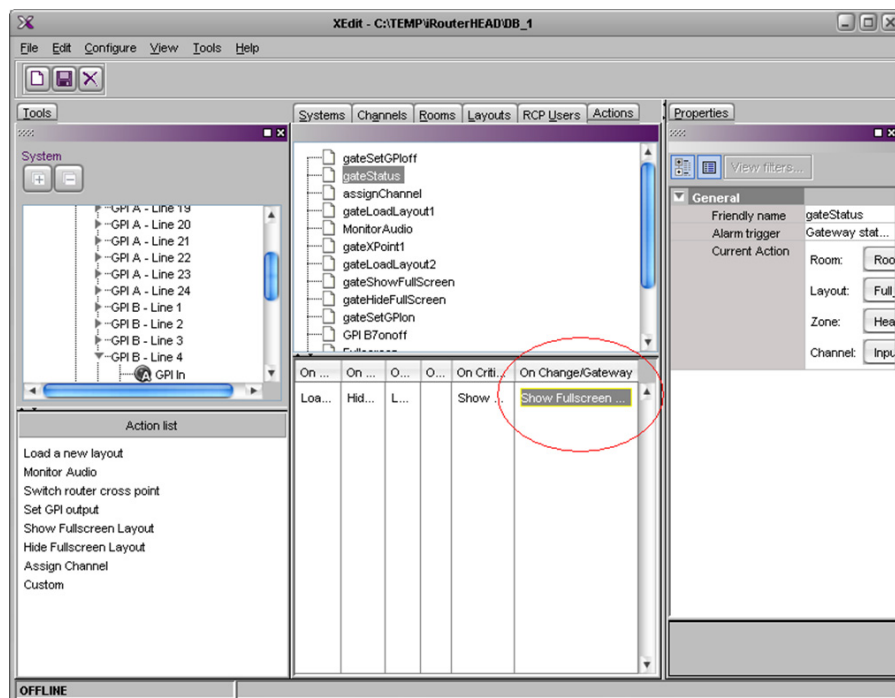

- 3 Under **Properties > General**, type a **Friendly name** for the Action.

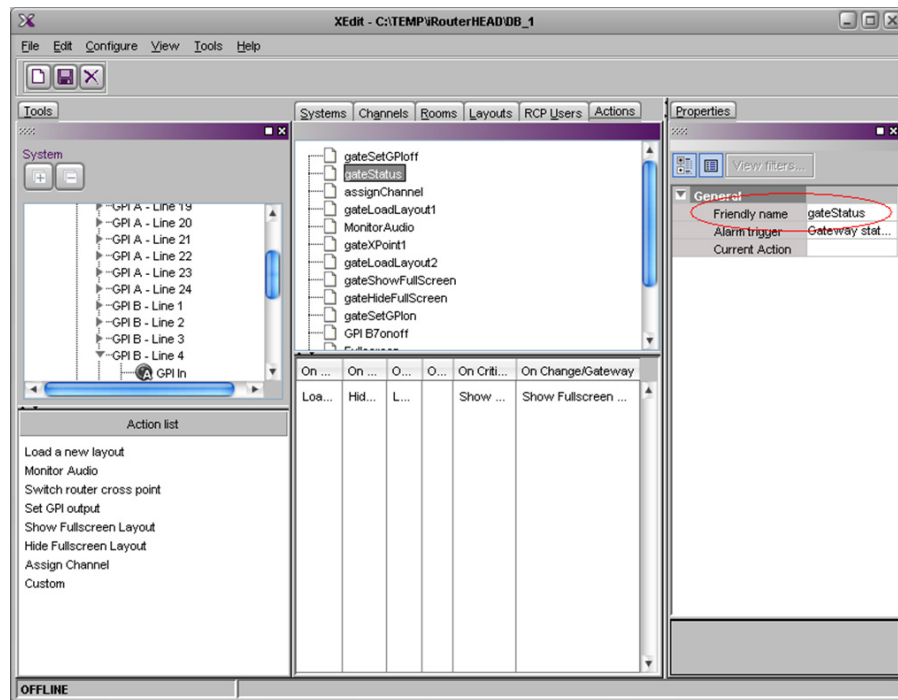

Note: The **Friendly name** is used with the `setKFireAction` command to trigger the action. Refer to the *Kaleido Remote Control Protocol (Gateway) User's Guide*, for details. See [Related Documentation](#), on page 13.

Editing an Action

To edit an action

- 1 Select an action under the **Actions** tab, or in the middle pane of the **Action Editor** window.
- 2 Under the **Properties** pane, modify the action item's parameters
- 3 Click Save on the toolbar if you modified the action under the **Actions** tab, or click **OK** if you modified the action in the **Action Editor** window.

Removing Action Items from an Action

To remove an action item from an action

- 1 Select an action under the **Actions** tab, or in the middle pane of the **Action Editor** window.
- 2 Select one or more action items associated with the action.
- 3 Press the Delete key.
- 4 Click Save on the toolbar if you modified the action under the **Actions** tab, or click **OK** if you modified the action in the **Action Editor** window.

Deleting an Action

To delete an action

- 1 Select the action you want to delete under the **Actions** tab.
- 2 Click the Delete toolbar button.
- 3 Click Save on the toolbar if you modified the action under the **Actions** tab, or click **OK** if you modified the action in the **Action Editor** window.

11

Managing RCP Users

Introduction

A user uses either the Kaleido-RCP2 and RCP-200 panels to connect to the multiviewer using a username/password combination. This chapter explains the configuration of a Kaleido multiviewer for use with a Kaleido-RCP2, an RCP-200 Remote Control Panel, or from the Gateway.

XEdit Quick Start Task List

Follow these steps in XEdit, to set up your RCP users' profiles:

- 1 Create an RCP user. See [Managing RCP Users](#) on page 334.
- 2 Grant room access to the RCP user. See [Managing Room Access](#) on page 336.
- 3 Select the configuration of the external keyboard for this user. See [Setting the Keyboard Language](#) on page 343.

Key Concepts


Term	Description
Kaleido-RCP2	The Kaleido-RCP2 is a multi-function remote control panel designed for use with Grass Valley's Kaleido multiviewers. Ethernet connectivity allows multiple RCP users to access multiple Kaleido systems, allowing convenient access to their real-time operating features. The XEdit application is used to manage certain aspects of the Kaleido-RCP2 such as layout presets and audio monitoring destination
RCP-200	The RCP-200 advanced remote control panel for Densité cards, Kaleido multiviewers, and NVISION/third party routers. It provides a highly intuitive graphical interface and it simplifies video/audio signal processing and control in both single and multi-user environments. The XEdit application is used to manage certain aspects of the RCP-200 such as layout presets and audio monitoring destination.
Gateway	Kaleido multiviewers can execute commands received through the <i>Kaleido Remote Control Protocol (Gateway)</i> interface, allowing third-party developers and individual users remote access to some Kaleido functions. Refer to the <i>Kaleido Remote Control Protocol (Gateway) User's Guide</i> , for more information. See Related Documentation , on page 13.

Managing RCP Users


Adding RCP Users

To add an RCP user to the system

- 1 In the main window, click the **RCP users** tab.
- 2 On the **Tools** pane, right-click anywhere in the **RCP users** area, and then click **New user** on the menu.

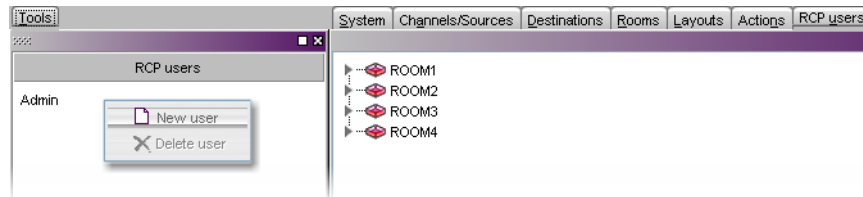

A new user is added to the RCP users list.

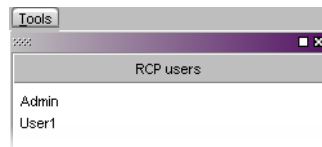


Notes

- New users are called *UserN*, where N = 1, 2, 3 etc.
 - RCP users can be renamed. See [Changing an RCP User's Name or Password](#) on page 345.
 - New users are saved automatically; it is not necessary to click the **Save** button after adding a user to the system.
-


Removing RCP Users from the System

To remove an RCP user from the system

- 1 In the main window, click the **RCP users** tab.
- 2 On the **Tools** pane, select the user you want to remove from the system's RCP users list.
- 3 Right-click the selection, and then click **Delete user** on the menu.

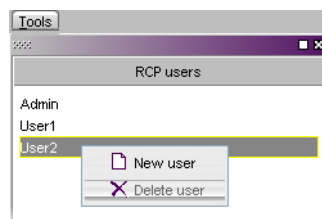

A confirmation window appears.

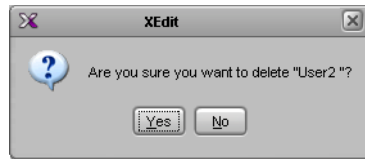

- 4 Click **Yes**.
- 5 On the **File** menu, click **Save**.

Note: The user *Admin* cannot be removed.

Managing Room Access


Granting Room Access to RCP Users

To grant RCP users access to a room

- 1 In the main window, click the **RCP users** tab.
- 2 On the **Tools** pane, select the appropriate users from the RCP users list.

Note: Use Shift+click or Ctrl+click to select multiple users.

- 3 Drag the selected users onto the appropriate room in the **RCP users** tab.
- 4 Expand the room (if it is not expanded already) to verify that the users were added.

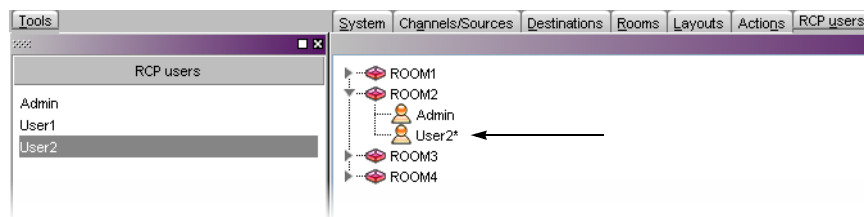

RCP user "User2" has been granted access to Room2

- 5 On the **File** menu, click **Save**.


Removing RCP Users from Rooms

To remove RCP users from rooms

- 1 In the main window, click the **RCP users** tab, expand the appropriate rooms if needed, and then select the users you want to remove.

Note: Use Shift+click or Ctrl+click to select multiple users.

- 2 On the **File** menu, click **Remove user from room**. Alternatively, click the toolbar's Remove button , or right-click and then click **Remove user from room** on the menu.

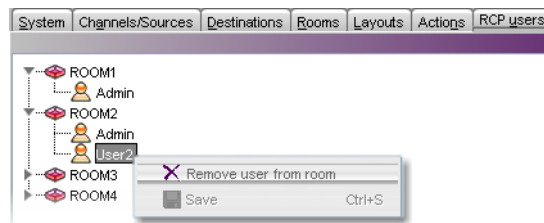

The selected user is removed access to the room.

- 3 On the **File** menu, click **Save**.


Note: The user *Admin* cannot be removed.

Setting Room Preferences

Room preferences will apply by default for any user who log on to the room from a Kaleido-RCP2, or RCP-200 control panel. See [Setting RCP User Preferences](#) on page 339, to learn how to configure preferences for a specific user.

To set default preferences for a room

- 1 In the main window, click the **RCP users** tab, and then select the appropriate room. The selected room's preferences (layout presets, audio monitoring output, mouse pointer size, and timer) are listed in the **Properties** pane.

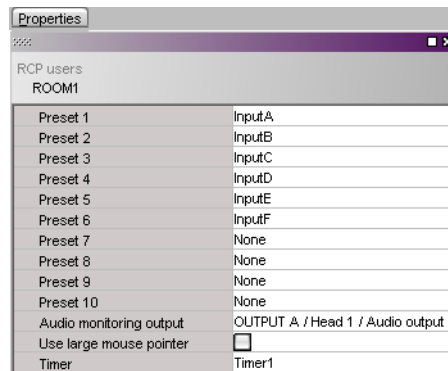

- 2 Modify the room preferences as needed.


Note: An asterisk (*) will appear beside the room in the main pane, if any of its properties are modified. The asterisk will disappear when the changes are saved.

- 3 On the **File** menu, click **Save**.

Assigning Room Layouts to the Kaleido-RCP2 Preset buttons

To assign room layouts to the Kaleido-RCP2 preset buttons


- 1 In the main window, click the **RCP users** tab, and then select the room for which you want to configure layout presets.
- 2 For each Kaleido-RCP2 preset button, click the corresponding box in the **Properties** pane, and then select the appropriate layout from the list.

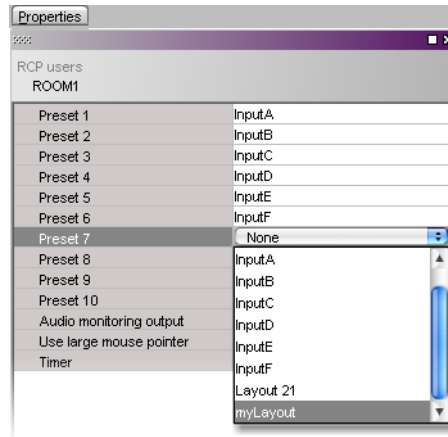

Assigning an Audio Output to the Remote Control Panel's AUDIO MONITORING Button

To assign an audio output to the Remote Control Panel's AUDIO MONITORING button for a room


- 1 In the main window, click the **RCP users** tab, and then select the room for which you want to configure the remote control panel's AUDIO MONITORING button.
- 2 In the **Properties** pane, click the **Audio monitoring output** box, and then select the output used to monitor audio signals, from the list.

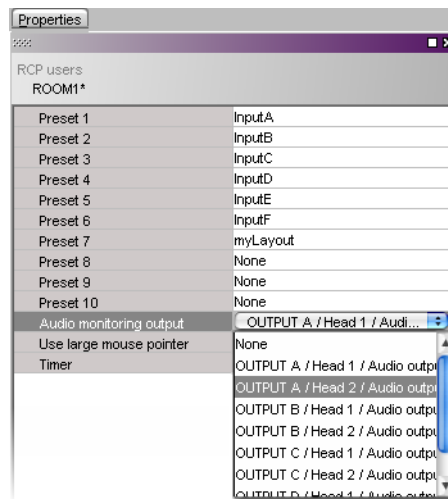

Enabling the Large Mouse Pointer for a Room

To display a larger pointer on the monitor wall for a room

- 1 In the main window, click the **RCP users** tab, and then select the room where you want to use a large pointer on the monitor wall.
- 2 In the **Properties** pane, select the **Use large mouse pointer** check box.

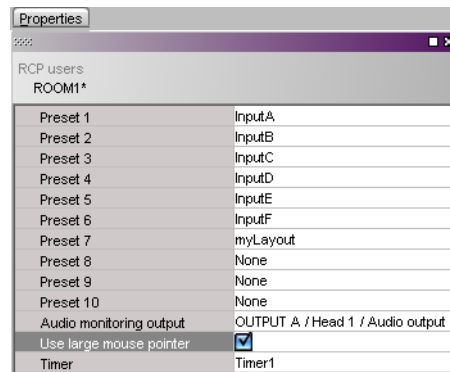


Note: When the large mouse pointer option is enabled for a room, the menus also appear in a larger font size on the monitor wall displays associated with this room.

Assigning a Timer to a Room

To assign a default timer for all RCP users in a room

- 1 In the main window, click the **RCP users** tab, and then select the room to be assigned a timer.
- 2 In the **Properties** pane, click the **Timer** box, and then select the appropriate timer to be controlled by default from this room.

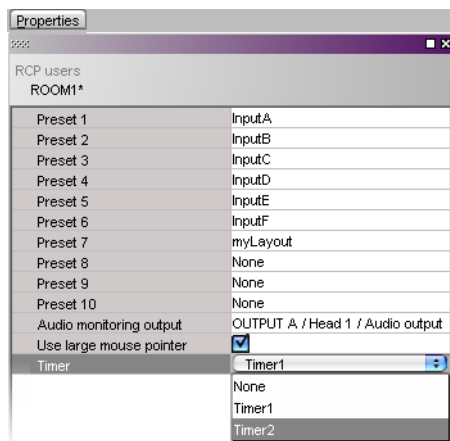

Setting RCP User Preferences

To modify the preferences for an RCP user

- 1 In the main window, click the **RCP users** tab, and then select the user whose preferences you want to set, from under the appropriate room.
The selected RCP user's preferences (layout presets, full screen assignment, audio monitoring output, external keyboard configuration, and timer) are listed in the **Properties** pane.

The screenshot shows a 'Properties' dialog box with a tree view on the left containing 'RCP users', 'ROOM1', and 'User1'. The main area displays the following settings:

User name	User1
Password	*****
Description	
Preset 1	InputA
Preset 2	InputB
Preset 3	InputC
Preset 4	InputD
Preset 5	InputE
Preset 6	InputF
Preset 7	myLayout
Preset 8	None
Preset 9	None
Preset 10	None
Full screen settings	[]
Audio monitoring output	OUTPUT A / Head 1 / Audio output
Keyboard	United States-International
Timer	Timer1

2 Modify the preferences as needed. See:

- [Assigning Room Layouts to a Kaleido-RCP2 User's Presets](#), on page 341,
- [Assigning a Full Screen Layout to an RCP User](#), on page 341,
- [Assigning Audio Output to an RCP User](#), on page 342, and
- [Setting the Keyboard Language](#), on page 343.

Note: User preferences are specific to an RCP user in a specific room. If no preferences have been specified for an RCP user, then the corresponding room preferences apply. They appear in gray in the **Properties** pane.

3 Modify the system-level attributes for this user (user name, description, password) as needed. See [Changing an RCP User's Name or Password](#) on page 345.

Note: These system-level attributes are specific to a user, independent of the room to which the user is assigned.

4 On the **File** menu, click **Save**.


Notes

- The *Admin* user name cannot be modified.
 - An asterisk (*) will appear beside the RCP user in the main window if any of the user properties are modified. The asterisk will disappear when the changes are saved.
 - The message "Cannot find reference" indicates that a full screen layout, full screen zone, or layout associated with a Room or RCP user has been deleted.
-

Assigning Room Layouts to a Kaleido-RCP2 User's Presets

To assign a room layout to a Kaleido-RCP2 user's preset button

- 1 In the main window, click the **RCP users** tab, and then select the user for whom you want to configure the remote control panel's preset buttons, from under the appropriate room.
- 2 For each Kaleido-RCP2 preset button, click the corresponding box in the **Properties** pane, and then select the appropriate layout from the list.

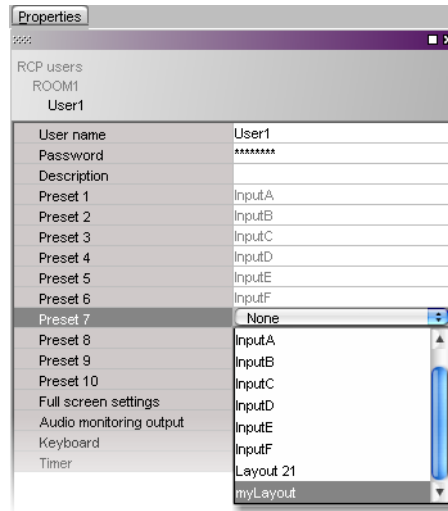


Note: If no layout is specified for this user preset, the layout that has been selected for this preset in the room's preferences will apply. It will appear in gray in the **Preset [n]** box. See [Setting Room Preferences](#) on page 337.

Assigning a Full Screen Layout to an RCP User


To assign a full screen layout to an RCP user

- 1 In the main window, click the **RCP users** tab, and then select the user for whom you want to configure the remote control panel's FULL SCREEN button, from under the appropriate room.
- 2 In the **Properties** pane, click the **Full screen settings** box, and then click the button that appeared at the end of the box.

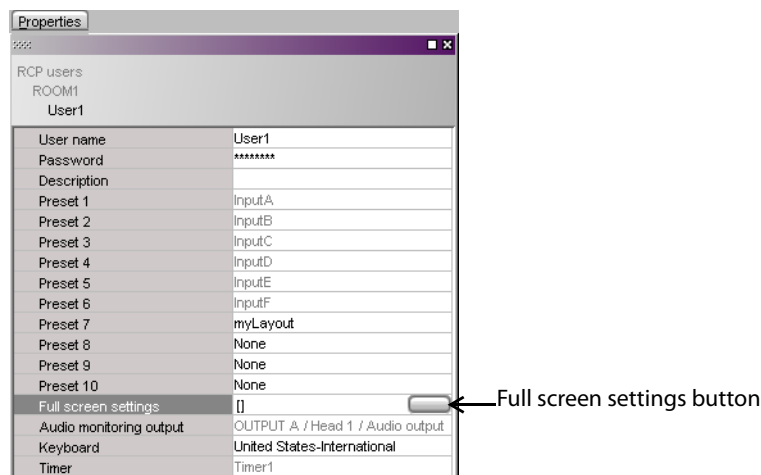

The **Full Screen Settings** window appears.

- 3 In **Full Screen Settings**, select the appropriate full screen layout, and then click **OK**.

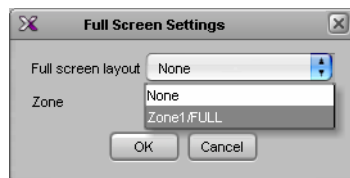


Note: Before XEdit 2.00, full screen layouts were not associated with a specific full screen zone. In the case of such legacy layouts, you must also select the appropriate full screen zone from the **Zone** list.

Assigning Audio Output to an RCP User

To assign an audio output to an RCP User

- 1 In the main window, click the **RCP users** tab, and then select the user for whom you want to configure the remote control panel's AUDIO MONITORING button, from under the appropriate room.
- 2 In the **Properties** pane, click the **Audio monitoring output** box, and then select the output used to monitor audio signals by this user in this room, from the list of available outputs.

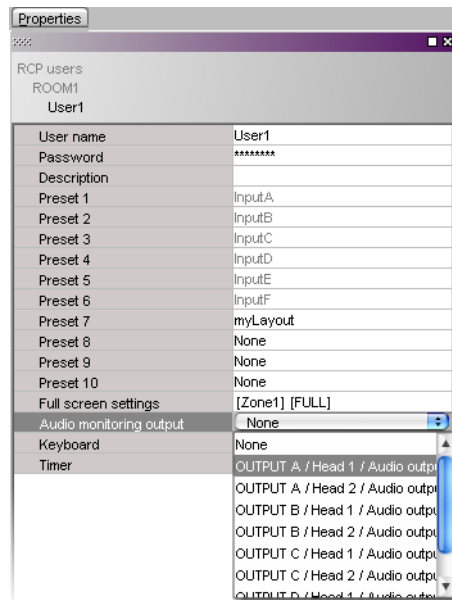

Note: If no audio monitoring output is specified for this user, the output signal that has been selected in the room's preferences will apply. It will appear in gray in the **Audio monitoring output** box. See [Setting Room Preferences](#) on page 337.


Setting the Keyboard Language

To set the input language for an external keyboard connected to the Kaleido-RCP2 or RCP-200

- 1 In the main window, click the **RCP users** tab, and then select the user for whom you want to set the keyboard, from under the appropriate room.
- 2 In the **Properties** pane, click the **Keyboard** box, and then select the keyboard to be used by this user in this room, from the list of available keyboard configurations.

Managing RCP Users

Assigning a Timer to an RCP User

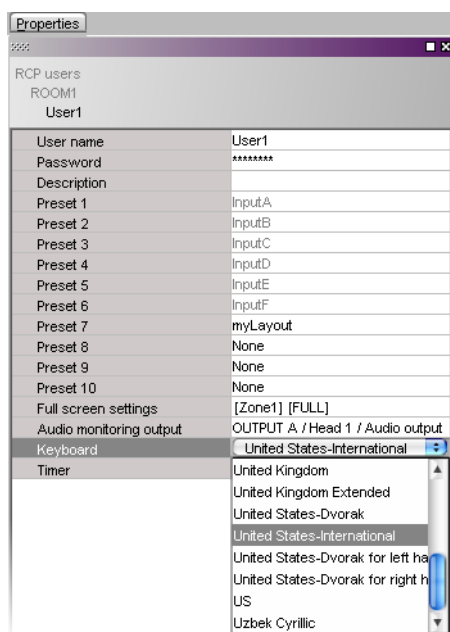


Note: This setting applies to the selected user, in the current room only. A keyboard configuration must be selected for each user, in every room, unless the system default is suitable.

Assigning a Timer to an RCP User

To assign a timer to an RCP User

- 1 In the main window, click the **RCP users** tab, and then select the user to whom you want to assign a timer, from under the appropriate room.
- 2 In the **Properties** pane, click the **Timer** box, and then select the appropriate timer to be controlled by this user in this room, from the list of available timers.

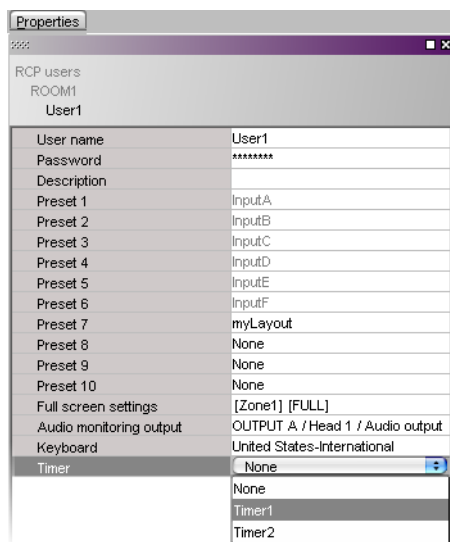

Note: If no timer is specified for this user, the timer that has been selected in the room's preferences will apply. It will appear in gray in the **Time** box. See [Setting Room Preferences](#) on page 337.


Changing an RCP User's Name or Password

To change an RCP user's name and password

- 1 In the main window, click the **RCP users** tab, and then select the user whose user name or password you want to change, from under any of the rooms.


Note: A user's name or password cannot be changed from within the **Tools** pane. They can only be changed from within the rooms list, in the main pane. The user can be removed from the room after the name or password change. The change will be retained. See [Granting Room Access to RCP Users](#) on page 336.

- 2 In the **Properties** pane, click the **User name** box, and then type the new name.

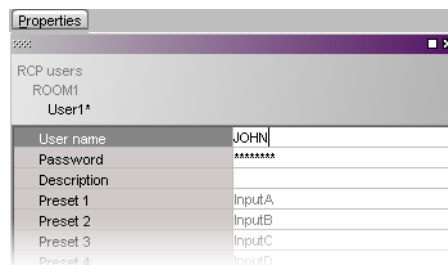


Note: The name must be no more than 8 characters in length, and consist of only letters and numbers (no spaces or special characters).

- 3 In the **Properties** pane, click the **Password** box, and then click the button that appeared at the end of the box.

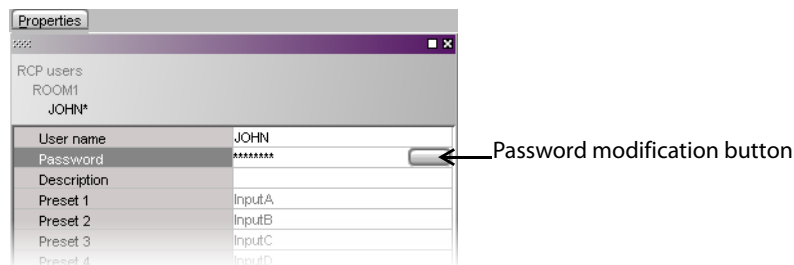

The **Password Modification** window appears.

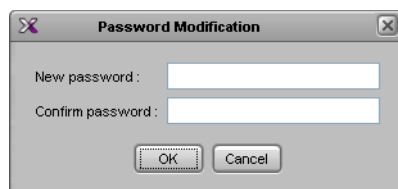

- 4 In **Password Modification**, type the new password (only numbers, up to 8 digits) and then type it again to confirm.
- 5 Click **OK**.

12

Routers & Kaleido Multiviewers

Introduction

This chapter describes how a multiviewer can be configured to control external routers, to act as a router itself, and to be controlled from an upstream router control panel or software.

Overview

The Kaleido-X, Kaleido-MX, Kaleido-MX 4K, Kaleido-X16, Kaleido-Modular-X, and Kaleido-Modular, KMV-3901/3911 multiviewers are designed for flexible integration with a variety of routing devices. A multiviewer can be configured to control, or to be controlled by a variety of routing devices. The Kaleido-X (7RU) and Kaleido-X16 have an internal router option, which offers switching of up to 192 unprocessed inputs to 96 HD/SD outputs (16 inputs to 2 outputs, in the case of the Kaleido-X16), for feeding monitors, test equipment and master control or production switchers. A multiviewer can also be configured as a router and provide switching of its logical sources to router card outputs (if available) or monitor wall destinations.

The Kaleido Software interfaces with most routing devices, through Ethernet or serial connection, for router control and dynamic text label tracking. The interface allows dynamic source updates from the router, and quick access to any router sources directly from the monitor wall user interface. The Kaleido Software can also save source assignments to the layout presets, and reconfigure the router by recalling a layout preset.

For quality control applications, the monitor wall pointer (controlled by a mouse connected through a Kaleido-RCP2 control panel) can be used to assign a selected source to a monitoring output bus. This creates a highly intuitive and rapid quality control capability. Grass Valley has been working closely with SAM (Snell/Pro-Bel), and NVISION, to provide a cost-reduced, multi-image/routing solution, with compelling integration and a direct download of sources text databases from routers and production switchers to the multiviewer system.

See [Tally Interface Devices & Timer Systems](#) on page 401 for more information on configuring supported production switchers to interact with the Kaleido Software.

Key Concepts


Term	Description
External Router	In XEdit's Equipment library, External Router refers to an upstream router that will be controlled by the multiviewer. For example, the multiviewer can request a specific source from the external router to be routed to a specific video monitor on the monitor wall.
Physical router	In XEdit, a physical router is a software representation of router equipment. Physical routers hold information on how to communicate with the equipment, as well as the number of physical levels associated with the router.
Physical level	Some router equipment can have multiple physical levels, which are subsets of the physical router's inputs and outputs.
Protocol	The instruction set and parameters used to communicate with and control a device. The router protocols supported in iControl are also supported by Kaleido multiviewers, and vice-versa (although there might be a slight lag between the time the latest software versions are released).
Router controller	<i>Router controller</i> refers to any software or hardware that can request a crosspoint change on a router. The Router Control Software Single Bus and Matrix View applications (also part of the iRouter Router Control Software packaged with iControl Application Servers) are examples of router controllers. They are integrated with the Kaleido Software, and can be launched from the multiviewer's home page.
Logical router	A logical router is a software abstraction that permits the control of multiple physical routers/levels as a single entity. Logical routers have a unique matrix ID within a router manager.
Logical level	A logical level defines the mapping between logical and physical inputs, and the mapping between the logical and physical outputs.
Matrix ID	A unique identifier used by a router controller to identify which router is the target of a switching command.
<i>KX Router</i> logical router	Independent from the routing capabilities obtained by adding KXO-24Router cards to a Kaleido-X (7RU) multiviewer or by enabling the router output ports on a Kaleido-X16, any multiviewer can be used as a router of itself. The logical sources defined in XEdit's Channels/Sources tab (see page 89) are considered sources for the <i>KX Router</i> logical router, whose destinations are either monitors on the monitor wall, or the multiviewer's own router outputs (if applicable).^a Source IDs to be used for routing purposes are assigned in XEdit's Channels/Sources tab. These IDs can be used by external router control software or devices. The logical destinations for the KX Router logical router are configured in the Destinations tab. The <i>KX Router</i> logical router configuration is automatically shared between multiviewers and iControl systems, and also between multiviewers and RCP-200 devices with version 1.70 or later.
Router service	The Kaleido router service is the software component responsible for communicating with physical routers, and for managing crosspoint change requests coming from router controllers.

Term	Description
Internal Router	The Kaleido-X (7RU / 14RU) and Kaleido-X16 multiviewers feature built-in routing which eliminates the need for separate routing in control rooms, and provides a significant cost saving. Up to 48 unprocessed, baseband outputs can be provided from any of the 96 HD / SD-SDI inputs to each Kaleido-X (7RU) processor. In the case of a Kaleido-X16, up to 2 baseband outputs can be provided from any of the 16 inputs. These outputs can be used to feed high quality monitors, test equipment such as waveform scopes, as well as ISO recorders. The outputs can even feed other multiviewers. The router outputs can be controlled from the monitor wall menu, by a Nevion (Network Electronics) remote control panel through a serial connection, by a Grass Valley (Miranda/NVISION) system controller through a TCP/IP connection, or by a production switcher's auxiliary bus controls. The router outputs can be controlled by external controllers through the following protocols: VikinX Compact (serial), VikinX Modular (TCP/IP), Grass Valley (Miranda/NVISION) NVEP NP0016 (TCP/IP), SAM (Snell/Pro-Bel) SW-P-08 (serial, TCP/IP) or manually from the Router Control Matrix application available from the multiviewer's Web page. The built-in router improves integration, and reduces cabling and equipment costs. The routing capability eliminates the need for a separate router for the following applications: • feeding baseband high quality monitors anywhere in a facility • feeding test equipment for quality control monitoring • feeding a secondary multiviewer for output expansion • feeding an ISO recorder in production studios
Profile	A logical view of an NV9000 routing system represented as a single flat matrix of sources and destinations, regardless of where in the routing system the actual sources and destination may be.

a. i.e., the 24 BNC outputs on a KXO-24Router card for a Kaleido-X (7RU) or Kaleido-X (14RU), or the two RT OUT ports on a Kaleido-X16. The other multiviewer models do not have router outputs.

Router Control Configurations


Multiviewers can be configured for router control in five ways:

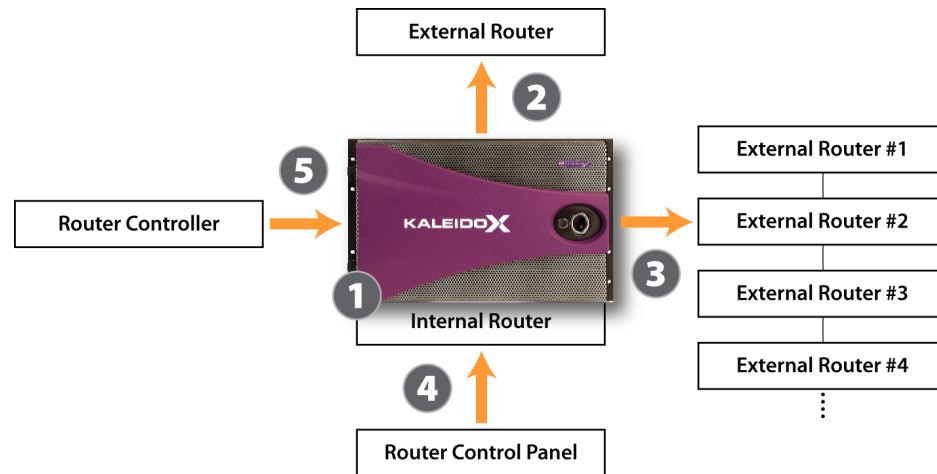

- 1 Kaleido-X (7RU), Kaleido-X (14RU), and Kaleido-X16 multiviewers allow direct control over their own internal router module.
- 2 All multiviewers allow direct control over an external router through a serial or TCP/IP connection.
- 3 All multiviewers allow control over a series of external routers in a cascade configuration: the Kaleido Software sends a router command to one of the routers through a serial or TCP/IP connection, which then broadcasts it to the other routers in the cascade using an internal communications mechanism (e.g., MIDI). The router command contains an ID that causes it to be accepted by one router in the cascade, and ignored by the rest.
- 4 All multiviewers can be controlled by an external (push-button) control panel, through a serial or TCP/IP connection. Usually, such a panel is used to control either a simple external router (case 2, above) connected to the multiviewer, or the internal router module (case 1, above).
- 5 All multiviewers can be controlled by an intelligent router controller, through a serial or TCP/IP connection. The controller can issue commands to the multiviewer internal router module (if available), or to any external router connected to the multiviewer. The Kaleido Software directs the commands to the designated device, and, as needed, translates the command to the required protocol.

Router Configuration Scenarios


Controlling an external router

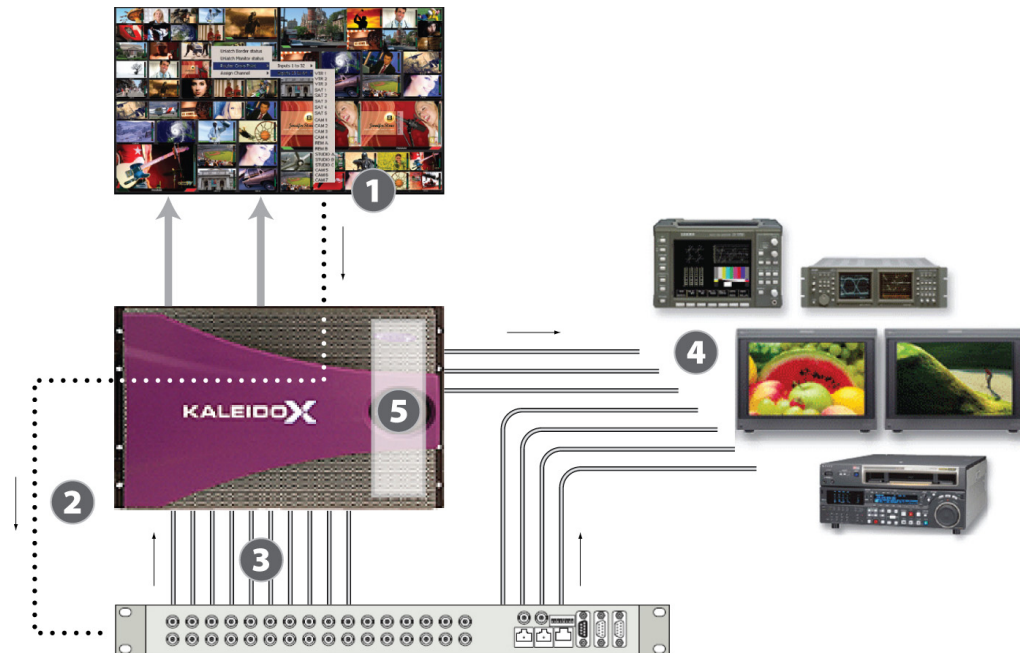

- 1 An operator chooses an assignment option on the monitor wall menu (e.g., "switch output 2 of external router A to QC monitor").
- 2 The Kaleido Software interprets the command, and sends it to the designated router over a serial or TCP/IP connection, using the appropriate router protocol.
- 3 The router receives the command and executes a crosspoint switch, either changing the signal on one of its connections to a multiviewer input, or...
- 4 ...sending the signal to another device (e.g., vector scope, QC monitor, ISO recorder).


Note: In the same way, from the monitor wall, it is possible to change crosspoints on the multiviewer's internal router (if available), when its physical levels are configured in the context of the *KX Router* logical router's *first* level.

Controlling external routers in a cascade

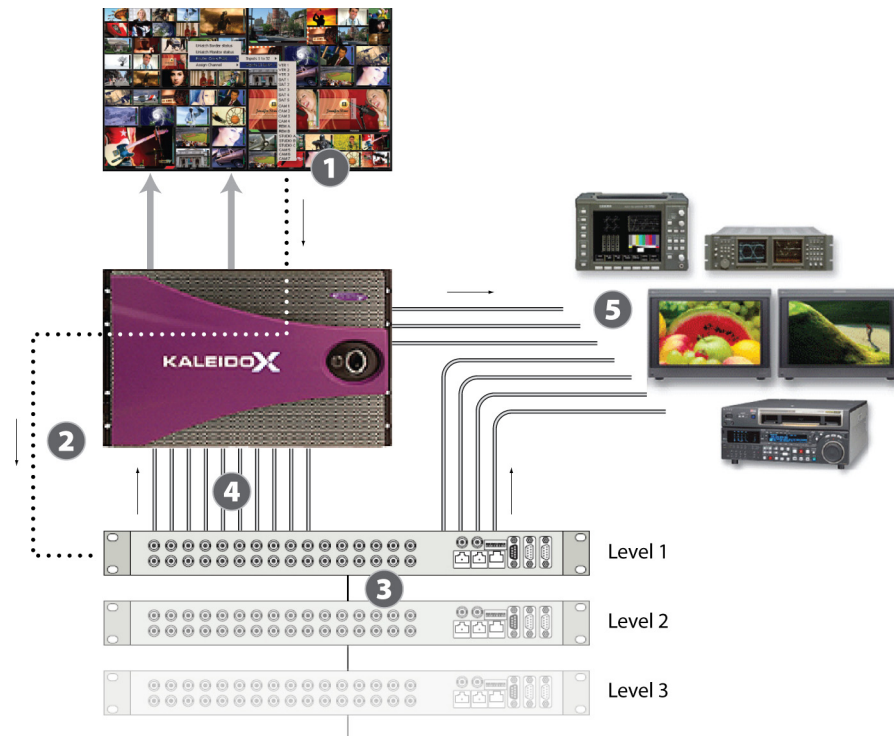

- 1 An operator chooses an assignment option on the monitor wall menu (e.g., “switch output 23 of external router A, Level 2 to QC monitor”).
- 2 The Kaleido Software interprets the command, and sends it to the designated router over a serial or TCP/IP connection, using the appropriate router protocol.
- 3 The physical router receives the command, and then relays it to the other physical routers in the cascade using an internal communications mechanism (e.g., MIDI).
- 4 When the targeted *Level* receives the command, it executes a crosspoint switch, either changing the signal on one of its connections to a multiviewer input, or...
- 5 ...sending the signal to another device (e.g., vector scope, QC monitor, ISO recorder).

Translating commands from external router controllers

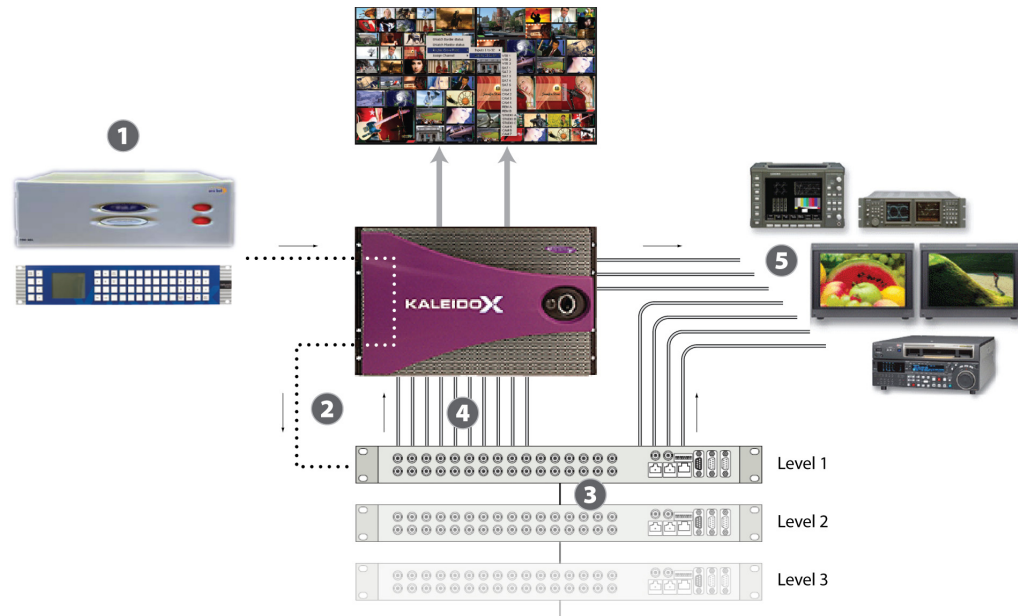

- 1 A system controller—e.g., Grass Valley (Miranda/NVISION) NV9000, SAM (Snell/Pro-Bel) Aurora, Nevion (Network Electronics) VikinX—sends a router command to an external router connected to the multiviewer.
- 2 The Kaleido Software detects the command, translates it to the appropriate router protocol and, then sends it to the designated router over a serial or TCP/IP connection.
- 3 The router (or “Level” in a cascade) receives the command and executes a crosspoint switch, either changing the signal on one of its connections to a multiviewer input, or...
- 4 ...sending the signal to another device (e.g., vector scope, QC monitor, ISO recorder).

Controlling the internal router by using a router control device or application




- 1 An external router control device or application—e.g., SAM (Snell/Pro-Bel) Aurora, Nevion (Network Electronics) VikinX—or an automation system—e.g., Sundance Digital Titan—sends a command, over a serial or TCP/IP connection, to the multiviewer.

- 2 The Kaleido Software detects the command, and executes a crosspoint switch on its internal router or...
- 3 ...sending the selected signal from the corresponding multiviewer input to another device (e.g., vector scope, QC monitor, ISO recorder).

Router Connections

To be able to control an upstream router from the monitor wall, or to control your multiviewer as a router from an external control panel, you must specify physical connections between a number of multiviewer inputs and external router outputs that feed them (see [Configuring Router Connections](#) on page 398). This is equivalent to defining the tie lines between two routers: your upstream router and your multiviewer's *KX Router* logical router. When two routers are interconnected, a tie-line manager module allows sources from the upstream router to be routed transparently to the selected destinations. For example, when you want to assign a source from the upstream router to a video monitor on the monitor wall, the Kaleido Software uses this information to allocate a tie line (i.e. one of the multiviewer's physical input connectors that you reserved for this purpose, and the upstream router's output it is connected to), and initiate the appropriate crosspoint change on the upstream router.

Note: Tie lines between the multiviewer and an upstream router are meant to be used *exclusively* by the Kaleido Software. You must not enable features such as destination lock at the router end of a tie line.

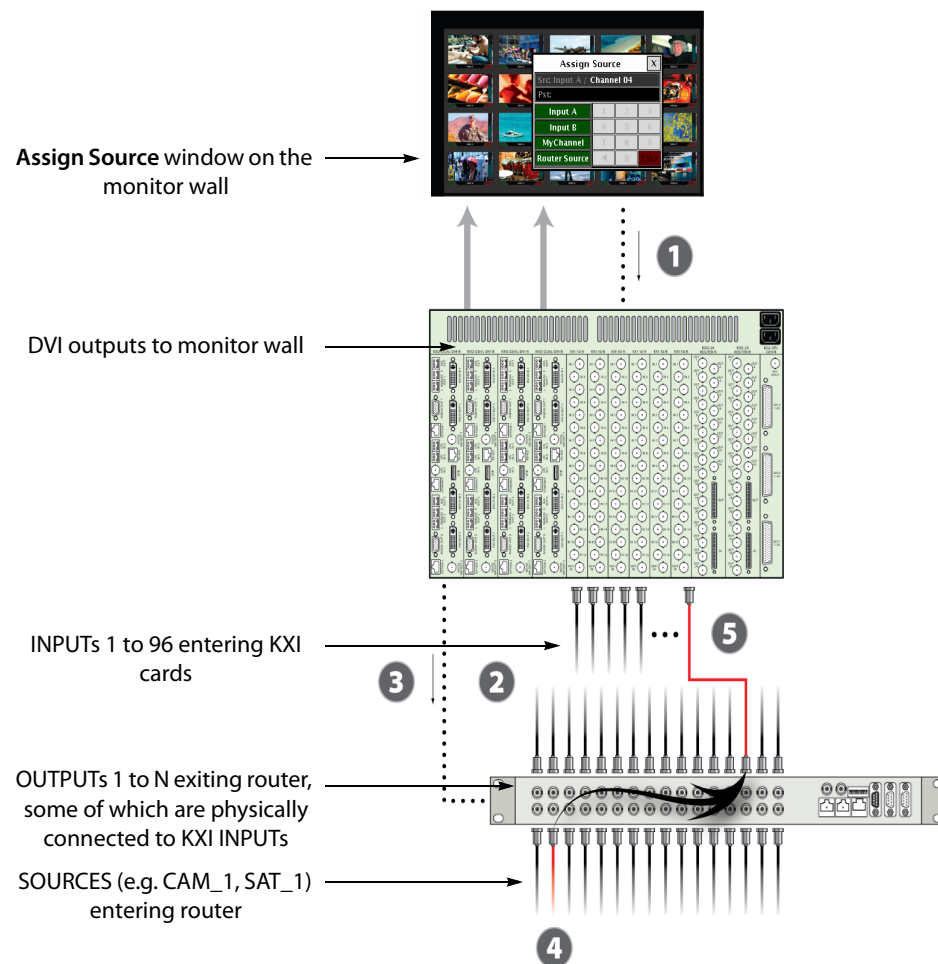


- 1 An operator right-clicks a monitor, and either
 - assigns a logical source by using the **Assign Source** window, or
 - assigns a router source by using the **Assign Router Input** window.
- 2 The **Router connections** tab in XEdit allows you to map physical connections between a number of INPUT connectors on the multiviewer and the upstream router's OUTPUTs that feed them, which allows the Kaleido Software to determine the crosspoint switch needed. See [Configuring Router Connections](#) on page 398 for details.
- 3 The multiviewer sends this command to the external router, over a serial or TCP/IP connection, using the appropriate protocol.
- 4 The external router redirects the specified source signal.
- 5 The new signal follows the physical connection to one of the multiviewer inputs reserved for this purpose, is processed, and appears on the monitor wall.

Signal Path Viewer

Signal Path Viewer is a standalone panel, updated in real time, showing assignment information between router sources and multiviewer inputs. This information might help you validate your system configuration, or troubleshoot configuration or router control issues. Signal Path Viewer is not used with Kaleido-IP. See *Installing Signal Path Viewer* in the multiviewer's *Installation & Service Manual* for more information.

For each tie line (i.e., for each multiviewer input that was assigned a router output—see [Router Connections](#) on page 354), the panel displays, in real time, the current router source assignment, the corresponding router destination, as well as router status information. In the case of a KMX-3921, KMX+49N1, or Kaleido-X multiviewer system, it also indicates whether an input card has been removed.

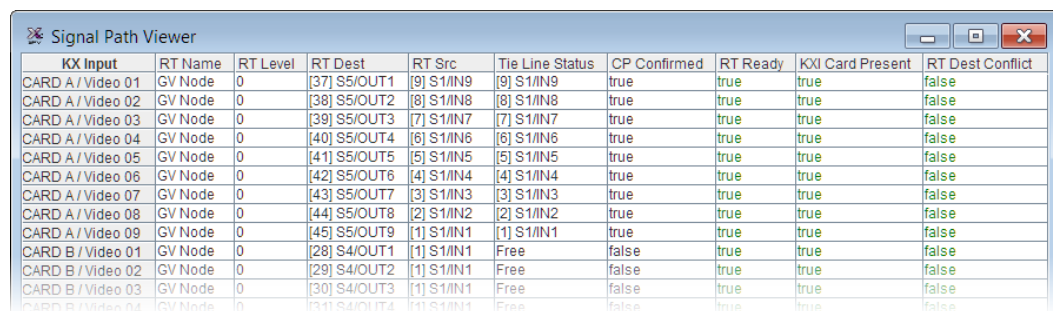

KX Input	RT Name	RT Level	RT Dest	RT Src	Tie Line Status	CP Confirmed	RT Ready	KXI Card Present	RT Dest Conflict
CARD A / Video 01	GV Node	0	[37] S5/OUT1	[9] S1/IN9	[9] S1/IN9	true	true	true	false
CARD A / Video 02	GV Node	0	[38] S5/OUT2	[8] S1/IN8	[8] S1/IN8	true	true	true	false
CARD A / Video 03	GV Node	0	[39] S5/OUT3	[7] S1/IN7	[7] S1/IN7	true	true	true	false
CARD A / Video 04	GV Node	0	[40] S5/OUT4	[6] S1/IN6	[6] S1/IN6	true	true	true	false
CARD A / Video 05	GV Node	0	[41] S5/OUT5	[5] S1/IN5	[5] S1/IN5	true	true	true	false
CARD A / Video 06	GV Node	0	[42] S5/OUT6	[4] S1/IN4	[4] S1/IN4	true	true	true	false
CARD A / Video 07	GV Node	0	[43] S5/OUT7	[3] S1/IN3	[3] S1/IN3	true	true	true	false
CARD A / Video 08	GV Node	0	[44] S5/OUT8	[2] S1/IN2	[2] S1/IN2	true	true	true	false
CARD A / Video 09	GV Node	0	[45] S5/OUT9	[1] S1/IN1	[1] S1/IN1	true	true	true	false
CARD B / Video 01	GV Node	0	[28] S4/OUT1	[1] S1/IN1	Free	false	true	true	false
CARD B / Video 02	GV Node	0	[29] S4/OUT2	[1] S1/IN1	Free	false	true	true	false
CARD B / Video 03	GV Node	0	[30] S4/OUT3	[1] S1/IN1	Free	false	true	true	false
CARD B / Video 04	GV Node	0	[31] S4/OUT4	[1] S1/IN1	Free	false	true	true	false

The table below describes what each column of the Signal Path Viewer panel represents.

Column	Description
KX Input	Identifies the physical multiviewer input end of the tie line.
RT Name	The name of the logical router connected to this multiviewer input.
RT Level	Level ID of the logical router connected to this multiviewer input.
RT Dest	Destination label of the output port of the logical router connected to this multiviewer input.
RT Src	Label of the logical router source.
Tie Line Status	Label of the logical router source routed to the tie line. Usually the same as RT Src. <i>Free</i> means that the tie line is not used.
CP Confirmed	Reports whether the router confirmed the crosspoint take.
RT Ready	Reports the router level readiness.
KXI Card Present	Reports the multiviewer input card presence.
RT Dest Conflict	Reports a crosspoint control fight for the multiviewer input (e.g., multiple controllers trying to switch different sources to the same destination).

Router Protocols

Certain multiviewers models are equipped with an RS-232 serial port for use with other systems and equipment while others only allow equipment integration to be made using an IP connection. Refer to your multiviewer's Installation & Service Manual. See [Related Documentation](#), on page 13.

Note: This multiviewer does not have an RS-232 serial port for use with other systems and equipment. Any equipment integration must be made using an IP connection. Only use drivers that are IP capable before considering the use of the driver for a solution.

Optional Drivers for Controlling Routing Devices from the Multiviewer

Optional drivers are available to extend your Kaleido system with the ability to control routing devices that comply with the protocols listed in the following table. Contact your sales representative for details.

Company	Protocol	Text database download	Routers/Controllers
Datatek	D-2815 Control Module Protocol	No	
ETL	ETL Matrix	Yes	ETL Matrix
Evertz	Quartz Type 1	Yes	EQX
Grass Valley (Miranda)	Densité	Yes	HRS-1801
		No	HCO-1821, HCO-1822
Grass Valley (Miranda/NVISION)	NVEP NV9000 – Deprecated (NP0017) ^a	Yes	NV9000 system controllers
	NVEP NV9000 – Port Takes (NP0017) ^b	Yes	
	NVEP NV9000 – Device Takes (NP0017) ^c	Yes	
	NVEP Router (NP0016)	No	Compact router series
Grass Valley	GVG-NP Emulation	No	Jupiter CM-4000 and CM-4400 system controllers
	GVG 7000 Native Protocol ^d	Yes	Concerto-series routers, Encore-series control panels
Grass Valley (Thomson/Philips) ^e	Jupiter ASCII communications protocol	No	Venus-series and Trinitix-series routers
Imagine Communications (Harris/Leitch)	Harris XY Passthrough Protocol	No	Platinum, Xplus, Integrator, Via-32, Panacea, Xpress
Lantronix	(Lightwave) Matrix-Hub Protocol	No	Matrix-Hub 1000

Company	Protocol	Text database download	Routers/Controllers
Nevion (Network Electronics)	Network Modular (Ethernet)	No	VikinX Modular
PESA	USP (Unsolicited Status Protocol)	No	Cheetah, Tiger, Jaguar, Cougar, Ocelot, Bobcat, TDM3000, PERC2000 system controller
Grass Valley (SAM / Snell / Pro-Bel)	General Switcher Protocol (SW-P-02)	No	
Sony	Sony HKSPC (GVGNP Emulator)	No	Sony routers (requires HKSPC card); GVG routers (Ethernet)
Utah Scientific	PL-160/PL-320	No	AVS-1B
	RCP-1	No	SC-1, SC-2, SC-3 series
	RCP-3	Yes	SC-4 series (Ethernet only)

- a. Deprecated. To be used with legacy configurations only.
- b. To be used in most cases. Supports native locks, and aliases from router (provided system controller has NV9000 router control system version 6.0.6 or later)
- c. To be used in very specific scenarios involving physical router interconnects with tie lines, or with hybrid router configurations. Contact Technical Support for more information (see [Grass Valley Technical Support](#), on page 536).
- d. For Thomson / Grass Valley Series 7000 devices, our current implementation of the Series 7000 Native Protocol supports some Encore system controller models, which are supported by Ethernet connection. For other Series 7000 devices you wish to control by Ethernet connection, use the Sony HKSPC (GVGNP Emulator).
- e. Our current implementations of the protocols listed above for Grass Valley (Thomson/Philips) routers and controllers support neither the CM-4400 nor the CM-4000 system controllers.

Built-in Communications Protocols

The multiviewer itself can be controlled by external devices (e.g. Kaleido-RCP2, router control panels) or applications (e.g. router control software application, Remote Control Gateway) via built-in communications protocols. Such devices or applications can be used to command monitor wall operations (e.g. source assignment) or routing operations.

A router control device or application can control a Kaleido-X (7RU) or Kaleido-X16 multiviewer's internal router module, or any multiviewer's logical sources and monitor wall destinations, via the *KX Router* logical router. It can also control other logical routers configured within your multiviewer system. In the case of the *KX Router* logical router, the device or application must support the *NVEP Router (NP0016)* protocol.


The supported communications protocols are listed in the following table, with an indication of the supported connection types (TCP/IP), and the dedicated port number on the multiviewer, for TCP/IP connections.

Company	Protocol	TCP/IP (port)	Serial
Grass Valley (Miranda)	Kaleido Remote Control Protocol	Yes (13000)	No
Grass Valley (Miranda/NVISION)	NVEP Router (NP0016)	Yes (5194)	No
Nevion (Network Electronics)	Network Modular	Yes (4381)	No
Grass Valley (SAM/Snell/Pro-Bel)	SW-P-08	Yes (14000)	No
	SW-P-02	Yes (2000)	No

Serial Connections

The physical cabling required to connect a multiviewer to an external serial device (such as a router, production switcher, or router controller) can vary from one device to another. It is important to check the manufacturer's documentation to get the proper pin-out so it matches up with the multiviewer.

The RS-422 ports at the back of a Kaleido-X16 multiviewer or at the back of a KXO-Dual or KXO-Dual3 card (in the case of the Kaleido-X multiviewer models) use an RJ45 connector. Grass Valley provides two adapters, which map the RS-422 signals to the more common DE-9 form factor:

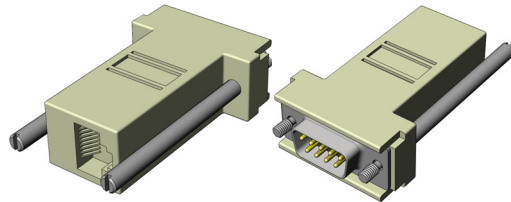

- To connect a serial device whose RS-422 port is wired to the SMPTE *slave* wiring specifications, use the **straight** adapter (Grass Valley part number **1737-3000-102**).
- To connect a serial device whose RS-422 port is wired to the SMPTE *master* wiring specifications, use the **crossover** adapter (Grass Valley part number **1792-3700-100**).

The DE-9S pinouts for these two adapters are as follows:

Pin	Straight adapter (1737-3000-102)	Crossover adapter (1792-3700-100)
1	Not connected	Not connected
2	RX-	TX-
3	TX+	RX+
4	Not connected	Not connected
5	Not connected	Not connected
6	Not connected	Not connected
7	RX+	TX+
8	TX-	RX-
9	Not connected	Not connected


Note: Some routers have RS-232 ports, which will require the use of a RS-232 to RS-422 converter (externally powered ones work best).

Sample Third-Party Serial Pin-outs

Example #1: Ross Synergy100 (RS-422)

1	Not connected	4	Ground	7	TX+
2	TX-	5	Ground	8	RX-
3	RX+	6	Not connected	9	Not connected

The Grass Valley 1737-3000-102 (**straight**) adapter can be connected directly to the Ross Synergy 100:

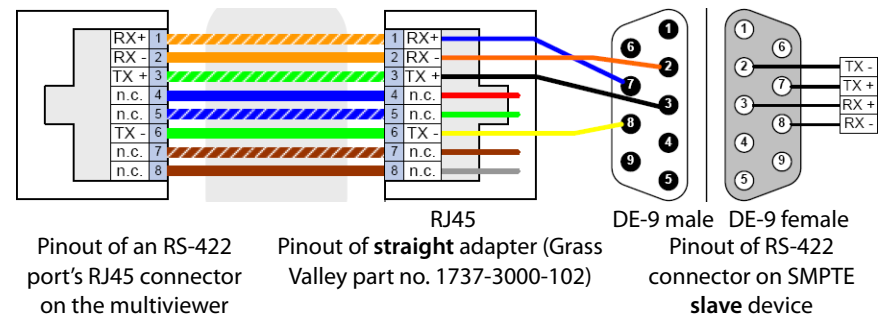


Standard wiring between multiviewer and devices wired to SMPTE "slave" specification (e.g. most routers, Ross Synergy switchers, Nevion ETH-CON)

Example #2: Philips VM-3000 (RS-422)

1	Ground	4	Not connected	7	RX+
2	RX-	5	Not connected	8	TX-
3	TX+	6	Not connected	9	Not connected

The Grass Valley 1792-3700-100 (**crossover**) adapter can be connected directly to the Philips controller:

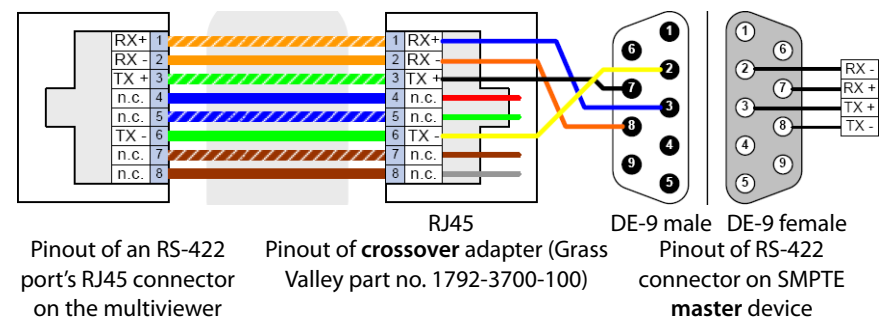

Standard wiring between multiviewer and devices wired to SMPTE "master" specification (e.g. Philips Jupiter router control system, Grass Valley Presmaster PCS)

Alternatively, use the Grass Valley 1737-3000-102 (straight) adapter but with a crossover cable between the multiviewer and the adapter.

Q & A

Q: Is the internal router used to change inputs to the multiviewer in order to direct signals to the monitor wall?

A: No, an internal router card is not needed to display video on the monitor wall. The outputs of the internal router do not feed into the multiviewer's inputs—they come *from* the multiviewer's inputs through the midplane.

Q: What is the main purpose of having an internal router?

A: The internal router allows you to share the inputs connected to a Kaleido-X or Kaleido-X16 multiviewer with other equipment (e.g., QA monitors, vectorscopes), reducing or eliminating the need to have an expensive standalone external router. The internal router allows you to have one piece of equipment (the multiviewer) that serves two integrated purposes: displaying video inputs on the monitor wall, and sharing them with other equipment. For example, instead of having a router in front of the multiviewer to split feeds between the multiviewer and a vectorscope monitor, you can use the multiviewer as a router. Your feeds enter at a single point, and one of the outputs can go to a vectorscope or quality control (QC) monitor, so that instead of a large, expensive station router in front you can have a smaller one—you don't lose outputs for QC.

Q: Is there a matrix GUI available for controlling routers through the multiviewer?

A: Yes. The Kaleido Software (version 4.00 and later) incorporates the single bus and matrix view from iControl Router Control Software.

Q: Is the "External Router" item in the Equipment library always used to add a router?

A: Yes. This is done for consistency with iControl. Other types of equipment (production switchers, controllers, tally boxes) have their own specific entries in the Equipment library.

Q: Can there be more than one external router?

A: Yes. Every router or router control panel that is connected to a serial port on the multiviewer corresponds to an *External Router* in XEdit. Similarly, every router with a unique IP address connected through TCP/IP to the multiviewer is considered a unique External Router. If the multiviewer is connected to a series of physical routers in a cascade configuration, the cascade corresponds to a single External Router in XEdit, where each router is a *Level*.

Q: Why was the iControl Router Manager integrated into XEdit version 3.00?

A: Previously, a version of the iControl Router Manager appeared as a separate application within XEdit. This could lead to some issues, such as two devices being configured on the same serial port. Since Router Manager is now integrated, XEdit is more "aware" of the router configuration information, and can prevent such misconfigurations.

Q: Is router management backward compatible?

A: Yes. Router configurations made in version 2.20 will be preserved when upgrading to version 3.00 (or later). However, even though this has been tested on a large number of configurations, it is recommended that the router settings be reviewed before and after the upgrade in order to ensure that there are no errors.

Q: What is a “Network router”?

A: The phrase “Network router” has the obvious connotation of a router available on a network. However, in the context of Grass Valley’s Monitoring and Control applications, it can also refer to a device now manufactured by Nevion (www.nevion.com)—formerly Network Electronics Ltd.—such as a VikinX router.

Q: What are the three different Router Controller items (i.e. Network Compact and the two Pro-Bel items) in the Equipment library?

A: They are all used for controlling either the multiviewer’s internal router, or any logical router.³ The only difference is the protocol used to communicate with the multiviewer.

Q: My internal router card shows up in the Routers list in XEdit as “OPTION A (Video 120 × 48)”. Does this mean it has 120 inputs and 48 outputs?

A: No. Each card can route up to 96 inputs to 24 physical outputs, and so has an actual size of 96 × 24. “120 × 48” refers to the size of the router card when including other internal connections that are used for router expansion.

3. Controlling a logical router from an upstream router control device or application is supported since version 3.00 of the Kaleido Software.

Importing Router Configurations from an NV9000 System Controller


XEdit can import router configurations from an NV9000 system controller and share its *KX Router* logical router's configuration with iControl Application Servers and RCP-200 Advanced Remote Control Panels. Refer to the "Component Compatibility" section of the Kaleido Software Release Notes for related version information. See [Related Documentation](#), on page 13.

Although it is possible to partly configure your system by using XEdit in offline mode, you must work in online mode, to import NV9000 router configurations (see [Using XEdit in Online Mode](#) on page 32).


Note: The Kaleido Software does not officially support aliases. If you want to include aliases from an NV9000 router configuration within your multiviewer configuration, contact Technical Support ([Grass Valley Technical Support](#), on page 536).

To import external router configurations from an NV9000 system controller

- 1 In XEdit's main window, click the **System** tab, and then click **Router configurations** on the second-level tab bar.
- 2 On the **Tools** pane, click the **Physical routers** folder.

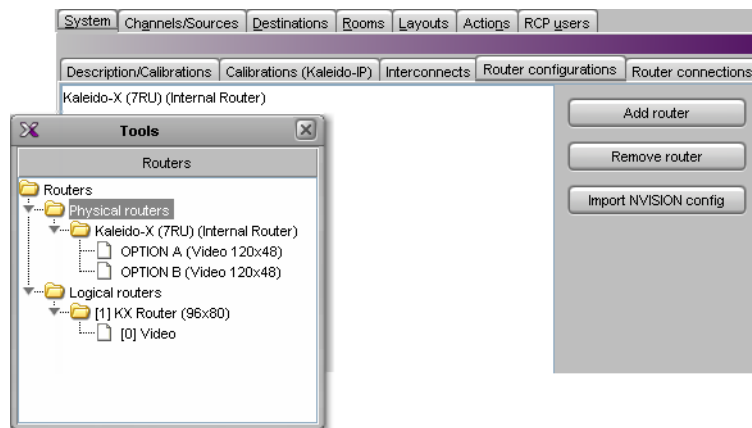

- 3 Click **Import NVISION config**.
The **Import Configuration** window appears.

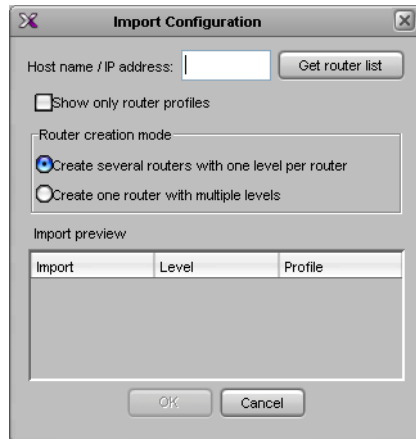


- 4 In **Import Configuration**, type the host name or IP address of the NV9000 system controller, click **Show only router profiles** if appropriate, and then click **Get router list**.

IMPORTANT

The number of outputs on a physical router may impact performance, both on the multiviewer and on the NV9000.

If your physical routers have more than a few hundred outputs, Grass Valley recommends that you create profiles (see [Profile](#) on page 349), limited to the necessary outputs for your monitoring purposes, in NV9000-SE Utilities, and then import those profile configurations instead of the full router configuration into your multiviewer system configuration.

All *physical levels and profiles* known to this NV9000 system controller appear under **Import preview**.

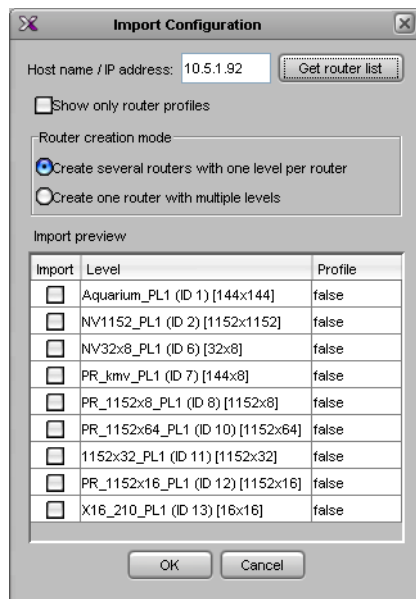


The name of every NV9000 physical level or profile is followed with an ID, and dimensions. For example, in the case of *NV32X8_PL1 (ID 6) [32x8]* above, the part

NV32X8_PL1 is the name of an NV9000 physical level, whose ID (internal to the NV9000 system) is 6, and which has 32 sources and 8 destinations.

Note: You can see these NV9000 physical level names and IDs in NV9000-SE Utilities *PhysLevels* table. Refer to the NV9000-SE Utilities User's Guide, for more information. See [Related Documentation](#), on page 13.

- 5 Select the router creation mode that best suits your purposes.
 - By default, **Create several routers with one level per router** is selected, which means that XEdit will create one single-level physical router and one single-level logical router, for every selected router or profile. This is appropriate from most use cases.
 - If you want to have only one router with several levels instead, select **Create one router with multiple levels**.
- 6 Select the NV9000 physical levels or profiles you want to control from your multiviewer, by clicking the corresponding check boxes. For more information about the NV9000 physical levels, see [Related Documentation](#), on page 13.

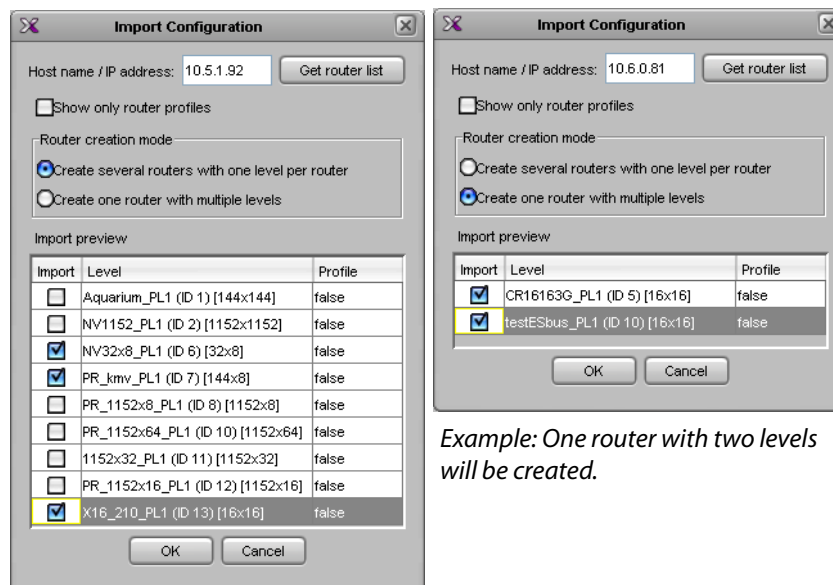


Example: One router with two levels will be created.

Example: Three routers will be created.

- 7 Click **OK**.


The selected router configurations are imported into your multiviewer system.

 - If you selected **Create several routers with one level per router**, then, once the import has completed, your multiviewer's configuration includes new external routers whose names are based on the NV9000 system controller's IP address prefixed with *N9000*, and followed with the ID of the NV9000 physical level (e.g., "N9000 10.5.1.92 6," where "10.5.1.92" is the controller's IP address, and "6" is the NV9000 physical level ID).

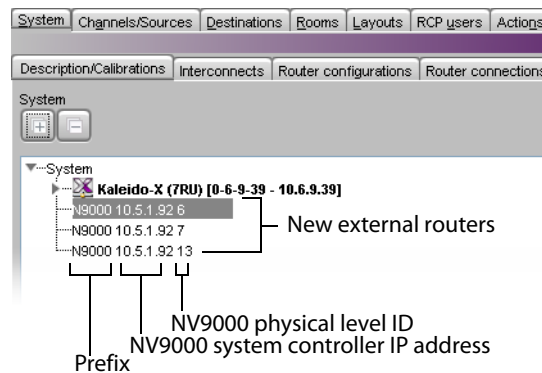


Three external routers were added to the system.

The Routers list includes new physical, and logical routers with the same names. The new physical routers and associated logical routers have one level for every router you imported from the NV9000 system controller.

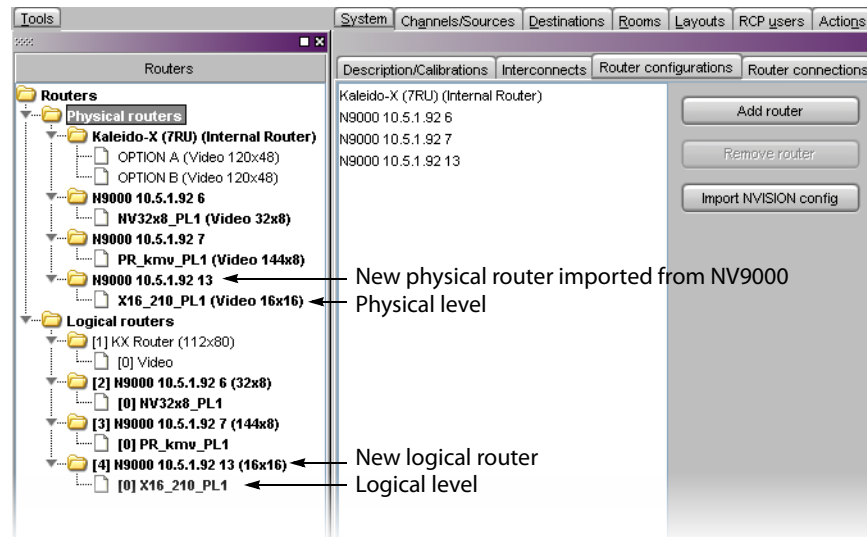


Three physical routers, and three logical routers were added, each with a single level whose name matches the name of the corresponding NV9000 physical level.

- If you selected **Create one router with multiple levels**, then, once the import has completed, your multiviewer's configuration includes *one* new external router whose name is based on the NV9000 system controller's IP address prefixed with *N9000* (e.g., "N9000 10.6.0.81").

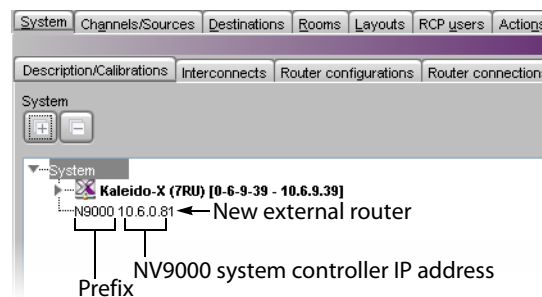

One external router was added to the system.


The Routers list includes *one* new physical router, and *one* new logical router with the same name. The new physical router and associated logical router have one level for every router you imported from the NV9000 system controller.

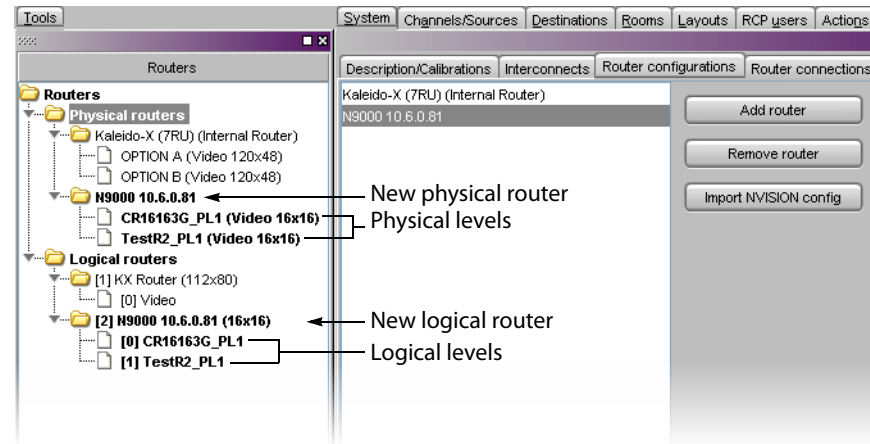

One physical router, and one logical router were added, each with two levels whose names match the names of the corresponding NV9000 physical levels.

If you intend to import other router configurations from the same NV9000 system controller, separately, then you must rename the physical router associated with the configuration you just imported. Otherwise, if you use the **Create one router with multiple levels** option again, then any configuration you import next will replace the current one. See [Renaming Physical Routers](#) below.

- 8 On the File menu, click **Save**.
- 9 Click the **Channels/Sources** tab.
- 10 In the filtered System list, right-click the external router you just imported, and then click **Create logical sources** on the menu.

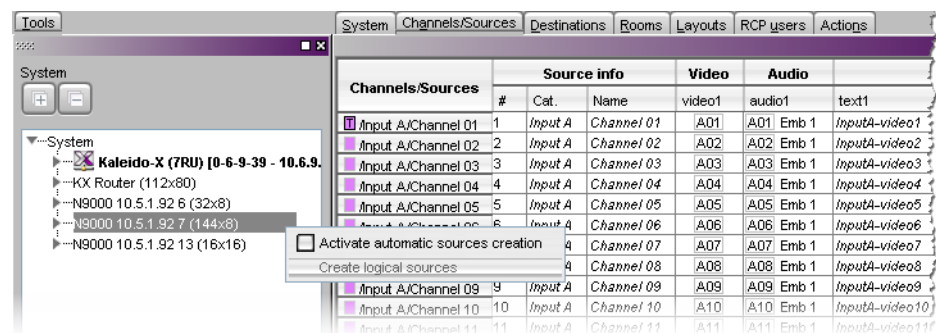

The sources table now includes entries for your router sources.

The screenshot shows the Kaleido X (7RU) [0-6-9-39 - 10.] interface. On the left, the System tree shows the hierarchy: System > KX Router (112x80) > N9000 10.5.1.92 6 (32x8) > N9000 10.5.1.92 7 (144x8) > Level 0 (PR_kmv_PL1) > Source 1 (BLK625) > Source 2 (COLBAR) > Source 3 (DVD1sd) > Source 4 (DVD1hd) > Source 5 (DVD2sd) > Source 6 (DVD2sa) > Source 7 (DVD2hd). On the right, the Channels/Sources table is displayed with the following data:

Channels/Sources		Source info		Video		Audio	
#	Cat.	Name	video1	audio1	text1		
13	Input A	Channel 13	A13	A13 Emb 1	InputA-video13		
14	Input A	Channel 14	A14	A14 Emb 1	InputA-video14		
15	Input A	Channel 15	A15	A15 Emb 1	InputA-video15		
16	Input A	Channel 16	A16	A16 Emb 1	InputA-video16		
17	BLK625	BLK625	1 BLK625	1 Emb 1	BLK625		
18	COLBAR	COLBAR	2 COLBAR	2 Emb 1	COLBAR		
19	DVD1sd	DVD1sd	3 DVD1sd	3 Emb 1	DVD1sd		
20	DVD1hd	DVD1hd	4 DVD1hd	4 Emb 1	DVD1hd		
21	DVD2sd	DVD2sd	5 DVD2sd	5 Emb 1	DVD2sd		
22	DVD2sa	DVD2sa	6 DVD2sa	6 Emb 1	DVD2sa		
23	DVD2hd	DVD2hd	7 DVD2hd	7 Emb 1	DVD2hd		
24	Sat2SD	Sat2SD	8 Sat2SD	8 Emb 1	Sat2SD		
25	Sat2HD	Sat2HD	9 Sat2HD	9 Emb 1	Sat2HD		

- 11 Optionally sort the sources table as appropriate for your needs and then define IDs for the new sources, using the incremental copy tool as needed. You can also set a category.

The screenshot shows the Channels/Sources table with the 'Source info' tab selected. The table has the following columns: #, Cat., Name, video1, audio1, and text1. The data is as follows:

#	Cat.	Name	video1	audio1	text1
13	Input A	Channel 13	A13	A13 Emb 1	InputA-video13
14	Input A	Channel 14	A14	A14 Emb 1	InputA-video14
15	Input A	Channel 15	A15	A15 Emb 1	InputA-video15
16	Input A	Channel 16	A16	A16 Emb 1	InputA-video16
17	kmv92	BLK625	1 BLK625	1 Emb 1	BLK625
18	kmv92	COLBAR	2 COLBAR	2 Emb 1	COLBAR
19	kmv92	DVD1sd	3 DVD1sd	3 Emb 1	DVD1sd
20	kmv92	DVD1hd	4 DVD1hd	4 Emb 1	DVD1hd
21	kmv92	DVD2sd	5 DVD2sd	5 Emb 1	DVD2sd
22	kmv92	DVD2sa	6 DVD2sa	6 Emb 1	DVD2sa
23	kmv92	DVD2hd	7 DVD2hd	7 Emb 1	DVD2hd
24	kmv92	Sat2SD	8 Sat2SD	8 Emb 1	Sat2SD

Source IDs → ← Category

Note: If this router is subject to frequent dimension changes, then you may want to select **Activate automatic sources creation** (see [step 10](#)). When the router is reconfigured with larger dimensions in NV9000-SE Utilities, you will need to import the router configuration from the NV9000 again, but the appropriate number of sources will be automatically added to the sources table, at the same time, with their assignments based on the current template (see [Defining Physical Assignments](#) on page 98). On the other hand, if the number of sources for this router becomes smaller, then you will need to delete the unnecessary entries from the sources table manually.

The screenshot shows the Channels/Sources table with the 'Source info' tab selected. The table has the following columns: #, Cat., Name, video1, audio1, and text1. The data is as follows:

#	Cat.	Name	video1	audio1	text1
179	KMV92	EVsrc3	83 EVsrc3	83 Emb 1	EVsrc3
180	KMV92	EVsrc4	84 EVsrc4	84 Emb 1	EVsrc4
181	KMV92	INP 85	85 INP 85	85 Emb 1	INP 85
182	KMV92	INP 86	86 INP 86	86 Emb 1	INP 86
183	KMV92	INP 87	87 INP 87	87 Emb 1	INP 87
184	KMV92	INP 88	88 INP 88	88 Emb 1	INP 88
185	KMV92	INP 89	89 INP 89	89 Emb 1	INP 89
186	KMV92	INP 90	90 INP 90	90 Emb 1	INP 90
187	KMV92	INP 91	91 INP 91	91 Emb 1	INP 91
188	KMV92	INP 92	92 INP 92	92 Emb 1	INP 92
189	KMV92	INP 93	93 INP 93	93 Emb 1	INP 93
190	KMV92	INP 94	94 INP 94	94 Emb 1	INP 94
191	KMV92	INP 95	95 INP 95	95 Emb 1	INP 95

- 12 On the **File** menu, click **Save**, and then click the **Destinations** tab.

- 13 Optionally, in the **Destinations** tab, adjust the number of destinations by typing the number in the **Size** box, and then click **Auto map** if needed to configure all *KX Router* destinations as monitor wall destinations.
- 14 Click the **System** tab, and then click **Router connections** on the second-level tab bar.
- 15 Specify the appropriate physical connections between your multiviewer inputs and the external router outputs that feed them. See [Configuring Router Connections](#) on page 398, for details.


Description/Calibrations	Interconnects	Router configurations	Router connections
Inputs	Router outputs		
	Router	Port	
INPUT A - Video 01 ←	N9000 10.5.1.92 7 - PR_kmv_PL1	Output 1 [MGALL1]	
INPUT A - Video 02 ←	N9000 10.5.1.92 7 - PR_kmv_PL1	Output 2 [MGALL2]	
INPUT A - Video 03 ←	N9000 10.5.1.92 7 - PR_kmv_PL1	Output 3 [MGALL3]	
INPUT A - Video 04 ←	Unconnected	---	
INPUT A - Video 05 ←	Unconnected	---	
INPUT A - Video 06 ←	Unconnected	---	

- 16 Click the **Layouts** tab.
- 17 Open the layout you want to use, and then assign monitor wall destinations to monitors in your layout, as required. See [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242 for details.
Optionally, you may also assign a logical source to each monitor for increased clarity.
- 18 For every monitor to be used as a monitor wall destination, specify the appropriate text level, based on the information you want the UMDs to display. See [Configuring Dynamic UMD Text](#) on page 287, for details.
- 19 On the **File** menu, click **Save**, and then click the **LOAD** toolbar button.
The layout appears on the monitor wall.

Renaming Physical Routers

To rename a physical router

- 1 In the Routers list, click the physical router you want to rename.

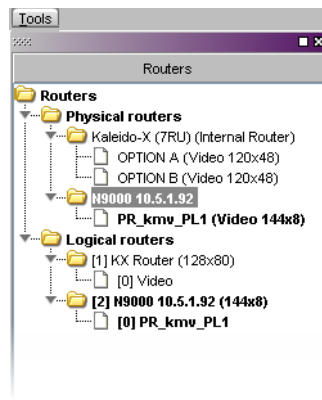

- 2 In the **Router configuration** tab, type the new name in the **Router name** box, and then press Enter.

You may rename the associated logical router, for consistency.

Configuring an External Router


The process of creating and configuring an external router (e.g., a third-party router or router control panel) for use with your Kaleido multiviewer system consists of 4 steps:

- defining the physical router
- adding one or more physical levels
- creating one or more logical routers
- adding one or more logical levels


Step 1 – Defining a Physical Router

To configure an external router

- 1 Open XEdit and load the database associated with the multiviewer for which you want to configure an external router.
- 2 Drag **External Router** from the **Equipment** library onto the root of the System hierarchical list in the **Description/Calibrations** pane.

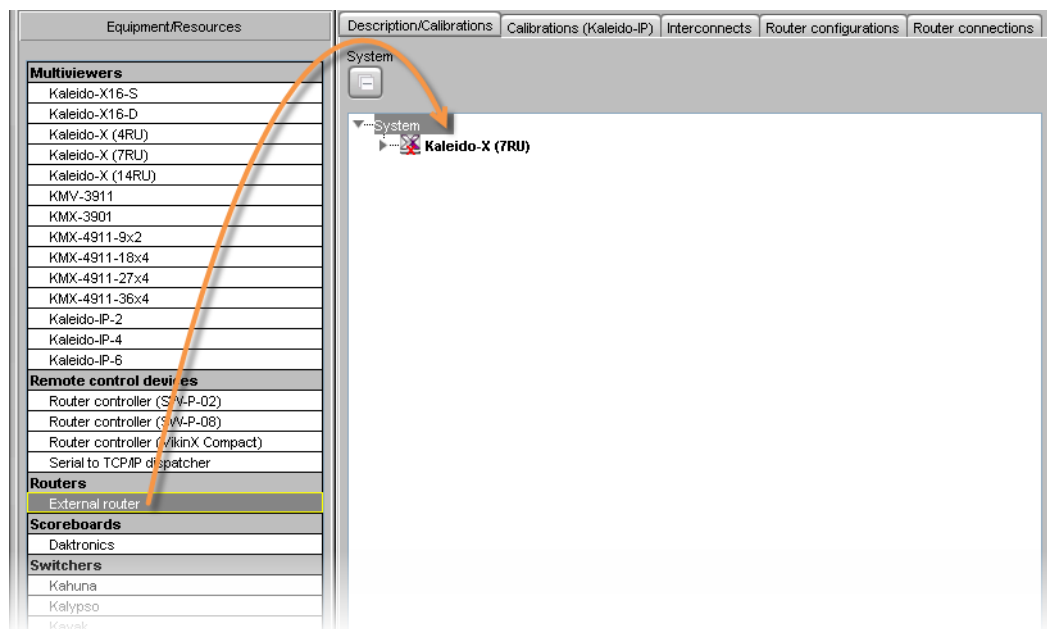


- 3 Enter a descriptive name to act as a device identifier for the external (physical) router.

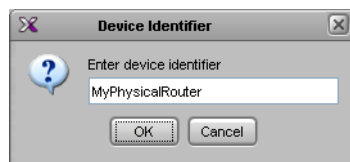


A new physical router appears in the System list.



- 4 Click the **Interconnects** tab, draw a line between the multiviewer and the External Router icons to establish a connection (i.e. add a connection properties entry to the database), and then click the line.

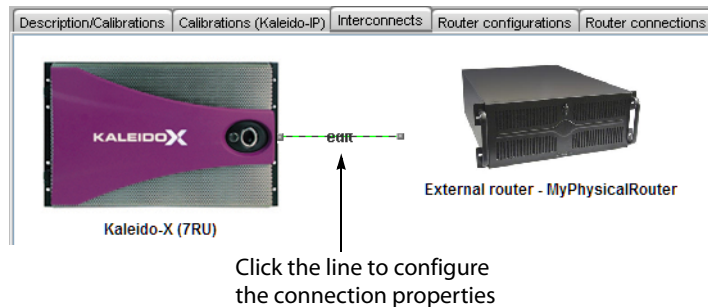

- 5 In the **Properties** pane, select the appropriate element from the **Connect to** list. This can be a serial connection, or a network (TCP/IP or UDP/IP) connection.

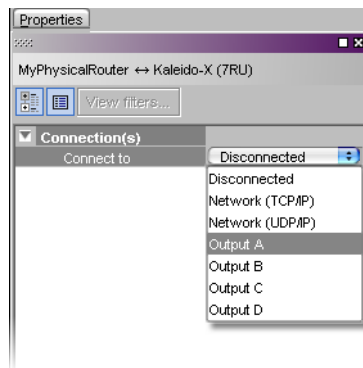


Depending on the multiviewer model (for example, on a Kaleido-X, each output card has one RS-422 port, a Kaleido-X16 has one or two RS-422 ports), the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

At this point, there are still no properties associated with the new physical router.


6 Click the **Router configurations** tab.

Notice that, in the **Routers** list, under **Physical routers**, XEdit has added the new physical router.

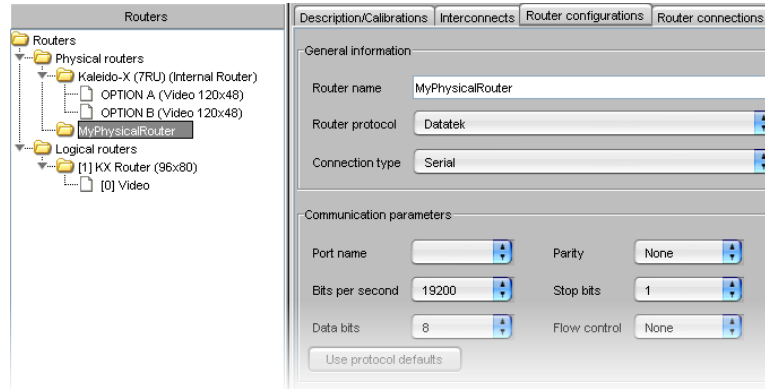

Note: A physical router associated with the multiviewer's own internal router module is also predefined. In the case of a multiviewer that does not have any router card, there will be no entries in the **Levels** list for this physical router).

7 Select the appropriate protocol in the **Router protocol** list.

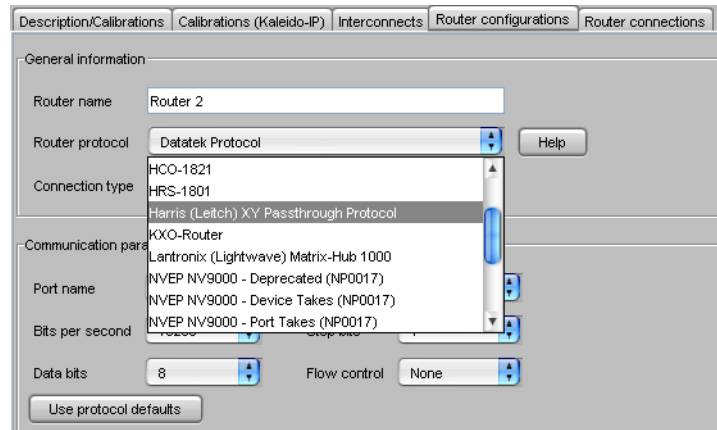

Once you have chosen a protocol, you can click **Help** to view tips on its use.

Note: The connection type and serial port specified earlier (see [step 5](#)), if any, appear here automatically. These values can be changed, if necessary. Any changes will also appear in the **Properties** pane.

- In the case of a serial connection, you can specify serial communication parameters: the bit rate (bps), the number of data bits, parity, stop bits and flow control.

- If the connection type is **TCP/IP** or **UDP/IP**, you must specify the router's IP address and port number.

- 8 Click **Use protocol defaults** to specify the default parameters for the selected protocol (this can be useful to begin if you do not have access to your specific router's documentation).

At this point, you have created a new physical router.


Step 2 – Adding Physical Levels

There is not always just one connection per router. Sometimes, the connection is to one of several routers in a cascade configuration. For example, in the case of Nevion (Network Electronics) VikinX routers, the multiviewer sends commands to one router in the cascade, which passes it on to the other routers through an internal communications mechanism (MIDI in this case). Each router in the cascade has an ID. To represent this arrangement in XEdit, the router connected to the multiviewer is considered the *physical router*, with all of the routers in the cascade represented by a *physical level*.


Even if the multiviewer is connected directly to a router (i.e. no intermediary device), you still use the mechanism of defining a physical level. The distinction here is that there would only be one physical level.

To add one or more physical levels

- 1 In the **Router configurations** tab, click **Add level**.

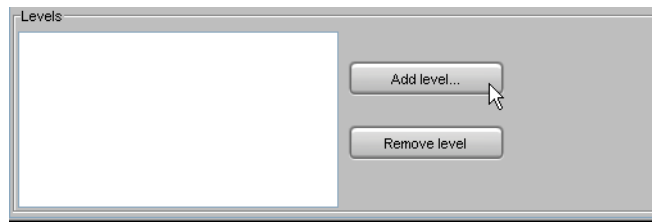


- 2 In the **Physical Level Configuration** window, type a name in the **Level name** box (e.g., "Video").

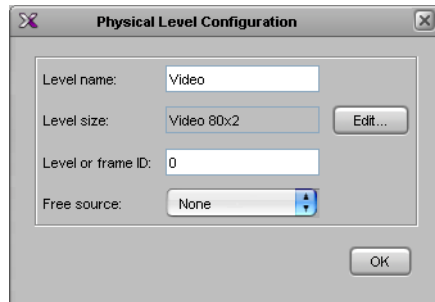

- 3 Type the appropriate value in the **Level or frame ID** box (whether a *level ID* or a *frame ID* is relevant depends on the protocol in use).

Note: This value identifies and must match the ID of the physical router in a cascade (there is sometimes a jumper on the router that is used to set its ID, or it may be done by changing a configuration setting using software that comes with the router). The Kaleido Software uses this ID to issue a command through the serial port (e.g., "Change this crosspoint on router ID 2"). When the command is sent to routers on a MIDI bus, each router will examine the command, check its ID, and ignore it unless the ID matches its own.


- 4 Click **Edit**.
- 5 In the **Edit Level Size** window, type the appropriate number of sources and destinations for this physical router.

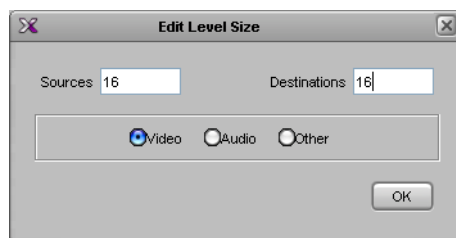

Note: The three option buttons labeled **Video**, **Audio** and **Other** are used for Nevion (Network Electronics) routers only, for which levels must be classified as either **Video** or **Audio**. These settings are ignored by routers from other manufacturers.


- 6 Click **OK**, and then click **OK** again in the **Physical Level Configuration** window.

At this point, you have added a level to a physical router, which appears in the **Levels** list under the **Router configurations** tab, and in the **Routers** list on the **Tools** pane.

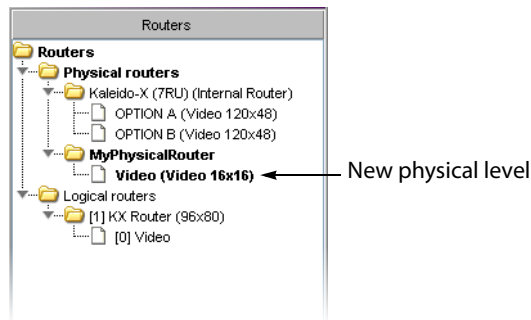

For example, if the physical router is a controller talking to a cascade of routers using a specified protocol, you might have defined one of these, a video router, as Level 0 in the cascade, with 16 sources and 16 destinations (16 × 16).

- 7 You can continue to add levels for other routers in the cascade. The screens below, for example, show how to define a 32 × 32 level for a Nevion (Network Electronics) audio router.

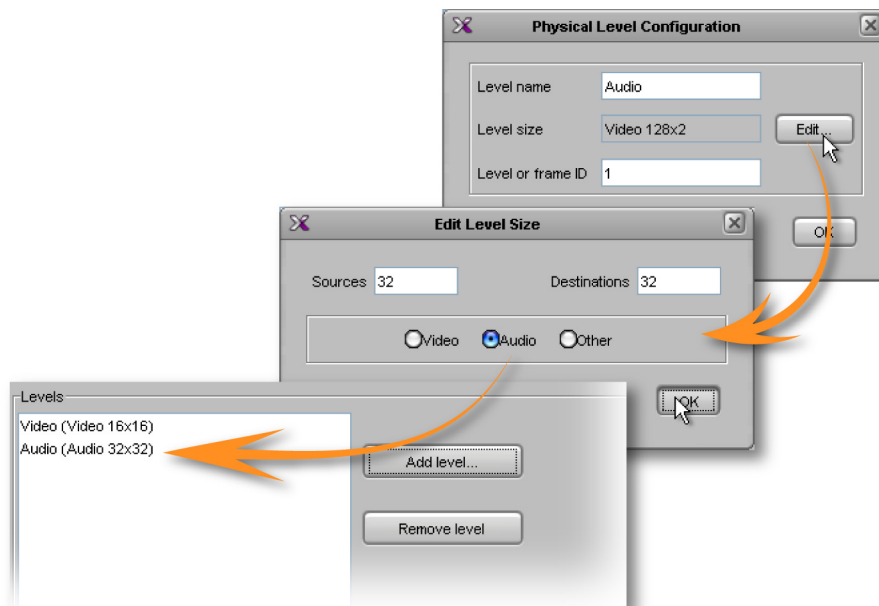

It is fairly typical to have an audio and a video router connected to the same serial port. When a crosspoint switch is sent out over the serial port, it addresses both routers, so that the audio follows the video switch.

Step 3 – Adding Logical Routers

Logical routers add another layer of refinement over the control of a router. In a typical situation, a very large router (e.g., 1024 × 1024) might be used to control a TV station. The station manager does not want just anyone to be able to change any source to any destination, because some of these destinations go straight to air. If someone accidentally changes a crosspoint on the monitor wall, and the feed goes live, the error could have

serious consequences. To avoid such problems, it is desirable to give operators access only to those crosspoints they need, by creating logical routers.

IMPORTANT

Once you have configured the logical router, it is important not to change its name.


Doing so will disable any settings that refer to the existing router name, including:

- logical source assignments for source or destination label,
- external router connection configurations,
- monitors and background actions associated with the logical router,
- automatic crosspoint changes on video monitors (router source property).


If you change the name back to the original, everything should work as before.

To add a logical router


- 1 In the **Routers** list, click the **Logical routers** folder, and then click **Add router** under the **Router configurations** tab.

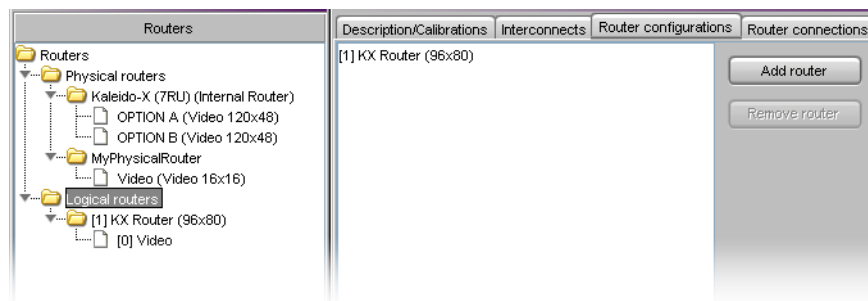

A new sub-folder is added to the **Logical routers** folder. This new folder is automatically selected, and a third-level tab bar appears under **Router configurations**, with the **Configuration** tab selected.

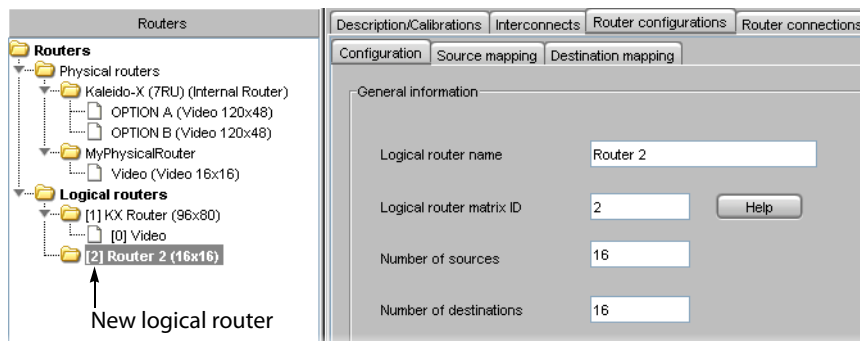


- 2 Type a name (e.g., "SmallLogicalRouter") in the **Logical router name** box. This is the name that will appear on monitor wall in the **Assign [router] input** menu. Ignore the **Logical router matrix ID** box for now. Type the required number of sources and destinations (e.g., 16×4).

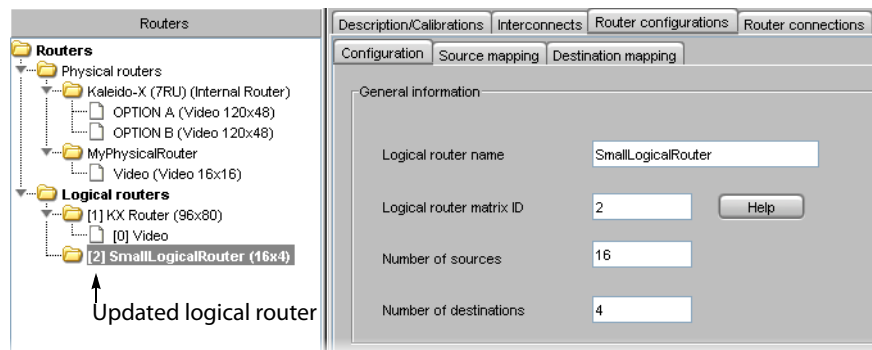


The subfolder that represents the new logical router is renamed automatically, reflecting your changes.


- 3 Click **Add level**.
- 4 In the **Logical Level Configuration** window, type a **Logical level name** (e.g., "Video"). The **Logical level ID** is not important at this point.

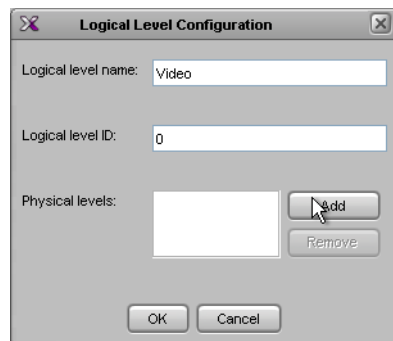

- 5 The logical level must be associated with a physical router level. Click **Add**, and then select the appropriate physical level from the list that appears.

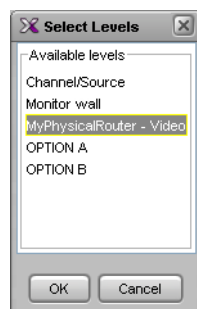


- 6 Click **OK**, and then click **OK** again in the **Logical Level Configuration** window. The new logical level appears in the **Levels** list, and also under the new sub-folder that represents the logical router in the **Routers** list.

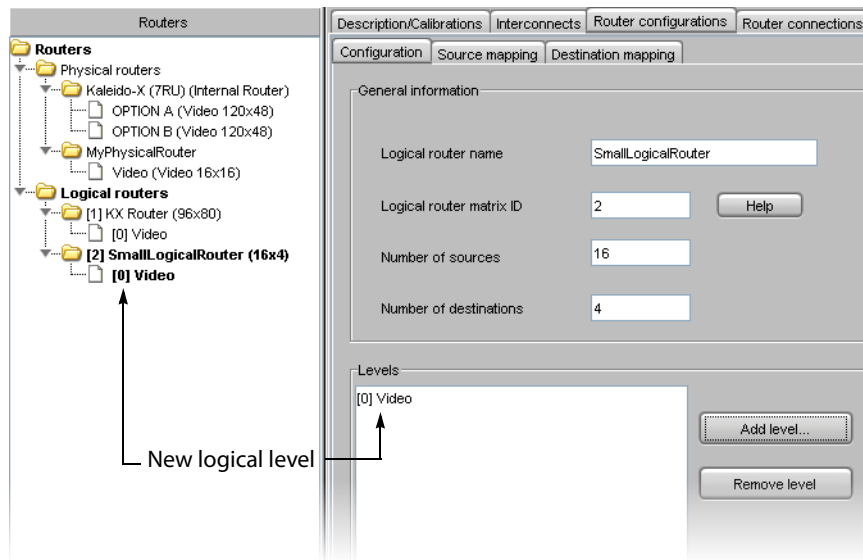

Next, you must specify the relationship between the logical level destinations (4 in this example) and the physical destinations (16 in this example).


7 Click the **Destination mapping** tab.

The Destination mapping table includes rows for each of the logical destinations (4 in this example), with columns for entering a text label (e.g., "Main Out", "Preview", etc.) and the corresponding physical router destination (this column's heading corresponds to the logical router level specified earlier—" [0] Video" in this example).

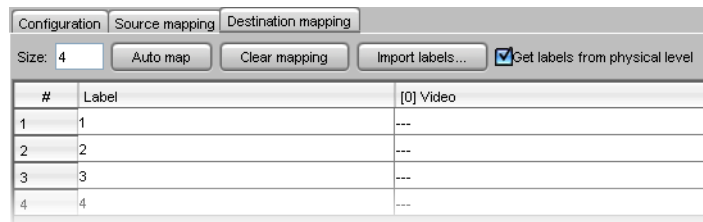


8 Click in a row in the physical level column.

A menu appears listing all of the available outputs associated with that physical level.

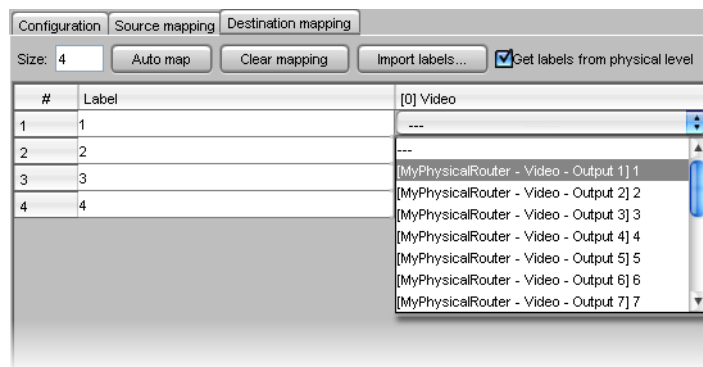

9 Choose a physical output for this logical destination, and then proceed in the same fashion for the other destinations, or click **Auto map** to automatically enter physical outputs, in sequential order, starting from the first one in the list.

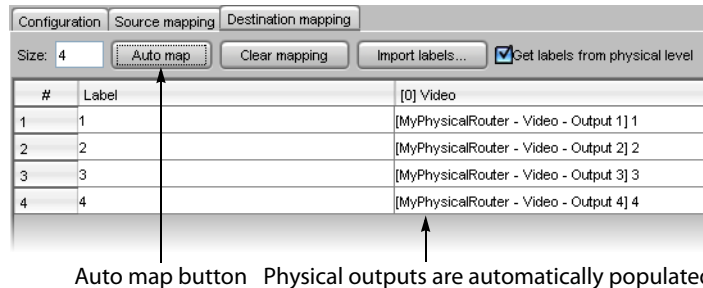

Auto map button Physical outputs are automatically populated

- If you have already specified a physical output, the sequence starts from that one, then autofills from there.
- If the one you specified is in a row part way down the table, auto-mapping fills in the rows below, then continues the sequence starting at the top of the table.

This feature is particularly useful when mapping a large number of destinations.

Note: If you make a mistake, click **Clear mapping**, and then click **Yes** in the confirmation message that appears to delete the entries in the physical output column of the table. This does not affect the **Labels** column.

- 10 To import labels from a CSV file (i.e. a comma-delimited file such as might be exported from an Excel spreadsheet), click **Import labels**, navigate to the CSV file that contains the labels you want to import, select it, and then click **Open**.

Note: The file must be formatted as three columns with no heading row. Column 1 should contain numbers from 1 to N (the number of sources), column 2 should contain the source labels, and column 3 should contain the destination labels. Columns are delimited by commas, without spaces.

Sample label file:

```
1,VTR 1,OUT 1
2,VTR 2,OUT 2
3,CAM 1,OUT 3
4,CAM 2,OUT 4
5,SAT 1,PGM
6,SAT 2,PVW
```

Alternatively, select the **Get labels from physical level** check box, to import labels directly from a router at runtime.

Note: Labels are imported at runtime (i.e. they only appear on the monitor wall, not in XEdit). This feature applies to the following router protocols only:

- ETL Matrix
- Evertz Quartz Type 1
- HRS-1801
- NVEP NV9000 (NP0017)
- SAM (Snell/Pro-Bel) General Remote Control Protocol (SW-P-08)
- Thomson / Grass Valley GVG 7000 Native Protocol
- Utah Scientific RCP-3 Protocol

The list of supported protocols appears at the bottom of the **Source mapping** and **Destination mapping** tabs.

As with destinations, the sources of the logical level must be associated with sources on the physical router.

- 11 Click the **Source mapping** tab. The table works in the same way as for destinations, except that the number of rows is determined by the number of sources specified when the logical level was created.

Auto mapping example: Specify Input 4 in Row 2, then click **Auto map**. The auto mapper starts by putting Input 1 in Row 1, detects the entry in Row 2, so picks up the sequence by putting Input 5 in Row 3, Input 6 in Row 4, etc.


Configuration Source mapping Destination mapping		
Size: 16	Auto map	Clear mapping Import labels... ☒ Get labels from physical level
#	Label	[0] Video
1	1	[MyPhysicalRouter - Video - Input 1] 1
2	2	[MyPhysicalRouter - Video - Input 4] 4
3	3	[MyPhysicalRouter - Video - Input 5] 5
4	4	[MyPhysicalRouter - Video - Input 6] 6
5	5	[MyPhysicalRouter - Video - Input 7] 7
6	6	[MyPhysicalRouter - Video - Input 8] 8
7	7	[MyPhysicalRouter - Video - Input 9] 9
8	8	[MyPhysicalRouter - Video - Input 10] 10
9	9	[MyPhysicalRouter - Video - Input 11] 11
10	10	[MyPhysicalRouter - Video - Input 12] 12
11	11	[MyPhysicalRouter - Video - Input 13] 13
12	12	[MyPhysicalRouter - Video - Input 14] 14
13	13	[MyPhysicalRouter - Video - Input 15] 15
14	14	[MyPhysicalRouter - Video - Input 16] 16
15	15	[MyPhysicalRouter - Video - Input 2] 2
16	16	[MyPhysicalRouter - Video - Input 3] 3

IMPORTANT


You can have the same physical sources and destinations mapped to multiple logical routers. The software does not prevent this. In the case of destinations, care must be taken to avoid conflicts when using auto mapping.

At this point, you have completed the source and destination mapping for a logical level (e.g., "[0] Video"). Additional levels can be created. For example, it is often necessary to switch the audio at the same time as the video. If you have a video router and an audio router, and you select Video 2 on the former, you probably want the associated audio to switch as well. To accomplish this, define a new logical level for the audio.

- 12 Create a new logical level (e.g., "[1] Audio"), and associate it with a physical router Audio level.

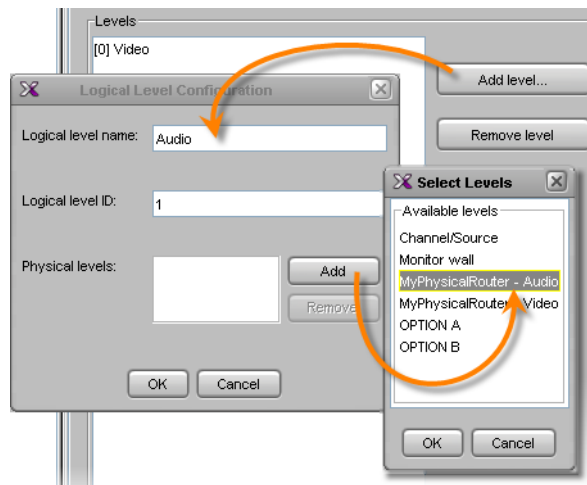

The new level appears under the logical router in the Routers list.

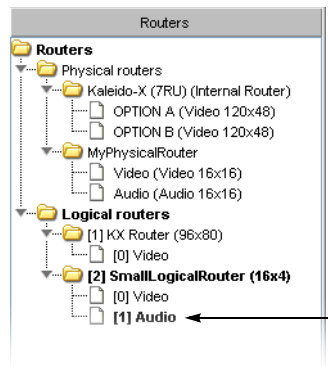

13 Click the **Destination mapping** tab.

A new column appears, corresponding to the new logical Audio level. The audio destinations can be mapped to correspond to the video destinations. Use the **Auto map** button as needed.

Configuration Source mapping Destination mapping			
Size: 4 Auto map Clear mapping Import labels... ☒ Set labels from physical level			
#	Label	[0] Video	[1] Audio
1	1	[MyPhysicalRouter - Video - Output 1] 1	[MyPhysicalRouter - Audio - Output 1] 1
2	2	[MyPhysicalRouter - Video - Output 2] 2	[MyPhysicalRouter - Audio - Output 2] 2
3	3	[MyPhysicalRouter - Video - Output 3] 3	[MyPhysicalRouter - Audio - Output 3] 3
4	4	[MyPhysicalRouter - Video - Output 4] 4	[MyPhysicalRouter - Audio - Output 4] 4

14 Proceed in the same fashion with the source mapping.

Configuration Source mapping Destination mapping			
Size: 16		Auto map	Clear mapping Import labels... ☒ Get labels from physical level
#	Label	[0] Video	[1] Audio
1	1	[MyPhysicalRouter - Video - Input 1] 1	[MyPhysicalRouter - Audio - Input 1] 1
2	4	[MyPhysicalRouter - Video - Input 4] 4	[MyPhysicalRouter - Audio - Input 2] 2
3	5	[MyPhysicalRouter - Video - Input 5] 5	[MyPhysicalRouter - Audio - Input 3] 3
4	6	[MyPhysicalRouter - Video - Input 6] 6	[MyPhysicalRouter - Audio - Input 4] 4
5	7	[MyPhysicalRouter - Video - Input 7] 7	[MyPhysicalRouter - Audio - Input 5] 5
6	8	[MyPhysicalRouter - Video - Input 8] 8	[MyPhysicalRouter - Audio - Input 6] 6
7	9	[MyPhysicalRouter - Video - Input 9] 9	[MyPhysicalRouter - Audio - Input 7] 7
8	10	[MyPhysicalRouter - Video - Input 10] 10	[MyPhysicalRouter - Audio - Input 8] 8
9	11	[MyPhysicalRouter - Video - Input 11] 11	[MyPhysicalRouter - Audio - Input 9] 9

If the audio mapping mirrors the video mapping, then, when a video switch is made (e.g., from Video 1 to Video 2), the corresponding audio will follow (i.e. the same command will switch a crosspoint in both the physical video router and the physical audio router).

Note: Grass Valley's Router Control Software includes applications for controlling routers (single bus and matrix) where you can operate in *all follow* mode (change all levels), or in *breakaway* mode.

The *all follow* mode is more typically used. An example of a breakaway would be switching Video 4 with Audio 5 instead of Audio 4 because Audio 5 is in another language.

When you make a crosspoint change in a logical router, you can change all of the logical levels, or just specific ones. **When controlling the monitor wall, only the "all follow" mode is supported.** If you need to set up breakaway switches, you must use other software—e.g., Grass Valley's Router Control Software—or a router controller—e.g., a device that supports the SAM (Snell/Pro-Bel) SW-P-08 protocol.

At this point, you have completed the definition of an external router.

Configuring a Router Controller

There are two categories of router controllers that can be used to control the routers connected to (controlled by) a multiviewer:

- Simple router controllers, such as the Nevion (Network Electronics) VikinX Compact, or devices that support the SAM (Snell/Pro-Bel) SW-P-02 protocol.
- Intelligent router controllers that support the SAM (Snell/Pro-Bel) SW-P-08 protocol.


Adding a Simple Router Controller

A VikinX Compact router controller, on any control panel that supports the SAM (Snell/Pro-Bel) SW-P-02 protocol, can issue switching commands to a specific router connected to (controlled by) the multiviewer, which will act as a *protocol translator*.


Adding a VikinX Compact router controller

To add a VikinX Compact (or equivalent) router controller


- 1 Click and drag **Router controller (VikinX Compact)** from the **Equipment** library to the **System** hierarchical list.

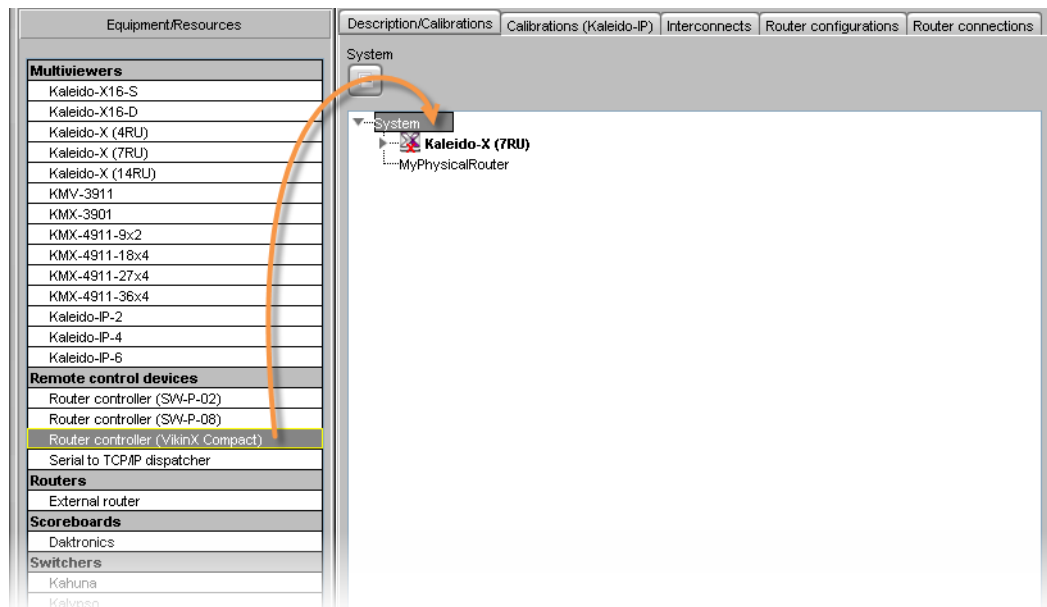

- 2 When prompted, type a name, and then click **OK**.

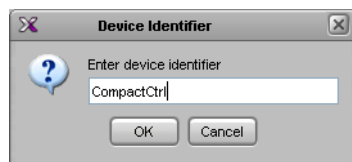


- 3 Click the **Interconnects** tab, draw a line between the multiviewer and the new router controller, and then click the line.

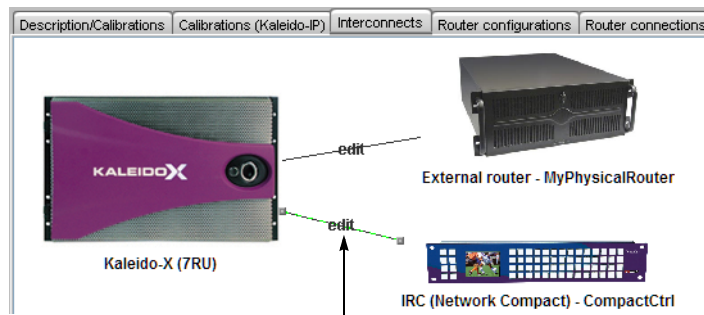

Click the line to configure
the connection properties

- 4 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

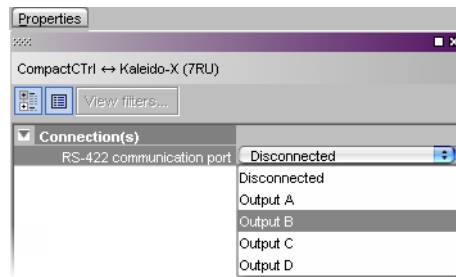

Depending on the multiviewer model, the available RS-422 ports are designated as follows:


KMV-3901/3911	RS-422
Kaleido-X16	Port 1 and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

Note: Simple router controllers can also communicate with a Kaleido multiviewer through TCP/IP. This type of connection is enabled automatically, and allows such controllers to issue commands to the multiviewer's internal router module.

- 5 In the **Interconnects** tab, click the router controller icon.

In the **Properties** pane, a list of settings appears, with default values for the serial communication parameters: the bit rate (bps), the number of data bits, parity, stop bits and flow control.

- 6 Select a logical router (e.g., SmallLogicalRouter) from the **Router** list.

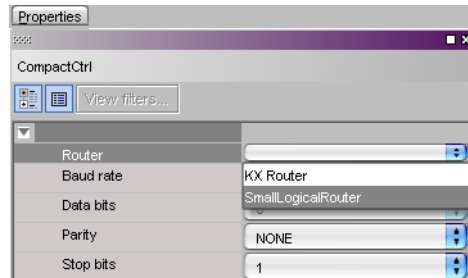

This is the logical router that will be controlled by the router control panel. When the multiviewer receives commands over the serial port on the output card selected in [step 4](#), it will know these are destined for the logical router corresponding to "SmallLogicalRouter".

Note: The VikinX Compact protocol allows you to specify one logical router only (it is a one-to-one controller protocol).

Adding a SAM (Snell/Pro-Bel) SW-P-02 router controller

To add a control panel that uses the SW-P-02 protocol

- See the above procedure but, at [step 1](#), select **Router controller (SW-P-02)** from the Equipment library instead of **Router controller (VikinX Compact)**.


Adding an Intelligent Router Controller

An intelligent router controller is one that can issue switching commands to any router connected to (controlled by) the multiviewer. In order to be able to do this, it must attach a unique identifier to each command that will allow the Kaleido Software to direct the command to the appropriate device. This unique identifier is the "Logical router matrix ID", which is similar to the "Level or frame ID" for a physical router, but identifies a logical router.


So, for example, if you press a button on the external panel that is set up to make a crosspoint change on logical router matrix ID 0, the Kaleido Software will receive this command, look up matrix ID 0 to find the physical router it is mapped to, and then forward the crosspoint change to the physical router using the appropriate protocol. In such cases, the Kaleido Software acts as a "protocol translator" for the control panel.

To add a SAM (Snell/Pro-Bel) SW-P-08 (or equivalent) router controller


- 1 Click and drag **Router controller (SW-P-08)** from the **Equipment** library to the System hierarchical list.

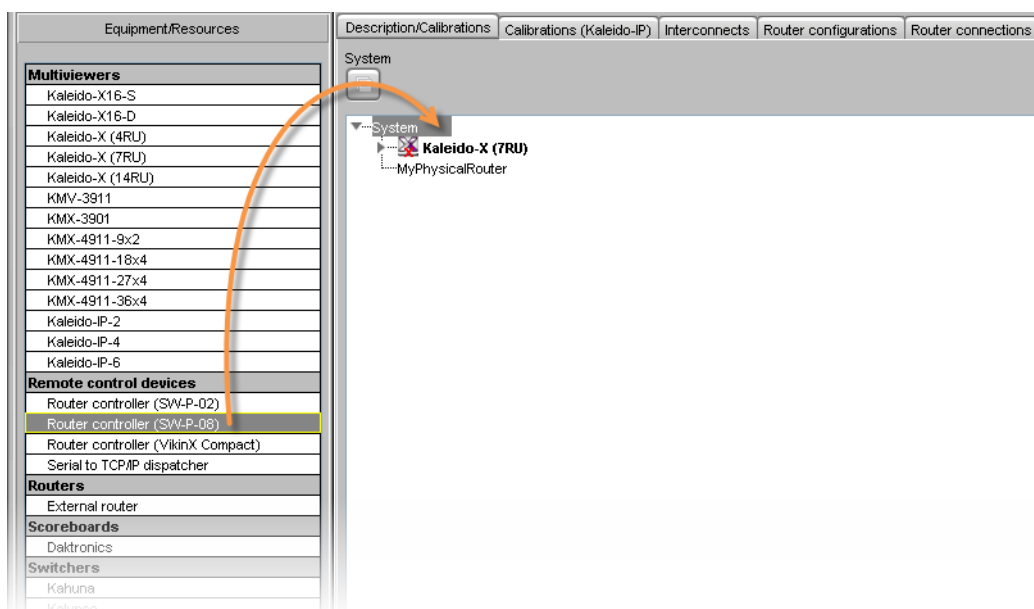


- 2 When prompted, type a name for the router controller, and then click **OK**.

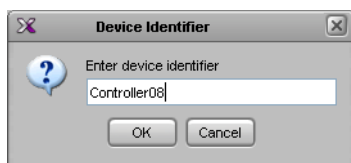

- 3 Click the **Interconnects** tab, draw a line between the multiviewer and the new router controller, and then click the line.

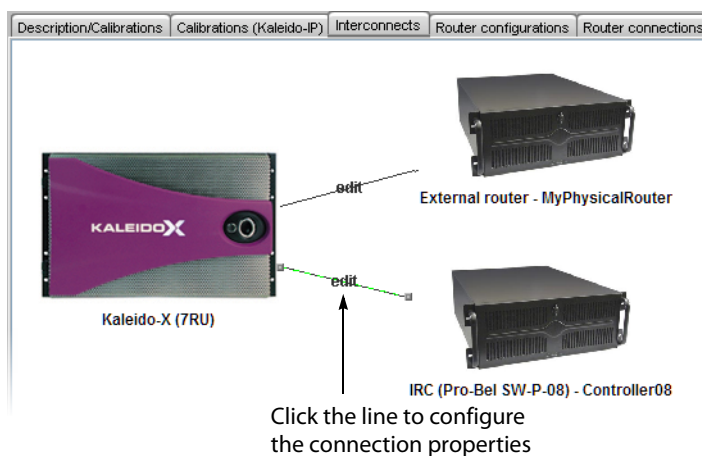

- 4 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

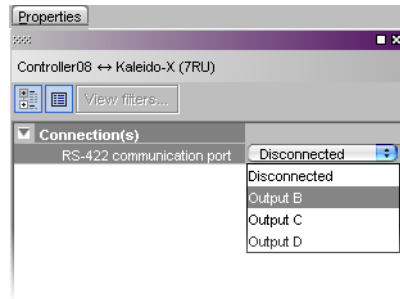


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).


- 5 In the **Interconnects** tab, click the router controller icon.

In the **Properties** pane, a list of settings appears, with default values for the serial communication parameters: the bit rate (bps), the number of data bits, parity, stop bits and flow control.

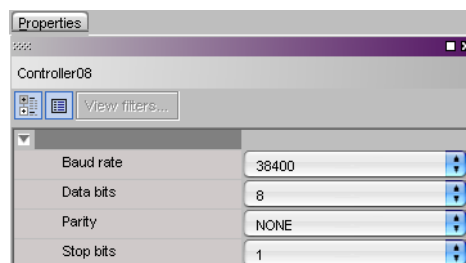

However, in this case, there is no **Router** box for specifying which logical router is to be controlled. This is because the SW-P-08 protocol allows the controller to pass the identifier for the logical router with a command (i.e. it tells the multiviewer to make a crosspoint change for logical router X). The ID that it passes is the logical router matrix ID (see [Step 3 – Adding Logical Routers](#), on page 376).

- 6 Click the **Router configurations** tab to view (or set) the logical matrix ID.

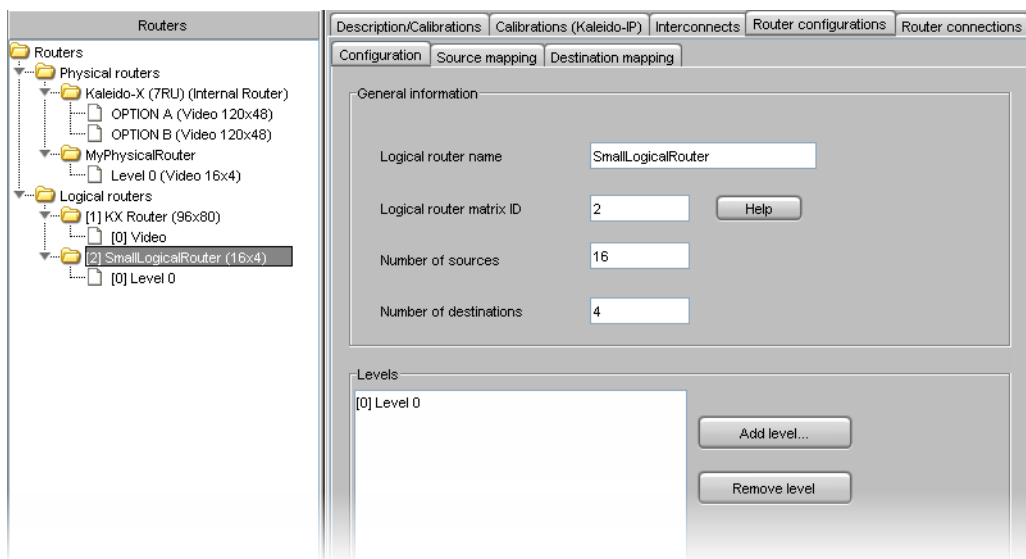

Notes

- The logical router matrix ID must be manually entered on the SAM (Snell/Pro-Bel) controller—this is usually done through a Web interface, but is sometimes done over a serial connection. Some controllers allow you to program individual buttons, or groups of buttons.
- The SAM (Snell/Pro-Bel) controller can also use the logical router level IDs (e.g., [0] Video, [1] Audio) when it sends commands, allowing you to target just video crosspoints, just audio crosspoints, or both.

IMPORTANT

You must always configure a logical router for a physical external router. There is no way to control a physical external router directly.


Configuring a Multiviewer's Internal Router

To control your multiviewer's internal router, it must be configured in the context of the *KX Router* logical router.

Configuring the Internal Router in a Kaleido-X16

To configure a Kaleido-X16 multiviewer's internal router

- 1 Click the **Router configurations** tab, and then navigate to the **Kaleido-X16-D (Internal Router)** or **Kaleido-X16-S (Internal Router)** folder under **Physical routers**, in the **Routers** list.

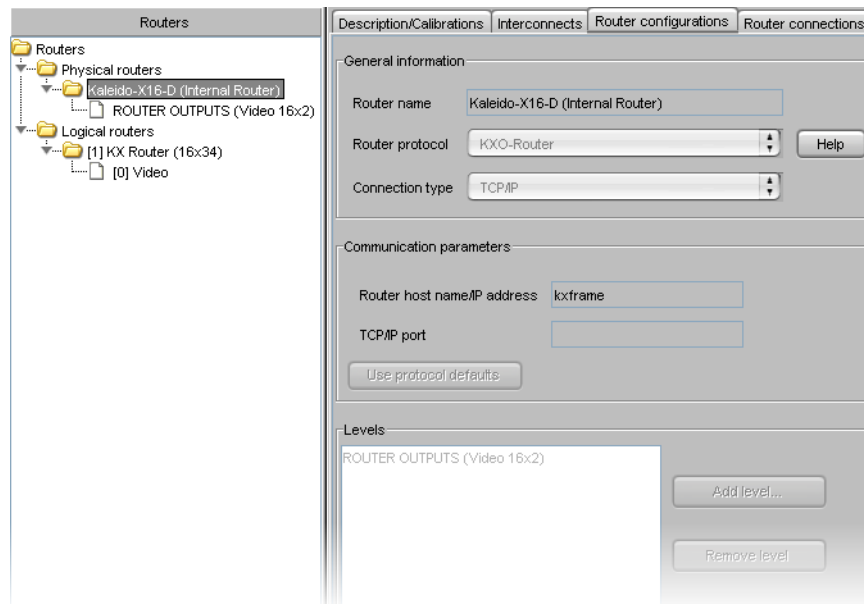


The router protocol, connection type, host name and levels are predefined (and cannot be modified). Under **Kaleido-X16-D (or S) (Internal Router)**, the physical level **ROUTER OUTPUTS (Video 16 × 2)** or **ROUTER OUTPUTS (Video 16 × 1)** was automatically created and configured to the right size.

Notes

- The following ports are always active and can be used for controlling a Kaleido multiviewer over TCP/IP, through the associated protocols:
 - port 14000 — SW-P-08
 - port 2000 — SW-P-02
 - port 4381 — VikinX Modular
 - port 5194 — NVEP Router (NP0016)
- When controlling a multiviewer, by using one of the TCP/IP router protocols, the router level to be controlled must be configured in XEdit (see [step 6](#) under [Creating a Single Multiviewer System](#), on page 42). No other communication configuration is required in XEdit.

- 2 Navigate to the **KX Router** folder, under **Logical routers**, and then click the **[0] Video** level.

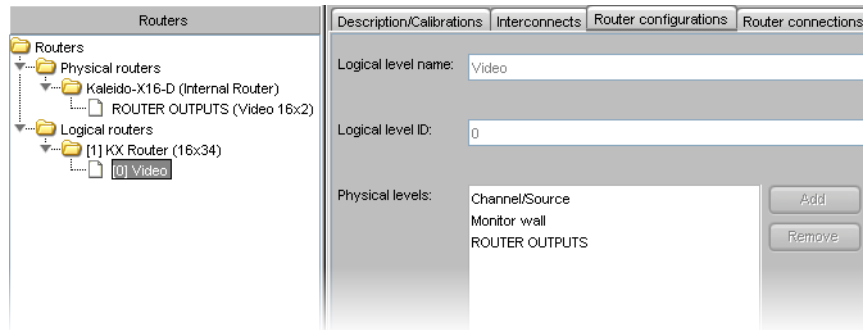


In a factory-default configuration, the physical level **ROUTER OUTPUTS** is automatically included in the KX Router logical level **[0] Video**.


IMPORTANT

Controlling the multiviewer's internal router by using any other logical router than *KX Router* is not supported. The **ROUTER OUTPUT** physical level must be added to the *first level* (i.e. **[0] Video**), under KX Router.

- 3 If the physical level is not included—for example, someone may have removed it from your configuration—, then you must add it to this logical level. In the **Router configurations** tab, click **Add**.

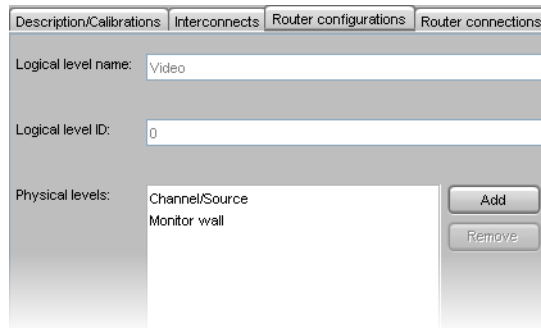

The **Select Levels** window appears, listing all available physical levels.

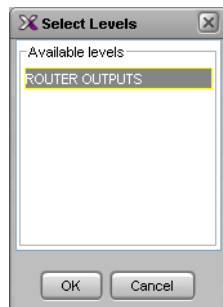

- 4 Select the physical levels you want to add to KX Router's first logical level, and then click **OK**.

The selected levels appear in the **Physical levels** list.

- 5 Click the **[1] KX Router (16 × 34)** folder under **Logical routers** in the Routers list.

The third-level tab bar appears under **Router configurations**, with the **Configuration** tab selected.

- 6 Source and destination mapping is *not* done automatically. Click the **Source mapping** tab, click a cell in the **[0] Video** logical level column, and then choose an input from the list.
- 7 To import labels from a CSV file (i.e. a comma-delimited file such as might be exported from an Excel spreadsheet), click **Import labels**, navigate to the CSV file that contains the labels you want to import, select it, and then click **Open**.

Note: The file must be formatted as three columns with no heading row. Column 1 should contain numbers from 1 to N (the number of sources), column 2 should contain the source labels, and column 3 should contain the destination labels. Columns are delimited by commas, without spaces.


Sample label file:

```
1,VTR 1,OUT 1
2,VTR 2,OUT 2
3,CAM 1,OUT 3
4,CAM 2,OUT 4
5,SAT 1,PGM
6,SAT 2,PVW
```

Auto map works as described in [Step 3 – Adding Logical Routers](#), on page 376.

Note: The **Get labels from physical level** feature is not supported for internal router cards.


KX Router also has a **Logical router matrix ID**, which can be used by an external router control device or application to control the internal router modules.

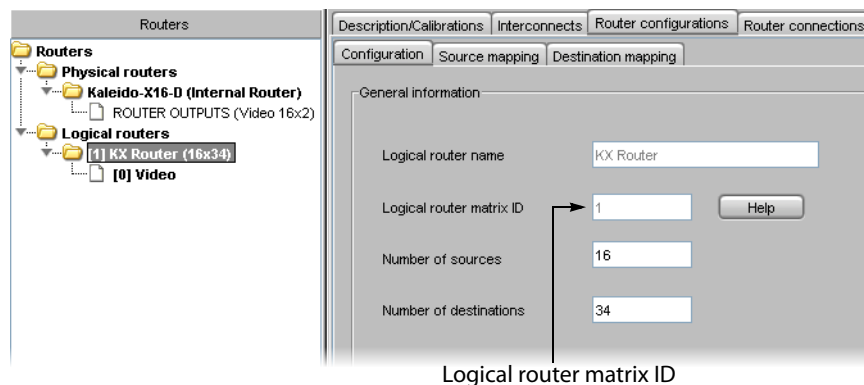


Configuring the Internal Router in a Kaleido-X (7RU)

To configure a Kaleido-X (7RU) multiviewer's internal router cards

- 1 Make sure that the System list reflects your multiviewer's router card configuration. To add an internal router card, right-click **OPTION A** or **OPTION B** in the System list, and then click **Insert KXO-24Router** on the menu.

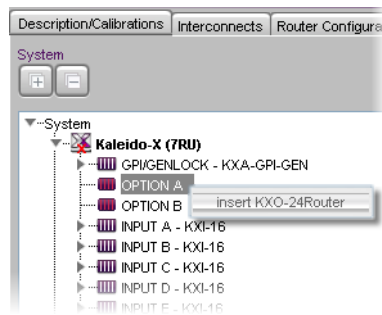


A KXO-24Router card fills the selected slot.

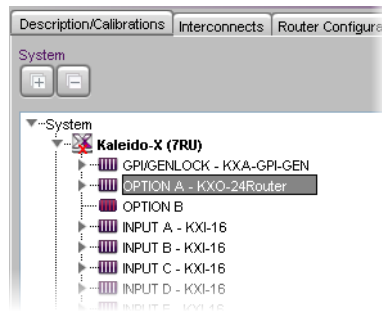

- 2 Click the **Router configurations** tab, and then navigate to the **Kaleido-X (7RU) (Internal Router)** folder under **Physical routers**, in the **Routers** list.


The router protocol, connection type, host name and levels are predefined (and cannot be modified).

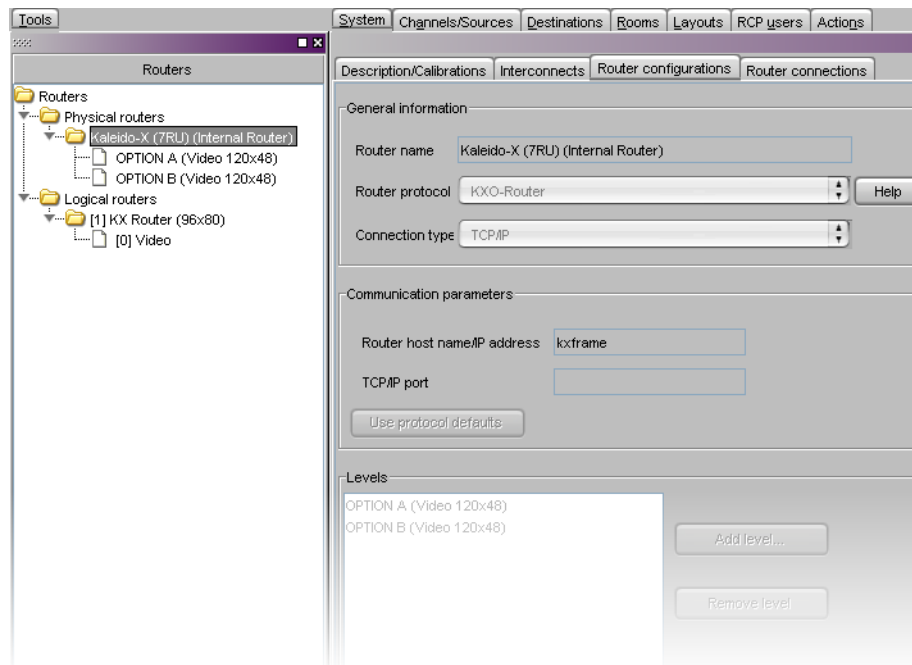

Notes


- The following ports are always active and can be used for controlling a Kaleido multiviewer over TCP/IP, through the associated protocols:
 - port 14000 — SW-P-08
 - port 2000 — SW-P-02
 - port 4381 — VikinX Modular
 - port 5194 — NVEP Router (NP0016)
- When controlling a multiviewer, by using one of the TCP/IP router protocols, the router level to be controlled must be configured in XEdit (see [step 6](#) under [Creating a Single Multiviewer System](#), on page 42). No other communication configuration is required in XEdit.

- 3 Click **OPTION A** (or **B**) under **Kaleido-X (7RU) (Internal Router)** in the physical routers list. Note that the physical levels are automatically created—OPTION A (Video 120 × 48) and OPTION B (Video 120 × 48)—and configured to the right size.

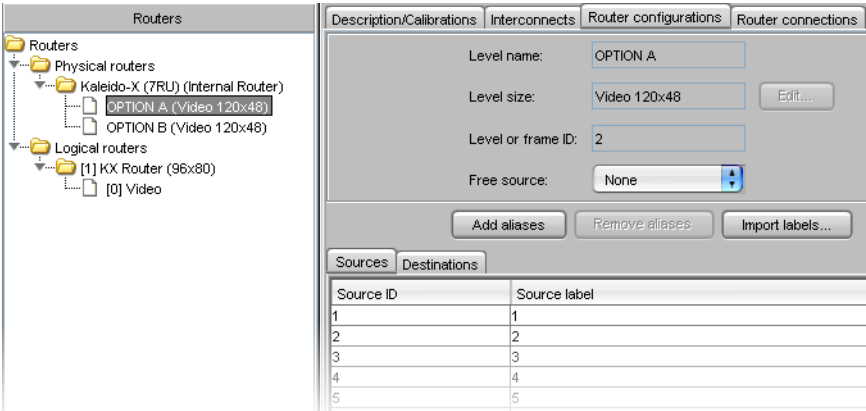

Note: “120 × 48” refers to the physical router size including internal connections used for router expansion. The actual size of each router card is 96 × 24. Refer to *Configuring Router Card Expansion* in the Kaleido-X (7RU) Installation & Service Manual, for more information. See [Related Documentation](#), on page 13.

- 4 Navigate to the **KX Router** folder, under **Logical routers**, and then click the **[0] Video** level.

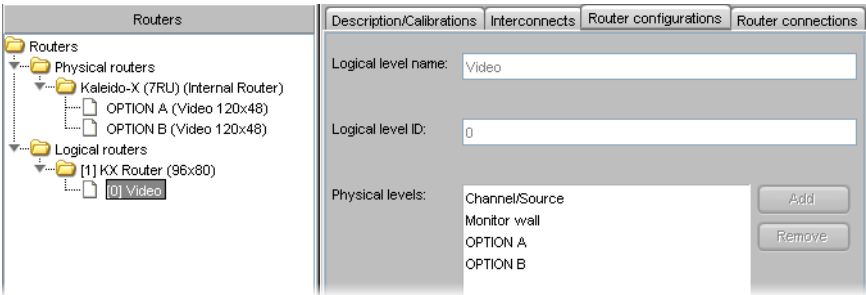


In a factory-default configuration, the physical levels OPTION A and OPTION B are automatically included in the KX Router logical level **[0] Video**. If the physical levels

(OPTION A, or B) for your actual router cards are not included—for example, this would be the case if you just added a router card to your system configuration—, then you must add them to this logical level.


IMPORTANT

Controlling the multiviewer's internal router by using any other logical router than *KX Router* is not supported. The physical levels OPTION A and OPTION B must be added to the *first level* (i.e. [0] **Video**), under KX Router.

- 5 In the **Router configurations** tab, click **Add**.

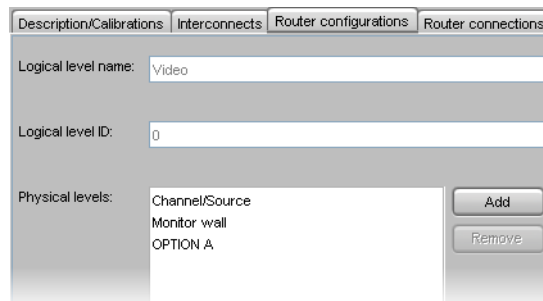

The **Select Levels** window appears, listing all available physical levels.

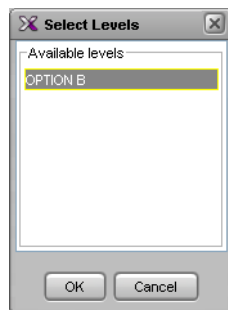

- 6 Select the physical levels you want to add to KX Router's first logical level, and then click **OK**.

The selected levels appear in the **Physical levels** list.

- 7 Click the [1] **KX Router (96 × 80)** folder under **Logical routers** in the Routers list.

The third-level tab bar appears under **Router configurations**, with the **Configuration** tab selected.

- 8 Source and destination mapping is *not* done automatically. Click the **Source mapping** tab, click a cell in the [0] **Video** logical level column, and then choose an input from the list.
- 9 To import labels from a CSV file (i.e. a comma-delimited file such as might be exported from an Excel spreadsheet), click **Import labels**, navigate to the CSV file that contains the labels you want to import, select it, and then click **Open**.

Note: The file must be formatted as three columns with no heading row. Column 1 should contain numbers from 1 to N (the number of sources), column 2 should contain the source labels, and column 3 should contain the destination labels. Columns are delimited by commas, without spaces.


Sample label file:

```
1,VTR 1,OUT 1
2,VTR 2,OUT 2
3,CAM 1,OUT 3
4,CAM 2,OUT 4
5,SAT 1,PGM
6,SAT 2,PVW
```

Auto map works as described in [Step 3 – Adding Logical Routers](#), on page 376. It is also useful to have manual control over the source/destination mapping in the event a router card is removed.

Note: The **Get labels from physical level** feature is not supported for internal router cards.

KX Router also has a **Logical router matrix ID**, which can be used by an external router control device or application to control the internal router modules.

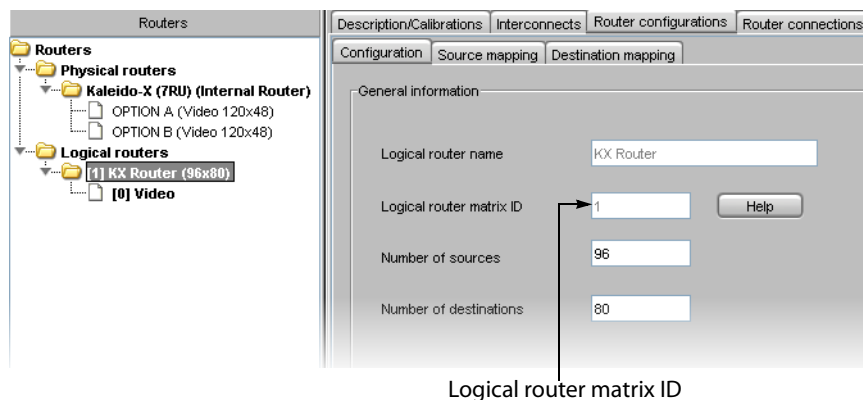

Note: In the case of a Kaleido-X (7RU), signals entering the input cards are made available to the internal router cards through the midplane (i.e. there is no cabling between the BNC outputs on the router cards and the BNC inputs on the KXI cards).

Configuring the Internal Router in a Kaleido-X (14RU)

Once two Kaleido-X (7RU) systems are in a Kaleido-X (14RU) expansion configuration, thereby giving you access to any source from either frame in your layouts, their respective router cards are not automatically shared between the system's Frame A and Frame B. To be able to choose a source from one frame and send it to a router output on the other frame, you must have connected the router cards of one frame to those of the other using special cables plugged into the expansion ports on the router cards themselves, and then, in XEdit, you must have specified how the cards are connected. Refer to "Configuring Router Card Expansion" in the Kaleido-X (7RU) Installation & Service Manual, for details. See [Related](#)

[Documentation](#), on page 13.

Configuring Router Connections

To configure router connections

- 1 Click the **Router connections** tab, which lists all multiviewer inputs and, for each, the associated output connector from a router. For each multiviewer input you want to connect to an external router (e.g., INPUT A – Video 01), click the first menu (under **Router**) and choose a physical router level (e.g., “MyRouter” – Video).

Router connections		
Inputs	Router outputs	
	Router	Port
INPUT A - Video 01 ←	MyRouter - Video	---
INPUT A - Video 02 ←	Unconnected	---
INPUT A - Video 03 ←	OPTION A	---
INPUT A - Video 04 ←	emulSZ - Level 0	---
INPUT A - Video 05 ←	MyRouter - Video	---
INPUT A - Video 06 ←	Unconnected	---
INPUT A - Video 07 ←	Unconnected	---
INPUT A - Video 08 ←	Unconnected	---
INPUT A - Video 09 ←	Unconnected	---

Annotations:

- Maps to BNC connectors on the multiviewer (points to INPUT A - Video 01)
- The name of the physical router (points to MyRouter - Video)
- Maps to OUTPUT BNC connectors on the physical router (points to Port)

Note: *Unconnected* means that this multiviewer input is *not connected to a router output*. For example, the input might be directly connected to a source signal.

- 2 Click the second menu and choose the appropriate output (e.g., “Output 1 [1]”).

Router connections		
Inputs	Router outputs	
	Router	Port
INPUT A - Video 01 ←	MyRouter - Video	Output 1 [1]
INPUT A - Video 02 ←	Unconnected	---
INPUT A - Video 03 ←	Unconnected	---
INPUT A - Video 04 ←	Unconnected	---
INPUT A - Video 05 ←	Unconnected	---
INPUT A - Video 06 ←	Unconnected	---
INPUT A - Video 07 ←	Unconnected	---
INPUT A - Video 08 ←	Unconnected	---

In this example, the Kaleido Software registers that Output 1 from the router has a cable that connects to the BNC connector corresponding to Video 1 on the multiviewer’s INPUT A module. This means that when you select a router source to be assigned to a monitor on the monitor wall, the Kaleido Software will be able to determine whether the multiviewer’s INPUT A – Video 01 connector is available, and, if so, request the appropriate crosspoint change for “Output 1” of “MyRouter”.

- 3 Use the incremental copy tool to assign the next router outputs to contiguous multiviewer inputs.

Description/Calibrations	Interconnects	Router configurations	Router connections
Inputs	Router outputs		
	Router	Port	
INPUT A - Video 01 ←	MyRouter - Video	Output 1 [1]	
INPUT A - Video 02 ←	Unconnected	---	
INPUT A - Video 03 ←	Unconnected	---	
INPUT A - Video 04 ←	Unconnected	---	
INPUT A - Video 05 ←	Unconnected	---	
INPUT A - Video 06 ←	Unconnected	---	
INPUT A - Video 07 ←	Unconnected	---	
INPUT A - Video 08 ←	Unconnected	---	

Notes

- Using the incremental copy tool in the **Router** column only copies the selected router to the next rows.
- Using the incremental copy tool in the **Port** column inserts the next output ports from the selected router in sequence, based on their Destination ID, until the last output port has been mapped, at which point using the incremental copy tool further will clear the subsequent cells.
- When using the tool in the **Port** column, the **Router** column is populated accordingly.
- It is possible to select the same output port more than once.
- You can resize the router connections table by dragging column boundaries, or by using the double or triple click features described in the [Logical Sources](#) chapter. See [Resizing the Sources Table's Columns](#) on page 105, for details.
- In the case of a **Kaleido-Modular-X** multiviewer connected to an **NV8576** router that has M3 output cards, if an M3 output card is installed in the *lower output bays of the NV8576 router frame*, its backplane is *upside down* and the ordering of its ports differs from when the backplane is installed in the upper bays (right side up) of an NV8576 frame. Refer to *NV8500 M3 Backplane Connections*, in the Kaleido-Modular-X Installation & Service Manual to determine the correct mapping between router outputs and multiviewer inputs, when using the M3 cable. See [Related Documentation](#), on page 13.

Tally Interface Devices & Timer Systems

Introduction

This chapter describes how multiviewers can be configured to receive dynamic labels and status from tally interface devices, timer, time code and status information from a timer system, or status from a GPI module.

Overview

Kaleido multiviewer systems support most production switchers and other tally interface devices such as UMD controllers and automation systems, through a serial or network connection. Some timer systems and GPI I/O modules are also supported through a network connection. The multiviewer can dynamically update monitor wall elements to reflect text and status updates from the devices.

Key Concepts

Drivers for Controlling Tally Interface Devices from the Multiviewer

Drivers are available to extend your Kaleido-X system with the ability to control tally interface devices such as the ones listed in the tables below. Contact your sales representative for more information.

Production Switchers

Company	Device/System
Grass Valley (Thomson)	Kayenne K-Frame, Karrera K-Frame, Kayenne, Kalypso, Zodiak, KayakDD, Kayak SD/HD, DD35, XtenDD HD/SD series
Ross	Acuity, Synergy, and Vision Tritium series (via the Kalypso Serial Tally Protocol)
Grass Valley (SAM / Snell & Wilcox)	Kahuna
Sony	DVS-9000, MVS-8000, MFS-2000

UMD controllers

Company	Protocol	Device/System
TSL	TSL UMD protocol V5.0	UMD Controller (TCP/IP or UDP/IP) <i>IP Limitation:</i> only one screen index can be received per unicast port.
	TSL UMD protocol V3.1	UMD Controller (serial)
Grass Valley (Thomson)	Andromeda protocol	Andromeda UMD Controller
Image Video		TSI-1000 Tally System Interface (requires option from Image Video)

Automation systems

Company	Device/System
Imagine Communications (Harris/Encoda)	D-Series Playout Automation, A7500 Dual Master Automation
Sundance Digital	Fastbreak NXT Automation (requires option from Sundance Digital)

Drivers for Scoreboards and Timers

Scoreboards

Company	Device/System	Sport	Protocol version
Daktronics	All Sport scoreboard controllers	Basketball	ED-16593, Rev 0–1
		Football	ED-16098, Rev 0–1
		Baseball	DD1492305, Rev 0
		Soccer	ED-16804, Rev 0–1
		Volleyball	ED-19266, Rev 0
		Hockey	ED-16092, Rev 0
	Pitch timer (requires All Sport 5000, with All Sport CG version 2.6 or later)	Baseball	DD3030549, Rev 1

Timer systems

Company	Device/System
Plura (Alpermann+Velte)	Studio Production Timer (SPT)

Serial-to-TCP/IP Dispatcher

The Serial-to-TCP/IP Dispatcher is a piece of software designed to run on a separate PC or embedded into a product (e.g., a Kaleido multiviewer) and act as a bridge between a serial device and the TCP/IP network.

Note: For more information, refer to the *Serial-to-TCP/IP Dispatcher Protocol* guide, available from Grass Valley's Technical Support ([Grass Valley Technical Support](#), on page 536).

Plura (Alpermann+Velte) Studio Production Timer

Note: The Kaleido Software supports Plura (Alpermann+Velte) Studio Production Timer (SPT) systems that comprise a Rubidium series IE module with firmware version 2.14.24 or later, and option R (Timer Request Protocol) enabled. Only the *Basic* timer format mode is available.

For your multiviewer to receive time code information from a Plura (Alpermann+Velte) Studio Production Timer (SPT) system, and to display the system's contribution on the monitor wall, you need to configure your multiviewer's Plura SPT service, by performing the following tasks in XEdit:

- 1 Add the Plura (Alpermann+Velte) SPT timer system to your multiviewer system configuration, and set up the communication parameters (see [Adding a Timer System to your Multiviewer Configuration](#) on page 404).
- 2 Add logical sources and configure them by assigning alarms (or text elements) from the SPT system to the logical sources' alarm (or text) levels (see [Assigning Timer System Information to Logical Sources](#) on page 406).
- 3 Assign the appropriate alarm and text levels from logical sources, to layout elements such as time code monitors, UMDs or alarm monitors (see [Configuring Layout Elements](#) on page 407).


Adding a Timer System to your Multiviewer Configuration

To add a Plura (Alpermann+Velte) SPT system to your multiviewer configuration

- 1 Open XEdit.
- 2 Connect to the multiviewer, if you want to apply your changes in real time (see [Connecting to a Multiviewer](#) on page 32).

Note: If this step is omitted, then you will need to export the database to apply the changes.

- 3 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 4 Drag the **Plura (Alpermann+Velte) SPT** device from the equipment library onto the root of the System hierarchical list.

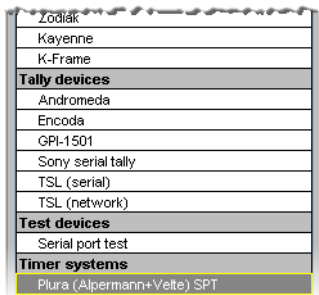


Alternatively, right-click the list root, and then click **Insert Plura (Alpermann+Velte) SPT** on the menu.

A window appears, prompting you for a device identifier.

- 5 In **Device Identifier**, type a name for the timer system, and then click **OK**.




 The timer system is added to the system list.




- 6 Click the **Interconnects** tab.
- 7 Position the pointer over the multiviewer icon, then click and drag towards the timer system icon.


A line representing the connection between the multiviewer and the device appears.

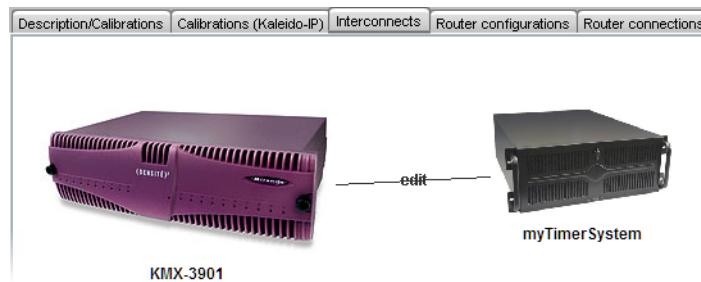

- 8 Click the connection line between multiviewer and device.
- 9 In the **Properties** pane, select **Network (TCP/IP)** from the **Transport type** list.

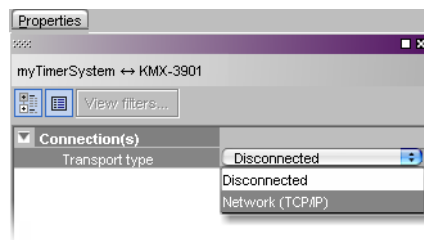

- 10 In the **Interconnects** tab, click the timer system icon.
- 11 In the **Properties** pane, type the IP address of your timer system.

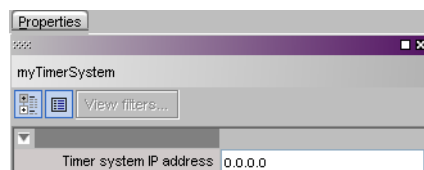

You are now ready to add information from the timer system to logical sources.


Assigning Timer System Information to Logical Sources

To configure your logical sources


- 1 In the **Channels/Sources** tab, add the required number of logical sources for your purposes (see [Manually adding a Logical Source](#) on page 94).
- 2 Add the required number of text and alarm levels for your purposes (see [Adding a level](#) on page 95).

For example, you might add one text level named *Timer*, and one alarm level named *Timer status*.

- 3 Click a cell that corresponds to the appropriate *text* level of a logical source you want to configure.
- 4 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.

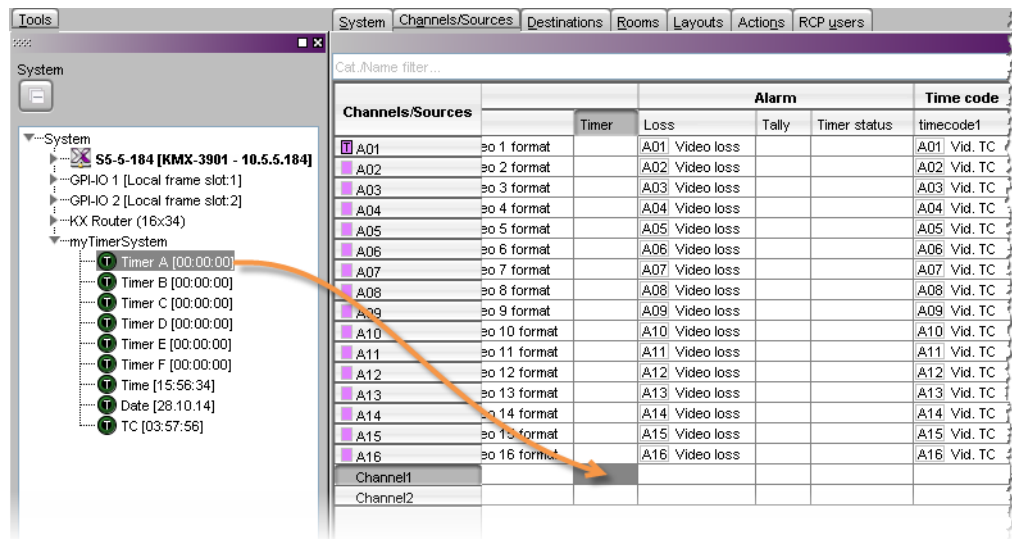

- 5 If your logical sources include more text levels to be associated with the timer system, then repeat [step 3](#) and [step 4](#) for the current logical source's remaining text levels.
- 6 Click a cell that corresponds to the appropriate *alarm* level of a logical source you want to configure.
- 7 In the filtered System list, navigate to the alarm element you want to monitor, and drag it onto the selected cell.

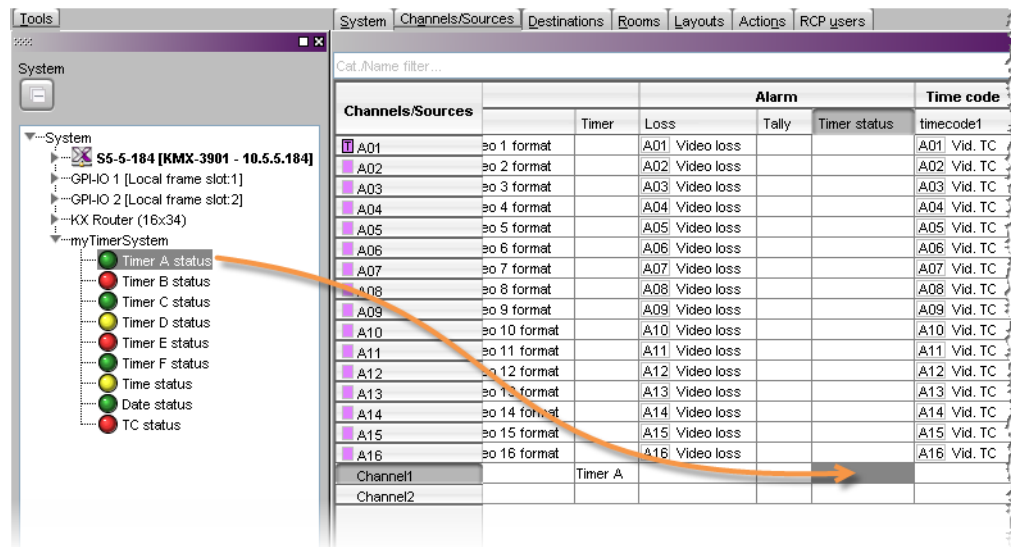


- 8 If your logical sources include more alarm levels to be associated with the timer system, then repeat [step 6](#) and [step 7](#) for the current logical source's remaining alarm levels.
- 9 Repeat [step 3–step 8](#) for any remaining logical sources you want to configure with information from the timer system.
- 10 On the **File** menu, click **Save**.
Changes to the sources table are saved.

Configuring Layout Elements

You can now assign the logical sources you previously configured (see [Assigning Timer System Information to Logical Sources](#) on page 406) to UMDs or other monitors that can display text or alarms (e.g., time code monitors, alarm monitors) in a layout. Depending on your purposes, you will assign the appropriate text or alarm levels to specific components within the monitors.


For example, you might configure the assignments for an alarm monitor, by replacing the default alarm level and text label level assignments (both set to *GlobalAlarm*, by default) with an alarm level associated with the timer system, and the corresponding text level, respectively.

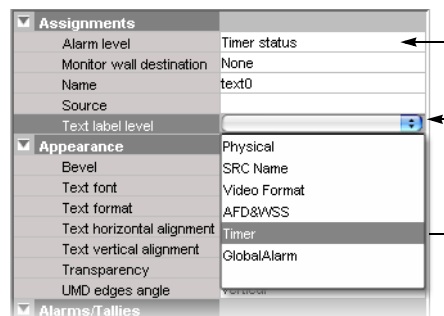


The procedure below explains how to configure a UMD to report timer text and status.

To configure a UMD for dynamic reporting of text and status from a timer system

- 1 Click the **Layouts** tab, and then open a layout.
- 2 Add a UMD from the set of predefined UMDs available on the **Tools** pane (e.g., *umd2*), or use the UMD toolbar button  (see [Configuring UMDs](#), on page 282, and [Working with Composite Monitors](#), on page 308, if needed).
- 3 On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning Timer System Information to Logical Sources](#) on page 406) from the filtered **Channels/Sources** list, and then drag it onto the UMD.
- 4 In the **Properties** pane, click the **Text label level** box, and then select the text level you want to monitor (e.g., the *Timer* level you previously configured).

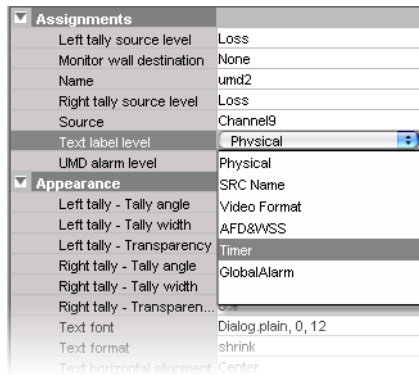

- 5 Click the **UMD alarm level** box, and then select the alarm level you want to monitor (e.g., the *Timer status* level you previously configured).

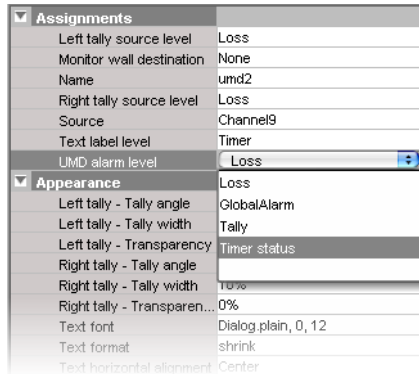

- 6 Select a monospace font for the text:
 - a Click the **Text font** box, and then click the button that appears inside the box to open the font picker window.
 - b In **Select a Font**, click a monospace font (e.g., Lucida Sans Typewriter), and then click **OK** to close the window.

Alternatively, set the text to be left-aligned by clicking the **Text horizontal alignment** box, and then selecting **Left** from the list.

- 7 Click outside the composite to lock it, if applicable.
- 8 On the **File** menu, click **Save**.
- 9 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned information from the Plura (Alpermann+Velte) SPT system. Text and status information from the device will be visible on the monitor wall. Any changes made by the device's operator will be immediately reflected on the monitor wall.

GPI-1501 General Purpose Interface I/O Module

The GPI-1501 is a 2RU Densité card that provides 20 dedicated GPI (General Purpose Interface) inputs plus eight terminals that can be individually configured as either a GPI input or GPI output. You may add one or more GPI-1501 modules to your multiviewer configuration to supplement the multiviewer's existing GPI interface or, in the case of a Kaleido-Modular-X system, to provide such an interface. Kaleido-MX, and Kaleido-MX 4K multiviewers ship with a pre-configured GPI-1501 card.

For example, you may resort to the GPI interface to receive tally information from a switcher whose specific protocol the multiviewer does not support, assuming the switcher is capable of communicating through GPI.

For your multiviewer to receive status information from a GPI-1501 module, and to display the module's contribution on the monitor wall as visual tally information, you need to configure your multiviewer's GPI-1501 service, by performing the following tasks in XEdit:

- 1 Add the GPI-1501 module to your multiviewer system configuration, and set up the communication parameters (see [Adding a GPI-1501 Module to your Multiviewer Configuration](#) on page 410).
- 2 Configure logical sources by assigning GPI alarms from the GPI-1501 module to the logical sources' alarm levels (see [Assigning GPI Status Information to Logical Sources](#) on page 413).
- 3 Assign alarm levels from logical sources, to layout elements such as UMDs or alarm monitors (see [Configuring Layout Elements](#) on page 414).


Adding a GPI-1501 Module to your Multiviewer Configuration

To add a GPI-1501 module to your multiviewer system configuration

- 1 Open XEdit.
- 2 Connect to the multiviewer, if you want to apply your changes in real time (see [Connecting to a Multiviewer](#) on page 32).

Note: If this step is omitted, then you will need to export the database to apply the changes.

- 3 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 4 Drag the **GPI-1501** device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert GPI-1501** on the menu.

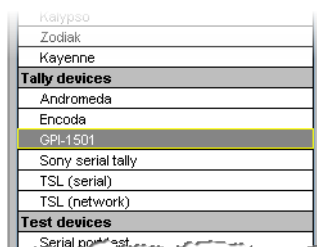


A window appears, prompting you for a device identifier.


- 5 In **Device Identifier**, type a name for the GPI-1501, and then click **OK**.



 
The GPI-1501 is added to the system list.



- 6 Click the **Interconnects** tab.
 - 7 Position the pointer over the multiviewer icon, then click and drag towards the GPI-1501 icon.
- A line representing the connection between the multiviewer and the device appears.

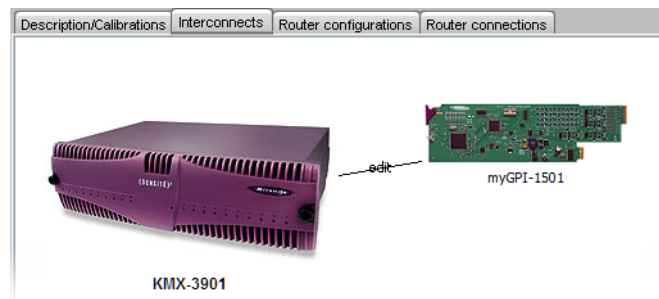


- 8 Click the connection line between multiviewer and device.
- 9 In the **Properties** pane, select **Network (TCP/IP)** from the **Transport type** list.

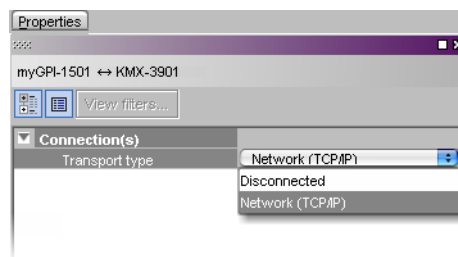

Note: In the case of a system with several GPI-1501 modules, some of which you do not necessarily use all the time, you may choose to momentarily disconnect those that are not in use, when you need to reduce network traffic, by selecting **Disconnected** from the **Transport type** list.


- 10 In the **Interconnects** tab, click the GPI-1501 icon.
- 11 In the **Properties** pane, type the number of the slot where your GPI-1501 card is located in its housing frame, directly in the **Slot number** box, or use the slider to set it.

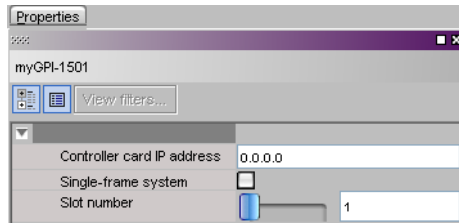


- In the case of a **Kaleido-Modular-X** multiviewer, if the GPI-1501 card and your multiviewer's output cards all share the same housing frame, then select the **Single-frame system** check box.
 - **Kaleido-MX**, and **Kaleido-MX 4K** multiviewers being single-frame systems, with a GPI-1501 card included, keeping the **Single-frame system** check box selected allows you to change the CPU-ETH2 controller's network settings, when needed, without having to revise communication parameters.
 - In all other cases, enter the IP address of the Densité frame housing the GPI-1501 (use the IP address associated with the CPU-ETH2 controller card's ETH1 port).
- 12 If you want to configure the GPI-1501 itself, click the **Description/Calibrations** tab, and then expand the appropriate GPI-1501 module in the System list.

Note: GPI-1501 configuration is only available when XEdit is connected to the multiviewer. If you were working in offline mode up to this point, you must now export the database to the multiviewer (see [Exporting a Database](#) on page 37), and then switch to online mode (see [Connecting to a Multiviewer](#) on page 32).


- a Click one of the eight configurable I/O terminals.

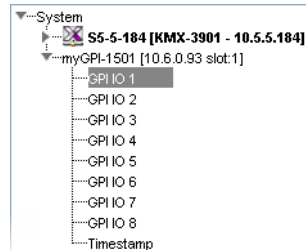


- b In the **Properties** pane, select the appropriate value from the **GPI IO direction** list, to configure the GPI line's direction (input or output).

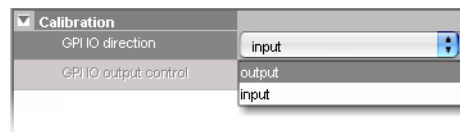

- c In the case of a GPI *output* line, if you want to set its ON/OFF state manually for test purposes, then select either ON or OFF from the **GPI output control** list.

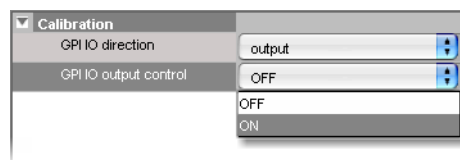


- d To configure the source of timestamp information, click the **Timestamp** element in the System list, and then, in the **Properties** pane, select the appropriate value from the **Timestamp source** list.

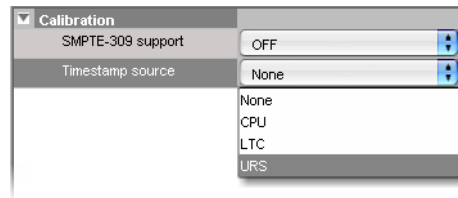

- **None:** No timestamping.
- **CPU:** Timestamping will be based on the Densité CPU-ETH2 controller card's real time clock.
- **LTC:** Timestamping will be based on the LTC signal at GPI input 20 if available. Selecting LTC as the timestamp source renders GPI input 20 unavailable for GPI purposes.
- **URS:** Timestamping will be based on the time information carried in the URS signal internal to the Densité housing frame. The URS is generated by a reference module (REF-1801) which must be installed in the frame for the URS to be available.

 - e If you selected **LTC**, then you may enable SMPTE ST 309 support.



You are now ready to add information from the GPI-1501 to logical sources.

Assigning GPI Status Information to Logical Sources


To configure your logical sources

- 1 In the **Channels/Sources** tab, add the required number of alarm levels for your purposes (see [Creating and Configuring Logical Sources](#) on page 90). For example, you might add one alarm level named *On-air tally*.

New alarm level

Video	Audio	Text	Alarm
video1	audio1	text1	video format
A01	A01 Emb 1	InputA-video1	A01 Video format text
A02	A02 Emb 1	InputA-video2	A02 Video format text
A03	A03 Emb 1	InputA-video3	A03 Video format text
A04	A04 Emb 1	InputA-video4	A04 Video format text

- 2 Click a cell that corresponds to the appropriate alarm level of a logical source you want to configure.
- 3 In the filtered System list, navigate to the GPI element you want to monitor, and drag it onto the selected cell.

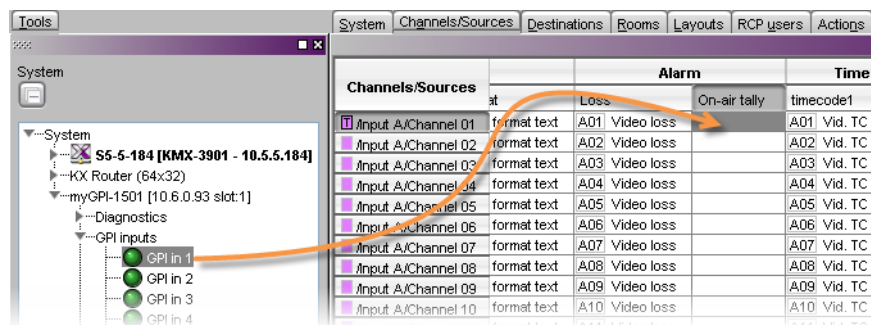

- 4 If your logical sources include more alarm levels to be associated with the GPI-1501, then repeat [step 2](#) and [step 3](#) for the current logical source's remaining alarm levels.
- 5 Make corresponding assignments to other logical sources by incremental copy, if necessary (see [Making Further Assignments by Incremental Copy](#) on page 102).

Alarm level based on status
information from the GPI-1501

System Channels/Sources Destinations Rooms Layouts RCP users Actions												
Channels/Sources	Source info			Video	Audio	Text			Alarm		Time code	
	#	Cat.	Name	video1	audio1	text1	video format	Loss	On-air tally	timecode1	LT	
Input A/Channel 01	1	Input A	Channel 01	A01	A01 Emb 1	InputA-video1	A01 Video format text	A01 Video loss	GPI In 1 [10.6.0.93:1]	A01 Vid. TC	LTG	
Input A/Channel 02	2	Input A	Channel 02	A02	A02 Emb 1	InputA-video2	A02 Video format text	A02 Video loss	GPI In 2 [10.6.0.93:1]	A02 Vid. TC	LTG	
Input A/Channel 03	3	Input A	Channel 03	A03	A03 Emb 1	InputA-video3	A03 Video format text	A03 Video loss	GPI In 3 [10.6.0.93:1]	A03 Vid. TC	LTG	
Input A/Channel 04	4	Input A	Channel 04	A04	A04 Emb 1	InputA-video4	A04 Video format text	A04 Video loss	GPI In 4 [10.6.0.93:1]	A04 Vid. TC	LTG	
Input A/Channel 05	5	Input A	Channel 05	A05	A05 Emb 1	InputA-video5	A05 Video format text	A05 Video loss	GPI In 5 [10.6.0.93:1]	A05 Vid. TC	LTG	


- 6 On the **File** menu, click **Save**.
Changes to the sources table are saved.

Configuring Layout Elements

You can now assign the logical sources you previously configured (see [Assigning GPI Status Information to Logical Sources](#) on page 413) to monitors that can display text or alarms (e.g., UMD, video, text alarm status) in a layout. Depending on your purposes, you will assign the appropriate text or alarm levels to specific components within the monitors. For example, you might select an alarm level as the source for an alarm monitor, and the *GlobalAlarm* level (see [Global Alarms](#) on page 162) as the text label level. The procedure below explains how to configure a UMD to report the On-air tally status.

To configure layout elements for dynamic text and tally reporting

- 1 Click the **Layouts** tab, and then open the layout you want to configure.
- 2 On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning GPI Status Information to Logical Sources](#) on page 413) from the filtered **Channels/Sources** list, and then drag it onto the appropriate monitor.
- 3 Repeat [step 2](#) until you have assigned all the sources you want to monitor to the appropriate monitors in your layout.
- 4 Click a UMD whose tally reporting behavior you want to set, after unlocking the composite monitor that contains it if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 5 In the **Properties** pane, click the **Right tally source level** box, and then select the alarm level you want to monitor (e.g., the *On-air tally* level you previously configured).

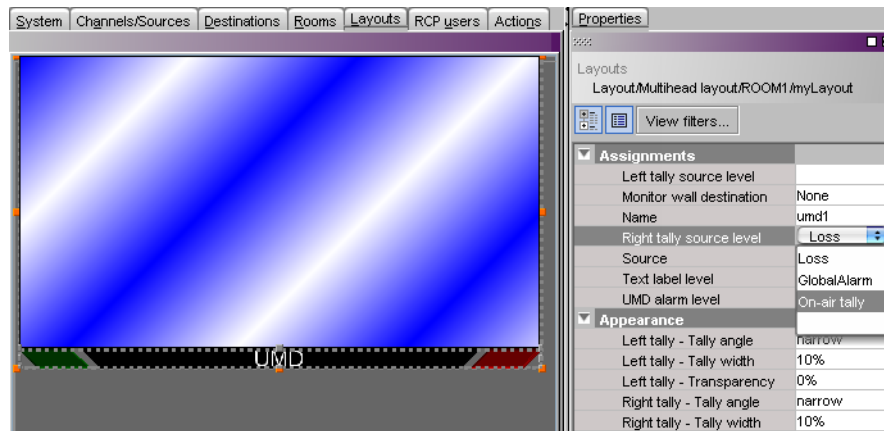

Alarm level selection for the right tally in a UMD

- 6 Click outside the composite to lock it, if applicable.
- 7 Repeat [step 4](#) and [step 5](#) until you have configured all UMDs that are to display tally status when this layout is loaded on the monitor wall.
- 8 On the **File** menu, click **Save**.
- 9 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned tally information provided by the GPI-1501. Tally status from the device (e.g., a switcher) feeding the GPI-1501 module will be visible on the monitor wall. Any changes made by the device's operator will be immediately reflected on the monitor wall.

Configuring Serial Tally Systems

This section covers the configuration of the Kalypso, Andromeda, Encoda, Serial to TCP/IP Dispatcher (see [Serial-to-TCP/IP Dispatcher](#), on page 403), and TSL *serial* devices, which can be added to a multiviewer system to receive and interpret serial tally information from peripheral devices. The illustrations, options or properties shown below may vary, depending on your actual system.

To configure a serial tally system


- 1 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 2 Drag the appropriate peripheral device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click the appropriate peripheral device on the menu.

A window appears, prompting you for a device identifier.




- 3 Type a name for the peripheral device, and then click **OK**.
- 4 Click the **Interconnects** tab.
- 5 Click the multiviewer icon and hold the mouse button, while dragging the pointer towards the peripheral device icon.

A line representing the connection between the multiviewer and the device appears.

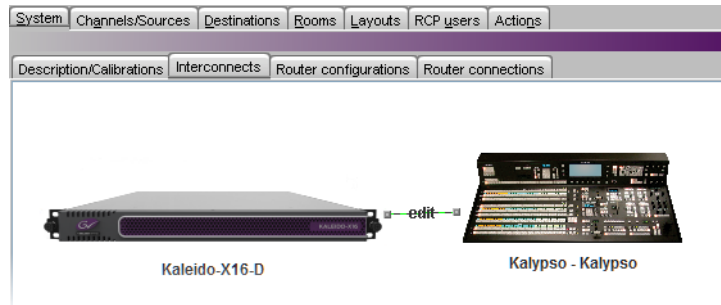

Connection between the multiviewer and the device (example using Kalypso, same for all devices)


- 6 Click the connection line between the multiviewer and the device.
- 7 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

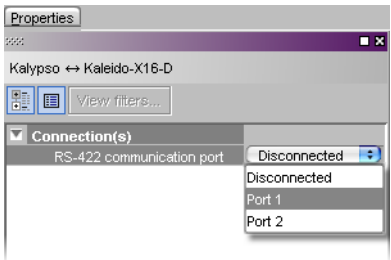


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).


- 8 Click the peripheral device icon in the **Interconnects** tab.
- 9 In the **Properties** pane, set the serial communications properties for the device.
- The set of properties will vary, depending on the device. Refer to the manufacturer's documentation for your specific device as needed.

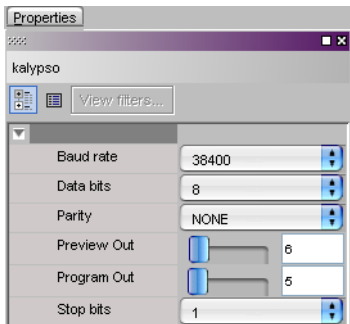

Example showing the default properties for the Kalypso device

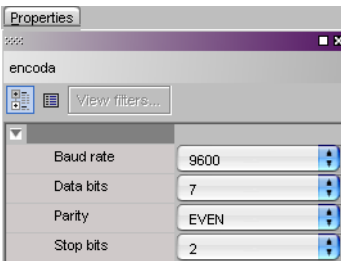

Example showing the properties for an Encoda device, configured to reflect the current settings on an actual A7500 automation system

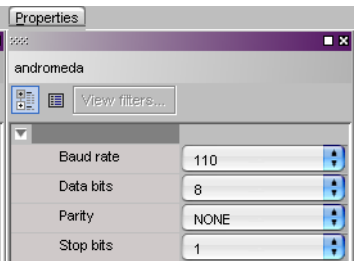

Example showing the default properties for the Andromeda device (the Encoda device has the same default properties)

Serial communications properties examples

- 10 On the **File** menu, click **Save**.

TSL IP UMD Controller

The TSL IP Tally system can be added to a multiviewer system to receive and interpret UMD information from peripheral devices.

TSL IP Limitation: only one screen index can be received per unicast port.

Workaround: configure multiple unicast ports, each associated to a different screen index. Then in the multiviewer configure multiple TSL drivers (each configured with a different unicast port number) to receive each separate UMD stream index.

Ross Video Production Switcher

A multiviewer can receive dynamic source names and tally information from a Ross Video production switcher (Synergy 2, 3, 4 SD/MD and Vision models). The procedures below describe how to set up the multiviewer to interface with a Ross Video switcher.

To set up the Ross Video production switcher

- 1 Enable the contribution serial tally interface on one of the switcher's ports, by using the switcher's installation menu: from the HOME menu, press **More > Setup > Installation > Comm Setup**, and then configure the serial tally device as follows:

Menu	Field	Value	Sub-value
Type	Com Port	[any REMOTE or PERIPH port (depending on device), or the EDITOR port (on a Synergy 100 panel)]	
	Device	Serial Tally	
SelectDevice	Device	Contrib	
Comm Setting	Baud	38 400-115 200	
	Parity	NONE	
Comm Type	Type	RS-422	
Extra Option	Option	Rate	26
	Option	Data Txfr	Complete
	Option	Start	None
	Option	At Black	All Off

Note: For more information on installing port devices, refer to your Ross switcher documentation. The communication parameters listed above are recommended values. Other values may also work, but remember that both the switcher and the multiviewer must be configured with the same values.

- 2 Physically connect one end of an RJ-45 straight-through cable to the multiviewer's RS-422 port.
- 3 Using the *straight* DE-9S-to-RJ45 adapter (part no. 1737-3000-102), connect the other end of the cable to the enabled serial tally port on the switcher.

Since the protocol is unidirectional, only the transmit pins are required from the switcher's remote port. Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

Required pins	Signal
7	TX+
2	TX-

To set up the multiviewer

- 1 Open XEdit.

- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Kalypso** device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Kalypso** on the menu.


Note: On the multiviewer, Kalypso is the module that receives and interprets serial tally information from Ross Video production switchers.

A window appears, prompting you for a device identifier.




- 4 Type a name for the Kalypso device, and then click **OK**.
- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the Kalypso device icon.

A line representing the connection between the multiviewer and the device appears.

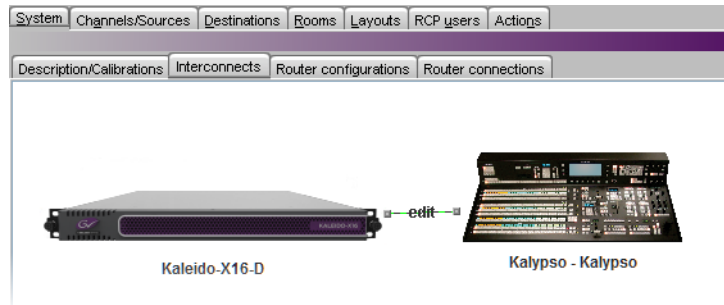

Connection between the multiviewer and the device


- 7 Click the connection line between the multiviewer and the device.
- 8 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

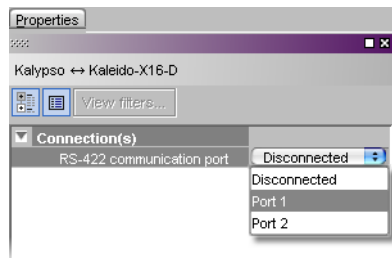


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

- 9 In the **Interconnects** tab, click the Kalypso device icon.
- 10 In the **Properties** pane, set the serial communications properties for the remote port on the Ross Video switcher as follows:

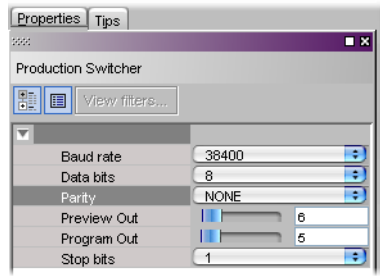Baud rate	38 400-115 200	
Data bits	8	
Parity	NONE	
Stop bits	1	

- 11 In the **Channels/Sources** tab, configure logical sources using text sources and system tallies from the Kalypso serial tally device.

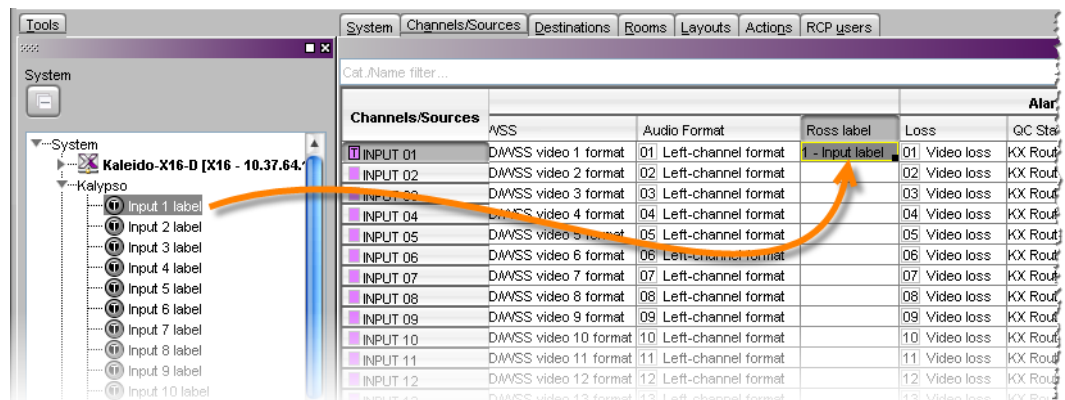

Note: Refer to the table below for a list of valid source IDs and their meaning in the context of the Kalypso serial tally protocol.

Source IDs	Kalypso
1 - 92	Inputs 1 - 92
93	M/E 1 PGM A
94	M/E 1 PGM B
95	M/E 1 PGM C
96	M/E 1 PGM D
97	M/E 1 PVW A
98	M/E 1 PVW 2
99*	M/E 2 PGM A
100*	M/E 2 PGM B
101*	M/E 2 PGM C
102*	M/E 2 PGM D
103*	M/E 2 PVW A
104*	M/E 2 PVW 2
105*	M/E 3 PGM A
106*	M/E 3 PGM B
107*	M/E 3 PGM C
108*	M/E 3 PGM D
109*	M/E 3 PVW A
110*	M/E 3 PVW 2
111	Pgm-Pst PGM A
112	Pgm-Pst PGM B
113	Pgm-Pst PGM C
114	Pgm-Pst PGM D
115	Pgm-Pst PVW A
116	Pgm-Pst PVW 2
117	Test Signal
118	Black
119	Background 1
120	Background 2
121	Still Store 1
122	Still Store 2
123	Still Store 3

Source IDs	Kalypso
124	Still Store 4
125	Still Store 5
126	Still Store 6
127	Still Store 7
128	Still Store 8

* 2-M/E systems do not have these sources.

- 12 In the **Layouts** tab, create layouts and assign logical sources created in [step 11](#) to monitors that can display text (e.g., UMD) and alarms (e.g., UMD, video, text alarm).
- 13 On the **File** menu, click **Save**.
- 14 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).
- 15 On the multiviewer, load the layout containing the monitors assigned to dynamic text and tallies coming from the Ross Video switcher.
You should see source names and tallies from the Ross Video switcher on the monitor wall.

Sony Production Switcher

A multiviewer can receive dynamic source names and tally information from a Sony switcher. The procedure below describes how to set up a multiviewer to interface with a Sony production switcher (DVS-9000 series, MVS-8000 series or MFS-2000 series).

Setting Up a Sony Switcher

To set up a Sony switcher

- 1 Enable *serial tally* on one of the switcher's ports (refer to your Sony Production Switcher System User's Guide for details).

Note: There are no serial tally connections on the Sony switcher model DVS-9000. See [DVS-9000 switchers](#) on page 424 for details.


- 2 Physically connect one end of an RJ-45 straight cable to the multiviewer's RS-422 port.
- 3 Using a DE-9S-to-RJ45 crossover adapter (Grass Valley part no. 1792-3700-100), connect the other end of the cable to the enabled serial tally port on the Sony switcher. Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

DVS-9000 switchers

Since there are no serial tally connections on the DVS-9000 switcher, you will need an additional device—either a Device Control Unit (DCU) or a System Control Unit (SCU)—between this switcher model and the multiviewer. Use a DCU model MKS-8700 or DCU-8000, or an SCU model MKS-8010A or MKS-8010B.


Note: **MKS-2700:** The 1 RU DCU model MKS-2700 does not have a serial tally connection, so serial tally must come from a MKS-8010A or MKS-8010B SCU.

- On a DCU (MKS-8700 or DCU-8000), use the connectors labeled *Serial Tally 1* and *Serial Tally 2*.

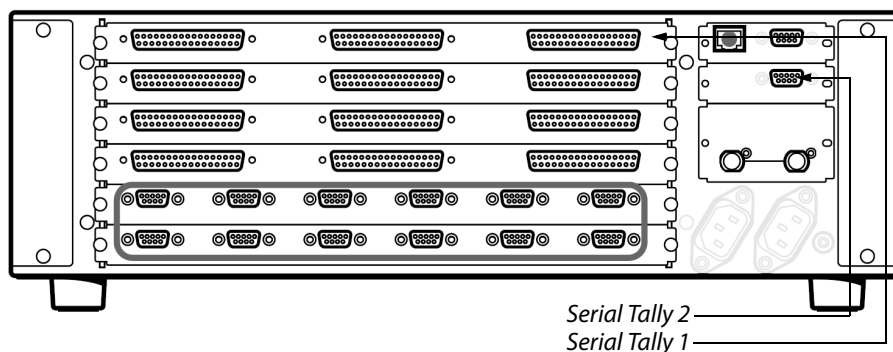


Sony Device Control Unit Pack (DCU-8000)

- On an SCU (MKS-8010A or MKS-8010B), use the 15-pin connector labeled *EDITOR PANEL*, with an adapter.

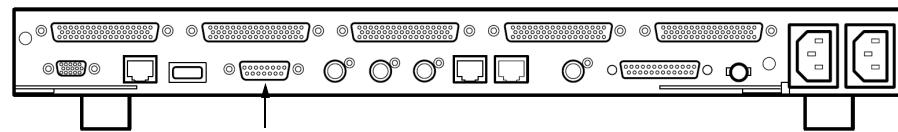

Sony System Control Unit (MKS-8010A)

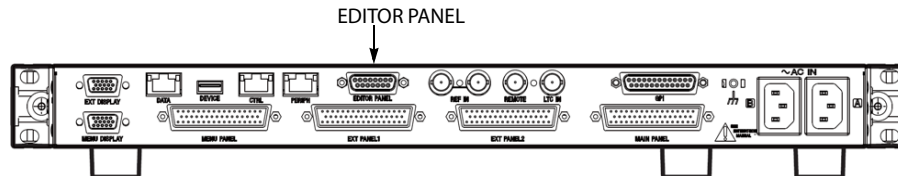

Sony System Control Unit (MKS-8010B)

To use a serial tally from an SCU model MKS-8010A or MKS-8010B, a 15-pin-to-9-pin adapter is required, with pinouts as follows:

MKS-8010A or MKS-8010B (15-pin)	SCU (Signal)	Serial tally device (9-pin)
2	RX-	2
3	TX+	3
10	RX+	7
11	TX-	8
4	GND	4

No adapter is required for SCU model MKS-8010, which has a DE-9 connector with the following pinout:

MKS-8010 (9-pin)	SCU (Signal)
2	RX-
3	TX+
7	RX+
8	TX-
4	GND

In addition, on Sony menu page 7367, you must enable R and G serial tallies on the SCU port.

Note: Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

Setting Up a Multiviewer to Interface with a Sony Production Switcher

To set up the multiviewer to interface with the Sony production switcher

- 1 Open XEdit.


- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Sony** production switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Sony serial tally** on the menu.

A window appears, prompting you for a device identifier.




- 4 Type the name of the Sony production switcher, and then click **OK**.
- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the Sony production switcher icon.

A line representing the connection between the multiviewer and the device appears.

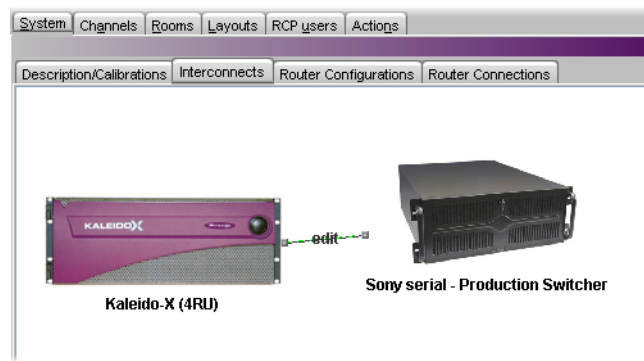

Connection between the multiviewer and the device

- 7 Click the connection line between the multiviewer and the device.
- 8 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

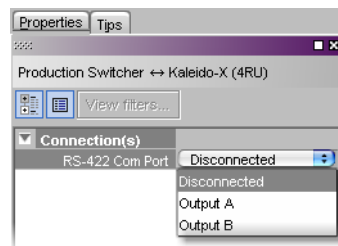

Depending on the multiviewer model, the available RS-422 ports are designated as follows:


KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C

Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).


9 In the **Interconnects** tab, click the **Sony** production switcher icon.

10 In the **Properties** pane, set the serial communications properties for the Sony device as follows:

Baud Rate	38 400
Data Bits	8
Parity	ODD
Stop bits	1

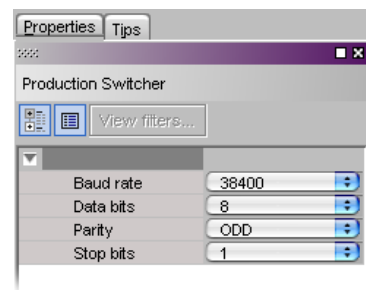

11 In the **Channels/Sources** tab, create logical sources using text and alarms levels coming from the Sony serial tally device.

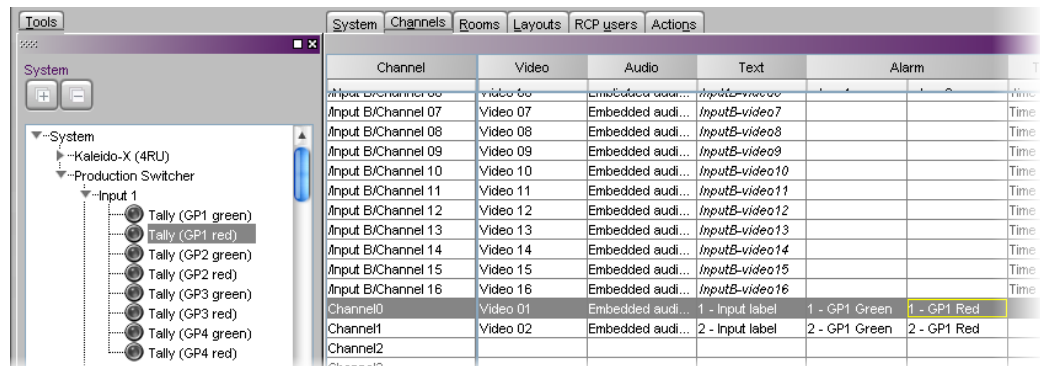

12 In the **Layouts** tab, create layouts and assign logical sources created in [step 11](#) to monitors that can display text (e.g., UMD) and alarms (e.g., UMD, video, text alarm).

13 On the **File** menu, click **Save**.

14 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

15 On the multiviewer, load the layout containing the monitors assigned to dynamic text and tallies coming from the Sony switcher.


You should see source names and tallies from the Sony switcher on the monitor wall.

Kahuna Production Switcher

A multiviewer can receive dynamic source names and tally information from a Kahuna production switcher. The procedures below describe how to set up a multiviewer to interface with a Kahuna switcher.

To set up the Kahuna switcher


- 1 Physically connect one end of an RJ-45 straight cable to the multiviewer's RS-422 port.
- 2 Using a DE-9S-to-RJ45 crossover adapter (Grass Valley part no. 1792-3700-100), connect the other end of the cable to the appropriate RS-422 control port on the Kahuna switcher. Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13. The illustration below shows the location of the RS-422 ports on an 11RU Kahuna switcher. The RS-422 ports (highlighted) are numbered 1 – 8, from right to left. Refer to the *Kahuna Install Manual* for more details on the RS-422 control ports.⁴

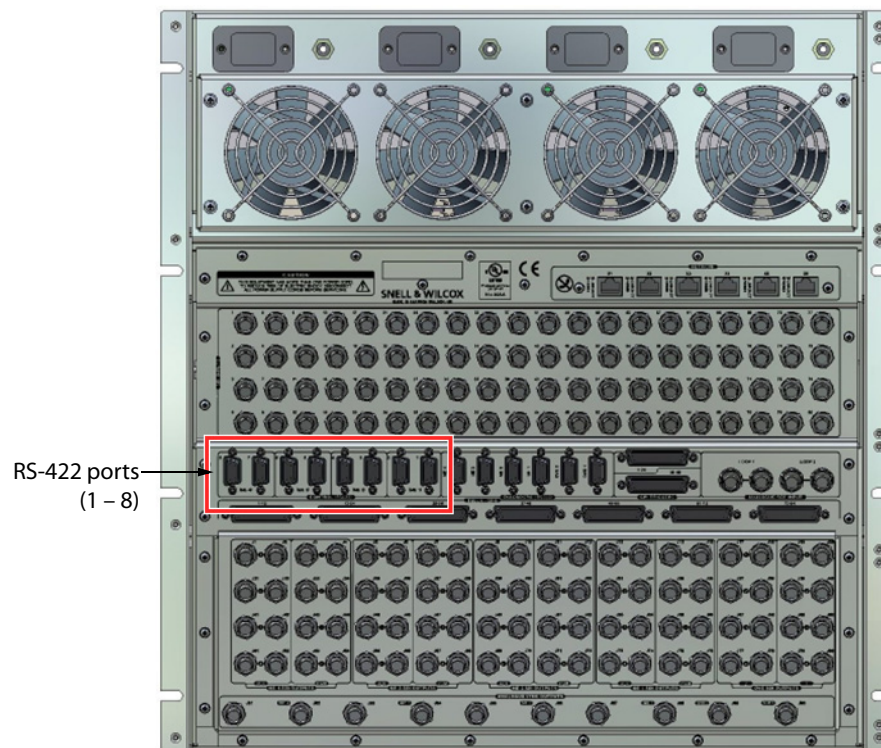

4. The Kahuna Install Manual is available here:
<https://kahuna.snellgroup.com/kahunaclub/kahunacare/documents.php>

The Kahuna has DE-9 connectors with the following pin-out:

9-pin	Signal
2	RX-
3	TX+
7	RX+
8	TX-
4	GND

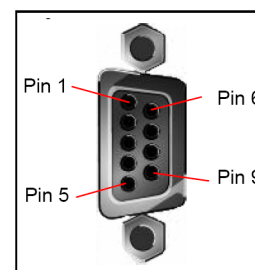

Note: Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

- On the Kahuna switcher's GUI panel, press the **ENG CONFIG** button.
The **Engineering Config** menu appears on the touch screen.
- Touch the **Protocols** button on the screen to bring up the **Engineering Config – Serial Port Protocols** menu.
- In the list of RS-422 ports, select the one to which you connected the crossover cable.
- Set the communications parameters for the selected port as follows, using the rotary controls on the right side of the GUI panel:

Protocol	Serial Tally
Baud Rate	115 200
Parity	NONE
Data Bits	8
Stop bits	1
Port Type	Master

- On the Kahuna switcher's GUI panel, press the **PERIPH** button.
The **Peripherals** menu appears.
- Touch the **Tally Control** button on the screen to bring up the **Peripherals – Tally Protocol** menu.
- Select the RS-422 port that is connected to the multiviewer, and set its serial protocol options as follows:

Extension Enable	On
Full Table Enable	On

Notes

- Refer to the *Kahuna User Instruction Manual* for further details on setting up the port protocols and tally protocol parameters (see <https://kahuna.snellgroup.com/kahunacub/kahunacare/documents.php>).

Notes (continued)

- Although it is possible to define “user configuration” source names on the Kahuna switcher, these are not transmitted over the serial tally interface. The switcher only transmits the “engineering configuration” source names.
-

To set up the multiviewer


- 1 Open XEdit.
- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Kahuna** production switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Kahuna** on the menu.

A window appears, prompting you for a device identifier.




- 4 Type a name for the Kahuna production switcher, and then click **OK**.
- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the Kahuna production switcher icon.

A line representing the connection between the multiviewer and the device appears.

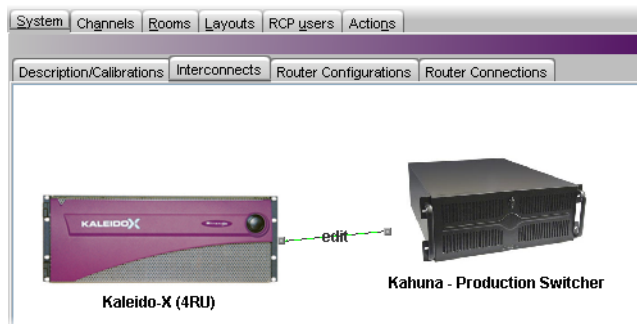

Connection between the multiviewer and the device

- 7 Click the connection line between multiviewer and device.
- 8 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

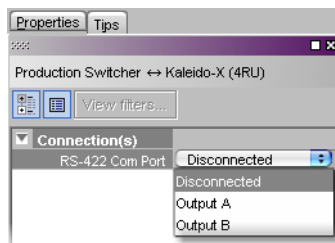


Depending on the multiviewer model, the available RS-422 ports are designated as follows:


KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

- 9 In the **Interconnects** tab, click the **Kahuna** production switcher icon.
- 10 In the **Properties** pane, set the serial communications properties for the Kahuna device as follows:

Baud Rate	115200
Data Bits	8
Parity	NONE
Stop bits	1

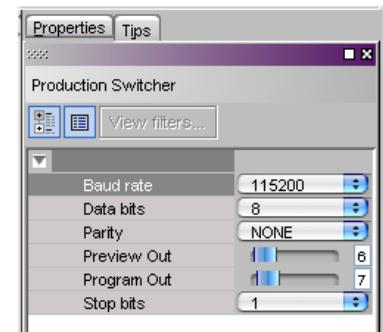

- 11 In the **Channels/Sources** tab, create logical sources using Text and Alarm elements coming from the Kahuna's serial tally information.

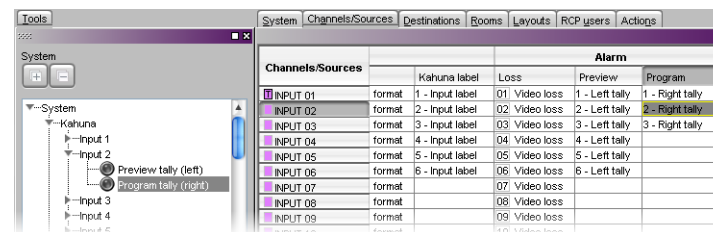

Note: Refer to the table below for a list of valid source IDs and their meaning in the context of the Kahuna serial tally protocol.

Source IDs	Kahuna
1 - 80	Inputs 1 - 80
81	Store 9
82	Store 10
83	Store 11
84	Store 12
85	Store 13
86	Store 14
87	Store 15
88	Store 16
89	DVE 1 Output 1
90	DVE 1 Output 2
91	DVE 1 Output 3
92	DVE 1 Output 4
93	M/E 1 Output 1
94	M/E 1 Output 2
95	M/E 1 Output 3
96	M/E 1 Output 4
97	Unused
98	Unused
99	M/E 2 Output 1
100	M/E 2 Output 2
101	M/E 2 Output 3
102	M/E 2 Output 4
103	Unused
104	Unused
105	M/E 3 Output 1
106	M/E 3 Output 2
107	M/E 3 Output 3
108	M/E 3 Output 4
109	Unused
110	Unused
111	Pgm-Pst Output 1
112	Pgm-Pst Output 2
113	Pgm-Pst Output 3
114	Pgm-Pst Output 4

Source IDs	Kahuna
115	Unused
116	Unused
117	DVE 2 Output 1
118	DVE 2 Output 2
119	DVE 2 Output 3
120	DVE 2 Output 4
121	Store 1
122	Store 2
123	Store 3
124	Store 4
125	Store 5
126	Store 6
127	Store 7
128	Store 8

- 12 In the **Layouts** tab, create layouts and assign logical sources created in [step 11](#) to monitors that can display text (e.g., UMD) and alarms (e.g., UMD, video, text alarm).
- 13 On the **File** menu, click **Save**.
- 14 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).
- 15 On the multiviewer, load the layout containing the monitors assigned to dynamic text and tallies coming from the Kahuna switcher.
You should see source names and tallies from the Kahuna switcher on the monitor wall.

Kayak Production Switcher

A multiviewer can receive dynamic source names and tally information from Thomson Grass Valley production switchers that support the ACOS protocol, including the KayakDD, Kayak HD/SD, DD35, and XtenDD HD/SD series. The procedures below describe how to set up a multiviewer to interface with these Thomson Grass Valley switchers, for which the generic name *Kayak switcher* will be used.


Note: The on-air tally feature was introduced in version 6.9.3 of the ACOS protocol, which is only available with the Kayak series of Grass Valley production switchers. Other features such as retrieving dynamic source or destination names, and changing crosspoints are available on all ACOS-enabled production switchers.

Configuring the Kayak Switcher

Once you have established a serial connection between the switcher and your multiviewer, you will need to enable the ACOS protocol on the switcher's serial port by using the Sidepanel software.⁵

To set up the Kayak switcher


- 1 Physically connect one end of an RJ-45 straight cable to the multiviewer's RS-422 port.
- 2 Using a DE-9S-to-RJ45 crossover adapter (Grass Valley part no. 1792-3700-100), connect the other end of the cable to one of the RS-422 control ports on the Kayak switcher. The illustration below shows the location of the RS-422 ports on a 4RU Kayak HD switcher. The RS-422 ports (highlighted) are numbered 1 – 8, in reading order. Refer to your switcher's *Installation & Service Manual* for more details.⁵ See [Related Documentation](#), on page 13.

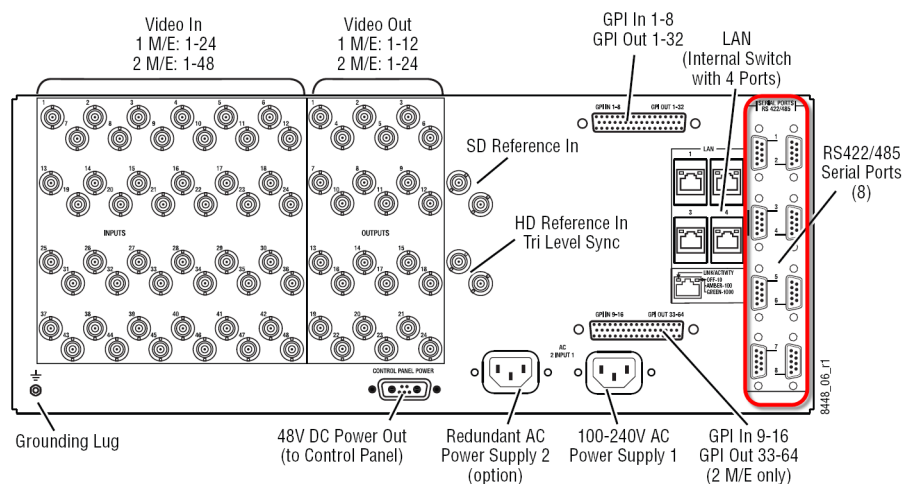

5. Manuals and Release Notes for all Grass Valley production switchers are available here: http://www.grassvalley.com/docs/all_switchers.html#manuals

The Kayak switcher's 8 control ports have DE-9 female connectors with the following pinout:

Pin	Signal
1 and 9	Chassis Ground
2	RX-
3	TX+
7	RX+
8	TX-
4 and 6	Signal Ground

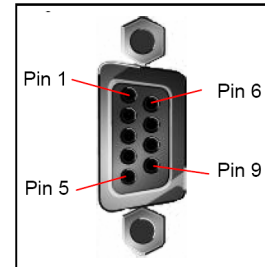

Note: Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

- 3 Install the Sidepanel software (available on the Kayak Software CD) on a PC, if you have not already done so. Refer to your switcher's Release Notes for installation instructions.
- 4 Launch the Sidepanel software, and navigate to the **Install > E-Box** menu.
- 5 Click the **Router** tab.
- 6 Under **Automation Control 1**, select the appropriate serial port (i.e., the one to which the multiviewer is connected) and the protocol type (only "acos_vxxx" should be available).

This completes the configuration required on the switcher. The ACOS protocol is now enabled on the serial port used for the connection between the switcher and the multiviewer. The multiviewer system will be able to send commands to the switcher, and the switcher will respond accordingly.

Configuring the Multiviewer

For your multiviewer to receive tally status, input names and output names from a Kayak switcher, and to display the switcher's contribution on the monitor wall as visual tally and dynamic text information, you need to configure your multiviewer's Kayak serial tally service, by performing the following tasks in XEdit:

- set up the communication parameters for the serial connection;
- configure logical sources by assigning input names, output names, and tally status from the switcher to the logical sources' text or alarm levels;
- assign alarm and text levels from logical sources to layout elements such as UMDs or alarm monitors.

Establishing serial communication between the Kayak switcher and the multiviewer

To set up the multiviewer's communication parameters

- 1 Open XEdit.


- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Kayak** production switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Kayak** on the menu.

A window appears, prompting you for a device identifier.




- 4 Type a name for the Kayak production switcher, and then click **OK**.
- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the Kayak production switcher icon.

A line representing the connection between the multiviewer and the device appears.

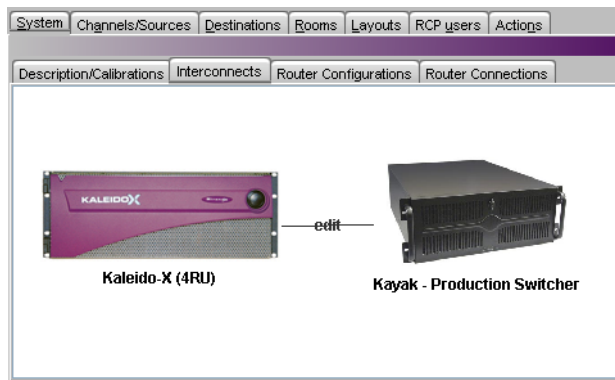

Connection between the multiviewer and the device

- 7 Click the connection line between multiviewer and device.
- 8 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

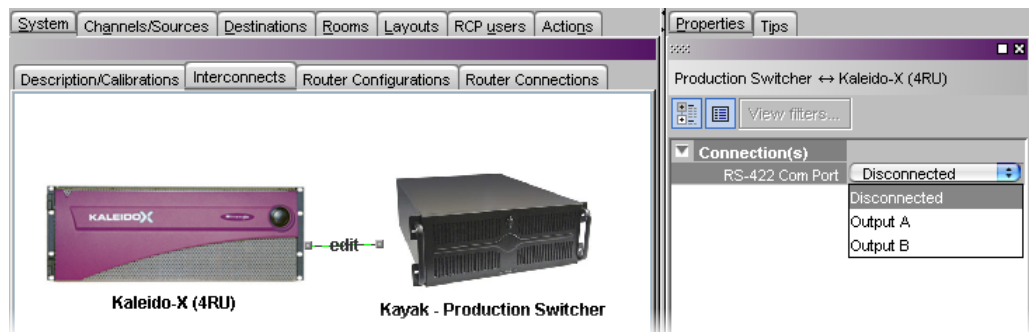


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

9 In the **Interconnects** tab, click the **Kayak** production switcher icon.

10 In the **Properties** pane, set the serial communications properties for the Kayak device as follows:


Baud Rate	38400
Data Bits	8
Parity	NONE
Stop bits	1

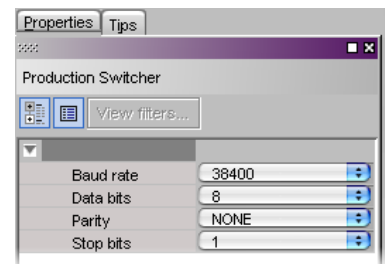

Assigning Kayak tallies, input names, and output names to logical sources

To configure your logical sources

- In the **Channels/Sources** tab, configure logical sources using text sources and system tallies from the Kayak's serial interface.

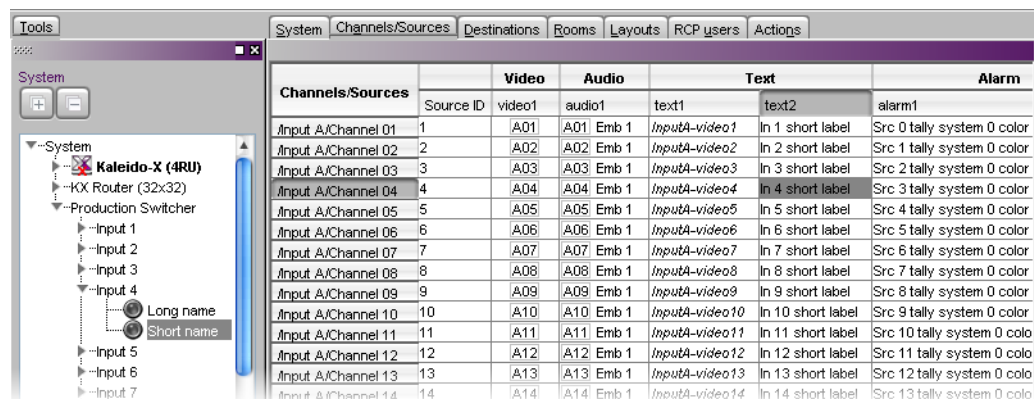

Notes

- Kayak devices provide up to 512 text sources, and up to 256×5 system tally sources.
- The current version of the XtenDD HD/SD switchers software does not provide tally sources.
- DD35 and the Kayak series switchers only provide RED (On Air) tally sources. This is a limitation in the current version (6.9.3) of the ACOS protocol.
- Refer to the table below for a list of valid sources, depending on your switcher model, and their meaning in the context of the ACOS protocol.

Input Number	DD35	XtenDD HD	XtenDD SD	KayakDD	Kayak SD/HD
0x00	BLACK	BLACK	BLACK	BLACK	BLACK
0x01..0x60	Input1...62 (0x01..0x3E)	Input 1..90 (0x01..0x5A)	Input 1..90 (0x01..0x5A)	Input 1..32 (0x01..0x20)	Input 1..96 (0x01..0x60)
0x80	VideoStore				
0x81	Montage processor 1				
0x82	Montage processor 2				
0x85	DVX1	DVX1	DVX1		
0x86	DVX2	DVX2	DVX2		
0x87	DVX3	DVX3	DVX3		
0x88	DVX4	DVX4	DVX4		
0x89		RamRec1	RamRec1	RamRec1	RamRec1
0x8A		RamRec2	RamRec2	RamRec2	RamRec2
0x8B		RamRec3	RamRec3	RamRec3	RamRec3
0x8C		RamRec4	RamRec4	RamRec4	RamRec4
0x8D					RamRec5
0x8E					RamRec6
0x90	ColorBGD1	ColorBGD1	ColorBGD1	ColorBGD1	ColorBGD1
0x91	ColorBGD2	ColorBGD2		ColorBGD2	ColorBGD2
0x92	ColorBGD3			ColorBGD3	ColorBGD3
0x98			ColorBGD ME		
0x99					ColorBGDTest
0xA0	PP-Main	PP-Main	PP-Main	PP A	PP A
0xA1	ME1-Main	ME1-Main	ME1-Main	M1 A	M1 A


Input Number	DD35	XtenDD HD	XtenDD SD	KayakDD	Kayak SD/HD
0xA2	ME2-Main	ME2-Main	ME2-Main		M2 A
0xA3	ME3-Main	ME3-Main	ME3-Main		M3 A
0xA4					MEhA
0xA8			PP_UTIL_D		
0xA9			PP_UTIL_E		
0xAA			ME1_UTIL_D		
0xAB			ME1_UTIL_E		
0xAC			ME2_UTIL_D		
0xAD			ME2_UTIL_E		
0xAE			ME3_UTIL_D		
0xAF			ME3_UTIL_E		
0xB0	PP-PVW	PP-PVW	PP-PVW	PPp1	PPp1
0xB1	ME1-PVW	ME1-PVW	ME1-PVW	M1p1	M1p1
0xB2	ME2-PVW	ME2-PVW	ME2-PVW	M2p1	M2p1
0xB3	ME3-PVW	ME3-PVW	ME3-PVW	M3p1	M3p1
0xB4					Mhp1
0xB8		VideoStore1	VideoStore1		
0xB9		VideoStore2	VideoStore2		
0xBA		VideoStore3	VideoStore3		
0xBB		VideoStore4	VideoStore4		
0xBC		VideoStore5	VideoStore5		
0xBD		VideoStore6	VideoStore6		
0xC0					PP C
0xC1	Layer ME1				PP D
0xC2	Layer ME2				M1 C
0xC3	Layer ME3				M1 D
0xC4					M2 C
0xC5					M2 D
0xC6					M3 C
0xC7					M3 D
0xC8		PPKey	PPKey		
0xC9		ME1Key	ME1Key		
0xCA		ME2Key	ME2Key		
0xCB		ME3Key	ME3Key		

Input Number	DD35	XtenDD HD	XtenDD SD	KayakDD	Kayak SD/HD
0xD0	PP Clean	PP Clean	PP Clean	PP B (PP Clean)	PP B
0xD1	ME1 Clean	ME1 Clean	ME1 Clean	M1 B (ME1 Clean)	M1 B
0xD2	ME2 Clean	ME2 Clean	ME2 Clean		M2 B
0xD3	ME3 Clean	ME3 Clean	ME3 Clean		M3 B
0xD4		PP UtilA	PP UtilA	PPp2 (PP Clean Preview)	MEh B
0xD5		PP UtilB	PP UtilB		
0xD6		PP UtilC	PP UtilC		
0xD7		ME1 UtilA	ME2 UtilA	M1p2 (ME1 Clean Preview)	
0xD8		ME1 UtilB	ME1 UtilB		PPp2
0xD9		ME1 UtilC	ME1 UtilC		M1p2
0xDA		ME2 UtilA	ME2 UtilA		M2p2
0xDB		ME2 UtilB	ME2 UtilB		M3p2
0xDC		ME2 UtilC	ME2 UtilC		Mhp2
0xDD		ME3 UtilA	ME3 UtilA		
0xDE		ME3 UtilB	ME3 UtilB		
0xDF		ME3 UtilC	ME3 UtilC		
0xE0..0xEF	Virtual Input 00...15	Virtual Input 00...15	Virtual Input 00...15	Virtual Input 00...15	Virtual Input 00...15
0xF0	WHITE	WHITE	WHITE	WHITE	WHITE

Configuring layout elements

To configure layout elements

- 1 In the **Layouts** tab, create layouts and assign the logical sources you configured (see [Assigning Kayak tallies, input names, and output names to logical sources](#) on page 437) to monitors that can display text (e.g., UMD) or alarms (e.g., UMD, video, text alarm status).
- 2 Depending on your purposes, assign the appropriate text or alarm levels to specific components within the monitors (e.g., assign an alarm level to a tally component in a UMD, or a text level to the UMD text component).

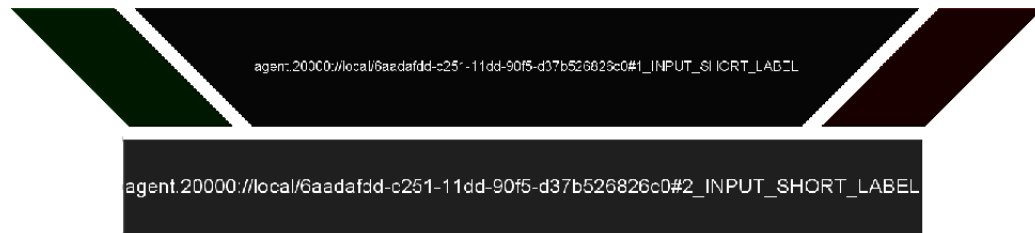

- 3 On the **File** menu, click **Save**.
- 4 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned dynamic text and tallies provided by the Kayak switcher. Input and output names, as well as tally status from the Kayak switcher will be visible on the wall. Any changes made by the switcher's operator will be immediately reflected.

Kayenne Production Switcher


A multiviewer can receive dynamic source names and tally information from a Grass Valley Kayenne Video Production Center. The procedures below describe how to set up a multiviewer to interface with this family of production switchers.

Configuring the Kayenne Switcher

To establish a serial connection between the switcher and your multiviewer, you need to identify the serial port you want to use for tally contribution in the switcher's *Engineering Setups*, by using the Kayenne touch screen menu panel or the Kayenne Menu application.


To set up the Kayenne switcher

- 1 Physically connect one end of an RJ-45 straight cable to the multiviewer's RS-422 port.
- 2 Using a DE-9S-to-RJ45 crossover adapter (Grass Valley part no. 1792-3700-100), connect the other end of the cable to one of the 8 RS-422 control ports on the Kayenne Video Processor Frame. The illustration below shows the location of the RS-422 ports on a 4RU Kayenne frame. The RS-422 ports (highlighted) are numbered 1 – 8, from top to bottom.

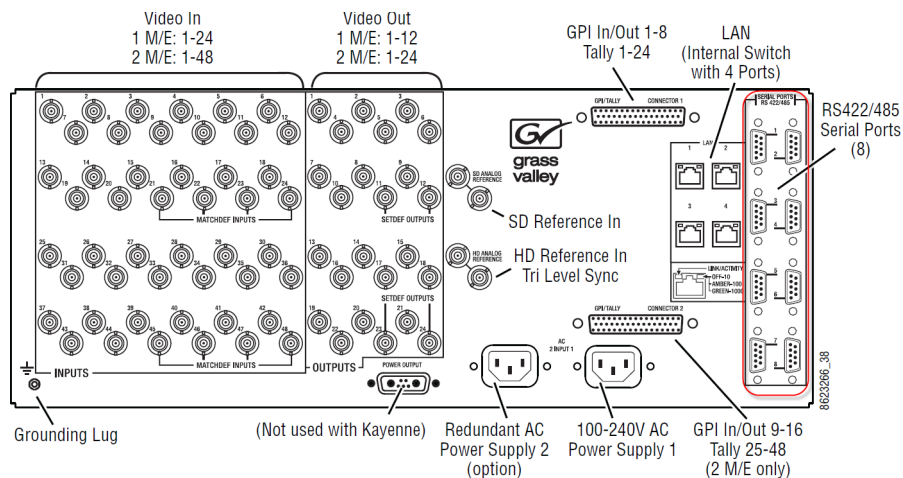

The 8 RS-422 control ports at the back of a Kayenne Video Processor frame have DE-9 female connectors. When any of them is designated as the tally contribution port, it is automatically configured with the following pinout:

Pin	Signal
1 and 9	Chassis Ground
2	RX-
3	TX+
7	RX+
8	TX-
4 and 6	Signal Ground

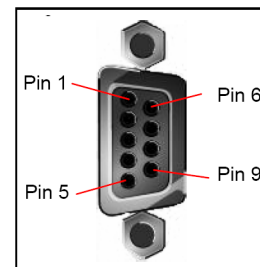

Note: Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

- 3 On the Kayenne touch screen menu panel, touch the **Eng Setup** menu button, the **Ports & Devices** category button, and then the **Serial Tally Ports** tab.

The **Serial Tally Ports** menu appears.

- 4 In the port selection area, touch the port you want to use as the tally contribution port.
- 5 In the **Baud Rate / Parity** area, touch **115.2k**, and **None**.

This sets the baud rate to 115,200 and the parity to None.

Assuming the required sources and outputs have been defined, this completes the configuration required on the switcher. The multiviewer system will be able to send commands to the switcher, and the switcher will respond accordingly. Refer to the *Kayenne Installation & Service Manual* for more details.⁶

Configuring the Multiviewer

For your multiviewer to receive tally status, source names and output names from a Kayenne switcher, and to display the switcher's contribution on the monitor wall as visual tally and dynamic text information, you need to configure your multiviewer's Kayenne serial tally service, by performing the following tasks in XEdit:

- set up the communication parameters for the serial connection;
- configure logical sources by assigning input names, output names, and tally status from the switcher to the logical sources' text or alarm levels;
- assign alarm and text levels from logical sources to layout elements such as UMDs or alarm monitors.

Establishing serial communication between the switcher and the multiviewer

To set up the multiviewer's communication parameters


- 1 Open XEdit.
- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Kayenne** production switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Kayenne** on the menu.

A window appears, prompting you for a device identifier.


⁶ Manuals and Release Notes for all Grass Valley production switchers are available here:
http://www.grassvalley.com/apps/doc_prodlist?super=broadcast&set=switchers



- 4 Type a name for the Kayenne production switcher, and then click **OK**.
 - 5 Click the **Interconnects** tab.
 - 6 Position the pointer over the multiviewer icon, then click and drag towards the Kayenne production switcher icon.
- A line representing the connection between the multiviewer and the device appears.

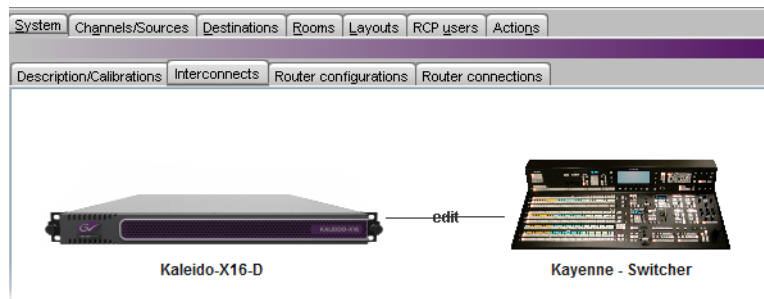

- 7 Click the connection line between multiviewer and device.
- 8 In the **Properties** pane, select the appropriate serial port from the **RS-422 communication port list**.

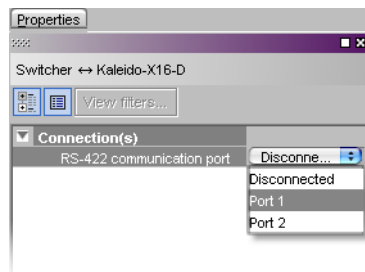


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B

Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

- 9 In the **Interconnects** tab, click the **Kayenne** production switcher icon.
- 10 In the **Properties** pane, set the serial communications properties for the Kayenne device as follows:

Baud Rate	115200
Data Bits	8
Parity	NONE
Stop bits	1

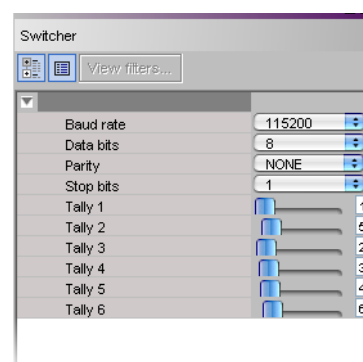

- 11 Set the appropriate output numbers to use for tally calculation, based on your switcher's configuration.

The current version of the Kaleido Software supports monitoring of up to 6 tallies from a Kayenne Video Processor Frame. By default, in XEdit, **Tally 1** corresponds to the Kayenne's output 1 (which typically carries the *Program* signal), and **Tally 2** corresponds to the Kayenne's output 5 (typically the *Preview* signal). The following table lists the default output assignments on a Kayenne Video Processor Frame. Refer to the *Kayenne Installation & Service Manual* for more details.⁷

ME A		ME B		ME C		ME D	
Output #	Signal	Output #	Signal	Output #	Signal	Output #	Signal
1	Pgm A	13	ME1 A	25	ME2 A	37	ME3 A
2	Pgm B	14	ME1 B	26	ME2 B	38	ME3 B
3	Pgm C	15	ME1 C	27	ME2 C	39	ME3 C
4	Pgm D	16	ME1 D	28	ME2 D	40	ME3 D
5	Pgm pA	17	ME1 pA	29	ME2 pA	41	ME3 pA
6	Pgm p2	18	ME1 p2	30	ME2 p2	42	ME3 p2
7	Aux 1	19	Aux 4	31	Aux 8	43	Aux 14
8	Aux 1	20	Aux 4	32	Aux 9	44	Aux 15
9	Aux 2	21	Aux 5	33	Aux 10	45	Aux 16

7.Manuals and Release Notes for all Grass Valley production switchers are available here:
http://www.grassvalley.com/docs/all_switchers.html#manuals

ME A		ME B		ME C		ME D	
Output #	Signal	Output #	Signal	Output #	Signal	Output #	Signal
10	Aux 2	22	Aux 6	34	Aux 11	46	Aux 17
11	Aux 3	23	Aux 7	35	Aux 12	47	Aux 18
12	Aux 3	24	Sw Pvw	36	Aux 13	48	Aux 19

Assigning Kayenne tallies, input names, and output names to logical sources

The Kayenne contribution tally protocol provides information on up to 96 external sources, up to 4 eDPM video/key pairs, up to 6 image store outputs, up to 48 programmable switcher outputs, up to 2 complete operator suites with the associated alternative source names, and a few more signals from the Kayenne Video Processor Frame. In XEdit's **Channels/Sources** tab, configure logical sources using text sources and system tallies from the Kayenne's serial interface. You will find these elements by expanding the filtered system list that appears on the **Tools** pane.

To configure your logical sources

- 1 In the **Channels/Sources** tab, add the required number of text and alarm levels for your purposes (see [Creating and Configuring Logical Sources](#) on page 90).
You may, for example, add one text level to monitor source labels from the Kayenne switcher, and two alarm levels to monitor Program and Preview tallies.
- 2 Click a cell that corresponds to the appropriate *text* level of a logical source.
- 3 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.




Kayenne elements available from the filtered System list, for assignment to text levels in the sources table

In the case of the Kayenne Output 1 to Output 48, from which elements can be assigned to text levels in your multiviewer's logical sources, the Kaleido Software supports 4 display modes for the labels:

Level 1	The label represents the initial background feed.
Level 2	The label represents the initial and the previous background feed
Level 3	The label represents the previous background feed
Level 4	The label represents the current background feed (not supported)

All other Kayenne signals represented in the filtered System list, are associated with a single Input label.

- If your logical sources include more text levels to be associated with the Kayenne switcher, then repeat [step 2](#) – [step 3](#) for the current logical source's remaining text levels.
- Click a cell that corresponds to the appropriate *alarm* level of the current logical source.
- In the filtered System list, navigate to the tally element you want to monitor, and drag it onto the selected cell.

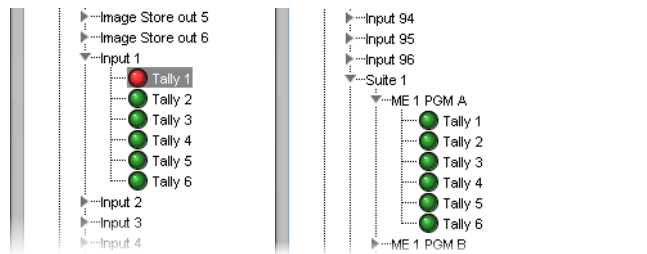

Kayenne elements available from the filtered System list, for assignment to alarm levels in the sources table

Note: In the case of a Kayenne system involving ISO recorders controlled through GPI, when a GPI command is used to take a recorder off air, related tallies may not be updated on the multiviewer side. In addition, the following Kayenne features are not supported:

- Pgm-Pst Look Ahead Preview (LAP) tallies (“Next On Air”)
- Bus tallies
- Tracing of upstream tally tributaries

- If your logical sources include more alarm levels to be associated with the Kayenne switcher, then repeat [step 5](#) – [step 6](#) for the current logical source’s remaining alarm levels.
- Make corresponding assignments to other logical sources by incremental copy, if necessary (see [Making Further Assignments by Incremental Copy](#) on page 102).

Text level based on dynamic labels from Kayenne sources

Alarm levels based on tallies from the Kayenne device

System Channels/Sources Destinations Rooms Layouts RCP users Actions													
Channels/Sources	Source info			Video		Audio		Text		Alarm			Time code
	#	Cat.	Name	video1	audio1	Video Format	Src Name	Loss	PGM	PWW	timecode1		
INPUT 01	1		INPUT 01	01	01 Emb 1	01 Video format 1 - Input label	01 - Input label	01 Video loss	Port 1 - tally 1	Port 1 - tally 2	01 Vid. TC		
INPUT 02	2		INPUT 02	02	02 Emb 1	02 Video format 2 - Input label	02 - Input label	02 Video loss	Port 2 - tally 1	Port 2 - tally 2	02 Vid. TC		
INPUT 03	3		INPUT 03	03	03 Emb 1	03 Video format 3 - Input label	03 - Input label	03 Video loss	Port 3 - tally 1	Port 3 - tally 2	03 Vid. TC		
INPUT 04	4		INPUT 04	04	04 Emb 1	04 Video format 4 - Input label	04 - Input label	04 Video loss	Port 4 - tally 1	Port 4 - tally 2	04 Vid. TC		
INPUT 05	5		INPUT 05	05	05 Emb 1	05 Video format 5 - Input label	05 - Input label	05 Video loss	Port 5 - tally 1	Port 5 - tally 2	05 Vid. TC		
INPUT 06	6		INPUT 06	06	06 Emb 1	06 Video format 6 - Input label	06 - Input label	06 Video loss	Port 6 - tally 1	Port 6 - tally 2	06 Vid. TC		
INPUT 07	7		INPUT 07	07	07 Emb 1	07 Video format		07 Video loss			07 Vid. TC		
INPUT 08	8		INPUT 08	08	08 Emb 1	08 Video format		08 Video loss			08 Vid. TC		
INPUT 09	9		INPUT 09	09	09 Emb 1	09 Video format		09 Video loss			09 Vid. TC		

- On the **File** menu, click **Save**.


Changes to the sources table are saved.

Configuring layout elements

You can now assign the logical sources you previously configured (see [Assigning Kayenne tallies, input names, and output names to logical sources](#) on page 446) to monitors that can display text (e.g., UMD) or alarms (e.g., UMD, video, text alarm status) in a layout. Depending on your purposes, you will assign the appropriate text or alarm levels to specific components within the monitors (e.g., assign an alarm level to tally components in a UMD, or a text level to the UMD text component).


To configure layout elements for dynamic text and tally reporting

- 1 Click the **Layouts** tab, and then open the layout you want to configure.
- 2 On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning Kayenne tallies, input names, and output names to logical sources](#) on page 446) from the filtered **Channels/Sources** list, and then drag it onto the appropriate monitor.
- 3 Repeat [step 2](#) until you have assigned all the sources you want to monitor to the appropriate monitors in your layout.
- 4 Click the first UMD whose dynamic text and tally reporting behavior you want to set, after unlocking the composite monitor that contains it if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 5 In the **Properties** pane, click the **Left tally source level** box, and then select the alarm level you want to monitor.

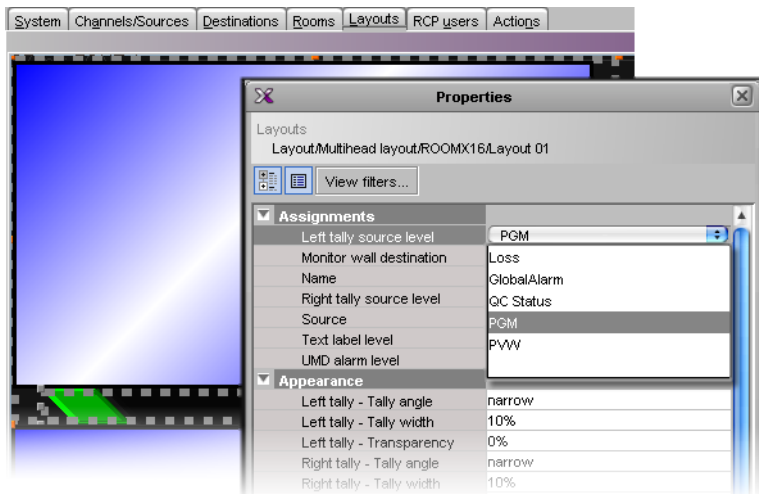

Alarm level selection for the left tally in a UMD

- 6 Click the **Right tally source level** box, and then select the appropriate alarm level, if applicable.
- 7 Click the **Text label level** box, and then select the text level you want to monitor.

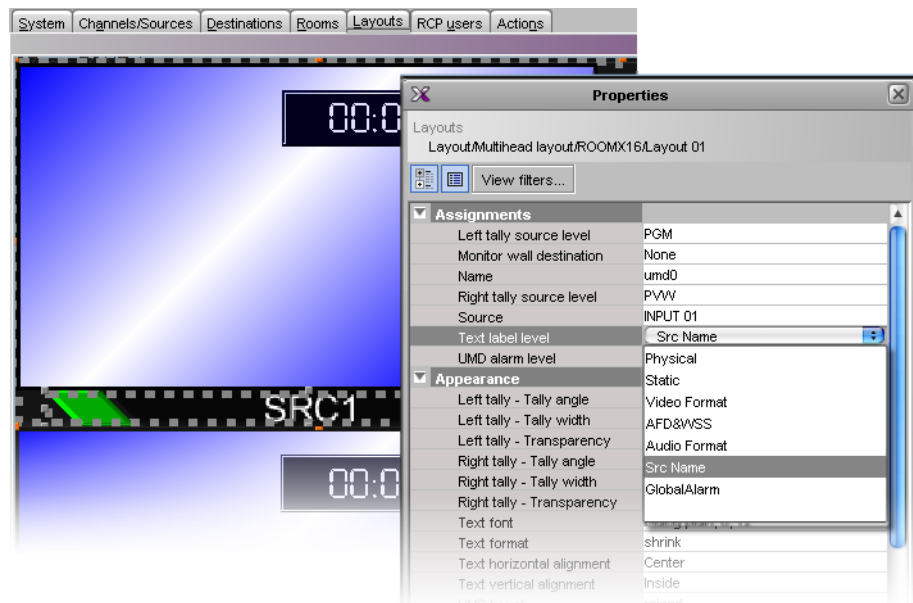

Text level selection for the text label in a UMD

- 8 Click outside the composite to lock it, if applicable.
- 9 Repeat [step 4](#) – [step 8](#) until you have configured all UMDs that are to display dynamic text and tally status when this layout is loaded on the monitor wall.
- 10 On the **File** menu, click **Save**.
- 11 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned dynamic text and tallies provided by the Kayenne switcher. Input or output names, as well as tally status from the Kayenne switcher will be visible on the monitor wall. Any changes made by the switcher's operator will be immediately reflected on the monitor wall.

K-Frame Switchers

A multiviewer can receive dynamic source names and tally information from Grass Valley K-Frame production switchers, such as Kayenne K-Frame or Karrera K-Frame Video Production Center systems. The procedures below describe how to set up a multiviewer to interface with this family of production switchers.

Configuring the K-Frame Switcher

To establish tally contribution from the switcher to your multiviewer, you need to identify the multiviewer as a tally client, by using the switcher's touch screen menu panel or the K-Frame Menu application.


To set up the K-Frame switcher

- 1 On the K-Frame touch screen menu panel, touch the **Eng Setup** menu button, the **Ports & Devices** category button, and then the **Tally Ports** tab.

The Tally Ports menu appears.

- 2 Enter your multiviewer's IP address in one of the two tally ports, and then touch the **Enable** button for the selected port.

The connection status indicator turns red, since the connection has yet to be established on the multiviewer side.

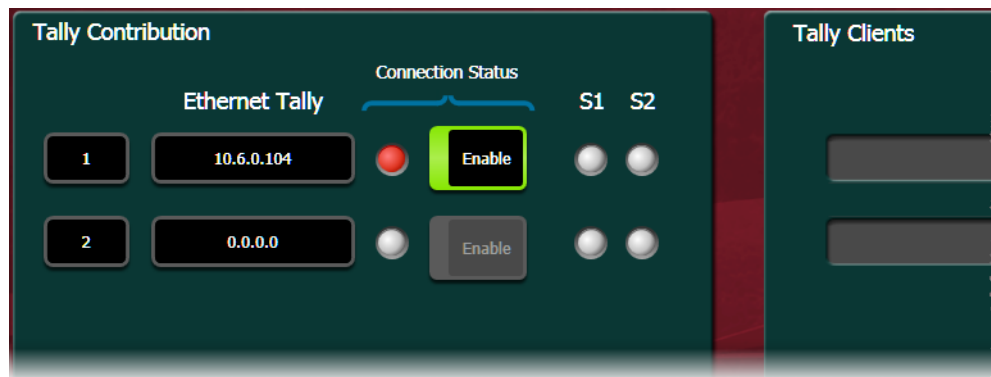

Assuming the required sources and outputs have been defined, this completes the configuration required on the switcher. The multiviewer system will be able to send commands to the switcher, and the switcher will respond accordingly. Refer to your switcher's *Installation & Service Manual* for more information.⁸

Configuring the Multiviewer

For your multiviewer to receive tally status, and source names from a K-Frame switcher, and to display the switcher's contribution on the monitor wall as visual tally and dynamic text information, you need to configure your multiviewer's K-Frame tally service, by performing the following tasks in XEdit:

- set up the communication parameters;

⁸. Manuals and Release Notes for all Grass Valley production switchers are available here:
http://www.grassvalley.com/apps/doc_prodlist?super=broadcast&set=switchers

- configure logical sources by assigning source names and tally status from the switcher, to the logical sources' text or alarm levels;
- assign alarm and text levels from logical sources to layout elements such as UMDs or alarm monitors.

Establishing communication between the K-Frame switcher and the multiviewer

To set up the multiviewer's communication parameters


- 1 Open XEdit.
- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **K-Frame** switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert K-Frame** on the menu.

A window appears, prompting you for a device identifier.




- 4 Type a name for the K-Frame production switcher, and then click **OK**.
The device is added to your system configuration.
- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the K-Frame production switcher icon.


A line representing the connection between the multiviewer and the device appears.

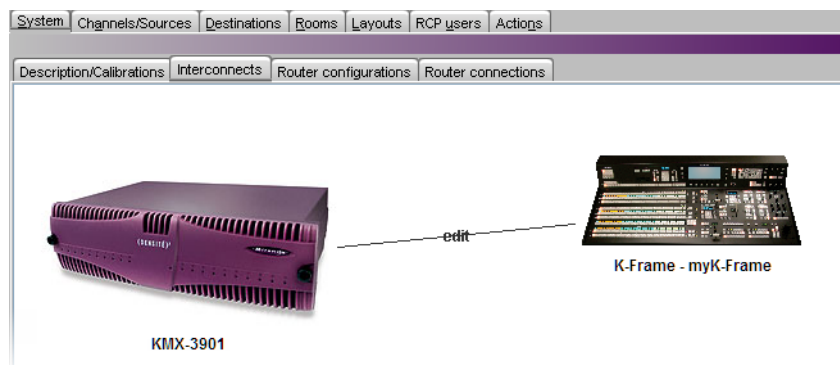

- 7 Click the connection line between multiviewer and device.
- 8 In the **Properties** pane, select **Network (TCP/IP)** from the **Transport type** list.

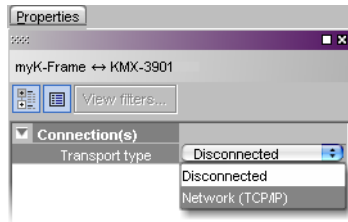

- 9 In the **Interconnects** tab, click the **K-Frame** production switcher icon.
- 10 In the **Properties** pane, enter the K-Frame switcher's IP address, and set the appropriate output numbers to use for tally calculation, based on your switcher's configuration.

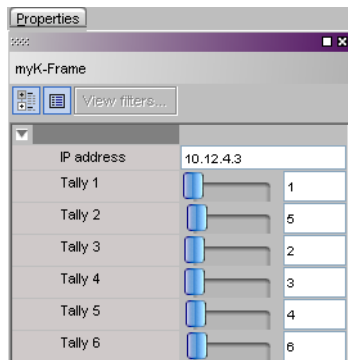

By default, in XEdit, **Tally 1** corresponds to the K-Frame switcher's output 1 (which typically carries the *Program* signal), and **Tally 2** corresponds to the K-Frame switcher's output 5 (typically the *Preview* signal).

- 11 On the **File** menu, click **Save**.


This establishes communication between the multiviewer and the switcher. On the touch screen menu panel (or in K-Frame Menu) you may notice that the status indicators turned green in the Tally Ports menu, and your multiviewer is now listed in the **Tally Clients** list.




Assigning K-Frame tallies and input names to logical sources

The K-Frame contribution tally protocol provides information on up to 192 inputs, up to 96 outputs, the full set of fixed sources internal to the K-Frame system, and up to 2 complete operator suites. In XEdit's **Channels/Sources** tab, configure logical sources using input names and system tallies from the K-Frame. You will find these elements by expanding the filtered system list that appears on the **Tools** pane.


- For every input, 6 tallies, and 2 text labels (the *engineering name* and the *OLED name*) are available. When the OLED name is not defined for an input, both text labels contain the engineering name. A tally status indicates whether the input contributes to the output associated with the tally (see [step 10](#), under [Establishing communication between the K-Frame switcher and the multiviewer](#), on page 452). For example, if **Tally 1** has been configured to match *Output 1*, then the Tally 1 status of an input indicates whether this input contributes to Output 1.

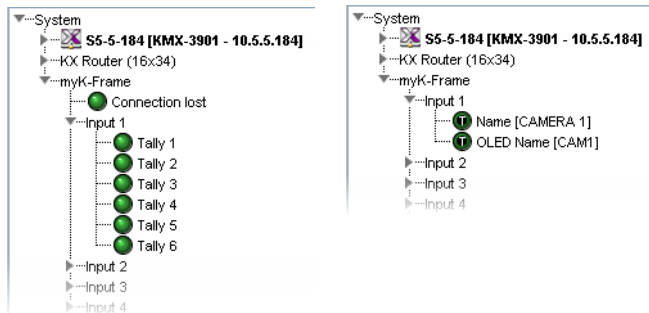

- For every physical output of the K-Frame, the (static) name of the output is available.

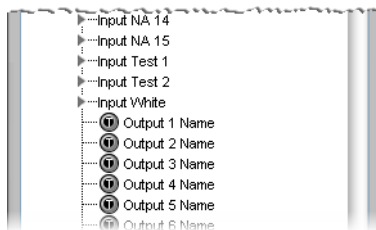

- Within the operator suites, 6 tally statuses are available for every video processing engine (VPE) output. The tally status indicates whether the VPE output contributes to the switcher output associated with the tally.

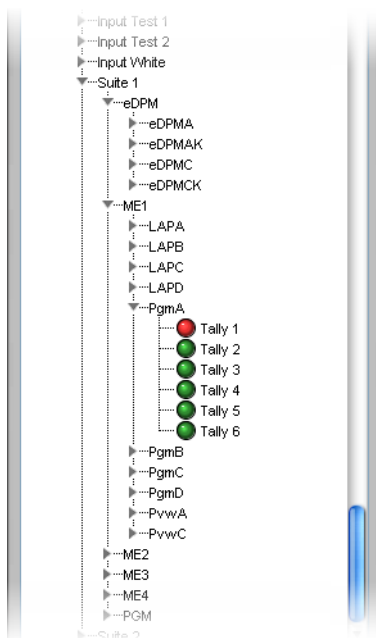


To configure your logical sources

- 1 In the **Channels/Sources** tab, add the required number of text and alarm levels for your purposes (see [Creating and Configuring Logical Sources](#) on page 90).

You may, for example, add two text levels to monitor source labels from the K-Frame switcher, and two alarm levels to monitor Program and Preview tallies.

System	Channels/Sources	Destinations	Rooms	Layouts	RCP users	Actions						
Channels/Sources		Source info		Video	Audio		Text			Alarm		
		#	Cat.	Name	VIDEO	EMB 1	SRC Name	OLED name	Eng name	Loss	PGM	P/VW
	A01	1		A01	A01	A01 Emb 1	A01			A01 Video loss		
	A02	2		A02	A02	A02 Emb 1	A02			A02 Video loss		
	A03	3		A03	A03	A03 Emb 1	A03			A03 Video loss		
	A04	4		A04	A04	A04 Emb 1	A04			A04 Video loss		
	A05	5		A05	A05	A05 Emb 1	A05			A05 Video loss		
	A06	6		A06	A06	A06 Emb 1	A06			A06 Video loss		
	A07	7		A07	A07	A07 Emb 1	A07			A07 Video loss		
	A08	8		A08	A08	A08 Emb 1	A08			A08 Video loss		
	A09	9		A09	A09	A09 Emb 1	A09			A09 Video loss		
	A10	10		A10	A10	A10 Emb 1	A10			A10 Video loss		


- 2 Click a cell that corresponds to the appropriate *text* level of a logical source.
- 3 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.

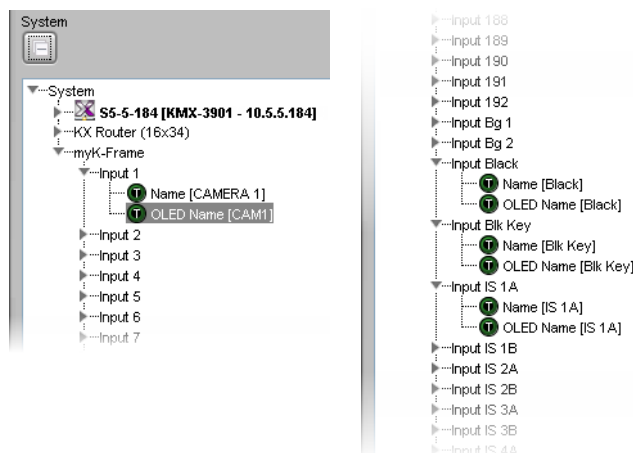

K-Frame elements available from the filtered System list, for assignment to text levels in the sources table


- 4 If your logical sources include more text levels to be associated with the switcher, then repeat [step 2](#) – [step 3](#) for the current logical source's remaining text levels.
- 5 Click a cell that corresponds to the appropriate *alarm* level of the current logical source.
- 6 In the filtered System list, navigate to the tally element you want to monitor, and drag it onto the selected cell.

- 2 On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning K-Frame tallies and input names to logical sources](#) on page 453) from the filtered **Channels/Sources** list, and then drag it onto the appropriate monitor.
- 3 Repeat [step 2](#) until you have assigned all the sources you want to monitor to the appropriate monitors in your layout.
- 4 Click the first UMD whose dynamic text and tally reporting behavior you want to set, after unlocking the composite monitor that contains it if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 5 In the **Properties** pane, click the **Left tally source level** box, and then select the alarm level you want to monitor.

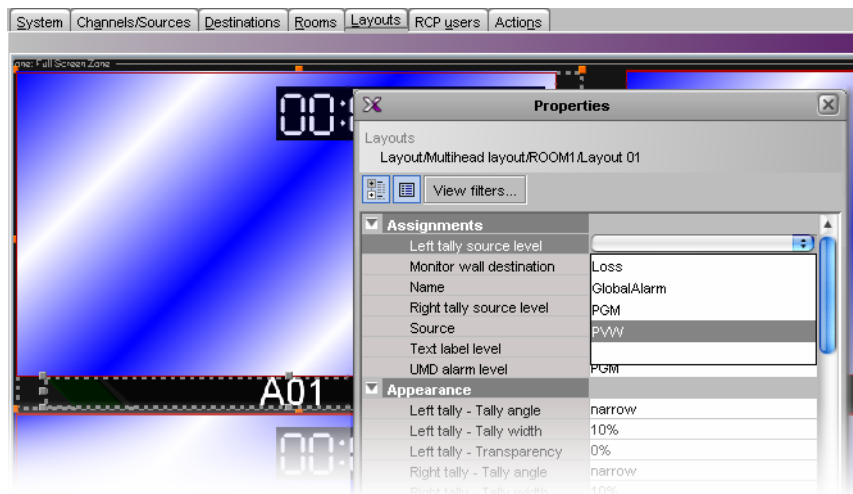

Alarm level selection for the left tally in a UMD

- 6 Click the **Right tally source level** box, and then select the appropriate alarm level, if applicable.
- 7 Click the **Text label level** box, and then select the text level you want to monitor.

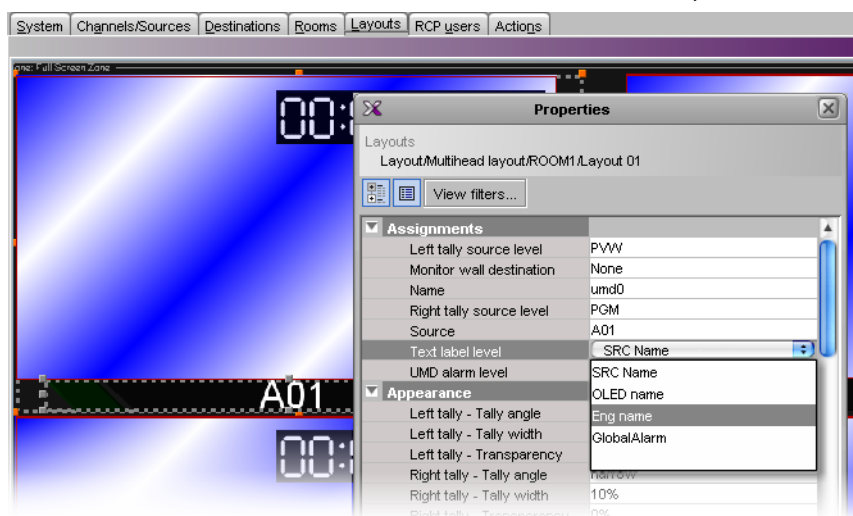

Text level selection for the text label in a UMD

- 8 Click outside the composite to lock it, if applicable.

- 9 Repeat [step 4](#) – [step 8](#) until you have configured all UMDs that are to display dynamic text and tally status when this layout is loaded on the monitor wall.
- 10 On the **File** menu, click **Save**.
- 11 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned dynamic text and tallies provided by the K-Frame switcher. Input names, and tally status from the switcher will be visible on the monitor wall. Any changes made by the switcher's operator will be immediately reflected on the monitor wall.

Zodiak Production Switcher


A multiviewer can receive dynamic source names and tally information from a Grass Valley Zodiak Digital Production Switcher. The procedures below describe how to set up a multiviewer to interface with this family of production switchers.

Configuring the Zodiak Switcher

To establish a serial connection between the switcher and your multiviewer, you need to identify the serial port you want to use for tally contribution in the switcher's *Engineering Setups*, by using the Zodiak touch screen menu panel or the Zodiak Menu application. You also need to configure or take note of the communications settings and use the same values on the multiviewer's side. The procedure below is an example using the default values typically used on Grass Valley production switchers.


To set up the Zodiak switcher

- 1 Physically connect one end of an RJ-45 straight cable to the multiviewer's RS-422 port.
- 2 Using a DE-9S-to-RJ45 crossover adapter (Grass Valley part no. 1792-3700-100), connect the other end of the cable to one of the 4 RS-422 control ports on the Zodiak Video Processor Frame. The illustration below shows the location of the RS-422 ports on a Zodiak frame. The RS-422 ports (highlighted) are labeled Serial 1 – 4 (J4 – J7).

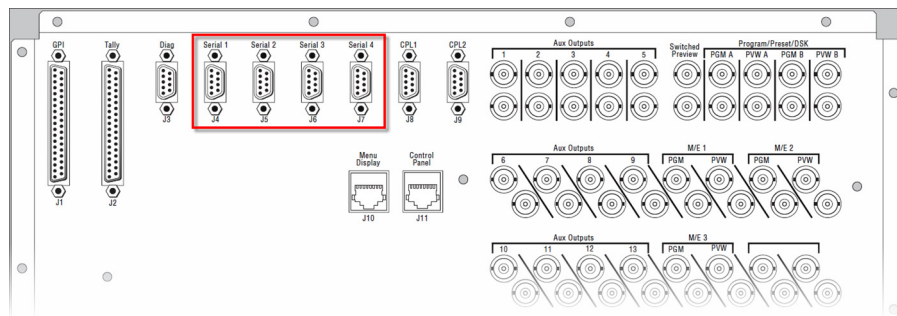

The 4 RS-422 control ports at the back of a Zodiak Video Processor frame have DE-9 female connectors with the following pinout:

Pin	Signal
1, 4, 6, and 9	Chassis ground
2	RX-
3	TX+
7	RX+
8	TX-

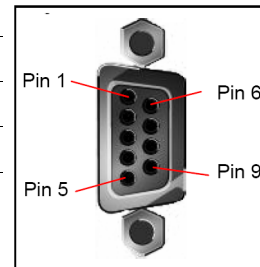

Note: Refer to the multiviewer's Installation & Service Manual for pin-outs on the multiviewer. See [Related Documentation](#), on page 13.

- 3 From the Zodiac Home menu, touch the **Eng Setup** menu button, and then the **Ports & Devices** category button.

The **Physical Serial Port Assignment** menu appears.

- 4 In the port selection area, touch the port you want to use as the tally contribution port.
- 5 In the **Baud Rate** area, touch **38.4k**.
- 6 In the **Parity** area, touch **None**.

This sets the baud rate to 38,400 and the parity to None.

Assuming the required sources and outputs have been defined, this completes the configuration required on the switcher. The multiviewer system will be able to send commands to the switcher, and the switcher will respond accordingly. Refer to the *Zodiac Installation & Service Manual* for more details.⁹

Configuring the Multiviewer

For your multiviewer to receive tally status, source names and output names from a Zodiac switcher, and to display the switcher's contribution on the monitor wall as visual tally and dynamic text information, you need to configure your multiviewer's Zodiac serial tally service, by performing the following in XEdit:

- set up the communication parameters for the serial connection;
- configure logical sources by assigning input names, output names, and tally status from the switcher to the appropriate logical sources' text and alarm levels;
- assign alarm and text levels from logical sources to layout elements such as UMDs or alarm monitors.

Establishing serial communication between the Zodiac switcher and the multiviewer

To set up the multiviewer's communication parameters

- 1 Open XEdit.
- 2 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 3 Drag the **Zodiac** production switcher device from the equipment library onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Zodiac** on the menu.

A window appears, prompting you for a device identifier.




- 4 Type a name for the Zodiac production switcher, and then click **OK**.


9. Manuals and Release Notes for all Grass Valley production switchers are available here:
http://www.grassvalley.com/docs/all_switchers.html#manuals

- 5 Click the **Interconnects** tab.
- 6 Position the pointer over the multiviewer icon, then click and drag towards the Zodiac production switcher icon.

A line representing the connection between the multiviewer and the device appears.

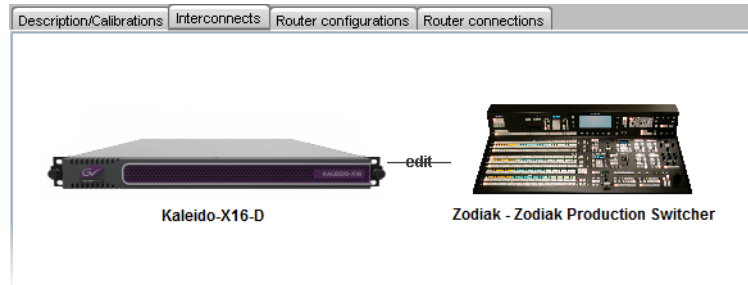

- 7 Click the connection line between multiviewer and device.
- 8 In the **Properties** pane, select the appropriate serial port from the **RS-422 communication port** list.

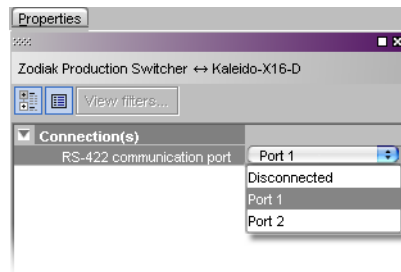


Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).


- 9 In the **Interconnects** tab, click the **Zodiac** production switcher icon.

In the **Properties** pane, the serial communications properties for the Zodiac device are the following, by default:

Baud Rate	38400
Data Bits	8
Parity	NONE
Stop bits	1

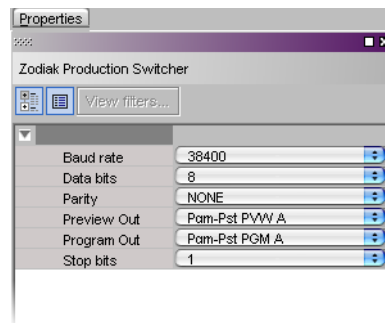

- 10 Set these properties to match the values used on the switcher.
- 11 Select the appropriate outputs to use for the **Preview Out** and **Program Out** tally calculation, based on your switcher's configuration.

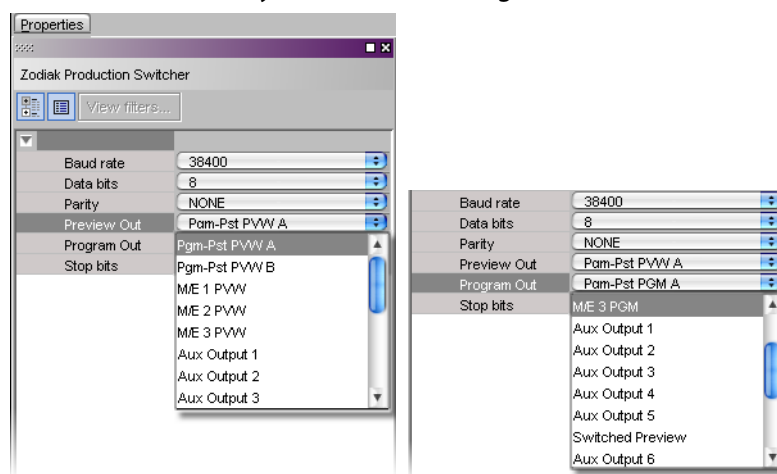

The current version of the Kaleido Software supports monitoring of one Preview output and one Program output from any of the Zodiac switcher's physical or internal M/E units (Pgm-Pst PVW A, and B; M/E 1 PVW, M/E 2 PVW, M/E 3 PVW; Pgm-Pst PGM A, and B; M/E 1 PGM, M/E 2 PGM, M/E 3 PGM), from up to 13 Aux bus outputs, or from the additional switched preview output.


Assigning Zodiac tallies, input names, and output names to logical sources

The Zodiac contribution tally protocol provides information on up to 128 external sources, up to 13 Aux bus outputs, and the switched preview output from the Zodiac Video Processor Frame, in addition to the Preview and Program outputs you selected (see [step 11 of Establishing serial communication between the Zodiac switcher and the multiviewer](#), on page 460). In XEdit's **Channels/Sources** tab, configure logical sources using text sources and system tallies from the Zodiac's serial interface. You will find these elements by expanding the filtered system list that appears on the **Tools** pane.

To configure your logical sources

- 1 In the **Channels/Sources** tab, add the required number of text and alarm levels for your purposes (see [Creating and Configuring Logical Sources](#) on page 90).
You may, for example, add one text level to monitor source labels from the Zodiac switcher, and two alarm levels to monitor Program and Preview tallies.

- 2 Click a cell that corresponds to the appropriate *text* level of a logical source.
- 3 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.

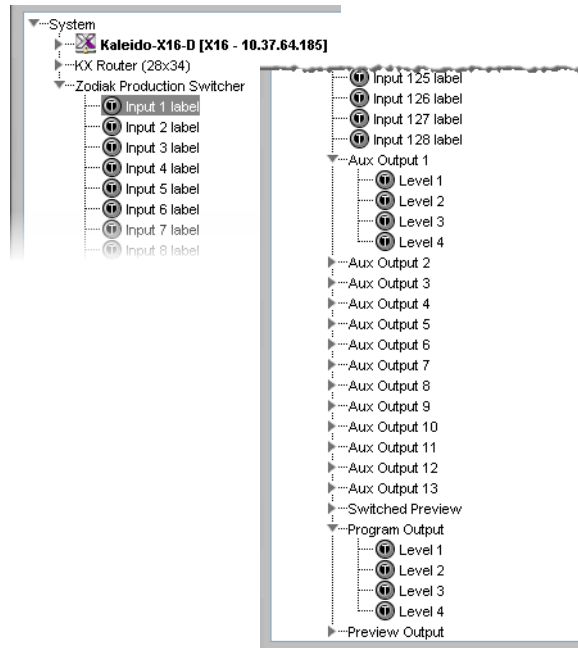


Zodiak elements available from the filtered System list, for assignment to text levels in the sources table

In the case of the Zodiak outputs (the Preview and Program Outputs you selected, Aux Output 1 to Aux Output 13, and the Switched Preview Output), from which elements can be assigned to text levels in your multiviewer's logical sources, the Kaleido Software supports 4 display modes for the labels:

Level 1	The label represents the initial background feed.
Level 2	The label represents the initial and the previous background feed
Level 3	The label represents the previous background feed
Level 4	The label represents the current background feed (not supported)


The Zodiak external sources represented in the filtered System list (Input 1 to Input 128), are associated with a single Input label.

- 4 If your logical sources include more text levels to be associated with the Zodiak switcher, then repeat [step 2](#) – [step 3](#) for the current logical source's remaining text levels.
- 5 Click a cell that corresponds to the appropriate *alarm* level of the current logical source.
- 6 In the filtered System list, navigate to the tally element you want to monitor, and drag it onto the selected cell.

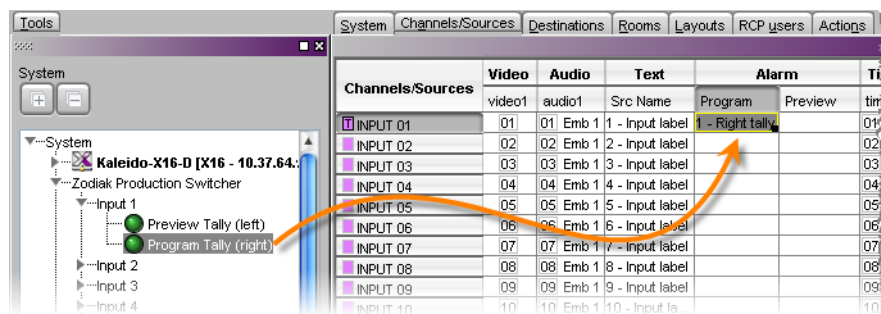

- 7 If your logical sources include more alarm levels to be associated with the Zodiac switcher, then repeat [step 5](#) – [step 6](#) for the current logical source's remaining alarm levels.
- 8 Make corresponding assignments to other logical sources by incremental copy, if necessary (see [Making Further Assignments by Incremental Copy](#), on page 102).

Text level based on dynamic labels from Zodiac sources Alarm levels based on tallies from the Zodiac device

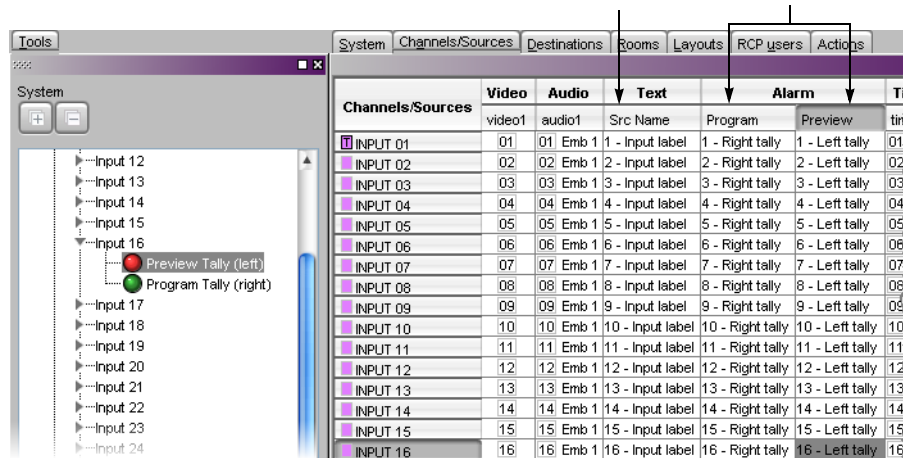

- 9 On the **File** menu, click **Save**.
Changes to the sources table are saved.


Configuring layout elements

You can now assign the logical sources you previously configured to monitors that can display text (e.g., UMD) or alarms (e.g., UMD, video, text alarm status) in a layout. Depending on your purposes, you will assign the appropriate text or alarm levels to specific components within the monitors (e.g., assign an alarm level to tally components in a UMD, or a text level to the UMD text component).

To configure layout elements for dynamic text and tally reporting


- 1 Click the **Layouts** tab, and then open the layout you want to configure.
- 2 On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning Zodiac tallies, input names, and output names to logical sources](#) on page 462) from the filtered **Channels/Sources** list, and then drag it onto the appropriate monitor.
- 3 Repeat [step 2](#) until you have assigned all the sources you want to monitor to the appropriate monitors in your layout.

- 4 Click the first UMD whose dynamic text and tally reporting behavior you want to set, after unlocking the composite monitor that contains it if applicable (see [Unlocking a Composite Monitor](#) on page 313).
- 5 In the **Properties** pane, click the **Left tally source level** box, and then select the alarm level you want to monitor.

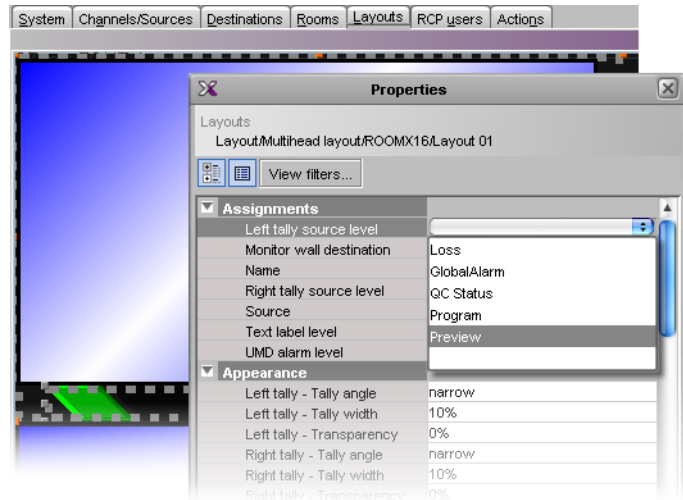

Alarm level selection for the left tally in a UMD

- 6 Click the **Right tally source level** box, and then select the appropriate alarm level, if applicable.
- 7 Click the **Text label level** box, and then select the text level you want to monitor.

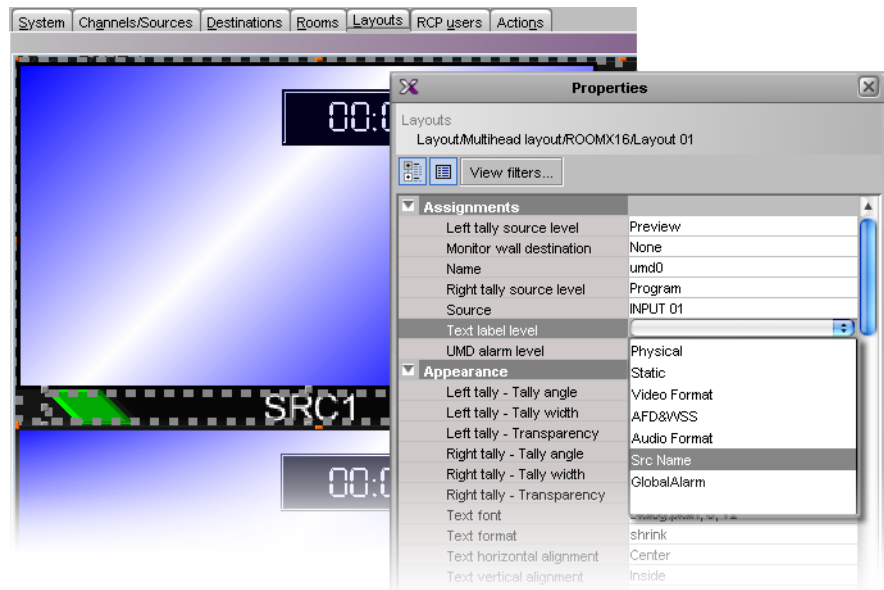

Text level selection for the text label in a UMD

- 8 Click outside the composite to lock it, if applicable.
- 9 Repeat [step 4](#) – [step 8](#) until you have configured all UMDs that are to display dynamic text and tally status when this layout is loaded on the monitor wall.
- 10 On the **File** menu, click **Save**.

- 11 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned dynamic text and tallies provided by the Zodiac switcher. Input or output names, as well as tally status from the Zodiac switcher will be visible on the monitor wall. Any changes made by the switcher's operator will be immediately reflected on the monitor wall.

Daktronics Scoreboards

For your multiviewer to receive scoreboard information from a Daktronics system, and to display the system's contribution on the monitor wall, you need to configure your multiviewer by performing the following tasks in XEdit:

- 1 Add the Daktronics scoreboard to your multiviewer system configuration, and set up the communication parameters (see [Adding a Daktronics Scoreboard to your Multiviewer Configuration](#) on page 467).
- 2 Add logical sources and configure them by assigning text elements from the scoreboard system to the logical sources' text levels (see [Assigning Scoreboard Information to Logical Sources](#) on page 469).
- 3 Assign the appropriate text levels from logical sources, to layout elements such as UMDs, or alarm monitors (see [Configuring Layout Elements](#) on page 470).


Adding a Daktronics Scoreboard to your Multiviewer Configuration

To add a Daktronics scoreboard to your multiviewer configuration

- 1 Open XEdit.
- 2 Connect to the multiviewer, if you want to apply your changes in real time (see [Connecting to a Multiviewer](#) on page 32).

Note: If this step is omitted, then you will need to export the database to apply the changes.

- 3 In the main window, click the **System** tab, and then click **Description/Calibrations** on the second-level tab bar. The main pane displays the System hierarchical list, and the **Tools** pane displays the equipment library when the root of the System list is selected.
- 4 Drag the **Daktronics** device from the equipment library onto the root of the System hierarchical list.

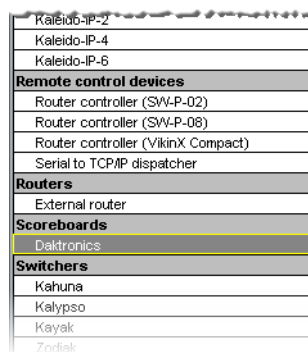


Alternatively, right-click the list root, and then click **Insert Daktronics** on the menu.

A window appears, prompting you for a device identifier.


- 5 In **Device Identifier**, type a name for the scoreboard, and then click **OK**.



 
The scoreboard is added to the system list.



- 6 Click the **Interconnects** tab.
- 7 Position the pointer over the multiviewer icon, then click and drag towards the scoreboard device icon.
A line representing the connection between the multiviewer and the device appears.

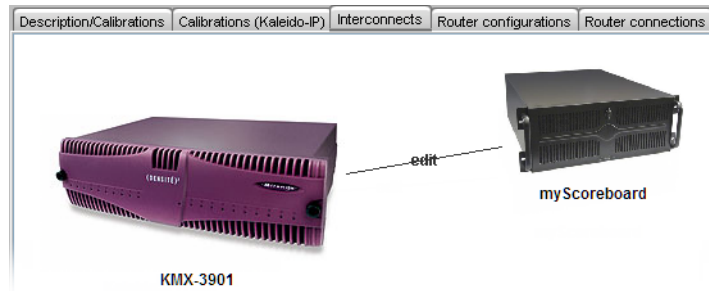

- 8 Click the connection line between multiviewer and device.
- 9 In the **Properties** pane, select the appropriate element from the **RS-422 communication port list**.

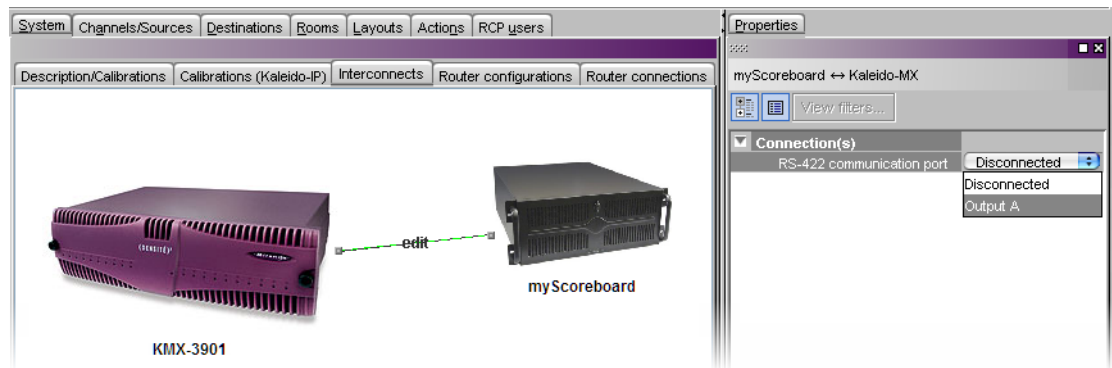

Depending on the multiviewer model, the available RS-422 ports are designated as follows:


KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B

Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

10 In the **Interconnects** tab, click the scoreboard device icon.

11 In the **Properties** pane, set the serial communications properties for the scoreboard device as follows:

Baud Rate	9600
Data Bits	8
Parity	NONE
Stop bits	1

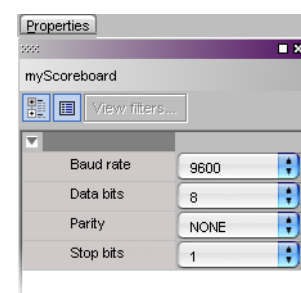

You are now ready to add information from the Daktronics scoreboard system to logical sources.

Assigning Scoreboard Information to Logical Sources

To configure your logical sources


- 1 In the **Channels/Sources** tab, add the required number of logical sources for your purposes (see [Manually adding a Logical Source](#) on page 94).

If you plan to monitor scoreboard data during a hockey game, for example, you might add one logical source for every element you want to monitor (e.g., the game clock, the period number, the home and guest teams' scores).

- 2 Add the required number of text levels for your purposes (see [Adding a level](#) on page 95).

For example, you might add one text level named *Scoreboard*.

- 3 Click a cell that corresponds to the appropriate *text* level of a logical source you want to configure.
- 4 In the filtered System list, navigate to the text element you want to monitor, and drag it onto the selected cell.
- 5 If your logical sources include more text levels to be associated with the timer system, then repeat [step 3](#) and [step 4](#) for the current logical source's remaining text levels.
- 6 Repeat [step 3–step 5](#) for any remaining logical sources you want to configure with scoreboard information.

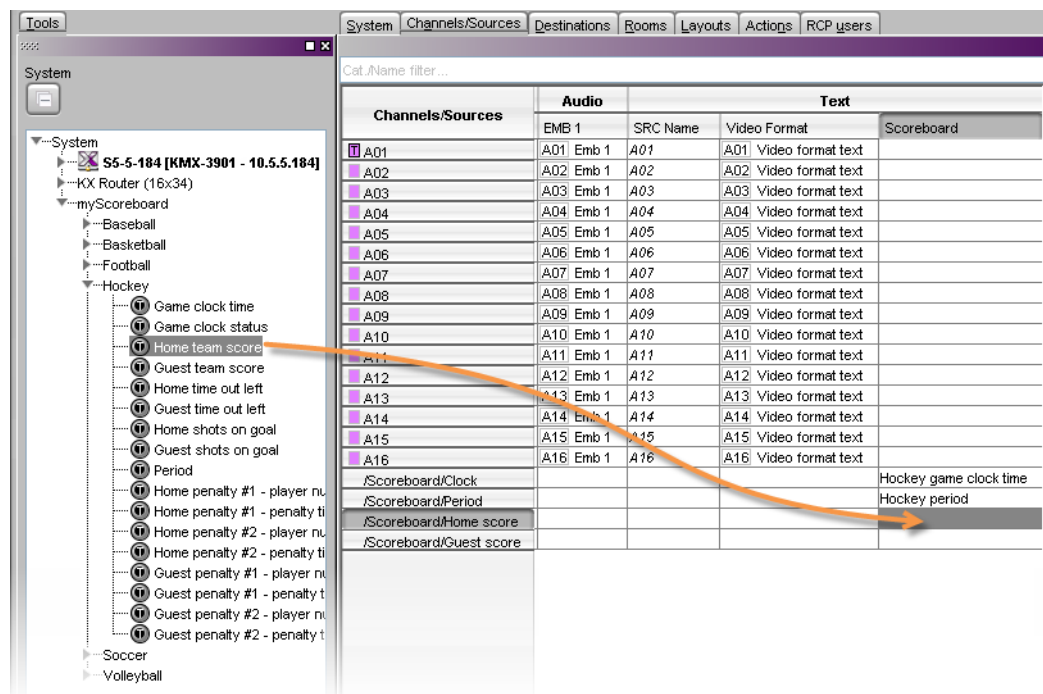

Sample Daktronics configuration, to monitor scoreboard information for a hockey game

- On the **File** menu, click **Save**.
Changes to the sources table are saved.

Configuring Layout Elements


You can now assign the logical sources you previously configured (see [Assigning Scoreboard Information to Logical Sources](#) on page 469) to UMDs or alarm monitors in a layout. The procedure below explains how to configure UMDs to report scoreboard information.

To configure UMDs for dynamic reporting of scoreboard text from a Daktronics system

- Click the **Layouts** tab, and then open a layout.
- Drag the third predefined UMD (*umd2*), from the set of predefined UMDs available on the **Tools** pane, onto your layout, and then adjust its size and position as needed.


Note: The third predefined UMD (*umd2*) is configured not to show tallies or alarm latches, which makes it the convenient choice for displaying text information only.

- On the **Tools** pane, select one of the logical sources you previously configured (see [Assigning Scoreboard Information to Logical Sources](#) on page 469), from the filtered **Channels/Sources** list, and then drag it onto the UMD.
- In the **Layouts** tab, click the UMD, if it is not already selected.
- In the **Properties** pane, click the **Text label level** box, and then select the text level you want to monitor (e.g., the *Scoreboard* level you previously configured).

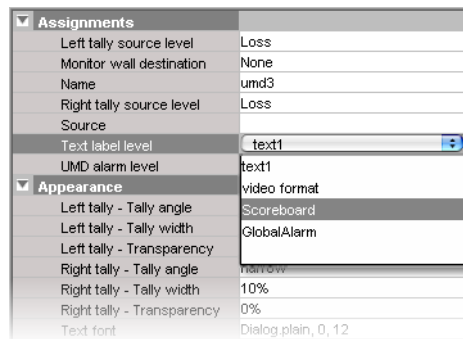


6 Select a monospace font for the text:

- a Click the **Text font** box, and then click the button that appears inside the box to open the font picker window.

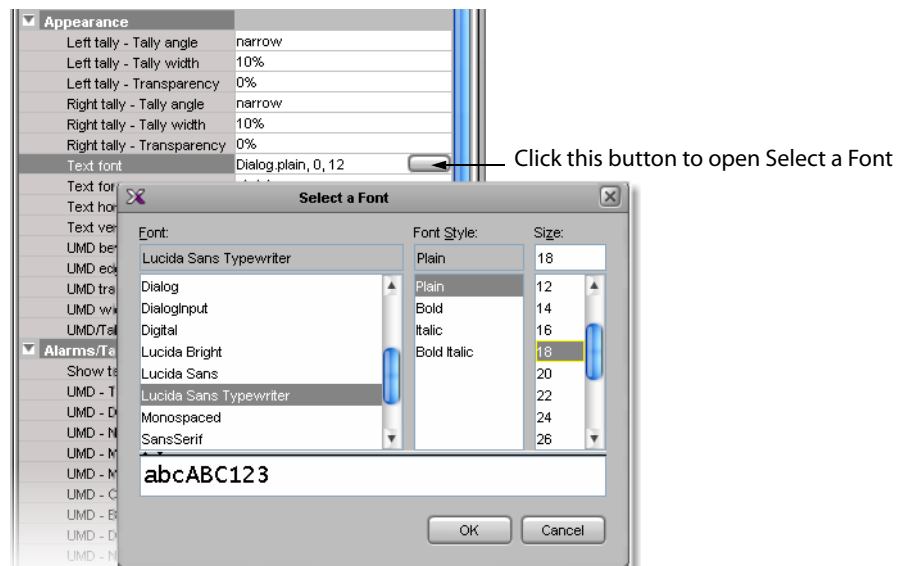

- b In **Select a Font**, click a monospace font (e.g., Lucida Sans Typewriter).
 - c Set the font style and size, as needed.
 - d Click **OK** to close the window.
- 7 Set the text alignment to match your scoreboard behavior by clicking the **Text horizontal alignment** box, and then selecting **Left**, or **Right**, for example, from the list.
- 8 If you want to add a text label for this information (e.g., *GUEST*, *HOME*, *PERIOD*, etc.), add another UMD (again, by using *umd2* from the set of predefined UMDs), and type some text (see [Configuring Static UMD Text](#) on page 286, if needed).
- 9 Repeat [step 2–step 8](#) until you have added UMDs for all the scoreboard data you want to monitor.

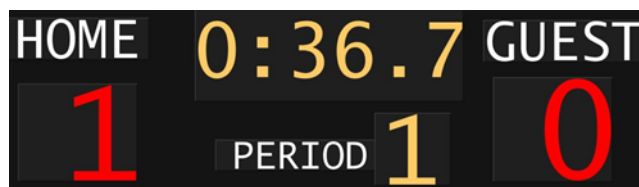

10 On the **File** menu, click **Save**.

11 If you have been working in offline mode, then export the database to your multiviewer (see [Exporting a Database](#) on page 37).

On the monitor wall, you can now load the layout containing the monitors that were assigned information from the scoreboard system. Text information from the device will be visible on the monitor wall. Any changes made by the device's operator will be immediately reflected on the monitor wall.

Serial Port Test Agent

During a setup, it is sometime not clear if the wiring between the multiviewer and a peripheral device is correct or if the peripheral device sends the expected data. One can connect a serial-port test agent as a peripheral device in XEdit, export the database to the multiviewer, and then read, on a Web page, the data received on the serial port.

To use a serial port test agent

- 1 Select the **Serial port test** device in the equipment library and drag it onto the root of the System hierarchical list. Alternatively, right-click the list root, and then click **Insert Serial port test** on the menu.
- 2 Click the **Interconnects** tab in the main window.
- 3 To connect the test device to the multiviewer, click the multiviewer's icon, or the device's, and drag the pointer towards the other.
- 4 Click the test device's icon, and adjust the port settings to match those of the actual peripheral device you want to test.
- 5 Click the connection line between the device and the multiviewer.
- 6 In the **Properties** pane, select the appropriate element from the **RS-422 communication port** list.

Depending on the multiviewer model, the available RS-422 ports are designated as follows:

KMV-3901/3911	RS-422
Kaleido-X16	Port 1, and Port 2
Kaleido-X (14RU)	Frame A – Output A, B, and C; Frame B – Output A, B, and C
Kaleido-X (7RU)	Output A, B, C, and D
Kaleido-X (4RU)	Output A, and B
Kaleido-MX, Kaleido-MX 4K	Output A, and B Note: The Kaleido-MX (1RU) 16×4, and the Kaleido-MX 4K 16×1 models have only one RS-422 port, which is physically connected to output card A.
Kaleido-Modular-X	Output A, and B Note: KMX-3901-OUT output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) <i>do not</i> have RS-422 ports. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

When connected, the serial-port test agent will log all data received from the serial port to a file that you can read using a Web browser.

Once the database is exported to the multiviewer, the serial-port test agent starts. The agent opens the serial port and start writing to a log file the data that is received on the port. To access the log file, point your browser to `http://[IP address]/logs/comm.log`.

Note: The part [IP address] represents the IP address of the output card (or of the multiviewer itself, depending on the model) where the test agent is connected. You can find the IP address on XAdmin's System Configuration page (see *Configuring a Multiviewer's IP Settings* in the multiviewer's *Installation & Service Manual* for more information).

14

Operation of the Monitor Wall

Introduction

This section introduces the multiviewer monitor wall features and describes the actions you can perform on the multiviewer's monitor wall.

Key Concepts


Monitor wall	The <i>monitor wall</i> refers to the group of display screens that are connected to the output modules of a specific Kaleido system.
Room	A <i>room</i> is a visual grouping of display screens. A room represents the physical displays, positioned and sized as viewed by the user in an actual room. Rooms can include <i>full screen zones</i> , and are defined and configured by using the XEdit application. See Logging on to the Monitor Wall Using a Remote Control Panel on page 480.
Automatic resolution detection	<i>Automatic resolution detection</i> eases the initial setup of a new display monitor by automatically determining the best resolution supported by the display. This ensures that the multiviewer will be configured for the best video quality. When a new display is connected, the multiviewer will detect the EDID of the display on boot-up, and will set the correct resolution accordingly. This means that displays can be hot-swapped. If an existing display is replaced by a new one, the multiviewer will automatically change the resolution without the need for a system restart. Note: The Kaleido-IP does not support automatic output resolution detection.
Layout	A <i>layout</i> refers to a visual grouping of monitors on the monitor wall. Layouts are specific to a room, and created by using the XEdit application. Full screen layouts, also defined in XEdit, are specific to a full screen zone within a particular room. See Loading Layouts , on page 486, and Displaying a Source in Full Screen Mode , on page 489.
Dashboard	The <i>dashboard</i> is a window that contains the system name, IP address and software build version. It also displays error messages. The dashboard is displayed at the bottom right of each display, on the monitor wall:  See Displaying the Dashboard , on page 484, and Hiding the Dashboard , on page 485.

Monitor	A <i>monitor</i> is an element that is part of a layout. XEdit supports several types of primary elements (clocks, timers, video monitors, audio monitors, UMDs, time code monitors, alarm monitors, etc.), that can be grouped into composite monitors.
Logical source	A <i>logical source</i> (called a <i>channel</i> , in earlier versions of the documentation) refers to a group of physical audio, video, or metadata sources, and text attributes. A logical source can be used as a whole, and assigned to a virtual monitor. See Assigning Sources to Monitors on page 501.
Video monitor	A <i>video monitor</i> is a layout element used to define an area for displaying a video signal. Within a video monitor, the <i>video window</i> is the active area where the video signal is displayed, possibly including closed captions or teletext. See Displaying Subtitles and Closed Caption Text on page 494.
Composite monitor	A <i>composite monitor</i> (also referred to as a <i>composite</i> , a <i>monitor</i> or a <i>tile</i>) is a group of primary elements that can be seen as a single object within a layout. Composite monitors typically include a video window, one or more audio level meters, and a UMD with two tallies.
Safe area	The <i>safe area</i> is a configurable region inside a video window. The safe area markers delimit this region (e.g., a 4:3 region inside a 16:9 window). See Toggling Safe Area Markers on page 493.
Audio monitor	An <i>audio monitor</i> (also called <i>audio level meter</i> or <i>ALM</i>) is a layout element that provides a visual representation of sound. See Audio Monitoring on page 479.
UMD	An <i>under monitor display (UMD)</i> has a <i>text label</i> that can be static or dynamically updated by a peripheral device. It can also have <i>left and right tally indicators</i> . The UMD typically indicates the name of the video source seen in a video monitor. You can edit static labels directly on the monitor wall: see Editing UMD Text , on page 499, and Selecting an Input Method , on page 500.
Time code monitor	A <i>time code monitor</i> displays the Ancillary Time Code (ATC) from an HD video signal, or the time code found in an embedded SDI video signal, part of the vertical interval of an analog signal (VITC), or other external Linear Time Code (LTC). This monitor also supports time code information from external providers. Time code monitors can be used for monitoring the duration of programs.
RCP User	The advanced Remote Control Panel (RCP) simplifies video/audio signal processing and control in both single and multiuser environments. RCP User use the RCP to control connected equipment.
Timer	A <i>timer monitor</i> is based on a <i>timer</i> defined within the multiviewer system. Three timer modes are available: (1) UP: timer counts up starting from zero up to a preset time, (2) DOWN: timer counts down from a preset time to zero, and (3) REMAINING: timer counts down from the current time until it reaches a preset time. Timers are defined and configured in XEdit. They can be slaved to production timers, assigned to logical sources, assigned to rooms or specific RCP users, and controlled from the Kaleido-RCP2. See Using Timers on page 509.
Clock	A <i>clock</i> is the visual representation of time in a video or display. It can be based on a reference LTC signal or on the multiviewer's system time.

Subtitling monitor	A <i>subtitling monitor</i> defines an area for displaying subtitles extracted from a video signal. By using a subtitling monitor you can monitor subtitling from a specific DVB or SCTE 27 stream, independently from the associated video stream. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information). See Setting the DVB Subtitling Language from the Monitor Wall, on page 496, and Setting the SCTE 27 Subtitling Language from the Monitor Wall, on page 497. Note: With the current version of the Kaleido Software, the subtitling monitor supports DVB subtitles and SCTE 27 subtitles, from Kaleido-IP sources only.
V-chip monitor	The <i>V-chip monitor</i> provides a visual indication of the V-chip rating from the CC (608) metadata in an SD video signal, or from the CC (608) legacy caption data, when such data is present within an HD video signal. Requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information).
Metadata monitor	A <i>metadata monitor</i> defines an area for displaying XDS, or digital content advisory descriptor (CAD) information compliant with CEA-766-D, extracted from a video signal. This requires the CC/XDS option to be enabled (see the multiviewer's <i>Installation & Service Manual</i> for more information).
Action	An <i>action</i> is an operation automatically performed in response to a specific trigger. <i>Monitor wall actions</i> are directly associated with layout elements. <i>Background (floating) actions</i> are actions that are global to the multiviewer system. Unlike monitor wall actions, background actions are always available. See Triggering Actions on page 512.
Trigger	A <i>trigger</i> is an event that triggers an action. An example of a trigger could be a double click on a monitor. Background actions are triggered by alarms or by Gateway commands. In XEdit, when defining an action for a layout element, you could specify, for instance, that a specific full screen layout be displayed on the monitor wall in response to the trigger.
Alarm monitor	<i>Alarm monitors</i> help you see the status of global and virtual alarms, but their use is not limited to this type of alarms. When any alarm level is assigned to an alarm monitor, the status of this alarm will be shown. When using the global alarm at the text label level, it will display the text value of the alarm, which is a readable name.
Alarm latch	To prevent operators from missing temporary alarms on the monitor wall, layout elements that are capable of displaying an alarm status (e.g., video monitors, subtitling monitors, UMDs, alarm monitors) can be configured with a latching mechanism. An <i>alarm latch</i> will keep the error state visible until someone acknowledges the associated alarm. See Acknowledging Alarms on page 514. When you acknowledge an alarm, latched or current, the latched status is reset to normal (i.e., unlatched). If the alarm is acknowledged while its status indicates an error condition, the latched status is reset to normal, and will only go back to error if the alarm status returns to normal and then to error again.

Note: If you have an iControl application server, you may use its GSM alarm browser to configure an *acknowledgement snooze duration*, which defines the period during which alarm status changes detected by your multiviewer are ignored, immediately after an alarm is acknowledged. Such a snooze period is typically not desirable in the context of multiviewer alarms. Therefore, a multiviewer's GSM has its acknowledgement snooze duration set to 0 ms, by default.

Video monitors can provide alarm status information through their borders' color and blinking behavior, and show the latched state as small indicators in each corner of the video window. UMDs (text and tallies) and alarm monitors can change their text or background color and blinking behavior, to reflect the alarm status and show the latched state through their borders.

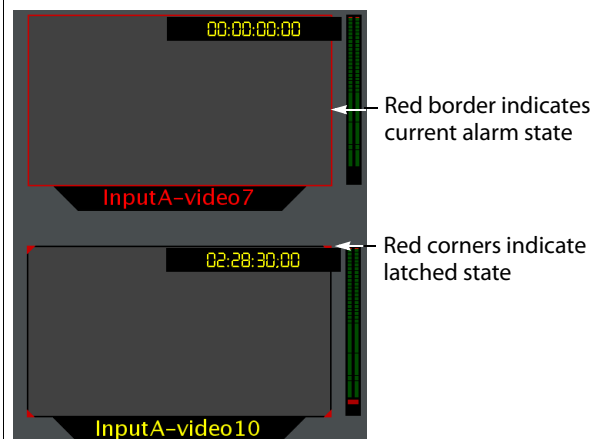

See [Configuring a Video Monitor's Alarm Reporting Behavior](#), on page 257, [Configuring a UMD's Alarm Reporting Behavior](#), on page 283, and [Configuring Alarm Monitors](#), on page 290, for details on configuring the alarm reporting and latching attributes for these layout elements.

The multiviewer tracks the latched state of all alarm levels in a logical source at all times, even when alarms are not being monitored on the monitor wall, or through SNMP traps or background actions. It could thus happen that some layout elements will show a latched status indicator after a layout is loaded, even if the current state of the corresponding alarm is normal and the alarm was not monitored in the previous layout (the alarm occurred on the feed while the feed was not monitored).

- Latching only occurs when an alarm severity is above normal (i.e., minor, major, or critical). All other alarm states (unavailable, unassigned, pending, unknown, etc.) are not latched.
- Unlatching a global alarm unlatches all its contributing alarms. Unlatching the last alarm contributing to a global alarm unlatches the global alarm itself.
- The color of the latch indicator reflects the highest level of alarm received since the corresponding alarm was last unlatched.

Crosspoint	A multiviewer can control upstream routers, and it can also be controlled as a router itself. In addition, some multiviewer models—Kaleido-X16, Kaleido-X (7RU), and Kaleido-X (14RU)—can have optional router outputs. A crosspoint is the link inside a router between a source (input) and a destination (output). See Changing Crosspoints on page 505. Note: As of Kaleido Software version 5.20, the preferred method of controlling sources, regardless of whether they are sources from an upstream router or physical multiviewer inputs, is to configure logical sources.
Gateway	Kaleido multiviewers can execute commands received through the <i>Kaleido Remote Control Protocol (Gateway)</i> interface, allowing third-party developers and individual users remote access to some Kaleido functions. Refer to the <i>Kaleido Remote Control Protocol (Gateway) User's Guide</i> , for more information. See Related Documentation , on page 13.

Audio Monitoring

The Kaleido-RCP2's **volume control**, **Mute**, and **-20dB** buttons, their equivalent on the RCP-200, and the corresponding Gateway commands apply to *analog* audio monitoring outputs (where available). In the case of a **Kaleido-X**, or **Kaleido-X16** multiviewer, the **Mute** button (and its equivalents) applies to *digital* (AES, HDMI, or SDI) audio outputs as well. See [Monitoring Audio](#) on page 516.

The following table summarizes support for muting the audio monitoring outputs, by multiviewer type, and audio output format.

	Analog	AES	HDMI	SDI (or SFP)	Mosaic return (KMx-49N1)
KMX-3921	N/A	N/A	N/A	No	N/A
KMX-49N1	N/A	N/A	No	No	No
Kaleido-MX ^a	Yes ^b	N/A	No	No	N/A
Kaleido-IP	N/A	N/A	No	N/A	N/A
Kaleido-X	Yes	Yes	N/A	Yes	N/A
Kaleido-X16	Yes	Yes	Yes	Yes	N/A
KMV-3911 ^c	N/A	N/A	No	No	N/A

a. Also Kaleido-MX 4K, and Kaleido-Modular-X.

b. Kaleido-MX 16×4, and Kaleido-MX 4K 16×1 do not have *analog* audio monitoring outputs.

c. Also KMX-39N1, Kaleido-XQUAD, and Kaleido-XQUAD Dual

Logging on to the Monitor Wall Using a Remote Control Panel

As network devices, the RCP-200 advanced remote control panel, and the Kaleido-RCP2 control panel provides access to any room, from any Kaleido multiviewer system on the network. As a security measure, access is controlled by a login procedure. Multiple RCP-200 and Kaleido-RCP2 can be used by different users to access the same room concurrently. When multiple RCP users are active in the same room, they each control a separate pointer on the monitor wall, and can use the monitor wall menu independently, as long as they limit their actions to separate displays.

In a default system configuration, a multiviewer's video outputs are assigned to specific rooms:

- On a Kaleido-X (7RU), the two DVI/VGA outputs from each of the dual-head output cards A, B, C and D are assigned to ROOM1, ROOM2, ROOM3 and ROOM4 respectively.
- On a Kaleido-X (4RU), the two DVI/VGA outputs from each of the dual-head output cards A and B are assigned to ROOM1 and ROOM2 respectively.
- On a Kaleido-X (14RU) expansion system, the two DVI/VGA outputs from each of the dual-head output cards A, B and C of each of Frame A and Frame B are assigned to ROOM1, ROOM2, ROOM3, ROOM4, ROOM5 and ROOM6 respectively.
- On a Kaleido-X16-D, the HDMI outputs from each of the output modules are assigned to ROOMX16.
- On a Kaleido-X16-S, the HDMI output is assigned to ROOMX16.
- On a KMV-3901/3911, Kaleido-XQUAD, or Kaleido-XQUAD-DUAL, the HDMI outputs are assigned to ROOM1.
- On a Kaleido-IP, the multiviewer outputs are assigned to ROOM.
- On a Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X, the outputs are assigned to ROOM1.

Logging on to the Monitor Wall Using the Kaleido-RCP2

To log on to a Kaleido multiviewer's room from the Kaleido-RCP2

- 1 On a Kaleido-RCP2 with an active connection to the network, press and hold the ENTER button until the ESC button lights up. The **Configuration** menu appears, with the ROOM SELECTION option displayed.
- 2 Press ENTER again to obtain the list of rooms from the Kaleido multiviewer systems that are currently available on the network.
The rooms are listed in the form [multiviewer name]/[room name]. If a room belongs to a cluster system, its name appears once for each of the member multiviewers (e.g., if two multiviewers, KX1 and KX2, are configured as a cluster, and ROOM1 includes displays fed by both multiviewers, then both KX1/ROOM1 and KX2/ROOM1 will be listed. You may select either one.
- 3 In the room list, select the room you want to access by pressing the 2 key (to move up in the list) or the 8 key (to move down the list).
- 4 When the appropriate room name is highlighted, press ENTER to accept the new selection, and then press ESC to exit the **Configuration** menu.
- 5 Press the LOGIN key.

The following message will appear on the LCD display:

LOGIN Position
Admin

- 6 Select your user name by pressing the **2** key (to move up in the list) or the **8** key (to move down the list).
- 7 When your user name is highlighted, press ENTER.
- 8 When prompted, type the password for this user name, then press ENTER.

Note: By default, the user "Admin" has no password.

The message "Access granted" will appear on the LCD display if the login is successful. If a mouse is connected to the Kaleido-RCP2, then you should be able to see and move the mouse pointer on the monitor wall. Alternatively, use the Kaleido-RCP2's mouse-function keys.

Notes

- If at any time the message "Target system is offline" or "No login list available" appears on the LCD display, press the ESC, ENTER and DEL keys simultaneously and go back to [step 1](#).
 - If the room you were logged on to is part of a cluster system, try accessing it from a different multiviewer (e.g., select KX2/ROOM1 instead of KX1/ROOM1, from the room list).
 - The pointer may flicker when two RCP users access displays fed by the same multiviewer output.
 - Two users accessing the same display will be limited to sharing a single pointer.
-

For more information on the Kaleido-RCP2, refer to the *Kaleido-RCP2 Guide to Installation and Operation*. See [Related Documentation](#), on page 13.

Logging on to the Monitor Wall Using the RCP-200

To log on to a Kaleido multiviewer room from the RCP-200

- 1 On an RCP-200 with an active connection to the network, press the LIST button.
All devices, and Kaleido multiviewer rooms, detected by the RCP-200 appear on the left screen. Kaleido multiviewer rooms are listed in the form [multiviewer name]\[room name].

If a room belongs to a cluster system, its name appears once for each of the member multiviewers (e.g., if two multiviewers, KX1 and KX2, are configured as a cluster, and ROOM1 includes displays fed by both multiviewers, then both KX1\ROOM1 and KX2\ROOM1 will be listed. To determine the one you should select, review the following:

- Has the RCP user configuration you want to use been replicated on every member of the cluster (see [Replicating RCP Users Across a Cluster System](#) on page 50)?
- Do you need to control an external router whose configuration is available only from one or some specific members of the cluster?

- Does your system configuration include actions that were configured only on one or some specific members of the cluster?
- Do you need to control a timer from the monitor wall in a cascade room?

If any of the above elements is available only from one or some specific members, then make sure you select the room name prefixed with the appropriate multiviewer name. In the case of a cascade room, unless you remember which multiviewer you were connected to when you added the timer you need to control, you will have to proceed by trial and error.

- 2 Touch the room you want to access (press the DOWN or UP soft keys to scroll the list as needed).
- 3 If the list of users assigned to this room appears on the right-hand screen, touch the user name under which you want to log on, enter your password, and then touch LOG IN.

Note: By default, the user “Admin” has no password.

The room’s monitor wall control panel appears on the right-hand screen, with the ASSIGN CHANNEL category selected. If a mouse is connected to the RCP-200, then after touching WALL MOUSE you should be able to see and move the mouse pointer on the monitor wall.

Notes

- If the ROUTER SELECT category becomes selected instead of ASSIGN CHANNEL, showing the following message on the right-hand screen: “Please select a router from the left-hand screen,” then you still need to complete the correlation between some monitor wall destinations and the representation of the corresponding KX Router logical router. See *Correlating Monitor Wall Destinations and KX Router Logical Routers for the RCP-200* in the multiviewer’s *Installation & Service Manual* for more information.
 - The RCP-200 will remember your user credentials until you log out explicitly (by touching LOG OUT at the upper-right corner of the control panel).
 - The pointer may flicker when two RCP users access displays fed by the same multiviewer output.
 - Two users accessing the same display will be limited to sharing a single pointer.
-

For more information on the RCP-200, refer to the *RCP-200 Guide to Installation and Operation*. See [Related Documentation](#), on page 13.

Using On-Screen Wall Control

Locating the Mouse Pointer on the Monitor Wall

If you have a cluster system, the monitor wall may comprise a large number of display screens, where the mouse pointer location is not always obvious.

To locate the mouse pointer on the monitor wall

- Click the middle mouse button.

A more recognizable square shape appears around the pointer.

Note: Configuring a larger pointer may also help. See [Enabling the Large Mouse Pointer for a Room](#) on page 338, for details.

Using On-Screen Wall Control from the RCP-200

Once you have logged on to a room from the RCP-200 control panel, a mouse connected to one of the panel's USB port automatically switches to the monitor wall, while the RCP-200's touch screen features remain available. You can alternate using the mouse between the RCP-200's right-hand screen, and the monitor wall.

To use the mouse on the RCP-200's right-hand screen

- Touch the WALL MOUSE category.

The category's background turns a darker shade (purple), and the mouse pointer appears on the RCP-200's right-hand screen.

To use the mouse on the monitor wall

- Touch the WALL MOUSE category.

The category's background turns a lighter shade (mauve), and the mouse pointer appears on the monitor wall.

Synchronizing the RCP-200's Head View with the Monitor Wall

The RCP-200 control panel does not automatically reflect changes to the current layout that were not performed from the RCP-200—for example, someone may have loaded a different layout, or changed assignments, from another control panel, from XEdit, or by using the monitor wall mouse.

To synchronize the RCP-200's head view with the monitor wall

- Press the REFRESH knob.


Displaying the Dashboard

Whenever the Kaleido Software detects an error, it will automatically display the dashboard on every monitor of the monitor wall. When all errors are resolved, then the system automatically closes the dashboard on every monitor. You can also display the dashboard as needed, to view your multiviewer's system name, IP address, software version and current error messages. In such cases you must manually close the dashboard.

Note: It is possible to disable the automatic display of the dashboard on specific displays. See [Disabling the Dashboard](#) on page 210 for details on how to configure this option.


To display the dashboard

- 1 Right-click a monitor. On the menu, point to **Monitor wall**, and then click **Show dashboard** to display the dashboard associated with the current head.

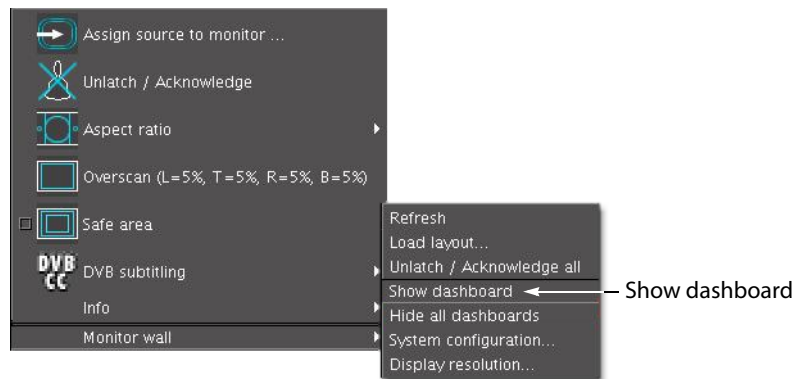

Monitor wall menu (from composite monitor menu)

Note: If you right-click the monitor wall background directly, then the monitor wall menu appears immediately, and you can click **Show dashboard** directly:

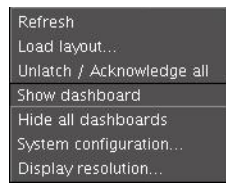

After a brief delay, the dashboard appears at the bottom-right corner of the display monitor, and the command **Hide dashboard** replaces **Show dashboard** on the menu.




Dashboard on the monitor wall

Hiding the Dashboard

To hide the dashboard


- Click the x button at the bottom-right corner of the dashboard. Alternatively, right-click anywhere on the monitor wall, point to **Monitor wall** on the menu (if you clicked a layout element), and then click **Hide dashboard** to hide the dashboard on the current display.

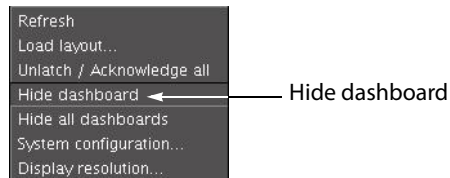

Note: Clicking the x button closes the dashboards on every display monitor in the room if they were displayed automatically.

To hide all the dashboards

- Right-click anywhere on the monitor wall, point to **Monitor wall** on the menu (if you clicked a layout element), and then click **Hide all dashboards** to hide the dashboard on every display in the room.

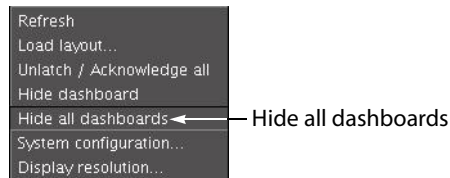

Note: When a dashboard is closed while the system is in an error condition, it will automatically reappear after 60 minutes, or when a new error occurs.


Loading Layouts

Note: Due to a limitation in XEdit's support for drag-and-drop operations, when you first load a new layout on the monitor wall, you may notice that a monitor's source or destination assignment is incorrect. Open the layout in XEdit, click the corresponding monitor, verify the **Source** and **Monitor wall destination** attributes indicated in the **Properties** pane, and correct them as needed. See [Assigning Logical Sources or Monitor Wall Destinations to Monitors](#) on page 242.


Loading a Layout by Using the Mouse

To load a layout on the monitor wall, by using the mouse

- 1 Right-click anywhere on the monitor wall, point to **Monitor wall** (if you clicked a layout element), and then click **Load layout** on the menu.

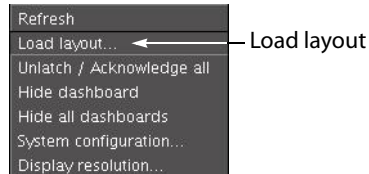

The layout chooser appears.

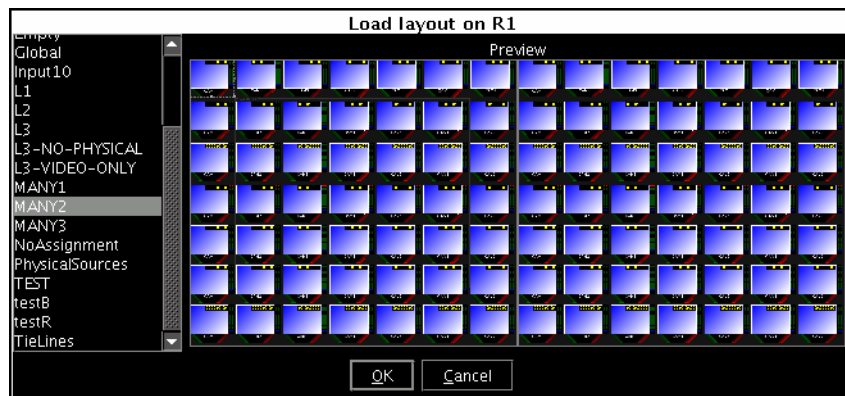

- 2 Select the layout you want to load, from the set of layouts defined for this room, and then click **OK**.


The new layout appears on the monitor wall.

Loading a Layout by Using the Kaleido-RCP2

To load a layout on the monitor wall, by using the Kaleido-RCP2

- 1 Press **LOAD** on the Kaleido-RCP2.

The layout chooser appears.

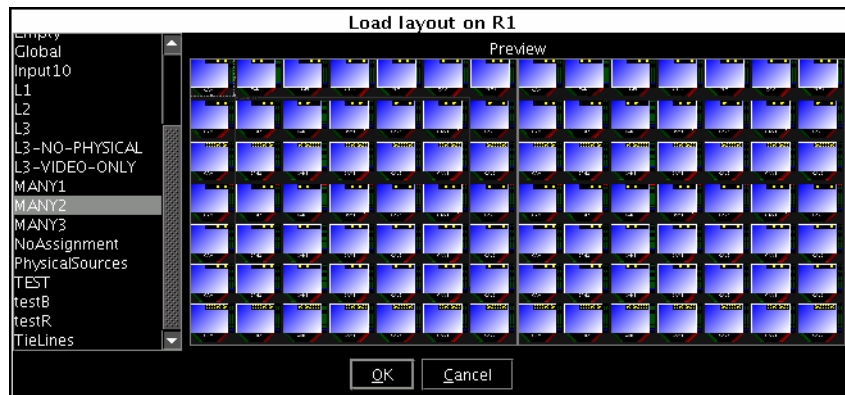

- 2 Select the layout you want to load, from the set of layouts defined for this room, and then click **OK**.

The new layout appears on the monitor wall.

Using Layouts Presets

To load a layout using the Kaleido-RCP2's preset buttons

- Press the appropriate preset button (1-10) on the Kaleido-RCP2.

The button you just pressed starts flashing (while the button associated with the currently loaded layout, if any, remains lit). Once the layout associated with the preset button for the current user appears on the monitor wall, the button stops flashing, and becomes lit (while the previously lit button is not lit anymore). See [Assigning Room Layouts to the Kaleido-RCP2 Preset buttons](#) on page 337, for more information.

Note: Once the preset button has stopped flashing on the Kaleido-RCP2, if the new layout has source assignments from an upstream router, it may still take a moment before these sources appear on the monitor wall.

Loading a Layout by Using the RCP-200

To load a layout on the monitor wall, by using the RCP-200

- 1 Touch LAYOUT SELECT on the RCP-200's right-hand screen.
The layout chooser view appears.
- 2 Rotate the TAKE knob to locate the layout you want to load, scrolling the list as needed.
- 3 Once you have selected the layout you want to load, press TAKE.
After a moment, the new layout appears on the monitor wall, and the RCP-200's right-hand screen returns to the ASSIGN CHANNEL panel.


Refreshing a Layout

To refresh a layout

- Right-click anywhere on the monitor wall, point to **Monitor wall** (if you clicked a layout element), and then click **Refresh** on the menu.

Operation of the Monitor Wall

Refreshing a Layout

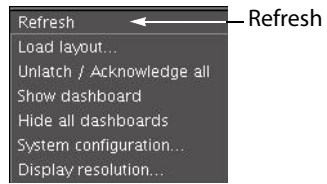

Displaying a Source in Full Screen Mode

To display a source in full screen mode from the Kaleido-RCP2

- 1 Move the pointer over the video source you want to display in full screen mode.
- 2 Press FULL SCREEN on the Kaleido-RCP2.

The full screen layout assigned to the current user is loaded into the full screen zone.

To display a source in full screen mode from the RCP-200

- 1 Touch the WALL MOUSE category if it is not already selected, and then move the pointer over the video source you want to display in full screen mode on the monitor wall.
- 2 If you have yet to assign the FULL SCREEN wall function to one of the programmable knobs, rotate the knob you want to program until FULL SCREEN is selected, and then press the knob.

FULL SCREEN appears above the programmed knob.

- 3 Press the FULL SCREEN knob.

The full screen layout assigned to the current user is loaded into the full screen zone.

To close the full screen view

- Move the pointer over the full screen zone, and then press FULL SCREEN again, on the Kaleido-RCP2 or RCP-200.

Note: A full screen layout can also be loaded by configuring actions in XEdit. See [Managing Layouts](#) on page 225, for information on creating a full screen layout, and see [Creating Actions](#), on page 321, for detailed instructions.

Changing a Source's Aspect Ratio

To change the aspect ratio using the Kaleido-RCP2

- Move the pointer over the video source whose aspect ratio you want to change, and then press ASPECT RATIO on the Kaleido-RCP2. Continue pressing ASPECT RATIO to alternate between the available aspect ratio options (4:3, 16:9, and possibly a third custom aspect ratio if one was defined in XEdit for the monitor).

To change the aspect ratio using the RCP-200

- 1 Touch the WALL MOUSE category if it is not already selected, and then move the pointer over the video source whose aspect ratio you want to change on the monitor wall.
- 2 If you have yet to assign the ASPECT RATIO wall function to one of the programmable knobs, rotate the knob you want to program until ASPECT RATIO is selected, and then press the knob.


ASPECT RATIO appears above the programmed knob.

- 3 Press the ASPECT RATIO knob.

The video source's aspect ratio changes. Continue pressing ASPECT RATIO to alternate between the available aspect ratio options (4:3, 16:9, and possibly a third custom aspect ratio if one was defined in XEdit for the monitor).

To change the aspect ratio using the mouse

- 1 Right-click the video source.
- 2 On the menu, point to **Aspect Ratio**, and then click **4:3** or **16:9**.

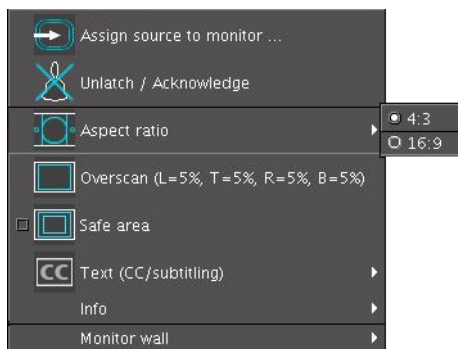

Note: There may be one more choice on the menu if you set a custom aspect ratio in XEdit, for this monitor. See [Setting a Video Monitor's Aspect Ratio](#) on page 250.

The video is resized accordingly within the layout.

Video Cropping/Zooming

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP X320 / X120	Kaleido-IP VM	KMX-3921 KMX-4921 KMX-4911
●	●	●	●		●

Notes

- The overscan margins are set to 5% by default. They can be customized in XEdit (see [Cropping Mode](#) on page 220).
- Kaleido-MX and Kaleido-Modular-X configured for 4K UHD output, and Kaleido-MX 4K do not support the *overscan mode* for video sources spanned across multiple heads (see [4K UHD Spanning](#) on page 224).
- Safe title area and aspect ratio markers follow the video signal (e.g., if the safe title area is within 5% of top, left, right and bottom, then when the video is in default overscan mode, the safe title area markers will not appear).
- The KMX-3921 and KMX-49N1 can only crop horizontally (width).

To toggle the cropping mode using the Kaleido-RCP2

- To change the current cropping mode, move the mouse pointer over the video source whose cropping mode you want to change, and then press the UNDERSCAN button on the Kaleido-RCP2. Continue pressing UNDERSCAN to alternate between underscan and overscan mode.

To toggle the cropping mode using the RCP-200

- 1 Touch the WALL MOUSE category if it is not already selected, and then move the pointer over the video source whose cropping mode you want to change on the monitor wall.
- 2 If you have yet to assign the UNDERSCAN wall function to one of the programmable knobs, rotate the knob you want to program until UNDERSCAN is selected, and then press the knob.

UNDERSCAN appears above the programmed knob.


- 3 Press the UNDERSCAN knob.

The video source's cropping mode changes. Continue pressing UNDERSCAN to alternate between underscan and overscan mode.


To toggle the cropping mode using the mouse

- Right-click the video source.

If the video is in underscan mode, then the menu will allow you to change to overscan.

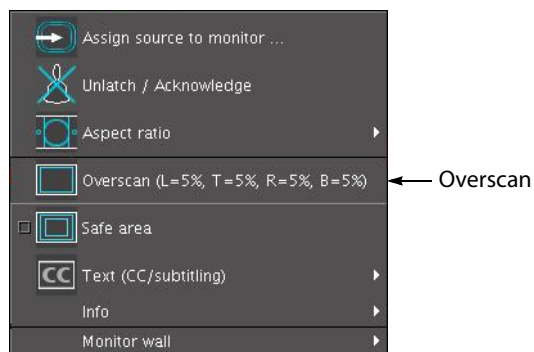

If the video is in overscan mode, then the menu will allow you to change to underscan.

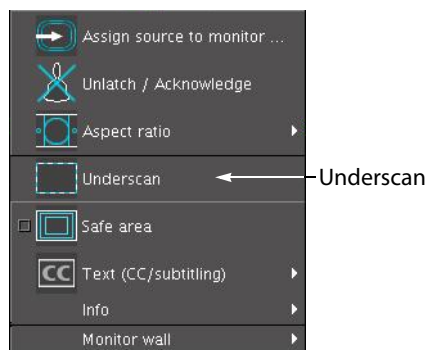

Toggling Safe Area Markers

To toggle the safe area markers on a video using the Kaleido-RCP2

- Move the pointer over the video source, and then press **SAFE AREA** on the Kaleido-RCP2. Continue pressing **SAFE AREA** to toggle the markers.

To toggle the safe area markers on a video using the RCP-200

- 1 Touch the **WALL MOUSE** category if it is not already selected, and then move the pointer over the video source whose cropping mode you want to change on the monitor wall.
- 2 If you have yet to assign the **SAFE AREA** wall function to one of the programmable knobs, rotate the knob you want to program until **SAFE AREA** is selected, and then press the knob.


SAFE AREA appears above the programmed knob.

- 3 Press the **SAFE AREA** knob.

The safe area markers appear inside the video window. Continue pressing **SAFE AREA** to toggle the markers.

To toggle the safe area markers on a video using the mouse

- 1 Right-click the video source, and then click **Safe Area** on the menu.

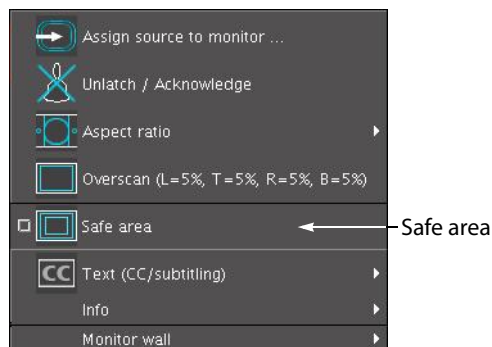

The safe area markers appear inside the video window.



- 2 Click **Safe Area** again on the menu, to hide the markers.

Displaying Subtitles and Closed Caption Text

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●		●	●	●


Notes

- Only the Kaleido-IP supports extraction of SCTE 27 subtitles, DVB subtitles, and DVB teletext.


Setting the Text Mode

To change the text mode for a video, or subtitling monitor

- 1 Right-click the appropriate video, or subtitling monitor, on the monitor wall.
- 2 If the current text mode indicator is **Text (CC/subtitling)**, then:
 - a Click **Enable text** on the menu, to first enable the display of subtitles and closed captions.

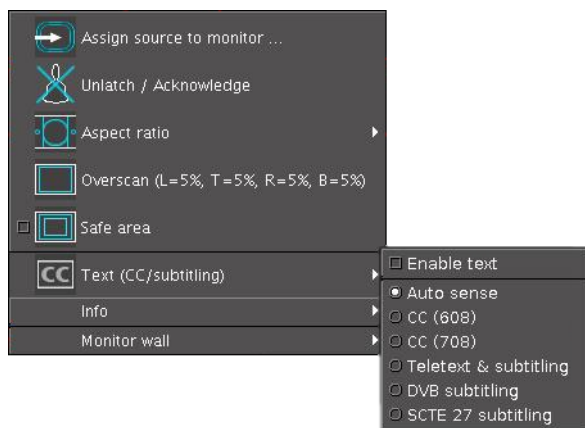

- b Right-click the monitor again.
- 3 On the menu, point to the text mode indicator —either **Text (CC/subtitling)**, **CC (608)**, **CC (708)**, **Teletext & subtitling**, **DVB subtitling**, or **SCTE 27 subtitling**, then point to **Text mode**, and click the text mode you want to apply.

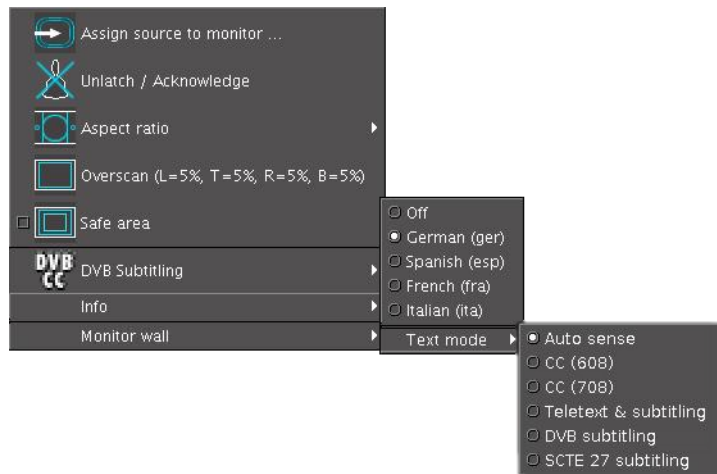


To prevent the menu from being too crowded by CC (608), CC (708), DVB subtitling, SCTE 27 subtitling, and Teletext/subtitling options, its content (label, icon and available choice) changes, depending on the current video format:

Signal type	Text Mode	Indicator	Label	Available choices
SD-SDI/CVBS 525, MPEG-2, H.264	Auto		CC (608)	Off, CC1, Text mode sub-menu
Any	CC (608)			
SD-SDI/CVBS 625, MPEG-2, H.264	Auto		Teletext & subtitling	For a Kaleido-IP: Off, Page A to Page H, Text mode sub-menu Other multiviewer models: Off, Page A, Edit pages, Text mode sub-menu
Any	Teletext & subtitling			
HD-SDI, MPEG-2, H.264	Auto		CC (708)	Off, Service 1 to Service 63, Text mode sub-menu
Any	CC (708)			
MPEG-2, H.264	Auto		DVB subtitling	Off, available language services, Text mode sub-menu
Any	DVB subtitling			
MPEG-2, H.264	Auto		SCTE 27 subtitling	Off, available language services, Text mode sub-menu
Any	SCTE 27 subtitling			
Other / Unknown	Auto		Text (CC/subtitling)	Enable text, Auto sense, CC (608), CC (708), Teletext & subtitling, DVB subtitling, SCTE 27 subtitling.

Switching Closed Captioning On/Off


To switch CC (608) closed captioning on/off

- Right-click the appropriate composite or video monitor on the monitor wall, point to **CC (608)**, and then click either **CC1** or **Off**.

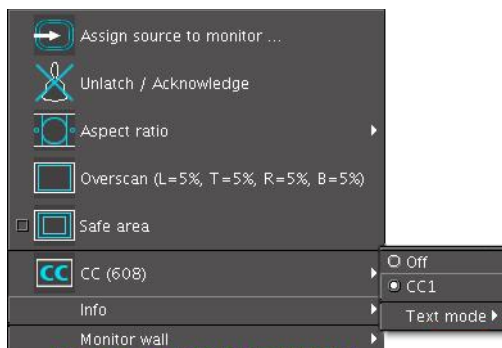

To switch CC (708) closed captioning on/off

- Right-click the appropriate composite or video monitor on the monitor wall, point to **CC (708)**, and then click either the appropriate service number or **Off**.

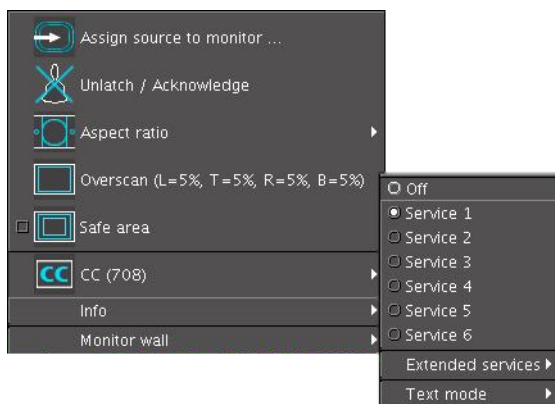


Note: The menu displays **Service 1** to **Service 6**. Use the **Extended services** sub-menu to select from the **Service 7** to **Service 63** range. When an extended service is enabled it is added to the menu below **Service 6**.

Setting the DVB Subtitling Language from the Monitor Wall

To set the decoded DVB subtitling language for a monitor on the wall

- Right-click the appropriate composite, video, or subtitling monitor, point to **DVB subtitling**, and then click the language you want to monitor.

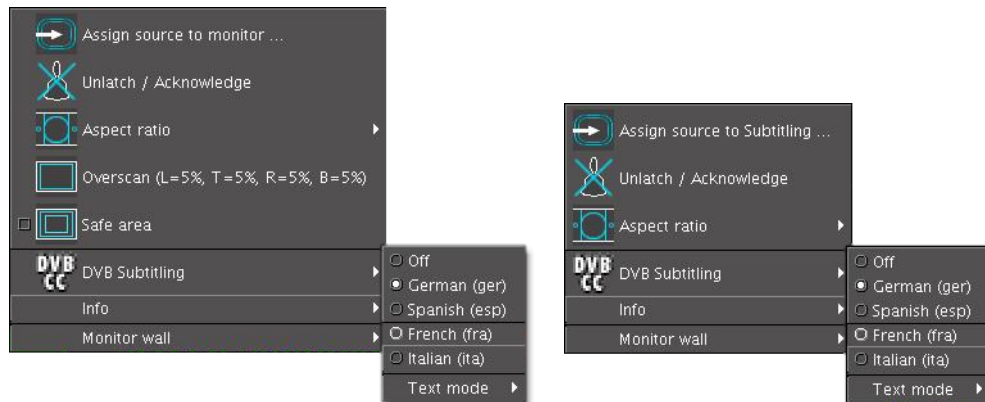

Note: When monitoring a program that includes DVB subtitling based on a non-supported version of ETSI EN 300 743, the Kaleido-IP raises the *DVB subtitle invalid* alarm and no subtitling appears on the monitor wall.

To switch DVB subtitling off

- Right-click the monitor, point to **DVB subtitling**, and then click **Off**.

Setting the SCTE 27 Subtitling Language from the Monitor Wall

To set the decoded SCTE 27 subtitling language for a monitor on the monitor wall

- Right-click the appropriate composite, video, or subtitling monitor, point to **SCTE 27 subtitling**, and then click the language you want to monitor.

To switch SCTE 27 subtitling off


- Right-click the monitor, point to **SCTE 27 subtitling**, and then click **Off**.

Selecting a Teletext/Subtitling Page from the Monitor Wall

To change the decoded teletext/subtitling page for a Kaleido-IP

- Right-click the appropriate composite or video monitor, point to **Teletext & Subtitling**, and then click the page you want to decode on the menu.


The menu displays **Page A (###)** to **Page H (###)** where “###” is the number of the actual page being monitored (from 100 to 899), or the word *Disabled* (if the page number associated with this page is not to be monitored).

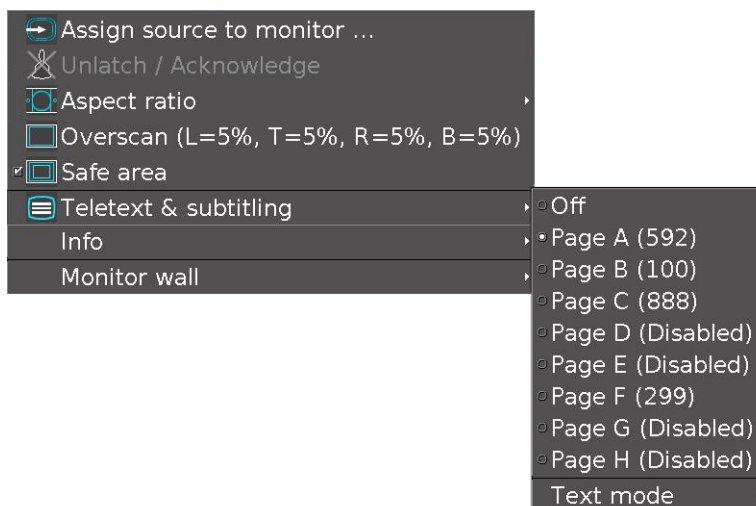

The assignments of Page A to Page H are configured in XEdit.

To change the decoded teletext/subtitling page for a Kaleido-X, Kaleido-X16, KMX-3921, KMX-49N1, Kaleido-MX, Kaleido-MX 4K, or Kaleido-Modular-X

- Right-click the appropriate composite or video monitor, point to **Teletext & Subtitling**, and then click **Page A ([page number])** on the menu.

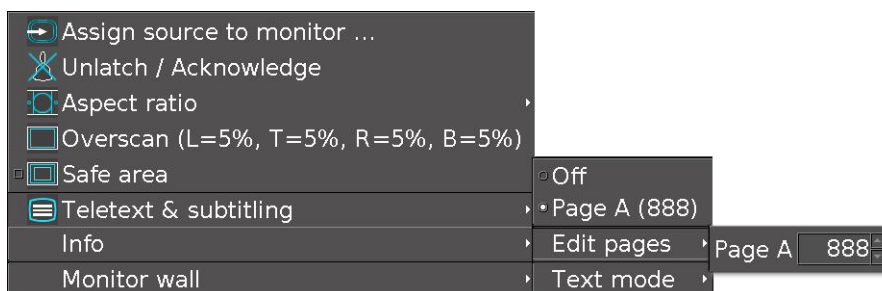

The menu displays **Page A (###)** where “###” is the number of the actual page being monitored (from 100 to 899).

It is possible to change the assignment using the **Edit pages** sub-menu. This menu allows you to configure the page selection for the current input.

To switch teletext/subtitling off


- Right-click the monitor, point to **Teletext & Subtitling**, and then click **Off**.

Editing UMD Text

Note: Only UMDs configured to show static text are editable on the monitor wall.

To edit the text on a UMD

- 1 Right-click the UMD whose text label you want to modify, and then click **Edit text** on the menu.

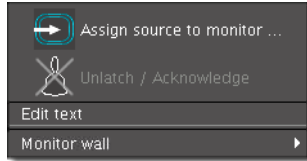

The UMD text area becomes editable.



- 2 Type the new text, and then press ENTER on the Kaleido-RCP2, RCP-200, or external keyboard.

The UMD displays the new text.



Selecting an Input Method

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD	Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
●	●		●	●	●

Note: In the case of a KMX-3901/3911 multiviewer, the current version of the Kaleido Software does not support input methods on the monitor wall. As a workaround, use XEdit, open the layout that contains the text you want to modify (e.g., static UMD text, logical source text level), and then use the appropriate input method from your client PC.

To select an input method

- 1 Click the appropriate composite or video monitor on the monitor wall.
- 2 Press left Alt+Shift+1 on the external keyboard.
The **Select Input Method** menu appears.
- 3 On the **Select Input Method** menu, click the appropriate input method.



You can now type text in your language of choice, using an external keyboard connected to the Kaleido-RCP2.

Assigning Sources to Monitors

Any monitor in a layout can be assigned a logical source in XEdit. It is possible to change the logical source assignment directly on the monitor wall.


Note: Logical source assignments can also be changed by configuring actions in XEdit. See [Creating Actions](#) on page 321 for more information.

Assigning a Logical Source to a Monitor by Using the Kaleido-RCP2

To assign a logical source to a monitor, by using the Kaleido-RCP2's CHANNEL button


- 1 Move the pointer over the monitor that is to be assigned a logical source, and then press CHANNEL on the Kaleido-RCP2.

The **Assign Source** window appears.

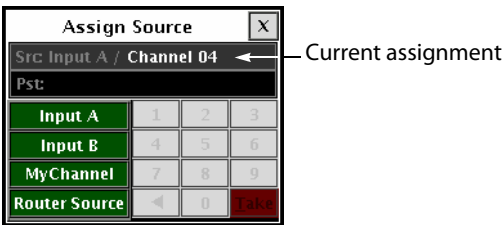

The label of each category/index button in **Assign Source** is based on recurring strings found in the logical source names available for your system. The **Src** box shows the current assignment.

- 2 Click through the categories until the **Pst** box shows the logical source you want to assign to the selected monitor. For example, if you want to assign the logical source named "/Input B/Channel 16" to the monitor, click **Input B**, **1**, and then **6**.

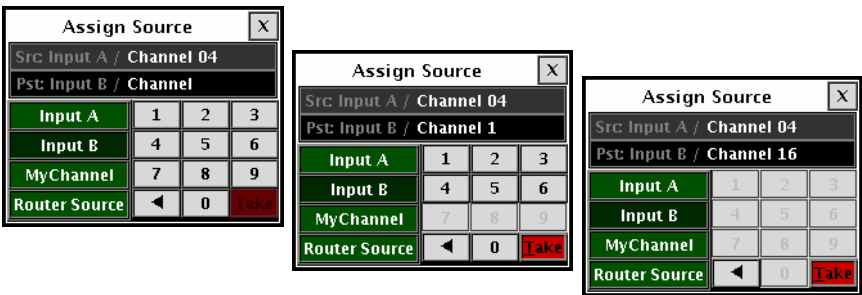

- 3 Click **Take**.
The selected logical source is now assigned to the monitor.
- 4 Click the x button to close the **Assign Source** window.

Assigning a Logical Source to a Monitor by Using the RCP-200

Although logical source assignments can be accomplished through the CHANNEL monitor wall function (see [page 502](#)), you may find the RCP-200's category/index router view more convenient. To use the RCP-200's category/index panel, your multiviewer system must have been configured to be controlled as a router. In a layout, the RCP-200 can only control monitors that have been assigned a monitor wall destination.

To assign a logical source to a monitor, by using the RCP-200's Category/Index panel

- 1 Select the appropriate head from the room view, by rotating the HEAD knob (or by touching the DISPLAY SELECT category, and then touching a room display), if needed.
- 2 Touch the monitor whose source assignment you want to change.

The monitor's border turns yellow, indicating that this monitor is a monitor wall destination, and the RCP-200's category/index panel appears on the left-hand screen.

The label of each category/index button is based on recurring strings found in the logical source names available for your system. The **Src** and **Dst** areas show the current source assignment and the monitor wall destination number for the selected monitor.

- 3 Touch through the categories until the **Pst** area shows the logical source you want to assign to the selected monitor. For example, if you want to assign the logical source named "/Input B/Channel 16" to the monitor, touch **Input B**, **1**, and then **6**.
- 4 Press **Take**.

The selected logical source is now assigned to the monitor.


To assign a logical source to a monitor, by using the RCP-200's CHANNEL knob

- 1 Touch the WALL MOUSE category if it is not already selected, and then move the pointer over the composite or video monitor whose source assignment you want to change.
- 2 If you have yet to assign the CHANNEL wall function to one of the programmable knobs, rotate the knob you want to program until CHANNEL is selected, and then press the knob.

CHANNEL appears above the programmed knob.


- 3 Press the CHANNEL knob.

The **Assign Source** window appears on the monitor wall.

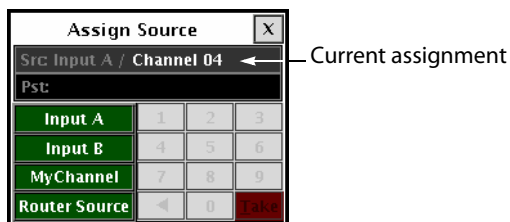

The label of each category/index button in **Assign Source** is based on recurring strings found in the logical source names available for your system. The **Src** box shows the current assignment.

- 4 Click through the categories until the **Pst** box shows the logical source you want to assign to the selected monitor. For example, if you want to assign the logical source named "/Input B/Channel 16" to the monitor, click **Input B**, **1**, and then **6**.

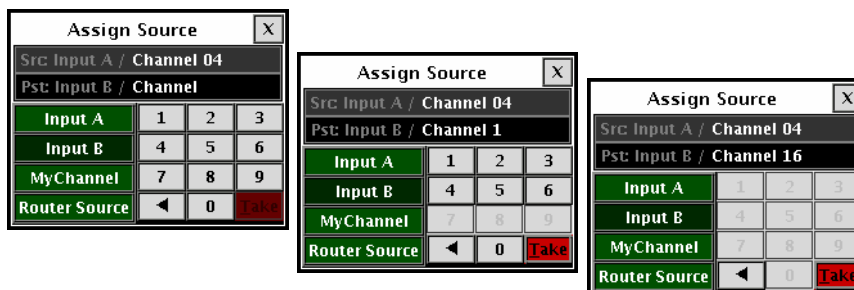

5 Click **Take**.


The selected logical source is now assigned to the monitor.

6 Click the x button to close the **Assign Source** window.


Assigning a Logical Source to a Monitor by Using the Mouse

To assign a logical source to a monitor, by using the mouse

- 1 Right-click the monitor that is to be assigned a logical source.
- 2 On the menu, point to **Assign source to [component]** (where [component] will be **monitor**, **video**, **UMD**, **tally**, **audio meter**, **status alarm**, **time code**, **metadata display**, **subtitling**, or **clock**, depending on the monitor you clicked).

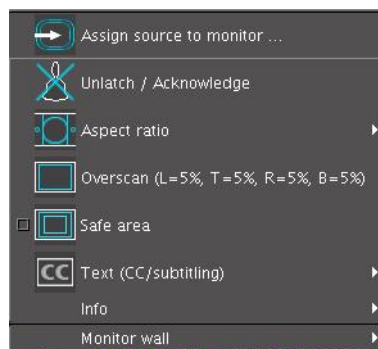


The **Assign Source** window appears.

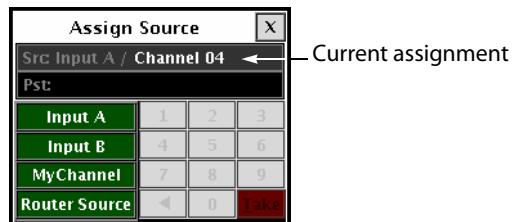

The label of each category/index button in **Assign Source** is based on recurring strings found in the logical source names available for your system. The **Src** box shows the current assignment.

- 3 Click through the categories until the **Pst** box shows the logical source you want to assign to the selected monitor. For example, if you want to assign the logical source named "/Input B/Channel 16" to the monitor, click **Input B**, **1**, and then **6**.

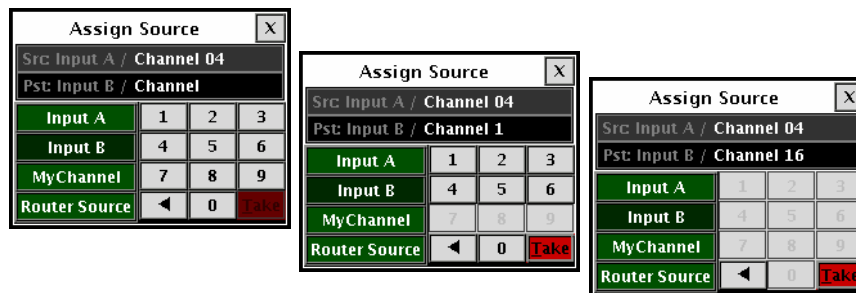

4 Click **Take**.

The selected logical source is now assigned to the monitor.

- 5 Click the × button to close the **Assign Source** window.

Changing Crosspoints

Changing Logical Sources Assignments on a Kaleido-X Configured as a Router

To change a monitor's source assignment by using a router control device or application

- Apply a crosspoint change to route a logical source to the video monitor whose source assignment you want to change on the monitor wall, in the same way you would do for any router controlled by the device or application you have.

The video from the first video level assignment within the selected logical source appears in the video window.


When the current layout is reloaded, either of the following two situations may apply.

- **No logical source:** If there was no logical source associated with the monitor, then the multiviewer will remember the new source assignment.
- **Not a monitor wall destination:** If the monitor was not already configured as a monitor wall destination, then the layout will be reloaded in its initial state, as it was configured in XEdit.

Viewing Assignment Information

To view the current assignment information for a video monitor

- Right-click the video monitor, and then point to **Info** on the menu.

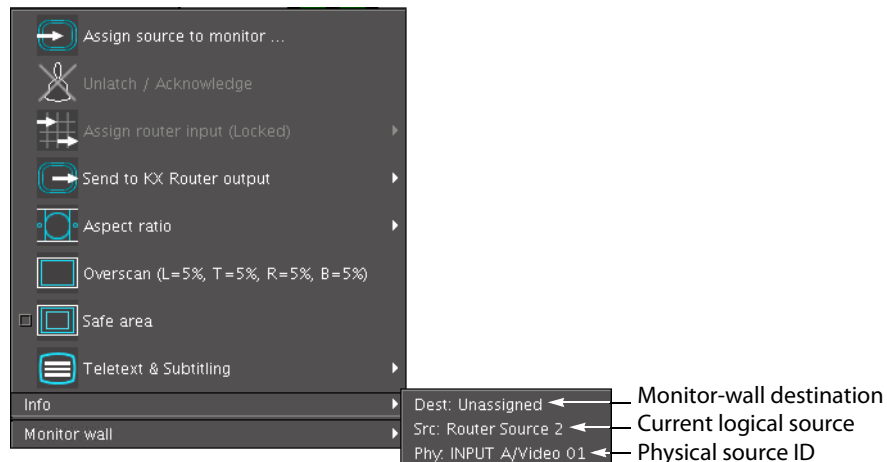

The following information appears, as a submenu:

Dest	Name associated with this monitor when considered as a destination in the context of the <i>KX Router</i> logical router
Src	Name of the logical source currently assigned to this monitor.
Phy	Identifier associated with the physical multiviewer input providing the current signal to this monitor.

Notes

- In the case of a Kaleido-IP, the physical input information (**Phy**) is not relevant.
 - The information shown is not dynamic. To view the latest information, close the menu, and then open it again.
 - The physical input information (Phy) indicates “Unassigned” when there are no logical source assigned to the monitor, or when the current logical source does not include any video level.
 - The physical input information (Phy) may indicate “Unresolved” in situations such as the following:
 - the router that provides the current source to the multiviewer is not configured properly;
 - the router interconnections are not configured properly;
 - there is no communication between the router and the multiviewer;
 - an input card was removed (in the case of a Kaleido-X, Kaleido-MX, or Kaleido-MX 4K multiviewer model);
 - there are not enough multiviewer inputs connected to the router to handle all the signals being routed to monitor wall destinations.
-

Changing an Internal Router Crosspoint

This feature applies to:


Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X 4RU	Kaleido-X 7RU & 14RU Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
			●		

Notes

- This feature is only available on Kaleido-X (7RU), Kaleido-X (14RU), and Kaleido-X16 multiviewers, with the *SDI Router Output* option, and whose internal router is properly configured within the first level of the *KX Router* logical router. See [Configuring a Multiviewer's Internal Router](#) on page 390 for more details.
 - In the case of a Kaleido-X (14RU) expansion system, to be able to send a video signal to a router output on either frame, the internal routers must be connected by expansion cables, and router expansion must have been properly configured in XEdit. Refer to “Configuring Router Card Expansion” in the Kaleido-X (7RU) Installation & Service Manual, for more information. See [Related Documentation](#), on page 13.
-

To change a crosspoint in the internal router

- 1 Right-click the appropriate composite or video monitor on the monitor wall.
- 2 On the menu, point to **Send to [router] output** (where [router] will be the name of the first logical router mapped to your multiviewer's router outputs), navigate to the appropriate logical output, and then select it.

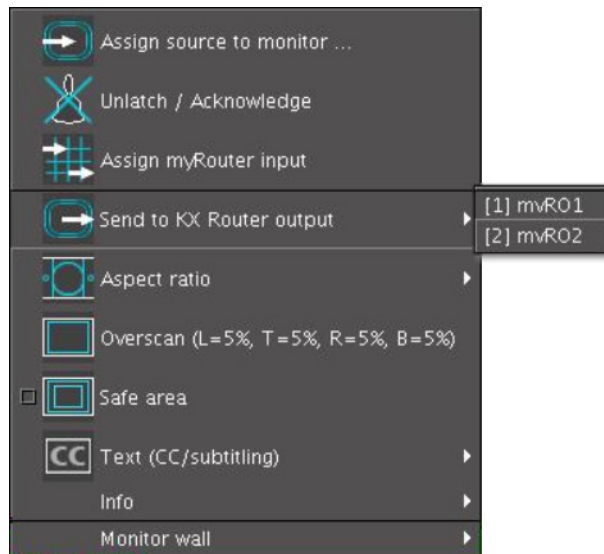


The source signal displayed on the monitor is routed to the selected destination.

Changing an External Router Crosspoint

To change an external router crosspoint


- 1 Right-click a composite or video monitor on the monitor wall.
- 2 On the menu click **Assign [router] input**.

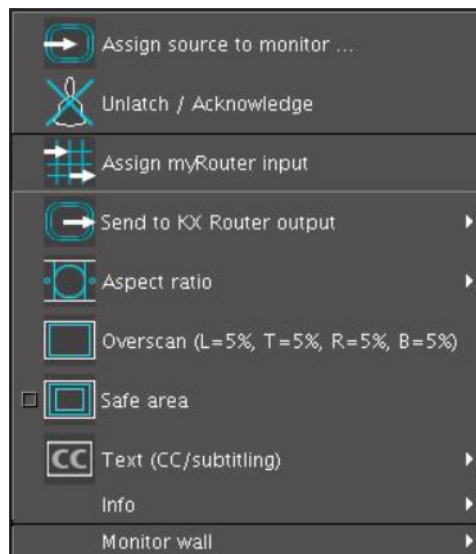


Note: In **Assign [router] input**, *[router]* will be the name of the logical router associated with the physical router output that is connected to the multiviewer input currently feeding the monitor (see [Configuring Router Connections](#) on page 398).

The **Assign Router Input** window appears.

The label of each category/index button in **Assign Router Input** is based on recurring strings found in the router source labels available to your system. The **Src** box shows the current assignment.

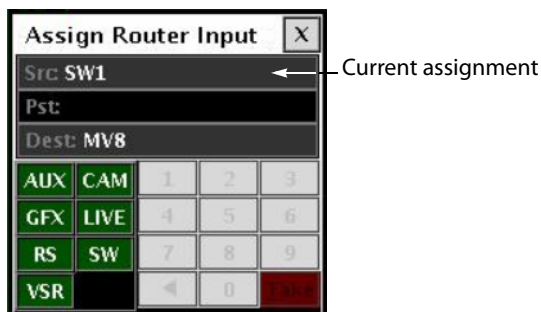

- 3 Click through the categories until the **Pst** box shows the router source you want to assign to the selected monitor.
- For example, if you want to assign the router source named "AUX2" to the monitor, click **AUX**, and then 2.

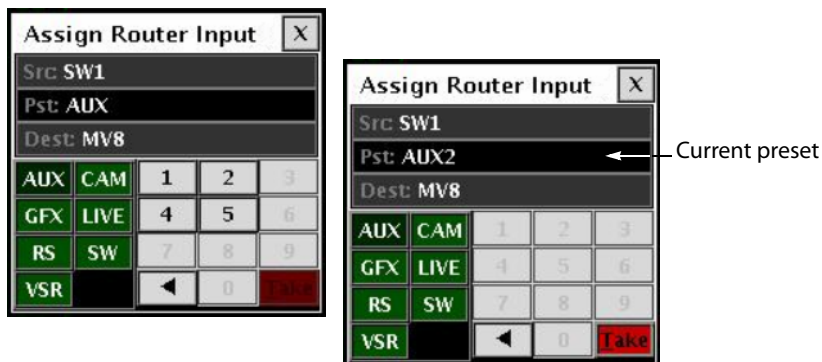

- 4 Click **Take**.
- The multiviewer requests the specified source signal from the router, and assigns it to the monitor.

Notes


- The **Assign Router Input** category/index panel does not support duplicate names for the router sources. When using the panel to assign a router source to a monitor, if multiple router sources have the same name, only the source with the highest index number is available.
Workaround: Update the configuration of your router, or router control system, so that every router source has a unique name. Alternatively, override the source labels for the appropriate physical router level in XEdit's **Router Configurations** tab.
 - What you see on the monitor wall is not a list of physical inputs, but of logical inputs (labels). Once you have established your configuration in XEdit, you always work with logical devices/levels.
-

- 5 Click the x button to close the **Assign Router Input** window.

Using Timers

Timers can be assigned to timer monitors in a layout. Any user can control such timers by using the timer monitor's buttons and menu. An RCP user can be assigned a specific timer. This allows using the numeric keypad on an external keyboard connected to the Kaleido-RCP2 to control the timer.

Controlling a Timer by Using the Timer Monitor's Buttons and the Menu

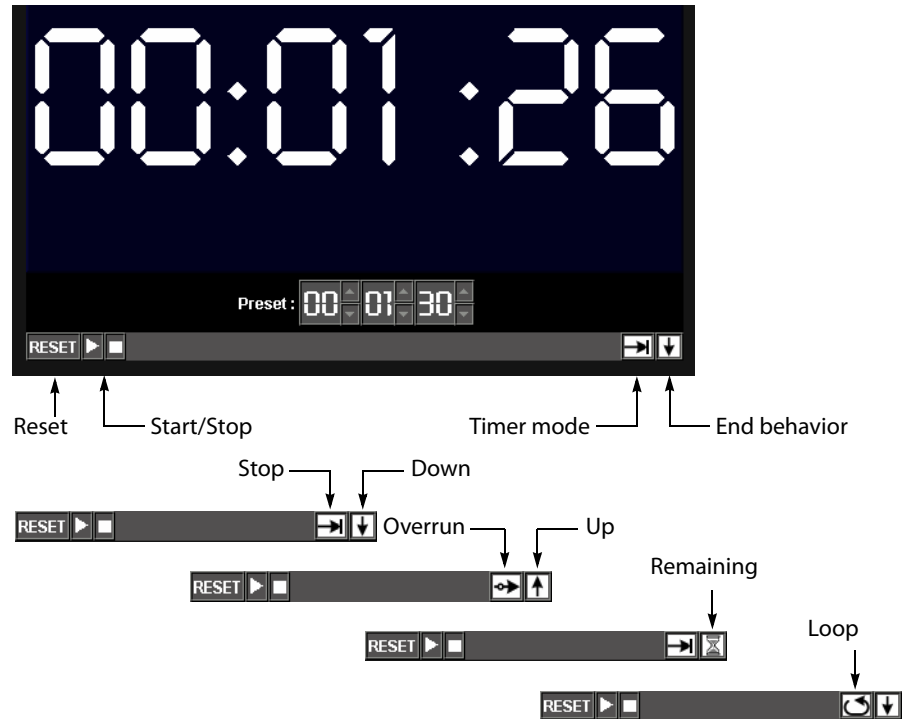


Notes


- Timer monitors display time in HH:MM:SS format. Even if the monitor is synchronized with an LTC source, frame count is not displayed.
- Using a timer monitor's **Reset**, **Timer mode** or **End behavior** buttons will stop the timer, if it was running.

To configure an interactive timer monitor on the monitor wall

- 1 Right-click the timer you want to configure.

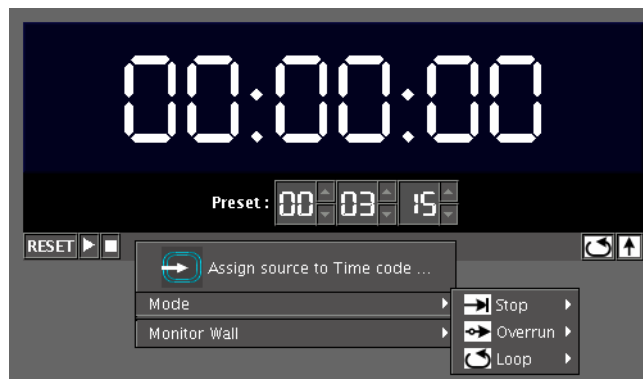


- 2 On the menu, point to **Mode**, navigate to the appropriate timer mode, and then click an end behavior.

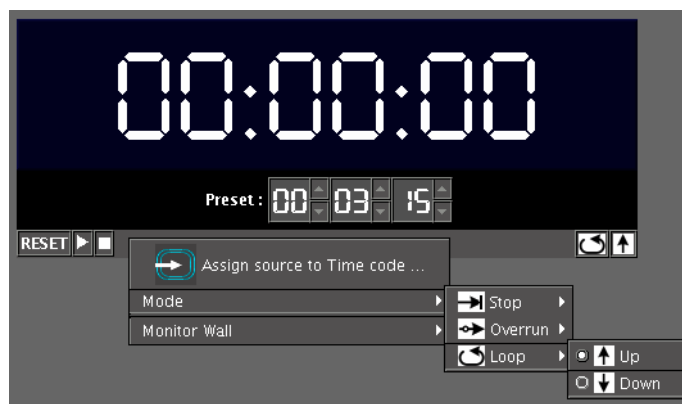


Alternatively, you can set the mode and behavior directly, by clicking the timer monitor's **Timer mode**, and **End behavior** buttons:

- Click the **Timer mode** button to select one of three modes: **Overrun**, **Stop** or **Loop**.
- Click the **End behavior** button to select one of three modes: **Down**, **Up** or **Remaining**.


The timer monitor is updated accordingly.

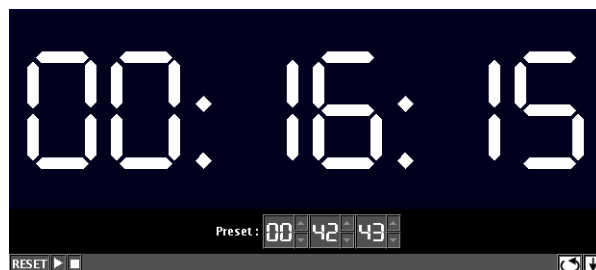

- 3 Use the **Preset** controls to set a new preset time.

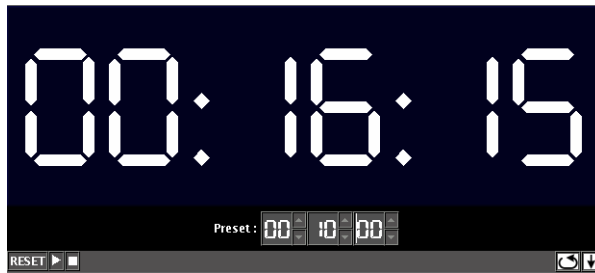

- 4 Click the **Reset** button to reset the timer to its initial value (based on timer mode and preset time).

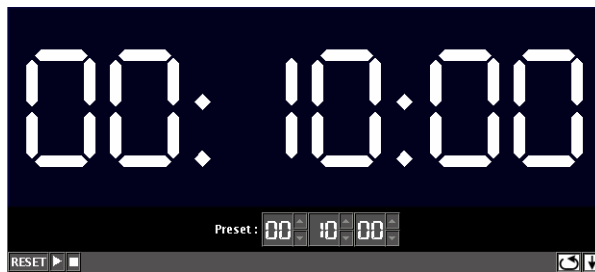

- 5 Click the **Start** button to start the timer.



Controlling a Timer by Using an External Numeric Keypad

If a timer is assigned to the current RCP user, or else if a timer is assigned by default for the room, then the external keyboard's numeric keypad controls this specific timer.

Note: The reserved keys are always enabled, whether Num Lock is set or not.

To configure your assigned timer, by using a numeric keypad

- Press the slash key ("/") to set the timer mode and end behavior. Keep pressing the key to cycle through all the available options, until the buttons show the appropriate settings.
- Press the plus key ("+") to reset the timer. (This will also stop the timer if it was running.)
- Press the Enter key to start/pause the timer.
- Use the number keys to set or modify the preset time.

Triggering Actions

Notes

- An Action's trigger is determined when the Action is created in XEdit. See [Creating Actions](#) on page 321 for more information.
 - To create background actions that can be triggered from the RCP-200's programmable knobs, see [Creating an Action that can be Triggered through a Gateway Command](#), on page 330.
-

Triggering an Action from the RCP-200

To trigger a background action from the RCP-200's programmable knobs

- 1 If you have yet to assign the action you want to trigger to one of the programmable knobs, rotate the knob you want to program until the action is selected, and then press the knob.

The action's name appears above the programmed knob.

- 2 Press the knob to trigger the action.

Triggering an Action from the Monitor Wall

To trigger a monitor wall action

- 1 Move the pointer over a monitor associated with the action you want to trigger.
The pointer changes to a hand icon.
- 2 If the action is not triggered automatically, click or double-click the monitor.

Triggering GPI Output Events

This feature applies to:

Kaleido-MX Series Kaleido-Modular-X	Kaleido-XQUAD Kaleido-Modular	Kaleido-X Kaleido-X16	Kaleido-IP Series	KMX-3921 KMX-4921 KMX-4911
	●	●		

To trigger a GPI output event

- 1 In XEdit, configure the appropriate GPI line's direction as an output (system calibration).
- 2 Create an action to toggle the GPI output on/off state, and assign it to a monitor.
- 3 Export the database to the multiviewer.
- 4 Trigger the action by clicking the monitor.

The GPI line's state changes.

Note: GPI lines configured as outputs can have their state set manually for test purposes in XEdit's **System** tab:

The screenshot shows the 'System' tab in XEdit with the following settings:

- Calibration** (expanded):
 - GPI direction: output (dropdown menu)
 - GPI output: OFF (dropdown menu)
- SNMP** (expanded):
 - Trap enabled: ON (dropdown menu)
- Logging** (expanded):
 - Logging enabled: ☐ (checkbox)

Each configuration row has an 'Apply to all' button to the right.

Acknowledging Alarms

Acknowledging Alarms on the Monitor Wall

To acknowledge an alarm, by using the Kaleido-RCP2

- Move the pointer over the monitor whose alarm state you want to acknowledge, and then press the UNLATCH STATUS button on the Kaleido-RCP2.

To acknowledge an alarm, by using the RCP-200


- 1 Touch the WALL MOUSE category if it is not already selected, and then move the pointer over the monitor whose alarm state you want to acknowledge on the monitor wall.
- 2 If you have yet to assign the UNLATCH STAT wall function to one of the programmable knobs, rotate the knob you want to program until UNLATCH STAT is selected, and then press the knob.

UNLATCH STAT appears above the programmed knob.

- 3 Press the UNLATCH STAT knob.


To acknowledge an alarm, by using the mouse

- Right-click the monitor whose alarm state you want to acknowledge, and then click **Unlatch/Acknowledge** on the menu.

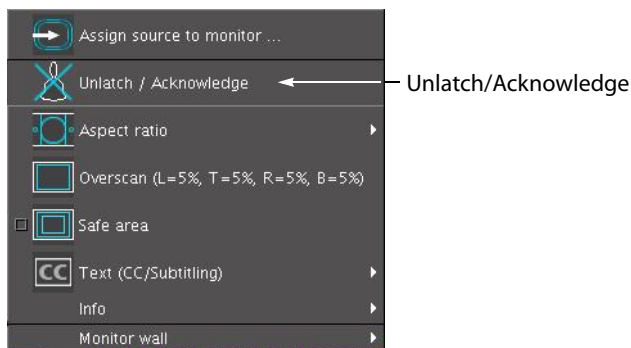

To acknowledge all current alarms in a room

- Right-click the monitor wall, point to **Monitor wall** (if you clicked a monitor), and then click **Unlatch/Acknowledge all** on the menu.

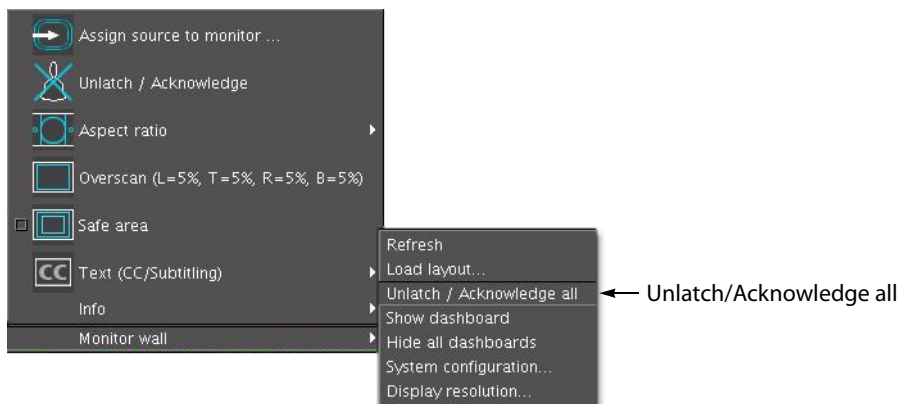

This will acknowledge every alarm monitored *in the current room*.

Acknowledging Alarms by Using an Action

To acknowledge alarms, by using an action

- Create a *Unlatch/Acknowledge all* action. This action can be assigned to a monitor on the monitor wall, it can be triggered by loading or unloading a layout, or it can be a background action. See [Creating Actions](#) on page 321 for details.

Monitoring Audio

Notes

- Before connecting a display to a **Kaleido-IP** multiviewer, make sure the multiviewer is powered off. In the event that you have connected such a device while the multiviewer is running, you must restart the multiviewer for audio monitoring to be functional. See **Restarting and Shutting Down a Kaleido-IP Multiviewer** in the multiviewer's *Installation & Service Manual* for how to do this.
 - **KMV-3911 cascade** systems do not support audio monitoring at the *SDI* monitoring output. As a workaround, you could convert the cascade system's HDMI output to SDI, by using an ADVC G1 converter. This will make the audio from the HDMI output available for monitoring.
-

Triggering Audio Monitoring by Using the mouse, the RCP-200, or the Kaleido-RCP2

Notes

- All audio and video monitors are configured by default, with a *Monitor audio* action triggered by a single click.
 - If you have yet to assign the AUDIO MONITOR wall function to one of the RCP-200's programmable knobs, rotate the knob you want to program until AUDIO MONITOR is selected, and then press the knob. AUDIO MONITOR appears above the programmed knob.
-

To trigger audio monitoring, by using the mouse, the RCP-200, or the Kaleido-RCP2

- Move the pointer over an audio monitor, and then
 - click the monitor
 - press AUDIO MONITORING on the Kaleido-RCP2
 - press the AUDIO MONITOR programmable knob on the RCP-200

This will route *the monitor's audio source* to the monitoring output assigned to the current RCP user.


- Move the pointer over a video monitor, and then
 - click the monitor
 - press AUDIO MONITORING on the Kaleido-RCP2
 - press the AUDIO MONITOR programmable knob on the RCP-200

This will route *the specific audio level associated with the video monitor*, based on the assigned logical source.

- Move the pointer over any other monitor, and then
 - click the monitor
 - press AUDIO MONITORING on the Kaleido-RCP2
 - press the AUDIO MONITOR programmable knob on the RCP-200

This will route *the first audio level of the associated logical source* to the monitoring output.

Audio monitors that have an audio monitoring indicator (see [Configuring Audio Monitors](#) on page 265) and that are currently assigned the same audio level, will turn the color associated with the current display (see [Calibrating the Audio Monitoring Color](#) on page 154), showing that is being sent to an audio monitoring output.

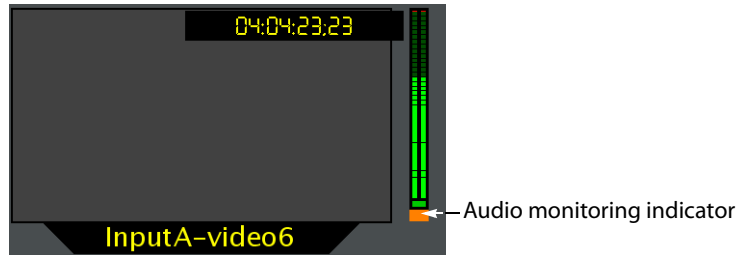

If multiple users are listening to the same audio source at the same time, then the indicator will show one color only: (1) the color associated with a display in the same room (2) the color associated with the display at the monitoring output that was enabled last in the room.

Controlling the Volume at the Audio Monitoring Output

Note: The Kaleido-RCP2's **volume control**, **Mute**, and **-20dB** buttons, their equivalent on the RCP-200, and the corresponding Gateway commands apply to *analog* audio monitoring outputs (where available). In the case of a **Kaleido-X**, or **Kaleido-X16** multiviewer, the **Mute** button (and its equivalents) applies to *digital* (AES, HDMI, or SDI) audio outputs as well. See [Audio Monitoring](#) on page 479, for more details.

Controlling the volume from the Kaleido-RCP2

To control the volume at the audio monitoring output, from the Kaleido-RCP2

- Adjust the audio volume for your assigned monitoring output by using the up and down volume buttons on the Kaleido-RCP2.
- Mute the audio by pressing the Mute button on the Kaleido-RCP2.
- Attenuate the volume by 20 dB by pressing the -20 dB button on the Kaleido-RCP2.

Controlling the volume from the RCP-200

On the RCP-200, pressing the VOL knob repeatedly alternates between the normal, mute, and -20 dB audio output mode.

To control the volume at the audio monitoring output, from the RCP-200

- Adjust the audio volume for your assigned monitoring output by rotating the VOL knob.
- Mute the audio by pressing the VOL knob until MUTE appears above the knob.
- Attenuate the volume by 20 dB by pressing the VOL knob until -20 dB appears above the knob.

15

Maintenance & Troubleshooting

Introduction

This chapter shows you the various maintenance operations and corrective actions that maybe required to be performed when configuring the multiviewer system and over the multiviewer's lifetime.

Troubleshooting Common Issues

Troubleshooting consists of identifying common configuration errors and to provide solutions to these issues. Use the following troubleshooting table to diagnose common issues and take corrective actions to restore operation.

Symptom	Probable cause	Test	Corrective action
Mosaic layout is scrambled and has ghost images.	Head is assigned to two rooms.	Using XEdit, verify that each head is assigned only once.	In XEdit's room configuration pane, remove the extra displays or assign them to another system if the multiviewer is clustered. See Adding Displays , on page 197.

abc

Acronyms Used in this Document

The acronyms used in this document are defined in the following table.

Acronym	Definition
ABT	Audio Bridge Terminal
ACOS	Mnemonic, tally and control of crosspoints
AES	Audio Engineering Society, specifically the AES3 standard
AFD	Active Format Description
AFD VI	AFD Video Index
ALM	Audio Level Meter
APS	Analogue Protection System
ARIB	Association of Radio Industry and Businesses
ASB	Analog Source Bit
ASCII	American Standard Code for Information Interchange
ASM	Any-Source Multicast
ATC	Ancillary Time Code
ATSC	Advanced Television Systems Committee
AUX	Axillary
AV	Audio-Video
BNC	Bayonet Neill–Concelman
CAD	Content Advisory Descriptor
CBR	Constant Bit Rate
CC	Closed Caption
CEA	Consumer Electronics Association
CGMS-A	Copy Generation Management System - Analog
CPU	Central Processing Unit
CSV	Comma Separated Values
CVBS	Composite Video and Blanking Signal
dBFS	Decibels Full Scale
dBu	A logarithmic voltage ratio with a reference voltage of 0.7746 volt = 0 dBu
DCII	Digicipher 2
DE-9	9-pin serial port connector
DHCP	Dynamic Host Configuration Protocol

Acronym	Definition
DIN	Deutsches Institut für Normung / German Institute for Standardization
DNS	Domain Name System
DPI	Digital Program Insertion
DTMF	Dual-Tone Multi-Frequency signaling
DTVCC	Digital Television Closed Captioning
DVB	Digital Video Broadcasting
DVI	Digital Visual Interface
EBU	European Broadcasting Union
EDID	Extended Display Identification Data
eDPM	expansion Digital Picture Manipulator
ETH	Ethernet
ETS	European Telecommunication Standard
ETSI	European Telecommunications Standards Institute
GB	GigaBytes
GENLOCK	Generator Locking
GPI	General Purpose Interface
GPIO	General-Purpose Input/Output
GPU	Graphics Processing Unit
GSM	General Status Manager
GUI	Graphical user interface
HD	High Definition
HD-SDI	High Definition-Serial Digital Interface
HDMI	High-Definition Multimedia Interface
HDR	High Dynamic Range
HLG	Hybrid Log-Gamma (BT.2100)
HLS	HTTP Live Streaming
HTTP	Hypertext Transfer Protocol
HTTPS	HTTP Secure
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronics Engineers
IP	Internet Protocol
IRE	Institute of Radio Engineers
ISO	International Standards Organization
ITU	International Telecommunication Union
KMV	Kaleido Multiviewer

Acronym	Definition
KX	Kaleido-X
LAN	Local Area Network
LAP	Look Ahead Preview
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LEQ	A-weighted LEQ
LKFS	Loudness, K-weighted, relative to Full Scale
LTC	Linear Time Code
LUFS	Loudness Units relative to Full Scale
LUT	Look Up Table (also known as <i>Look Profiles</i>)
MIB	Management Information Base
MIDI	Musical Instrument Digital Interface
MPEG	Moving Picture Experts Group
MPEG ID	MPEG stream Identifier
msec	millisecond
mV	milliVolt
NIC	Network Interface Card
NMOS	Networked Media Open Specifications
NMS	Network Management System
NTP	Network Time Protocol
NTSC	National Television System Committee
NTSC-J	National Television System Committee-Japan
OLED	Organic LED
PAL	Phase Alternating Line
PAT	Program Association Table
PCM	Pulse-code modulation
PCR	Primary Clock Reference
PGM	Program
PID	Packet Identifier
PMT	Program Map Table
PQ	Perceptual Quantizer (SMPTE ST 2084)
PST	Preset
PSU	Power Supply Unit
PTS	Presentation Time Stamp
PVW	Preview

Acronym	Definition
RAM	Random Access Memory
RCP	Remote Control Panel
RDD	Registered Disclosure Document
Rec.2020 BT.2020	The standard for Ultra-high-definition television (ITU-R BT.2020)
Rec.709 BT.709 709 Standard	The standard for high-definition television (ITU-R BT.709)
REST	Representational State Transfer
RGB	Red Blue Green, or a VGA connection
RMI	Remote Method Invocation
RTMP	Real-Time Messaging Protocol
RTP	Real-time Transport Protocol
RTSP	Real Time Streaming Protocol
RU	Rack Unit
SCTE	Society of Cable Telecommunications Engineers
SD	Standard Definition
SDI	Serial Digital Interface
SDR	Standard Dynamic Range, Rec.709 (BT.709), as opposed to HDR
SECAM	Séquentiel couleur à mémoire / Sequential Color with Memory
SFM	Source-Filtered Multicast
SFP	Small Form-factor Pluggable
S-Gamut3	One of Sony's gamma curves for WCG
S-Log3	One of Sony's transfer function curves for HDR
SMPTE	Society of Motion Picture & Television Engineers
SMTP	Simple Mail Transfer Protocol
SNMP	Simple Network Management Protocol
SPT	Studio Production Timer
SSH	Secure Shell
SSM	Source-Specific Multicast
TCP	Transmission Control Protocol
TS	Transport Stream
TSID	MPEG Transport Stream identifier
TTF	True Type Font
UDP	User Datagram Protocol
UHD	Ultra-High Definition

Acronym	Definition
UMD	Under Monitor Display
URL	Uniform Resource Locator
URS	Universal Reference Signal
USB	Universal Serial Bus
UTF	Unicode Transformation Format
VANC	Vertical Ancillary Data
VESA	Video Electronics Standards Association
VGA	Video Graphics Array connector, a 640×480 screen resolution, or the DE-15 connector.
VITC	Vertical Interval of an analog signal
VLAN	Virtual Local Area Network
VPE	Video Processing Engine
VU	Volume Units
WCG	Wide Color Gamut
WSS	Wide screen signaling
WST	World System Teletext
XDS	Extended Data Services
XLS XLSX	Microsoft Office spreadsheet file format
ZIP	Lossless file compression format

index

Index

0–9

0 VU 131–132
 3D monitoring 95
 4K 191, 193, 224

A

AC-3 metadata 168
 Access control
 XEdit 34
 Actions
 assigned to monitors 324
 background actions 327
 configuration 321
 trigger 322, 512
 trigger audio monitoring 515–516
 AFD
 about 219
 configuration 256
 Alarm monitors
 about 218
 configuration 290
 Alarms
 about 159
 browser 160
 debouncing, about 111
 debouncing, configuration 121
 global 162
 GSM 159
 latch, about 477
 levels, in logical source 100
 logging 160
 lookup 162
 monitor 218
 providers 100, 159, 162
 reporting behavior 290
 scheduling 162
 SNMP 164, 187
 status 160
 status indicator 164
 sub-alarms 164

 threshold 116
 virtual 159, 163
 ALM. *See* Audio monitors.
 Alpermann+Velte 404
 Andromeda 416
 Any-source multicast transport stream 66
 ASM transport streams 66
 Aspect ratio
 about 109, 219
 AFD 256
 automatic 220, 256
 calibration 133
 changing 490
 of a room display 211
 subtitling monitor 298
 WSS 256
 Assigning
 alarms to logical sources 100
 audio outputs to RCP users 342
 colors to logical sources 101
 full screen layouts to RCP users 341
 logical sources to monitors 501
 room layouts to RCP users 341
 timers to RCP users 344
 timers to rooms 339
 Audio
 level meter 218
 metadata 130
 monitor 218
 monitoring delay 152
 output, assigning to RCP users 342
 reference level 131–132
 Audio level meters, scale 271
 Audio monitoring 516
 triggered by actions 515
 Audio monitors
 about 218
 scale 271
 Audio profiles
 about 107
 calibrations 113
 Audio programs
 about 110

calibration	123
Audio scales	
backup	40
configuration	270–271
Auto-layout	244
Automatic aspect ratio	256

B

Background actions	327
Background images	
clock logo	306
custom safe area	251
DVI input	246
on layouts	245
Backup	
audio scales	40
creating	40
resolutions	40
retrieving	41

C

CAD. *See* Metadata monitors.

Calibrating	
0 VU	131–132
audio metadata	130
audio monitoring delay	152
audio programs	123
automatic aspect ratio	133
brightness	148
closed captioning	138
color saturation	149
contrast	148
detail enhancement	134
DVI keying mode	151
dynamic range	137
GPI lines	158
HDR	135
High Dynamic Range	135
loudness (audio programs)	124
loudness (legacy)	128
metadata holding time	140
router field selection switching	156
router output signal reclocking	156
subtitling	138
WCG	135
Wide Color Gamut	135

Calibration	
about	26
profiles	107
Cards	26
Cascade	25, 52
CC	166
Channels. <i>See</i> Sources.	
Clear duration	111
Clocks	
about	219
configuration	303
logo	306
Closed captions	
calibration	138
configuration	260
holding time	140
standards	166
switching on/off	496
text mode	494
Cluster	
about	25, 45
configuration	45
rooms	198
Color levels, in logical source	101
Color saturation	149
Composite monitors	
about	218
configuration	308
creating	308
resizing	312
unlocking	313
Configuring	
alarm thresholds	116
aspect ratio	256
audio scales	270–271
router output signal reclocking	156
routers	347
serial devices	416
static UMD text	282
system	53
TSL IP UMD Controller	418
UMD text	282
Content advisory descriptor. <i>See</i> Metadata monitors.	
Countdown timers	276, 279
Cropping	
about	220
configuration	254
custom	221
operation	491

Crosspoints 505–507

D

Daktronics scoreboards 467

Dashboard

 disabling 210

 showing on wall 484

Database

 about 25

 backup 40

 location 42

 recommended workflow 60

 retrieving backup 41

Debouncing

 about 111

 configuration 121

Detail enhancement

 about 109

 calibration 134

Diagonal size 211

Dialnorm 128, 168

Digital content advisory descriptor 299, 477

Display layouts 217

Display libraries

 about 191

 closing 216

 managing 214

 opening 216

Displays

 adding to room 197

 aspect ratio 211

 dashboard 210

 diagonal size 211

 full screen zone 200

 height 211

 position 213

 properties 201

 removing from room 199

 resolution 202, 205, 207, 475

 rotation 212

 width 212

Dolby E metadata 168

Dolby VANC

 dialnorm 128

 loudness 128

DTVCC 140

DVB subtitling 219, 294, 477, 496

DVI 246

DVI keying 151

DVTCC 166

Dynamic range

 about 109

 calibration 137

E

EDID 475

Encoda 416

Expansion system 23

Extended Data Services. *See* Metadata monitors.

F

Factory defaults 57

Floating actions 327

Full screen layouts

 assigning to RCP user 341

 creating 233

Full screen zones

 about 191

 configuration 200

 operation 489

G

Gateway 323

General status managers. *See* GSM.

Global alarms 162

GPI 158, 513

GPI-1501 410

Graphical layout elements 217

GSM

 about 159

 alarm browser 160

 alarm logging 160

 sources, from external provider 100

H

HD closed captions 166

HDR

 about 109, 191

 calibration 135

Height 211

High Dynamic Range
 about 109, 191
 calibration 135
 HLS streams 71

I

iControl application server
 alarm consumer 160
 alarm provider 162
 Incremental copy
 about 90
 using 102
 Input Device 84
 Input method 500
 Inputs 84
 Internal router 349

K

Kahuna 428
 Kaleido Remote Control Protocol (Gateway) 323
 Kaleido-IP
 about 24
 cascade 25, 52
 network source streams, removing 77
 network sources streams, modifying 75
 NMOS devices 84
 streams, ASM 66
 streams, HLS 71
 streams, importing from spreadsheet 78
 streams, preparing spreadsheet 78
 streams, RTMP 74
 streams, RTSP 73
 streams, SSM/SFM 68
 streams, unicast 70
 virtual input streams, modifying 86
 virtual input streams, removing 87
 Kaleido-Modular
 KMV-3901/3911 24
 Kaleido-Modular-X
 about 24
 M3 module connections 398
 Kaleido-MX 4K, about 24
 Kaleido-MX, about 24
 Kaleido-RCP2
 about 333
 adding users 334

 audio monitoring 516
 layout presets 487
 login 480
 removing users 334, 336
 user preferences 339
 Kaleido-X
 about 23
 cascade 25, 52
 cluster system 25
 configuration 53
 expansion system 23
 internal router 349
 Kaleido-X16
 about 24
 cascade 25, 52
 internal router 349
 Kaleido-XQUAD
 about 25
 Kalypso 416, 419
 Kayak 434
 Kayenne 442
 Keyboard input method 500
 Keying mode 151
 K-Frame 451
 KMV-3901/3911
 about 24
 cascade 25, 52
 KMX-49n1, about 24
 KX Router logical router 348

L

Languages, input method 500
 Layout
 display layout 217
 Layouts
 4K UHD upscale 229
 about 217
 assigning to RCP users 341
 automatically populated grid 244
 background image 245
 background keying 151
 clocks 303
 closing 227
 countdown timers 279
 deleting 234
 digital content advisory descriptor 299
 duplicating 236
 DVI background input 246

exporting	239
foreground keying	151
full screen	233
importing	239
loading	486
management	225
Metadata monitor	219
monitors, adding	240
opening	225
pan view, in XEdit	247
presets	487
rearranging	237
refreshing	487
room layout	227
source assignment	242
subtitling monitor	294
timers	279
V-chip monitor	301
XDS metadata	299, 477
zoom, in XEdit	247
Levels	
<i>GlobalAlarm</i>	162
in logical source	95
in router	348, 389–390, 394
Libraries	
displays	214
layout elements	219
Loading layouts	486
Logical sources. <i>See</i> Sources.	
Login, monitor wall	480
Lookup services	162
Loudness	
calibration (audio program)	124
calibration (legacy)	128
microphone	170
Loudness monitors	
about	218
configuration	268
LTC over IP	274

M

M3 modules	398
Markers, safe area	493
Matrix ID	348, 389
Metadata	
AC-3	168
closed captions	166
display	219, 299, 477

Dolby E	168
holding time	140
SCTE 35	170
subtitles	166
teletext	166
Metadata monitors	
about	219, 477
configuration	299
Microphone loudness measurement	170
Monitor libraries	
about	219
configuration	318
Monitor wall	
about	475
dashboard	484
destinations	242, 501, 505
disabling dashboard	210
full screen zones	489
login	480
menu font size	338
mouse pointer, locating	483
mouse pointer. large	338
timers	509
monitoring output	
format	208
phase locking	210
Monitors	
about	217
alarm	164, 218, 290
audio	218
clock	219, 303
composite	218, 308, 312
duplicating	242
loudness	218, 268
Metadata	219
monitor wall destination	242
replication	244
resizing	312
source assignment	242, 501
subtitling	219, 294, 477
time code	218, 274
timer	218, 279
UMD	218
V-chip	219, 301, 477
video	218, 249
XDS metadata	299, 477
Mouse	
large pointer	338
locating on monitor wall	483
RCP-200	483

Multicast transport stream	
any source	66
source filtered	68
specific source	68
Multiviewer	
cascade	25, 52
cluster	25, 45
expansion system	23
Kaleido-IP	24
Kaleido-Modular	24
Kaleido-Modular-X	24
Kaleido-MX	24
Kaleido-MX 4K	24
Kaleido-X (14RU)	23
Kaleido-X (4RU)	23
Kaleido-X (7RU)	23
Kaleido-X16	24
Kaleido-XQUAD	25
KMV-3901/3911	24
KMV-49n1	24

N

network source	63
NMOS devices	84
Nominal level	131–132
NV8576	398
NV9000 router control system	
importing configurations	363
profile	349

O

OP-47	166
Overscan	
about	220
configuration	254

P

Panning	247
Passthrough	176
Peripheral devices	26, 416
Phase locking	210
Plura SPT	404
Preferences, RCP user	339
Presets	487

Processing delay	210
Production switchers	401
Kahuna	428
Kalypso	419
Kayak	434
Kayenne	442
K-Frame	451
Ross Video	419
SAM	428
Sony	424
Zodiak	459
Profiles	
about	107
calibrations	113
creating	113
deleting	113
NV9000	349
Program config	168
Programs, audio	110

R

RCP2. <i>See</i> Kaleido-RCP2.	
RCP-200	
audio monitoring	516
category/index panel	501
login	480
mouse	483
RDD 8	166
Reclocking	156
Reference levels	131–132
Refreshing layouts	487
Region editor	314–315
Resolutions	
automatic detection	475
backup	40
changing	207
custom, creating	202, 205
Restoring	
database backup	41
factory defaults	57
Rooms	
4K UHD	191, 193
4K UHD upscale layouts	229
about	191
assigning layouts to RCP users	341
closing	196
cluster	198
creating	192

dashboard	210
deleting	196
display aspect ratio	211
display diagonal size	211
display height	211
display position	213
display properties	201
display resolution	202, 205, 207
display rotation	212
display width	212
displays	197
full screen layouts	233
full screen zone	200
layouts	227
mouse pointer	338
opening	195
pan view, in XEdit	247
zoom view, in XEdit	247
Ross Video production switchers	419
Rotation	212
Router controllers	347
Routers	
cards, SDI signal reclocking	156
configuration	347
connections	354, 398
crosspoints	505–507
field selection switching	156
importing from NV9000	363
internal	349
KX Router	348
levels	389–390, 394
logical levels	348
M3 modules	398
matrix ID	348, 389
physical levels	348
tie lines	354, 398
RTMP streams	74
RTSP streams	73

S

Safe area	
free-form	251
markers	251
markers, toggling	493
Scoreboards	467
SCTE 27 subtitling	219, 294, 477, 497
SCTE 35	
about	170

profiles	108
Serial devices	416
Serial port test agent	473
Serial to TCP/IP Dispatcher	403, 416
Set duration	111
SFM transport streams	68
Slots, virtual	26
SMPTE ST 2031	166
Snell & Wilcox production switcher. <i>See</i> Kahuna.	
SNMP traps	164, 187
Sony production switchers	424
Source-filtered multicast transport streams ..	68
Sources	
about	26, 89
alarm levels	100
assigning to monitors	242, 501
color levels	101
configuration	90
EXT	100
external providers	100
full screen	489
levels	95
template	99
Sources table	
filtering	104
resizing columns	105
sorting	104
Spanning	
4K UHD	224
layout elements	222
SSM transport streams	68
Status	
alarm	160
Subtitling	
calibration	138
configuration	260
holding time	140
standards	166
text mode	494
Subtitling monitors	
about	219, 477
aspect ratio	298
configuration	294
Switchers. <i>See</i> Production switchers.	
System	
about	23
backup	40
cascade	25, 52
cluster	25, 45
configuration	53

- creation 42
 - expansion 23
 - phase locking 210
 - retrieving backup 41
- ## T
- Tally interface devices 401
 - Teletext
 - about 166
 - Teletext profiles
 - about 107
 - calibrations 113
 - Template 99
 - Text mode 260, 494
 - Third-party devices
 - serial port test 473
 - TSL (serial) 416
 - TSL UMD controller (IP) 418
 - Tie lines 354, 398
 - Time code monitors
 - about 218
 - configuration 274
 - Timer systems 404
 - Timers
 - about 218
 - assigning to RCP users 344
 - assigning to rooms 339
 - configuration 276
 - monitor 279
 - operation 509
 - Transport stream profile
 - calibrations 113
 - Transport streams
 - ASM 66
 - HLS 71
 - RTMP 74
 - RTSP 73
 - SFM 68
 - SSM 68
 - unicast 70
 - Traps, SNMP 164, 187
 - TSL
 - IP UMD Controller 418
 - serial devices 416
- ## U
- UHD 191, 193, 224
 - UMD
 - about 218
 - editing text 499
 - static text 282
 - text font 282
 - Under monitor displays. *See* UMD.
 - Underscan
 - about 220
 - configuration 254
- ## V
- V-chip monitors
 - about 219, 477
 - configuration 301
 - Video monitors
 - about 218
 - aspect ratio 250
 - configuration 249
 - cropping 254
 - full screen 489
 - overscan 254, 491
 - resizing 250
 - safe area 251, 493
 - underscan 254, 491
 - zooming 254
 - Video profiles
 - about 107
 - calibrations 113
 - Video stream impact on network bandwidth . 19
 - Virtual card slots 26
 - Virtual input 64
 - VLAN 66, 68
- ## W
- WCG
 - about 109, 191
 - calibration 135
 - Wide Color Gamut
 - about 109, 191
 - calibration 135
 - Widgets. *See* Monitors.
 - Width, display 212
 - Workflow, database management 60

WSS	
about	219
configuration	256
WST	166

X

XAdmin	
virtual card slots	26
XDS. See Metadata monitors.	
XEdit	
about	25
access control	34
opening	28
password	34
virtual card slots	26

Z

Zero VU	131–132
analog	110
digital	110
Zodiak	459
Zooming	
configuration	254
layout, in XEdit	247
operation	491



Grass Valley Technical Support

For technical assistance, contact our international support center, at 1-800-547-8949 (US and Canada) or +1-530-478-4148.

To obtain a local phone number for the support center nearest you, consult the Contact Us section of Grass Valley's website (www.grassvalley.com).

An online form for e-mail contact is also available from the website.

Corporate Head Office

Grass Valley
3499 Douglas-B.-Floreani
St-Laurent, Quebec H4S 2C6
Canada
Telephone: +1 514 333 1772
Fax: +1 514 333 9828
www.grassvalley.com