Technical Note



Restoring DCOM Security Settings

Introduction

The NV9000 system controllers require specific DCOM security settings. This note tells you how to make or restore the settings.

Procedure

Follow these steps for each NV9000 system controller:

- 1 Log onto the NV9000 system controller. (You'll of course need a keyboard, monitor, and mouse connected to the controller.)
- 2 Launch 'Component Services' from the Windows Start menu:



3 Expand the tree on the left and pick 'DCOM Config'. Scroll through the entries on the right to find NvMasterCO. Right-click it and choose properties as shown:



Restoring DCOM Security Settings

	8 - 1		
NvMasterCO Properties		? ×	
General Location Security Endp	points I Identity		
Launch and Activation Permissi	ons	- II	
C <u>U</u> se Default			
← Customize	<u>E</u> dit		Click
	aunch Permission	11	? X
 Use Default 	Security		
C Custo <u>m</u> ize	Group or user names:	A desision to a l	
	Administrators (NVCONFIG V	Administrators) nvyAdmins)	
Configuration Permissions	1 INTERACTIVE		
C Use Default	SYSTEM		
Customize	1		
		Add	Remove
	Permissions for Administrators	Allow	Deny
	Local Launch	<u> </u>	
	Local Activation		H
	Remote Activation		

The 'NVMasterCO Properties' dialog displays:

Select the 'Security' tab and select 'Customize' for 'Launch and Activation Permissions'. Click the 'Edit' button.

The EnvyAdmins settings should look like this:

Permissions for Administrators	Allow	Deny
Local Launch		
Remote Launch		
Local Activation		
Remote Activation		

The INTERACTIVE settings should look like this:

Permissions for Administrators	Allow	Deny
Local Launch		
Remote Launch		
Local Activation	\checkmark	
Remote Activation		

The SYSTEM settings should look like this:

Permissions for Administrators	Allow	Deny
Local Launch Remote Launch		
Local Activation Remote Activation		

Click OK when you have done this.

4 It is advisable to restart the controller before placing it in service.