


HITACHI

CAMERA CONTROL UNIT CU-HD1200

OPERATING INSTRUCTIONS

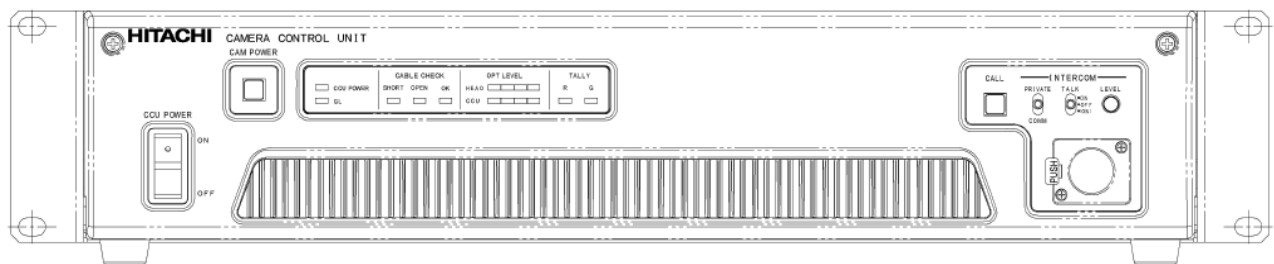

Please read these operating instructions carefully for proper operation,
and keep them for future reference.

Hitachi Kokusai Electric Inc.

Note: The model and serial numbers of your product are important for you to keep for your convenience and protection. These numbers appear on the nameplate located on the bottom of the product. Please record these numbers in the spaces provided below, and retain this manual for future reference.

Model No. _____

Serial No. _____

SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and safety Instructions on your equipment.
Follow recommended precautions and safe operating practices.

SAFETY ALERT SYMBOL



This is the "Safety Alert Symbol." This symbol is used to call your attention to items or operations that could be dangerous to you or other persons using this equipment. Read these messages and follow these instructions carefully.

It is essential that you read the instructions and safety regulations before you attempt to assemble or use this equipment.

The definitions of signal words are as follows:



WARNING: Personal danger

Warning notes indicate any condition or practice, which if not strictly observed, could result in personal injury or possible death.



CAUTION: Possible damage to equipment

Caution notes indicate any condition or practice, which if not strictly observed or remedied, could result in damage or destruction of the equipment.

NOTE

NOTE: Notes indicate an area or subject of special merit, emphasizing either the product's capabilities or common errors in operation or maintenance.



WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS COLOR CAMERA TO RAIN OR MOISTURE.

AVERTISSEMENT

Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer l'appareil à la pluie ou à l'humidité.

Afin d'écartier tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

VORSICHT

Um Feuergefahr und die Gefahr eines elektrischen Schlags zu vermeiden, darf das Gerät weder Regen noch Feuchtigkeit ausgesetzt werden.

Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur einem Fachmann.

IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and the operating instructions should be adhered to.

4. Follow Instructions

All operating and use instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Moving

A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.

The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization

This product is equipped with a three-wire grounding-type plug a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug, convenience receptacles, and the point where they exit from the product.

14. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

15. Overloading

Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

16. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

17. Inflammable and Explosive Substance

Avoid using this product where there are gases, and also where there are inflammable and explosive substances in the immediate vicinity.

18. Heavy Shock or Vibration

When carrying this product around, do not subject the product to heavy shock or vibration.

19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. if liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or damaged in any way.
- f. When the product exhibits a distinct change in performance-this indicates a need for service.

21. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WICHTIGE SICHERHEITSANWEISUNGEN

1. Alle Anweisungen lesen.

Vor Betrieb des Erzeugnisses sollten alle Sicherheits- und Bedienungsanleitungen gelesen werden.

2. Die Anweisungen aufbewahren.

Die Sicherheits- und Bedienungsanleitungen sollten fünftigen Bezug aufbewahrt werden.

3. Warnungen beachten.

Die Warnungen auf dem Erzeugnis und in den Bedienungsanleitungen sollten beachtet werden.

4. Anweisungen befolgen.

Alle Bedienungsanleitung- und

Verwendungsanweisungen sollten befolgt werden.

5. Reinigung

Den Stecker des Geräts vor Reinigung aus der Steckdose ziehen. Keine flüssigen Reinigungsmittel oder Aerosolreiniger verwenden. Zum Reinigen einen feuchten Lappen verwenden.

6. Zubehör

Nur vom Hersteller des Erzeugnisses empfohlenes Zubehör verwenden, da es sonst zu Störungen kommen kann.

7. Wasser und Feuchtigkeit

Dieses Erzeugnis nicht in der Nähe von Wasser verwenden - z.B. in der Nähe einer Badewanne, eines Waschbeckens, einer Küchenspüle, eines Waschzubehörs, in einem nassen Keller, in der Nähe eines Schwimmbeckens usw.

8. Aufstellung

Das Erzeugnis nicht auf einen instabilen Wagen, Stand, Dreifuß, Träger oder Tisch stellen.

Das Erzeugnis kann sonst herunterfallen und ein Kind oder einen Erwachsenen schwer verletzen.

Außerdem kann das Gerät schwer beschädigt werden. Nur mit einem Wagen, Stand, Dreifuß, Träger oder Tisch verwenden, der vom Hersteller empfohlen oder mit dem Erzeugnis verkauft worden ist. Für jegliche Anbringung sollten die Anweisungen des Herstellers befolgt werden, und das vom Hersteller empfohlene Anbringungszubehör sollte verwendet werden.

9. Eine Kombination von Erzeugnis und Wagen sollte vorsichtig bewegt werden.

Schneller Halt, übermäßige Krafteinwirkung und unebene Oberflächen können Umkippen der Kombination von Erzeugnis und Wagen verursachen.

10. Ventilation

Schlitze und Öffnungen im Gehäuse dienen der Ventilation. Sie sind für zuverlässigen Betrieb des Gerätes und Schutz vor Überhitzung erforderlich und dürfen nicht blockiert oder abgedeckt werden.

Die Öffnungen sollten niemals dadurch blockiert werden, daß das Gerät auf ein Bett, ein Sofa, einen Teppich oder eine ähnliche Oberfläche gestellt wird.

Das Gerät sollte nur dann in Einbauinstallation wie in einem Bücherschrank oder einem Gestell verwendet werden, wenn angemessene Ventilation vorgesehen ist bzw. Die Anweisungen des Herstellers befolgt worden sind.

11. Stromversorgung

Dieses Erzeugnis sollte nur an der auf dem Typenschild angegebenen Stromversorgungsart betrieben werden. Wenn Sie nicht sicher sind, was für eine Stromversorgung Sie haben, so wenden Sie sich bitte an Ihren Erzeugnishändler oder an das lokale Elektrizitätswerk. Beziehen Sie sich für Batteriebetrieb oder andere Stromquellen vorgesehene Erzeugnisse bitte auf die Bedienungsanleitungen.

12. Erdung oder Polarisierung

Dieses Erzeugnis ist mit einem Schutzkontaktstecker mit drei Leitern ausgerüstet, mit einem Erdungskontakt. Dieser Stecker paßt nur in ein schuko-Steckdose. Dies ist eine Sicherheitsmaßnahme. Wenn Sie den Stecker nicht in die Steckdose stecken können, so wenden Sie sich bitte an ihren Elektriker, damit er die veraltete Schutz des Schutzkontaktsteckers unwirksam.

13. Netzkabelschutz

Netzkabel sollten so verlegt werden, daß möglichst nicht darauf getreten wird und daß sie nicht eingeklemmt werden, mit besonderer Beachtung der Kabel an Stackern, Verlängerungskabeln und dem Austritt des Kabels aus dem Erzeugnis.

14. Blitzschlag

Für zusätzlichen Schutz des Erzeugnisses während eines Gewitters oder bei Nichtverwendung für lange Zeit den Stecker aus der Steckdose ziehen. Dies verhindert Beschädigung durch Blitzschlag und Netzspannungsschläge.

15. Überlastung

Wandsteckdosen, Verlängerungskabel und eingebaute Bequemlichkeitssteckdosen nicht überlasten, da dies Feuer oder elektrischen Schlag verursachen kann.

16. Eindringen von Fremdkörpern und Flüssigkeit

Niemals Objekte irgendwelcher Art durch die Öffnungen in das Gerät schieben, da diese unter hoher Spannung stehende Teile berühren oder kurzschließen können, wodurch es zu Feuer oder elektrischem Schlag kommen kann. Niemals Flüssigkeiten irgendwelcher Art auf das Erzeugnis verschütten.

17. Entflammbare und explosive Substanzen

Vermeiden Sie Verwendung dieses Erzeugnisses an Orten mit Gasen bzw. entflammbaren oder explosiven Substanzen in der direkten Umgebung.

18. Starke Stöße oder Vibrationen

Setzen Sie das Erzeugnis beim Transport nicht starken Stößen oder Vibrationen aus.

19. Wartung

Versuchen Sie nicht, dieses Erzeugnis selbst zu warten, da Sie sich durch Öffnen bzw. Entfernen von Abdeckungen hohen Spannungen und sonstigen Gefährdungen aussetzen können.

Beziehen Sie sich für jegliche Wartung auf qualifiziertes Wartungspersonal.

20. Beschädigung, die Wartung erfordert

Ziehen Sie den Stecker dieses Erzeugnisses aus der Steckdose und wenden Sie sich an qualifiziertes Wartungspersonal, wenn eine der folgenden Bedingungen vorliegt:

- a. Wenn das Netzkabel oder der Stecker beschädigt ist.
- b. Bei Eindringen von Flüssigkeit oder Fremdkörpern in das Gerät.
- c. Wenn das Erzeugnis Regen oder Wasser ausgesetzt worden ist.
- d. Wenn das Erzeugnis bei Befolgen der Bedienungsanleitungen nicht normal funktioniert.

Nur die Regelelemente verstellen, die in den Bedienungsanleitungen behandelt werden, da unangemessene Einstellung anderer Regelelemente Beschädigung verursachen kann und oft beträchtliche Arbeit durch einen qualifizierten Techniker erfordert, um das Erzeugnis wieder, zu normalem Betrieb zurückzubringen.

- e. Wenn das Erzeugnis fallen gelassen oder beschädigt worden ist.
- f. Wenn das Erzeugnis eine klare Änderung in der Leistung zeigt-dies weist darauf hin, daß Wartung erforderlich ist.

21. Ersatzteile

Wenn Ersatzteile erforderlich sind, darauf achten, daß der Wartungstechniker nur die vom Hersteller festgelegten Ersatzteile oder Teile mit den gleichen Charakteristiken wie die ursprünglichen Teile verwendet. Unautorisierte Ersatzteile können Feuer, elektrischen Schlag oder sonstige Gefährdungen verursachen.

22. Sicherheitsprüfung

Bitten Sie den Wartungstechniker nach der Vollendung von Wartung oder Reparaturarbeiten an diesem Erzeugnis um die Durchführung von Sicherheitsprüfungen, um zu bestimmen, daß das Erzeugnis im angemessenen Betriebszustand ist.

23. Anbringung an der Wand oder an der Decke

Das Erzeugnis sollte nur entsprechend den Empfehlungen des Herstellers an einer Wand oder an der Decke angebracht werden.

24. Wärme

Das Erzeugnis sollte fern von Wärmequellen wie Radiatoren, Heizwiderständen, Öfen und anderen Wärme erzeugenden Erzeugnissen (einschließlich Verstärkern) aufgestellt werden.

MISES EN GARDE IMPORTANTES

1. Lire les instructions

Lire toutes les instructions de sécurité et de fonctionnement avant de faire fonctionner l'appareil.

2. Conserver ces instructions

Conserver les instructions de sécurité et de fonctionnement à des fins de référence ultérieure.

3. Tenir compte des avertissements

Tous les avertissements qui figurent sur l'appareil et dans le mode d'emploi devront être respectés.

4. Observer les instructions

Observer toutes les instructions de fonctionnement et d'utilisation.

5. Nettoyage

Avant de procéder au nettoyage, débrancher l'appareil de la prise secteur. Ne pas utiliser de produits de nettoyage liquides ou en aérosol.

Nettoyer l'appareil avec un chiffon humide.

6. Fixations

Ne pas utiliser de fixations non recommandées par le fabricant de l'appareil car elles pourraient être source de danger.

7. Eau et humidité

Ne pas utiliser l'appareil à proximité d'eau-par exemple près d'une baignoire, d'un lavabo, d'un évier ou d'un bac à lessive, dans un sous-sol humide, ou près d'une piscine, etc.

8. Accessoires

Ne pas placer l'appareil sur un chariot, un socle, un pied, un support ou une table instables. L'appareil pourrait tomber, blessant grièvement des enfants ou des adultes, et étant sérieusement endommagé.

Utiliser exclusivement le chariot, le socle, le pied, le support ou la table recommandés par le fabricant, ou vendus avec l'appareil. Pour tout montage de l'appareil, respecter les instructions du fabricant, et utiliser à cette fin l'accessoire de montage recommandé par le fabricant.

9. L'appareil monté sur son chariot devra être déplacé avec précaution.

Des arrêts brusques, une force excessive et des surfaces irrégulières pourraient provoquer le renversement de l'ensemble appareil-chariot.

10. Ventilation

Les fentes et les ouvertures du coffret sont prévues pour la ventilation ainsi que pour garantir un fonctionnement en toute sécurité de l'appareil et le protéger de toute surchauffe, et ces ouvertures ne devront donc être ni obstruées ni recouvertes. Ne jamais obstruer les ouvertures en plaçant l'appareil sur un lit, un sofa, un tapis ou toute surface similaire. Ne jamais placer l'appareil dans un support confiné, par exemple une bibliothèque ou une étagère, sans ventilation suffisante ou sans respecter les instructions du fabricant.

11. Sources d'alimentation

L'appareil devra être alimenté exclusivement sur le type d'alimentation indiqué sur l'étiquette signalétique. Si l'on n'est pas sûr du type d'alimentation du local, consulter le revendeur de l'appareil ou la compagnie d'électricité locale. Pour les appareils qui fonctionnent sur batterie ou sur d'autres sources, voir le mode d'emploi.

12. Mise à la terre ou polarisation

L'appareil est doté d'une fiche trifilaire avec mise à la terre, dont la troisième broche assure la mise à la terre. Cette fiche ne rentrera que dans les prises trifilaires de mise à la terre. Ceci est une mesure de sécurité. Si la fiche ne rentre pas dans la prise, faire remplacer la prise défectueuse par un électricien.

Ne pas rendre vaine la mesure de sécurité assurée par cette prise avec mise à la terre.

13. Protection du cordon d'alimentation

Acheminer les cordons d'alimentation de façon qu'on ne risque pas de marcher dessus ou de les coincer sous un objet placé dessus ou contre eux.

Faire particulièrement attention aux fiches des cordons, à la proximité des prises, et à l'endroit où ils ressortent de l'appareil.

14. Foudre

Pour renforcer la protection de l'appareil pendant un orage, ou si l'on s'en éloigne ou qu'on reste longtemps sans l'utiliser, le débrancher de la source d'alimentation. Ceci permettra d'éviter tout dommage de l'appareil dû à la foudre et aux surtensions de ligne.

15. Surcharge

Ne pas surcharger les prises, rallonges et prises multiples car cela pourrait entraîner un risque de feu ou de choc électrique.

16. Pénétration d'objets et de liquides

Ne jamais enfoncer d'objets d'aucune sorte dans les ouvertures de l'appareil car ils pourraient toucher des points de tension dangereuse ou court-circuiter des pièces, ce qui pourrait provoquer un feu ou un choc électrique. Ne jamais renverser de liquide d'aucune sorte sur l'appareil.

17. Substances inflammables et explosives

Éviter d'utiliser l'appareil en présence de gaz, ainsi qu'à proximité immédiate de substances inflammables et explosives.

18. Chocs ou vibrations violents

Lorsqu'on transporte l'appareil, ne pas le soumettre à des chocs ou des vibrations violents.

19. Réparations

Ne pas tenter de réparer l'appareil soi-même car le fait d'ouvrir ou de retirer les caches risque d'exposer l'utilisateur à des tensions dangereuses notamment. Confier toute réparation à un personnel qualifié.

20. Dommages nécessitant réparations

Débrancher l'appareil de la source d'alimentation et confier les réparations à un personnel qualifié dans les cas suivants:

- a. Lorsque le cordon d'alimentation ou sa fiche sont endommagés
- b. Si du liquide s'est renversé sur l'appareil ou que des objets sont tombés dedans
- c. Si l'appareil a été exposé à la pluie ou à l'eau.
- d. Si l'appareil ne fonctionne pas normalement lorsqu'on observe les instructions d'utilisation.

Ne régler que les commandes couvertes par le mode d'emploi ; en effet, un réglage incorrect des autres commandes pourrait entraîner des dommages et nécessiteront souvent des travaux de réparation coûteux par un technicien qualifié pour remettre l'appareil en état de marche.

- e. Si l'appareil est tombé ou qu'il a été endommagé.
- f. Si l'appareil affiche une nette modification de ses performances, cela signifie qu'il a besoin d'être réparé.

21. Pièces de rechange

Si l'on a besoin de pièces de rechange, veiller à ce que le technicien de réparation utilise exclusivement les pièces de rechange spécifiées par le fabricant ou des pièces ayant les mêmes caractéristiques que les pièces d'origine. Les pièces de rechange non autorisées risquent de provoquer un feu, un choc électrique et autres dangers.

22. Vérification de sécurité

Après tout travail d'entretien ou de réparation de l'appareil, demander au technicien de réparation d'effectuer les vérifications de sécurité pour s'assurer que l'appareil est en bon état de marche.

23. Montage au mur ou au plafond

L'appareil ne pourra être monté au mur ou au plafond que de la manière recommandée par le fabricant.

24. Chaleur

Eloigner l'appareil des sources de chaleur, telles que radiateurs, appareils de chauffage, cuisinières, et de tout produit engendrant de la chaleur (y compris les amplificateurs).

IMPORTANT NOTICE

For USA

These products have been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

Changes or modifications not expressly approved by Hitachi Kokusai Electric responsible for compliance could void the user's authority to operate the equipment.

For Canada

This product does not exceed the class A/class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations.

Le présent appareil n'émet pas de bruits radioélectriques dépassant les limites applicable aux appareils numériques de classe A prescrites dans le rVglement sur le brouillage radioélectrique édicté par le ministère des communications du canada.

Contents

Outline and features	1
Warnings and cautions when using	2
Facility names and functions	4
System Configuration	7
Function menu	9
Cable check.....	16
Backup battery replacement.....	17
Service information	18
External View	29
Specifications	30

Outline and features

The CU-HD1200 is a camera control unit (CCU) designed for the newly developed multi-standard camera SK-HD1200. The CU-HD1200 provides significantly reduced power consumption and sophisticated function. HD-SDI (1080p/1080i/720p) inputs/outputs are offered as standard. A flexible system capable of providing conventional SD-SDI formats can be configured.

Features

■ A flexible system capable of handling current HDTV and SDTV formats can be constructed.

DIGITAL inputs/outputs:

HD-SDI OUT x8 or Dual Link-HD-SDI x4 [Embedded audio available]
HD-SDI or SD-SDI OUT x4 [x2/x2 Embedded audio available]
(SD-SDI 16:9/4:3 switchable)
HD-SDI or SD-SDI WFM OUT x1 [Embedded audio available]
HD-SDI or SD-SDI PIX OUT x1 [Embedded audio available]
HD-SDI or SD-SDI RET In x4 [for VF]
HD-SDI or SD-SDI RET In x2 [for Floor Monitor]
(HD-SDI 3G/1.5G or Dual Link switchable)

Analog inputs

PROMPT IN x1
GL IN x1

■ High-performance down converter

- 1) Hitachi's high-speed line conversion technology yields high resolution in the SD picture.
- 2) Due to the use of an independent and separate processor located in the CU-HD1200, detail can be adjusted for the SD video outputs without affecting the HD video signal outputs.

■ Built-in up converter

The HDTV up-converter for displaying the SDTV return signals in the HD Viewfinder is provided as standard with the CU-HD1200. The up converter is of a line-correction type capable of displaying 1,080 effective scanning lines. In addition, AUX and Return color signals can be displayed in the TFT-LCD color viewfinders offered.

■ High-quality transmission using a digital optical transmission system

An HFOC (Hybrid Fiber Optic Cable) is used to connect the camera head and CCU. The signals are transmitted using an optical serial digital transmission method. (HD-SDI standard) to ensure high-quality transmission. The effective HFOC length can be up to 4 km. (without utility power)

Warnings and cautions when using



CAUTION

■ Do not disassemble or modify

The camera contains precision internal components. Do not open the cover or disturb switches and controls other than designated. There is risk of impaired performance and damage.

■ Keep foreign object out of interior

Entry of water, metallic or other foreign materials can cause failure and damage.

■ Select use and storage locations carefully

Avoid using or storing the equipment in the following types of locations. Impaired performance and damage can be caused.

- Extremely hot or cold locations (exceeding 0 to 40°C), such as in enclosed vehicles.
- Subject to strong vibration.
- Humid or dusty locations.

- Salt spray or corrosive gases.

- Strong electromagnetic fields (e.g., near TV or radio transmitters).

- Where exposed to rain.

■ When connecting and disconnecting cables, grasp the connector by the body, not the attached cable. Cables can be damaged by pulling on them.

■ Fuse replacement

Important: Although spare fuses are provided, the fuse must be replaced only by a qualified service technician.

■ In event of difficulty

Disconnect from power and contact the nearest Hitachi Kokusai Electric service agency.

Warnings and cautions when using

Hybrid Fiber Optical Camera Cable & Connector Handling

CU-HD1200 camera is using the optical fiber cable & connector which is required special technique for handling.

1. Cable Connector & Receptacle



(1) FCF (Fiber Cable Female)



(2) FCM (Fiber Cable Male)



(3) FCFR (Female Receptacle)



(4) FCMR (Male Receptacle)

2. Maintenance tool & information



(1) Cleaning Stick (CANARE CLETOP 2.5/2.0)


(2) CLEANING KIT

Fiber optical cable assembly manufacture "CANARE" has Cleaning kit for the optical fiber cable & connector available. Detail is in URL <http://www.canare.co.jp>


Handling Precautions

Depending on usage, fiber-optic patch cables may not be capable of offering their full designed maximum performance. To prevent any deterioration of signal quality, be sure to observe the following precautions:

- ⚠ Do not bend the base of the connector less than 30mm (minimum permissible bend range).
- ⚠ Avoid applying tension of 80N (8.2kgf) or more to the fiber-optic cable. Even momentary applications may damage the cable.
- ⚠ Do not twist the fiber-optic patch cable while connected to equipment.
- ⚠ When connecting cables to equipment or adapters, be sure to insert the connector straight into its corresponding jack and not at an angle. Also, fully insert the connector until its white line disappears.
- ⚠ During installation, take care not to allow kinks to develop in the cable.

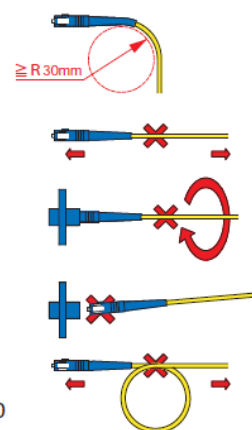

Facility names and functions (Front)

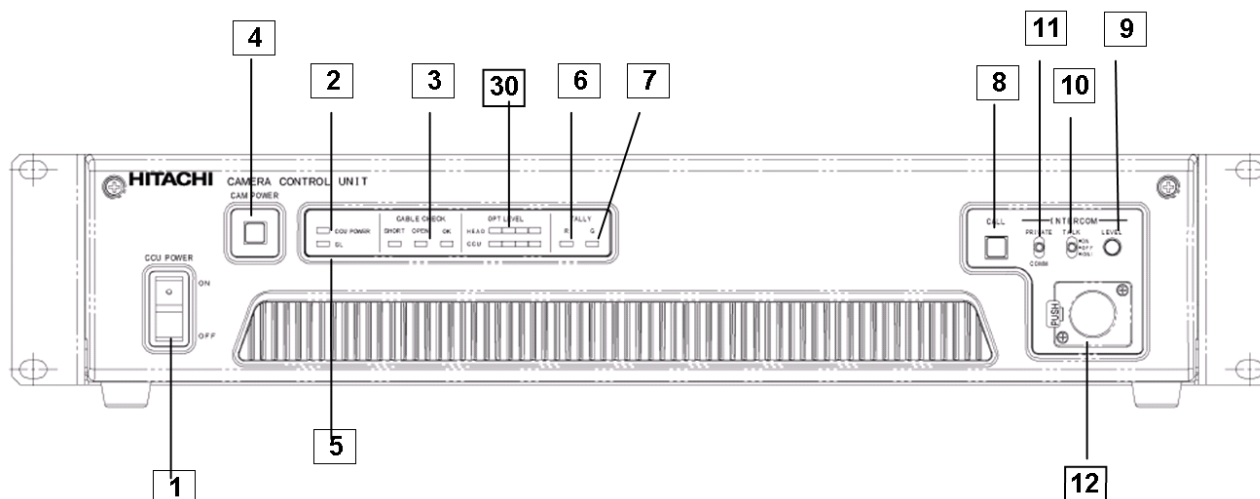

1 CCU POWER switch

CCU power on/off switch.

2 CCU POWER LED

Lights when power is on.

3 CABLE CHECK LED

OK: CAMERA POWER switch **4** can be operated.

OPEN: Fiber cable not connected.

SHORT: Excess current in fiber cable.

Note: CAMERA POWER switch **4** is inoperative when OPEN, SHORT LED is lighted.

4 CAMERA POWER switch

The switch lights during camera power on.

When the camera power is off, only one channel intercom (CH1) is available.

Press the switch for three seconds or more, to turn off the camera power.

5 GL ON LED

Lights during genlock operation.

Note: When a different frame rate signal is input for genlock, the LED blinks and the signal is ignored.

6 R TALLY LED

Lights at red tally input or when CALL signal is sent from camera.

7 G TALLY LED

Lights at green tally input.

8 CALL button

Press to call the camera.

9 INTERCOM LEVEL control

Adjusts intercom listening volume.

10 TALK ON/OFF switch

Intercom microphone on/off switch.

11 PRIVATE/COMM switch


PRIVATE: Communicate with camera only

COMM: Communicate with entire system

12 Intercom connector (XLR,5P)

Connection for optional MT-12MF headset.

Facility names and functions (Rear)

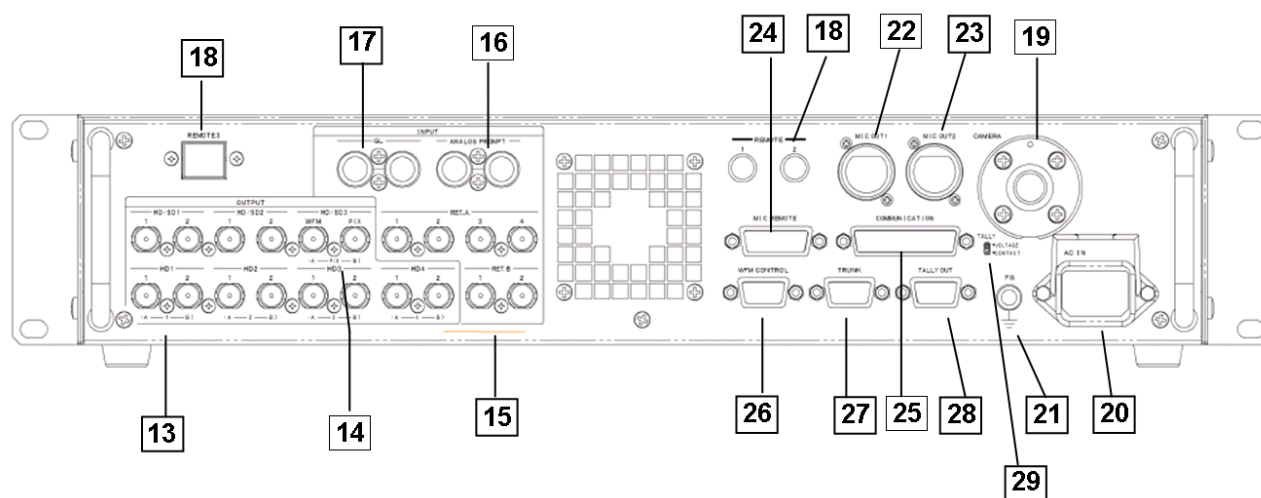

13 HD SDI OUT connectors (BNC)

Outputs eight lines of digital serial HDTV video signals.

[1080p, 1080i, DualLink[1:A/2:B], 720p]

14 HD/SD SDI connectors (BNC)

Outputs six lines of digital serial HDTV/SDTV video signals.

[1080p, 1080i, 720p, SD]

The character is superimposed in PIX output.

15 D.RET input connectors (BNC)

Input digital serial AUX video signals.

One of four RET.A inputs is sent to the camera viewfinder or the Camera's RET connector.

And one of two RET.B inputs is sent to HD-SDI2 connector on CA-HF1200.

RET.A: Standard Return Signal

RET.B: Continuous Return Signal

(RET.B can not be selected on the Camera adaptor)

The signal can be selected by user function menu.

16 PROMPT connectors (BNC)

Input analog video signal for the prompter. The signal is sent to PROMPT out connector on CA-HF1200.

17 Genlock connectors (BNC)

Input tri-level sync signal or black burst signal for genlock operation.

18 REMOTE 1,2,3 connector

Connect the optional camera control panel or setup control unit.

19 Fiber connector

Connect Fiber cable.

20 AC IN connector

Input for AC power supply.

21 FG terminal

Frame ground terminal.

22 MIC OUT1 connector (XLR 3 pin)

Outputs MIC1 audio signals from a camera or the CA-HF1200 at 0 dBm/600 ohm.

23 MIC OUT2 connector (XLR 3 pin)

Outputs MIC2 audio signals from the CA-HF1200 at 0 dBm/600 ohm.


24 MIC REMOTE connector

This connector is used to select the MIC1 and MIC2 amplifier gains.

Important notice

When using return video, please input correct format signal, which is selected on the return assignment menu (page 12).

Facility names and functions (Rear & Front)

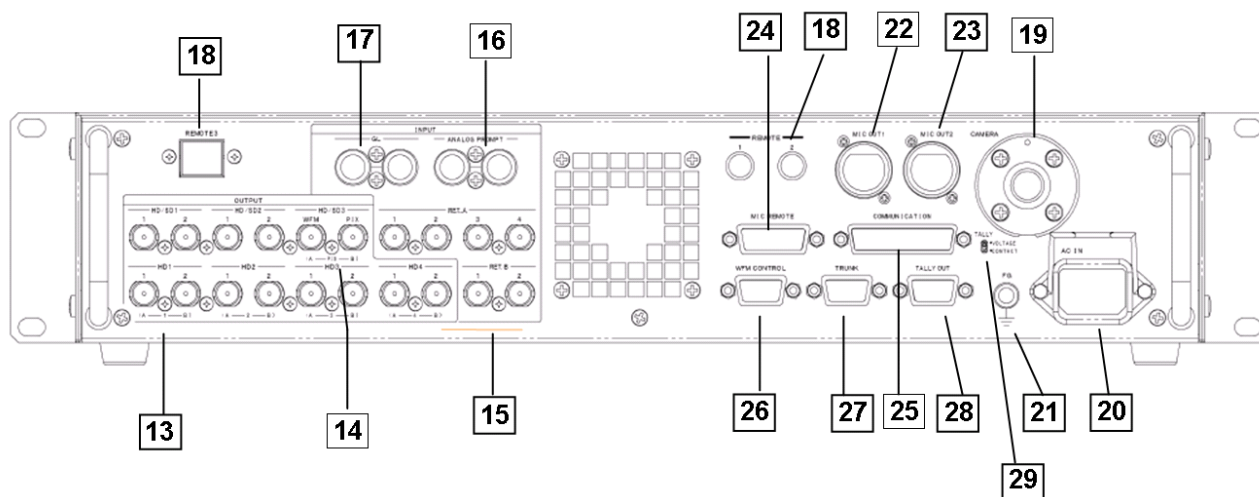

25 COMMUNICATION connector

Intercom and tally signals are input from external system.

26 WFM CONTROL connector

This connector is used to select the display mode of the waveform monitor.

27 TRUNK connector

Use for communication with TRUNK connector on CA-HF1200 via RS-422 interface.

28 TALLY OUT connector

Contact outputs for tally signals.


29 TALLY CONTACT/VOLTAGE

The TALLY input can be contact or voltage supply.

Set the TALLY switches according to the systems connected to the COMMUNICATION connector on rear panel.

30 Receiver Level LED (Front)

The strength of the arriving light signal via fiber cable is indicated by position of lighting LED.

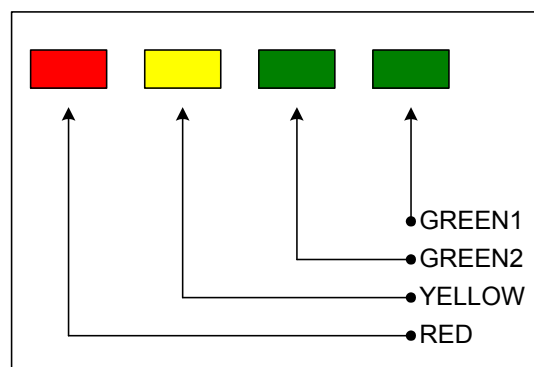

Indicate the receiver level approximately
 GREEN1: -3dBm to -8dBm (Normal)
 GREEN2: -8dBm to -11dBm
 YELLOW: -11dBm to -14dB (Warning)
 RED: under -14 dB (Alarm)

System Configuration

Attach the Camera adaptor(CA-HF1200) to the Camera head(SK-HD1200). Then connect the camera control panel and setup control unit to the CU-HD1200.


1. AC power supply operation

When the CU-HD1200 CCU POWER switch is set to ON, the optical fiber cable connection is checked automatically (it takes about 5 seconds), and then power can be supplied to the camera by pressing the CAMERA POWER button to enable a video output signal.

The CABLE CHECK LED lights OK when the optical fiber cable is normal.


The intercom system is available when the CCU POWER switch is ON.

Note: When operation mode is changed from MAIN mode to STBY mode, wait for 10 seconds to restart the camera power.

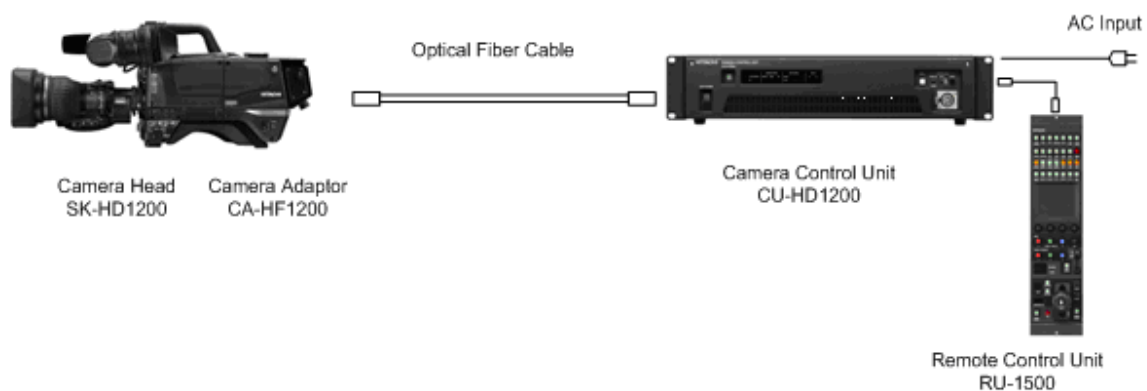

System Configuration

System configuration chart

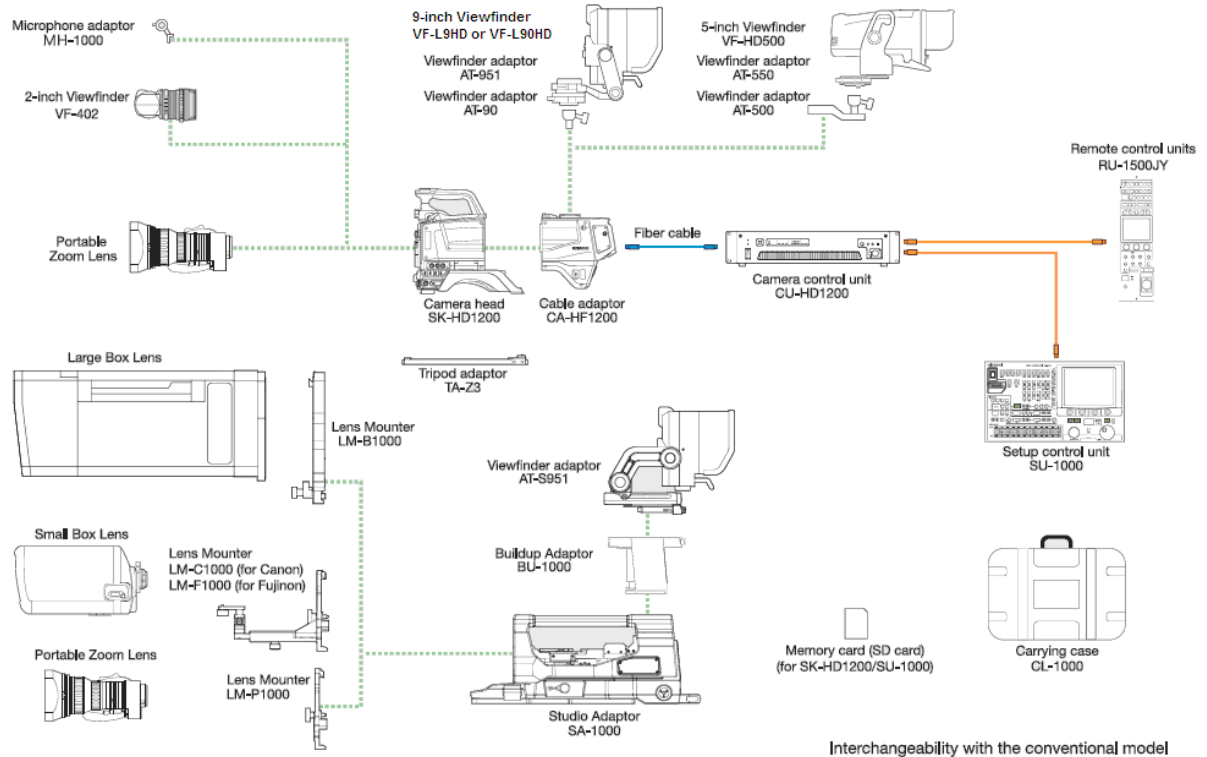


Function menu

Function menu


Connect the camera control panel or the setup control unit to the CU-HD1200 to display the function menus on PIX video output.

The function menus include the CCU menu to adjust the CU-HD1200 and the camera menu to adjust a camera.

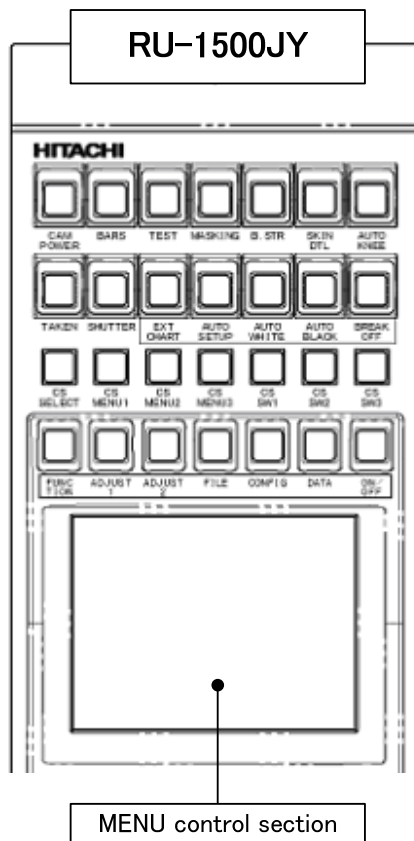

Function menu

To display CCU menu, turn on color bars and then press FUNC button of the camera control panel.

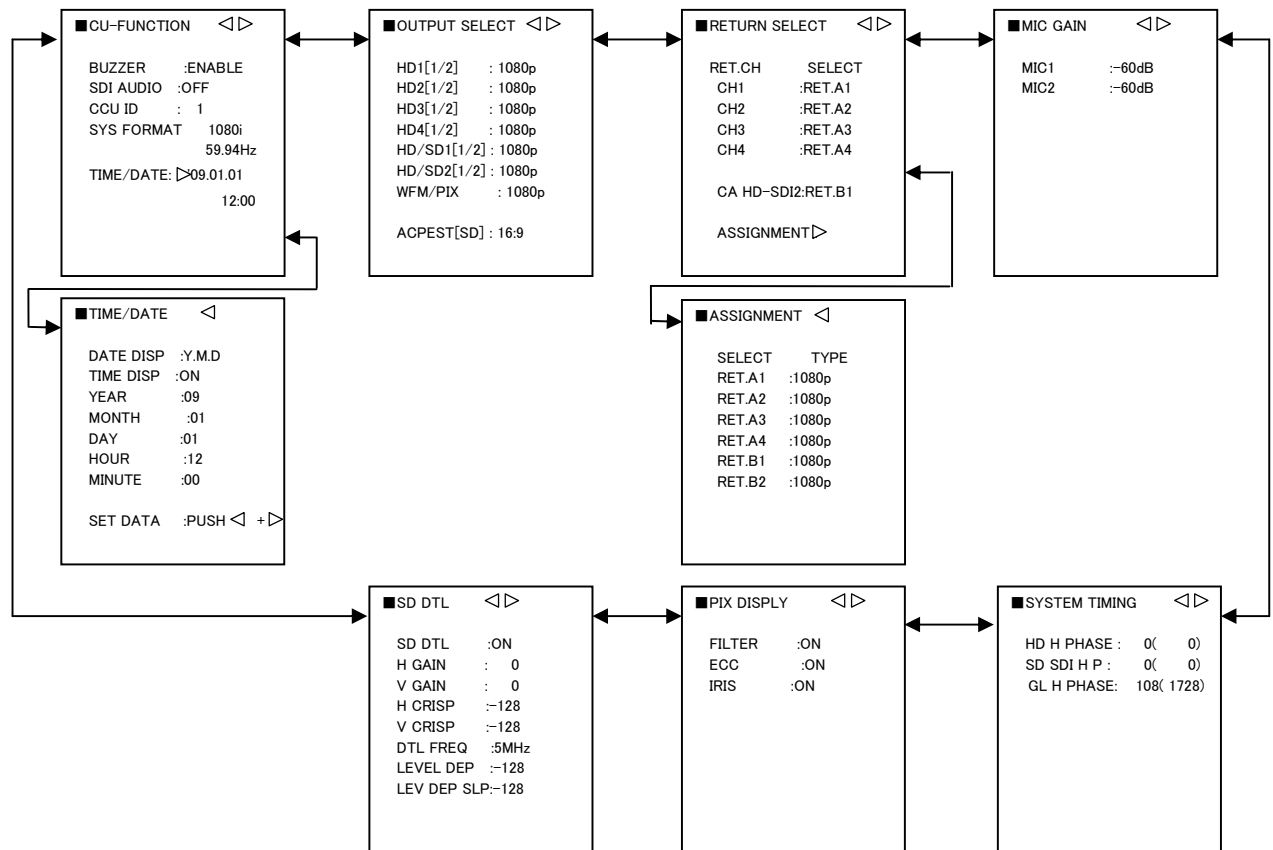

Camera menu

To display camera menu, press FUNC button when color bars off. The contents of camera menu depend on camera type. Please refer to the camera operating instructions.

Function menu

CU-FUNCTION menu

■ CU-FUNCTION ◀▶	
BUZZER	: ENABLE
SDI AUDIO	: OFF
CCU ID	: 1
SYS FORMAT	: 1080i
	59.94Hz
TIME/DATE:	▶ 09.01.01
	12:00

Item	Setting	Factory setting	Description
BUZZER	ENABLE, DISABLE	ENABLE	Sets buzzer operation during call input. ENABLE : Buzzer sounds. DISABLE : Buzzer does not sound.
SDI AUDIO	ON, OFF	OFF	Sets the embedded audio ON/OFF of the HD-SDI /SD-SDI output.
CCU ID	1 ~ 12	1	Sets the CCU ID. This ID is required for the SETUP CONTROL UNIT to identify group of CCU.
SYS FORMAT			Moves to the TV FORMAT submenu
TIME/DATE	▶		Moves to the TIME/DATE submenu.

TIME/DATE menu

■ TIME/DATE ◀	
DATE DISP	: Y. M. D
TIME DISP	: ON
YEAR	: 09
MONTH	: 01
DAY	: 01
HOUR	: 12
MINUTE	: 00
SET DATA	: PUSH ◀ ▶

Item	Setting	Factory setting	Description
DATE DISP	OFF, Y.M.D, M.D.Y, D.M.Y	Y.M.D	Sets the order of date display. If set OFF, the date is not displayed.
TIME DISP	OFF, ON	ON	Sets the time display. When ON is selected, the CU-FUNCTION menu displays the time.
YEAR	00 ~ 99	-	Sets the year of the date.
MONTH	00 ~ 12	-	Sets the month of the date.
DAY	00 ~ 31	-	Sets the day of the date.
HOUR	00 ~ 23	-	Sets the hours of the time.
MINUTE	00 ~ 59	-	Sets the minutes of the time.
SET DATA	PUSH ◀ + ▶	-	Press both ◀ and ▶ buttons together to fix the TIME/DATE setting.

Function menu

OUTPUT SELECT menu

■ OUTPUT SELECT		
HD1 [1/2]	:	1080p
HD2 [1/2]	:	1080p
HD3 [1/2]	:	1080p
HD4 [1/2]	:	1080p
HD/SD1 [1/2]	:	1080p
HD/SD2 [1/2]	:	1080p
WFM/PIX	:	1080p
ASPECT [SD]	:	16:9

Item	Setting	Factory setting	Description
HD1[1/2]	1080p,1080i, DL[1:A/2:B],720p	1080p	Assigns output signal of HD1[1/2] connector .
HD2[1/2]	1080p,1080i, DL[1:A/2:B],720p	1080p	Assigns output signal of HD2[1/2] connector.
HD3[1/2]	1080p,1080i, DL[1:A/2:B],720p	1080p	Assigns output signal of HD3[1/2]connector.
HD4[1/2]	1080p,1080i, DL[1:A/2:B],720p	1080p	Assigns output signal of HD4[1/2] connector.
HD/SD1[1/2]	1080p,1080i,720p, SD	1080p	Assigns output signal of HD/SD[1/2] connector.
HD/SD2[1/2]	1080p,1080i,720p, SD	1080p	Assigns output signal of HD/SD[1/2] connector.
WFM/PIX	1080p,1080i, , DL[1:A/2:B],720p SD	1080p	Assigns output signal of WFM/PIX connectors.
ASPECT[SD]	16:9, 4:3	16:9	Sets aspect ratio of SD video.

RETURN SELECT menu

■ RETURN SELECT ◀▶		
RET. CH	:	SELECT
CH1	:	RET. A1
CH2	:	RET. A2
CH3	:	RET. A3
CH4	:	RET. A4
CA HD-SDI2	:	RET. B1
ASSIGNMENT:	:	▶

Item	Setting	Factory setting	Description
CH1	RET.A1,RET.A2, RET.A3,RET.A4	RET.A1	Assigns the return video signal to CH1 selected when CA-HF1200 RET switch is set to 1.
CH2		RET.A2	Assigns the return video signal to CH2 selected when CA-HF1200 RET switch is set to 2.
CH3		RET.A3	Assigns the return video signal to CH3 selected when CA-HF1200 RET switch is set to 3.
CH4		RET.A4	Assigns the return video signal to CH4 selected when CA-HF1200 RET switch is set to 4.
CA HD-SDI2	RET.B1,RET.B2	RET.B1	Assigns the return video signal to the HD-SDI2 output on CA-HF1200.
ASSIGNMENT		-	Moves to the ASSIGNMENT submenu.

Function menu

ASSIGNMENT menu

■ ASSIGNMENT ◀	
SELECT	TYPE
RET. A1	: 1080p
RET. A2	: 1080p
RET. A3	: 1080p
RET. A4	: 1080p
RET. B1	: 1080p
RET. B2	: 1080p

Item	Setting	Factory setting	Description
RET.A1	1080p,	1080p	Assigns the TV format to RET.A1.
RET.A2	1080i,	1080p	Assigns the TV format to RET.A2.
RET.A3	720p,	1080p	Assigns the TV format to RET.A3.
RET.A4	SD SDI 16:9	1080p	Assigns the TV format to RET.A4.
RET.B1	SD SDI 4:3	1080p	Assigns the TV format to RET.B1.
RET.B2		1080p	Assigns the TV format to RET.B2.

MIC GAIN menu

■ MIC GAIN ◀ ▶	
MIC1	: -60dB
MIC2	: -60dB

Item	Setting	Factory setting	Description
MIC1 GAIN	-10dB, -20dB, -30dB, -40dB, -50dB, -60dB, -70dB	-60dB	Sets the sensitivity of the MIC1 line.
MIC2 GAIN	-10dB, -20dB, -30dB, -40dB, -50dB, -60dB, -70dB	-60dB	Sets the sensitivity of the MIC2 line.

MIC GAIN of camera can be controlled remotely when camera is connected. When "*" mark is displayed on the left of MIC1/2, MIC GAIN can not be controlled, because camera is not connected, etc. Or when MIC GAIN is controlled by external system via MIC REMOTE connector, the "*" sign is also displayed there, and this menu is not available..

Function menu

SYSTEM TIMING menu

■SYSTEM TIMING ◀▶	
HD H PHASE :	0 (0)
SD SDI H P :	0 (0)
GL H PHASE :	108 (1728)

Item	Setting	Factory setting	Description
HD H PHASE	-128(-512)to +127(511)	0	Adjusts HD-SDI output phase locally.
SD SDI H P	-128(-256)to +127(255)	0	Adjusts SD-SDI output phase locally.
GL H PHASE	-128(-2048)to +127(2047)	108(1728)	Adjusts whole system phase against genlock signal.

PIX DISPLAY menu

■PIX DISPLY ◀▶	
FILTER :	ON
ECC :	ON
IRIS :	ON

Item	Setting	Factory setting	Description
FILTER	OFF, ON	ON	Displays optical filter type on PIX OUT.
ECC	OFF, ON	ON	Displays Electric Color Correction (ECC) filter type on PIX OUT.
IRIS	OFF, ON	ON	Displays F-number of lens iris on PIX OUT.

SD-DTL menu

■SD DTL ◀▶	
SD DTL :	ON
H GAIN :	0
V GAIN :	0
H CRISP :	-128
V CRISP :	-128
DTL FREQ :	5MHz
LEVEL DEP :	-128
LEV DEP SLP :	-128

Item	Setting	Factory setting	Description
SD DTL	OFF, ON	ON	Enable the detail effect specialized for SDTV.
H GAIN	-128 to +127	0	Adjusts the horizontal detail level.
V GAIN	-128 to +127	0	Adjusts the vertical detail level.
H CRISP	-128 to +127	-128	Adjusts the lower threshold level to enable horizontal detail in order not to emphasize noise.
V CRISP	-128 to +127	-128	Adjusts the lower threshold level to enable vertical detail in order not to emphasize noise.
DTL FREQ	4MHz,5MHz,6MHz, 7MHz,8MHz	5MHz	Set the detail frequency to emphasize.
LEVEL DEP	-128 to +127	-128	Adjusts the detail level on dark area of image.
LEV DEP SLP	-128 to +127	-128	Adjusts the slope of detail effect on dark area of image.


Function menu

ECC filter indication

When the FILTER setting is ON, the ECC filter is displayed at the lower center of the screen. The display depends on the optical filter position.

ECC_FILTER	A.3200K B.4300K C.5600K D.6300K E.8000K	Displays ECC filter information with optical filter 1.
------------	---	--

PIX OUT camera status display

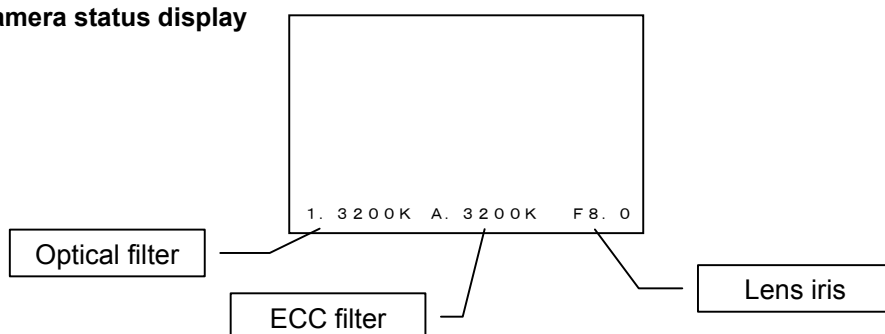

Cable check

Cable check

CU-HD1200 automatically checks the condition of optical cable, and shows the results on both PIX OUT screen and LED indicators on front panel at start-up. If any troubles are detected, the camera power might be forced to shut down for safety.

Indication	Content
Screen: CHECK CAMERA CABLE CAMERA CABLE SHORT LED: SHORT lights	The power line may be short-circuited. Camera power defaults to off and camera power switch is rendered inoperative.
Screen: CAMERA CABLE OPEN LED: OPEN lights	Cable is not connected. Camera power defaults to off and camera power switch is rendered inoperative.

Backup battery replacement

Backup battery replacement

The backup battery is already mounted at the factory.

If the time/date can not maintain accurate information, the alarm message “BACKUP BATT EMPTY” is shown on PIX OUT for about 6 seconds at start-up. In this case, the battery should be replaced, and the date and time should be adjusted at the TIME/DATE menu.




WARNING

Be sure to replace the battery with a type CR2032 lithium battery. Using another type of battery can damage the camera and pose a fire hazard.

Also be sure to dispose of the depleted battery as prescribed by local ordinance (e.g., return it to the dealer). Do not dispose of the battery with combustible waste, as this may pose a fire, safety and environmental hazard.

Backup battery

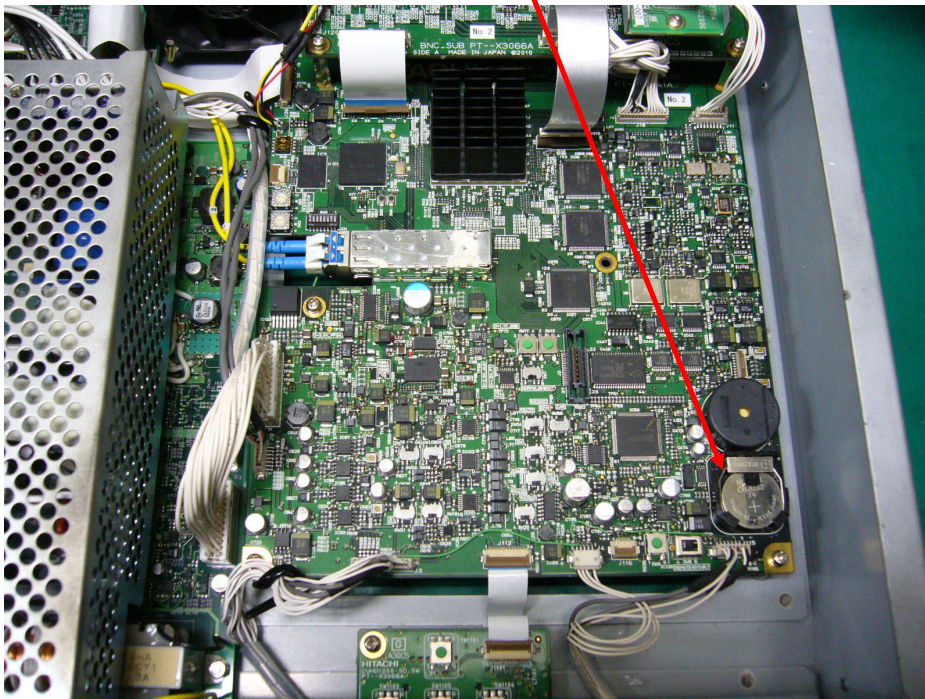


Service information

Connector pin diagrams

INTERCOM (5 pin XLR female:HA16PRH-5S)


Combined connector:5pin XLR male

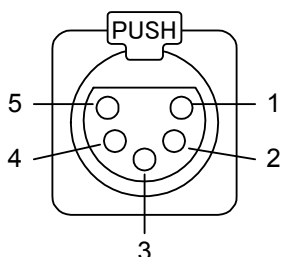

Pin	Signal
1	TALK (C)
2	TALK (H)
3	RECEIVE (C)
4	RECEIVE L (H)
5	RECEIVE R(H)

MIC OUT 1,2 (3 pin XLR female:HA16RM-3SE)


Combined connector:5pin XLR male

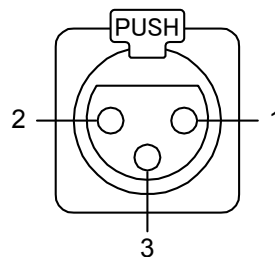

Pin	Signal
1	MIC GND
2	MIC(H) IN
3	MIC(C) IN

Remote 1,2 (4 pin female:HR10A-7R-4S(73))


Combined connector: HR10A-7P-4P

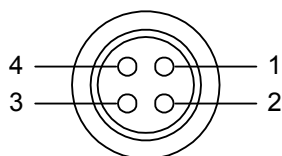


Pin	Signal
1	+12V output
2	DATA input
3	DATA output
4	DATA ground

TALLY OUT(9pin D-sub female:RDED-9S-LNA(4-40)(55))

 Combined connector: 9pin D-sub male



Application circuit example

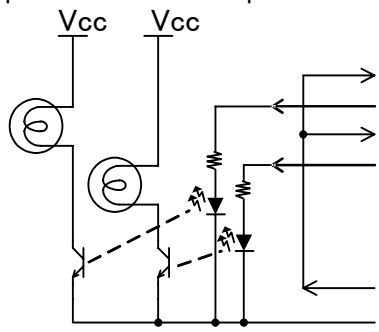


Plug

CCU mainframe

Internal circuit


Pin	Signal
1	R TALLY 1
2	R TALLY 2
3	G TALLY 1
4	G TALLY 2
5	
6	
7	NC
8	+24V
9	GND
-	-

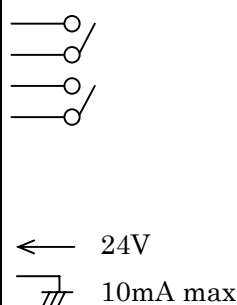

+24V power current of pin 8 is max.10mA.

Service information


COMMUNICATION (25pin D-sub male:RDBD-25P-LNA(4-40)(55))
Combined connector: 25pin D-sub female

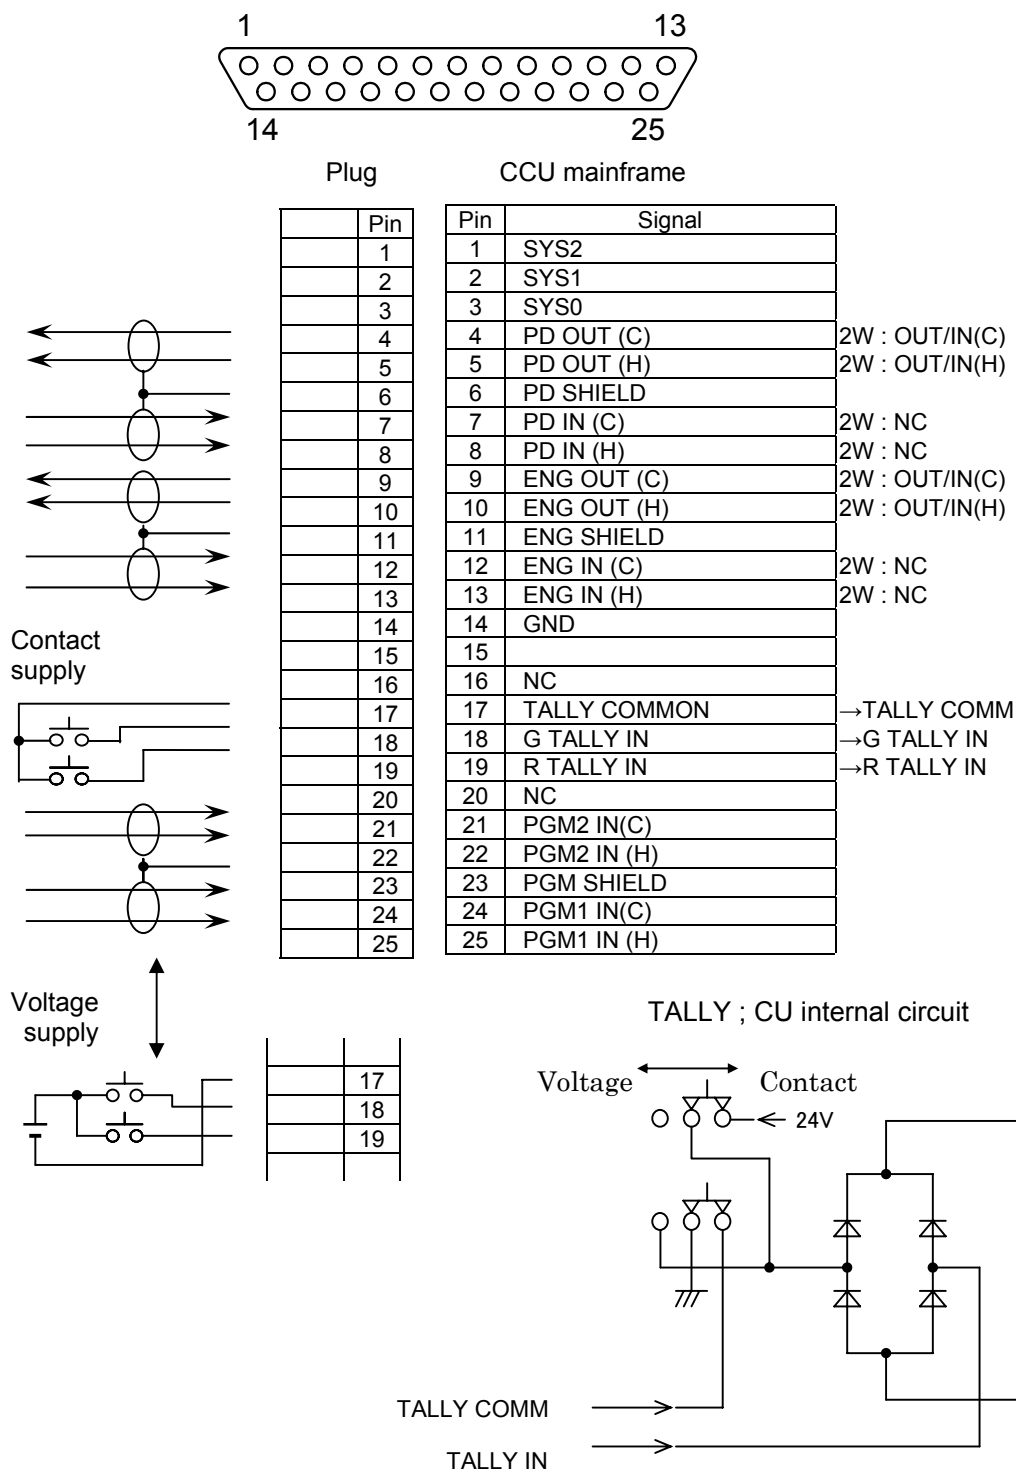

Service information

MIC REMOTE (15pin D-sub female: RDAD-15S-LNA(4-40)(55))

Combined connector: 15pin D-sub male

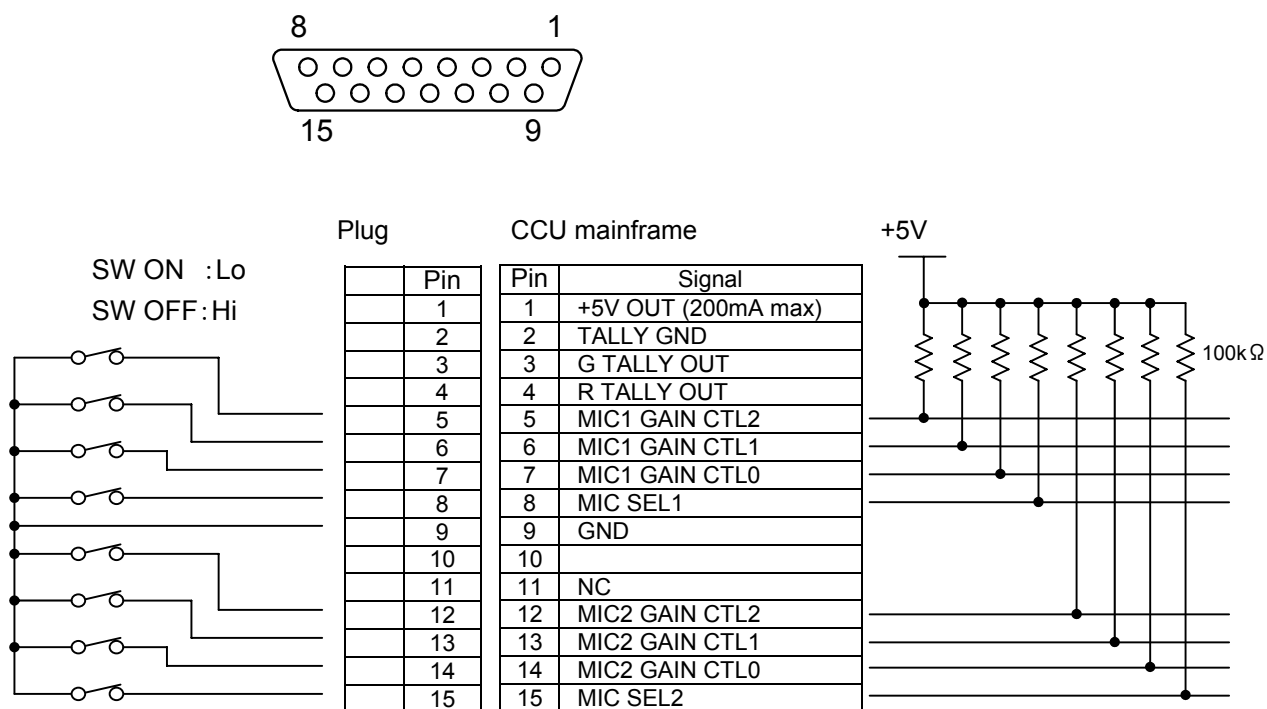

MIC SEL	Hi : Internal Control (Menu)
	Lo : External Control (MIC REMOTE connector)

CTL0	CTL1	CTL2	MIC AMP GAIN
Hi	Hi	Hi	70dB
Lo	Hi	Hi	60dB
Hi	Lo	Hi	50dB
Lo	Lo	Hi	40dB
Hi	Hi	Lo	30dB
Lo	Hi	Lo	20dB
Hi	Lo	Lo	10dB
Lo	Lo	Lo	-10dB


Service information

TRUNK(9pin D-sub male:RDED-9P-LNA(4-40)(55))

Combined connector: 9pin D-sub female

Plug

CCU mainframe

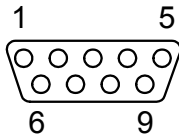

*RS-232C(OPTION)
 *RTS:Request To Send
 *CTS:Clear To Send


	Pin	Pin	Signal
	1	1	NC
→	2	2	RX_RS-422+ or (RS-232C) (IN)
←	3	3	TX_RS-422+ or (RS-232C)(OUT)
	4	4	NC
	5	5	GND
	6	6	NC
→	7	7	RX_RS422-(RTS (RS-232C))
←	8	8	TX_RS422-(CTS (RS-232C))
	9	9	NC

WFM CONTROL (15pin female:YKF42-8043N)

Combined connector: 15pin D-sub male

Plug

CCU mainframe

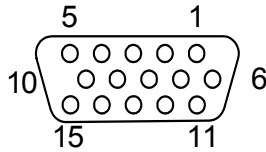

	Pin	Pin	Signal
	1	1	
←	2	2	WFM CTL0
←	3	3	WFM CTL1
←	4	4	WFM CTL2
←	5	5	WFM CTL3
←	6	6	WFM CTL4
←	7	7	WFM CTL5
←	8	8	WFM CTL6
←	9	9	WFM CTL7
	10	10	
	11	11	
	12	12	
	13	13	
	14	14	
	15	15	SHIELD

MODE	Analog PIX OUT	Analog WFM OUT	CTL0	CTL1	CTL2	CTL3	CTL4	CTL5	CTL6	CTL7
R	R	R	Lo	Hi	Hi	Hi	Hi	Hi	Hi	Hi
G	G	G	Hi	Lo	Hi	Hi	Hi	Hi	Hi	Hi
B	B	B	Hi	Hi	Lo	Hi	Hi	Hi	Hi	Hi
ENC	ENC	ENC	Hi	Hi	Hi	Lo	Hi	Hi	Hi	Hi
SUP	ENC	SUP	Hi	Hi	Hi	Hi	Lo	Hi	Hi	Hi
SEQ	ENC	SUP	Hi	Hi	Hi	Hi	Hi	Lo	Hi	Hi

Service information

Switch setting for AC power supply




J (Japan) :AC 100V 50/60Hz

U (U.S.A.) :AC 117V 60Hz

E (Europe) :AC 230V 50Hz

Procedure


1. Loose two screws and lift the front panel slightly, and then pull it open.
2. Set two switches to supplied AC power voltage according to the diagram.

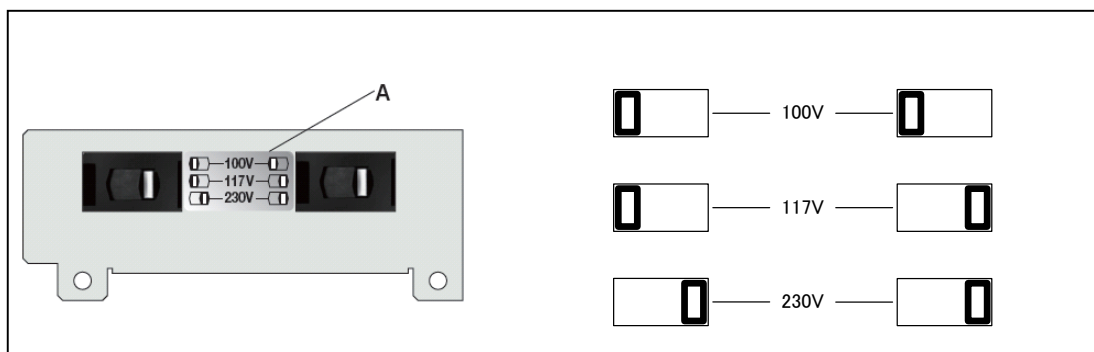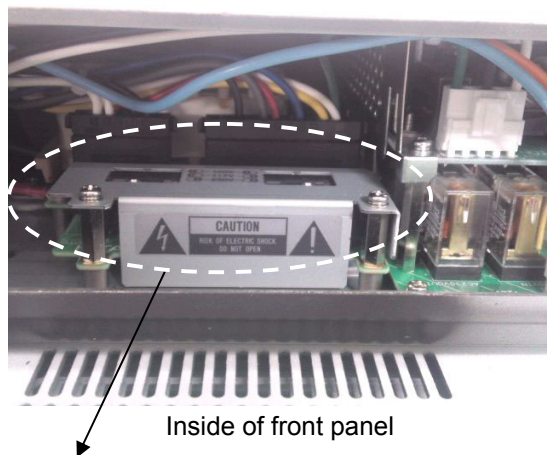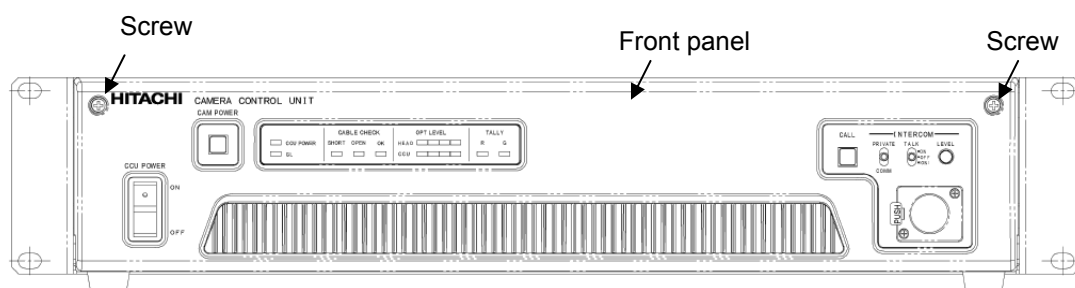

Service information

Intercom system setting

CUH1200-MAIN

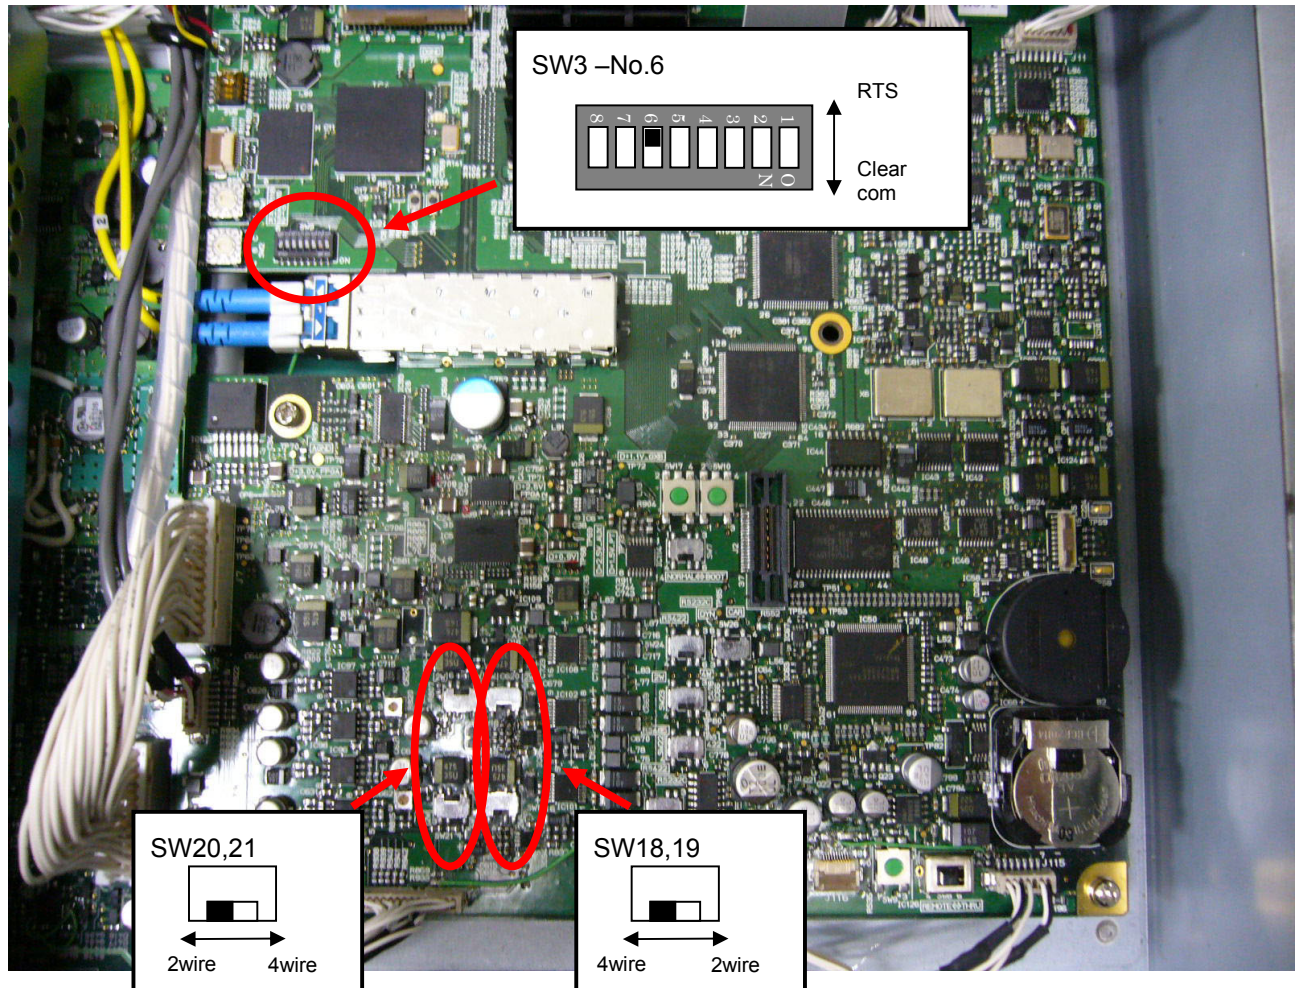

Service information



Video frame rate setting

The CU-HD1200 is switchable for video frame rate between 59.94 Hz and 50 Hz.

The setting method is offered by the dip switch SW3–No.1 on CUH1080p-MAIN board.

When the dip switch SW6–No.1 is turned ON, the video frame rate can be switched by the dip switch SW3–No.2.

Dip switch setting on CUH1080p-MAIN Board

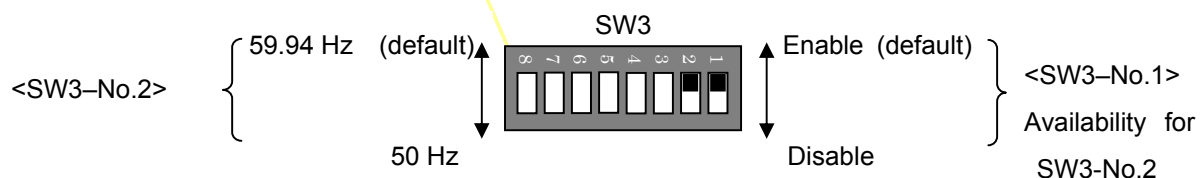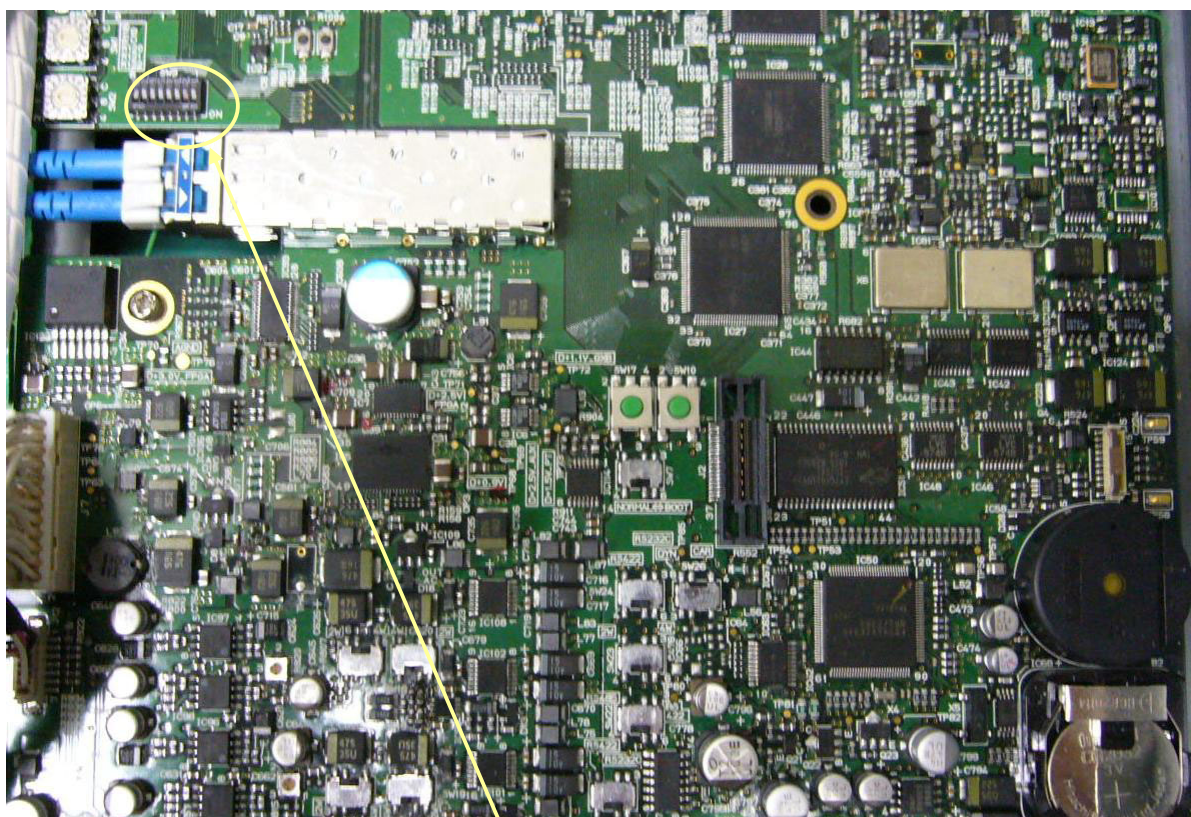


NOTICE

Set both camera and CCU to same video frame rate independently.

Service information

Network Settings

The network IP address can be set by connecting a CROSSED RJ45 network cable (crossed-cable) or straight RJ45 cable with network hub between a PC and the CU-HD1200. The control software is provided by HITACHI.

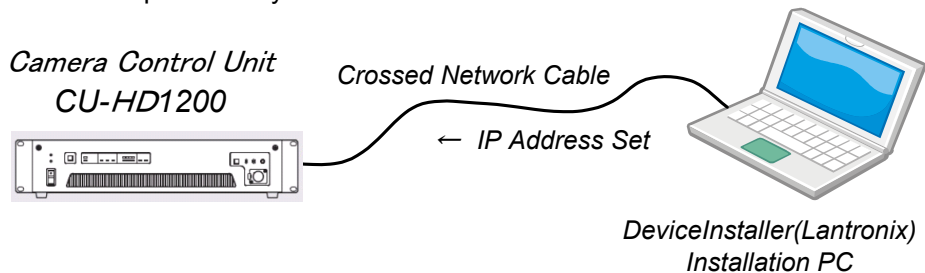


a. XPORT web server device installation

NOTE: Microsoft .NET Framework 2.0 or greater must be installed on the PC beforehand

b. Insert the downloaded software that file name “Di32DL_4.2.0.3_Web.exe”
The PC does not have to be connected to the CU-HD1200 at this time.

c. Double click to install and follow the instructions on the screen to install the program on the PC.

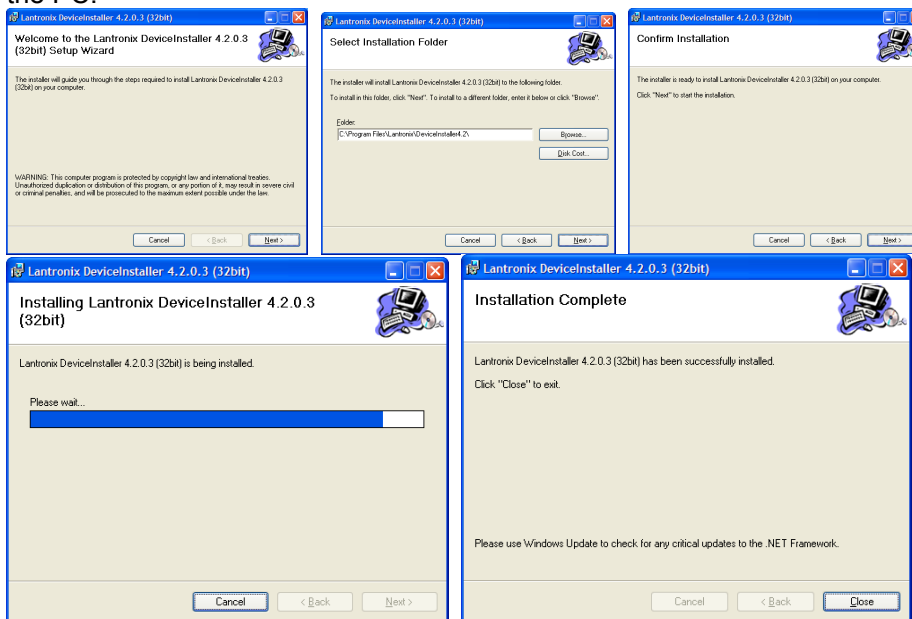


The latest version is on website as below.

http://ltxfaq.custhelp.com/app/answers/detail/a_id/644

The version No. is 4.3.0.1 (as of Sep 2010).


Service information

- 1.) Please set or change the TCP/IP protocol properties of the PC to "Obtain an IP address automatically" because the IP Address initialization of CU-HD1200 is an automatic acquisition mode.

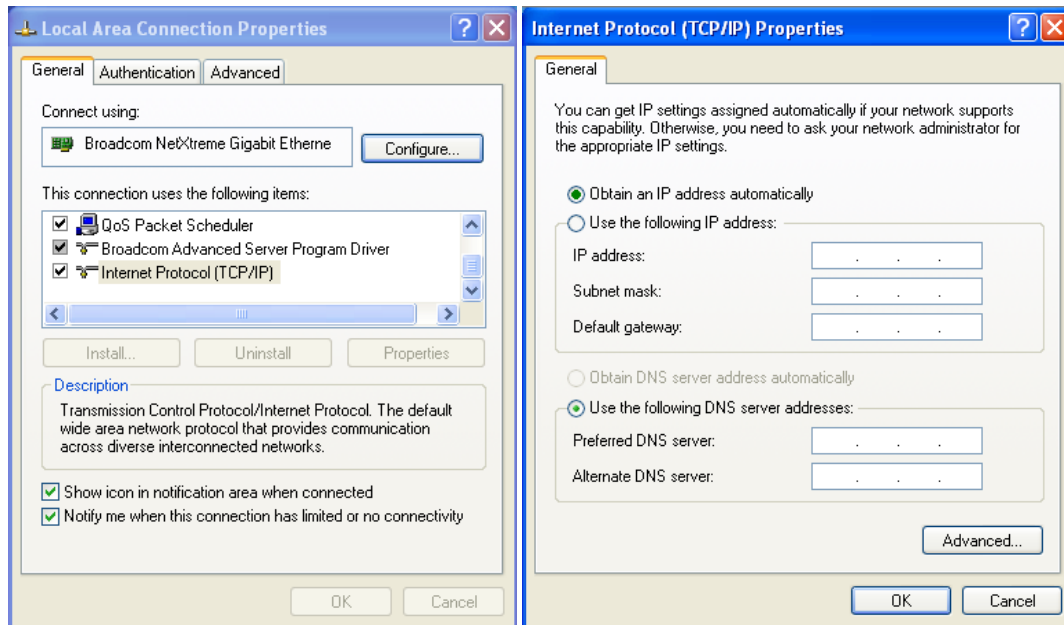

If the CCU has set IP address, the PC has to be set "Use the following IP address" then input the IP address, Subnet mask, and Default gateway.

- 2.) Connect the CU-HD1200 to the PC as shown in the above figure. Execute the Lantronix **DeviceInstaller** application by START > ALL PROGRAMS > LANTRONIX > **DeviceInstaller** 4.2 > **DeviceInstaller**.

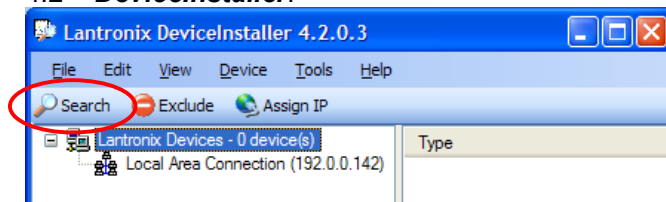


- 3.) Click on "Search" to display the current IP Address of the connected CU-HD1200. The right pane will show the CU-HD1200 TCP/IP Network Settings.

Search	Exclude	Assign IP				
Lantronix Devices - 1 device(s)	Type	Name	Group	IP Address	Hardware Address	Status
Local Area Connection (10.233.77.50)	XPort-03			10.233.77.41	00-20-4A-93-A4-CF	Online
XPort						

Service information

If the IP Address of the CU-HD1200 is highlighted, and the "Home" button on the screen is clicked, the Network Settings are displayed on the right pane of the **DeviceInstaller** program. Note that only the IP Address can be changed on the Network Settings pane. When it is necessary to change the port number of the CCU, click on the "Serial Settings" under Channel 1 on the Network Settings pane.

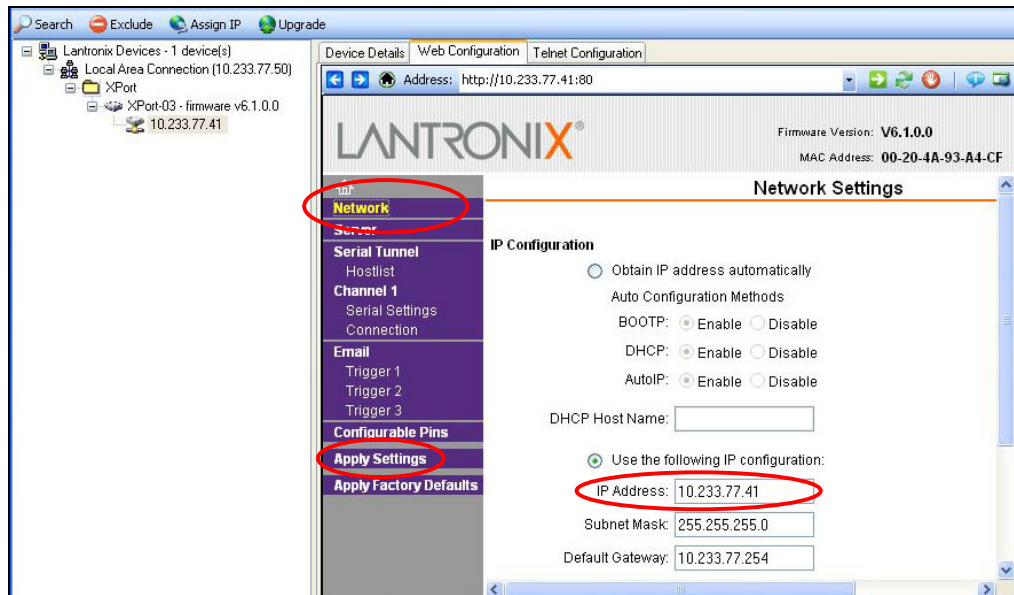

- 4.) Click on “OK” on the right pane then on “Apply Settings” on the left pane to change the IP address.




- 5.) Confirm that the IP Address has been changed by re-starting the "**DeviceInstaller**" program again by clicking on "Search ". The IP Address on the PC side should also change when retrieving it.



Type	Name	Group	IP Address	Hardware Address
XPort-03			10.233.77.42	00-20-4A-93-A4-CF

Service information


When CU-HD1200 is changed to arbitrary [IP Address], [Subnet Mask], and [Default Gateway], and the address is retrieved, it is necessary to match IP Address of PC, Subnet Mask, and Default Gateway.
(Enough operational administrative to IP Address etc.)

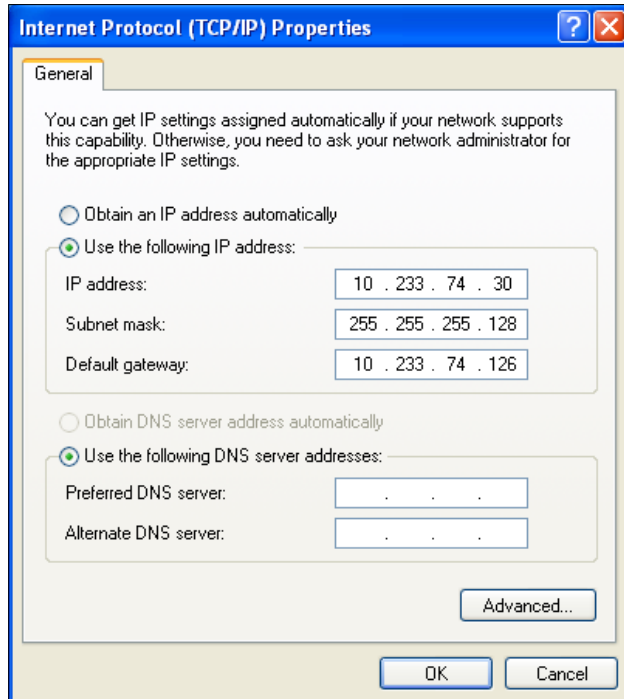

External View

CU-HD1200 External View

(Unit: mm)

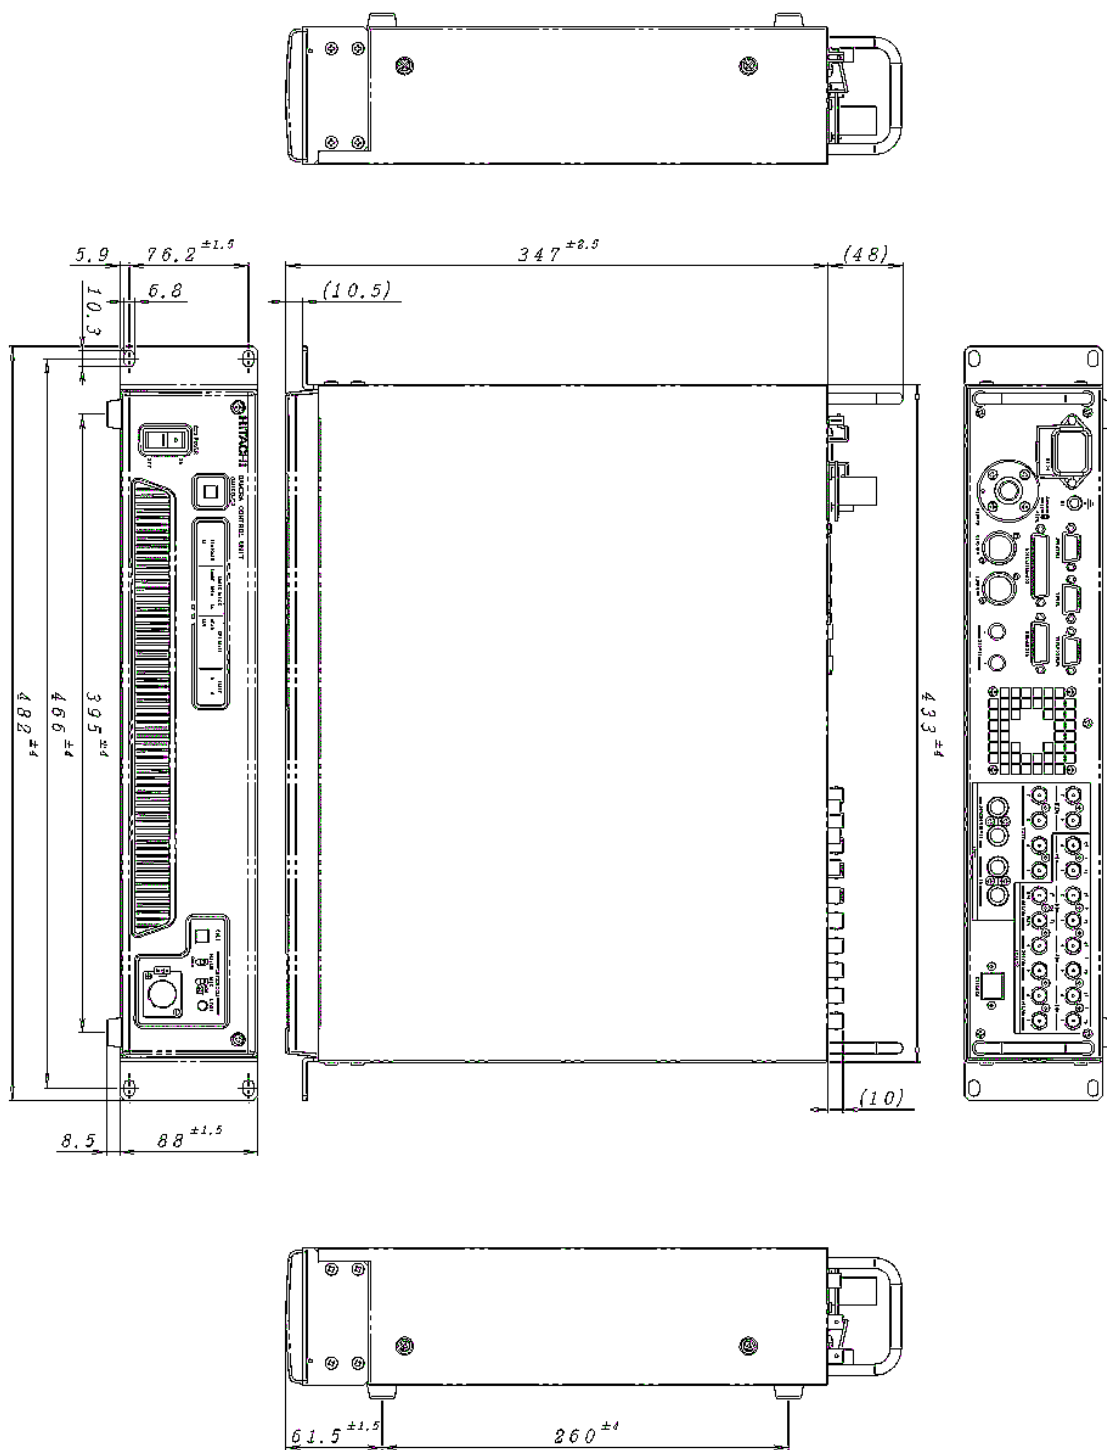

Specifications

Camera Control Unit CU-HD1200

Power supply voltage	(J) AC100V 50Hz/60Hz (CU-HD1200J) (U) AC117V 60Hz (CU-HD1200U) (E) AC230V 50Hz (CU-HD1200E)
Power consumption	300W approx. (AC operation, including SK-HD1200, VF-402, CA-HF1200 and AUX POWER OUT 100VA)
Ambient Temperature	Operating : 0°C ~ +40°C Storage : -20°C ~ +60°C
Dimensions	433(W) × 88(H) × 347(D) mm
Mass	10kg approx.
Maximum cable distance	1km (Full operation) 4km (Without utility power)

■Input output signals (CU-HD1200)

Input signals

Camera Control Unit CU-HD1200 (INPUT)		
GEN LOCK IN	B-BST 0.45Vp-p/75Ω(loop through) or HDTV tri-level sync 0.60Vp-p/75Ω (loop through)	BNC x1
DIGITAL RET IN(A) 1/2/3/4 (B) 1/2	HD-SDI or SD-SDI •1080p : SMPTE424M •1080i : SMPTE292M •720p : SMPTE292M •SD-SDI : SMPTE259M-C	BNC x4 + x2 (A)x4 : for VF (B)x2 : for floor monitor
PROMPT IN	VS or VBS 1.0Vp-p/75Ω(loop through)	BNC x1
INTERCOM(HEAD SET)	-60dBm	XLR-5pin(Female)
COMMUNICATION		D-sub 15pin
•INTERCOM	0dBm , 600Ω at 4Wire 0dBu or -15dBu ,200Ω at 2Wire Clear-Com and RTS compatible	PD/ENG
•PGM	0dBm/600Ω	
•R/G TALLY	Contact or Voltage selectable	
REMOTE 1	1.5Vp-p	4pin
REMOTE 2	1.5Vp-p	4pin
REMOTE 3	Remote	RJ-45
TRUNK	RS-422 (150k baud) (RS-232C : Option)	D-Sub 9 pin

Specifications

Output signals

Camera Control Unit CU-HD1200 (OUTPUT)		
DIGITAL OUT HD1~HD4 (1/2)	HD-SDI (3G/1.5G or Dual Link switchable) (Embedded 2-Chnl audio available) •1080p(3G) : SMPTE424M •1080p(Dual Link) : SMPTE372M •1080i : SMPTE292M •720p : SMPTE292M	BNC x8(x2+x2+x2+x2) or Dual Link x4
DIGITAL OUT HD/SD1~HD/SD2 (1/2)	HD-SDI or SD-SDI selectable (HD-SDI: 3G/1.5G switchable) (Embedded 2-Chnl audio available) •1080p : SMPTE424M •1080i : SMPTE292M •720p : SMPTE292M •SD-SDI : SMPTE259M-C	BNC x4 (x2 + x2)
DIGITAL OUT HD/SD3 (WFM)	HD-SDI or SD-SDI selectable WFM (Embedded 2-Chnl audio available) •1080p : SMPTE424M •1080i : SMPTE292M •720p : SMPTE292M •SD-SDI : SMPTE259M-C	BNC x1
DIGITAL OUT HD/SD3 (PIX)	HD-SDI or SD-SDI selectable PIX (Embedded 2-Chnl audio available) •1080p : SMPTE424M •1080i : SMPTE292M •720p : SMPTE292M •SD-SDI : SMPTE259M-C	BNC x1
MIC OUT 1	0dBm/600Ω	XLR-3pin
MIC OUT 2	0dBm/600Ω	XLR-3pin
INTERCOM (HEAD SET)	0dBu MAX+15dB	XLR-5pin(Female)
Remote 1	1.5Vp-p	4pin
Remote 2	1.5Vp-p	4pin
Remote 3	Remote	RJ-45
COMMUNICATION		D-sub 25pin
•INTERCOM	0dBm , 600Ω at 4Wire 0dBu or -15dBu ,200Ω at 2Wire	
TALLY OUT(R/G)	Contact	D-sub 9pin
	24Vdc, 10mA	
WFM CONTROL	WFM 0-7 0/5V	D-sub 15pin
MIC REMOTE	MIC1,2 Gain	D-sub 15pin
TRUNK	RS-422 (150k baud) (RS-232C : Option)	D-Sub 9 pin

Specifications

■Accessories

- Remote control unit
- Setup control unit

■Standard Composition

•Camera Control Unit	: CU-HD1200	1
•Code Set(U/J)	: WC0051(0234-0089A 2.5M) (8488057)	1
•Code Set(E)	: VM0306B;VM0303B 2.5M (BBZ0399)	1
•Operation Manual	: CU-HD1200 O/M	1
•Connector	: HDAB-15P(05) (8AAE000717)	1
•Plug Case	: HDA-CTH(4-40)(10) (JYH0050)	1
•Connector	: HDBB-25S(05) (8AAE000522)	1
•Plug Case	: HDB-CTH(4-40)(10) (JYHS003)	1
•Connector	: HDEB-9S(05) (2PBB018260)	1
•Plug Case	: HDE-CTH(4-40)(10) (JYH0051)	1
•Connector	: HDEB-9P(05) (8AAE000718)	1
•Plug Case	: HDE-CTH(4-40)(10) (JYH0051)	1
•Connector	: D02-M15SG-N-F0 (JMD0222)	1
•Plug Case	: DE-C8-J9-F1-1R (E400013231A)	1
•Pin	: D02-22-26S-PKG100 (JYD0108)	15
•Written guarantee(U)	: Written guarantee (MGA0915)	1