

Additional information


# HITACHI

## HD COLOR CAMERA SYSTEM

### REMOTE CONTROL UNIT

# RU-1500JY R1

### OPERATING INSTRUCTIONS

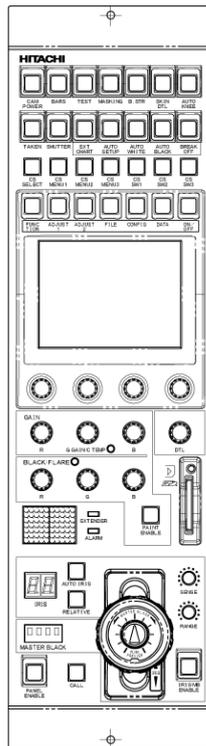

Please read this operating instruction carefully for proper operation, and keep it for future reference.

## Hitachi Kokusai Electric


**Note:** The model and serial numbers of your product are important for you to keep for your convenience and protection. These numbers appear on the nameplate located on bottom of the product. Please record these numbers in the spaces provided below, and retain this manual for future reference.

**Model No.** \_\_\_\_\_

**Serial No.** \_\_\_\_\_

# Procedure for Ethernet connection

## Connection Diagram

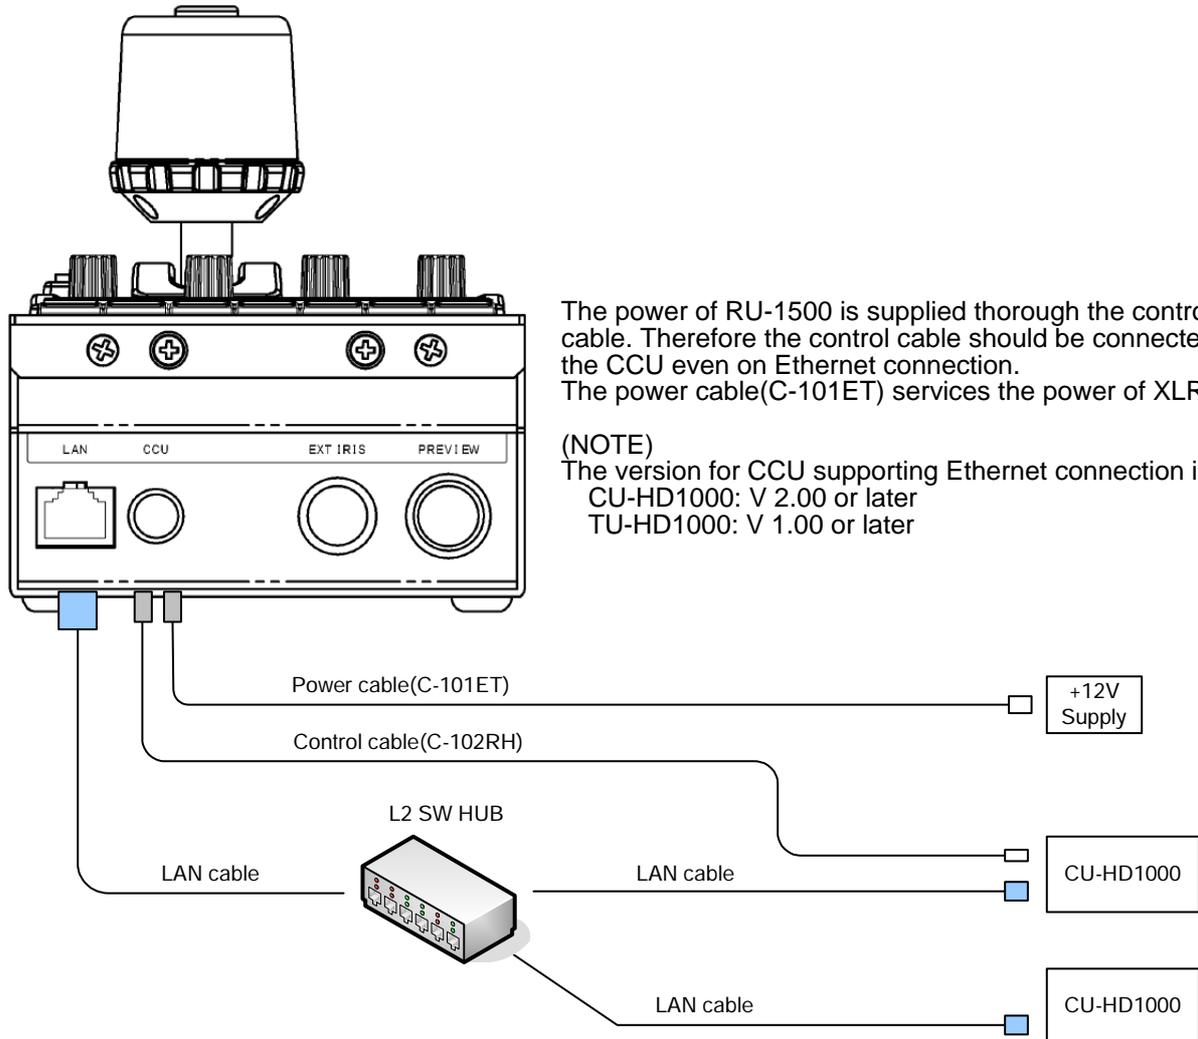


## Procedure

No	Operations	Related items on manual
1	TAKEN switch OFF	A1
2	ETHERNET ON	5.4.6
3	LOCAL ADDRESS setting	5.4.6 (2)
4	REMOTE SELECT setting	5.4.6 (6)
5	CONNECT ON or TAKEN switch ON	5.4.6 (7) or A1

# LCD menu

## 5.4.6 ETHERNET menu (CONFIG) & description.

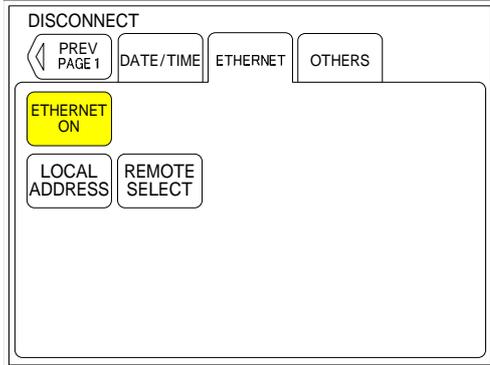


Item	Setting	RU-1500 Initialize	Description
ETHERNET ON/OFF	OFF ON	OFF	OFF:Remote control mode ON:ETHERNETmode
LOCAL ADDRESS		-	Move to local address setting menu
REMOTE SELECT		-	Move to a menu that an address setting of the connected CCU.

**Note**

Set to ETHERNET ON at setting of the LOCAL ADDRESS and the REMOTE SELECT.

## 5.4.6 (2) ETHERNET(LOCAL ADDRESS) menu (CONFIG) & description.

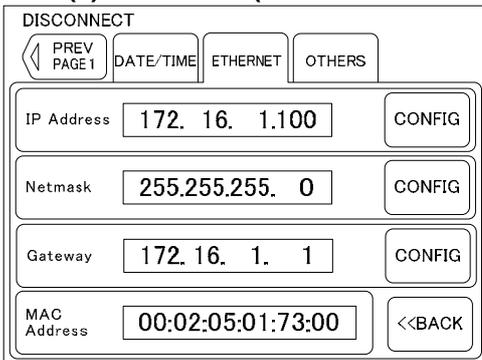


This is the local address information. Press CONFIG button to set the IP Address, the Netmask, and the Gateway. But the TAKEN must be OFF.

To go back to previous page, press the BACK button.

**Note**

The MAC address is not be changed.

## 5.4.6 (3) ETHERNET(LOCAL.IP ADDRESS) menu (CONFIG) & description.

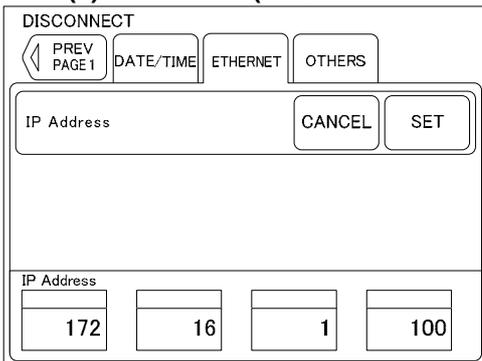

Set the local IP address by the Rotary encoder 1 to 4.

Item	Setting	RU-1500 Initialize	Description
SET		-	Store the new setting, and then move to previous page.
CANCEL		-	Cancel the new setting, and then move to previous page.

# LCD menu

## 5.4.6 (4) ETHERNET(LOCAL.Netmask) menu (CONFIG) & description.

Set the local Netmask by the Rotary encoder 1 to 4.

Item	Setting	RU-1500 Initialize	Description
SET		-	Store the new setting, and then move to previous page.
CANCEL		-	Cancel the new setting, and then move to previous page.

## 5.4.6 (5) ETHERNET(LOCAL.Gateway) menu (CONFIG) & description.

Set the local Gateway by the Rotary encoder 1 to 4.

Item	Setting	RU-1500 Initialize	Description
SET		-	Store the new setting, and then move to previous page.
CANCEL		-	Cancel the new setting, and then move to previous page.

## 5.4.6 (6) ETHERNET(REMOTE.IP ADDRESS) menu (CONFIG) & description.

Item	Setting	RU-1500 Initialize	Description
Select No	1-128	-	Select number by the Rotary encoder1. (see Note)
CONNECT	ON(Yellow): OFF(Gray):	-	ON(Yellow): Connecting to the Address. OFF(Gray): Disconnected to the Address.
CONFIG		-	Set the IP address of the Select No. (see Note)
BACK		-	Go back to previous page.

### Note

It is not able to set when the CONNECT button is ON.

# LCD menu

## 5.4.6 (7) ETHERNET(REMOTE.IP ADDRESS.CONNECT) menu (CONFIG) & description.

The screenshot shows the CONFIG menu with the following elements:

- Top bar: CONFIG, PREV PAGE 1, DATE/TIME, ETHERNET, OTHERS.
- Dialog box: Disconnect ? with YES and NO buttons.
- IP Address fields: 172, 16, 1, 1.

A disconnection message will be displayed to press the CONNECT button at CONNECT ON.

YES: Disconnected from the network.

NO: Connecting to the network is continued.

The screenshot shows the DISCONNECT menu with the following elements:

- Top bar: DISCONNECT, PREV PAGE 1, DATE/TIME, ETHERNET, OTHERS.
- Dialog box: Connect ? with YES and NO buttons.
- IP Address fields: 172, 16, 1, 1.

A connection message will be displayed to press the CONNECT button at CONNECT OFF.

YES: Connected to the network.

NO: Quit to connect.

The screenshot shows the DISCONNECT menu with the following elements:

- Top bar: DISCONNECT, PREV PAGE 1, DATE/TIME, ETHERNET, OTHERS.
- Dialog box: Fail to Connect with an OK button.
- IP Address fields: 172, 16, 1, 100.

A fail message will be displayed at fail to connect. Press OK button, then go back to previous page.

# LCD menu

## 5.4.6 (8) ETHERNET(REMOTE.IP ADDRESS.CONFIG) menu (CONFIG) & description.

DISCONNECT

PREV PAGE 1   DATE/TIME   ETHERNET   OTHERS

Select No.1   CANCEL   SET

IP Address

172	16	1	1
-----	----	---	---

Set the IP address to connect by Rotary encoder 1 to 4.

Item	Setting	RU-1500 Initialize	Description
SET		-	Store the new setting, and then move to previous page.
CANCEL		-	Cancel the new setting, and then move to previous page.