

## Rework Instructions

Replacement of CMOS Battery	Date:	30.04.2014
962/01 GUI Server		

### What you need:

- Battery, Lawo part number 296-2229-000
- VGA PC Display
- USB keyboard

The GUI Server is provided with a battery to power the real-time clock circuit and the CMOS RAM, which holds the configuration of the CMOS SETUP.

To replace the Battery you have to demount the perforated sheet above the PC board.

When the battery has been replaced you have to setup the board configuration according to the appropriate "BIOS Settings" document. To do this you have to connect a USB keyboard to the PC board. As the default display is stored in the configuration, the panel screen might not work after battery replacement. In this case you have to connect a PC monitor to the VGA connector to setup the configuration.

### Caution

There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer.