

QUICK REFERENCE GUIDE

CAREL CONTROLLER: PCO 3 Small – 2.8v / 3.0v

MAIN MENU

- Main Screen – Normal display screens, current running temperature, humidity and pressures.
- On/Off unit – Enables and disables system
- Set Points – Ability to change all temperature and humidity set points.
- Run Times – Displays run hours of all components.
- Min/Max reading – Displays min and max temperature, pressures and humidity in last 24 hours.
- Factory menu – Factory set and factory authorized changes only
- Network status – Display status of devices on the network.
- Alarm history – Shows all past alarms

VIEW AND CHANGE SET POINTS

- Press **“Prg”** to view menu list
- Press **↓** to highlight **“Set Points”**
- Press **↵**
- Press **↵** to move cursor to password
- Press **↓** to set password to **9999**
- Press **↵** (Set points will be displayed)
- Press **↓** until desired set point is displayed
- Press **↵** to move to desired set point
- Press **↑** or **↓** to change the set point
- Press **↵** to initialize the set point
- Press **“Esc”** twice to exit set points and return to the **“systems status”** screens

TO VIEW CURRENT ALARMS

- Press **🔔**
- Press **↓** to view
- Press **↵** when prompted to clear current

VIEW ALARM HISTORY

- Same as above but select **“Alarm History”** rather than **“Set Points”**

TO VIEW CURRENT STATUS

- Press **↑** to view past alarms

*** AT ANY TIME PRESS THE ESC KEY TO GET BACK TO THE MAIN “SYSTEMS DISPLAY SCREENS”**

