! Warning This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advice non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service manual by anyone else could result in serious injury or death. Order No. BSD0702S024 D02D26

# Supplement NTSC/PAL

# Subject : Change of Shutter Setting (Software Version Update)

Please use this supplement together with the Service Man	ual as follows :
Model No.	Effective from
AJ-RC10G	Running Change in C7
AJ-RC10MC	Running Change in C7

# Detail

Software dealing shutter setting value has been updated as follows.

Shutter setting value on AJ-RC10G/MC has not been memorized after power off.  $\rightarrow$  Shutter setting value on AJ-RC10G/MC has been memorized after power off.

\* Refer to the page 2 about change of Operating Instructions.

Ref. No.	Original Part No.	New Part No.	Part Name & Descriptions	Pcs	Remarks	
FRONT CPU P.C.BOARD: VEP20B91A						
-	VVVSI4752A VERSION:1.00-00-0.01	VVVSI4752B VERSION:1.01-00-0.00	AJ-RC10G/MC Software	1		

EA01466:2

Panasonic

© 2007 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

# AJ-RC10G Operating Instructions

# Page E-16

### When the power is on

When the POWER button is pressed, the lamp for the PANEL ACTIVE button is on, and the settings of the camera recorder are read into the unit.

The respective numerical values are displayed on the PRE/A/B display, CC/ND display, GAIN display, and the IRIS display, while R GAIN and B GAIN are displayed on the LCD panel. In this case, only the PANEL ACTIVE button, the SW ACTIVE button, the VR ACTIVE button, the AUTO IRIS button, M.PED volume and the IRIS volume can be operated from the unit, while other buttons and volumes are not operative. However, the settings on the A.KNEE ON button, the SHT ON button, the AUTO IRIS button, the BAR ON/OFF button, the CHARA ON button and the shutter setting values will be in the states that had been set on the unit at the last time,

### Page E-24

### Menu

The menu items on the unit may vary with the camera recorder connected to the unit.

For the following menu items, the factory settings for the unit only are set separately from the camera recorder.

- BLACK-VR-CONTROL, BLACK-VR-MODE, and BLACK-VR-RANGE in "BLACK"
- GAIN-VR-MODE and GAIN-VR-RANGE in "WHITE"
- BUZZER, LCD CONTRAST, and SW BRIGHT in "SYSTEM"
- MODE and SPED in "SHUTTER"

When the column of "Storage" in the menu table is answered with "Yes", the settings for the relevant items can be stored on the unit or the SD memory card as a scene file. For details, refer to "Operation of the scene file" (page 19) and "Saving/Loading of scene files onto the SD memory card" (page 21).

# Page E-27 SHUTTER

Layer	Item	Variable range	Contents description	Storage
1	MODE	EIX S.S	To select whether the shutter setting for SHUTTER ON is set to the fixed mode or the synchro-scan mode FIX: Fixed shutter S.S: Syncro-scan	Yes
	SPED	1/60 1/100 1/120 1/250 1/1000 1/2000 HALE	To select the shutter speed The selected speed type (for the fixed shutter, for the synchro- scan) varies with the mode.	Yes
	ACTION	ON OFF	To display conditions of the shutter (Display only)	No

### <Note>

For the shutter settings, values adjusted by using the unit will not be recorded in the main camera recorder unit but recorded in the unit itself, regardless of the ON/ OFF setting of the RC-DATA-SAVE item.

\_ is the factory setting mode.

# Page E-31 SYSTEM

Layer	Item	Variable range	Contents description	Storage	
1	CARD- READ	1 : 8	To select the file number to be read out		
	TITLE	**** ***	To read out the title applied to the data of the file to be read out, and display it	No	
2	CARD- WRITE	1 : 8	To select the file number to be written	No	
	TITLE	***** ***	To enter the title applied to the data of the file to be written	NO	
3	CARD- DELETE	1 : 8	To select the file number to be deleted		
	TITLE	***** ***	To read the title applied to the data of the file to be deleted, and display it	No	
4	CARD- CONFIG		To configure the card	No	
5	BUZZER	<u>ON</u> OFF	To select whether the buzzer is turned on when the switch for the lamp to turn on is pressed	No	
6	LCD CONTRAST	0 : <u>10</u> : 15	To adjust the contrast of the LCD panel	No	
7	SW BRIGHT	0 : <u>10</u> : 15	To adjust the brightness of the lamp for the switch	No	
8	RCU- Factry		To return the volume variable range of the unit to the factory settings	No	
9	VERSION		To display the version of the software for the unit	No	

<Note>

When RCU FACTORY is executed, the SHUTTER MODE item will be set to "FIX" and the SPED item to "HALF". At the same time, the synchro-scanning shutter speed will be set to MAX.

\_\_\_\_ is the factory setting

# AJ-RC10MC : Operating Instructions

# Page 15

当电源打开时

按下POWER按钮时,PANEL ACTIVE按钮的指 示灯亮起,摄录一体机的设置读入本机。 相关数值显示在PRE/A/B显示屏、CC/ND显示 屏、GAIN显示屏和IRIS显示屏中,而R GAIN和 B GAIN显示在LCD面板中。

在此情况下,从本机仅可操作PANEL ACTIVE按 钮、SW ACTIVE按钮、VR ACTIVE按钮、AUTO IRIS按钮、 M.PED旋钮和IRIS旋钮,而其它按钮 和旋钮不可操作。

但是,A.KNEE ON按钮、SHT ON按钮、AUTO IRIS按钮、BAR ON/OFF按钮、CHARA ON按钮 和快门设置值将处于上次本机中设置的状态。

# Page 22

## 菜单

本机的菜单项目可能会随摄录一体机连接到本机 的情况而变化。

对于下列菜单项目,仅可以由摄录一体机单独设 定本机的出厂设置。

- "BLACK"中的BLACK-VR-CONTROL、 BLACK-VR-MODE和BLACK-VR-RANGE
- "WHITE"中的 GAIN-VR-MODE 和 GAIN-VR-RANGE
- "SYSTEM"中的 BUZZER、LCD CONTRAST 和 SW BRIGHT
- "SHUTTER"中的 MODE 和 SPED

当菜单表中的"存储"栏的回答为"是"时,相 关项目的设置可以作为场景文件保存在本机或 SD记忆卡中。有关详情,请参阅"场景文件的 操作"(第18页)和"将场景文件存储/载入到 SD记忆卡"(第19页)。

# Page 25

# SHUTTER

层	项目	可变范围	内容说明	存储
1	MODE	<u>FIX</u> S.S	选择 SHUTTER ON 的 快门设置是否设定为固 定模式或同步扫描模式 FIX: 固定快门 S.S: 同步扫描	油
	SPED	1/60 1/100 1/120 1/250 1/1000 1/2000 HALE	选择快门速度 根据模式的不同,所选 的速度类型 (通用于固 定快门或同步扫描)会 有所不同。	喪
	ACTION	ON OFF	显示快门状况 (仅显示)	否
对于 置是	<注意> 对于快门设置,无论 RC-DATA-SAVE 项的 ON/OFF 设 置是什么,使用本机调整的值不会记录在摄录一体机的 主机中,而会记录在本机中。			

\_\_\_\_\_为出厂设置模式。

# Page 29

SYSTEM

层	項目	可变范围	内容说明	存储
1	CARD- READ	1 : 8	选择要读出的文件编号	否
	TITLE	***** ***	读取适用于要读出文件 数据的标题,并显示它	
2	CARD- WRITE	1 : 8	选择要写入的文件编号	否
	TITLE	***** ***	输入适用于要写入文件 数据的标题	-
3	CARD- DELETE	1 : 8	选择要删除的文件编号	否
	TITLE	***** ***	读取适用于要删除文件 数据的标题,并显示它	
4	CARD- CONFIG		配置卡	密
5	BUZZER	<u>on</u> Off	当按下亮起的指示灯的 开关时,选择是否打开 蜂鸣音	否
6	LCD CONTRAST	0 : <u>10</u> : 15	调整 LCD 面板的对比度	否
7	SW BRIGHT	0 : 10 : 15	调整开关指示灯的亮度	暙
8	RCU- Factry		将本机的旋钮可变范围 返回至出厂设置	否
9	VERSION		显示本机软件的版本	否

当执行 RCU FACTORY 时, SHUTTER MODE 项将会设 为"FIX", SPED 项将会设为"HALF"。同时,同步 扫描快门速度将会设为 MAX。

\_\_\_\_ 为出厂设置