

AJ-RC10G Software Version Update Procedure



1. Software Version Confirmation

1. The AJ-RC10G is connected with the Camera Recorder, and turn on the power.
2. Press the **SW ACTIVE** button to turn the lamp on.
3. Press the **SHUTTER/SYSTEM** button twice to display the **SYSTEM MENU** screen on the LCD panel (**SYSTEM lamp** is on).
4. Press the **▼** button several times to display the item "**VERSION**" and confirm that the version number.

VERSION
1.00-00-0.01

5. If the version is the latest one which is shown in "Support Desk", there is no need to update.
6. Press the **SHUTTER/SYSTEM** button and exit from **SYSTEM MENU**.

< CONNECTION >

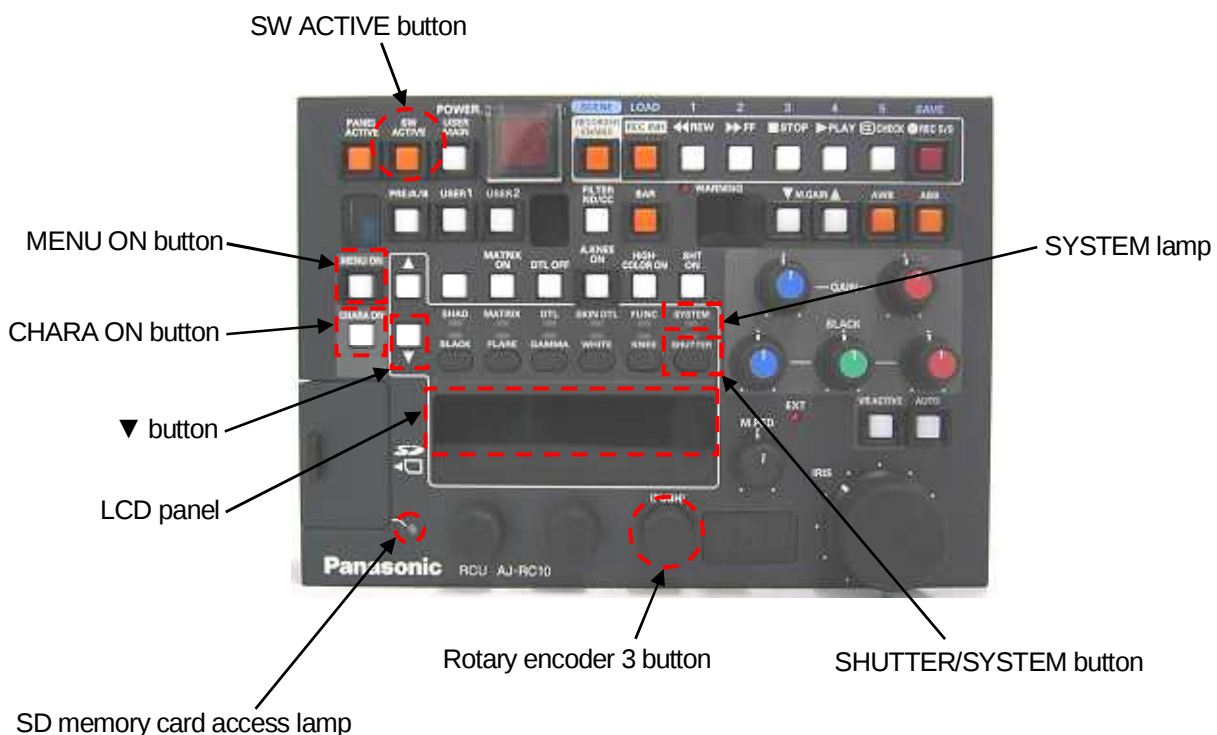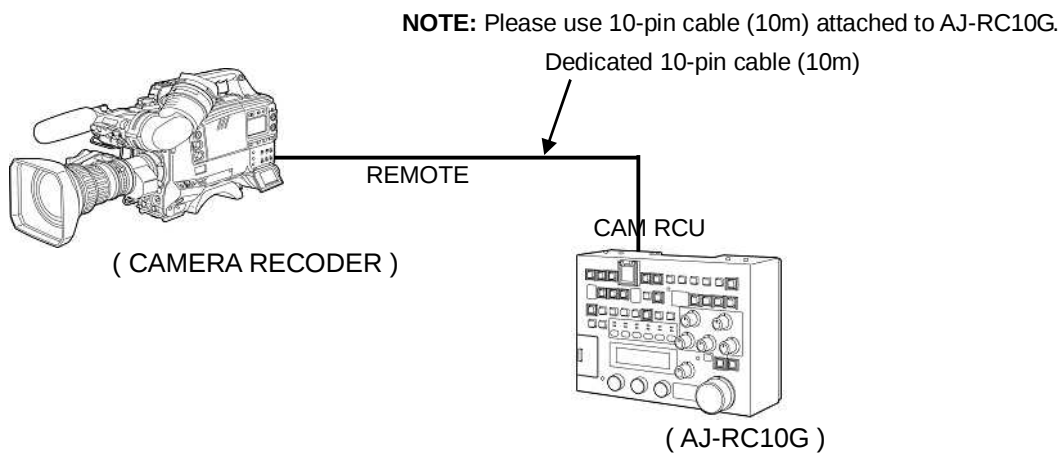


2. Software Update Procedure

2-1 Preparation

< Preparation for SD Card >

1. SD Card (more than 8MB from 2GB memory card) is required.
2. Perform the formatting operation with AJ-RC10G as follows or with other P2 equipment.

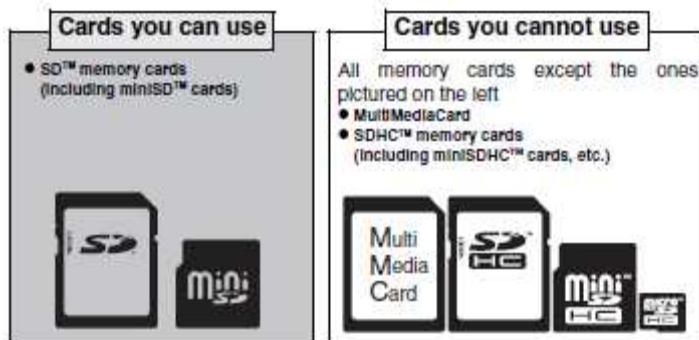

NOTE: Formatting of card is required to be done with AJ-RC10G or P2 equipment.

<Formatting an SD card with the AJ-RC10G>

1. Select "SYSTEM" using the SHUTTER/SYSTEM button, and display the menu on the fourth layer using the ▼ button. The indication "CARD / CONFIG EXCE" is displayed.
2. When the Rotary Encoder 3 is pressed, the indication "NO?" is displayed on the LCD panel. Turn the Rotary Encoder 3 to select the indication "YES?" and start the formatting by pressing the Rotary Encoder 3 again.
3. When the formatting operation starts, the SD card access lamp is on, and the indication "ACTIVE" is displayed on the panel.
4. When the formatting of the data is finished, the SD memory card access lamp turns off, and the indication "OK" is displayed on the LCD panel.
5. Press SHUTTER/SYSTEM button and exit from the operation.
6. Take out the SD card.

< Preparation of SD card for updating>

Copy the update file of Driver Software to the SD card as follows.

1. Insert a formatted SD card into the card slot of PC.
2. Download the Software file "**VSI4572*.zip**" from the P2 support desk.

<https://www.pavc.panasonic.co.jp/pro-av/>

3. Unzip the file "**VSI4572*.zip**" on any folder in HDD of the PC.
4. Copy the file "**update.bin**" in unzipped "VSI4572*" folder to SD memory card.

This SD card can be used as "Update SD card".
(The unzipped data on PC is not required after updating.)

2-2. Update Procedure

1. The AJ-RC10G is connected with the Camera Recorder, and turn on the power.
2. Press the **SW ACTIVE** button to the lamp is on.
3. Press the **SHUTTER/SYSTEM** button twice to display the **SYSTEM MENU** screen on the LCD panel (**SYSTEM lamp** is on).
4. Press the **▼** button several times to display the item "**VERSION**" and confirm that the number of version.


VERSION 1.00-00-0.01

5. Insert a SD card into the SD card insertion slot of AJ-RC10G.
Check that light of **CHARA ON** button is OFF.
6. Light the **CHARA ON** button and continue to hold it while pressing the **▼** button and then the menu is displayed as follows.


VERSION UP EXEC

NOTE: Light of **CHARA ON** button turns ON/OFF each time the button is pressed.

7. Press the **ROTARY ENCODER 3** button, and then the character "**NO**" is displayed. And rotate the **ROTARY ENCODER 3** button to select display "**YES**".

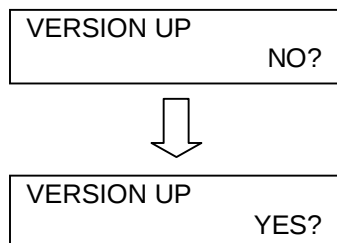

8. Press **ROTARY ENCODER 3** button and update is executed. The **SD MEMORY CARD ACCESS LAMP** is on and it is displayed as "**ACTIVE**".
9. When update is completed, the character "**OK**" is displayed and press **ROTARY ENCODER 3** button.
The AJ-RC10G reboots automatically.

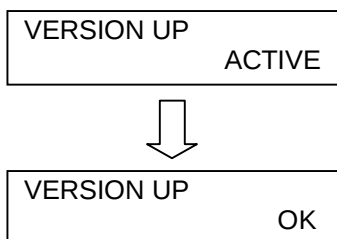

NOTE: Do not power down or pull card while updating.

10. Remove the SD card and turn the power of camcorder to OFF and ON.
11. Display the version of software and confirm that the number of version is renewed for your confirmation update was correctly done.