

PESA Switching Systems Controller Interconnect Cables

Section 1

6500,6500A, 6500C, 6600D, 6600E

Terminal Cables CRT1 and CRT2

Controller Conn. DB 25	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
1	1	1	1
2	3	2	3
3	2	3	2
7	7	5	5

CPU Link Conn.	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
1	1	1	1
2	3	2	3
3	2	3	2
4	20	20	6
20	4	4	4

- Panels are on Coax Buss, 6500,6500A, 6500C use 40 VDC coax drivers for Panel Power.
- Panels are on Coax Buss, 6600D, 6600E, use Power Pack per Panel for Panel Power.
- 6500, 6500A, 6500C, 6600D require PS400 and PS500 or PS200 for Power.
- 6600E Has internal A/C to D/C power supply.

6600EXS

Terminal Cables CRT1 and CRT2

Controller Conn. DB 9	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
4	1	1	1
5	3	2	3
6	2	3	2
7	7	5	5

CPU Link Conn. DB 9	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
1	1	1	1
2	3	2	3
3	2	3	2
4	20	20	6
20	4	4	4

- Panels are on Coax Buss, 6600EXS, use Power Pack per Panel for Panel Power.
- 6600EXS, requires external power from RM4000/5000, Lynx etc.
-

Section 2

RC5000, RC5500

Terminal Cables HOST 1 and HOST 2

Controller Conn. DB 9	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
1	1	1	1
2	2	2	3
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9

CPU Link Connectors

CPU Link Conn.	CRT Terminal Conn. DB 25	PC Conn. DB 25	DB 9
1	1	1	1
2	3	2	3
3	2	3	2
4	20	20	6
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9