

eRoute Connection Diagram

PC running WIN3500



3500
Com 1
RS232

Optional
Modem

Optional
Modem

3500
Com 1
RS232

3500
Controller

PRC
9 pin
RS422

Routing Switcher

Configuration server PC

eRoute configuration
software

Use to download configuration setup to
the server box

Netscape I/E
(running Java 2.0
browser window)

Use to preview/operate
the control system

NOTE: Runs on Windows
95/98/NT 4.0
(not tested w/2000)



Install eRoute cfg.
on this PC.

10 Base-T
IP address
192.168.1.x

For static IP, comes with
default set as DHCP

eRoute
Hardware

Unit comes w/ sample
config. Customer must
enter router config. in
order for system I/O's
to match WIN3500

CPU Link
Com 2
RS232

* Information flows one way
(future releases will operate bidirectional)

Optional Ocelot
configuration when
using an Ocelot or Bobcat
Routing Matrix

6/9/00