


Technical Bulletin

RCP-LCXY Control Panel

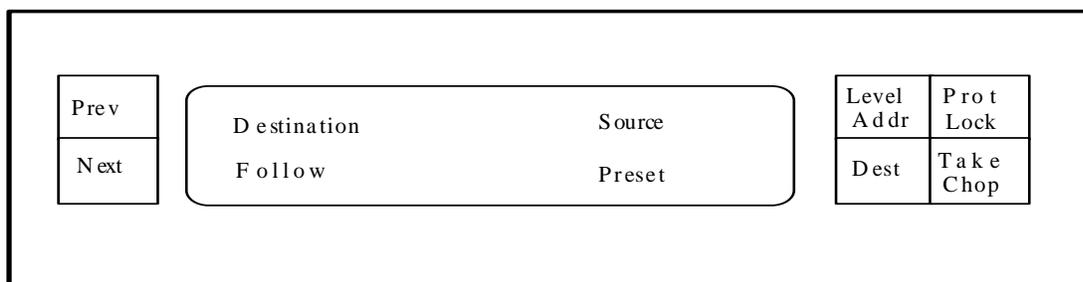

The Prev and Next Keys are used to scroll through source and destination selections. While in Destination Select Mode, the Prev and Next Keys scroll through the destinations that the panel is controlling. Otherwise they scroll through sources.

Level/Addr Key either places the panel into the Level Selection Mode to allow breakaway switching (primary function) or is used to display the address of the panel (secondary function).

The Prot/Lock Key places the current destination into Protect (primary function) or locks the output (secondary function).

The Dest Key places the panel in and out of Destination Select Mode.

The Take/Chop Key will toggle between the preset and on-line source (primary function) or place the panel into or out of Chop (secondary function). Chop Mode toggles the on-line and preset sources at a rate of once per second. The Take/Chop Key will be active at all times during panel operation.

NOTE: The primary function is executed when the selected key is depressed for less than 2 seconds. The secondary function is executed when the selected key is depressed for more than 2 seconds.

The display shows 4 fields of information:

- Destination - Identifies the current destination of the panel. All switches are taken to this destination.
- Source - Shows the source connected to the current destination of the panel.
- Preset - The source held in the preset. Activation of a Take will cause this source to go on-line.
- Follow - Indicates audio-follow-video switching or the level of control of a breakaway.