


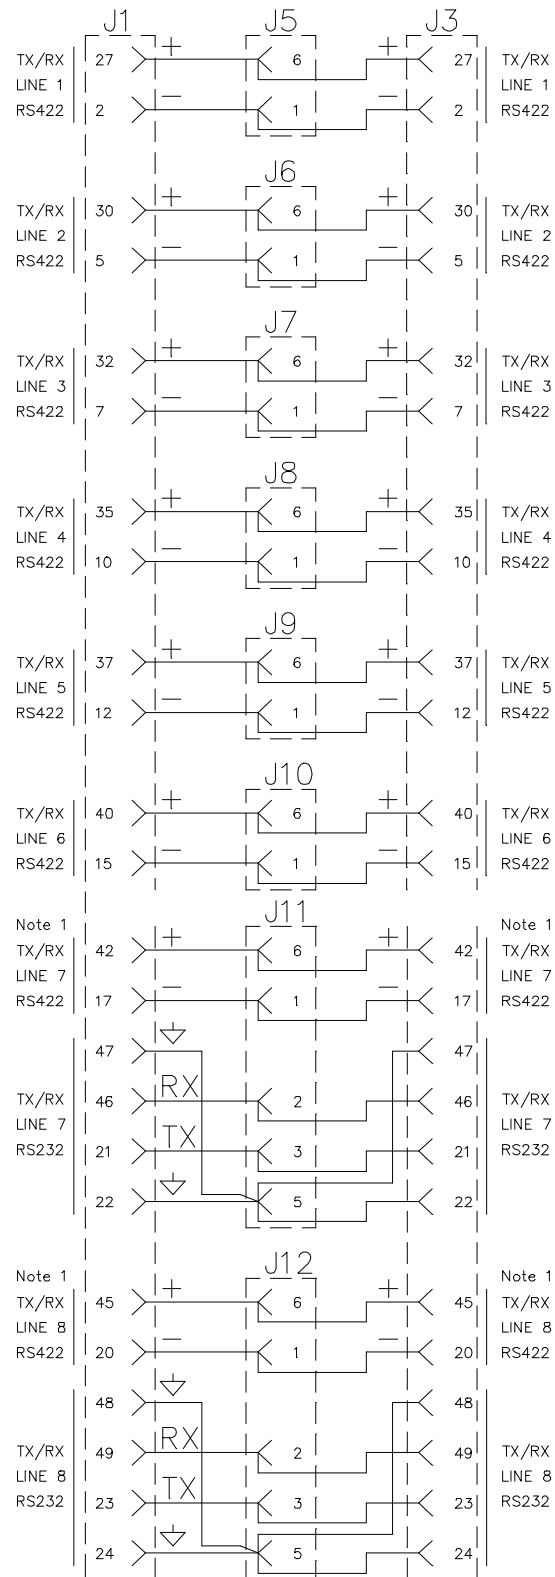

Note 1 – Comm ports may be either RS422 or RS232, normal setting is RS422.

ICP-97-TMX Internal Wiring