


Changing the Momentary Only to Momentary/Latching

This document shows the modifications that are needed on the speaker stations and the wall mount user stations to change the Talk button from Momentary Only Operation to Momentary and Latching Operation.


The first photo shows the speaker station and wall mount user station board stack. The top board in the photo has the connector that is used to connect the line inputs. The bottom board is the keypad board.

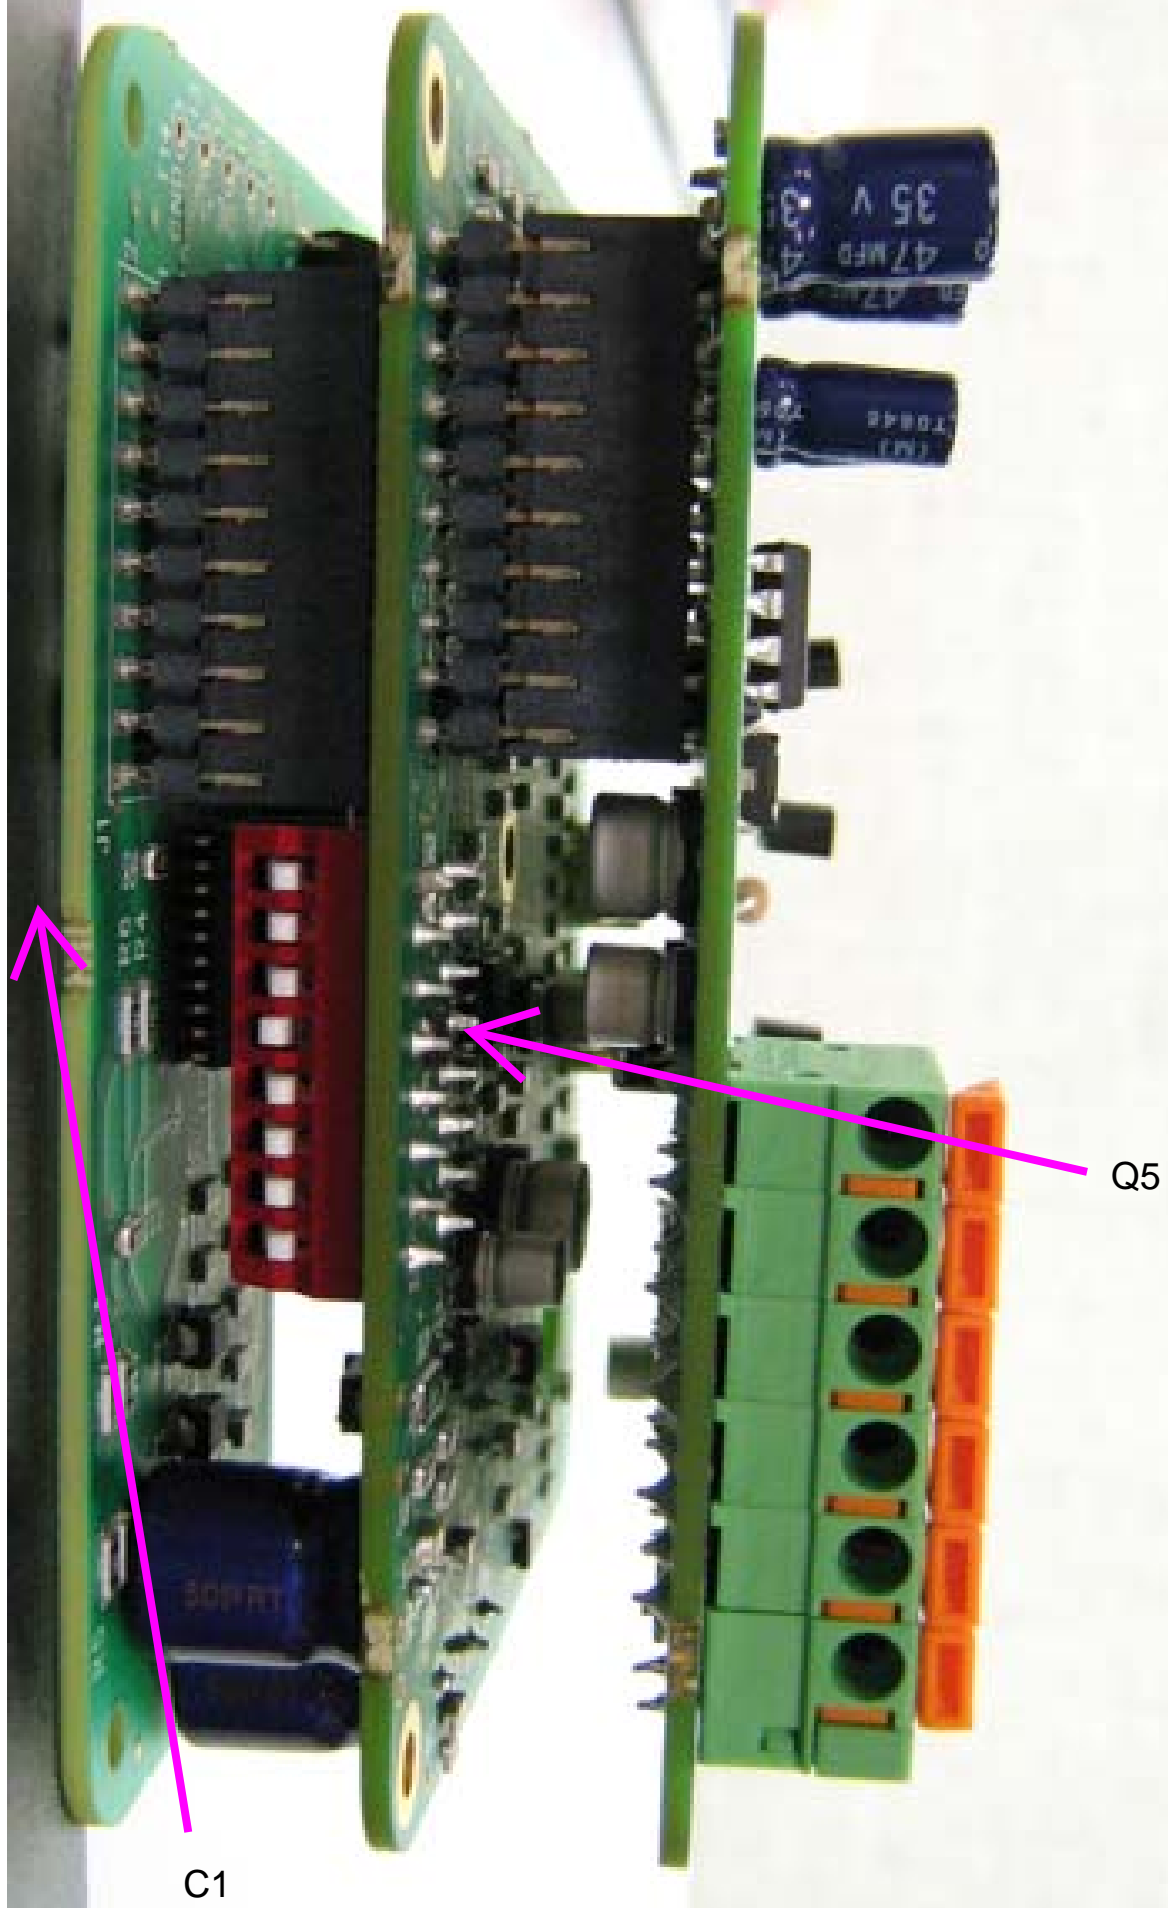


C1

Q5


The second photo shows the top of the board stack. Remove the screws and remove the connector board from the stack.

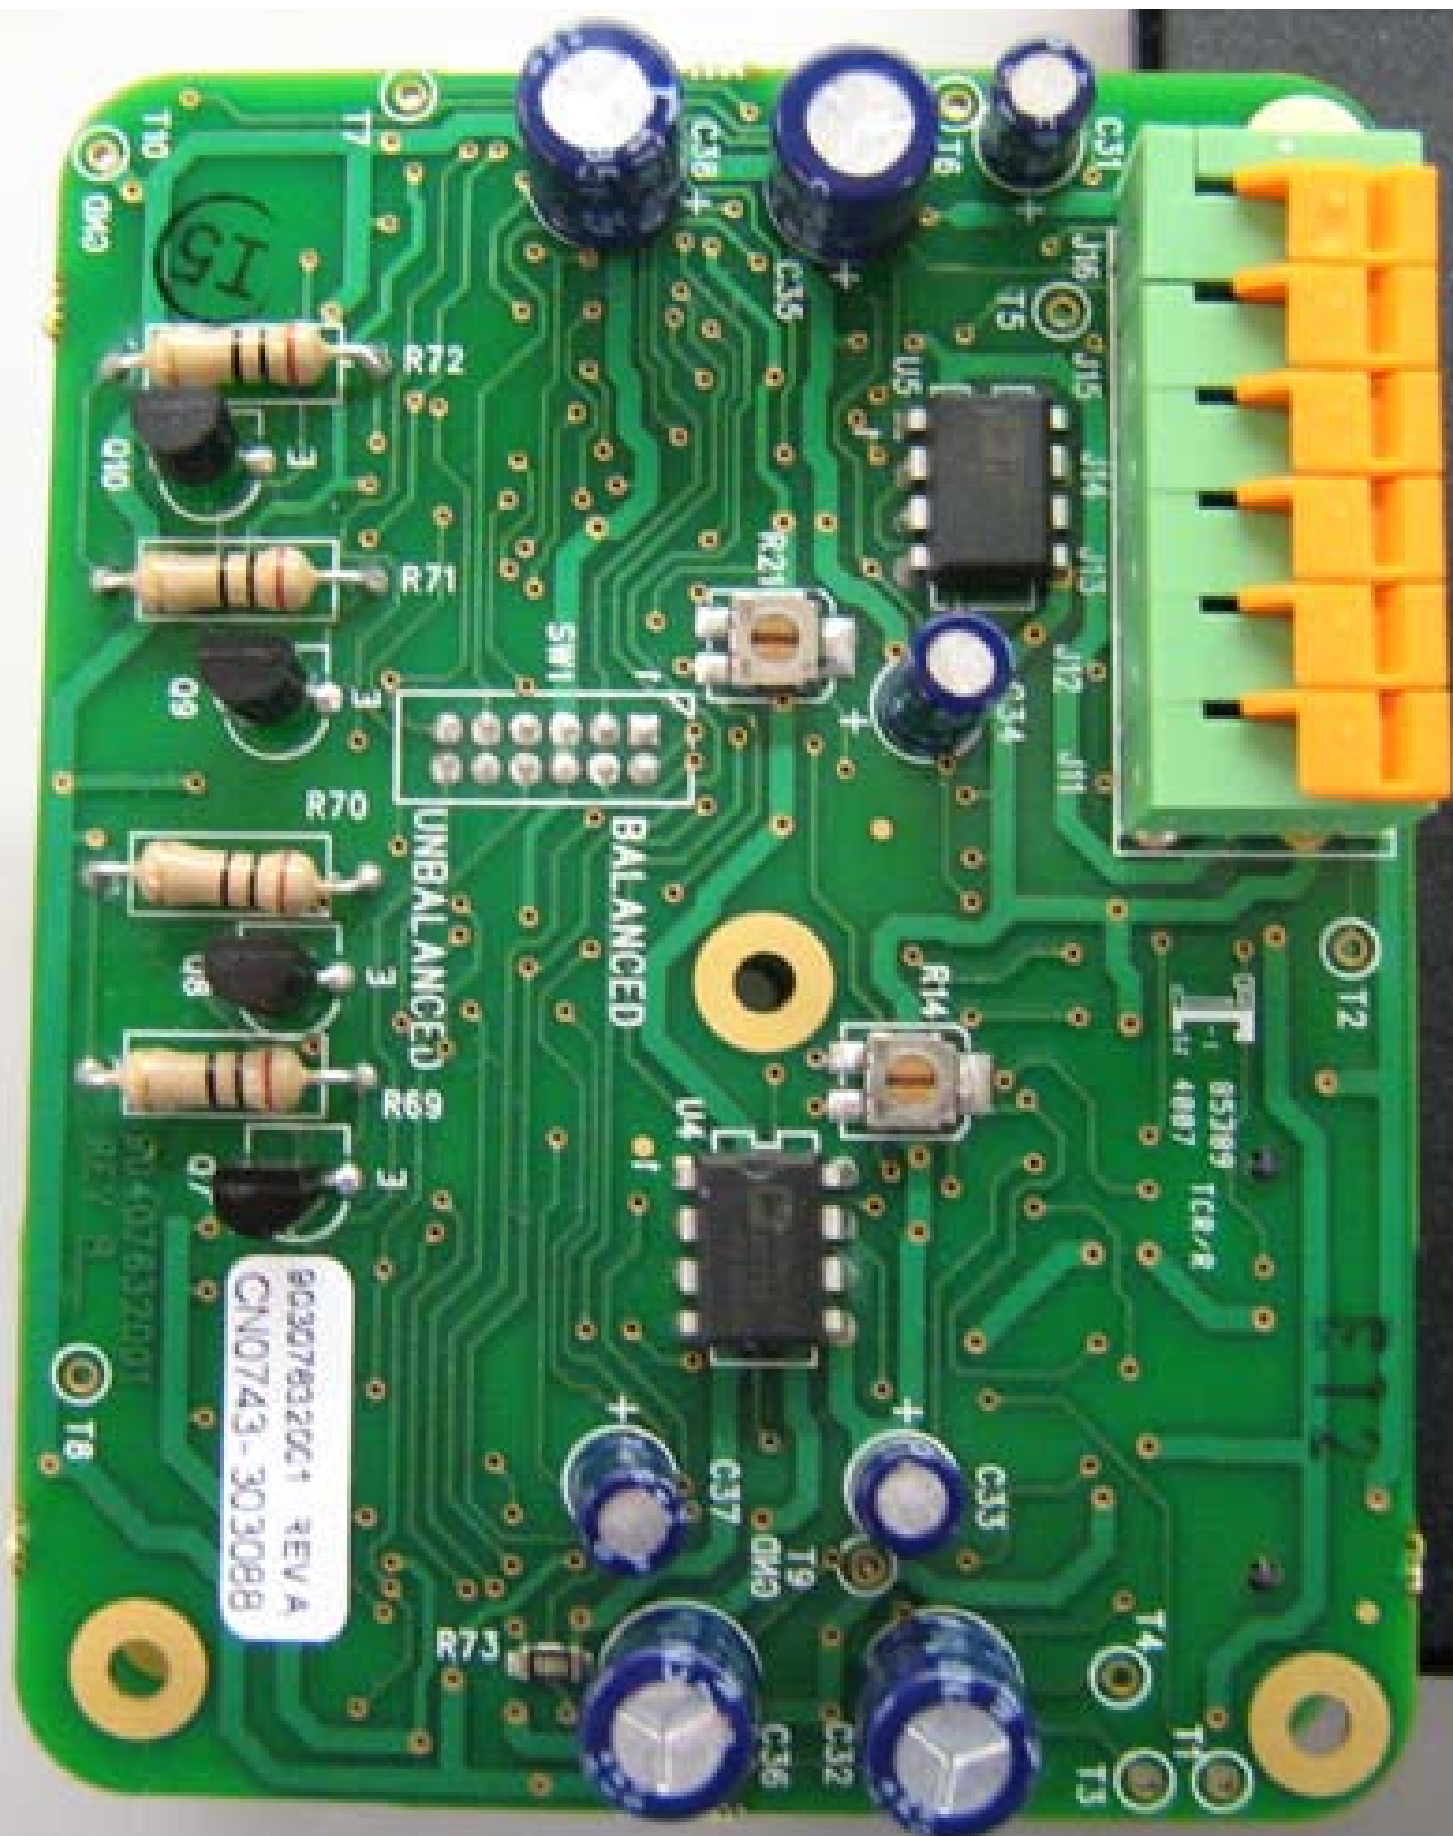

The third photo shows the middle board from the top side. Q5 must be removed in order to have the Talk Latching option. Q5 is circled on the photo. Q5 is located on the opposite side of the board from the red DIP switch.

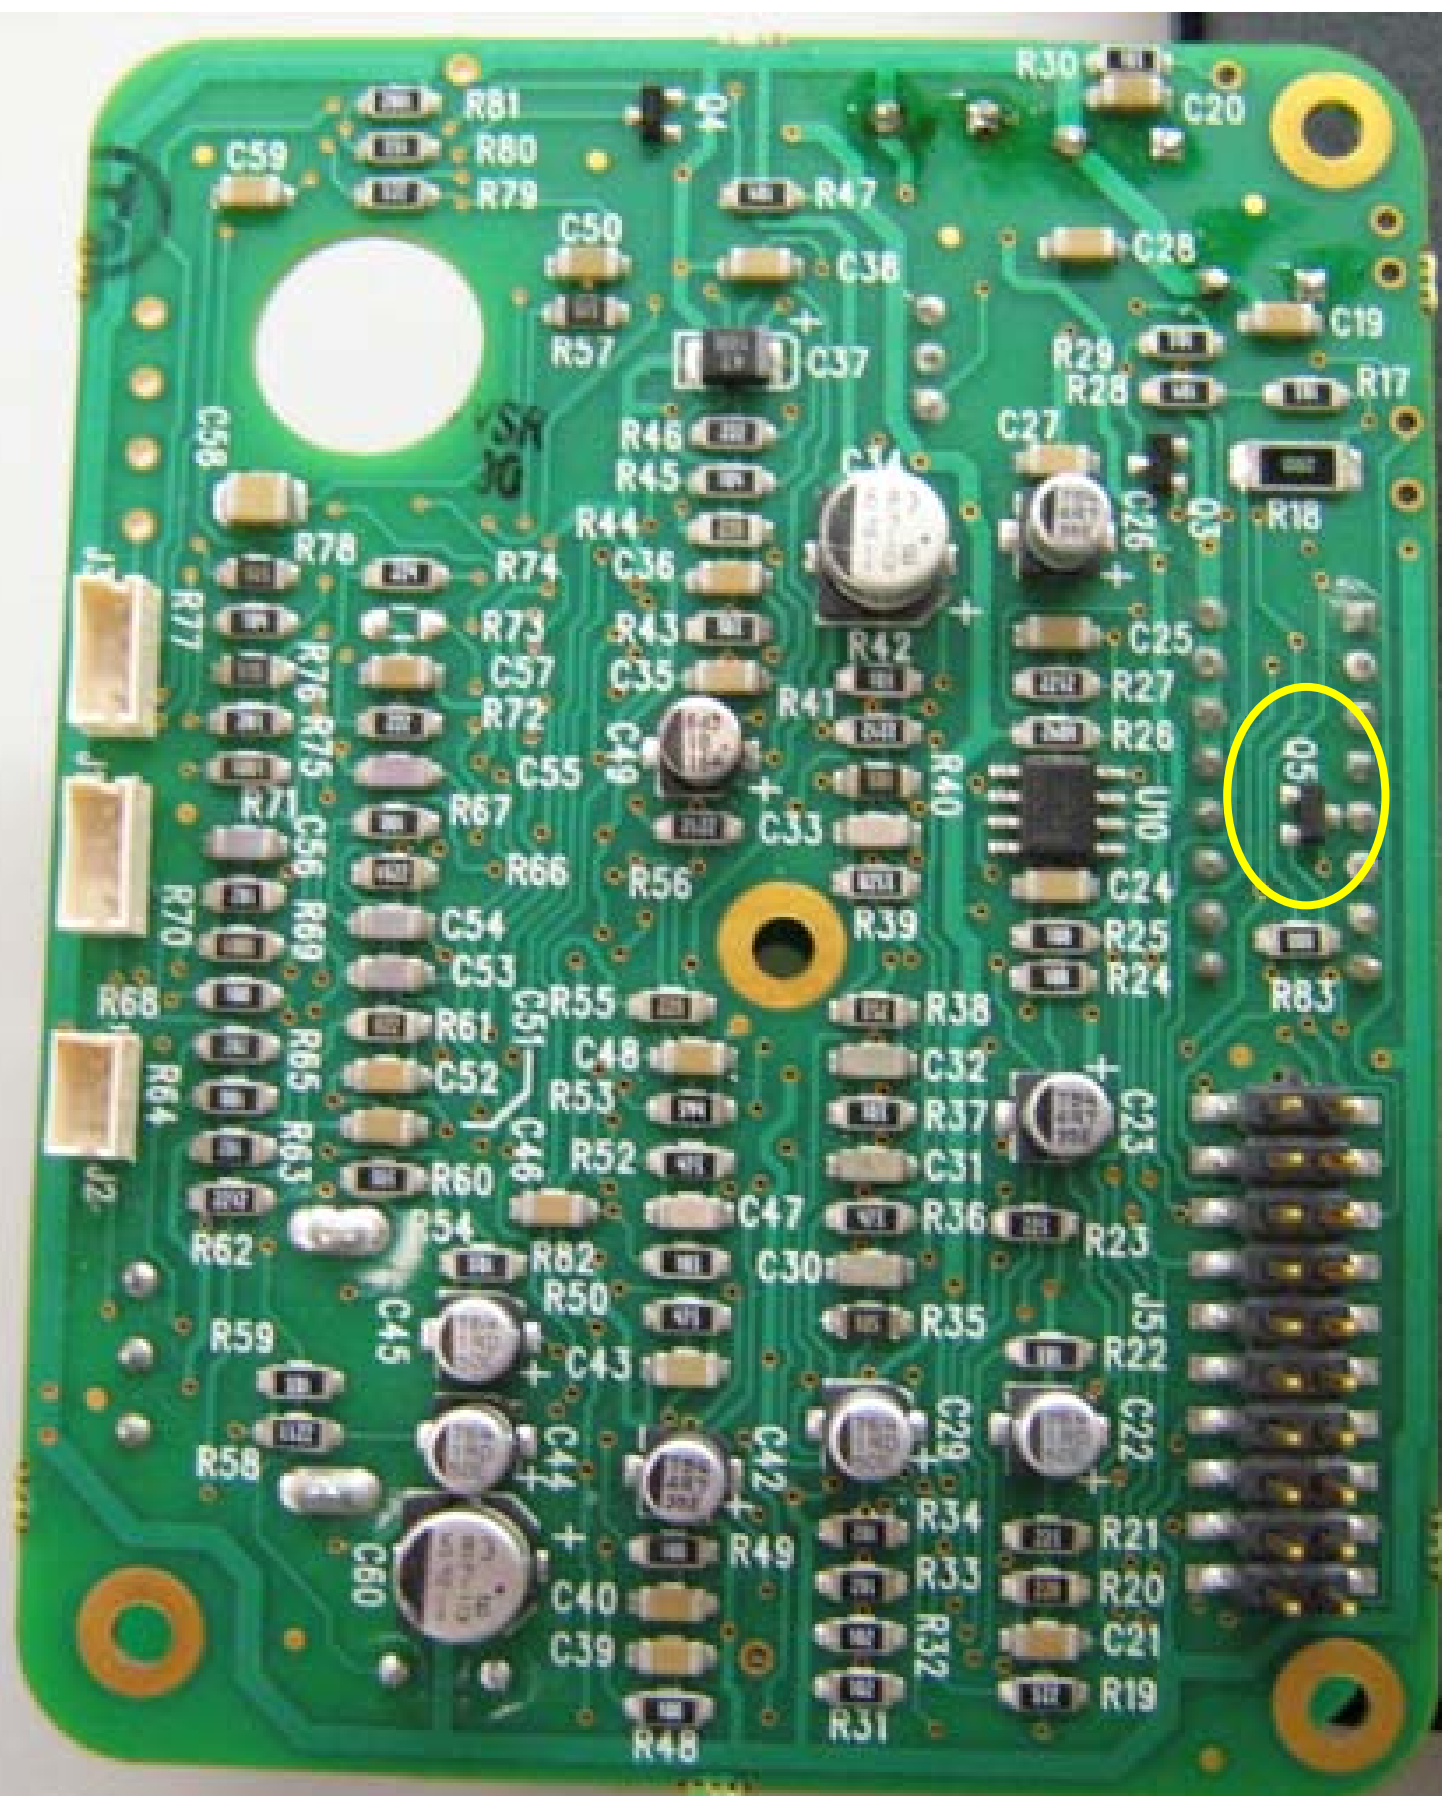

The fourth photo is a close up picture of Q5.

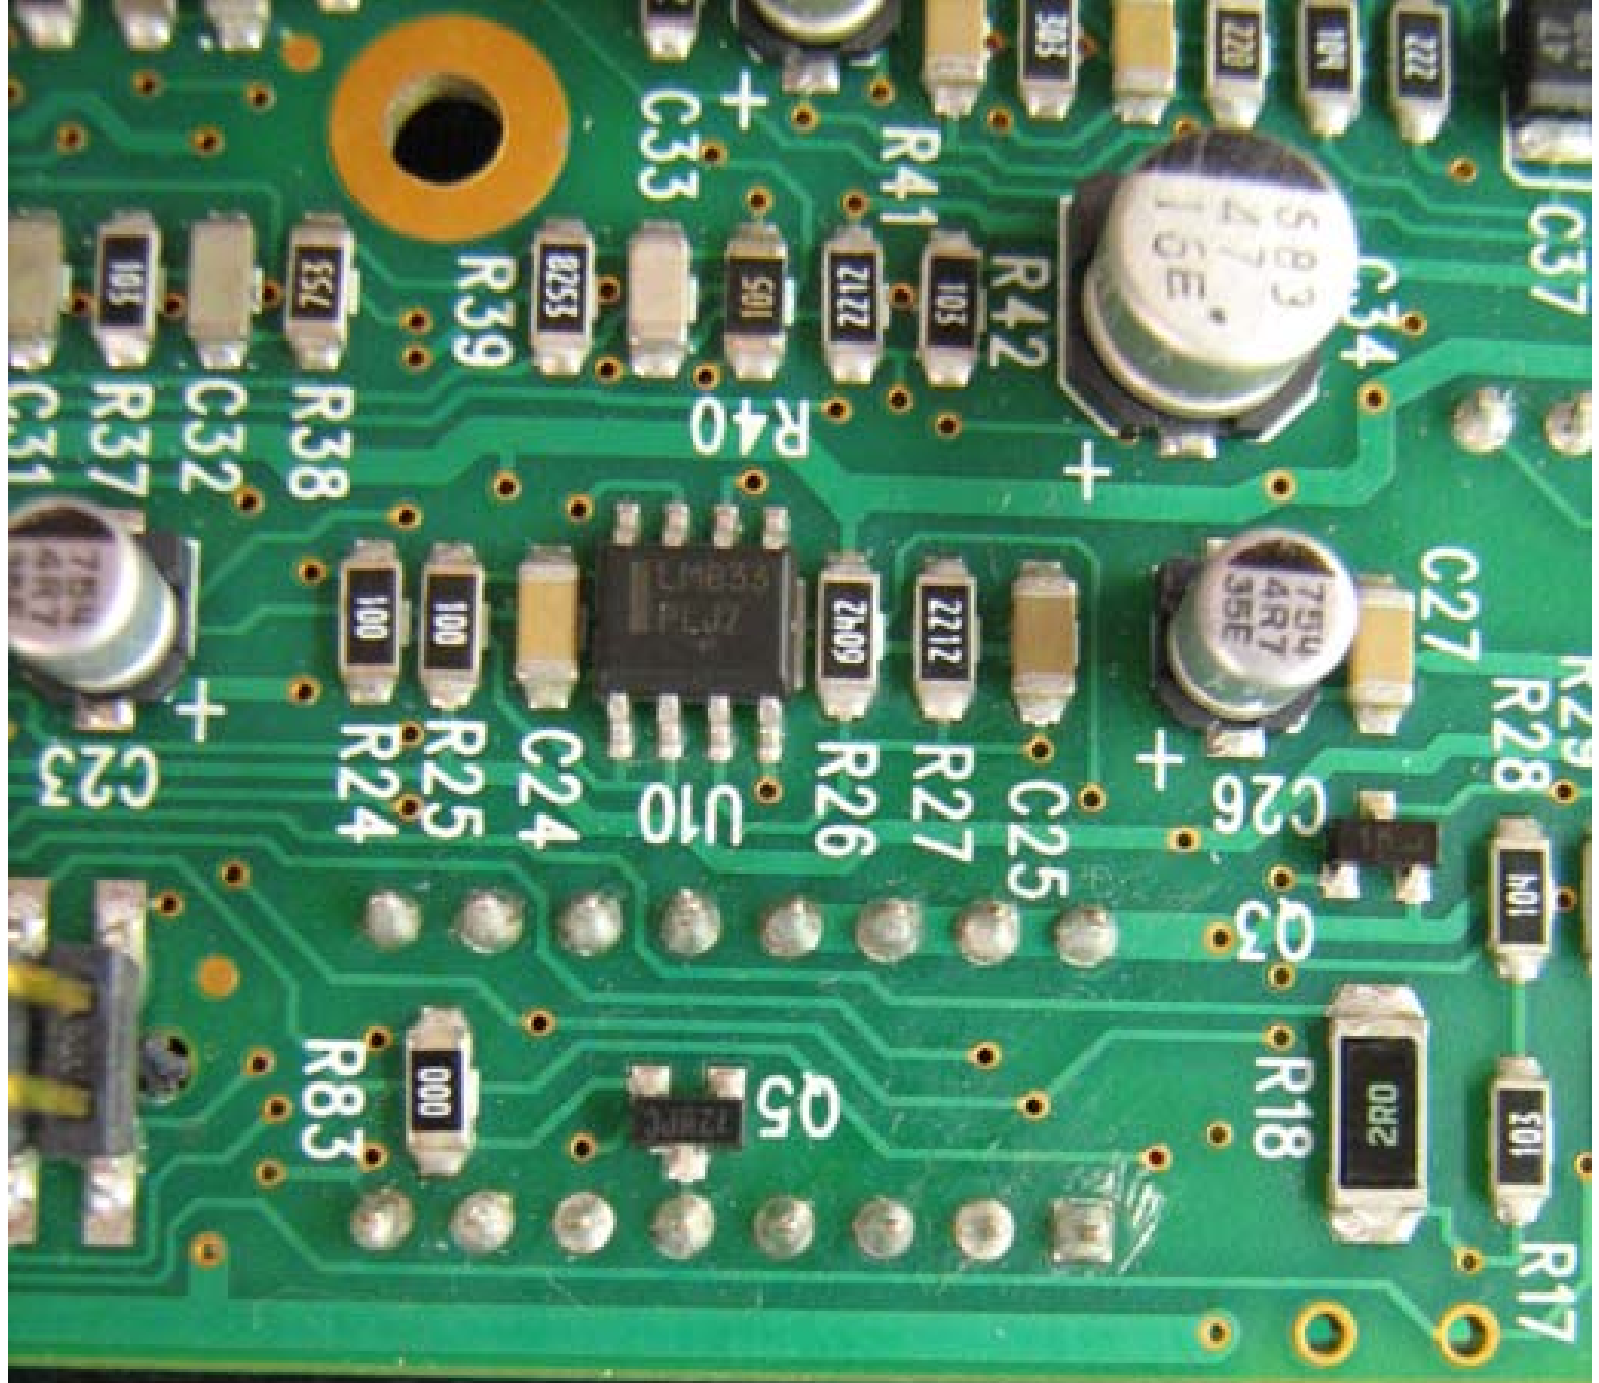

The fifth photo shows the bottom or keypad side of the keypad board. This is the side that is behind the silicon rubber keys. C1 must be removed in order to have the Talk Latching option. C1 is circled on the photo. C1 is located on the opposite side of the board from the socketed microprocessor.

90307620001 REV A
CN0741-241622



90307620001 REV A

9030-7620-001



07621001 REV

The sixth photo is a close up picture of C1.

XSW2

DS3

DS6

C1

+


47
10R

D4

Q2

T7 T8

07621001 R

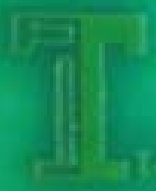

40-07 -R

-001

