


**FSR-6601**  
**Single Channel Optical Receiver**  
**User Manual**

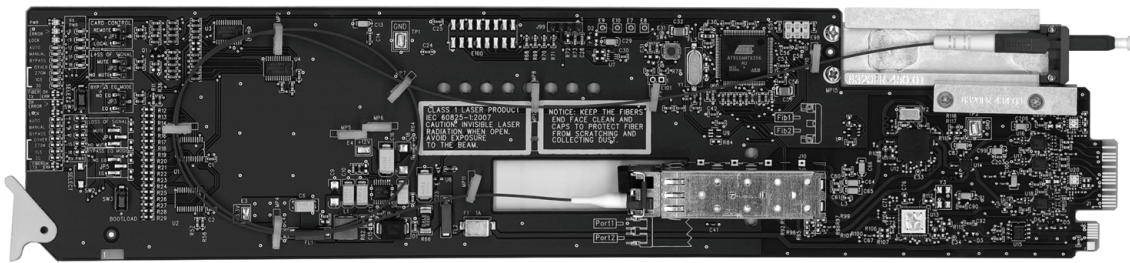

---

## FSR-6601 • Single Channel Optical Receiver User Manual

- Ross Part Number: **6601DR-004-02**
- Release Date: February 11, 2011. Printed in Canada.

The information contained in this manual is subject to change without notice or obligation.

---

## Copyright

© 2011 **Ross Video Limited**. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of Ross Video Limited. Reproduction or reverse engineering of copyrighted software is prohibited.

---

## Patents

This product is protected by the following US Patents: 4,205,346; 5,115,314; 5,280,346; 5,561,404; 7,034,886; 7,508,455; 7,602,446; 7,834,886. This product is protected by the following Canadian Patents: 2039277; 1237518; 1127289. Other patents pending.

---

## Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

---

## Trademarks

-  is a trademark of Ross Video Limited.
- Ross, ROSS, ROSS® are registered trademarks of Ross Video Limited.
- openGear® is a registered trademark of Ross Video Limited.
- DashBoard Control System™ is a trademark of Ross Video Limited.
- All other product names and any registered and unregistered trademarks mentioned in this guide are used for identification purposes only and remain the exclusive property of their respective owners.

---

# Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the “**Important Safety Instructions**” listed below to avoid personnel injury and to prevent product damage.

Products may require specific equipment, and/or installation procedures to be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these specific requirements.

## Symbol Meanings



---

*This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.*

---



---

**Warning** — The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

---



---

**Caution** — The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

---



---

**Notice** — The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.

---



---

**ESD Susceptibility** — This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

---

## Important Safety Instructions



---

**Caution** — This product is intended to be a component product of the DFR-8300 series frame. Refer to the DFR-8300 series frame User Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as its component products.

---



---

**Warning** — Certain parts of this equipment namely the power supply area still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cards from the chassis' rear appliance connectors before servicing this area.

---



---

**Warning** — Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after any servicing.

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained with the product's power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair. To reduce the risk of fire, replacement fuses must be the same time and rating. Only use attachments/accessories specified by the manufacturer.

---

## EMC Notices

### ***United States of America FCC Part 15***

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



---

**Notice** — *Changes or modifications to this equipment not expressly approved by Ross Video Limited could void the user's authority to operate this equipment.*

---

### **CANADA**

This Class “A” digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe “A” est conforme à la norme NMB-003 du Canada.

### **EUROPE**

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

### **INTERNATIONAL**

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002**, and found to comply with the limits for a Class A Digital device.



---

**Notice** — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

---

## Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the “Contact Us” section on the last page of this manual. All openGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the “Warranty and Repair Policy” section in this manual for details.

---

# Important Laser Safety Measures and Notices

Before using this product and any associated equipment, refer to the sections below so as to avoid personnel injury and to prevent product damage. For further safety information when using fiber products, consult the following publications:

- *IEC-60825- 2, Safety of Laser Products - Part 2: Safety of Optical Fiber Communication Systems (OFCS)* (for use outside of the U.S.A.)
- *ANSI Z136.2, Safe Use of Optical Fiber Communication Systems Utilizing Laser Diode and LED Sources* (for use in the U.S.A.)

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements.



---

**Caution** — *Before operating or servicing this product, all personnel should be familiar with laser safety and fiber handling practices.*

---

## Safety Measures for Operation

During normal operation of this product, heed the following safety measures:

- Do not stare at, or into, broken, or damaged, fibers.
- Do not stare at, or into, optical connectors.
- Only properly trained and authorized personnel shall be permitted to perform laser/fiber optic operations.
- Ensure that appropriate labels are displayed in plain view and in close proximity to the optical port on the protective housing/access panel of the terminal equipment.

## Safety Measures for Maintenance and Servicing



---

**Warning** — *Do not use optical equipment, such as a microscope or an eye loupe, to stare at the energized fiber end. Doing so may damage your eyes.*

---

During maintenance and servicing of this product, only properly trained and authorized personnel shall be allowed to use optical test or diagnostic equipment.

## Laser Information



---

CLASS 1 LASER PRODUCT  
IEC 60825-1:2007

**Caution** — *INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM.*

---


---

## Environmental Information

**The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.**

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

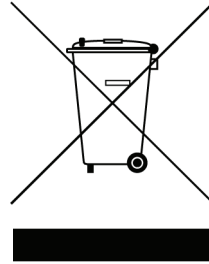

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

---

## Company Address



### **Ross Video Limited**

8 John Street  
Iroquois, Ontario  
Canada, K0E 1K0

### **Ross Video Incorporated**

P.O. Box 880  
Ogdensburg, New York  
USA 13669-0880

---

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

E-mail (General Information): [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website: <http://www.rossvideo.com>



# Contents

|                                           |          |
|-------------------------------------------|----------|
| <b>Introduction</b>                       | <b>1</b> |
| Overview.....                             | 1-2      |
| Features.....                             | 1-2      |
| FSR-6601 Functional Block Diagrams.....   | 1-3      |
| Documentation Terms and Conventions.....  | 1-4      |
| <b>Installation</b>                       | <b>2</b> |
| Before You Begin .....                    | 2-2      |
| Static Discharge .....                    | 2-2      |
| Unpacking.....                            | 2-2      |
| Working with Fiber Optic Connectors ..... | 2-2      |
| Installing the FSR-6601 .....             | 2-3      |
| Rear Modules for the FSR-6601.....        | 2-3      |
| Installing a Rear Module .....            | 2-3      |
| Installing a Card .....                   | 2-4      |
| Cabling.....                              | 2-5      |
| Overview .....                            | 2-5      |
| Software Upgrades.....                    | 2-6      |
| Performing Software Upgrades .....        | 2-6      |
| <b>User Controls</b>                      | <b>3</b> |
| Card Overview .....                       | 3-2      |
| Control and Monitoring Features.....      | 3-4      |
| Status LEDs on the FSR-6601.....          | 3-4      |
| <b>Menus</b>                              | <b>4</b> |
| Overview.....                             | 4-2      |
| SNMP Monitoring and Control .....         | 4-2      |
| DashBoard Menus for the FSR-6601 .....    | 4-2      |
| Status Tabs .....                         | 4-3      |
| Signal.....                               | 4-3      |
| Hardware Status.....                      | 4-4      |
| Product Status.....                       | 4-4      |
| Setup Menus .....                         | 4-5      |
| Alarms Menus.....                         | 4-6      |
| <b>Specifications</b>                     | <b>5</b> |
| FSR-6601 Technical Specifications.....    | 5-2      |
| <b>Service Information</b>                | <b>6</b> |
| Troubleshooting Checklist.....            | 6-2      |
| Bootload Button .....                     | 6-2      |
| Warranty and Repair Policy.....           | 6-3      |



# Introduction

---

## In This Chapter

This chapter contains the following sections:

- Overview
- FSR-6601 Functional Block Diagrams
- Documentation Terms and Conventions

## A Word of Thanks

Congratulations on choosing an openGear **FSR-6601 Single Channel Optical Receiver**. Your FSR-6601 is part of a full line of Digital Products within the openGear Terminal Equipment family of products, backed by Ross Video's experience in engineering and design expertise since 1974.

You will be pleased at how easily your new FSR-6601 fits into your overall working environment. Equally pleasing is the product quality, reliability and functionality. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your FSR-6601, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

---

## Overview

The FSR-6601 is capable of equalizing and reclocking all common serial digital signals. With support for both standard-definition and high-definition signals, the FSR-6601 is the ideal universal SDI distribution amplifiers.

The FSR-6601 provides the ability to transport digital video baseband signals over a fiber optic link, allowing for longer transport distances. The optical to electrical conversions are done using video specific small form-factor pluggable (SFP) transceivers.

The FSR-6601 equalizes the incoming SDI signal, then reclocks the signal with automatic rate detection for all popular data rates. LED indicators at the front of the card identify the presence of incoming video and the identified signal data rate.

The FSR-6601 is fully hot-swappable with all active components on the front removable module. No active components are installed on the rear module. This design greatly reduces down time eliminating any need for users to access the back of the frame.

In the DFR-8321 series frames, the FSR-6601 can be operated as a 1x6 using a Full Rear Module (8320AR-044) or operated as an independent 1x3 (one in, three out), using the Split Rear Module (8320AR-045). In the 1x3 configuration, the outputs are non-inverting, making it an excellent ASI distribution amplifier.


## Features

The following features are standard for the FSR-6601:


- Supports a wide variety of standards (SD, HD, and 3G SDI)
- Conforms to SMPTE 424M, SMPTE 292M, and SMPTE 259M
- Supports single-mode fiber
- Hot-swappable from front of frame with no external connect/reconnect required
- Provides one fiber optic input and six SDI outputs using a Full Rear Module (8320AR-044)
- LC/UPC optical connection
- Reclocking on all outputs at 270Mbps, 1.483Gbps, 1.485Gbps, 2.967Gbps, and 2.970Gbps
- Automatic detection of incoming data rate
- LED indicators for signal presence and data rate
- Reports status and configuration remotely via the DashBoard Control System™
- Supports DataSafe™
- Fits DFR-8321 series frames
- High density with 20 cards per frame in the DFR-8321 series frames using Split Rear Modules (8320AR-045)
- Fully compliant with openGear specifications
- 5-year transferable warranty

# FSR-6601 Functional Block Diagrams

This section provides functional block diagrams that outline the workflow of the FSR-6601.

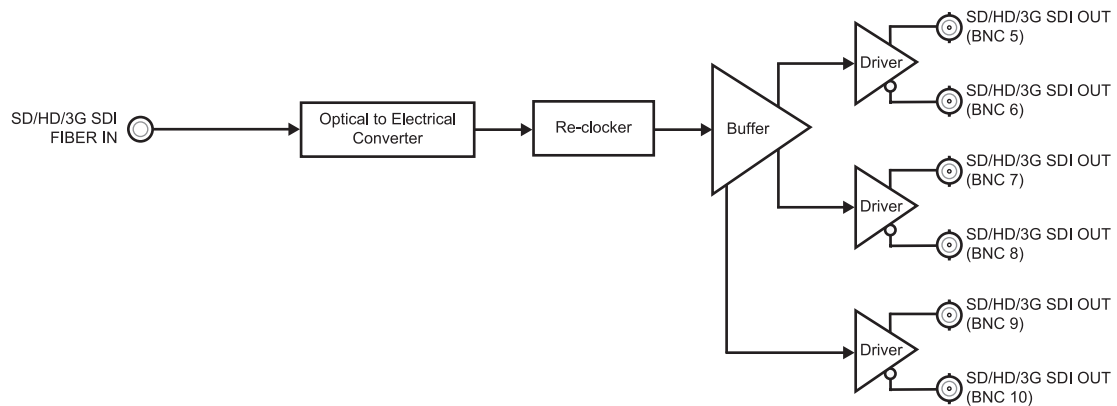

**Figure 1.1** FSR-6601 with Full Rear Module (8320AR-044) — Simplified Block Diagram

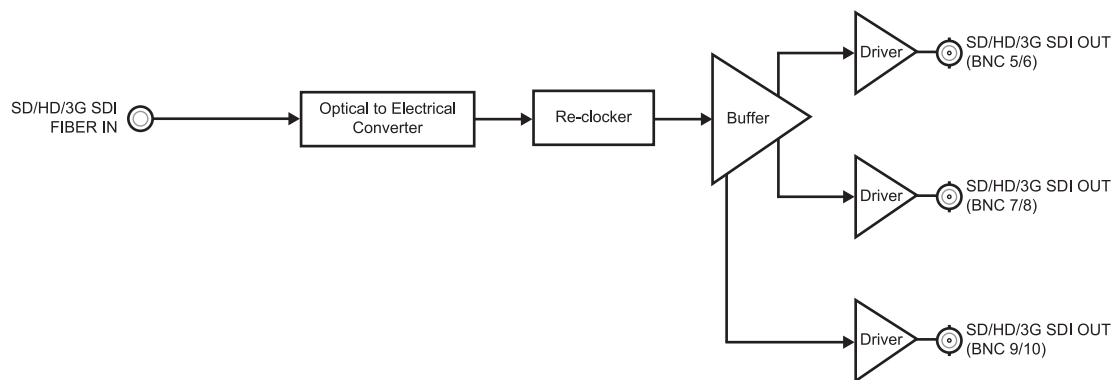

**Figure 1.2** FSR-6601 with Split Rear Module (8320AR-045) — Simplified Block Diagram (Single Card only)

---

# Documentation Terms and Conventions

The following terms and conventions are used throughout this manual:

- “**Frame**” refers to DFR-8321 series frame that houses the FSR-6601, as well as any openGear frames.
- All references to the **DFR-8321 series frame** also includes all versions of the DFR-8321 frames and any available options unless otherwise noted.
- “**Operator**” and “**User**” refer to the person who uses FSR-6601.
- “**Board**”, and “**Card**” refer to openGear terminal devices within openGear frames, including all components and switches.
- “**System**” and “**Video system**” refer to the mix of interconnected production and terminal equipment in your environment.
- “**PAL**” refers to PAL-B, and PAL-G unless otherwise stated.
- “**DashBoard**” refers to the DashBoard Control System™.
- The “**Operating Tips**” and “**Note**” boxes are used throughout this manual to provide additional user information.

# Installation

---

## In This Chapter

This chapter provides instructions for installing the Rear Module(s) for the FSR-6601, installing a card into the frame, cabling details, and updating the software.

The following topics are discussed:

- Before You Begin
- Installing the FSR-6601
- Cabling
- Software Upgrades

---

## Before You Begin

Before proceeding with the instructions in this chapter, ensure that your DFR-8321 series frame is properly installed according to the instructions in the *DFR-8300 Series User Manual*.

### Static Discharge

Throughout this chapter, please heed the following cautionary note:



---

**ESD Susceptibility** — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

---


### Unpacking

Unpack each card you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

### Working with Fiber Optic Connectors

Keep the following in mind when working with fiber optic connectors:

- Every time you are required to insert a connector into a device or mating sleeve, you must clean the connector. All exposed surfaces of the ceramic ferrule must be clean. Follow your facility practices of cleaning fiber optic connectors.
- Connectors must always be inserted into a device or have a dust cap on. Refer to **Figure 2.1** for dust cap locations.
- A poor optical connection is often similar to a poor electrical connection. Try removing the connector, cleaning, and re-inserting the connector. A bad connection can result in experiencing instability of signal, high loss, or a noisy signal.

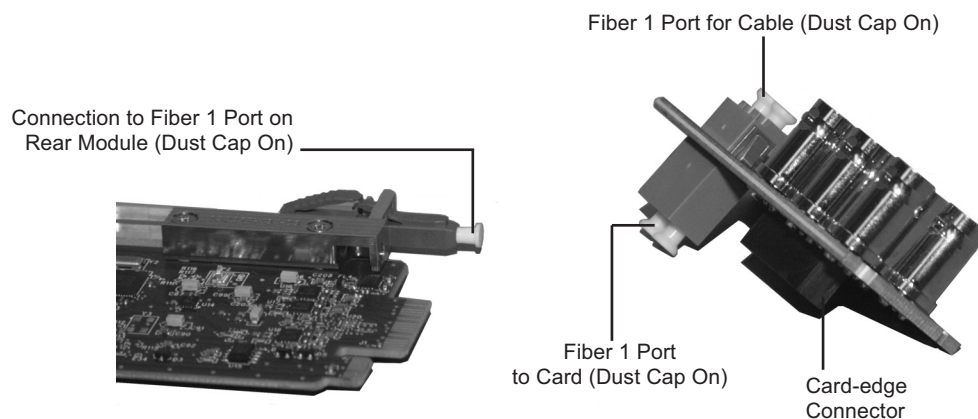

**Figure 2.1** Card Connectors with Dust Caps Installed — 8320AR-044 Rear Module Shown

# Installing the FSR-6601

This section outlines how to install a Rear Module, then the card, in a DFR-8321 series frame. The specific rear module you need to install depends on your application.



**Caution** — *Never attempt to look down the barrel of a connected fiber or device transmitting an optical signal. The transmitted light is not in the visible spectrum and may cause permanent eye damage. Turn off all laser sources before disconnecting devices.*

## Rear Modules for the FSR-6601


The **8320AR-044** Full Rear Module (R2-6601) or the **8320AR-045** Split Rear Module (R2S-6601) can be used in the DFR-8321 series frames. Note that the available cable designations differ between the type of module used. Refer to the section “**Overview**” on page 2-5 for details.

## Installing a Rear Module

If the Rear Module is already installed, proceed to the section “**Installing a Card**” on page 2-4.

Use the following procedure to install a Rear Module in your DFR-8321 series frame:

1. Locate the card frame slots on the rear of the frame.
2. Remove the Blank Plate from the slot you have chosen for the card installation.
3. Remove the two dust caps from the fiber ports on the Rear Module that face the interior of the frame. Refer to **Figure 2.2** for dust cap locations.

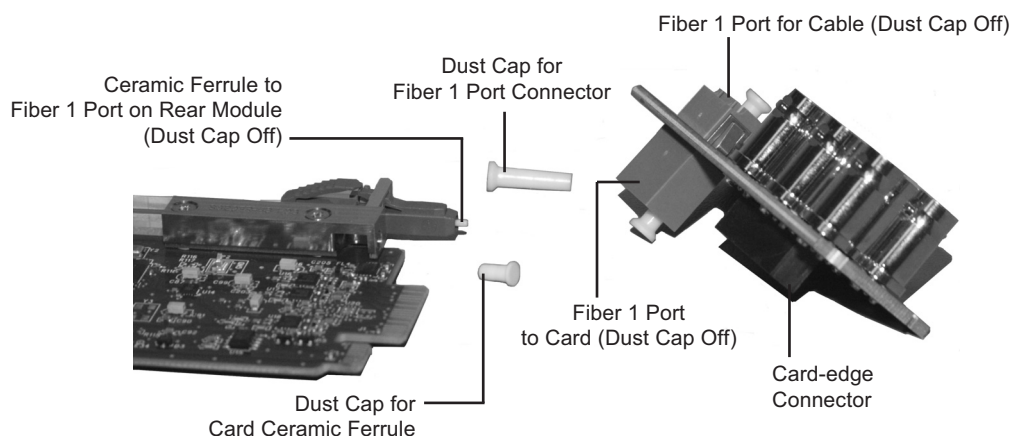

**Figure 2.2** Card Connectors with Dust Caps Removed — 8320AR-044 Rear Module Shown


4. Install the bottom of the Rear Module in the **Module Seating Slot** at the base of the frame’s back plane.
5. Align the top hole of the Rear Module with the screw on the top-edge of the frame back plane.
6. Using a Phillips screwdriver and the supplied screw, fasten the Rear Module to the back plane of the frame. Do not over tighten.
7. Ensure proper frame cooling and ventilation by having all rear frame slots covered with Rear Modules or Blank Plates.

This completes the procedure for installing a Rear Module in your DFR-8321 series frame.

## Installing a Card

Use the following procedure to install a card in a DFR-8321 series frame:

1. Locate the Rear Module you installed in the procedure “**Installing a Rear Module**” on page 2-3.
2. Ensure the Rear Module is one of the required rear modules for the card. You must use either a Full Rear Module (8320AR-044) or a Split Rear Module (8320AR-045).
3. Remove the dust cap from the **Fiber 1** port connector on the card end (the topmost fiber optic port).
  - Refer to **Figure 2.1** and **Figure 2.3** for dust cap locations.
  - Refer to the section “**Important Laser Safety Measures and Notices**” at the beginning of this manual for safety information when handling fiber optic devices.

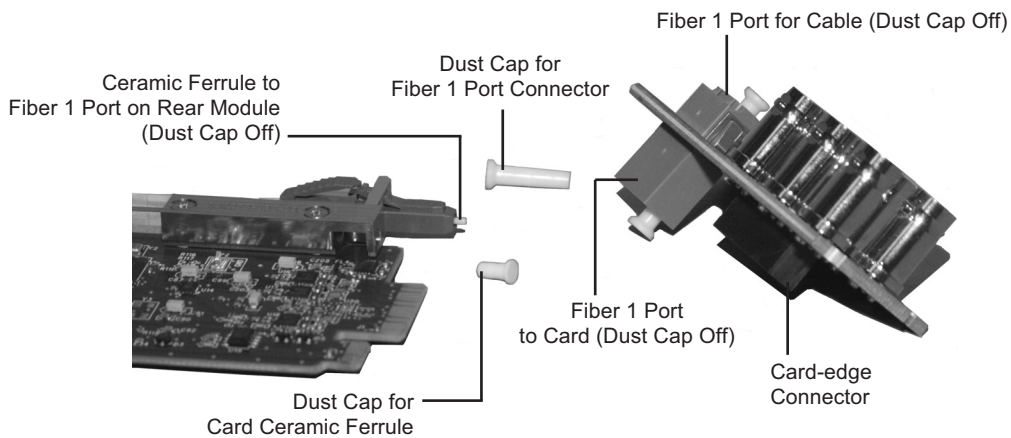

**Figure 2.3** Card Connectors with Dust Caps Removed — 8320AR-044 Rear Module Shown

4. Ensure that the exposed surface of the ceramic ferrule of the connector is clean. Refer to the section “**Working with Fiber Optic Connectors**” on page 2-2 for cleaning tips.
5. Hold the card by the edges and carefully align the card-edges with the slots in the frame.
6. Fully insert the card into the frame until the rear connection plus is properly seated in the Rear Module. You will feel a click when the card mates onto the rear module.
7. Verify whether your **Rear Module Label** is self-adhesive by checking the back of the label for a thin wax sheet. You must remove this wax sheet before affixing the label to the Rear Module.
8. Affix the supplied **Rear Module Label** to the BNC area of the Rear Module.
9. Remove the dust cap from the **Fiber 1** port (the topmost fiber optic port) on the Rear Module that faces the exterior of the frame. This is the port that you will insert your Fiber optic cable into.
10. Ensure the ceramic ferrule of the **Fiber 1** port connector is clean.

This completes the procedure for installing a card in a DFR-8321 series frame.

# Cabling

This section provides information for connecting cables to the installed Rear Modules on the DFR-8321 series frames. Connect the input and output cables according to the following sections.

The optical connector used to mate the card to the rear module is designed for blind mate optical connections. All fiber interfaces are single mode fibers.




**Caution** — Every time you are required to insert a connector into a device or mating sleeve, you must clean the connector. All exposed surfaces of the ceramic ferrule must be clean. Follow your facility practices of cleaning fiber optic connectors.

Connectors must always be inserted into a device or have a dust cap on.


## Overview

In the DFR-8321 series frames, the FSR-6601 is used with the following Rear Modules:

- **8320AR-044** Full Rear Module — Each card occupies two slots and provides an optical input, and six SDI outputs. Refer to **Figure 2.4**.
- **8320AR-045** Split Rear Module — Each card occupies one slot and provides one optical input, and three SDI outputs. Refer to **Figure 2.5**.

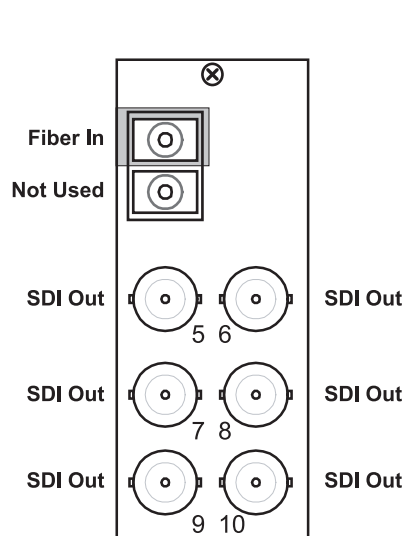

**Figure 2.4** Cable Connections for the R2-6601 Rear Module

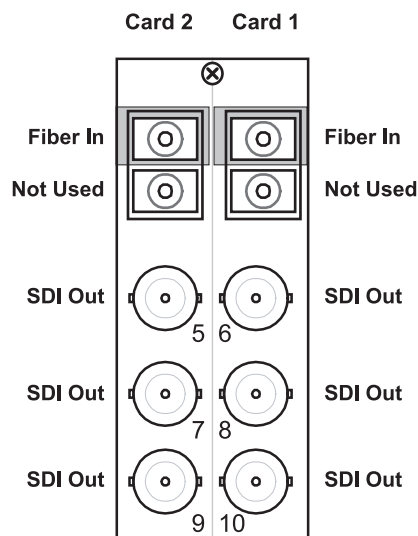

**Figure 2.5** Cable Connections for the R2S-6601 Rear Module

---

# Software Upgrades

This section provides instructions for installing upgrading the software for your card using the DashBoard Control System™.



---

**Note** — *This procedure assumes that you are running DashBoard version 3.0.0 or higher.*

---

## Performing Software Upgrades

Use the following procedure to upgrade the software on a card:

1. Contact Ross Technical Support for the latest software version file.
2. Display the **Device View** of the card by double-clicking its status indicator in the **Basic Tree View**.
3. From the **Device View**, click **Upload** to display the **Select file for upload** dialog.
4. Navigate to the \*.bin upload file you wish to upload.
5. Click **Open**.
6. If you are upgrading a single card, click **Finish** to start the upgrade. Proceed to step 8.
7. If you are upgrading multiple cards:
  - Click **Next >** to display the **Select Destination** menu. This menu provides a list of the compatible cards based on the card selected in step 2.
  - Specify the card(s) to upload the file to by selecting the check box(es) for the cards you wish to upload the file to.
  - Verify that the card(s) you wish to upload the file to. The **Error/Warning** fields indicate any errors, such as incompatible software or card type mismatch.
  - Click **Finish**.
8. Monitor the upgrade.
  - The **Upload Status** dialog enables you to monitor the upgrade process.
  - The card reboots automatically once the file is uploaded. The card is temporarily taken offline.
  - The reboot process is complete once the status indicators for the **Card State** and **Connection** return to their previous status.



---

**Operating Tip** — *If you are running DashBoard version 2.3 or lower, you must click **Reboot** in the **Device** tab to complete the upgrade process.*

---

This completes the procedure for upgrading the software on a card.

# User Controls

---

## In This Chapter

This chapter provides a general overview of the user controls available on the FSR-6601.

The following topics are discussed:

- Card Overview
- Control and Monitoring Features

# Card Overview

This section provides a general overview of the card components.

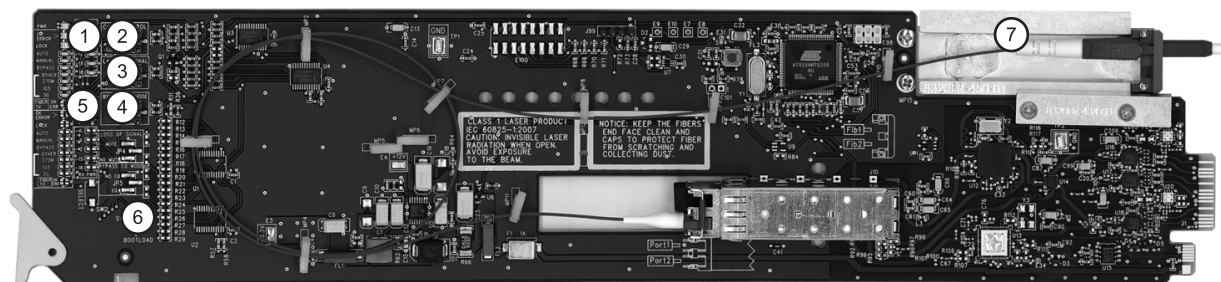


Figure 3.1 FSR-6601 — Components

|                         |                          |                          |
|-------------------------|--------------------------|--------------------------|
| 1) Rx Power LEDs        | 4) Bypass EQ Mode (JP3)  | 7) Fiber Optic Connector |
| 2) Card Control (JP1)   | 5) Select Switch (SW1)   |                          |
| 3) Loss of Signal (JP2) | 6) Bootload Button (SW3) |                          |

## 1. Rx Power LEDs

Five LEDs indicate the input optical power as detected by the optical module. Refer to the section “Rx Power LEDs on the FSR-6601” on page 3-6 for details.

## 2. Card Control (JP1)

Use **JP1** to select whether the card is remotely configured (for example, via DashBoard or SNMP). You can select one of the following options:

- **REMOTE** — This option enables the remote configuration. All parameters may be configured remotely. Data rate selection can also be configured locally using **SW1**, however, the jumper settings (**JP2** and **JP3**) are ignored.
- **LOCAL** — This option disables the remote configuration. The card can only be configured using the card-edge controls (**SW1**, **JP2**, and **JP3**). This option is useful to lock out remote configuration changes. This is the default setting.



**Note** — The card status and configuration can still be monitored remotely when **JP1** is set to **LOCAL**.

## 3. Loss of Signal (JP2)

Use **JP2** to determine the card behavior on a loss of input. Note that the **JP2** setting is only used when **JP1** is set to **LOCAL**. You can select one of the following options:

- **MUTE** — This option mutes the card outputs when the input equalizer is unable to detect a valid input signal, or when the reclocker is unable to lock to the input.
- **NO MUTE** — This option does not mute the card outputs on loss of input or lock. This is the default setting.

## 4. Bypass EQ Mode (JP3)

This jumper is not implemented.

## 5. Select Switch (SW1)

Use **SW1** to set the reclocking rate of the card. Pressing **SW1** cycles through the following options:

- **AUTO** — This option enables automatic rate detection on the card. It will automatically lock to input at any supported data rate (270Mbps, 1.5Gbps, or 3Gbps).
- **BYPASS** — This option enables the card to pass any data rate without reclocking. The output is set to the HD slew rate except when the input is a valid SD data rate (270Mbps).
- **270M** — This option configures the card to reclock at a rate of 270Mbps (SD).
- **1G5** — This configures the card to reclock at a rate of 1.5Gbps (HD).
- **3G** — This configures the card to reclock at a rate of 3Gbps (HD).

## 6. Bootload Button (SW3)

**SW3** is used for factory service in the unlikely event of a complete card failure. The Bootload process is further described in the section “**Bootload Button**” on page 6-2.

## 7. Fiber Optic Connector

The FSR-6601 use a blind mate LC/UPC connector to interface with the Rear Modules (8320AR-044 and 8320AR-045). The rear module remains passive, while allowing for the FSR-6601 to be replaced without the need to remove any connected BNC or fiber optic cables. The blind mate connector is connected to the optical module via a single mode LC/UPC pigtail.


The fiber optic connector for the card includes a dust cap. The dust cap must stay on at all times when the card is not installed in a frame. Ensure to keep the fibers end face clean and use the caps to protect the fiber from scratches and collecting dust.

### *For More Information...*

- on the LEDs available on the card-edge, refer to the section “**Control and Monitoring Features**” on page 3-4.
- on the LED behavior when using the Reclocker Rate Selection feature, refer to the section “**Reclocker Rate Selection LEDs**” on page 3-6.
- on the available DashBoard menus, refer to the section “**DashBoard Menus for the FSR-6601**” on page 4-2.
- on laser safety and important notices, refer to the section “**Important Laser Safety Measures and Notices**” at the beginning of this manual.
- on using fiber optic connectors, refer to the section “**Working with Fiber Optic Connectors**” on page 2-2.

## Control and Monitoring Features

This section provides information on the LEDs for the FSR-6601. Refer to **Figure 3.2** for the location of the LEDs. For information on the Rx Power LEDs, refer to the section “**Rx Power LEDs on the FSR-6601**” on page 3-6.

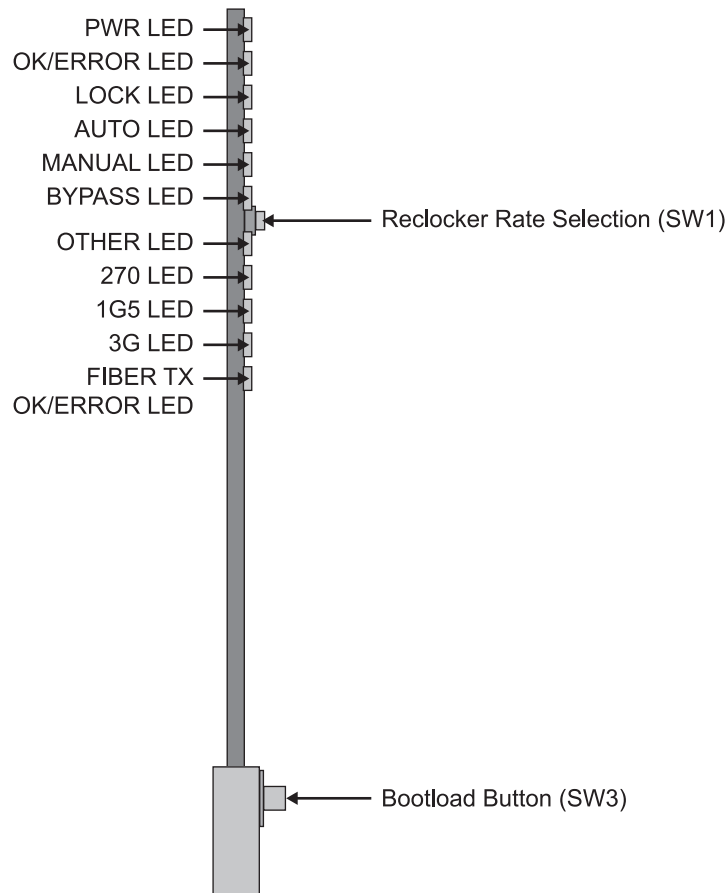

**Figure 3.2** FSR-6601 — Card-edge Controls

### Status LEDs on the FSR-6601

The front-edge of the card has LED indicators for alarms, and communication activity. Basic LED displays and descriptions are provided in **Table 3.1**.

**Table 3.1** LEDs on the FSR-6601

| LED | Color          | Display and Description                                                                                          |
|-----|----------------|------------------------------------------------------------------------------------------------------------------|
| PWR | Green          | When lit green, this LED indicates that the card is functioning normal and that no anomalies have been detected. |
|     | Flashing Green | When flashing green, this LED indicates that the bootloader is currently running.                                |
|     | Yellow         | When lit yellow, this LED indicates that the CPU is booting.                                                     |
|     | Red            | When lit red, this LED indicates that the card is powering on or there is a fault condition.                     |
|     | Off            | When unlit, this LED indicates a lack of power to the card.                                                      |

**Table 3.1 LEDs on the FSR-6601**

| LED                      | Color  | Display and Description                                                                                                                                                                                                                |
|--------------------------|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>OK/ERROR</b>          | Green  | When lit, this LED indicates that a valid input signal is present.                                                                                                                                                                     |
|                          | Red    | When lit red, this LED indicates a valid input signal is not present.                                                                                                                                                                  |
| <b>LOCK</b>              | Green  | When lit green, this LED indicates that the reclocker is locked to the input signal.                                                                                                                                                   |
|                          | Red    | When lit red, this LED indicates that the reclocker is unable to lock to the input. This typically indicates that the input data rate is different from the configured reclocking rate, or that the input is an unsupported data rate. |
|                          | Off    | When unlit, this LED indicates that the reclockers is set to Bypass.                                                                                                                                                                   |
| <b>AUTO</b>              | Yellow | When lit, this LED indicates that the reclocker is configured to lock to any supported input data rate, using an automatic rate detection scheme.                                                                                      |
| <b>MANUAL</b>            | Yellow | When lit, this LED indicates that the reclocker is configured to a fixed data rate or to Bypass. When configured to a fixed data rate, automatic data rate detection is disabled.                                                      |
| <b>BYPASS</b>            | Yellow | When lit, this LED indicates that the reclocker is manually configured to Bypass. The card output is not reclocked.                                                                                                                    |
| <b>OTHER</b>             | Yellow | This LED is not implemented.                                                                                                                                                                                                           |
| <b>270</b>               | Yellow | When lit, this LED indicates that the reclocker is set to a fixed rate of 270Mbps (SD) or is configured in Auto mode and is locked to a 270Mbps SD signal.                                                                             |
| <b>1G5</b>               | Yellow | When lit, this LED indicates that the reclocker is set to a fixed rate of 1.5Gbps (HD), or is configured in Auto mode and is locked to a 1.5Gbps HD signal.                                                                            |
| <b>3G</b>                | Yellow | When lit, this LED indicates that the reclocker is set to a fixed rate of 3Gbps (HD), or is configured in Auto mode and is locked to a 3Gbps HD signal.                                                                                |
| <b>FIBER TX OK/ERROR</b> |        | This LED is not implemented.                                                                                                                                                                                                           |

## Rx Power LEDs on the FSR-6601

**Table 3.2** provides information on the Rx Power LEDs located on the FSR-6601. These LEDs indicate the input optical power as reported by the card optical module.

**Table 3.2 Rx Power LEDs**

| Rx Power LEDs |    |     |     |     | Description                                          |
|---------------|----|-----|-----|-----|------------------------------------------------------|
| -6            | -9 | -12 | -15 | -18 |                                                      |
| ○             | ○  | ○   | ○   | ○   | The input optical power is greater than -6dBm        |
| ○             | ○  | ○   | ○   | ○   | The input optical power is between -6dBm and -9dBm   |
|               |    | ○   | ○   | ○   | The input optical power is between -9dBm and -12dBm  |
|               |    |     | ○   | ○   | The input optical power is between -12dBm and -15dBm |
|               |    |     |     | ○   | The input optical power is between -15dBm and -18dBm |
|               |    |     |     |     | The input optical power is less than -18dBm          |

○ = Illuminated LED

## Reclocker Rate Selection LEDs

**Table 3.3** provides information on the **Reclocker Rate Selection (SW1)** and LED functions.

**Table 3.3 Card Reclocker Rate Selection Button and LED Functions**

| Date Rate LED Displays |        |        |      |     |    | Description                                          |
|------------------------|--------|--------|------|-----|----|------------------------------------------------------|
| AUTO                   | MANUAL | BYPASS | 270M | 1G5 | 3G |                                                      |
| ○                      |        |        |      |     |    | Auto mode, card searching for valid rate             |
| ○                      |        |        | ○    |     |    | Auto mode, card detects and reclocks rate of 270Mbps |
| ○                      |        |        |      | ○   |    | Auto mode, card detects and reclocks rate of 1.5Gbps |
| ○                      |        |        |      |     | ○  | Auto mode, card detects and reclocks rate of 3Gbps   |
|                        | ○      | ○      |      |     |    | Card is configured for Bypass mode                   |
|                        | ○      |        | ○    |     |    | Card is set to reclock 270Mbps                       |
|                        | ○      |        |      | ○   |    | Card is set to reclock 1.5Gbps                       |
|                        | ○      |        |      |     | ○  | Card is set to reclock 3Gbps                         |

○ = Illuminated LED

# Menus

---

## In This Chapter

This chapter provides a summary of the menus available for the FSR-6601.

The following topics are discussed:

- Overview
- Status Tabs
- Setup Menus
- Alarms Menus

---

## Overview

The FSR-6601 supports two types of remote monitoring and control: SNMP or DashBoard.

### SNMP Monitoring and Control

The MFC-8300 series Network Controller card in the DFR-8321 series frame provides optional support for remote monitoring of your frame and using Simple Network Management Protocol (SNMP), which is compatible with many third-party monitoring and control tools.

Refer to your FSR-6601 Management Information Base (MIB) files for a breakdown of SNMP controls on this card. Refer to the ***MFC-8300 Series User Manual*** for additional information on SNMP Monitoring and Control.

### DashBoard Menus for the FSR-6601

The DashBoard Control System™ enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with other cards in the DFR-8321 series frame through the MFC-8300 series Network Controller Card. The following sections briefly summarize the menus, items, and parameters available from DashBoard for the FSR-6601. Default parameters are noted with an asterisk (\*).

---

## Status Tabs

This section summarizes the **Status** tab parameters available in DashBoard. The Status tabs provide read-only information such as software revision issue, hardware status, and power consumption.

### Signal

**Table 4.1** summarizes the read-only information such as channel status, SDI input signal, and SDI output status displayed in the **Signal** tab.

**Table 4.1 Signal Tab Items**

| Tab Title                     | Item                  | Parameters         | Description                                                                     |
|-------------------------------|-----------------------|--------------------|---------------------------------------------------------------------------------|
| <b>Signal<br/>(Read-only)</b> | Channel Status        | OK                 | Indicates when the channel is functioning normally or if anomalies are detected |
|                               |                       | No Input           |                                                                                 |
|                               |                       | Reclocker unlocked |                                                                                 |
|                               |                       | SFP Hi Temp        |                                                                                 |
|                               |                       | SFP Lo Temp        |                                                                                 |
|                               |                       | SFP Hi Power       |                                                                                 |
|                               |                       | SFP Low Power      |                                                                                 |
|                               |                       | SFP Tx Fault       |                                                                                 |
|                               |                       | SFP Not Detected   |                                                                                 |
|                               | SDI Output            | Locked - #         | Indicates the status of the SDI Output                                          |
|                               |                       | Undefined Rate     |                                                                                 |
|                               |                       | Bypass Reclocking  |                                                                                 |
|                               |                       | No Signal          |                                                                                 |
|                               |                       | No Signal (muted)  |                                                                                 |
|                               |                       | Unlocked           |                                                                                 |
|                               |                       | Unlocked (muted)   |                                                                                 |
|                               | Optical Module Status | OK                 | Indicates the status of the card Optical Module                                 |
|                               |                       | No Signal          |                                                                                 |
|                               |                       | Temp High          |                                                                                 |
|                               |                       | Temp Low           |                                                                                 |
|                               |                       | Rx Power High      |                                                                                 |
|                               |                       | Tx Power High      |                                                                                 |

**Table 4.1 Signal Tab Items**

| Tab Title                     | Item                                | Parameters   | Description                                                                                               |
|-------------------------------|-------------------------------------|--------------|-----------------------------------------------------------------------------------------------------------|
| <b>Signal<br/>(Read-only)</b> | Optical Module Status               | Rx Power Low | Indicates the status of the card Optical Module                                                           |
|                               |                                     | Tx Power Low |                                                                                                           |
|                               |                                     | Tx Fault     |                                                                                                           |
|                               |                                     | Tx Disabled  |                                                                                                           |
|                               |                                     | Not Detected |                                                                                                           |
|                               | Optical Rx Power (dBm) <sup>a</sup> | #            | Indicates the optical power received by the Optical Module. This value is typically accurate $\pm 3$ dBm. |

- a. When operating at the upper or lower optical power limits, it is recommended to use an optical power meter to verify the received power.

## Hardware Status

**Table 4.2** summarizes the read-only information displayed in the **Hardware** tab.

**Table 4.2 Hardware Tab Items**

| Tab Title                       | Item                           | Parameters        | Description                                                                                         |
|---------------------------------|--------------------------------|-------------------|-----------------------------------------------------------------------------------------------------|
| <b>Hardware<br/>(Read-only)</b> | HW Status                      | OK                | Indicates the status of the hardware and whether a supported rear module is installed with the card |
|                                 |                                | Incomp I/O Module |                                                                                                     |
|                                 | Voltage (mV)                   | #                 | Supply Voltage                                                                                      |
|                                 | Current (mA)                   | #                 | Current consumption of card                                                                         |
|                                 | Optical Module Temperature (C) | #                 | Internal temperature as reported by the SFP                                                         |
|                                 | CPU Headroom                   | #                 | Processing power available                                                                          |
|                                 | RAM Available                  | ##/###            | On-board processing memory available                                                                |
|                                 | Uptime (h)                     |                   | Displays the number of hours since the last reboot of the card                                      |
|                                 | Configuration Bank             | #                 | Storage count                                                                                       |

## Product Status

**Table 4.3** summarizes the read-only information displayed in the **Product** tab.

**Table 4.3 Product Tab Items**

| Tab Title                      | Item         | Parameters      | Description                         |
|--------------------------------|--------------|-----------------|-------------------------------------|
| <b>Product<br/>(Read-only)</b> | Product      | FSR-6601        |                                     |
|                                | Supplier     | Ross Video Ltd. |                                     |
|                                | Board Rev    | ##              |                                     |
|                                | Board S/N    | #####           | Indicates the card serial number    |
|                                | Rear Module  | #               | Indicates the Rear Module installed |
|                                | Software Rev | ##.##           | Indicates the software version      |

# Setup Menus

Table 4.4 summarizes the **Setup Menu** options available in DashBoard.

**Table 4.4 Setup Menu Items**

| Menu Title | Item                               | Parameters | Description                                                                                                      |
|------------|------------------------------------|------------|------------------------------------------------------------------------------------------------------------------|
| Setup      | Reclock Rate                       | Auto*      | The card automatically detects the incoming data rate                                                            |
|            |                                    | Bypass     | The card does not reclock the input                                                                              |
|            |                                    | 270 Mbps   | The reclocker is set to 270Mbps                                                                                  |
|            |                                    | 1.5 Gbps   | The reclocker is set to 1.5Gbps                                                                                  |
|            |                                    | 3 Gbps     | The reclocker is set to 3Gbps                                                                                    |
|            | Mute on Loss of Input <sup>a</sup> | Selected   | The output is muted on loss of input                                                                             |
|            |                                    | Cleared*   | The output is not muted on loss of input                                                                         |
|            | Edit Permission                    | Unlocked*  | All configurable menu options are editable                                                                       |
|            |                                    | Locked     | All configuration menu options, except this one, are locked and are read-only                                    |
|            |                                    | Local Only | <b>JP1</b> is set to <b>LOCAL</b> and all configuration parameters, including this one, are locked and read-only |
|            | Factory Defaults Reset             | Reset      | Resets all the settings                                                                                          |

- a. It is recommended to disable this option to avoid false mutings of the input whenever the input reading is at a low power level.

---

## Alarms Menus

**Table 4.5** summarizes the **Alarms Menu** options available in DashBoard.

**Table 4.5 Alarms Menu Items**

| Menu Title                                | Item                             | Parameters | Description                                                                                                         |
|-------------------------------------------|----------------------------------|------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Alarms - Optical<br/>Module Alarms</b> | Alarm on Abnormal<br>Power       | Selected*  | <b>HW Status</b> field reports when the power current or optical power of the SFP module is not in range (high/low) |
|                                           |                                  | Cleared    | Disables this alarm                                                                                                 |
|                                           | Alarm on Abnormal<br>Temperature | Selected*  | <b>HW Status</b> field reports when the temperature of the SFP module is not in range (high/low)                    |
|                                           |                                  | Cleared    | Disables this alarm                                                                                                 |
| <b>Alarms -<br/>Channel A</b>             | Alarm on Loss of Input           | Selected*  | <b>Signal Status</b> field reports a loss of input                                                                  |
|                                           |                                  | Cleared    | Disables this alarm                                                                                                 |

# Specifications

---

## In This Chapter

This chapter includes the technical specifications for the FSR-6601. Note that specifications are subject to change without notice.

The following topics are discussed:

- FSR-6601 Technical Specifications

# FSR-6601 Technical Specifications

This section provides the technical specifications for the FSR-6601.

**Table 5.1 FSR-6601 Technical Specifications**

| Category              | Parameter                                  | Specification                                                                                                                   |
|-----------------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>Optical Inputs</b> | Number of Inputs                           | 1                                                                                                                               |
|                       | SMPTE Standards Accommodated               | SMPTE 259M-C, SMPTE 292M, SMPTE 424M                                                                                            |
|                       | Operating Wavelength Range                 | 1260nm to 1620nm                                                                                                                |
|                       | Input Power Operating Range (Color Bars)   | <ul style="list-style-type: none"> <li>• -3dBm to -18dBm @ 2.97Gbps</li> <li>• -3dBm to -19dBm @ 270Mbps and 1.5Gbps</li> </ul> |
|                       | Input Power Operating Range (Pathological) | <ul style="list-style-type: none"> <li>• -3dBm to -17dBm @ 2.97Gbps</li> <li>• -3dBm to -18dBm @ 270Mbps and 1.5Gbps</li> </ul> |
|                       | Receiver Overload                          | At values above -3dBm                                                                                                           |
|                       | Connector Type                             | Single Mode, LC/UPC, PIN                                                                                                        |
| <b>SDI Outputs</b>    | Number of Outputs                          | Full Rear Module (8320AR-044): 6<br>Split Rear Module (8320AR-045): 3                                                           |
|                       | SMPTE Standards Accommodated               | SMPTE 259M-C, SMPTE 292M, SMPTE 424M                                                                                            |
|                       | Impedance                                  | 75ohm                                                                                                                           |
|                       | Return Loss                                | >15dB to 1.485GHz<br>>10dB from 1.485GHz to 2.97GHz                                                                             |
|                       | Signal Level                               | 800mV ±10%                                                                                                                      |
|                       | DC Offset                                  | 0V ±50mV                                                                                                                        |
|                       | Rise and Fall Time (20-80%)                | <ul style="list-style-type: none"> <li>• 700ps. Typical (270Mbps)</li> <li>• 120ps. Typical (1.485Gbps, 2.97Gbps)</li> </ul>    |
|                       | Overshoot                                  | <10%                                                                                                                            |
|                       | Connector Type                             | BNC                                                                                                                             |
| <b>Environment</b>    | Operating Range                            | 0°C to 40°C                                                                                                                     |
| <b>Power</b>          | Power Consumption                          | <4W                                                                                                                             |

# Service Information

---

## In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

---

# Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your FSR-6601, the following basic troubleshooting checklist may help identify the source of the problem. If the frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “**Contact Us**” section.



---

*Every time you are required to insert a connector into a device, or mating sleeve, you must clean the connector. All exposed surfaces of the ceramic ferrule must be clean. Follow your facility practices of cleaning fiber optic connectors.*

---

*Connectors must always be inserted into a device or have a dust cap on.*

---

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
4. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
5. **Unit Exchange** — Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.

## Bootload Button

In the unlikely event of a complete card failure, you may be instructed by Ross Technical Support to perform a complete software reload on the card.

Use the following procedure to reload the software on a card:

1. Eject the card from the frame.
2. Press and hold the **Bootload** button, while re-inserting the card into the frame.
3. Release the button.
  - The **STATUS OK LED** flashes green while the card is waiting for a new software load.
  - If a new software load is not sent to the card within 60 seconds, the card will attempt to restart with its last operational software load.
  - Software loads can be sent to the card via the ethernet connection on the rear of the frame.

This completes the procedure for reload the software on a card.

---

## Warranty and Repair Policy

The FSR-6601 is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your FSR-6601 proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that the FSR-6601 has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This FSR-6601 User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the FSR-6601 are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

### In Case of Problems

Should any problem arise with your FSR-6601 please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your FSR-6601. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

**Notes:**

**Notes:**

# Contact Us

**Contact our friendly and professional support representatives for the following:**

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

|                       |                                                      |                                                          |
|-----------------------|------------------------------------------------------|----------------------------------------------------------|
| <b>PHONE</b>          | <b>General Business Office and Technical Support</b> | 613 • 652 • 4886                                         |
|                       | <b>After Hours Emergency</b>                         | 613 • 349 • 0006                                         |
|                       | <b>Fax</b>                                           | 613 • 652 • 4425                                         |
| <b>E-MAIL</b>         | <b>General Information</b>                           | solutions@rossvideo.com                                  |
|                       | <b>Technical Support</b>                             | techsupport@rossvideo.com                                |
| <b>POSTAL SERVICE</b> | <b>Ross Video Limited</b>                            | 8 John Street,<br>Iroquois, Ontario, Canada<br>K0E 1K0   |
|                       | <b>Ross Video Incorporated</b>                       | P.O. Box 880,<br>Ogdensburg, New York, USA<br>13669-0880 |

## Visit Us

**Please visit us at our website for:**

- Company information
- Related products and full product lines
- On-line catalog
- News
- Testimonials

**[www.rossvideo.com](http://www.rossvideo.com)**