

SONY[®]

HD CAMERA CONTROL UNIT

HDCU3300

SD ENCODER UNIT

HKCU1001

MULTI INTERFACE UNIT

HKCU1003

SDI OUTPUT EXPANSION UNIT

HKCU1005

HD SUPER MOTION

Digital HDVS

INSTALLATION MANUAL

1st Edition (Revised 2)

Serial No. 10001 and Higher : HDCU3300 (UC)

Serial No. 30001 and Higher : HDCU3300 (J)

Serial No. 40001 and Higher : HDCU3300 (CE)

Serial No. 50001 and Higher : HDCU3300 (E3)

Serial No. 60001 and Higher : HDCU3300 (E2)

警告

このマニュアルは、サービス専用です。

お客様が、このマニュアルに記載された設置や保守、点検、修理などを行うと感電や火災、人身事故につながる可能性があります。

危険をさけるため、サービストレーニングを受けた技術者のみご使用ください。

WARNING

This manual is intended for qualified service personnel only.

To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

WARNUNG

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.

Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegebenen Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.

AVERTISSEMENT

Ce manuel est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

Attention-when the product is installed in Rack:

1. Prevention against overloading of branch circuit

When this product is installed in a rack and is supplied power from an outlet on the rack, please make sure that the rack does not overload the supply circuit.

2. Providing protective earth

When this product is installed in a rack and is supplied power from an outlet on the rack, please confirm that the outlet is provided with a suitable protective earth connection.

3. Internal air ambient temperature of the rack

When this product is installed in a rack, please make sure that the internal air ambient temperature of the rack is within the specified limit of this product.

4. Prevention against achieving hazardous condition due to uneven mechanical loading

When this product is installed in a rack, please make sure that the rack does not achieve hazardous condition due to uneven mechanical loading.

5. Install the equipment while taking the operating temperature of the equipment into consideration

For the operating temperature of the equipment, refer to the specifications of the Operation Manual.

安全のために、周辺機器を接続する際は、過大電圧を持つ可能性があるコネクタを以下のポートに接続しないでください。

: Ethernetコネクタ

上記のポートについては本書の指示に従ってください。

For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to the following port(s).

: Ethernet connector

Follow the instructions for the above port(s).

Table of Contents

Manual Structure

Purpose of this manual	3 (E)
Related manuals	3 (E)
Trademarks	3 (E)

1. Installation Overview

1-1. Checking the ROM and Software Version	1-1 (E)
1-2. Connectors and Cables	1-2 (E)
1-2-1. Connector Input/Output Signal	1-2 (E)
1-2-2. Cable Wiring Diagram	1-6 (E)
1-2-3. Connection Connectors	1-7 (E)
1-2-4. Note when Connecting CAMERA Connector	1-7 (E)
1-3. Circuit Boards and Main Parts Layouts	1-8 (E)
1-4. External Dimensions	1-9 (E)
1-5. Removing/Installing the Front Panel	1-9 (E)
1-6. On-board Indicator/Switch/Volume Functions	1-10 (E)
1-7. Notes on Using the Power Supply Unit	1-23 (E)
1-7-1. Setting the Power Voltage	1-23 (E)
1-7-2. Replacing the Fuse	1-24 (E)
1-8. Installation Position of the Option Board	1-25 (E)
1-9. Installing the Option Boards	1-26 (E)
1-10. Installing in 19-inch Rack	1-27 (E)
1-11. Cleaning of Connector/Cable	1-30 (E)

2. System Setup

2-1. System Connection	2-1 (E)
2-2. Setting the System Format	2-6 (E)
2-2-1. Setting the Multi-Format	2-6 (E)
2-2-2. Setting the Reference Input	2-6 (E)
2-3. Audio System	2-7 (E)
2-3-1. Setting the Intercom System	2-7 (E)
2-3-2. Setting the Microphone	2-9 (E)
2-4. Systems	2-10 (E)
2-4-1. Setting the Tally System	2-10 (E)
2-4-2. Setting the Camera Number	2-10 (E)
2-4-3. Connecting the Control, Intercom, Tally and Audio Signals	2-11 (E)

2-5. Video Signal System	2-12 (E)
2-5-1. Selecting the Input/Output Signal	2-12 (E)
2-5-2. Adjusting the Signal Phase	2-12 (E)
2-5-3. Setting Aspect Ratio Conversion during Down-convert	2-13 (E)
2-5-4. Adjusting the Level of the VBS Signal (only when HKCU1001/1003 is installed) ...	2-15 (E)
2-5-5. Adjusting the Level of Signals for Waveform Monitor	2-15 (E)
2-5-6. Adjusting the Level of Signals for Picture Monitor	2-18 (E)
2-5-7. Setting the RET Input	2-18 (E)

3. Menu Settings

3-1. Menu Operation	3-1 (E)
3-1-1. When version of the software prior to V1.10	3-1 (E)
3-1-2. When software V1.10 or later version is used without the system connection mode via Ethernet set	3-2 (E)
3-1-3. When software V1.10 or later version is used with the system connection mode via Ethernet set	3-3 (E)
3-2. Status Display	3-4 (E)
3-2-1. When software prior to V1.10 or V1.10 and later version is used without the system connection mode via Ethernet set	3-4 (E)
3-2-2. When software V1.10 or later version is used with the system connection mode via Ethernet set	3-8 (E)
3-3. System Menu	3-13 (E)
3-4. Configuration Menu	3-17 (E)
3-5. Network Setting Menu	3-23 (E)

Manual Structure

Purpose of this manual

This manual is the installation manual of the following models :

HD Camera Control Unit HDCU3300

SD Encoder Unit HKCU1001

Multi Interface Unit HKCU1003

SDI Output Expansion Unit HKCU1005

This manual is intended for use by trained system and service engineers, and describes the information regarding the installation of the unit and the information that premises the service based on components replacement.

Related manuals

Beside this Installation Manual, the following manuals are available for the unit.

- **Operation Manual (Supplied with HDCU3300)**

This manual describes how to operate the HDCU3300.

- **Maintenance Manual (Available on request)**

This manual intended for use by trained system and service engineers describes (service overview and the circuit overview, the main part replacements, electrical alignment, parts list, semiconductor pin assignments, block diagrams, schematic diagrams, board layouts.) required for parts-level service.

For obtaining, contact your local Sony Sales Office/Service Center.

Part number : 9-968-308-0X

- **“Semiconductor Pin Assignments” CD-ROM (Available on request)**

This “Semiconductor Pin Assignments” CD-ROM allows you to search for semiconductors used in Broadcast and Professional equipment.

This manual contains a complete list of semiconductors and their ID Nos., and thus should be used together with the CD-ROM.

Part number: 9-968-546-0X

Trademarks

Trademarks and registered trademarks used in this manual are follows.

- Clear-Com is a registered trademark of Clear-Com Intercom Systems.
- Accuride is a registered trademark of Accuride International Corporation.

Section 1

Installation Overview

1-1. Checking the ROM and Software Version

When connecting the following peripheral equipment to the unit, confirm the versions of the ROMs and software which are installed in each model. If the version is lower than the following one, the ROM needs to be replaced and the software needs to be upgraded.

In this case, contact your local Sony Sales Office/Service Center.

ROM

Peripheral equipment	Board	Ref. No.	ROM version
MSU-700A/750	CPU-293/CPU-286	IC5, IC6/IC5, IC6	Ver.1.30 or higher
CNU-700	AT-89 or AT-89A	IC4, IC5	Ver.3.20 or higher
CNU-500	AT-100	IC4, IC5	Ver.2.80 or higher
RCP-720/721	MPU-79	IC10	Ver.2.90 or higher
RCP-730/731	MPU-79	IC10	Ver.2.90 or higher
RCP-740/741	MPU-79	IC10	Ver.2.90 or higher
RCP-700/701	MPU-92	IC6	Ver.2.90 or higher

Software

Peripheral equipment	Board	Software version
MSU-900/950	CPU-396	Ver.1.02 or higher
RCP-750/751	MPU-123	Ver.1.21 or higher
RM-B750	MPU-124	Ver.1.00 or higher
HDC3300	AT-163S	Ver.1.00 or higher

1-2. Connectors and Cables

1-2-1. Connector Input/Output Signal

BNC connector

SS-A OUTPUT (1-2) : BNC

HD-SDI : SMPTE 292M 0.8 V p-p
75 Ω , 1.485 Gbps/1.4835 Gbps

SS-B OUTPUT (1-2) : BNC

HD-SDI : SMPTE 292M 0.8 V p-p
75 Ω , 1.485 Gbps/1.4835 Gbps

SS-C OUTPUT (1-2) : BNC

HD-SDI : SMPTE 292M 0.8 V p-p
75 Ω , 1.485 Gbps/1.4835 Gbps

HD-SDI OUTPUT (1-4) : BNC

HD-SDI : SMPTE 292M 0.8 V p-p
75 Ω , 1.485 Gbps/1.4835 Gbps

SDI OUTPUT (1-4) : BNC

Conforms to BTA-S004B, 0.8 V p-p, 75 Ω , 1.485 Gbps/
1.4835 Gbps
SMPTE 292M
or
Component serial signal : 0.8 V p-p, 75 Ω , 270 Mbps
SMPTE 259M

RETURN INPUT

• HD SDI (1-4) : BNC

Conforms to BTA-S004B, 1.485 Gbps/1.4835 Gbps
SMPTE 292M

• SD SDI (1-4) : BNC

Component serial signal : 270 Mbps
SMPTE 259M

• VBS (1-4) : BNC

Analog composite signal : 1.0 V p-p, 75 Ω

INPUT

• REFERENCE : BNC

± 0.3 V, ternary SYNC, 75 Ω
or 0.286 V p-p, black burst signal, 75 Ω

• PROMPTER (1-2) : BNC

1.0 V p-p, 75 Ω

OUTPUT

• SYNC : BNC

± 0.3 V, ternary SYNC, 75 Ω
0.3 V p-p, SD SYNC, 75 Ω selectable

• CHARACTER : BNC

1.0 V p-p, 75 Ω

• AES/EBU : BNC

AES/EBU format

HKCU1001/1003

VBS (1-2) OUT : BNC

1.0 V p-p, 75 Ω

PIX OUT : BNC

1.0 V p-p, 75 Ω

WF OUT : BNC

0.714 V p-p, 75 Ω (NTSC)
ENC : 1.0 V p-p

HKCU1003

FRAME REF IN : BNC (Not used)

0.3 V p-p FRAME SYNC pulse, 75 Ω
or
 ± 0.3 V, ternary SYNC, 75 Ω
or 0.286 V p-p, black burst signal, 75 Ω

FRAME REF OUT : BNC (Not used)

THROUGH OUT/0.3 V p-p FRAME SYNC pulse, 75 Ω

VBS OUT : BNC

1.0V p-p, 75 Ω

PIX OUT : BNC

1.0 V p-p, 75 Ω

WF OUT : BNC

0.714 V p-p, 75 Ω (NTSC)
0.7 V p-p, 75 Ω (PAL)
ENC : 1.0 V p-p

R-Y/R OUT : BNC (Not used)

R-Y : 0.7 V p-p, 75 Ω (NTSC, SETUP : ON, when
outputting 75% color bar)
0.525 V p-p, 75 Ω (PAL, when outputting 75% color bar)
R : 0.7 V p-p, 75 Ω

Y/G OUT : BNC (Not used)

Y : 1.0 V p-p (Video : 0.714 V, synchronous 0.286 V, NTSC), 75 Ω
 1.0 V p-p (Video : 0.7 V, synchronous 0.3 V, PAL), 75 Ω
 G : 0.7 V p-p, 75 Ω

B-Y/B OUT : BNC (Not used)


B-Y : 0.7 V p-p, 75 Ω (NTSC, SETUP : ON, when outputting 75% color bar)
 0.525 V p-p, 75 Ω (PAL, when outputting 75% color bar)
 B : 0.7 V p-p, 75 Ω

HKCU1005**SDI OUT (1-4)** : BNC

Conforms to BTA-S004B, 0.8 V p-p, 75 Ω , 1.485 Gbps/
 1.4835 Gbps
 SMPTE 292M
 or
 Component serial signal : 0.8 V p-p, 75 Ω , 270 Mbps
 SMPTE 259M


CAMERA connector (optical/electrical composite connector)

VIDEO RGB 4:4:4 3ch
 10.692/10.681 Gbps serial
 RET VIDEO Y/P_B/P_R
 10.692/10.681 Gbps serial
 INCOM 2ch
 MIC 2ch
 DIGITAL AUDIO (AES/EBU)
 CAMERA COMMAND
 PROMPTER

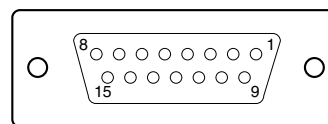WF REMOTE (D-sub 15P, Female)


– EXT VIEW –

No.	Signal	Specifications
1	NC	No connection
2	NC	No connection
3	NC	No connection
4	NC	No connection
5	RECALL2 (G)	LOW ACTIVE
6	RECALL3 (B)	
7	RECALL1 (R)	
8	RECALL4 (SEQ)	
9	GND	
10	NC	No connection
11	NC	No connection
12	RECALL5 (ENC)	LOW ACTIVE
13	RECALL6 (R+B)	
14	RECALL7 (R+G)	
15	RECALL8 (G+B)	

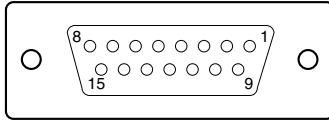I/O PORT (D-sub 15P, Female)


– EXT VIEW –

No.	Signal	Specifications
1	IN1	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
2	IN2	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
3	IN3	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
4	IN4	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
5	IN5	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
6	IN6	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
7	IN7	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
8	IN8	GND/+5 V, OPEN (47 kΩ +5 V PULL UP)
9	GND	
10	OUT1	0/+5 V (1 kΩ)
11	OUT2	0/+5 V (1 kΩ)
12	OUT3	0/+5 V (1 kΩ)
13	OUT4	0/+5 V (1 kΩ)
14	OUT5	0/+5 V (1 kΩ)
15	OUT6	0/+5 V (1 kΩ)

 TRUNK LINE (D-sub 9P, Female)

– EXT VIEW –


No.	Signal	Specifications
1	NC	No connection
2	EXT-CMD0-IN (RXD IN)	
3	EXT-CHD0-OUT (TXD OUT)	
4	NC	No connection
5	GND	
6	NC	No connection
7	NC	No connection
8	NC	No connection
9	NC	No connection

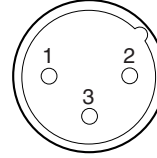MIC1/MIC2 (XLR 3P, Male)

– EXT VIEW –

(0 dBu = 0.775 Vrms)


No.	Signal	Specifications
1	MIC OUT (G)	0 dBu/–20 dBu
2	MIC OUT (X)	(Selectable with S500,
3	MIC OUT (Y)	S501/AVP-6 board)

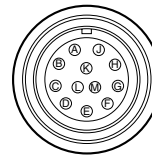TRUNK A (12P, Female)

– EXT VIEW –

No.	Signal		Specifications
	RS422A	RS232C	
A	TX1 (−)	−	TRUNK Data out
B	TX1 (+)	−	
C	NC	NC	No connection
D	TX0 (+)	TX1	TRUNK Data out
E	TX0 (−)	TX0	
F	RX0 (−)	RX0	TRUNK Data in
G	RX0 (+)	RX1	
H	RX1 (+)	−	
J	RX1 (−)	−	
K	GND	GND	GND for command
L	NC	NC	No connection
M	NC	NC	No connection

MIC REMOTE (D-sub 15P, Female)

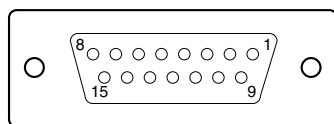

– EXT VIEW –

No.	Signal	Specifications
1	+5.5 V OUT	Max. 250 mA
2	TALLY GND	GND for TALLY
3	G TALLY OUT	ON (GND) : Max. 30 mA IN
4	R TALLY OUT	ON (GND) : Max. 30 mA IN
5	CHU MIC	CONT2
6	AMP	CONT1
7	GAIN IN	CONT0
8	MIC1 GAIN	CONT
	ON/OFF IN	*2 Refer to the right column.
9	GND	GND for +5.5 V
10	TALLY OUT	R/G TALLY OUT
		ON (GND) : Max. 30 mA IN
11	PREVIEW OUT	ON (GND) : 47 kΩ +5 V PULL UP
12	ASPECT REMOTE	L : REMOTE
	ON/OFF	
13	ASPECT	CONT1
14	CTL	CONT2
15	MIC2 GAIN	CONT
	ON/OFF IN	*2 Refer to the right column.

*1 : CHU MIC 1/2 AMP GAIN

CONT0	CONT1	CONT2	CHU MIC AMP GAIN
H	H	H	60 dB
L	H	H	50 dB
H	L	H	40 dB
L	L	H	30 dB
H	H	L	20 dB


*2 :

8pin	15pin	MIC GAIN CONT
L	L	MIC 1 and 2 ON
L	H	MIC 1 ON
H	L	MIC 2 ON
H	H	INTERNAL set

*3 :

CONT1	CONT2	ASPECT
L	H	SQ (16 : 9)
H	H	EC (4 : 3)
L	L	INTERNAL set
H	L	LB (4 : 3)

 
WF MODE (4P, Female)




– EXT VIEW –

No.	Signal	Specifications
1	SEQ CONT OUT (G)	OPEN COLLECTOR +(PNP)/(NPN)
2	SEQ CONT OUT (X)	(Selectable with S411/AT board)
3	STAIR CASE OUT (X)	*6
4	STAIR CASE OUT (G)	GND for STAIR CASE

*6 : Stair Case signal

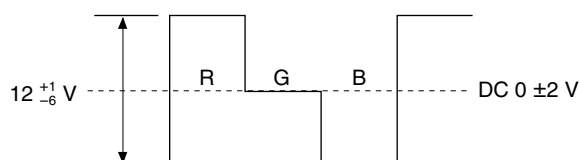


RCP/CNU (8P, Female)

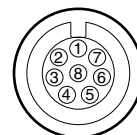

– EXT VIEW –

No.	Signal	Specifications
1	TX (+)	SERIAL DATA OUT
2	TX (–)	
3	RX (+)	SERIAL DATA IN
4	RX (–)	
5	TX GND	GND for TX
6	POWER (+) OUT	RCP POWER, +30 V,
7	POWER (–) OUT	GND for POWER
8	VIDEO (X)	75Ω, 1.0 V p-p
	CHASSIS GND	CHASSIS GND

INTERCOM/TALLY/PGM (D-sub 25P, Female)

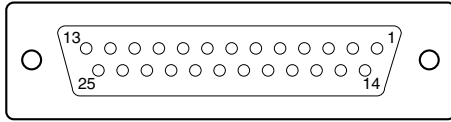


– EXT VIEW –

(0 dBu = 0.775 Vrms)

No.	Signal	Specifications
1	ENG (R) (X) OUT	ENG SYSTEM RECEIVE
2	ENG (R) (Y) OUT	0 dBu BALANCED
3	ENG (G)	GND for ENG
4	ENG (T) (X) IN	ENG SYSTEM TALK
5	ENG (T) (Y) IN	0 dBu BALANCED
6	PGM1 (X) IN	–20 dBu/0 dBu
7	PGM1 (Y) IN	(Selectable with
8	PGM1 (G) IN	S502/AVP board)
9	GND	GND for AUX
10	AUX3	
11	R TALLY (X) IN	ON : 24 Vdc, TTL (H), SHORT
12	R TALLY (Y) IN	OFF : 0 Vdc, TTL (L), OPEN
13	GND	CHASSIS GND
14	PROD (R) (X) OUT	PROD SYSTEM
15	PROD (R) (Y) OUT	RECEIVE 0 dBu BALANCED
16	PROD (G)	GND for PROD
17	PROD (T) (X) IN	PROD SYSTEM TALK
18	PROD (T) (Y) IN	0 dBu BALANCED
19	PGM2 (X) IN	–20 dBu/0 dBu
20	PGM2 (Y) IN	(Selectable with
21	PGM2 (G) IN	S503/AVP board)
22	AUX4	
23	AUX5	
24	G TALLY (X) IN	ON : 24 Vdc, TTL (H), SHORT
25	G TALLY (Y) IN	OFF : 0 Vdc, TTL (L), OPEN

INTERCOM (5P, Female)

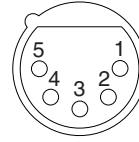


– EXT VIEW –

(0 dBu = 0.775 Vrms)

No.	Signal	Specifications
1	INCOM (T) IN (Y)	–20 dBu (CARBON MIC)
2	INCOM (T) IN (X)	–60 dBu (DYNAMIC MIC)
3	INCOM (T) IN (G)	GND for INCOM
4	INCOM (R) OUT (X)	Max. 12 dBu
5	NC	No connection

1-2-2. Cable Wiring Diagram

CCA-5 cable (RCP/CNU connector)

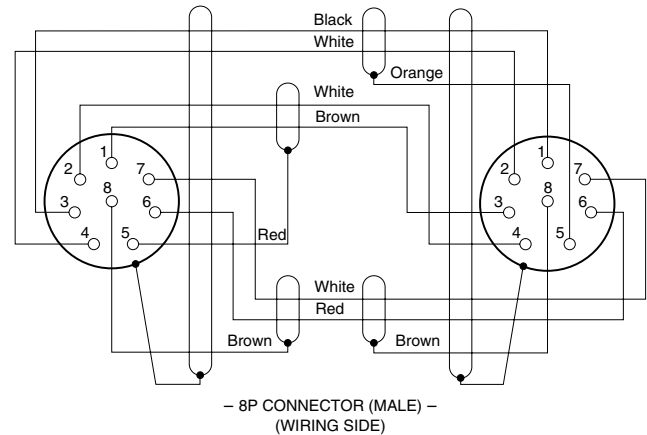

1-2-3. Connection Connectors

When connecting cables to each connector of the connector panel during installation or service, connect the following connectors or equivalent to the tip.

Connector	Connector/cable
HDCU3300	
CAMERA	• LEMO® PUW. 3K. 93C. TLCC96 *1
(HDC3300 side)	
CCU	• LEMO® FUW. 3K. 93C. TLMC96 *1
HDCU3300	1-564-742-11 PLUG, BNC or
VBS (1-4)	B-B Cable assembly
PROMPTER (1-2)	(1.5 m, optional)
REFERENCE	
SYNC	
CHARACTER	
AES/EBU	
(BNC)	
HDCU3300	1-569-370-12 PLUG, BNC or
SS-A (1-2)	BELDEN8281 Cable or
SS-B (1-2)	equivalent
SS-C (1-2)	
HD-SDI (1-4)	
SLOT2 (1-4)	
HD SDI (1-4)	
SD SDI (1-4)	
(BNC)	
HKCU1001/1003	1-564-742-11 PLUG, BNC or
VBS (1-2)	B-B Cable assembly
PIX OUT	(1.5 m, optional)
WF OUT	
(BNC)	
HKCU1003	1-564-742-11 PLUG, BNC or
FRAME REF IN (Not used)	B-B Cable assembly
FRAME REF OUT (Not used)	(1.5 m, optional)
VBS	
PIX OUT	
WF OUT	
R-Y/R (Not used)	
Y/G (Not used)	
B-Y/B (Not used)	
(BNC)	

Connector	Connector/cable
HKCU1005	1-569-370-12 PLUG, BNC or
SDI OUT (1-4)	BELDEN8281 Cable or
(BNC)	equivalent
MIC 1/2	1-508-083-00 XLR 3P Female
(3P, Male)	or CANNON XLR-3-11C
	equivalent
WF REMOTE/MIC REMOTE	1-506-582-11 D-sub 15P, Male
I/O PORT	or JAE DA-CI-J10 equivalent
(D-sub 15P, Female)	
INTERCOM/TALLY/PGM	D-sub 25P, Male
(D-sub 25P, Female)	JAE DA-25PF-N equivalent
WF MODE	1-560-155-00 PLUG, 4P Male
(4P, Female)	(supplied with HKCU1001/1003)
RCP/CNU	1-766-848-11 PLUG, 8P Male
(8P, Female)	or CCA cable assembly (optional)
	CCA-5-10 (10 m), CCA-5-3 (3 m)
INCOM	1-508-370-11 XLR 5P, Male
(5P, Female)	or CANNON XLR-5-12C
	equivalent
TRUNK LINE	1-560-651-00 D-sub 9P, Male
(D-sub 9P, Female)	or JAE DE-9PF-N equivalent
	1-561-749-00 JUNCTION SHELL

*1 : Caution in making the optical/electric signal composite cable:
When making the optical/electric signal composite cable used for this camera system, the connection connectors specified in this manual must be used in order to comply with the limits for EMC regulations.


1-2-4. Note when Connecting CAMERA Connector

Before connecting the unit to the camera adaptor, clean the following optical contact blocks.

For the cleaning procedure, refer to Section 1-11, “Cleaning of Connector/Cable”.


- CAMERA connector of the unit
- CCU connector of the camera side
- Optical/electric signal composite cable

1-3. Circuit Boards and Main Parts Layouts

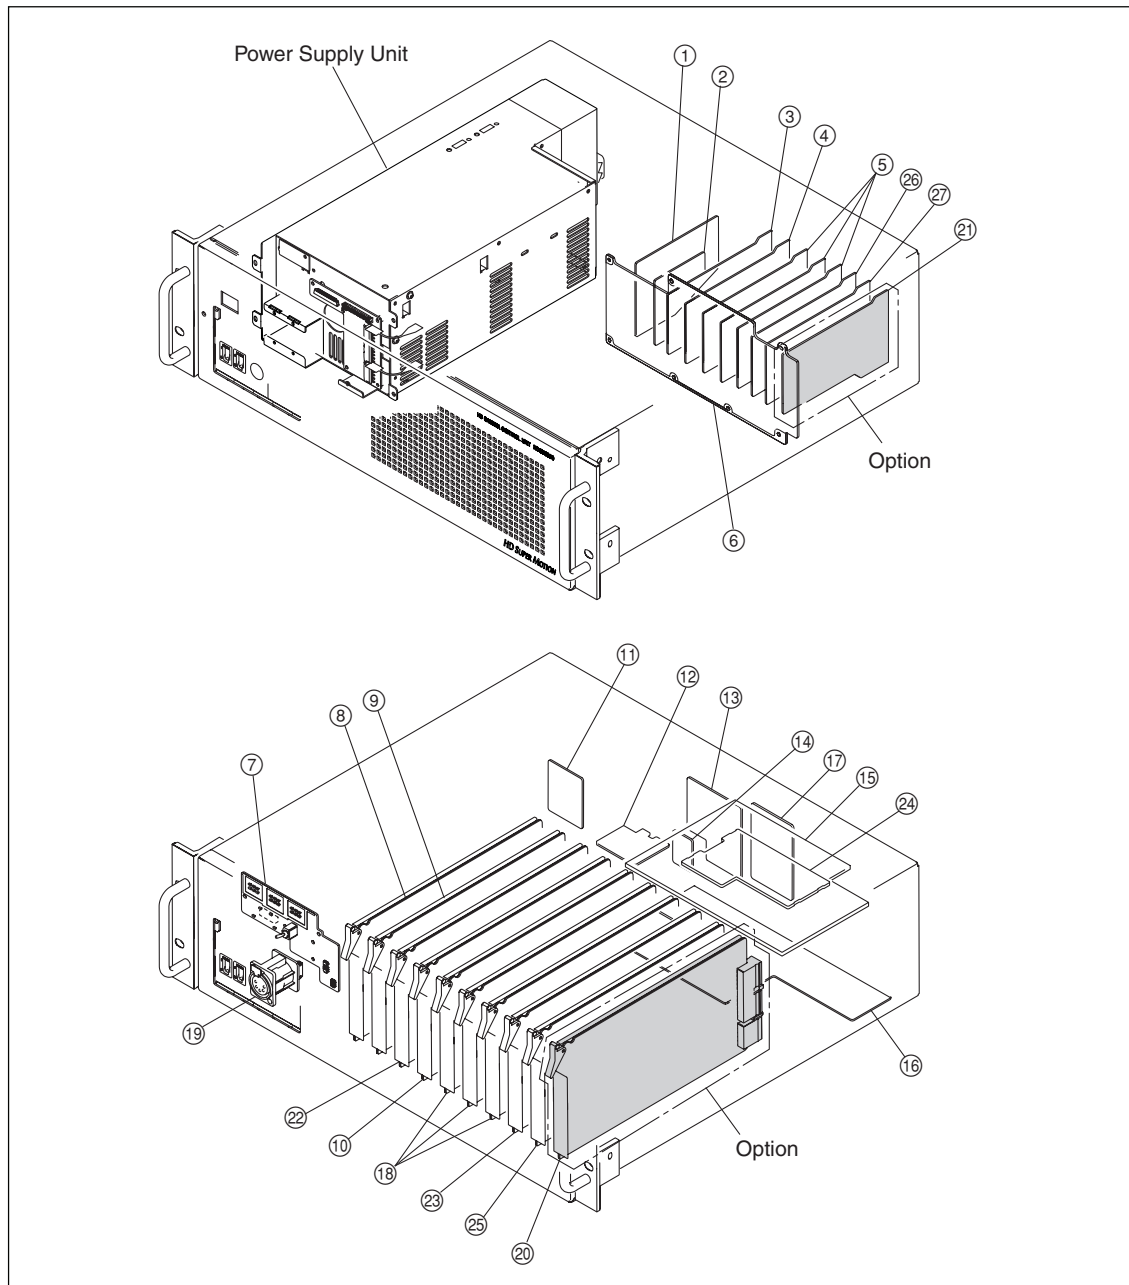


- | | | | |
|-----------------|------------------|----------------------------|------------------|
| ① VIF-34G board | ⑩ DTX-5 board | ⑲ CN-2700 board | ⑳ DPR-271B board |
| ② ADO-10G board | ⑪ CN-2718 board | ㉑ EN-159A board (HKCU1001) | ㉒ OTR-1 board |
| ③ SDI-86G board | ⑫ CN-2673 board | EN-159B board (HKCU1003) | ㉓ DRX-5 board |
| ④ SDI-85 board | ⑬ CN-2672G board | DRX-5 board (HKCU1005) | ㉔ HIF-25 board |
| ⑤ HIF-27 board | ⑭ CN-2805G board | ㉕ VDA-64A board (HKCU1001) | ㉖ HIF-26 board |
| ⑥ MB-1073 board | ⑮ SDP-15 board | VDA-64A board (HKCU1003) | |
| ⑦ AU-302 board | ⑯ CNB-21G board | VDA-64B board (HKCU1003) | |
| ⑧ AT-167S board | ⑰ CN-2674G board | HIF-26 board (HKCU1005) | |
| ⑨ AVP-6 board | ⑱ DRX-271A board | ㉗ CPU-395 board | |

1-4. External Dimensions

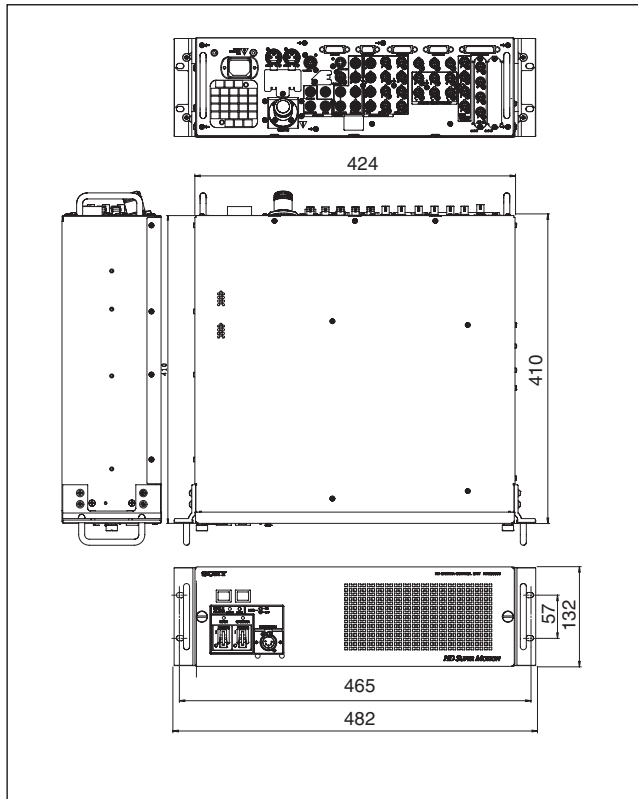

1-5. Removing/Installing the Front Panel


1. Fully loosen the two screws with stopper and remove the front panel in the direction of the arrow.

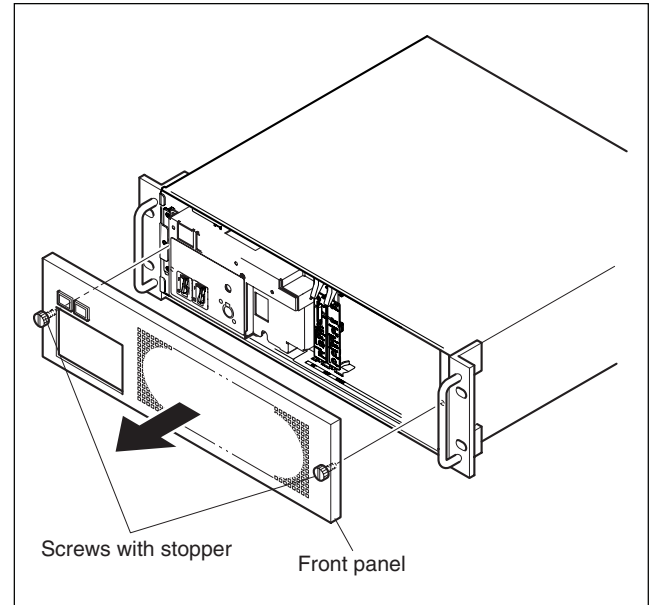

2. Reattach the front panel in reverse order of step 1.

1-6. On-board Indicator/Switch/Volume Functions

AT-167S board

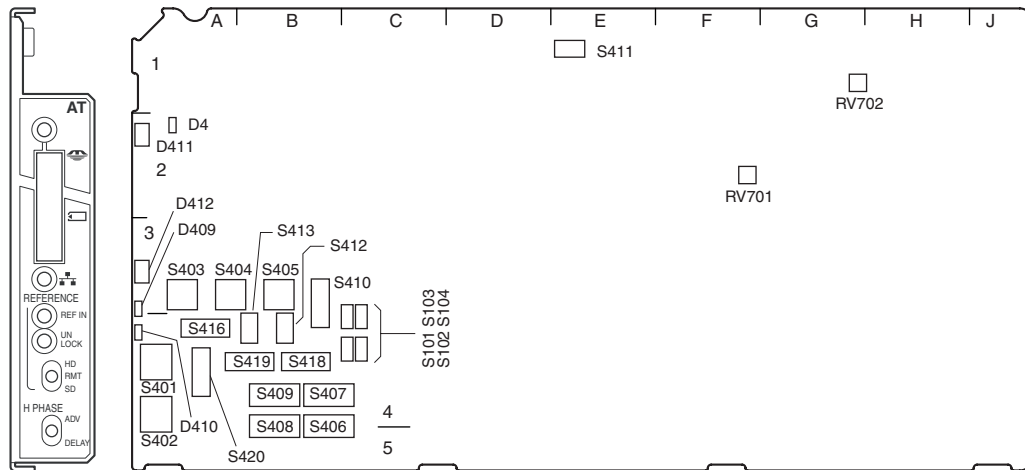

AT-167S (Side A)

Ref.No.	Name	Function	Factory default setting
D4	POWER	(Green) Illuminates when the power inside the AT board starts up correctly.	–
D409	REF IN	(Green) Illuminates when the reference signal is input and the external synchronous mode is established.	–
D410	UNLOCK	(Red) Illuminates when CCU cannot lock the external reference signal in the external synchronous mode.	–
D411	MS-LED	(Red/green) Displays the access status to the Memory Stick. Red light: Accessing the Memory Stick. Do not remove the Memory Stick. Green light: The inserted Memory Stick can be removed.	–
D412	LAN-LED*	(Green) Illuminates when communication is in program via the Ethernet connector –	–
S101	PRTCT	Factory use	ON
S102	DEBUG	Factory use	OFF
S103	URA	Factory use	OFF
S104	DEBUG	Factory use	OFF
S401	REFERENCE	Select the type of the synchronous signal to be connected to the REFERENCE terminal of this unit with this switch. HD : Synchronizes (SYNC) with the HD reference signal. (Input frame frequency is automatically adjusted.) REMOTE : Controls from the remote panel such as that on MSU. SD : Synchronizes (SYNC) with the SD reference signal (BB). The VBS OUT signal synchronizes (SC) when HKCU1001/1003 is installed. When the setting of the switch and the type of the input synchronous signal does not match, the LED of D410 (UNLOCK) illuminates.	REMOTE
S402	H-PHASE	Adjusts the H-phase.	
S403	H-Phase (STEP)	Adjusts the level phase for the reference signal in steps.	8
S404	V-Phase	Adjusts the vertical phase for the reference signal in line steps.	8

* : This function has been added to software V1.10 and the later versions.

Ref.No.	Name	Function	Factory default setting																																																			
S405	V-DLY	Video phase setting between HD and SD Sets the phase difference (delay time) between the HD signal and the SD signal output from CCU. The phase can be advanced as follows based on the delay time set with S410. HD standard: 128ck (27 MHz) increment SD standard: 256ck (74 MHz) increment <table><thead><tr><th>S407</th><th>REFERENCE HD Reference (advance amount of SD)</th><th>REFERENCE SD Reference (advance amount of HD)</th></tr></thead><tbody><tr><td>0</td><td>0</td><td>0</td></tr><tr><td>1</td><td>-4.74 μsec</td><td>-3.45 μsec</td></tr><tr><td>2</td><td>-9.48 μsec</td><td>-6.70 μsec</td></tr><tr><td>3</td><td>-14.2 μsec</td><td>-10.3 μsec</td></tr><tr><td>4</td><td>-19.0 μsec</td><td>-13.8 μsec</td></tr><tr><td>5</td><td>-23.7 μsec</td><td>-17.2 μsec</td></tr><tr><td>6</td><td>-28.4 μsec</td><td>-20.7 μsec</td></tr><tr><td>7</td><td>-33.2 μsec</td><td>-24.1 μsec</td></tr><tr><td>8</td><td>-37.9 μsec</td><td>-27.6 μsec</td></tr><tr><td>9</td><td>-42.7 μsec</td><td>-31.0 μsec</td></tr><tr><td>A</td><td>-47.7 μsec</td><td>-34.5 μsec</td></tr><tr><td>B</td><td>-52.1 μsec</td><td>-37.9 μsec</td></tr><tr><td>C</td><td>-56.9 μsec</td><td>-41.4 μsec</td></tr><tr><td>D</td><td>-61.6 μsec</td><td>-44.8 μsec</td></tr><tr><td>E</td><td>-66.3 μsec</td><td>-48.3 μsec</td></tr><tr><td>F</td><td>-71.1 μsec</td><td>-51.7 μsec</td></tr></tbody></table> 1H 525 : 63.5 μsec 1125-60i : 29.6 μsec 750-60P : 22.2 μsec 625 : 64.0 μsec 1125-50i : 35.6 μsec 750-50P : 26.7 μsec 1125-24 PsF : 37.0 μsec	S407	REFERENCE HD Reference (advance amount of SD)	REFERENCE SD Reference (advance amount of HD)	0	0	0	1	-4.74 μsec	-3.45 μsec	2	-9.48 μsec	-6.70 μsec	3	-14.2 μsec	-10.3 μsec	4	-19.0 μsec	-13.8 μsec	5	-23.7 μsec	-17.2 μsec	6	-28.4 μsec	-20.7 μsec	7	-33.2 μsec	-24.1 μsec	8	-37.9 μsec	-27.6 μsec	9	-42.7 μsec	-31.0 μsec	A	-47.7 μsec	-34.5 μsec	B	-52.1 μsec	-37.9 μsec	C	-56.9 μsec	-41.4 μsec	D	-61.6 μsec	-44.8 μsec	E	-66.3 μsec	-48.3 μsec	F	-71.1 μsec	-51.7 μsec	0
S407	REFERENCE HD Reference (advance amount of SD)	REFERENCE SD Reference (advance amount of HD)																																																				
0	0	0																																																				
1	-4.74 μsec	-3.45 μsec																																																				
2	-9.48 μsec	-6.70 μsec																																																				
3	-14.2 μsec	-10.3 μsec																																																				
4	-19.0 μsec	-13.8 μsec																																																				
5	-23.7 μsec	-17.2 μsec																																																				
6	-28.4 μsec	-20.7 μsec																																																				
7	-33.2 μsec	-24.1 μsec																																																				
8	-37.9 μsec	-27.6 μsec																																																				
9	-42.7 μsec	-31.0 μsec																																																				
A	-47.7 μsec	-34.5 μsec																																																				
B	-52.1 μsec	-37.9 μsec																																																				
C	-56.9 μsec	-41.4 μsec																																																				
D	-61.6 μsec	-44.8 μsec																																																				
E	-66.3 μsec	-48.3 μsec																																																				
F	-71.1 μsec	-51.7 μsec																																																				
S406	MODE1																																																					
1	MIC-GT 1&2/1,2	Sets whether or not to control MIC1 and MIC2 of the MIC GAIN CONTROL pin of the MIC REMOTE connector independently or by interlocking the MIC1 and MIC2 controls. ON: MIC1, MIC2 independent control MIC1 : 5 pin to 7 pin MIC2 : 12 pin to 14 pin OFF: MIC1, MIC2 interlocked control MIC1, MIC2 : 5 pin to 7 pin	OFF																																																			
2	MIC-G7 STD/700	For switching the interface specification of MIC-Remote (D-SUB-15P) ON: Old interface (700 mode) OFF: Standard-I/F	OFF																																																			
3	D-SUB MIC/WFM	Does not function																																																				
4	ASPECT RMT/PNL	ON: Accepts the switching command last input from MSU when the ASPECT switching from outside (D-Sub) is valid. OFF: Does not accept the command input from MSU when the ASPECT switching from outside (D-Sub) is valid.	OFF																																																			
5		Not used																																																				
6	CNU/RM	Does not function																																																				
7	RCP-PX ENB/DIS	Sets the monitor selection control method for PIX OUT by RCP. ON : Only WF can be controlled from RCP. OFF : Both PIX and WF can be controlled from RCP.	OFF																																																			
8	MONI-S M&R/RCP	Sets the monitor selection control method for PIX/WF OUT. ON : Can only be controlled from RCP. OFF : Can be controlled from either MSU or RCP. (Latest priority)	OFF																																																			

Ref.No.	Name	Function	Factory default setting
S407	TEST		
	1	Factory use	OFF
	2	Factory use	OFF
	3	Factory use	OFF
	4	Factory use	OFF
	5 Ethernet*	Ethernet connection setting ON : Ethernet connection can be set. OFF : Ethernet connection cannot be set.	ON
	6	Factory use	OFF
	7	Factory use	OFF
	8	Factory use	OFF
S408	MODE2		
	1 NP-SEL AUTO/N	SD-Format setting ON: Forced into NTSC (525). OFF: For AUTO, follows the setting of 1.000 (=PAL) /1.001 (=NTSC).	OFF
	2	Not used	
	3 GRAY LINE/ON	Gray signal output setting ON: During Gray signal output, when turning CB ON/OFF, the Gray image disappears, leaving only the Line signal. OFF: During Gray signal output, even when turning CB ON/OFF, the Gray signal is output.	OFF
	4 MONI/SYNC	Does not function	
	5 CAM PWR BACKUP*1	ON: Creates a backup when the CAMERA POWER ON/OFF is operated from a remote control panel. OFF: Starts at CAMERA POWER ON.	OFF
	6	Not used	—
	7	Not used	—
	8 CO-AX DIS/ENB	Factory use	OFF
S409	CCU-NO	CCU No. setting	—
	1 to 4	S409-4 to 1: 1' digit (BCD)	OFF (ALL)
	5 to 8	S409-8 to 5: 10' digit (BCD)	OFF (ALL)
S410	HD-SD DLY	Video phase setting between HD and SD Sets the phase difference (delay time) between HD signal and SD signal output from CCU. Switches the HD and SD delay setting among 0-DLY, LINE-DLY, and FRAME-DLY. 0-DLY : HD and SD are output in the same phase. (Except for the SSM-A, B, and C outputs, and the HD-SDI output of SLOT1.) When this mode is set, the SSM-A, B, and C outputs, and the HD-SDI output of SLOT1 are output in the phase that is 90 H (1080 i) or 120 H (720 P) earlier than the reference phase. LINE-DLY : HD and SD are output with the phase shifted dozens of lines (The SD phase delays.) In this mode, the SD output is in phase with the reference output if the reference is BB, and the HD output is in phase if the reference is HD 3-value SYNC. (If BB is a reference, the phase of the HD-SDI output has an onset dozens of lines earlier than that of the BB reference.) Phase difference of LINE-DLY • 60 i (/1.001) : 90 H (1080 i), 120 H (720 P), 42H (525 i) = 2.7 mSec • 50 i (/1.000) : 90 H (1080 i), 120 H (720 P), 50H (625 i) = 3.2 mSec 90H is the level frequency of 1125-60i/50i, and 120H is that of 750-60P/50P. FRAME-DLY : The SYNC signal of HD and SD is in phase, but the video output from SD delays 1 frame.	LINE-DLY


* : This function has been added to software V1.10 and the later versions.

*1 : This function has been added to software V1.20 and the later versions.

Ref.No.	Name	Function	Factory default setting																																
S411	SEQ1&SEQ2	Switch depending on the waveform monitor to be used. + : PNP : PNP open collector output - : NPN : NPN open collector output	(+)																																
S412	SYNC	Sets the SYNC signal output from the SYNC terminal to HD or SD. HD : HD-SYNC signal output SD : SD-SYNC signal output	SD																																
S413	Factory use		OFF																																
S416	Co-AX	Not used (D-S-Fi)	Fiber																																
S418	48V */50V/60V	Multi-Format setting (Camera transmission format) When the operation clock frequency setting switch (S420) is set to Local, the main video format of CCU is set as in the following table. The output transmission format of CHU is also set in the same way. (Refer to the table below.)	60																																
S419	720/Psf */I	Multi-Format setting (Camera transmission format) When the operation clock frequency setting switch (S420) is set to Local, the main video format of CCU is set as in the following table. The output transmission format of CHU is set in the same way. (Refer to the table below.)	INTR																																
<table> <tr> <th>FORMAT</th><th>S420</th><th>S418</th><th>S419</th></tr> <tr> <td>1080-60 (or 59.94) i</td><td>1.000 (or 1.001)</td><td>60 V</td><td>Intr</td></tr> <tr> <td>1080-30 (or 29.97) PsF</td><td>1.000 (or 1.001)</td><td>60 V</td><td>PsF</td></tr> <tr> <td>1080-50 i</td><td>1.000</td><td>50 V</td><td>Intr</td></tr> <tr> <td>1080-25 PsF</td><td>1.000</td><td>50 V</td><td>PsF</td></tr> <tr> <td>1080-24 (or 23.98) PsF</td><td>1.000 (or 1.001)</td><td>48 V</td><td>PsF</td></tr> <tr> <td>720-60 (or 59.94) P</td><td>1.000 (or 1.001)</td><td>60 V</td><td>720 P</td></tr> <tr> <td>720-50 P</td><td>1.000</td><td>50 V</td><td>720 P</td></tr> </table>				FORMAT	S420	S418	S419	1080-60 (or 59.94) i	1.000 (or 1.001)	60 V	Intr	1080-30 (or 29.97) PsF	1.000 (or 1.001)	60 V	PsF	1080-50 i	1.000	50 V	Intr	1080-25 PsF	1.000	50 V	PsF	1080-24 (or 23.98) PsF	1.000 (or 1.001)	48 V	PsF	720-60 (or 59.94) P	1.000 (or 1.001)	60 V	720 P	720-50 P	1.000	50 V	720 P
FORMAT	S420	S418	S419																																
1080-60 (or 59.94) i	1.000 (or 1.001)	60 V	Intr																																
1080-30 (or 29.97) PsF	1.000 (or 1.001)	60 V	PsF																																
1080-50 i	1.000	50 V	Intr																																
1080-25 PsF	1.000	50 V	PsF																																
1080-24 (or 23.98) PsF	1.000 (or 1.001)	48 V	PsF																																
720-60 (or 59.94) P	1.000 (or 1.001)	60 V	720 P																																
720-50 P	1.000	50 V	720 P																																
S420	1001/REMOTE/1000	Operation clock frequency setting (remote/local setting of video output format) 1.001 (Local) : Sets the field frequency of CCU to 59.94, 29.97, 23.98 Hz. 1.000 (Local) : Sets the field frequency of CCU to 60, 50, 25, 24 Hz. REMOTE : Can be set from MSU.	REMOTE																																
RV701	27M FREQ	Volume that adjusts the free-run frequency of 27M-VCO (X701). Must be readjusted when replacing X701.																																	
RV702	CK-DUTY	Volume that adjusts the clock duty of the 74 MHz clock.																																	

* : The setting of 48 V and Psf (PsF) is invalid in HDCU3300.


AU-302 board

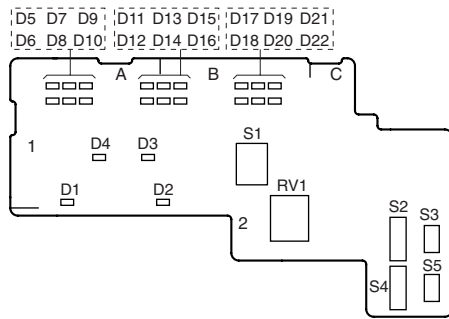

AU-302 (Side A)

Ref.No.	Name	Function	Factory default setting
D1	MAIN POWER	Refer to the Operation Manual.	—
D2	CAMERA POWER	Refer to the Operation Manual.	—
D3	CABLE ALARM OPEN	Refer to the Operation Manual.	—
D4	CABLE ALARM SHORT	Refer to the Operation Manual.	—
D5-D10	RED TALLY	Refer to the Operation Manual.	—
D11-D16	GREEN TALLY	Refer to the Operation Manual.	—
S1	MIC	Refer to the Operation Manual.	—
S2	INCOM	Selects the line to which the INCOM connector on the front panel is connected. PROD : Producer line PRIV : Private (When the unit is disconnected from the producer line or engineer line, only the intercom between the unit and the camera is possible.) ENG : Engineer line	PROD
S3	INCOM-RECEIVE	For switching between a voice and PGM for the front intercam reception. PGM-OFF: The FP-INCOM reception becomes a voice. PGM-ON : The FP-INCOM reception becomes PGM. Switching of receipt is valid when the INCOM MIX switch is set to OFF.	OFF
S4	FRONT MIC	Sets the microphone input level according to the type of headset microphone to be connected to the INCOM connector on the front panel. DYNAMIC : Dynamic microphone (−60 dB) - The power is not supplied. ECM : Electret condenser microphone (−40 dB) - The power is supplied. CARBON : Carbon microphone (−20 dB) - The power is supplied.	CARBON
S5	UNBALANCE	Select ON/OFF according to the headset microphone type connected to the INCOM connector on the front panel. ON: For the unbalanced type (UNBALANCE) OFF: For the balanced type	OFF
RV1	INTERCOM	Refer to the Operation Manual.	


AVP-6 board

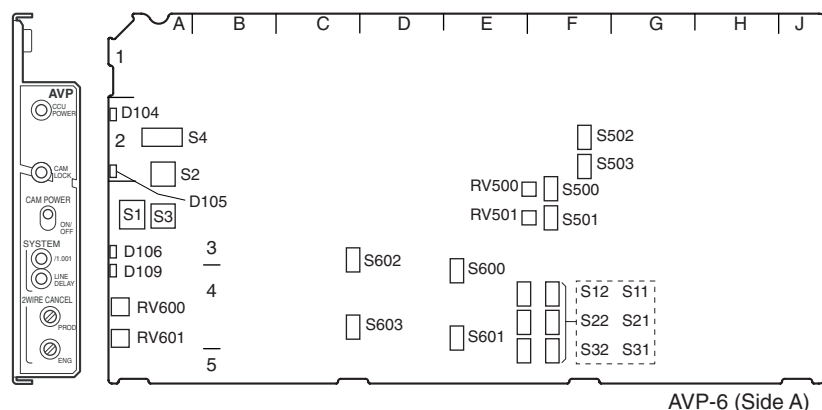

Ref.No.	Name	Function	Factory default setting		
D104	CCU POWER	(Green) Illuminates when the power to the boards in the whole CCU is functioning properly.	–		
D105	CAM LOCK	(Green) Illuminates when the communication with camera head is normal.	–		
D106	/1001	(Green) Illuminates when the operation clock frequency of SG is 74.17582 MHz. (When the frame frequency of the video signal is integer 1/1.001.)	–		
D109	LINE DELAY	(Yellow) Illuminates when the SD signal delay at down-conversion is set to LINE-DELAY-MODE (NTSC : 42H, PAL : 50H)	–		
S1	CAM POWER	Toggle switch that turns on the power to the camera head when it is off, and turns off when it is on.			
S2		Not used	0		
S3		Not used	0		
S4	MODE	1-7	Factory use		
		8	Set this to ON when upgrading the PLD (IC208, IC409) version of the SDP-15 board. (Be sure to set the switch to OFF after the upgrade is completed.)		
S11	R-TALLY (POWER/CONTACT)	Set according to the signal standard of the R-TALLY signal input to the INTERCOM/TALLY/PGM connector on the rear panel. For the relationship between the signal and the switch setting, refer to the table below.	CONTACT		
S12	R-TALLY (POWER/TTL)		TTL		
S21	G-TALLY (POWER/CONTACT)	Set according to the signal standard of the G-TALLY signal input to the INTERCOM/TALLY/PGM connector on the rear panel. For the relationship between the signal and the switch setting, refer to the table below.	CONTACT		
S22	G-TALLY (POWER/TTL)		Tally system setting	TTL	


Ref.No.	Name	Function	Factory default setting																		
S32	U-TALLY (POWER/TTL)	Not used Tally system setting <table><tr><td></td><td colspan="2">U tally</td></tr><tr><td>Switch</td><td>S31</td><td>S32</td></tr><tr><td>Signal standard</td><td>POWER/ CONTACT</td><td>POWER/TTL</td></tr><tr><td>Contact supply</td><td>CONTACT</td><td>–</td></tr><tr><td>24 V power supply</td><td>POWER</td><td>POWER</td></tr><tr><td>5 V power supply</td><td>POWER</td><td>TTL</td></tr></table>		U tally		Switch	S31	S32	Signal standard	POWER/ CONTACT	POWER/TTL	Contact supply	CONTACT	–	24 V power supply	POWER	POWER	5 V power supply	POWER	TTL	TTL
	U tally																				
Switch	S31	S32																			
Signal standard	POWER/ CONTACT	POWER/TTL																			
Contact supply	CONTACT	–																			
24 V power supply	POWER	POWER																			
5 V power supply	POWER	TTL																			
S500	MIC1 LEV	Sets the output level of MIC. 0 dB : When the input level on the system is 0 dBu. –20 dB : When the input level on the system is –20 dBu.	0 dB																		
S501	MIC2 LEV	Sets the output level of MIC. 0 dB : When the input level on the system is 0 dBu. –20 dB : When the input level on the system is –20 dBu.	0 dB																		
S502	PGM1 IN	S ets the input level of the system PGM (analog). 0 dB : When the input level of the system is 0 dBu. –20 dB : When the input level of the system is –20 dBu.	0 dB																		
S503	PGM2 IN	Sets the input level of the system PGM (analog). 0 dB : When the input level of the system is 0 dBu. –20 dB : When the input level of the system is –20 dBu.	0 dB																		
S602	PROD SEL	Selects the intercom system of the producer line.	4W																		
S600	PROD SEL2	<table><tr><td colspan="3">S602 S600</td></tr><tr><td>4-Wire</td><td>4W</td><td>*</td></tr><tr><td>RTS</td><td>RTS</td><td>RTS</td></tr><tr><td>Clear-Com</td><td>RTS</td><td>CC</td></tr></table> * When 4-Wire is selected, S600 can be set to RTS or CC.	S602 S600			4-Wire	4W	*	RTS	RTS	RTS	Clear-Com	RTS	CC	RTS						
S602 S600																					
4-Wire	4W	*																			
RTS	RTS	RTS																			
Clear-Com	RTS	CC																			
S603	ENG SEL	Selects the intercom system of the engineer line.	4W																		
S601	ENG SEL2	<table><tr><td colspan="3">S603 S601</td></tr><tr><td>4-Wire</td><td>4W</td><td>*</td></tr><tr><td>RTS</td><td>RTS</td><td>RTS</td></tr><tr><td>Clear-Com</td><td>RTS</td><td>CC</td></tr></table> * When 4-Wire is selected, S601 can be set to RTS or CC.	S603 S601			4-Wire	4W	*	RTS	RTS	RTS	Clear-Com	RTS	CC	RTS						
S603 S601																					
4-Wire	4W	*																			
RTS	RTS	RTS																			
Clear-Com	RTS	CC																			
RV500	MIC1 LEV	Adjusts the level of the signal output from the MIC1 connector on the rear panel.																			
RV501	MIC2 LEV	Adjusts the level of the signal output from the MIC2 connector on the rear panel.																			
RV600	PROD 2WIRE CANCEL																				
RV601	ENG 2WIRE CANCEL																				

DPR-271A board

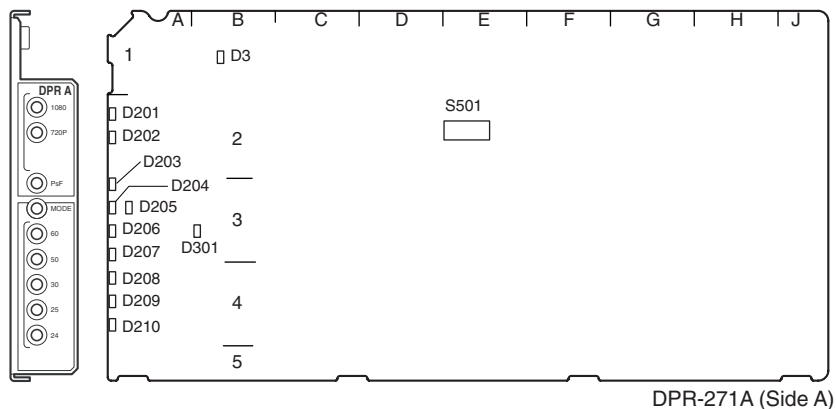


Ref.No.	Name	Function	Factory default setting
D201	1080	(Green) Illuminates when the Active-Line of the Main output is 1080-Format. (*)	—
D202	720P	(Green) Illuminates when the Active-Line of the Main output is 720P-Format. (*)	—
D203	PsF	(Orange) Not used (*)	—
D204,D205	MODE	(Green) Not used (*)	—
D206	60	(Green) Illuminates when the Main output is 1080-60i/59.94i or 720-60P/59.94P. (*)	—
D207	50	(Green) Illuminates when the Main output is 1080-50i or 720-50P. (*)	—
D208	30	(Green) Not used (*)	—
D209	25	(Green) Not used (*)	—
D210	24	(Green) Not used (*) (*) : Blinks when the format setting is defective.	—
D3	POWER	Illuminates when the power to the DPR board has correctly started.	—
D301	CONF	Illuminates when data cannot be written correctly in the PLD.	—
S501	MODE (1 to 8)	Not used (1 to 8)	OFF

DPR-271B board

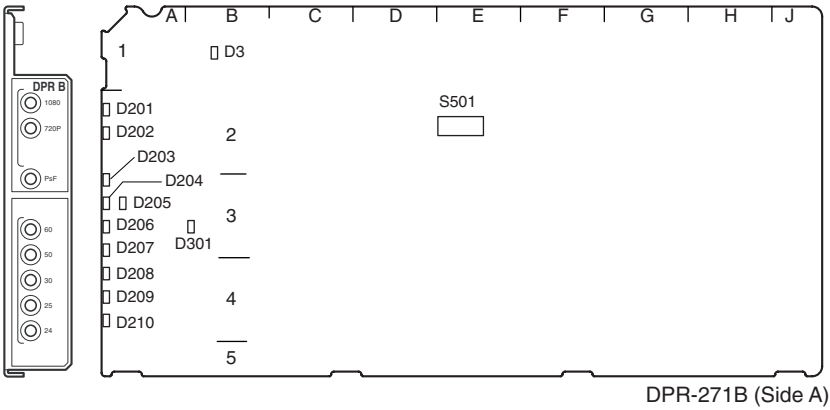


Ref.No.	Name	Function	Factory default setting
D201	1080	(Green) Illuminates when the Active-Line of the Main output is 1080-Format. (*)	—
D202	720P	(Green) Illuminates when the Active-Line of the Main output is 720P-Format. (*)	—
D203	PsF	(Orange) Not used (*)	—
D204,D205	MODE	(Green) Not used (*)	—
D206	60	(Green) Illuminates when the Main output is 1080-60i/59.94i or 720-60P/59.94P. (*)	—
D207	50	(Green) Illuminates when the Main output is 1080-50i or 720-50P. (*)	—
D208	30	(Green) Not used (*)	—
D209	25	(Green) Not used (*)	—
D210	24	(Green) Not used (*) (*) : Blinks when the format setting is defective.	—
D3	POWER	Illuminates when the power to the DPR board has correctly started.	—
D301	CONF	Illuminates when data cannot be written correctly in the PLD.	—
S501	MODE (1 to 8)	Not used (1 to 8)	OFF

DRX-5 board

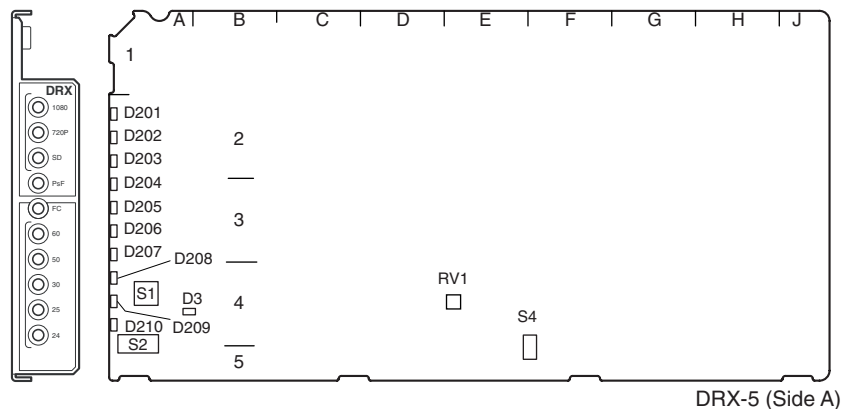


Ref.No.	Name	Function	Factory default setting
D201	1080	(Green) Illuminates when the Active-Line of the Main output is 1080-Format. (*)	—
D202	720P	(Green) Illuminates when the Active-Line of the Main output is 720P-Format. (*)	—
D203	SD	(Green) Illuminates when the Main output is SD-Format. (*)	—
D204	PsF	(Orange) Not used (*)	—
D205	FC	(Orange) Not used (*)	—
D206	60	(Green) Illuminates when the Main output is 1080-60i/59.94i or 720-60P/59.94P. (*)	—
D207	50	(Green) Illuminates when the Main output is 1080-50i or 720-50P. (*)	—
D208	30	(Green) Illuminates when the Main output is 1080-30PsF/29.97PsF. (*)	—
D209	25	(Green) Illuminates when the Main output is 1080-25PsF. (*)	—
D210	24	(Green) Illuminates when the Main output is 1080-24PsF/23.98PsF. (*) (*) : Blinks when the format setting is defective.	—
D3	POWER	Illuminates when the power to the DRX board has correctly started.	—
S1	MODE2	Not used	0
S2	MODE1		
	1 CLEAN	Turns on or off the character MIX function of SDI monitor output (3, 4). OFF : Normal SDI monitor output. ON : Keeps the characters and the markers of the SDI monitor output (3, 4) turned off. Note Settings are for each DRX board.	OFF
	2 INTERLOC	Format interlock function of the SDI output (3, 4). OFF : Does not interlock the format of the SDI output (3, 4) to (1, 2). ON : Interlocks the format of the SDI output (3, 4) to (1, 2). Note Settings are for each DRX board.	OFF
	3 to 8	Not used	OFF
S4	MONI	Sets the signal output to the character monitor (SD analog) output. The character signal from each DRX board is connected directly to the character monitor output, so only one character signal must be turned on, and the character signals from the rest of the DRX boards must be turned off. Set only the first DRX board to ON, and the rest of the DRX boards to OFF. * : Set only the first board to ON, and the rest to OFF.	*
RV1	MONI LEV	Adjusts the output level of the character monitor signal.	

SDP-15 board

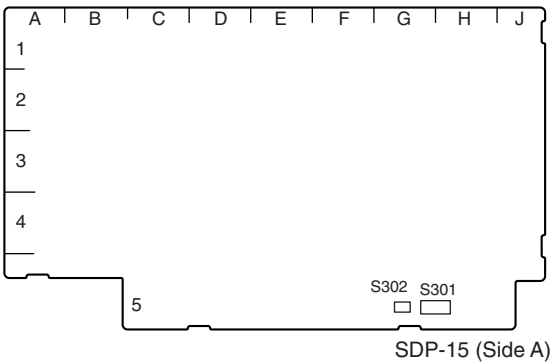


Ref.No.	Name	Function	Factory default setting
S301 1-8	Factory Use Only	—	OFF (ALL)
S302	Factory Use Only	—	OFF

OTR-1 Board

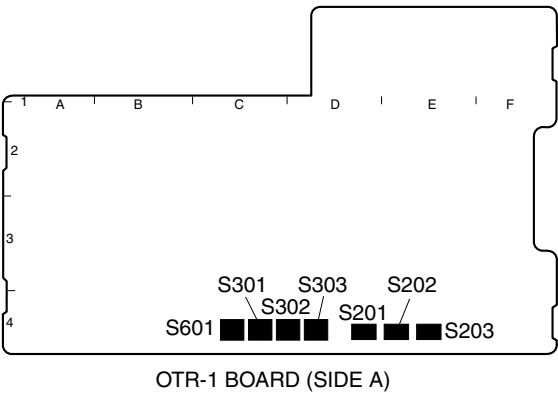


Ref. No.	Name	Description	Factory setting
S201	GCNTRST	CRC error flag clear	OFF
S202	GRST	Data system reset	OFF
S203	DCMRST	Clock system reset	OFF
S301-1	LED Display	LED display	OFF
S301-2	LED Function1	Function select of LED display (D301 to 316)	OFF
S301-3	LED Function2	Function select of LED display (D201 to 208)	OFF
S301-4	Reserve	Not used (fixed to OFF)	OFF
S302-1 to 4	Reserve	Not used (fixed to OFF)	OFF
S303-1 to 4	Reserve	Not used (fixed to OFF)	OFF
S601-1	SEL0	Mode select of CAMERA/CCU (fixed to OFF)	OFF
S601-2	SEL1	Mode select of CAMERA/CCU (fixed to OFF)	OFF
S601-3	EN EXT	External mode select: Enable (fixed to OFF)	OFF
S601-4	CFG MODE	Configuration mode select: controller/controlled (fixed to OFF)	OFF

DTX-5 board

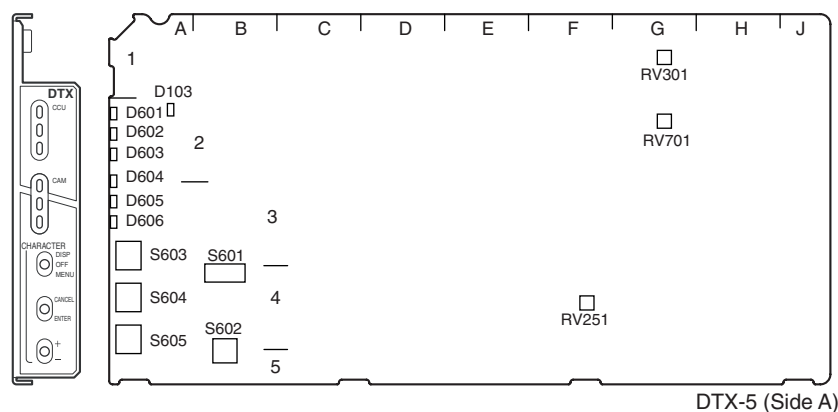

Ref.No.	Name	Function	Factory default setting
D103	POWER	Illuminates when the power to the DTX board has correctly started.	—
OPTICAL CONDITION -CCU (The received light level is displayed on CCU.)			
D601		(Green) -10.5 ± 1 dBm or more	—
D602	CCU Opt-Condition	(Yellow) -10.5 ± 1 dBm to -13.5 ± 1 dBm	—
D603		(Red) -13.5 ± 1 dBm or less	—
OPTICAL CONDITION - CAM (The received light level is displayed on CAM.)			
D604		(Green) -10.5 ± 1 dBm or more	—
D605	CAM Opt-Condition	(Yellow) -10.5 ± 1 dBm to -13.5 ± 1 dBm	—
D606		(Red) -13.5 ± 1 dBm or less	—
S601	1 - 8	Not used	ALL OFF
S602		Not used	0
S603	CHARACTER	Controls whether to turn on or off the mixing of characters to the Monitor output. DISP : Displays the DISP page that displays the CCU status. OFF : Turn off the mixing of characters. MENU : Displays the CCU-MENU page.	OFF
S604	CHARACTER	Cancels or executes MENU operations while CCU-MENU is displayed. CANCEL: Use to cancel. ENTER: Use to execute the content.	—
S605	CHARACTER	Changes the page setting of the character (DISP or MENU) mixed to the Monitor output with Up/Down	—
RV251	D1 ADJ	Adjusts the free-run frequency of the IC that converts the SD-SDI return signal from serial to parallel.	
RV301	PROMPT1 LEV	Adjusts the video level of prompter 1 system.	
RV701	PROMPT2 LEV	Adjusts the video level of prompter 2 system.	

EN-159A/159B board

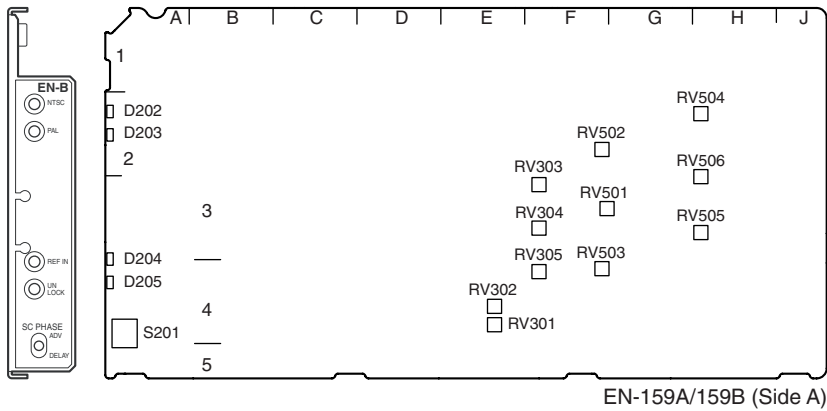

Ref.No.	Name	Function	Factory default setting
D202	NTSC	Illuminates when set to NTSC (525).	
D203	PAL	Illuminates when set to PAL (625).	
D204*	REF IN	Illuminates when the SUB-Ref signal is input.	
D205*	UNLOCK	Illuminates when the right Sub-Ref signal is not input, so Frame-Lock cannot be enabled.	
S201	SC PHASE	The VBS-SC phase can be varied when the external synchronism setting is Local. DELAY: Delays. ADV: Advances.	Center (momentary SW)
RV301	DC (Position)	In the 3-waveform display on the waveform monitor, the display position can be adjusted horizontally.	
RV302	LEVEL (Interval)	In the 3-waveform display on the waveform monitor, the display interval can be adjusted.	
RV303	VBS GAIN	Adjusts the video level of the VBS output.	
RV304	PIX GAIN	Adjusts the video level of the PIX output.	
RV305	WF GAIN	Adjusts the video level of the WF output.	
RV501*	Y GAIN (UC)	Adjusts the video level of the Y output.	
RV502*	R-Y GAIN	Adjusts the video level of the R-Y output.	
RV503*	B-Y GAIN	Adjusts the video level of the B-Y output.	
RV504*	R-Y/R LEVEL	Adjusts the video level of the R (R-Y) output.	
RV505*	B-Y/B LEVEL	Adjusts the video level of the B (B-Y) output.	
RV506*	Y/G LEVEL	Adjusts the video level of the G (Y) output.	

* The EN-159A board does not have this function.

1-7. Notes on Using the Power Supply Unit


1-7-1. Setting the Power Voltage

Set the voltage according to the power voltage.


If the voltage setting is changed, the CAMERA fuse needs to be replaced as well. (Refer to Section 1-7-2.)

Voltage setting is performed by combinations of the two switches of the power supply unit.


1. Remove the front panel.
2. Remove the four screws and remove the flexible card wire from the power connector J8.

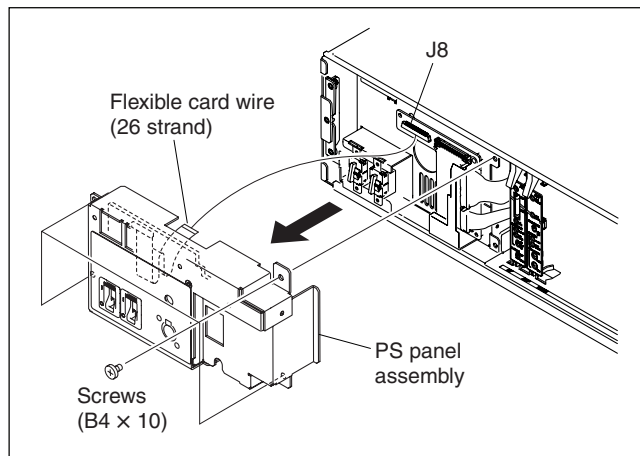

3. Remove the PS panel assembly.
4. Disconnect the harnesses from the power supply unit board connectors J5, J6, and J7.
5. Remove the power supply unit from HDCU in the direction of the arrow.

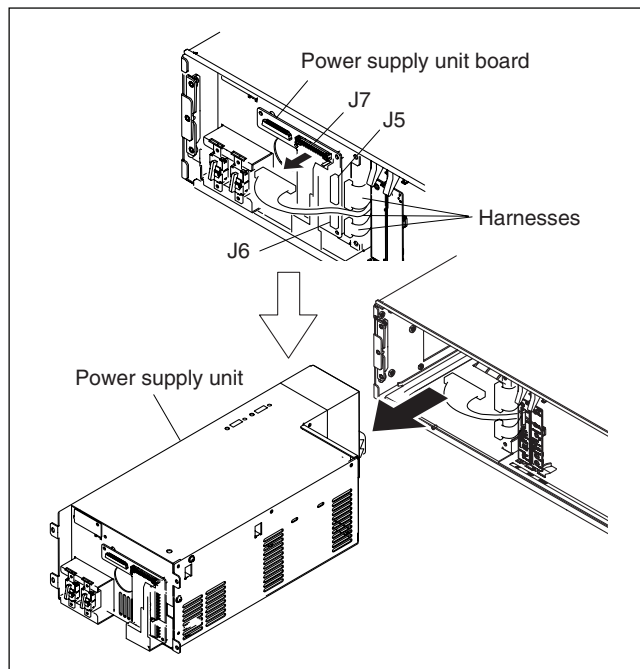

6. Set the two voltage selectors on the new power supply unit to the settings shown in the diagram.

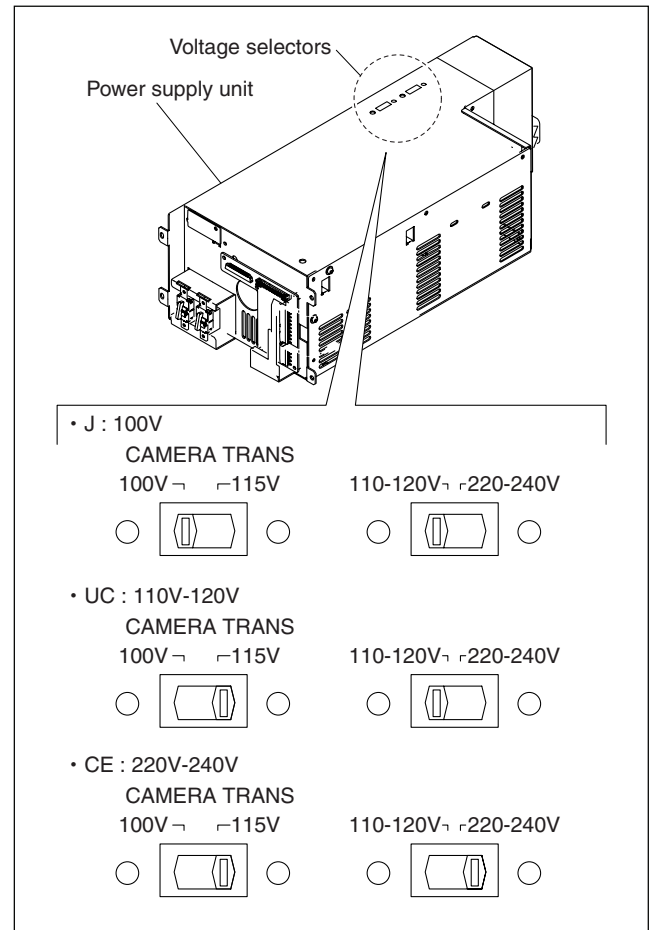

7. Confirm if the CAMERA fuse of the replacement power supply unit adapts to the working power supply voltage. If not, replace it with the one adapting to the working power supply voltage.

(Refer to Section 1-7-2.)

Note

If the rating of the fuse doesn't adapt to the working power supply voltage, the safety can not be ensured. So, the CAMERA fuse needs to be replaced with the one adapting to the working power supply voltage.

8. Install the new power supply unit in the reverse order that it was removed.

1-7-2. Replacing the Fuse

WARNING

The components marked $\triangle$ are critical to safe operation. If you replace with parts other than the specified ones, a fire or electric shock may result from that.

Replacement Part

MAIN fuse

Part : Fuse (3.15 A, 250 V)

Part No. : $\triangle$ 1-576-230-51

CAMERA fuse

• For UC

100 to 120 V

Part : Fuse (6.3 A, 250 V)

Part No. : $\triangle$ 1-576-233-51

• For CE, CN


220 to 240 V

Part : Fuse (4 A, 250 V)

Part No. : $\triangle$ 1-576-231-51

Replacement Procedure


1. Remove the PS panel assembly.
(Refer to Section 1-7-1.)
2. Insert a flat-blade screwdriver into the groove of the fuse holder, and rotate it in the direction of arrow A (by about 90°) to unlock. (Fig. 1)
3. Remove the fuse with the fuse holder. (Fig. 2)
4. Remove the fuse from the fuse holder. (Fig. 3)

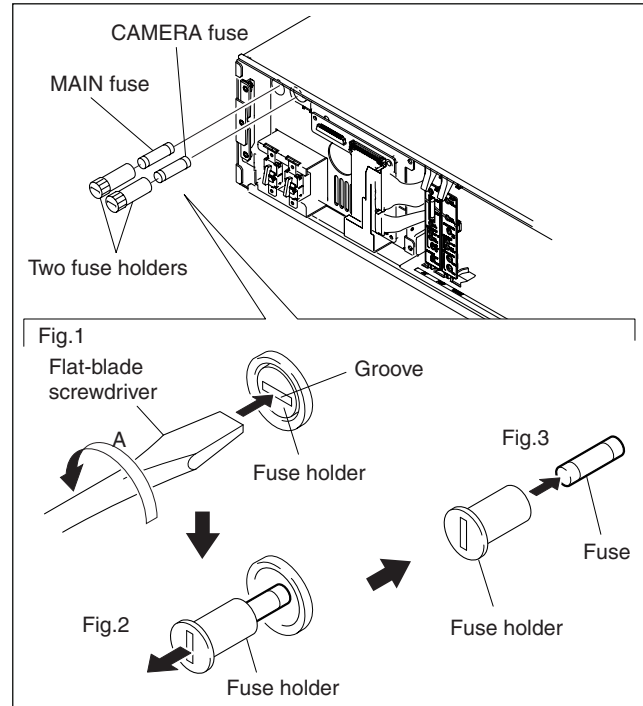

5. Attach the fuse in the reverse order.

Note

A spring is already attached in the fuse holder. When attaching a new fuse, rotate the flat-blade screwdriver in the direction of arrow C (by about 90°) while pressing it in the direction of arrow B to lock the fuse holder.

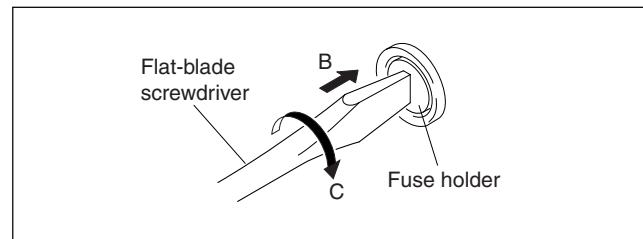

1-8. Installation Position of the Option Board

The following optional boards can be available for HDCU. Use different slots for each board and set the switches respectively.

For the details, refer to Section 2-1, “System Connection”.

Model	Board (slot in the front)	Board (slot in the rear)
HKCU1001: SD Analog Interface Unit	EN-159A	VDA-64A
HKCU1003: MULTI Interface Unit*	EN-159B	VDA-64A
		VDA-64B
		VDA-64C*
HKCU1005: SDI Output Expansion Unit	DRX-5	HIF-26

* : HDCU3300 cannot use VDA-64C, which is the rear board of HKCU1003.

- When installing option board

No	Front side slot	Board name	Rear side slot	Board name
1	3	DRX-5	3	HIF-26
2	3	EN-159A	3	VDA-64A
3-1	3	EN-159B	3	VDA-64A
3-2	3	EN-159B	3	VDA-64B

Notes

When installing the option board, keep the following points in mind:

- Install the option board to slot 3.
- VDA-64C, which is the rear board of HKCU1003, cannot be installed.


1-9. Installing the Option Boards

Front side

1. Turn off the power, and unplug the power cord from the outlet.
2. Remove the front panel. (Refer to Section 1-5.)
3. Insert the option board into right slot.

Note

Check that the option board is securely connected to the motherboard (MB-1073 board).

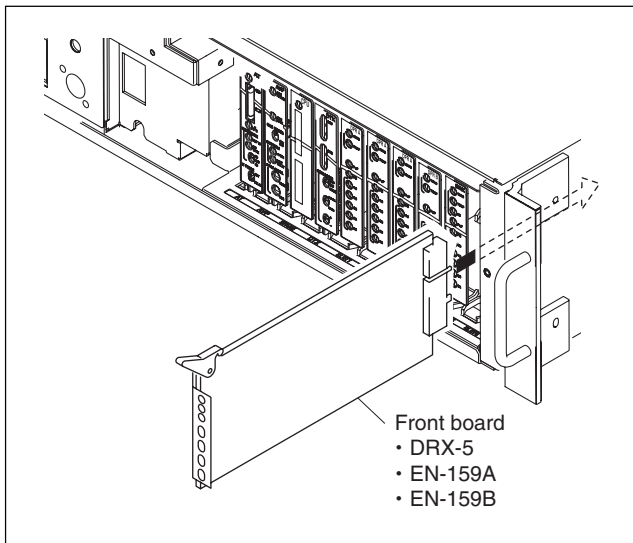


Rear side

1. Remove the two screws, and remove the blank panel by the handle.

Note


Store the removed blank panel in a safe place.

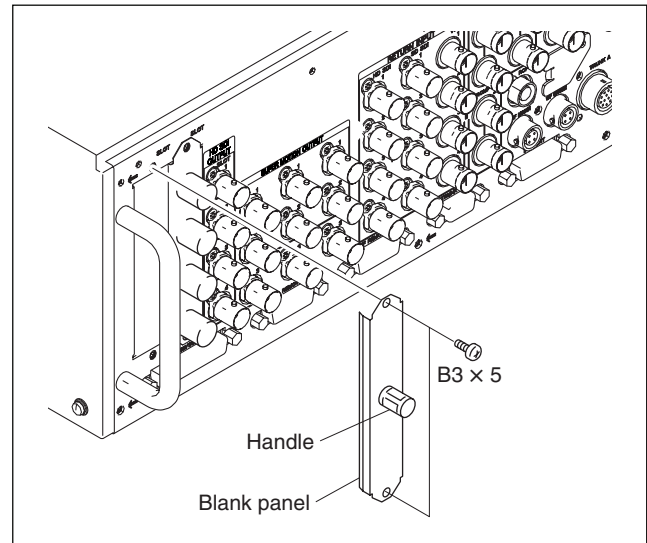

2. Insert the option board into the slot.

Notes

- Insert the board into the lower grooves, and then push the board straight into the slot.
 - Check that the option board is securely connected to the motherboard (MB-1073 board).
3. Fix the option board with the two screws removed at step 1.

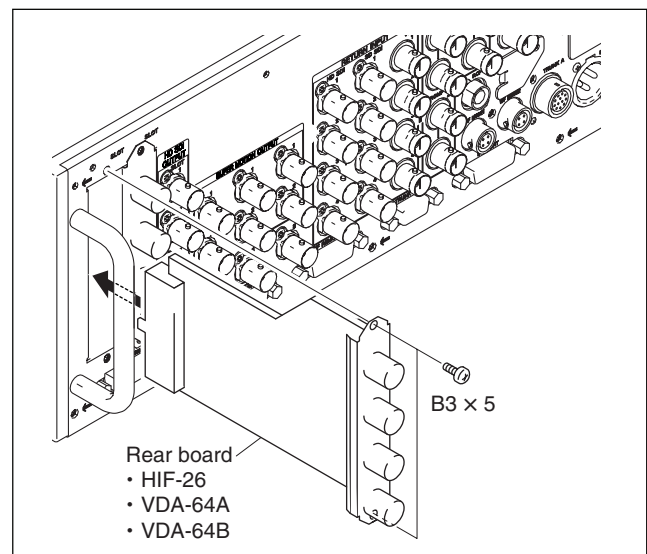

1-10. Installing in 19-inch Rack

The unit can be mounted in a 19-inch EIA standard rack (height: three unit).

WARNING

- Fix the rack on the floor.
If the rack falls due to the weight of the equipment, it may cause death or serious injury.
To prevent the rack from falling or moving, be sure to fix the rack on the floor.
- Do not install at a height of 1 m or higher from the floor.
If the rack falls, it may cause death or serious injury.
When installing the unit, be sure to fix the rack on the floor and be careful not to install at a height of 1 m or higher from the floor.

Required Parts

CAUTION

Use the specified rack mount rail.
If not, the unit drops because the strength of rail may not be sufficient, that may cause injury.

- | | |
|---|--------|
| • Slide rail : | 1 set |
| Accuride No.305A-18 (457 mm) | |
| • Front brackets : | 2 pcs |
| Sony P/N 2-142-214-01 | |
| • Rear brackets : | 2 pcs |
| Sony P/N 2-142-215-01 | |
| • Screws (B4 × 8) : | 14 pcs |
| • Screws (B5 × 8) : | 8 pcs |
| • Plate nut : | 1 pc |
| Sony P/N 3-651-812-00 | |
| • Screws for rack mounting (RK5 × 14) : | 4 pcs |
| • Washers for rack mounting : | 4 pcs |
| Sony P/N 2-297-913-01 | |

Manufacturer :

UNITED STATES

- **Accuride**
12311 Shoemaker Avenue
Santa Fe Springs, CA 90670
TEL 213-903-0200
FAX 213-903-0208
- **Accuride**
Quality Drive
Charlotte, NC 28217
TEL 704-588-5880
FAX 704-588-6316
- **Accuride**
1930 Parco Avenue
Ontario, CA 91761
TEL 714-923-9922
FAX 714-947-8586

WEST GERMANY


- **Standard-Præzision GmbH**
Postfach 1464
Werner-von-Siemens-Strasse 16-18
6252 Diez/Lahn West Germany
TEL 6432-6080
FAX 6432-60820

UNITED KINGDOM


- **Accuride Limited**
Lilliput Road
Brackmills Industrial Estate
Northampton, NN4 0AR
United Kingdom
TEL 604-761111
FAX 604-767190

Rack Mount Procedure

1. Pull out the inner rail while pressing the stopper of the rail.

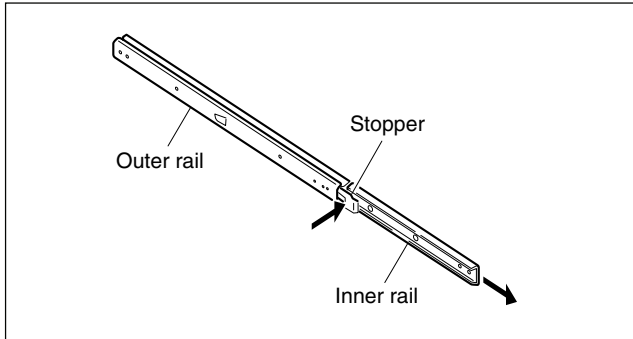


2. Attach the inner rails to the unit using the six screws (B4 × 8).

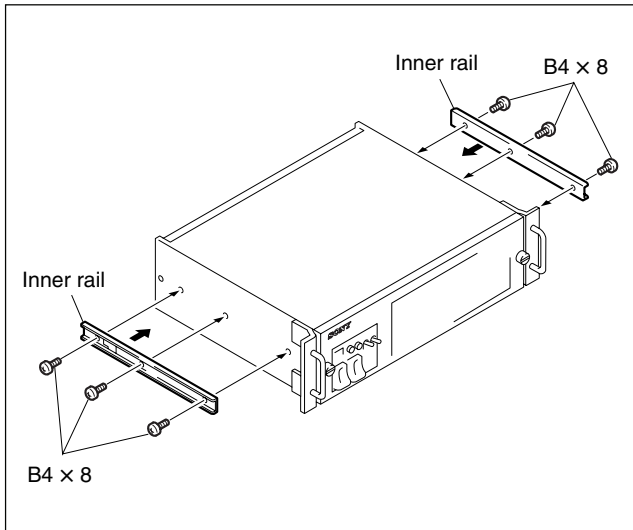


3. Attach the front and rear brackets to the outer rails using the eight screws (B4 × 8).

Notes

- When attaching the front bracket, slide the mid-member until the screw holes in the cabinet-member are visible through the hole in the mid-member as shown below.
- When attaching the rear bracket, adjust the position of the bracket with the rack depth.

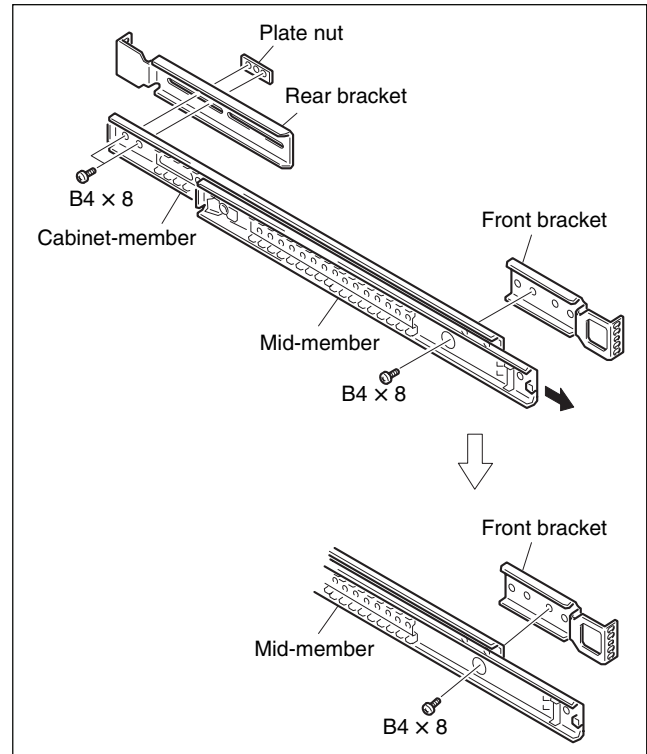


4. Attach the front and rear brackets to the outside of the rack temporarily using the eight screws (B5 × 8).

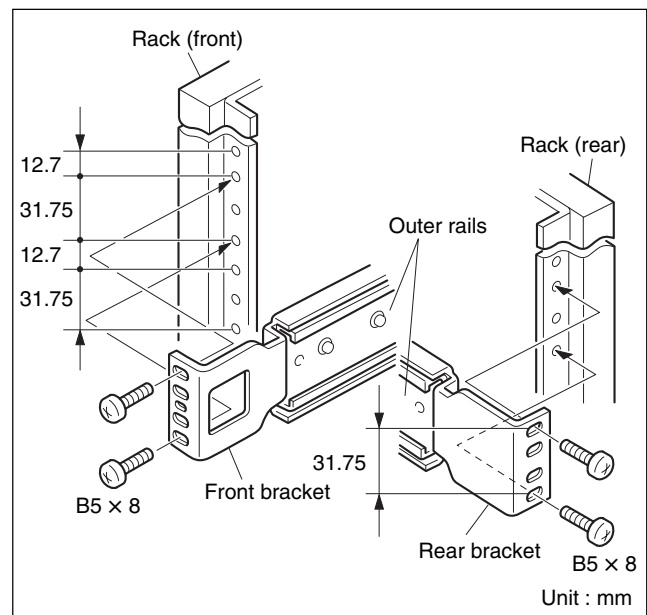

CAUTION

- Mount the unit by two persons or more.
A one-man job may cause injury.
 - If you forget to fasten the screws of the rack angle, the unit may slip and fall, causing injury.
After rack mounting, be sure to fasten the screws.
 - Be careful not to get your finger or hand caught in rack mount rail. Injury could occur by drop of the unit in unbalance condition of installation or removal. Install in a posture of stability and carefully.
5. While pressing the stoppers of the inner rails, slide the inner rails fully into the outer rails, and push the unit into the rack slowly.

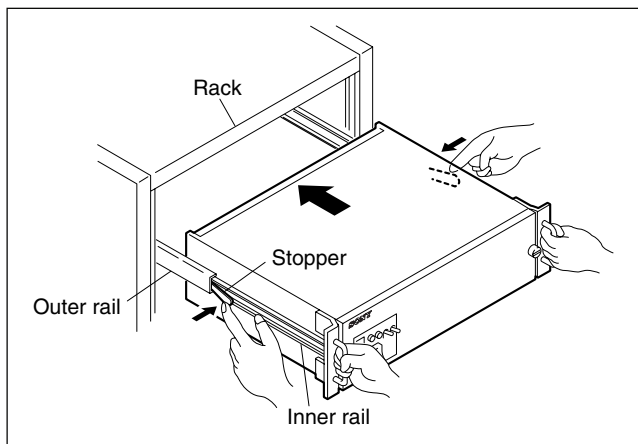


6. After confirming that the unit can be moved smoothly, tighten the screws (B5 × 8) secured temporarily in the step 4.

Note

When securing the front brackets to the rack by screws, pull the unit out of the rack about 20 cm (8 inches), and fasten the screws of the front brackets to the rack.

7. After installing the unit in the rack, fix the unit to the rack using the four screws (RK5 × 14) and four ornamental washers.

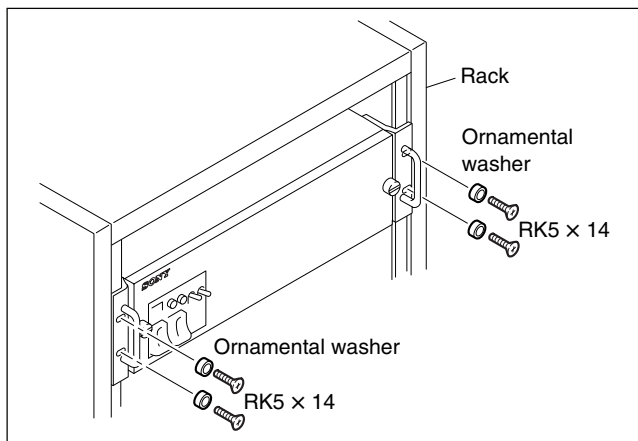

1-11. Cleaning of Connector/Cable

Before connecting the unit to the camera, it is recommended to clean the following optical contact portions.

- CAMERA connector of the unit
- CCU connector of the camera side
- Optical/electrical cable

Cleaning of the Standard Connector/Cable

Clean the standard connector/cable (manufactured by LEMO) in the following steps.


Tools Required

- Alignment sleeve remover HC-001
(for female connector)
Sony P/N : J-6480-010-A or
DCC.91.312.5LA manufactured by Lemo, or equivalent

Note

Insert the shorter nose end when removing/installing the alignment sleeve.

Grasp not the shock absorber portion of the remover but the handle in use.

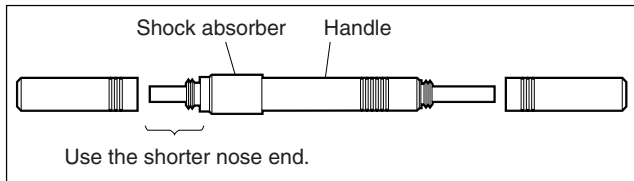

- Alcohol
- Cotton swabs (commercially available)

Note


Use a cotton swab whose diameter is about 4 mm.

If a cotton swab whose diameter exceeds 5 mm is used, the cotton swab cannot be inserted into the end of the connector and the tip of the optical contact cannot be cleaned.

Cleaning

[Male connector]


Clean the tip of the white optical contacts by a cotton swab moistened with alcohol.

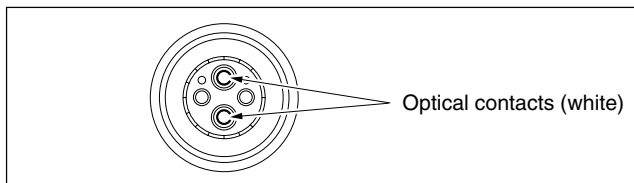

[Female connector]

The optical contacts for female connector are in an unexposed state. In cleaning, it is necessary to be exposed by removing the alignment sleeve in advance. Proceed as follows.

1. Insert the alignment sleeve remover into the alignment sleeve in the straight line and turn it clockwise.

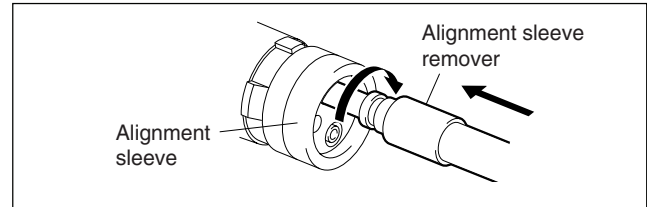


2. When the turn stops, pull out the remover in the straight line forcibly.

Note


The alignment sleeve can be removed/reinstalled with the sleeve itself attached to the tip of the remover.

Great care should be taken so as not to lose or damage the alignment sleeve.

(Alignment sleeve: Sony P/N 9-980-074-01)

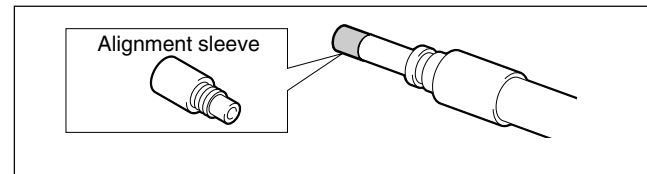


3. Clean the tip of the white optical contacts by a cotton swab moistened with alcohol.

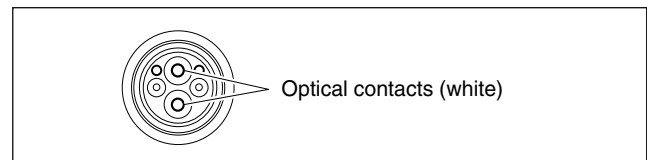

4. Insert the remover with the alignment sleeve attached to its tip, and push it until it clicks.
5. Rotate the remover counterclockwise to install the alignment sleeve, and extract the remover.

LC-type connector

Clean the tip of the white optical contact by a cotton swab moistened with alcohol.

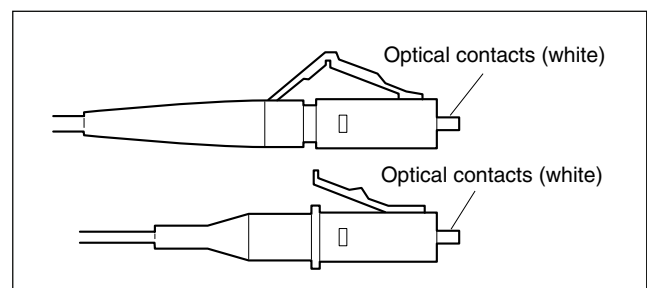

Section 2

System Setup

2-1. System Connection

HDCU3300 can support input and output of multiple formats. It can also support various types of user's format by installing the optional circuit boards.

The slots to be used and the switch setting on each board vary depending on the system to be used.

List of optional boards


Optional name	Front side board : Function	Rear side board : Function	
HKCU1001	EN-159A : SD Encoder Unit	VDA-64A :	• Composite video signal output • Picture monitor output • Waveform monitor output
HKCU1003	EN-159B : Multi Interface Unit	VDA-64A :	• Composite video signal output • Picture monitor output • Waveform monitor output
		VDA-64B :	• Picture monitor output • Waveform monitor output
		VDA-64C *2	(• Frame reference input/output) *1
HKCU1005	DRX-5 : SDI Output Expansion Unit	HIF-26 :	SDI output

*1 : This signal does not function on the HDCU3300.

*2 : VDA-64C board of the HKCU1003 cannot be used on the HDCU3300.

Note

Regarding the installation of the optional boards, refer to “1-9. Installing the Optional Boards”.

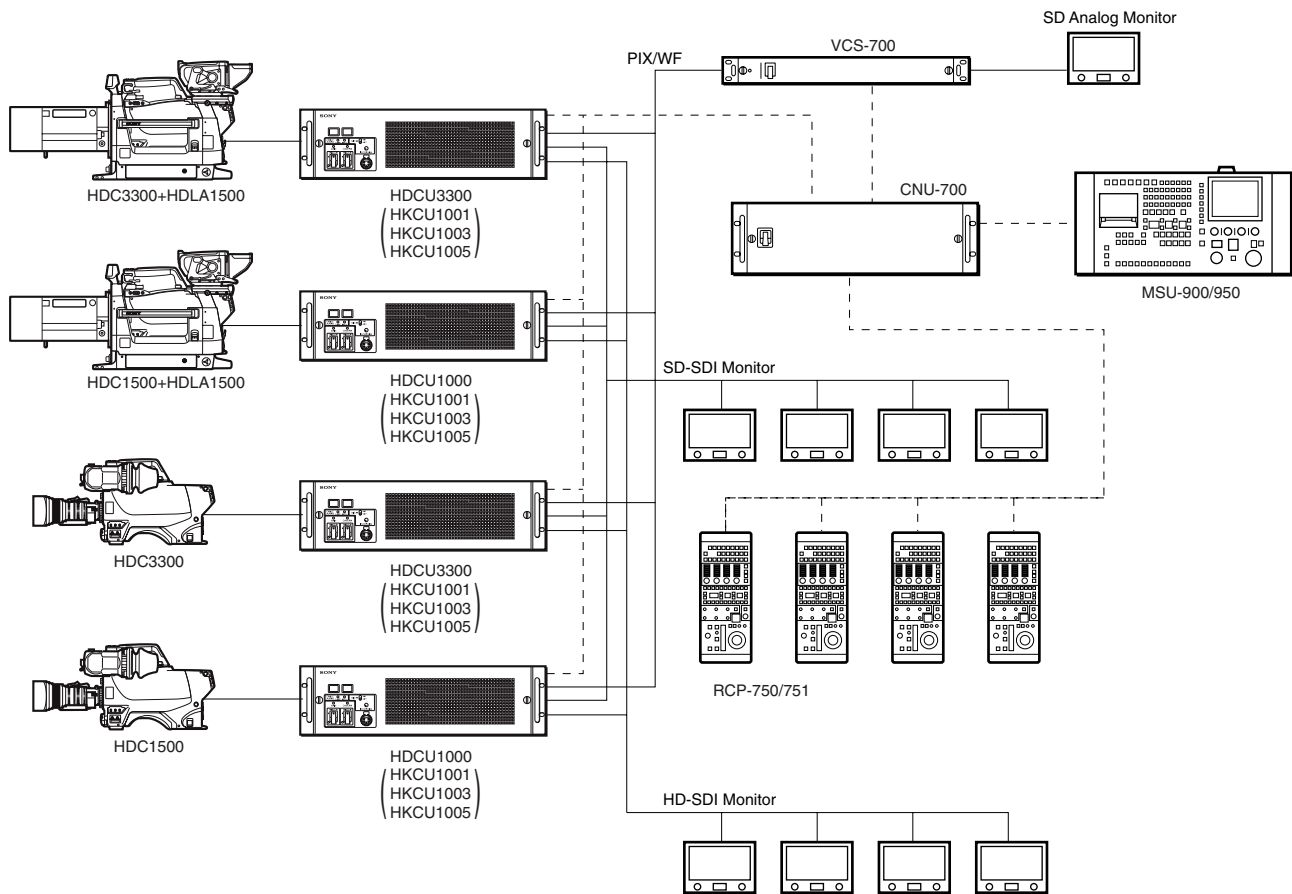


Example of board combinations

System configuration	Front side slot	Board name	Rear side slot	Board name
1. Standard HD/SD system	3	—	3	—
2. Standard HD/SD system	3	EN-159A	3	VDA-64A
⊕ SD analog encoder (HKCU1001) [SD analog I/F added]				
3. Standard HD/SD system	3	DRX-5	3	HIF-26
⊕ SDI output expansion (HKCU1005) [HD/SD expanded system]				


1. Standard HD/SD system

Standard system without option

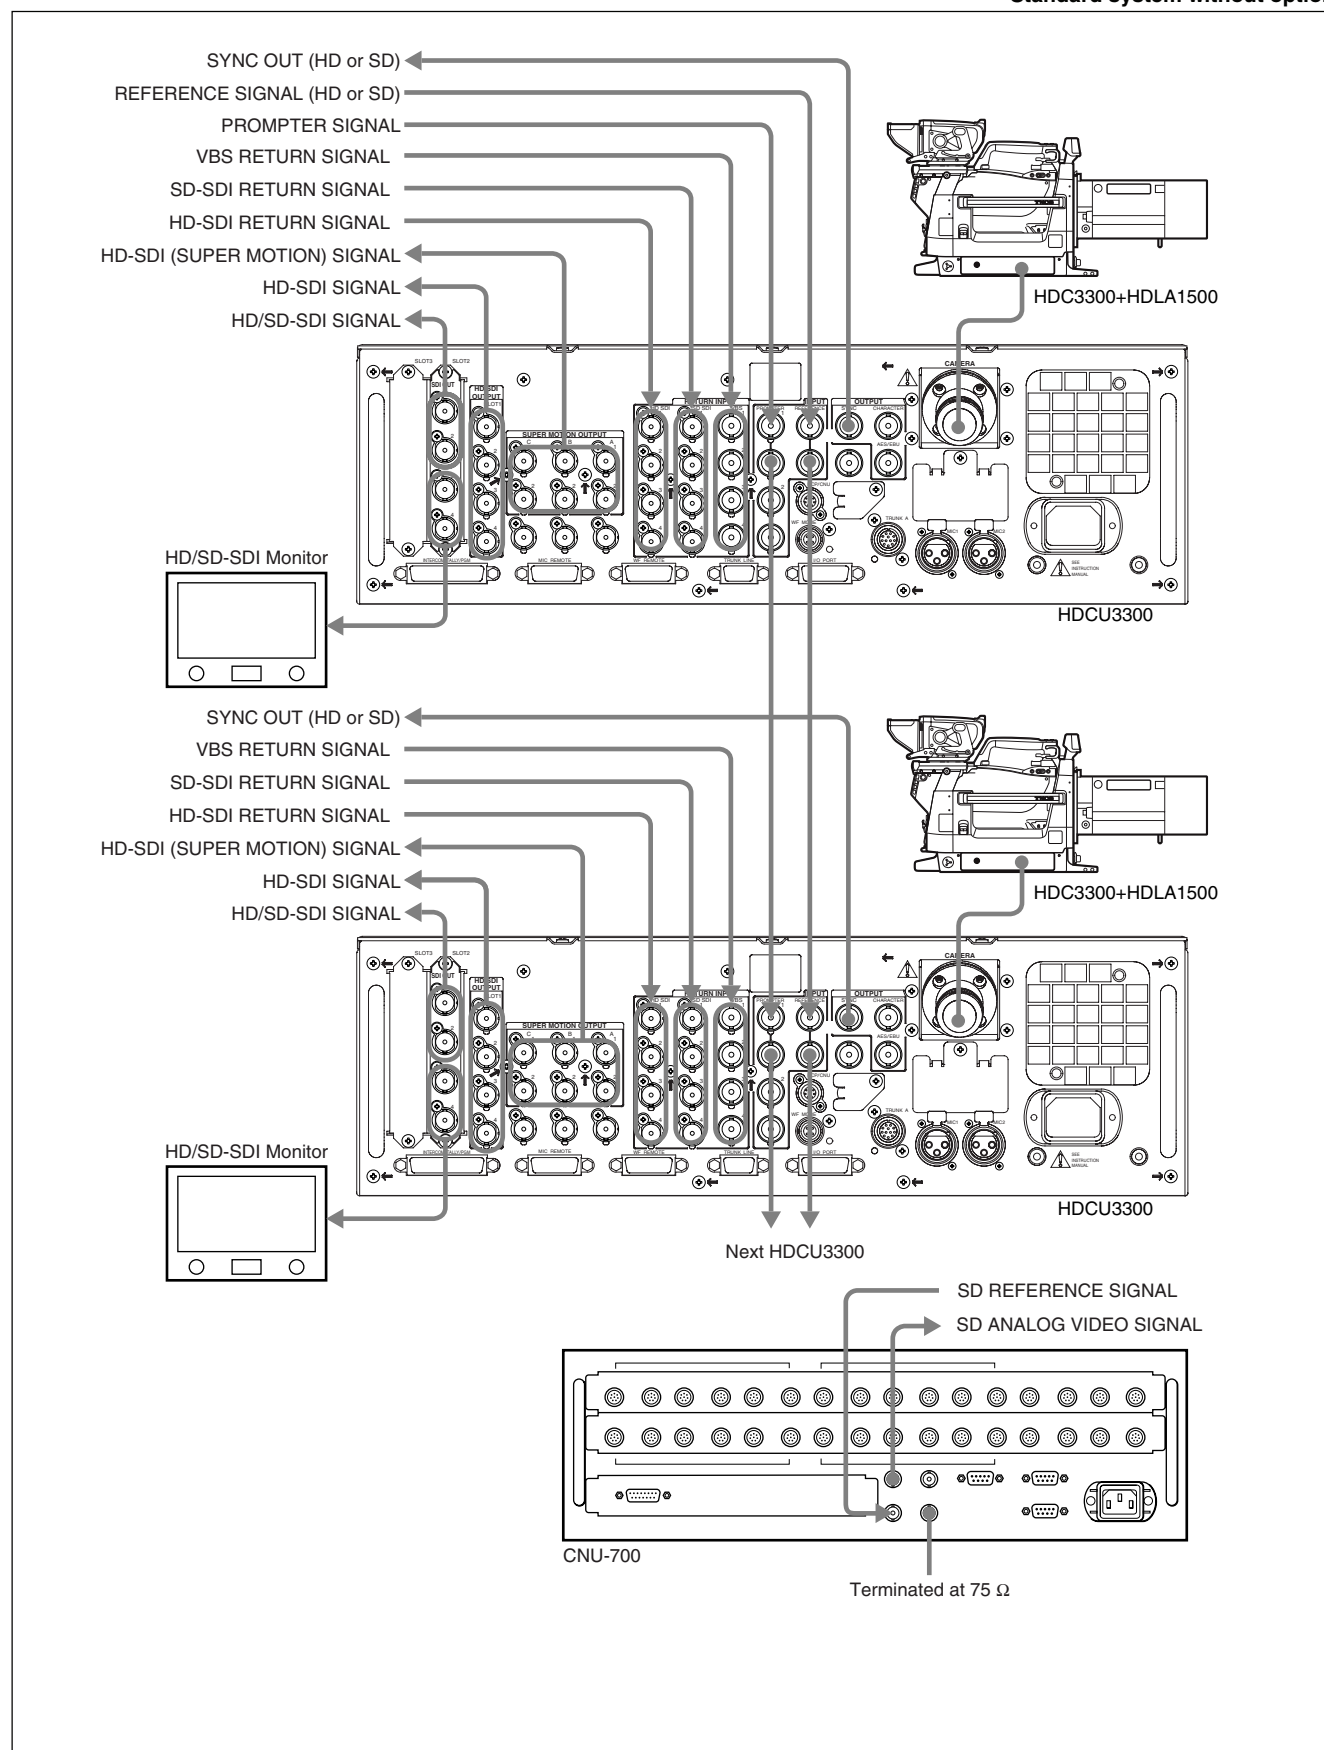


2. Standard HD/SD system ⊕ SD analog encoder (HKCU1001)

SD analog I/F added (VBS, PIX, WF outputs)

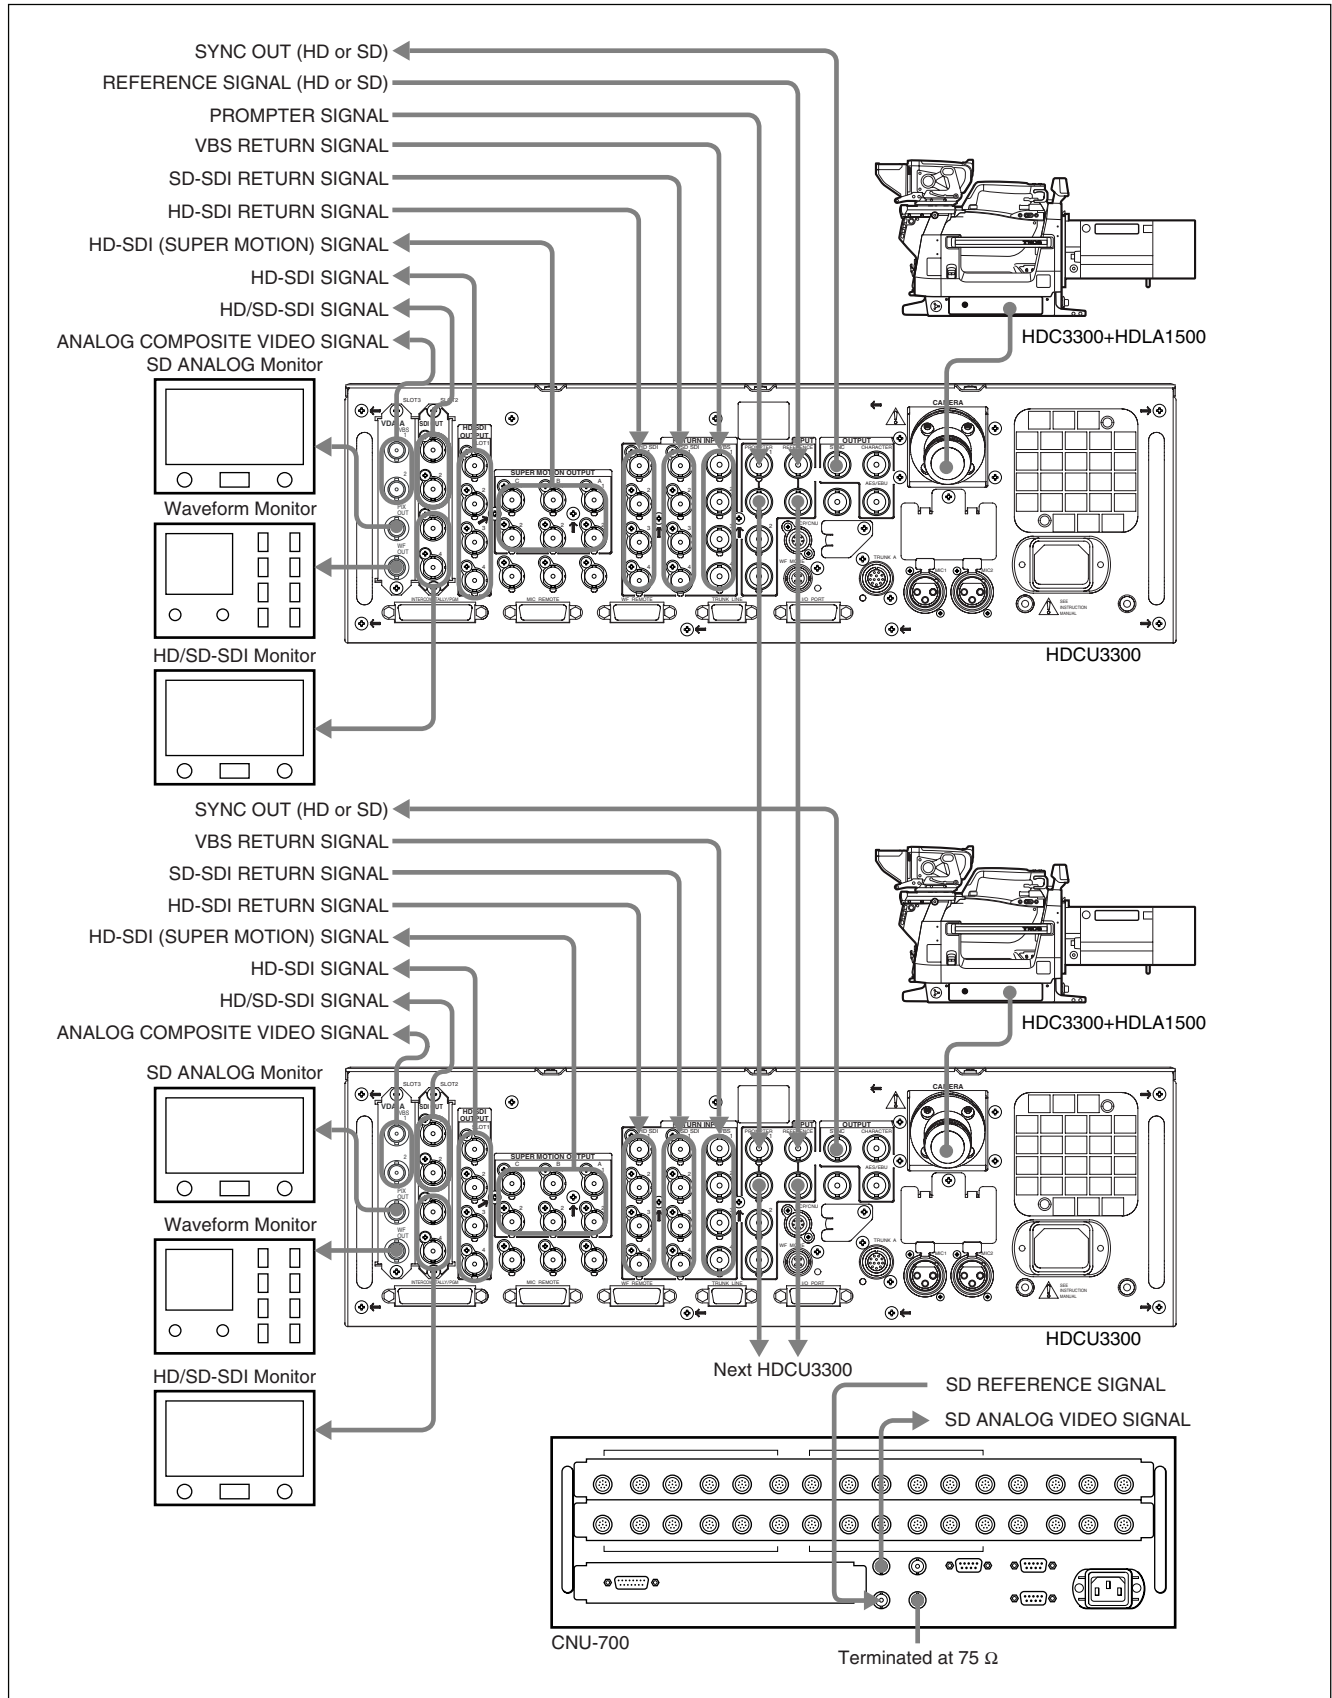

HD/SD expansion system

 

2-2. Setting the System Format

2-2-1. Setting the Multi-Format

Sets the format of the signal that is output from HDCU3300.

Normally the format is set from the MSU connected outside or from MULTI FORMAT on page “S02” of the system menu in the HDCU3300. However, it can also be set with the switches on the AT-167S board.

1. Setting the HD-SDI output

Sets the format of the signal that is output as the HD-SDI signal. At the same time, this setting becomes the shooting mode of the camera.

(1) Set the field frequency coefficient.

Setup switch : S420 on the AT-167S board (Factory setting : REMOTE)

1.001 : Set the field frequency to 1/1.001 times (Set the field frequency to 1.001 when using NTSC (525/60) signal in the SD system.)

1.000 : Set the field frequency to 1 time. (Set the field frequency to 1.000 when using PAL (625/50) signal in the SD system.)

REMOTE : Set from the MSU connected outside or from MULTI FORMAT on page “S02” of the system menu in the HDCU3300.

(2) Set the field frequency.

Setup switch : S418 on the AT-167S board (Factory setting: 60 V)

60 V : When the 60 field HD signal or the NTSC SD (525/60) signal is used.

50 V : When the 50 field HD signal or the PAL SD (625/50) signal is used.

(48 : Only the 24PsF progressive system is supported.)*

* : This mode does not function on the HDCU3300.

(3) Set the shooting mode of the camera.

Setup switch : S419 on the AT-167S board (Factory setting : INTR)

I : When shooting with interlacing system.

(PsF : When shooting with progressive (PsF) system.)*

720 : When shooting with 720P system.

* : This mode does not function on the HDCU3300.

2-2-2. Setting the Reference Input

Normally the reference input is set from MSU connected outside. However, it can also be set by the switch on the AT-167S board.

1. Setting the reference input signal format

Setup switch : REFERENCE switch (S401) on the AT-167S panel (Factory setting : REM)

HD : When the HD analog ternary SYNC is used. (This unit supports the frame frequency automatically.)

SD : When the BB (black burst) signal of SD is used.

REM : When the reference is set from GEN-LOCK PHASE on page “S01” of the system menu in the HDCU3300 or from the MSU connected outside.

Note

When a position other than REM is set, all of the REFERENCE settings including the phase adjustment must be locally set.

2. Inputting the sub reference signal (when the HKCU1003/VDA-64B is installed) : This signal currently does not function.

When the EN-159B board and VDA-64B board of the HKCU1003 are installed in the optional slots, the sub reference signal is input and the frame sequences of the 24PsF signal and the 60i signal can be locked.

Input the frame frequency signal that is different from the main reference signal for the sub reference signal.

Note

When the sub reference is not input, the pulse gate signal of the frame sync is output from the loop-through output terminal.


The frame sequence between multiple CCUs can be locked if you connect this signal to the sub reference input of other CCUs.

2-3. Audio System

2-3-1. Setting the Intercom System

HDCU3300 can be connected to the intercom lines (producer line and engineer line) of the two independent systems and can switch them.

The intercom systems conforming to HDCU3300 are 4W, RTS and Clear-Com. The internal switches of the unit need to be set according to the system used.

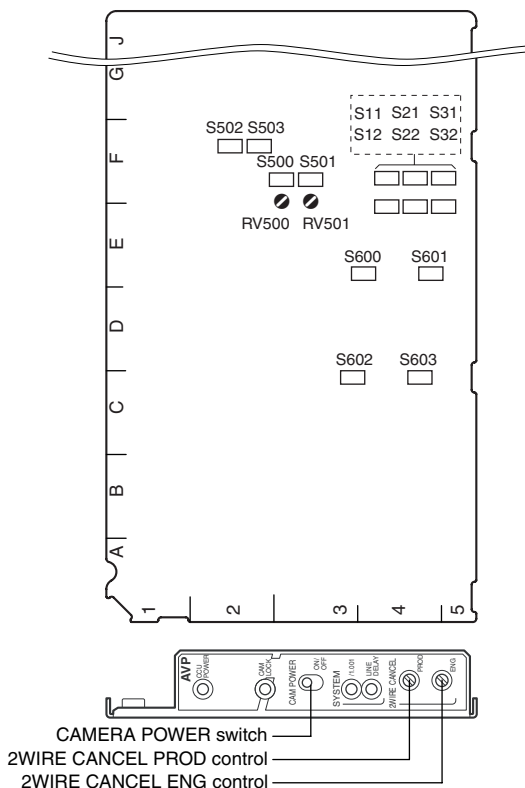

AVP-6 board (A side/panel side)

1. Selecting the intercom system

Select a system (4W, RTS or Clear-Com) respectively for the engineer line and the producer line according to the system used. Then, select the number of intercom line systems (1CH or 2CH).

• Selecting the producer line :

Set switches S602/600 (PROD SELECT) on the AVP-6 board according to the system used.

Factory setting : 4W (S602)

RTS (S600)

• Selecting the engineer line :

Set switches S603/601 (ENG SELECT) on the AVP-6 board according to the system used.

Factory setting : 4W (S603)

RTS (S601)

• When the intercom line is 1 channel :

Set 1CH at INCOM-CH on page “C06” of the configuration menu. In this setting, the intercom line is connected to the producer line of HDCU3300.

When the switch is set in this position, connection of the intercom line of the unit is fixed to the producer line regardless of the setting of the INCOM PROD/ENG switch of the HDC3300 and the INCOM SELECT switch on the front panel of the unit.

• When the intercom line is 2 channels :

Set 2CH at INCOM-CH on page “C06” of the configuration menu.

Factory setting : 2CH

Adjusting the RTS cancel

When the RTS intercom system is used, the following adjustment also needs to be made.

- (1) Connect a headset to the INCOM connector on the front and perform the procedure described in the following paragraph “2. Setting the headset microphone”.
- (2) Set -99 for the value of SIDE TONE on page “C06” of the configuration menu.
- (3) Set the INCOM SELECT switch on the front panel to PROD.
- (4) Speak into the microphone of the headset and adjust the 2WIRE CANCEL PROD control of the AVP-6 board panel to minimize the side tone.
- (5) Set the INCOM SELECT switch on the front panel to ENG.
- (6) Speak into the microphone of the headset and adjust the 2WIRE CANCEL ENG control of the AVP-6 board panel to minimize the side tone.
- (7) Return the value of SIDE TONE on page “C06” of the configuration menu to its original value or to the desired value of user.

Note

When setting S602 and S603 to RTS, be sure to connect them to the RTS system. Otherwise, they oscillate and have adverse effects on the peripheral circuits.


2. Setting the headset microphone

Set switch S4 (FRONT MIC) on the AU-302 board according to the type of headset microphone to be connected to the front INCOM connector.

When using a carbon microphone : CARBON
(Sensitivity -20 dB, power is supplied.) (factory setting)

When using an electric condenser microphone : ECM
(Sensitivity -40 dB, power is supplied.)

When using a dynamic microphone : DYNAMIC
(Sensitivity -60 dB, power is not supplied.)

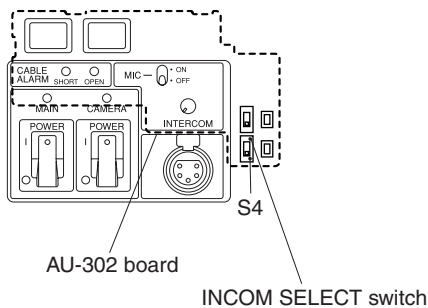

• Adjusting the side tone level

From SIDE TONE on page “C06” of the configuration menu, adjust the side tone level of the headset to be connected to the front INCOM connector according to user’s preference.

3. Setting the input level of the PGM audio signal

Set switches S502 (PGM1 IN) and S503 (PGM2 IN) on the AVP-6 board to 0 dBu or -20 dBu according to each level of audio 1 and 2 of the system.

Factory setting : 0 dBu

• Selecting the PGM audio signal

From PGM-SEL on page “C06” of the configuration menu, set the PGM audio signal of the headset connected to the front INCOM connector according to user’s preference.

Selecting PGM 1 : PGM 1 (Factory setting)

Selecting mix of PGM 1 and PGM 2 : Mix

Selecting PGM 2 : PGM 2

• Adjusting the mix amount of the PGM audio signal

From PGM1, 2 on page “C06” of the configuration menu, adjust the mix amount of the PGM audio signal of the headset connected to the front INCOM connector according to user’s preference.

4. Selecting an intercom line to be connected to the INCOM connector

Use the switch on the front panel to select the intercom line to be connected to the INCOM connector on the front as follows.

• When connecting to the producer line :

Set the INCOM SELECT switch to PROD.

• When connecting to the engineer line :

Set the INCOM SELECT switch to ENG.

• When connecting only a camera :


Set the INCOM SELECT switch to PRIV. When this position is set, the intercom from outside is cut and the system consists of the intercom and camera.

Note

When INCOM-CH on page “C06” of the configuration menu is set to 1CH, the INCOM SELECT switches on the front panel of HDCU3300 and the camera are fixed to the producer line regardless of the setting.

5. Setting the AVP-6 board switch

The flow of the switch setting on the AVP-6 board and the intercom signals is as follows.

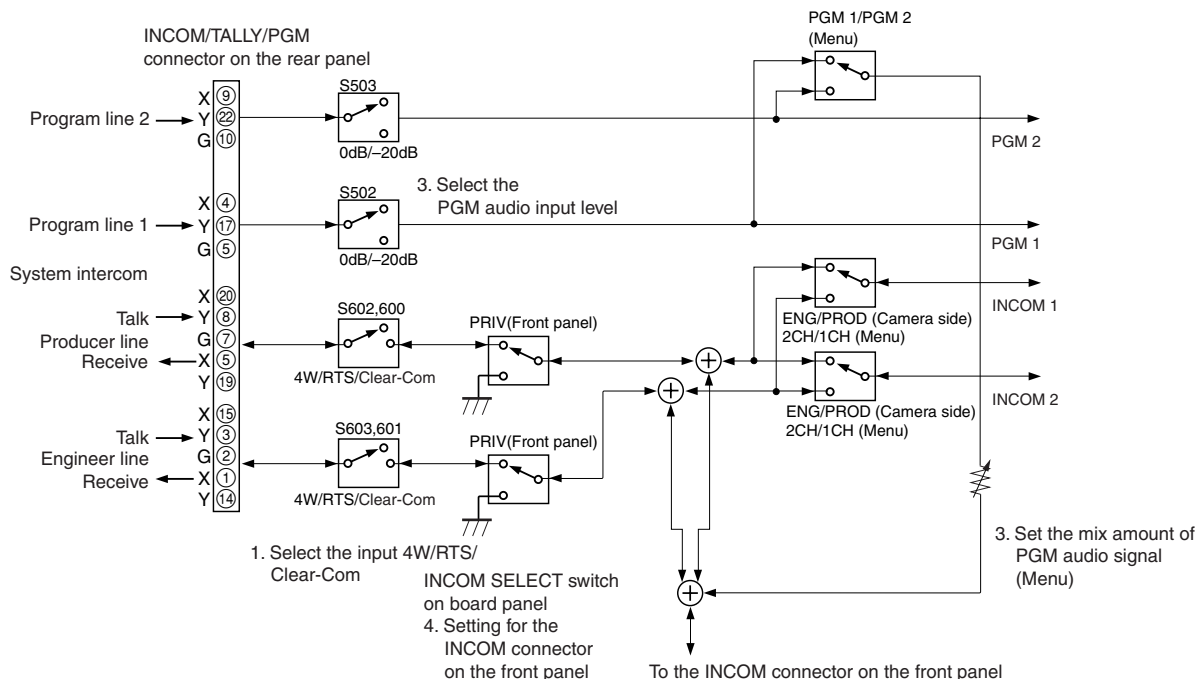

2-3-2. Setting the Microphone

HDCU3300 can output the two independent microphone lines (MIC 1, MIC 2) of video camera HDC3300 as it receives these MIC signals.

Controlling the Microphone Input Gain Using the Remote Control

HDCU3300 can adjust the input gain of the MIC connector of camera HDC3300 series using the remote control in the range of 60 dB to 20 dB in 10 dB steps using either of the following methods.

1. Adjusting the microphone input gain to be set from MENU

When the MIC REMOTE connector on the rear panel is connected to nothing or the levels of pin-8 (MIC 1) and pin-15 (MIC 2) of the MIC REMOTE connector are High, the microphone input gain can be adjusted from CHU MIC GAIN on page “C05” of the configuration menu.

Factory setting : (60 dB)

2. Adjusting the microphone input gain using the MIC REMOTE connector

Set the microphone input gain control to ON or OFF with pin-8 and pin-15 of the MIC REMOTE connector on the rear as shown below. The input gain can be controlled via pin-5, pin-6 and pin-7 as shown below.

Setting the microphone input control of the video camera

Pin No.		Microphone connector	
8	15	MIC IN CH-1	MIC IN CH-2
L	L	ON	ON
L	H	ON	OFF
H	L	OFF	ON
H	H	Internal setup (Menu page “C05”)	

Setting the microphone input gain of the video camera

Input gain	Pin No.		
	7	6	5
60 dB	H	H	H
50 dB	L	H	H
40 dB	H	L (H)	H (L)
30 dB	L	L (H)	H (L)
20 dB	H	H (L)	L (H)

H : +5 V or OPEN

L : GND

Input resistance : Pulled-up 100 kΩ +5 V

The setup for the HDCU-700A mode is shown in parenthesis () :

S406-2/AT-167S → ON


HDCU3300/IM (J,E)

3. Adjusting the MIC signal phase

When the microphone signal phase is ahead of the video signal phase to be used, adjust the amount of audio delay from MIC OUT DELAY on page “C05” of the configuration menu.

Factory setting : 0 Fs

Setting the Microphone Output Level

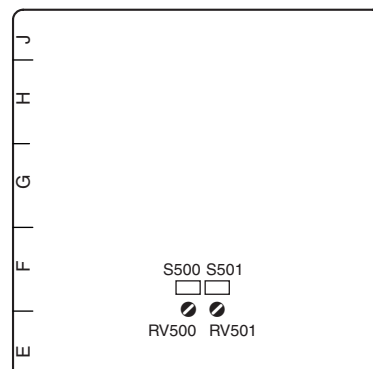

AVP-6 board (A side)

Select the microphone output signal level (0 dB, -20 dBu) from the MIC 1, 2 connector on the rear using the switches on the AVP-6 board.

- Setting the output level of MIC 1 :
Switch S500 (MIC 1 OUT LEVEL)
- Setting the output level of MIC 2 :
Switch S501 (MIC 2 OUT LEVEL)
- Factory setting : 0 dBu (both S500 and S501)


The microphone output signal level from the MIC 1, 2 connector on the rear can be adjusted using the volume on the AVP-6 board.

- Setting the output level of MIC 1 :
●RV500 (MIC 1 OUT LEVEL)
- Setting the output level of MIC 2 :
●RV501 (MIC 2 OUT LEVEL)

2-4. Systems

2-4-1. Setting the Tally System

HDCU3300 supports the red tally and the green tally. It also supports the MAKING CONTACT and supplying power (24 V/TTL). Set the switches on the AVP-6 board according to the system used as follows :

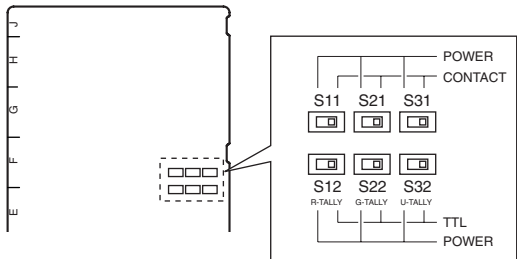

AVP-6 board (A side)

Set the tally system as shown in the following table.

Setting the tally system

Switch	Red tally		Green tally	
	S11	S12	S21	S22
MAKING CONTACT	CONTACT	–	CONTACT	–
Supplying 24 V power	POWER	POWER	POWER	POWER
Supplying 5 V power	POWER	TTL	POWER	TTL


Switches S11 and S12 are set to CONTACT when the unit is shipped from the factory.

2-4-2. Setting the Camera Number

System that does not use CNU-700/500


Use switch S409 on the AT-167S board to set the camera number.

Use switches 1 to 4 to set the first digit and use switches 5 to 8 to set the second digit. “0” to “f” can be set as each digit, but “a” to “f” are invalid. Camera numbers 1 to 96 can be set.

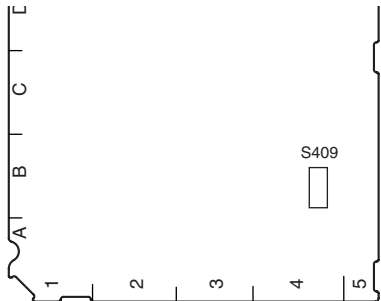

AT-167S board (A side)


(Example of setting)

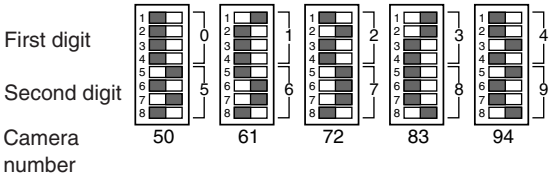

System that uses CNU-700/500

The CCU connector number on the rear of the CNU-700/500 is the camera number. For example, the camera number of the CCU video camera that is connected to the CCU 1 connector is 1.

2-4-3. Connecting the Control, Intercom, Tally and Audio Signals

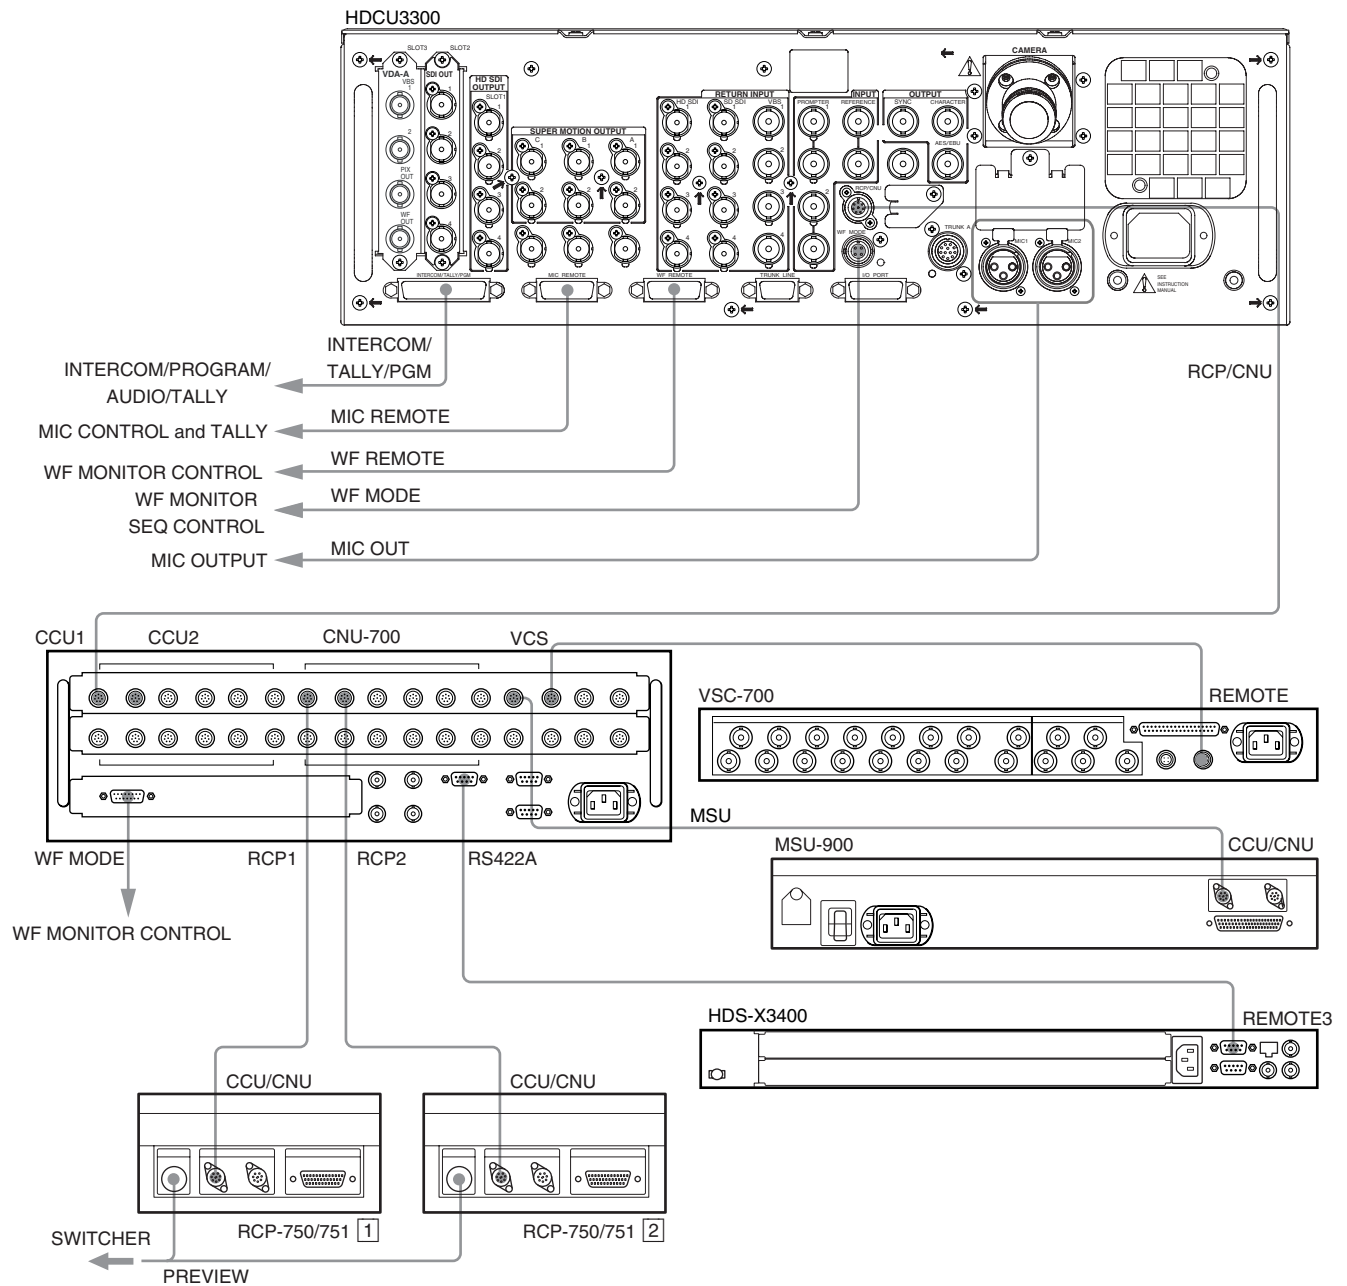

2-5. Video Signal System

The equipment that is used for HDCU3300 and the HDC3300 camera system were set to the specified level when shipped from the factory. Before operating, check the signal levels between each equipment and adjust them if required. Some adjustments can be performed using the maintenance menu of the MSU-900/950 besides using the control or switches on the board. Perform the basic adjustments on the board and perform the fine adjustments on the maintenance menu.

2-5-1. Selecting the Input/Output Signal

Select the input/output terminal signal of the rear panel according to the video system to be installed.

2-5-2. Adjusting the Signal Phase

Adjust the signal phase of HDCU3300. Before adjustment, input the following sync signals to the unit and each of the equipment used.

REFERENCE

HD ternary SYNC : 0.6 V p-p

or

black burst signal : 40 IRE (0.3 V p-p)
(SMPTE318M (10F-BB) is also acceptable.)

Note

When the VBS signal of HKCU1001/1003 is used (when SC phase lock is required), use the black burst signal.

HKCU1003 (Using VDA-64B)

FRAME REFERENCE

HD ternary SYNC : 0.6 V p-p


or

black burst signal : 40 IRE (0.3 V p-p)
sequence pulse : 40 IRE (0.3 V p-p)

Adjusting the Phase of the Sync Signal

Adjust the phase of the output signal to match it with that of the reference signal. Perform the adjustment using the switch on the AT-167S and EN-159 board (HKCU1001/1003) panel of HDCU3300. The adjustment also can be performed on the maintenance menu of the MSU-900/950.

How to adjust on the AT-167S board and EN-159A/159B board (HKCU1001/1003) of the unit

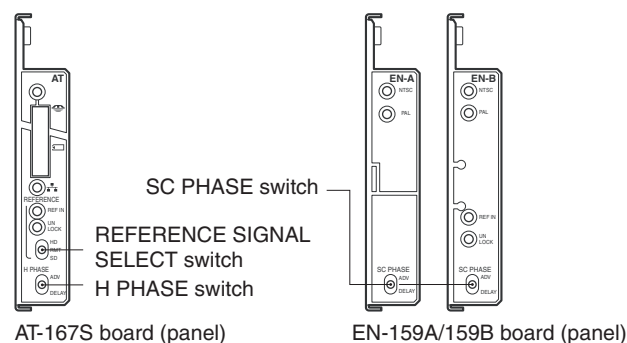

1. Select the type of external sync signal using the REFERENCE SIGNAL selector switch on the AT-167S board panel.
HD : HD ternary SYNC
SD : BB (black burst) signal
REM : Control is performed by MSU, etc., connected outside.
Factory setting : REM
2. When setting HD in step 1 :
 - 1) Coarse-adjust the H phase using H-STEP on page "S01" of the system menu, then fine-adjust it using the H PHASE switch on the AT-167S board panel.

When selecting SD in step 1 :

- 1) Coarse-adjust the H phase using H-STEP on page "S01" of the system menu, then fine-adjust it using the H PHASE switch on the AT-167S board panel.
- 2) Adjust the SC phase using switch SC PHASE on the EN-159A/159B board (HKCU1001/1003) panel (when the BB signal is selected as a reference).

2-5-3. Setting Aspect Ratio Conversion during Down-convert

In the HDC3300 series camera system, the aspect ratio can be switched by using the HDCU3300 and MSU-900/950 according to the system during HD-SD down-convert. Set the desired aspect ratio using the MIC REMOTE connector at the rear panel of the HDCU3300, or SD ASPECT on page “S04” of the system menu in the HDCU3300.

The aspect ratio also can be set on the maintenance menu or the configuration menu of the MSU-900/950. The aspect ratio of the following four types can be switched in this system.

Squeeze :	The HD video signal of 16 : 9 is converted to the SD signal as it is. (16 : 9)
Edge-crop :	Video signal as large as 4 : 3 is cut from the HD video signal and is converted to the SD signal. (4 : 3)
Letter box :	The HD video signal of 16 : 9 is inserted into the picture frame of 4 : 3 as it is and converted to the SD signal. (4 : 3) (The black level is inserted into the top and bottom of the picture.)
Semi-letter box :	Video signal as large as 15 : 9, 14 : 9 or 13 : 9 is cut from the HD video signal, is inserted into the picture frame of 4 : 3 and is converted to the SD signal. (4 : 3) (The black level is inserted into the top and bottom of the picture.)



How to set using the MIC REMOTE connector at the rear of the unit

1. Set pin-12 (ASPECT REMOTE ON/OFF) of the MIC REMOTE connector at the rear to L.
2. Set pin-13 (ASPECT CTL CONT1) and pin-14 (ASPECT CTL CONT2) of the MIC REMOTE connector at the rear according to the desired aspect ratio referring to the following table.


Pin-13 (ASPECT CTL CONT1)	Pin-14 (ASPECT CTL CONT2)	Aspect ratio
L	H	Squeeze (16 : 9)
H	H	Edge-crop (4 : 3)
L	L	Setting mode from Menu
H	L	Letter box (4 : 3)

Examples of display


16 : 9 picture (picture from camera)

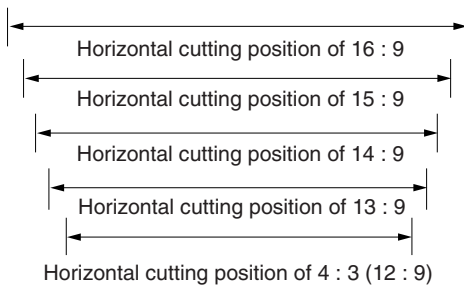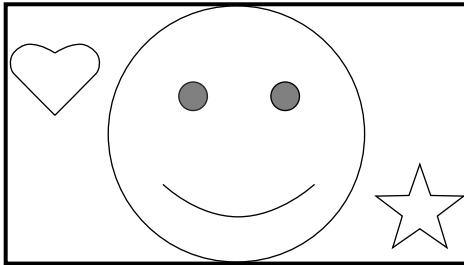


Picture whose aspect ratio is converted (SD SDI output)

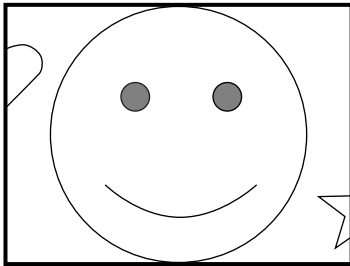


Edge-crop
CROP POSITION can be changed.

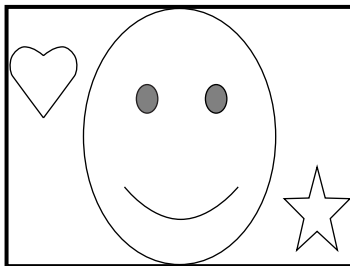


Squeeze
The 16 : 9 ratio picture is output in the SD SDI format without changing the ratio.

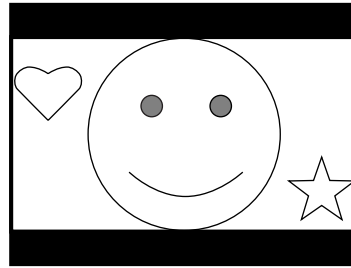


Letter box (16 : 9)
The 16 : 9 ratio picture is inserted into the 4 : 3 ratio picture without changing the ratio and is output in the SD SDI format.

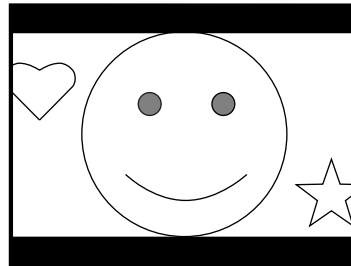

Semi-letter box (15 : 9)
The picture that is cut out with the aspect ratio of 15 : 9, is inserted into the 4 : 3 ratio picture and is output in the SD SDI format.

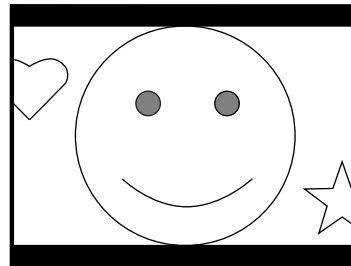

Semi-letter box (14 : 9)
The picture that is cut out with the aspect ratio of 14 : 9, is inserted into the 4 : 3 ratio picture and is output in the SD SDI format.

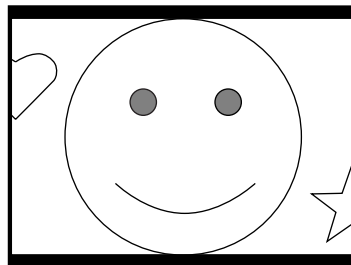


Semi-letter box (13 : 9)
The picture that is cut out with the aspect ratio of 13 : 9, is inserted into the 4 : 3 ratio picture and is output in the SD SDI format.

2-5-4. Adjusting the Level of the VBS Signal (only when HKCU1001/1003 is installed)

Adjust the level of the VBS signal output from HDCU3300 using the color bar signal.

Use the switch on the EN-159A/159B board (HKCU1001/1003) and the control on the panel of the unit for adjustment.

How to adjust using the EN-159A/159B board (HKCU1001/1003) of the unit

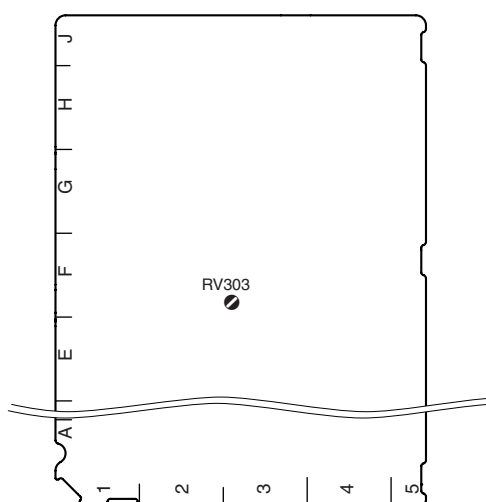


EN-159A/159B board (A side)

1. Press the BARS button of the MSU-900/950, RCP-750/751, etc. to display the color bars on the waveform monitor.
2. Adjust the color bar signal using control RV303 (VBS LEVEL) on the EN-159A/159B board so that it is within the specified level.

Measurement point : VBS OUT connector on the
HDCU rear panel

Specifications : A = 100 ± 1 IRE [for NTSC]
A = 700 ± 7 mV p-p [for PAL]
(VBS LEVEL control)

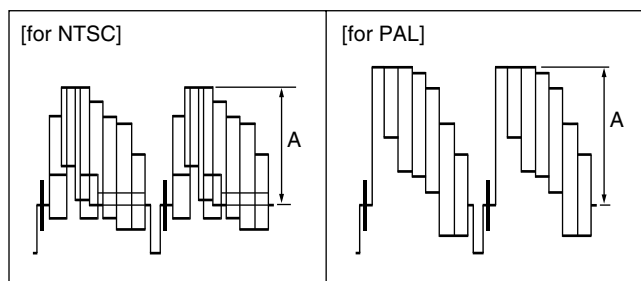


2-5-5. Adjusting the Level of Signals for Waveform Monitor

The video output signal of HDCU3300 can be checked on the waveform monitor connected to the WF OUT connector. Adjust the WF output signal level using the color bar signal.

In the system with the MSU-900/950, CNU-700 or VCS-700, the video output signal can be checked on the waveform monitor connected to the VCS-700.

Adjusting the WF Output Signal Level

How to adjust on the EN-159A/159B board of the unit

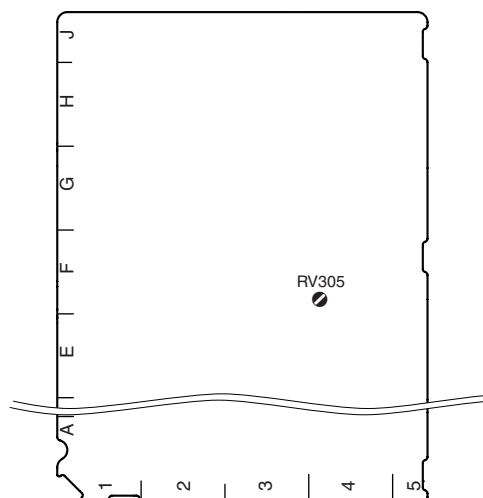


EN-159A/159B board (A side)

1. Press the BARS button of the MSU-900/950, RCP-750/751, etc., or press the ENC button of the WAVEFORM MONITOR buttons (or MONITOR SELECT buttons) to display the color bars on the waveform monitor.
2. Adjust the color bar signal using control RV305 (WFM GAIN) on the EN-159A/159B board so that it is within the specified level.

Measurement point : WF OUT connector on the
HDCU rear panel

Specification : A = 100 ± 1 IRE [for NTSC]
A = 700 ± 7 mVp-p [for PAL]

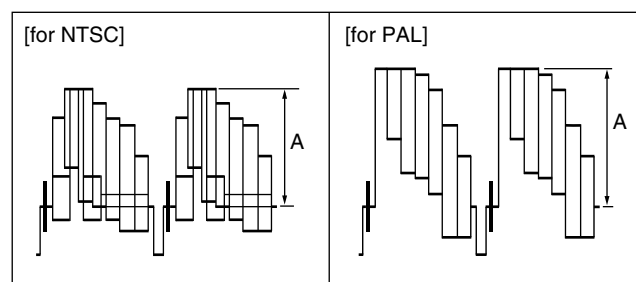

How to adjust using the VCS-700


In the system with the MSU-900/950, CNU-700 or VCS-700, the video output signal of HDCU3300 can be checked on the waveform or vector monitor connected to the WF A OUTPUT connector and the WF B OUTPUT connector of the VCS-700.

Connect the WF OUT connector of the VDA-64A/64B board to the WF 1 connector of the VCS-700 and connect the PIX OUT connector to the PIX 1 connector. Then adjust the signal level using the color bar signal.

1. Press the BARS button of the MSU-900/950, RCP-750/751, etc., or press the ENC button of the WAVEFORM MONITOR buttons (or MONITOR SELECT buttons) to display the color bars on the waveform or vector monitor.
2. Set the CONTROL switch of the VCS-700 to RESET.
3. Adjust the color bars signal using the WFM 1 LEVEL and WFM 1 CHROMA controls of the VCS-700 so that it is within the specified level.

Measurement point : PIX OUT connector on the VCS-700


Specification : $A = 100 \pm 1$ IRE [for NTSC]
 $A = 700 \pm 7$ mV p-p [for PAL]
 (WFM 1 LEVEL control)

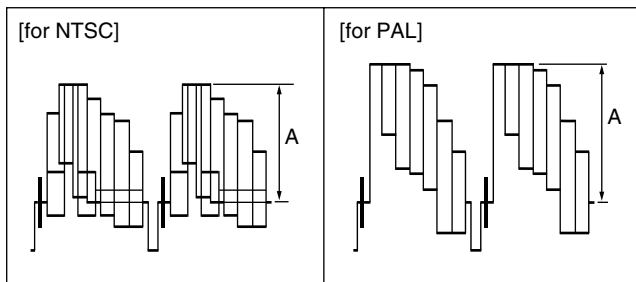


Each luminescent spot on the vector monitor must be within the “田” range.

(WFM 1 CHROMA control)

[for NTSC]

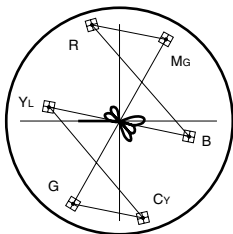


[for PAL]

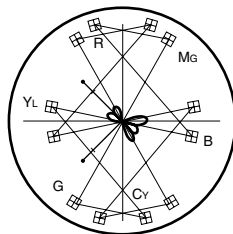

How to adjust using the MSU-900/950


The signal level can be adjusted by using the MSU-900/950 instead of using the controls of the VCS-700.

1. Press the MAINTENANCE button of the MODE block of the MSU-900/950 so that the button lights. The maintenance menu is displayed.

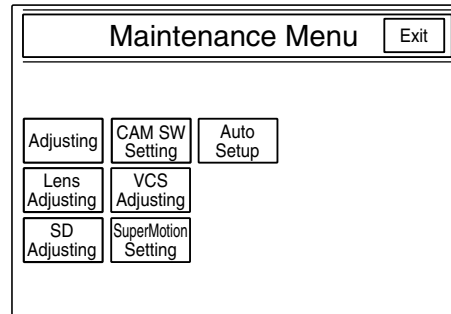

2. Press **VCS Adjusting**.


The VCS monitor level adjustment item menu is displayed.

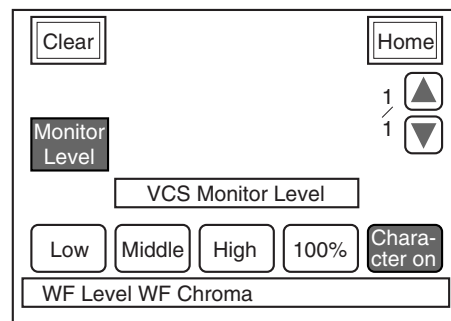

3. Adjust the color bars signal of the WF Level and WF Chroma so that it is within the specified level.


Measurement point : PIX OUT connector on the VCS-700

Specification : $A = 100 \pm 1$ IRE [for NTSC]
 $A = 700 \pm 7$ mV p-p [for PAL]
 (WF Level)

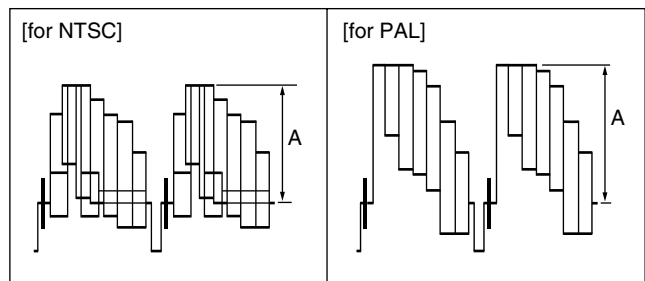


Each luminescent spot on the vector monitor must be within the “田” range.
(WF Chroma)

[for NTSC]

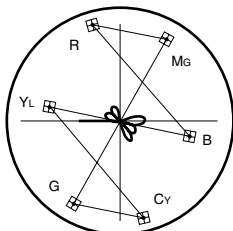


[for PAL]

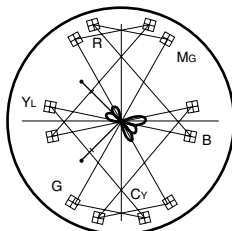

Adjusting the Staircase Signal


Adjust the staircase signal to display signals in the sequential mode on the waveform monitor. If the signal of the sequential mode is not normally displayed on the waveform monitor, perform this adjustment.

When the waveform monitor is connected to HDCU3300, perform the adjustment using controls RV301 (STAIR STEP POSITION) and RV302 (STAIR STEP LEVEL) on the EN-159A/159B board of the HKCU1001/1003. When the VCS-700 is connected, refer to the VCS-700 Maintenance Manual.

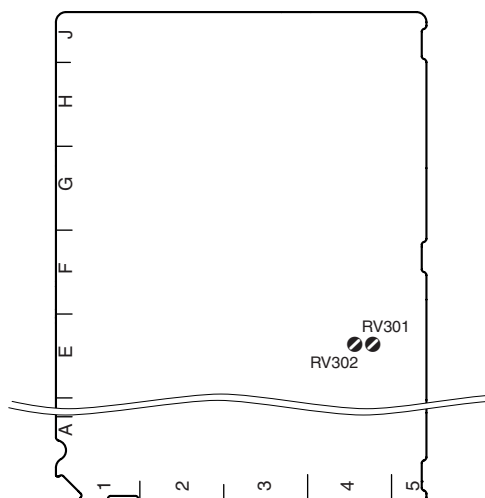

EN-159A/159B board (A side)


Press the SEQ button of the WAVEFORM MONITOR buttons (or the MONITOR SELECT buttons) of the MSU-900/950, RCP-750/751, etc., to output the waveform monitor control signal of the unit, synchronizing with the output signal of the WF OUT connector.

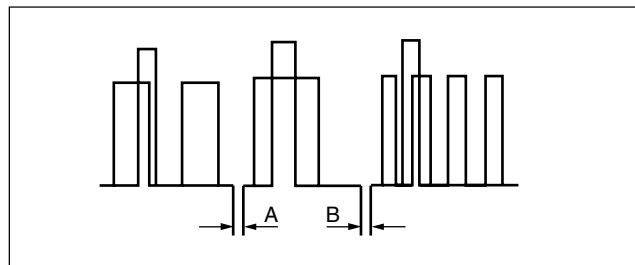

Note

The control method of the sequential mode depends on the waveform monitor used. If required, change the polarity of the control from the setting of switch S411 (SEQ) on the AT-167S board.

If adjustment is not possible even after the polarity is changed, perform the adjustment on the waveform monitor side.

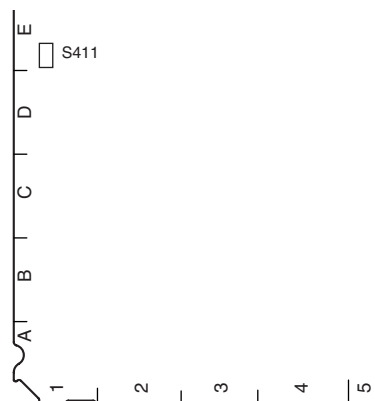

AT-167S board (A side)


1. Press the SEQ button of the WAVEFORM MONITOR buttons (or MONITOR SELECT buttons) of the MSU-900/950, RCP-750/751, etc.
2. Adjust the position of the signal to be displayed using control RV301 (STAIR STEP POSITION) on the EN-159A/159B board.
3. Use control RV302 (STAIR STEP LEVEL) on the EN-159A/159B board so that the intervals of signals A and B to be displayed are almost equal.

2-5-6. Adjusting the Level of Signals for Picture Monitor

The video output signal can be checked on the waveform or vector monitor connected to the PIX OUT connector. Use the color bars to adjust the level of the PIX output signal.

In addition, in the system with the MSU-900/950, CNU-700 or VCS-700, the video signal of HDCU3300 can be checked on the waveform or vector monitor connected to the VCS-700.

How to adjust on the EN-159A/159B board (HKCU1001/1003) of the unit

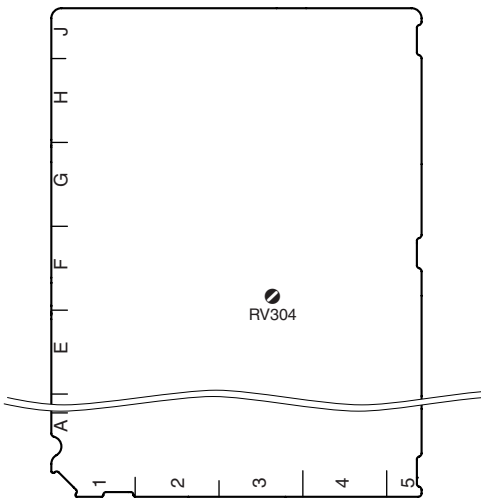


EN-159A/159B board (A side)

1. Press the BARS button of the MSU-900/950, RCP-750/751, etc., and press the ENC button of the PICTURE MONITOR buttons (or MONITOR SELECT buttons) to display the color bars on the waveform monitor.
2. Adjust the color bar signal using control RV304 (PIX GAIN) on the EN-159A/159B board so that it is within the specified level.

Measurement point : PIX OUT connector on the HDCU rear panel

Specification : $A = 100 \pm 1$ IRE [for NTSC]
 $A = 700 \pm 7$ mV p-p [for PAL]

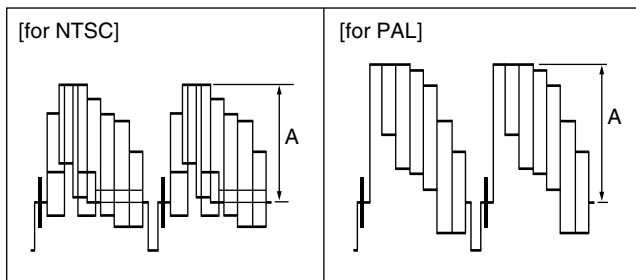


How to adjust using the VCS-700

In the system with the MSU-900/950, CNU-700 or VCS-700, the video output signal of the unit can be checked on the waveform or vector monitor connected to the PIX A OUTPUT and PIX OUTPUT connectors of the VCS-700. Connect the PIX OUT connector of the VDA-64A/64B board to the PIX 1 connector of the VCS-700. Then perform adjustment using the color bars signal.

1. Press the BARS button of the MSU-900/950, RCP-750/751, etc., or press the ENC button of the WAVEFORM MONITOR buttons (or MONITOR SELECT buttons) to display the color bars on the waveform or vector monitor.
2. Adjust the color bars signal using the PIX 1 LEVEL and PIX 1 CHROMA controls on the VCS-700 so that it is within the specified level.

Measurement point : PIX OUT connector on the VCS-700


Specification : $A = 100 \pm 1$ IRE [for NTSC]
 $A = 700 \pm 7$ mV p-p [for PAL]
 (PIX 1 LEVEL control)

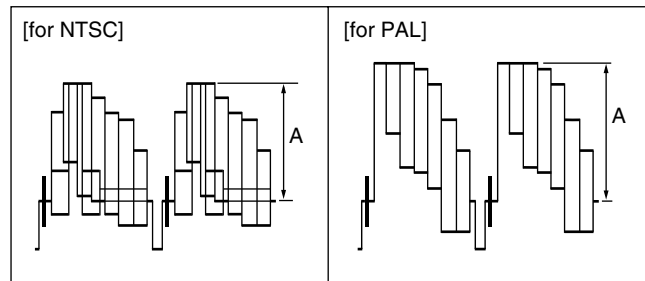


Each luminescent spot on the vector monitor must be within the "田" range.

(PIX 1 CHROMA control)

[for NTSC]

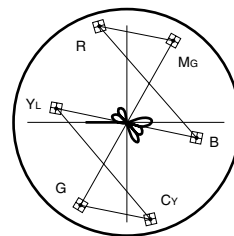

[for PAL]

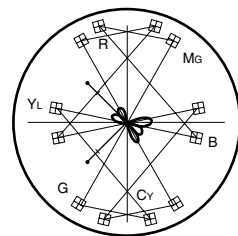

2-5-7. Setting the RET Input


Set the format of the return signal to be input to the RET1 to RET4 connectors on the rear panel of the HDCU3300. Configure the setting using RETURN FORMAT on page "S05" of the maintenance menu in MSU-900/950 or the system menu of the HDCU3300.

Section 3

Menu Settings

3-1. Menu Operation


3-1-1. When version of the software prior to V1.10

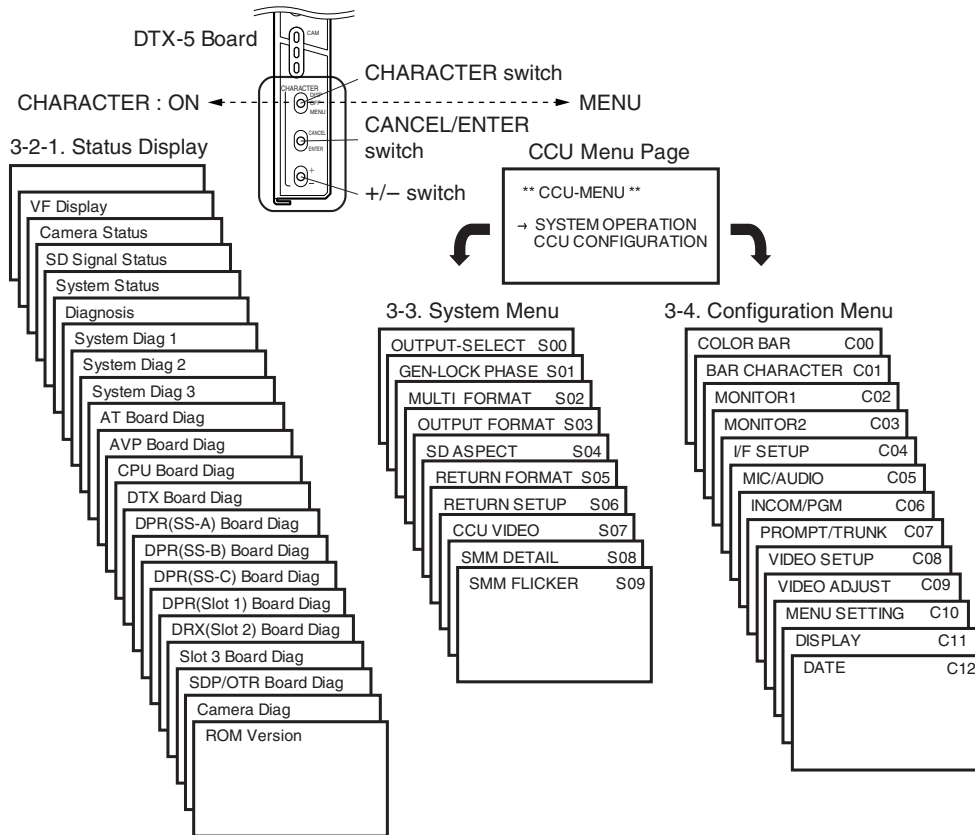

- To operate the menu of CCU, open the front panel of HDCU3300, and use the CHARACTER switch, CANCEL/ENTER switch, and +/- switch on the DTX-5 board.
- Pressing the CHARACTER switch upward displays the "status display menu" of CCU. Pressing the +/- switch upward (+) or downward (-) changes the pages and another screen is displayed. The page number zero is a blank page with no character.
- Pressing the CHARACTER switch downward displays CCU-MENU. CCU-MENU consists of the "system menu" and the "configuration menu".
When the +/- switch is pressed upward (+) or downward (-) on the CCU-MENU screen, "→" on the screen moves. Place "→" beside the desired item, and press the CANCEL/ENTER switch downward (ENTER) to move to the menu you want to select.
To change each item on the CCU-MENU, select the page to be changed, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the selected page.
Use the +/- switch to place "→" beside the item you want to change, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the item.
Use the +/- switch to configure the setting of the item that has "?" beside it, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the setting.
- To complete the "status display" and the CCU-MENU operation, set the CHARACTER switch to OFF.

3-1-2. When software V1.10 or later version is used without the system connection mode via Ethernet set


Setting switch S407 (TEST-SW5) on the AT-167S board to OFF

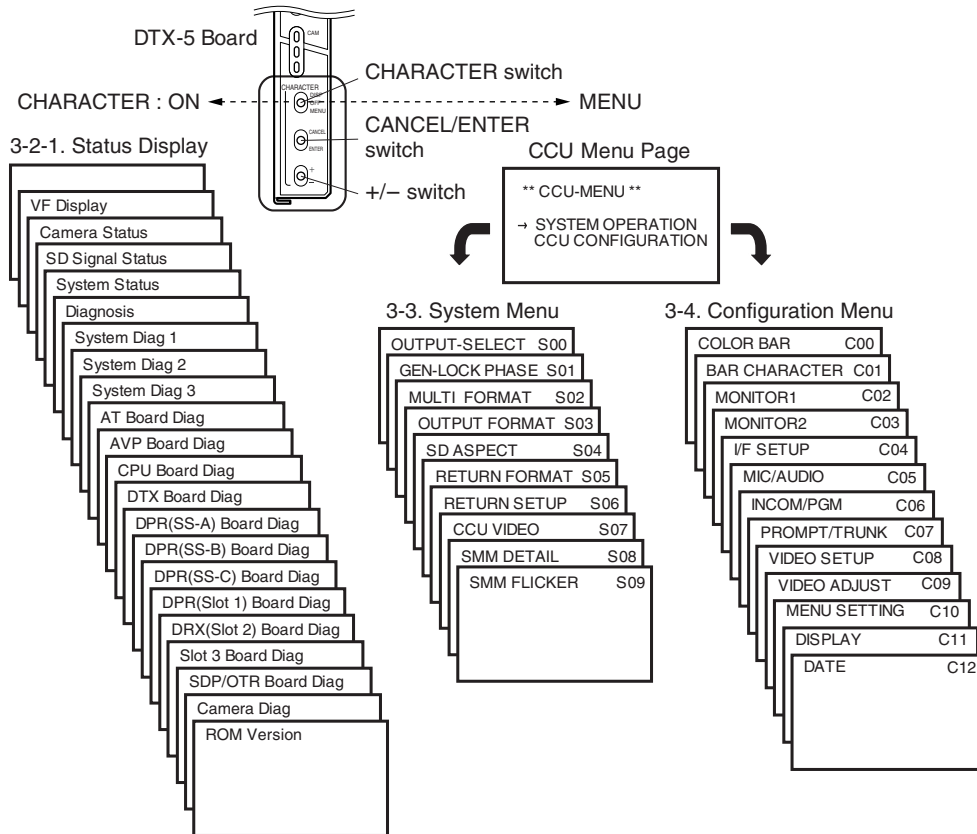

1. To operate the menu of CCU, open the front panel of HDCU3300, and use the CHARACTER switch, CANCEL/ENTER switch, and +/- switch on the DTX-5 board.
2. Pressing the CHARACTER switch upward displays the “status display menu” of CCU.
Pressing the +/- switch upward (+) or downward (–) changes the pages and another screen is displayed. The page number zero is a blank page with no character.
3. Pressing the CHARACTER switch downward displays CCU-MENU. CCU-MENU consists of the “system menu” and the “configuration menu”.
When the +/- switch is pressed upward (+) or downward (–) on the CCU-MENU screen, “→” on the screen moves. Place “→” beside the desired item, and press the CANCEL/ENTER switch downward (ENTER) to move to the menu you want to select.
To change each item on the CCU-MENU, select the page to be changed, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the selected page.
Use the +/- switch to place “→” beside the item you want to change, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the item.
Use the +/- switch to configure the setting of the item that has “?” beside it, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the setting.
4. To complete the “status display” and the CCU-MENU operation, set the CHARACTER switch to OFF.

3-1-3. When software V1.10 or later version is used with the system connection mode via Ethernet set

Setting switch S407 (TEST-SW5) on the AT-167S board to ON

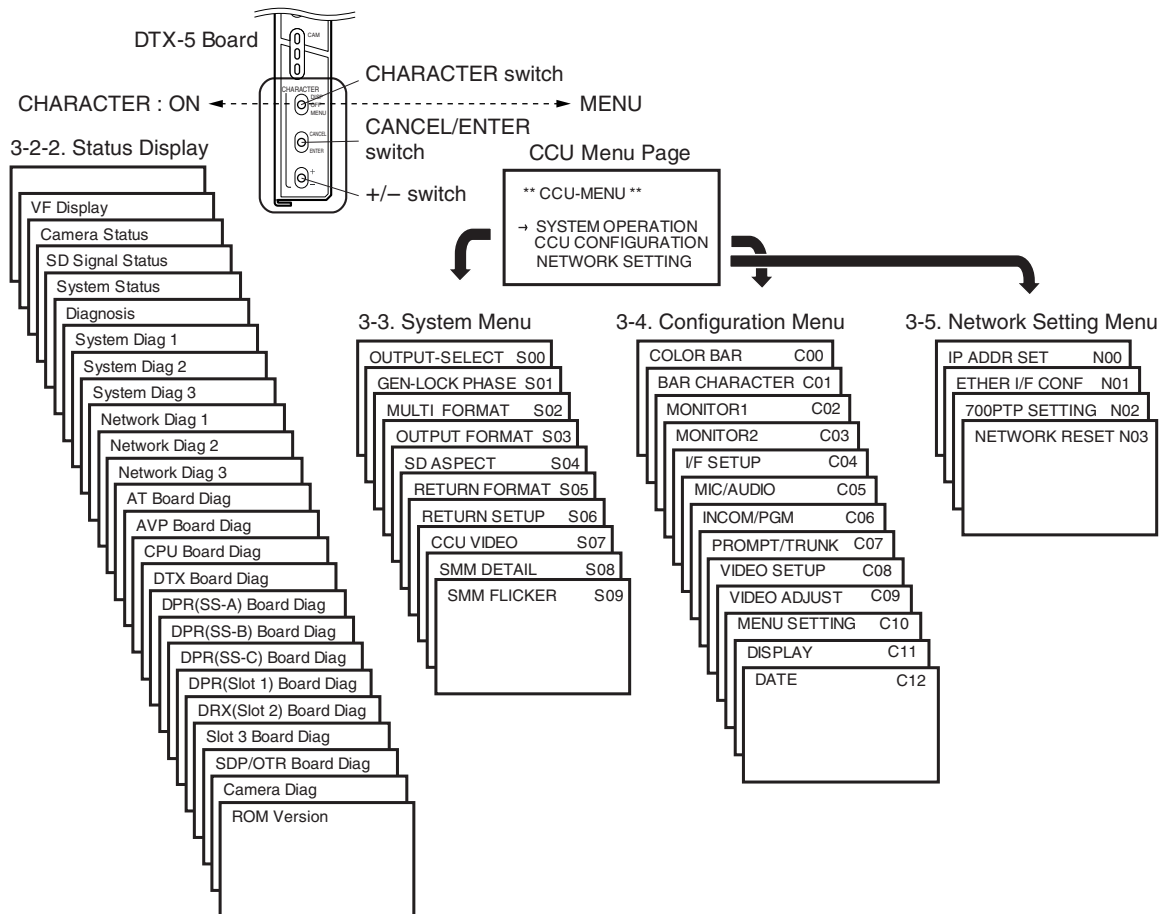

1. To operate the menu of CCU, open the front panel of HDCU3300, and use the CHARACTER switch, CANCEL/ENTER switch, and +/- switch on the DTX-5 board.
2. Pressing the CHARACTER switch upward displays the “status display menu” of CCU. Pressing the +/- switch upward (+) or downward (–) changes the pages and another screen is displayed. The page number zero is a blank page with no character.
3. Pressing the CHARACTER switch downward displays CCU-MENU. CCU-MENU consists of the “system menu”, the “configuration menu” and the “network setting menu”.

When the +/- switch is pressed upward (+) or downward (–) on the CCU-MENU screen, “→” on the screen moves. Place “→” beside the desired item, and press the CANCEL/ENTER switch downward (ENTER) to move to the menu you want to select.

To change each item on the CCU-MENU, select the page to be changed, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the selected page.

Use the +/- switch to place “→” beside the item you want to change, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the item.






Use the +/- switch to configure the setting of the item that has “?” beside it, and press the CANCEL/ENTER switch downward (ENTER) once to confirm the setting.

4. To complete the “status display” and the CCU-MENU operation, set the CHARACTER switch to OFF.

3-2. Status Display

3-2-1. When software prior to V1.10 or V1.10 and later version is used without the system connection mode via Ethernet set

Setting switch S407 (TEST-SW5) on the AT-167S board to OFF

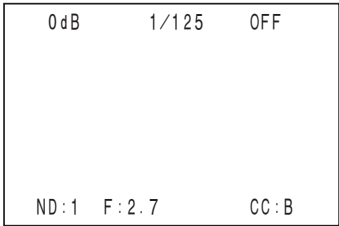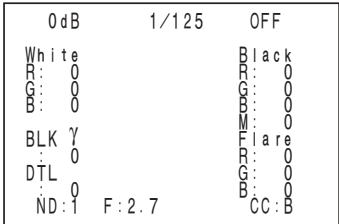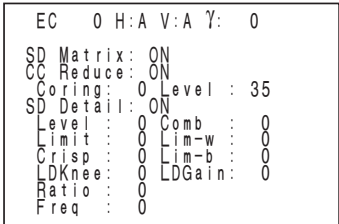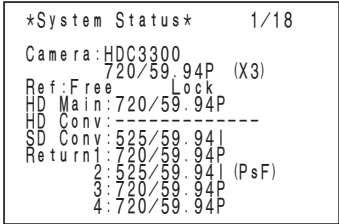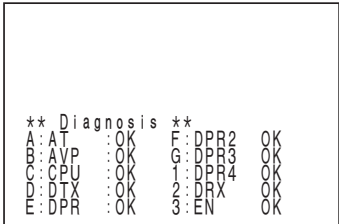Page	Menu / Menu Image	Item	Description
1	VF Display 	MASTER GAIN EVS ON/OFF SHUTTER SETTING SHUTTER ON/OFF ND FILTER IRIS EXTENDER CC FILTER	Displays the camera SW status on the viewfinder of the connected camera.
2	Camera Status 	White R/G/B Black R/G/B BLK γ DTL Flare R/G/B	Displays the white balance, black balance, gamma, DTL, and flare status for the camera in addition to the information displayed above for VF Display.
3	SD Signal Status 	SD MATRIX CC Reduce SD Detail	Displays the SD signal status for CCU.
4	System Status 	CHU Model Name Format Ref Condition HD/SD out Format Return Setting	Displays the model name and format settings for the connected camera, the output format settings from the CCU, the external synchronization settings, and the Return signal format status.
5	Diagnosis 		Displays the names of the boards inserted into the front card slot and the results of the automatic diagnostics for those boards.

Page	Menu / Menu Image	Item	Description
6	System Diag 1	Optical Condition CAMERA CCU Fan Power Timer CCU POWER Serial No.	Displays the levels of received light from the optical signals of the camera and HDCU, the status of the power unit, and the serial number.
	<pre> *System Diag 1/3* 3/18 Optical Condition CAMERA OK CCU OK Fan Power OK Timer 56H CCU Power AC OK SerialNo 00002002 </pre>		
7	System Diag 2	CAMERA Cable Data Power RCP/CNU Cable Data Power	Displays the communication status and the power on/off status between the HDCU and the camera, and between the HDCU and the unit connected to the remote connector of the HDCU.
	<pre> *System Diag 2/3* 4/18 CAMERA Cable Connect Data OK Power OK RCP/CNU Cable Connect Data OK Power OK </pre>		
8	System Diag 3	Intercom CCU setting CAMERA Setting CHU MIC Gain Setting	Displays the setting of the intercom and camera microphone.
	<pre> *System Diag 3/3* 5/18 Intercom CCU Private CAMERA CH1 ENG CH2 MIC OFF CH2 PROD CH2 MIC OFF CHU MIC Gain Local CH1 60dB CH2 60dB </pre>		
9	AT Board Diag	System Frequency CHU Format Reference Line Delay Power Supply PLD Version Mode VIF Power	Displays the PLD Version and the status of the AT board. Displays the status of the power supplied to the VIF board.
	<pre> *AT Diag* 6/18 System Frequency:1.001 CHU Format Remote 720/59.94P (X3) Reference :HD Remote Line Delay :Line (120H) Power Supply:OK PLD Version :1.00 Done Mode :Normal VIF Power :OK </pre>		
10	AVP Board Diag	Front Power PLD Version Mode ADO Power	Displays the PLD Version and the status of the AVP board. Displays the status of the power supplied to the ADO board.
	<pre> *AVP Diag* 7/18 Front Power:OK PLD Version:1.00 Done Mode :Normal ADO Power :OK </pre>		
11	CPU Board Diag	Front Power ROM Version PLD Version Mode Rear Power	Displays the ROM Version, the PLD Version, and the status of the CPU board. Displays the status of the power supplied to the SDI board.
	<pre> *CPU Diag* 8/18 Front Power:OK ROM Version:1.08 PLD Version:1.00 Done Mode :Normal Rear:SDI Power:OK </pre>		

Page	Menu / Menu Image	Item	Description
12	DTX Board Diag *DTX Diag* 9/18 Return Setting: Remote Return Delay : F/S Active Ret CH : 2CH Front Power: OK PLD Version: 1.01 Done Mode : Normal Rear: SDI Power: OK	Return Setting Return Delay Active Return CH Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DTX board. Displays the status of the power supplied to the SDI board.
13	DPR (SS-A) Board Diag *DPR (SS-A) Diag* 10/18 HD CB: MF-SMPTE (100% 0) Front Power: OK PLD Version: 1.00 Done Mode : Normal Rear: HIF Power: OK	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (first) DPR-A board. Displays the status of the power supplied to the (first) HIF board.
14	DPR (SS-B) Board Diag *DPR (SS-B) Diag* 11/18 HD CB: MF-SMPTE (100% 0) Front Power: OK PLD Version: 1.00 Done Mode : Normal Rear: HIF Power: OK	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (second) DPR-A board. Displays the status of the power supplied to the (second) HIF board.
15	DPR (SS-C) Board Diag *DPR (SS-C) Diag* 12/18 HD CB: MF-SMPTE (100% 0) Front Power: OK PLD Version: 1.00 Done Mode : Normal Rear: HIF Power: OK	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (third) DPR-A board. Displays the status of the power supplied to the (third) HIF board.
16	DPR (Slot 1) Board Diag *DPR (Slot1) Diag* 13/18 HD CB: Disable Front Power: OK PLD Version: 1.00 Done Mode : Normal Rear: HIF Power: OK	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DPR-B board. Displays the status of the power supplied to the HIF board.
17	DRX (Slot 2) Board Diag *DRX (Slot2) Diag* 14/18 HD CB: MF-SMPTE (100% 0) SD CB: SMPTE Front Power : OK PLD Status PRE Version : 1.00 POST Version : 1.00 Config Done : Done Mode : Normal Rear: HIF Power: OK	HD CB SD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DRX board. Displays the status of the power supplied to the HIF board.







Page	Menu / Menu Image	Item	Description
18	Slot 3 Board Diag *EN-A (Slot3) Diag* 15/18 Front Power:OK PLD Version:1.00 Done Mode :Normal Rear:VDA-A Power:OK	Front Power PLD Version Mode Rear Power	Displays the status of the option board attached to the Slot 3 (front/rear). The display content varies depending on the board installed in the optional slot.
19	SDP/OTR Board Diag *SDP/OTR Diag* 16/18 SDP-PLD Status RX-PLD Version:1.00 TX-PLD Version:1.00 Config Done :Done OTR-PLD Status PLD Version :1.00 Config Done :Done SDP Mode :Normal SDP Power :OK	PLD Version Mode Power	Displays the PLD Version and the status of the SDP/OTR board.
20	Camera Diag *CAMERA Diag* 17/18 ALL BOARD OK	(Camera Board Diag Display)	Displays the results of the automatic diagnostics for each board of the camera. "ALL BOARD OK" is displayed if there are no abnormalities in the automatic diagnostics.
21	ROM Version *ROM Version* 18/18 CAM HDC3300 06.07.26 CCU HDCU3300 06.07.25 R-PNL CNU-700 06.07.15 3.40	CAM Version CCU Version R-PNL Version	ROM version information for the connected camera. ROM version information for AT-167S board in the main unit. Information about the equipment connected to the rear panel port (RCP/CNU).






3-2-2. When software V1.10 or later version is used with the system connection mode via Ethernet set



Setting switch S407 (TEST-SW5) on the AT-167S board to ON

Page	Menu / Menu Image	Item	Description
1	VF Display 	MASTER GAIN EVS ON/OFF SHUTTER SETTING SHUTTER ON/OFF ND FILTER IRIS EXTENDER CC FILTER	Displays the camera SW status on the viewfinder of the connected camera.
2	Camera Status 	White R/G/B Black R/G/B BLK γ DTL Flare R/G/B	Displays the white balance, black balance, gamma, DTL, and flare status for the camera in addition to the information displayed above for VF Display.
3	SD Signal Status 	SD MATRIX CC Reduce SD Detail	Displays the SD signal status for CCU.
4	System Status 	CHU Model Name Format Ref Condition HD/SD out Format Return Setting	Displays the model name and format settings for the connected camera, the output format settings from the CCU, the external synchronization settings, and the Return signal format status.
5	Diagnosis 		Displays the names of the boards inserted into the front card slot and the results of the automatic diagnostics for those boards.

Page	Menu / Menu Image	Item	Description
6	System Diag 1 *System Diag 1/3* 3/21 Optical Condition CAMERA OK CCU OK Fan Power OK Timer 56H CCU Power AC OK SerialNo 00002002	Optical Condition CAMERA CCU Fan Power Timer CCU POWER Serial No.	Displays the levels of received light from the optical signals of the camera and HDCU, the status of the power unit, and the serial number.
7	System Diag 2 *System Diag 2/3* 4/21 CAMERA Cable Connect Data OK Power OK RCP/CNU Cable Connect Data OK Power OK	CAMERA Cable Data Power RCP/CNU Cable Data Power	Displays the communication status and the power on/off status between the HDCU and the camera, and between the HDCU and the unit connected to the remote connector of the HDCU.
8	System Diag 3 *System Diag 3/3* 5/21 Intercom CCU Private CAMERA CH1 ENG CH2 MIC OFF PROD MIC OFF CHU MIC Gain Local CH1 60dB CH2 60dB	Intercom CCU setting CAMERA Setting CHU MIC Gain Setting	Displays the setting of the intercom and camera microphone.
9	Network Diag 1 *Network Diag 1/3* 6/21 MacAddress 00014A-xxxxxx Auto Negotiation: ON Auto Mdx : ON Connect Speed : 100M Duplex Mode : FULL MDI/MDIX Select : MDIX Link Status : OK	MacAddress Auto Negotiation Auto Mdx Connect Speed Duplex Mode MDI/MDIX Select Link Status	MAC address of this unit. Sets auto negotiation. Sets auto MDIX. Sets the connection speed. Sets the duplex mode. Sets MDI/MDIX. Ethernet connection status.
10	Network Diag 2 *Network Diag 2/3* 7/21 NS Mode : MCS MCS Mode : CLIENT CCU No. : (1) Master IP Address 192.168. 0.100	NS Mode MCS Mode CCU No. Master IP Address	Sets the remote connector and the Ethernet connector. Sets the superior-subordinate relationship for the Ethernet control. Sets the CCU number. IP address of the master device.
11	Network Diag 3 *Network Diag 3/3* 8/21 IP Addr :192.168. 0.101 NetMask :255.255.255. 0 Def GW :192.168. 0.254	IP Addr NetMask Def GW	Sets the IP address. Sets the netmask. Sets the default gateway.

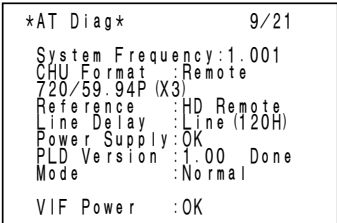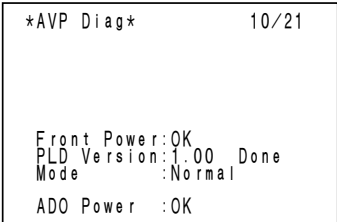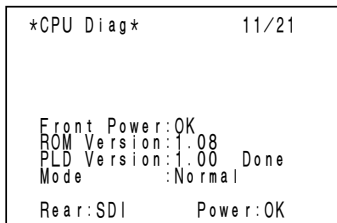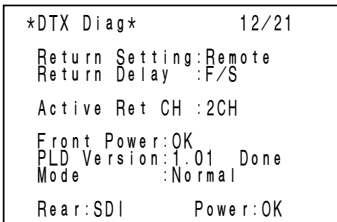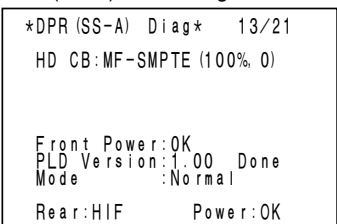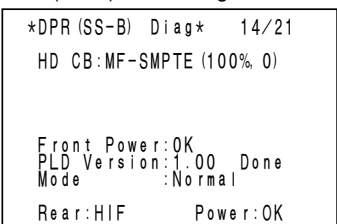Page	Menu / Menu Image	Item	Description
12	AT Board Diag 	System Frequency CHU Format Reference Line Delay Power Supply PLD Version Mode VIF Power	Displays the PLD Version and the status of the AT board. Displays the status of the power supplied to the VIF board.
13	AVP Board Diag 	Front Power PLD Version Mode ADO Power	Displays the PLD Version and the status of the AVP board. Displays the status of the power supplied to the ADO board.
14	CPU Board Diag 	Front Power ROM Version PLD Version Mode Rear Power	Displays the ROM Version, the PLD Version, and the status of the CPU board. Displays the status of the power supplied to the SDI board.
15	DTX Board Diag 	Return Setting Return Delay Active Return CH Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DTX board. Displays the status of the power supplied to the SDI board.
16	DPR (SS-A) Board Diag 	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (first) DPR-A board. Displays the status of the power supplied to the (first) HIF board.
17	DPR (SS-B) Board Diag 	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (second) DPR-A board. Displays the status of the power supplied to the (second) HIF board.

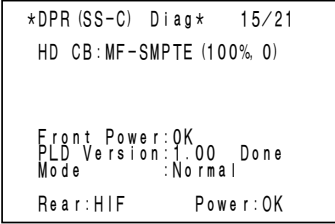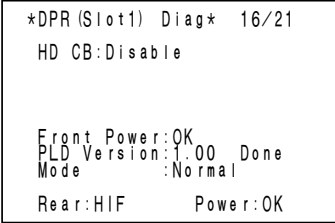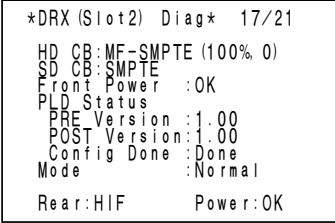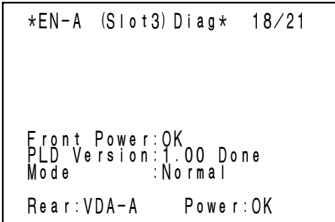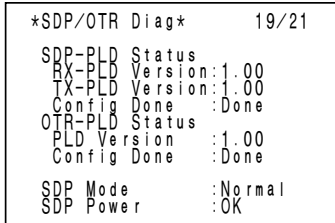Page	Menu / Menu Image	Item	Description
18	DPR (SS-C) Board Diag 	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the (third) DPR-A board. Displays the status of the power supplied to the (third) HIF board.
19	DPR (Slot 1) Board Diag 	HD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DPR-B board. Displays the status of the power supplied to the HIF board.
20	DRX (Slot 2) Board Diag 	HD CB SD CB Front Power PLD Version Mode Rear Power	Displays the PLD Version and the status of the DRX board. Displays the status of the power supplied to the HIF board.
21	Slot 3 Board Diag 	Front Power PLD Version Mode Rear Power	Displays the status of the option board attached to the Slot 3 (front/rear). The display content varies depending on the board installed in the optional slot.
22	SDP/OTR Board Diag 	PLD Version Mode Power	Displays the PLD Version and the status of the SDP/OTR board.

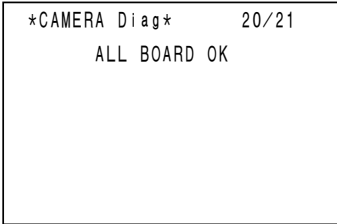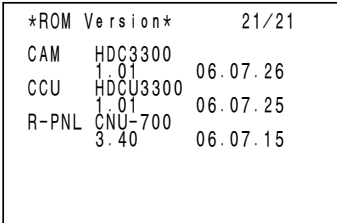Page	Menu / Menu Image	Item	Description
23	Camera Diag 	(Camera Board Diag Display)	Displays the results of the automatic diagnostics for each board of the camera. “ALL BOARD OK” is displayed if there are no abnormalities in the automatic diagnostics.
24	ROM Version 	CAM Version CCU Version R-PNL Version	ROM version information for the connected camera. ROM version information for AT-167S board in the main unit. Information about the equipment connected to the rear panel port (RCP/CNU).

3-3. System Menu

Page	Menu / Menu Image	Item	Setting	Description
S00	OUTPUT-SELECT			
	<pre> <OUTPUT SELECT> ?S00 TOP OUTPUT: *CAMERA BAR TEST1 TEST2 PIX: *ENC R G B R&G G&B R&B RGB WFM: *ENC R G B SEQ R&G G&B R&B RGB </pre>	OUTPUT	*CAMERA BAR TEST1 TEST2	Select the output signal. * Signal display is output.
		PIX	*ENC R G B R&G G&B R&B RGB	Select the output signal from PIX terminal. * Signal display is output.
		WFM	*ENC R G B SEQ R&G G&B R&B RGB	Select the output signal from WFM terminal. * Signal display is output.
S01	GEN-LOCK PHASE			
	<pre> <GEN-LOCK PHASE> S01 TOP CONTROL (REMOTE) REFERENCE (NONE) GEN-LOCK: HD (OK) H-STEP : 0.00µsec COARSE : 0 SC-PHASE: 0 SUB-REF : (NONE) UNKNOWN </pre>	CONTROL	(LOCAL/ REMOTE)	Displays Local/Remote status for Gen-Lock Control.
		REFERENCE	(EXT-in/ NONE)	Displays the sub-reference signal input detection.
		GEN-LOCK	HD/ SD (OK/NG)	Sets the format of the reference signal. (When the AT board SW setting is REM) Displays the Ref Lock status. (OK: Locked, NG: Unlocked)
		H-STEP	−3.01 to 0.00 to +3.45 µsec	Adjusts the lock phase: H-step
		COARSE	−99 to 0 to +99	Adjusts the lock phase: H-step fine adjustment
		SC-PHASE	−99 to 0 to +99	Adjusts the lock phase: SC-phase
		SUB-REF	(EXT-in/ NONE) (UNKNOWN/ FrameGate/HD/SD)	Displays the sub-reference signal input detection. Displays the format of the sub-reference signal.

: The settings in the box are default values.

Page	Menu / Menu Image	Item	Setting	Description
S02	MULTI FORMAT			
	<MULTI FORMAT> S02 TOP CONTROL (REMOTE) FREQUENCY HD: 1001 SD: 525 (NTSC) CAMERA FORMAT : 720/59.94P (X3)	CONTROL	(LOCAL/REMOTE)	Displays Local/Remote status for the format setting.
		FREQUENCY HD	1001/1000	Sets SYSTEM frequency. (Set 1001 when the SD format is NTSC, and 1000 when PAL.)
		SD	525/625	Displays SD format.
		CAMERA FORMAT	CAMERA Format (*1)	Selects the camera format.
S03	OUTPUT FORMAT			
	<OUTPUT FORMAT> ?S03 TOP SLOT-NO 1 : 720/59.94P 2-1&2 : 525/59.94P 3&4 : M525/59.94P 3 : NTSC	SLOT-NO 1 2-1&2 3&4 3	OUTPUT Format (*2) OUTPUT Format (*2) OUTPUT Format (*2) OUTPUT Format (*2)	Sets the format of the output signal from each output terminal SLOT.

: The settings in the box are default values.

(*1) CAMERA Format

The following formats can be selected according to the system frequency setting.

When SYSTEM FREQUENCY=1001

1080/59.94i

720/59.94P

When SYSTEM FREQUENCY=1000

1080/50i

720/50P

(*2)

OUTPUT Format (The following settings are possible according to the camera format. The setting content varies depending on the board installed in the optional slot.)

CAMERA Format

Output terminal	In 1080/59.94i	In 720/59.94P	In 1080/50i	In 720/50P
1	1080/59.94i	720/59.94P	1080/50i	720/50P
2-1&2	1080/59.94i	720/59.94P	1080/50i	720/50P
3&4	M1080/59.94i	M720/59.94P	M1080/50i	M720/50P
3	NTSC	NTSC	PAL	PAL

For the output format that starts with an "M", the signal with a character of HDCU is output.

Page	Menu / Menu Image	Item	Setting	Description
S04	SD ASPECT			
	<SD ASPECT> ?S04 TOP SD ASPECT : EDGE CROP SD LB SEL : 16:9 H-POSITION : 0 CENTER : ON V-POSITION : (0) CENTER : (ON) H-INTERP : A V-INTERP : A	SD ASPECT	SQUEEZE	Sets ASPECT for the SD output of the main unit.
			EDGE CROP	
			LETTER BOX	
		SD LB SEL	16:9/15:9/14:9/13:9	Sets edge cropping when LETTER BOX is selected in the SD output.
		H-POSITION CENTER	-99 to 0 to +99 OFF/ON	Sets the horizontal crop position for LB. Turns ON/OFF centering for the horizontal crop position.
		V-POSITION CENTER	-99 to 0 to +99 OFF/ON	Sets the vertical crop position for LB. Turns ON/OFF centering for the vertical crop position.
		H-INTERP	A/B/C/D/E	Sets the horizontal filter for the down converter.
		V-INTERP	A/B/C/D/E	Sets the vertical filter for the down converter.
S05	RETURN FORMAT			
	<RETURN FORMAT> ?S05 TOP RET1: 720/59.94P RET2: 525/59.94I (PsF) EDGE CROP 16:9 RET3: 720/59.94P RET4: 720/59.94P LINK TO MAIN : MANUAL	RET1	RET FORMAT (*3) ASPECT/LB SEL	Sets the input format for the return signal.
		RET2	RET FORMAT (*3) ASPECT/LB SEL	Sets Format/Aspect/Letter Box mode.
		RET3	RET FORMAT (*3) ASPECT/LB SEL	
		RET4	RET FORMAT (*3) ASPECT/LB SEL	
		LINK TO MAIN	MANUAL/AUTO	Selects the mode for how the main signal links with the return signal.

☐ : The settings in the box are default values.

(*3)
RET Format
In SYSTEM FREQUENCY=1001
720/59.94P
525/59.94I (PsF)
NTSC

In SYSTEM FREQUENCY=1000
720/50P
625/50I (PsF)
PAL

ASPECT
EDGE CROP
LETTER BOX

LB SEL
15:9
14:9
13:9

3-4. Configuration Menu

Page	Menu / Menu Image	Item	Setting	Description
000	COLOR BAR			
	<COLOR BAR> ?C00 TOP HD-BAR ENABLE:SSM-OUT SEL MF-SMPTE (100%, Q) MF-CB : MODIFY SLOPE : WIDE SD-BAR : SMPTE : ENB BAR-CHARA:OFF GRAY: ON	HD-BAR		Sets the color bar for the HD output.
		ENABLE	SSM-OUT SLOT1-3 SLOT2-3 ALL (VF)	Selects the slot to which the color bar is output. SSM-OUT : SS-A/B/C and SLOT2 to 3. SLOT1-3 : SLOT1 to 3. SLOT2-3 : SLOT2 to 3. ALL (VF) : SS-A/B/C and SLOT1 to 3.
		SEL	HD-BARS FORMAT (*4)	Sets the type of color bar signal.
		MF-CB	MODIFY/EVEN	Selects MF-CB width.
		SLOPE	WIDE/NARROW	Sets the slope (width) of the color bar signal.
		SD-BAR	SD-BARS FORMAT (*5) ENB/DSB	Sets the color bar for the SD output. ENB : Outputs CB for SD. DSB : Changes HD-CB to SD signal and outputs it.
		BAR-CHARA	OFF/ON	Turns ON/OFF the BARS CHARACTER function that superimposes characters on the color bar signal.
		GRAY	OFF/ON	Turns ON/OFF the GRAY function. ON : Outputs a gray screen when there is a signal error, or when the power to the camera is off. OFF : Outputs the CB signal.

 : The settings in the box are default values.

(*4) HD-BARS FORMAT


- BAR 16:9 (100%)
- BAR 16:9 (75%)
- SMPTE 16:9 (BLACK)
- SMPTE 16:9 (-I/Q)
- BAR 4:3 (100%)
- BAR 4:3 (75%)
- SMPTE 4:3 (BLACK)
- SMPTE 4:3 (-I/Q)
- MF-ARIB (75%)
- MF-ARIB (100%)
- MF-ARIB (+I)
- MF-SMPTE (-I, Q)
- MF-SMPTE (75%, Q)
- MF-SMPTE (100%, Q)
- MF-SMPTE (+I, Q)
- HD-CUSTOM
- SDI CHECK FIELD
- Y -RAMP
- Y/C-RAMP
- HD-CUSTOM2

(*5) SD-BARS FORMAT

- SMPTE
- EIA
- FULL
- 95%
- NTSC100%
- Y/C-RAMP
- Y -RAMP


- *1: If you press ENTER here, the edited content is canceled, and the edit mode is also canceled.
- *2: If you press DOWN, the cursor returns to ESC.

- (2) Press DOWN to decrement the data edit position cursor to the left.

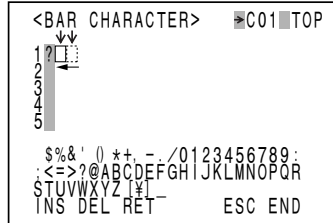

- *The cursor can no longer be decremented if it comes to the leftmost position (initial position).

3. Press ENTER in the edit mode to enter the character input mode.

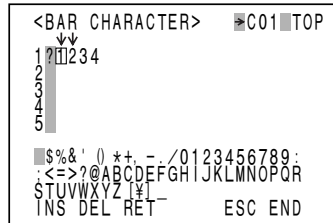

- *The cursor appears on the software keyboard.


Switch functions in the character input mode

- ENTER
Confirms the character. (Character input mode -> edit mode)
- CANCEL
Cancels the character input mode. (Same as RET. The selected character is not reflected.)
- UP
Increments the cursor on the software keyboard. (Moves to the right.)
- DOWN
Decrements the cursor on the software keyboard. (Moves to the left.)


Special function on the software keyboard
Move the cursor on the corresponding function, and press ENTER.

- INS
Inserts a space in the place where the data edit cursor is located. (The mode stays the same.)
- DEL
Deletes the character in the place where the data edit cursor is located, and the following characters are left-aligned. (The mode stays the same.)
- RET
Cancels the character input mode. (Same as CANCEL. The selected character is not reflected.)


- ➔ (1) Press UP to increment the cursor to the right.

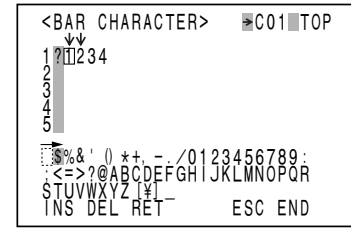


- a. INS operation

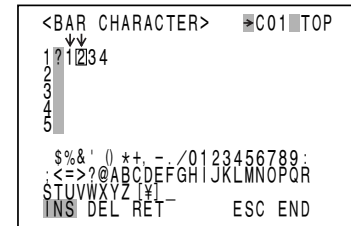


When ENTER is pressed

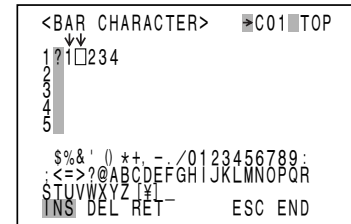


- b. DEL operation

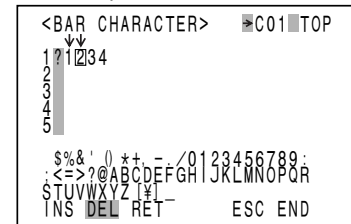

When ENTER is pressed

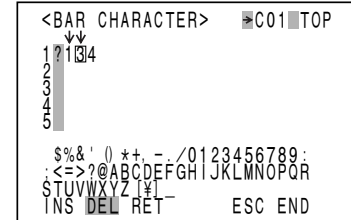

- (2) Press DOWN to decrement the cursor to the left.

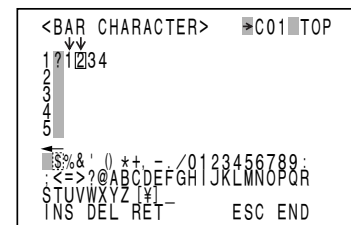

Note

The data entered in this page can be checked in the CCU configuration menu. On the <C00> COLOR BAR page, set "BAR-CHARA" to "ON".

Page	Menu / Menu Image	Item	Setting	Description
C02	MONITOR1			
	<MONITOR 1> ?C02 TOP CHARACTER WHITE-LEVEL : 71.5% BLACK-LEVEL : 0.0% PIX CHARACTER WHITE-LEVEL : 75.0% BLACK-LEVEL : 0.0%	CHARACTER		
		WHITE-LEVEL	0.0% to 107% 71.5%	Sets white/black level for the character of the MONITOR output.
		BLACK-LEVEL	0.0% to 107% 0.0%	
		PIX CHARACTER		Sets white/black level for the character of the PIX output.
		WHITE-LEVEL	0.0% to 107% 71.5%	Displays only when the analog encoder board (HKCU1001/1003) is attached.
		BLACK-LEVEL	0.0% to 107% 0.0%	
C03	MONITOR2			
	<MONITOR 2> ?C03 TOP LEVEL-GATE : OFF Y-LEVEL1 : 49% ~ 61% -12 Y-LEVEL2 : 74% ~ 108% -25 SKIN-GATE : OFF : 0 MODURATION : OFF : 0 MARKER : OFF : VISTA	LEVEL-GATE	OFF /1/2/1&2	Sets the mode for the CCU Y-LEVEL-GATE function.
		Y-LEVEL1	0% to 49% to 64% to 108%	Sets upper and lower levels for Level-Gate 1 detection.
			-99 to -25 to +99	Sets the Zebra levels added to the Level-Gate 1 detection width.
		Y-LEVEL2	0% to 74% to 108% to 108%	Sets upper and lower levels for Level-Gate 2 detection.
			-99 to -25 to +99	Sets the Zebra levels added to the Level-Gate 2 detection width.
		SKIN GATE	OFF /ON	Turns ON/OFF Gate display for SkinTone Detail detection.
			-99 to 0 to +99	Sets SKIN GATE level.
		MODURATION	OFF /ON	Turns ON/OFF the mask function outside the 4:3 frame in the EDGE CROP mode.
			-99 to 0 to +99	Sets the image level of the mask portion.
		MARKER	OFF /ON	Turns ON/OFF the MARKER signal.
			4:3 13:9 14:9 EU VISTA VISTA CINEMA FOLLOW DC	
C04	I/F SETUP			
	<I/F SETUP> ?C04 TOP BOARD FRONT REAR SSM-A: DPR-271A=> HIF-27 SSM-B: DPR-271A=> HIF-27 SSM-C: DPR-271A=> HIF-27 SLOT1: DPR-271B=> HIF-25 SLOT2: DRX-51 => HIF-26 SLOTS: EN-159A => VDA-64A CAMERA VF : NORMAL REAR PREVIEW : MOMENTARY	BOARD	FRONT / REAR	
		SSM-A	BOARD NAME DISPLAY	
		SSM-B	BOARD NAME DISPLAY	Detects and displays the board attached to front/rear of Slots DPR A or Slots 1 to 3.
		SSM-C	BOARD NAME DISPLAY	
		SLOT1	BOARD NAME DISPLAY	
		SLOT2	BOARD NAME DISPLAY	
		SLOT3	BOARD NAME DISPLAY	
		CAMERA VF	NORMAL /C-LINK	Selects the video to repeat to the camera VF.
		REAR PREVIEW	MOMENTARY / TOGGLE	Selects the operation mode of the REAR PREVIEW output.
C05	MIC/AUDIO			
	<MIC/AUDIO> C05 TOP CHU MIC GAIN: (LOCAL) CH1 : 60dB CH2 : 60dB MIC OUT DELAY : 0FS ANALOG OUT : MIC1/2 AES/EBU OUT : MIC1/2	CHU MIC GAIN	(REMOTE/LOCAL)	Displays local/remote for the camera microphone amplifier settings.
		CH1	20/30/40/50/ 60dB	Sets amplifier gain for MIC-1 circuit.
		CH2	20/30/40/50/ 60dB	Sets amplifier gain for MIC-2 circuit.
		MIC OUT DELAY	0 to 3840FS	Sets audio output phase for the camera microphone.
		ANALOG OUT	MIC1/2 /AES/EBU	Selects the MIC OUT ANALOG output.
		AES/EBU OUT	MIC1/2 /AES/EBU	Selects the MIC OUT DIGITAL output.

: The settings in the box are default values.

Page	Menu / Menu Image	Item	Setting	Description
C06	INCOM/PGM			
	<INCOM/PGM> C06 TOP FP-INCOM (MIC ON) (PRIVATE) PGM-MODE : OFF PGM-SEL : MIX PGM1 : 0 PGM2 : 0 SIDE TONE : 0 INCOM-CH : 2CH	FP-INCOM	(MIC ON/OFF/PGM ON) (PROD/ENG/PRIVATE)	Displays the FRONT INCOM MIC SW settings. Displays the FRONT INCOM line settings.
		PGM-MODE	SEP/MIX/[OFF]	Sets the PGM-MODE output.
		PGM-SEL	MIX/[PGM1]/PGM2	Selects the PGM-MODE.
		PGM1	-99 to [0] to +99	Sets PGM1 level.
		PGM2	-99 to [0] to +99	Sets PGM2 level.
		SIDE TONE	-99 to [0] to +99	Sets SIDE TONE level.
		INCOM-CH	1CH/[2CH]	Selects INCOME CHANNEL.
C07	PROMPT/TRUNK			
	<PROMPT/TRUNK> ?C07 TOP PROMPTER : 2CH TRUNK SETTING CH : 2CH IF : 232C	PROMPTER	1CH/[2CH]	Sets line number for Prompter.
		TRUNK SETTING		Sets line for TRUNK.
		CH	1CH/[2CH]	Sets the channel number used.
		IF	[232C]/422A	Sets the communication line mode.
C08	VIDEO SETUP			
	<VIDEO SETUP> ?C08 TOP SETUP : OFF Q FILTER : WD G/Y SYNC : OFF VCS RELAY : ON	SETUP	[OFF]/ON	Turns ON/OFF the SETUP.
		Q FILTER	[WD]/NA	Sets width of Q-Filter. (Only when the EN board is attached)
		G/Y SYNC	OFF/[ON]	Turns ON/OFF Gch-SYNC for the R/G/B component signal. (Only when the EN board is attached)
		VCS RELAY	OFF/[ON]	Sets PIX/WFM terminal output mode. (Only when the EN board is attached)
C08	VIDEO SETUP*2			
	<VIDEO SETUP> ?C08 TOP SETUP : OFF SD BLK CLP : OFF Q FILTER : WD G/Y SYNC : OFF VCS RELAY : ON	SETUP	[OFF]/ON	Turns ON/OFF the SETUP.
		SD BLK CLP	[OFF]/ON	Clips the Y signal of lower than 0% to be supplied from the SD SDI output connector, at 0%
		Q FILTER	[WD]/NA	Sets width of Q-Filter. (Only when the EN board is attached)
		G/Y SYNC	OFF/[ON]	Turns ON/OFF Gch-SYNC for the R/G/B component signal. (Only when the EN board is attached)
		VCS RELAY	OFF/[ON]	Sets PIX/WFM terminal output mode. (Only when the EN board is attached)
09	VIDEO ADJUST*1 (When using EN-159 board)			
	<VIDEO ADJUST> C09 TOP VBS LEVEL : 0 CHROMA : 0 PIX LEVEL : 0 CHROMA : 0 WFM LEVEL : 0 CHROMA : 0	VBS LEVEL	-99 to [0] to +99	Adjusts the VBS output video level.
		CHROMA	-99 to [0] to +99	
		PIX LEVEL	-99 to [0] to +99	Adjusts the PIX output video level.
		CHROMA	-99 to [0] to +99	
		WFM LEVEL	-99 to [0] to +99	Adjusts the WFM output video level
		CHROMA	-99 to [0] to +99	

[] : The settings in the box are default values.

*1 : VIDEO ADJUST menu appears when the EN-159 board is installed.

*2 : This function has been added to software V1.20 and the later versions.

Page	Menu / Menu Image	Item	Setting	Description
C10	MENU SETTING* ³			
	<MENU SETTING> ?C10 TOP RESUME : ON ALARM JUMP : OFF RE DIRECTION : CATEGORY : STD PAGE : STD ITEM : STD DATA : STD	RESUME	OFF/ ☐ ON	Turns ON/OFF the function that displays the page previously opened when you open the menu.
		ALARM JUMP	☐ OFF/ON	Turns ON/OFF the function that displays pages related to current errors when you open the menu.
		RE DIRECTION CATEGORY	☐ STD/RVS	Sets the SW operating direction of the menu settings SW.
		PAGE	☐ STD/RVS	
		ITEM	☐ STD/RVS	
		DATA	☐ STD/RVS	
C11	DISPLAY* ⁴			
	<DISPLAY> C11 TOP MESSAGE : ALL MASTER GAIN : ON EVS/SHUTTER : ON ND FILTER : ON CC FILTER : ON IRIS : ON EXTENDER : ON	MESSAGE	☐ ALL/OFF/WARNING	Turns ON/OFF SW settings and camera messages displayed on the VF display screen.
		MASTER GAIN	OFF/ ☐ ON	
		EVS/SHUTTER	OFF/ ☐ ON	
		ND FILTER	OFF/ ☐ ON	
		CC FILTER	OFF/ ☐ ON	
		IRIS	OFF/ ☐ ON	
		EXTENDER	OFF/ ☐ ON	
C12	DATE* ⁵			
	<DATE> ?C12 TOP DATE/TIME 2006/07/26 11:45	DATE/TIME	2006/07/26 11:45	Sets the clock (date, time) for the unit.

☐ : The settings in the box are default values.

*3 : Menu "C10" changes to "C09" when the EN-159 board is not installed.

*4 : Menu "C11" changes to "C10" when the EN-159 board is not installed.

*5 : Menu "C12" changes to "C11" when the EN-159 board is not installed.

3-5. Network Setting Menu

Page	Menu / Menu Image	Item	Setting	Description
N00	IP ADDR SET			
	<IP ADDR SET> ?N00 TOP HOST IP ADDRESS 192.168. 0.101 SUB NET MASK 255.255.255. 0 DEFAULT GATEWAY 192.168. 0.254 SET	HOST IP ADDRESS	0 to 255	Sets the host IP address.
		SUB NET MASK	0 to 255	Sets the subnet mask.
		DEFAULT GATEWAY	0 to 255	Sets the default gateway.
		SET		Reflects all the above settings.
N01	ETHER I/F CONF			
	<ETHER I/F CONF>?N01 TOP AUTO NEGOTIATION : ON AUTO MDIX : ON CONNECT CONFIGURATION CONNECT SPEED : 100M DUPLEX MODE : FULL MDI/MDIX SELECT : MDT LINK CONDITION : (UP) SET	AUTO NEGOTIATION	ON /OFF	Sets auto negotiation.
		AUTO MDIX	ON /OFF	Sets auto MDIX.
		CONNECT SPEED	100M /10M	Sets the connection speed.
		DUPLEX MODE	FULL /HALF	Sets the communication method.
		MDI/MDIX SELECT	MDI /MDIX	Sets the communication line.
		LINK CONDITION	(UP) / (DOWN)	Displays the network communication status.
		SET		Reflects all the above settings.
N02	700PTP SETTING			
	<700PTP SETTING>?N02 TOP NS MODE : LEGACY MCS MODE : (CLIENT) CCU NO : (1) MASTER IP ADDRESS 192.168. 0.100	NS MODE	LEGACY / BRIDGE/MCS	Sets the communication mode.
		MCS MODE	(CLIENT)	Displays that the CCU is the client.
		CCU NO	(blank , 1 to 96)	Displays the CCU number.
		MASTER IP ADDRESS	0 to 255	Sets the IP address of the master device in the MCS mode.
N03	NETWORK RESET			
	<NETWORK RESET> ?N03 TOP ALL RESET	ALL RESET		Returns the network-related information status to the factory default status.

: The settings in the box are default values.

HDCU3300 (UC)
HDCU3300 (J)
HDCU3300 (CE)
HDCU3300 (E3)
HDCU3300 (E2)
HKCU1001 (SY)
HKCU1003 (SY)
HKCU1005 (SY) J, E
9-968-307-03

Sony Corporation

Printed in Japan
2008. 6 16
©2006