


CRT and Bezel Assembly

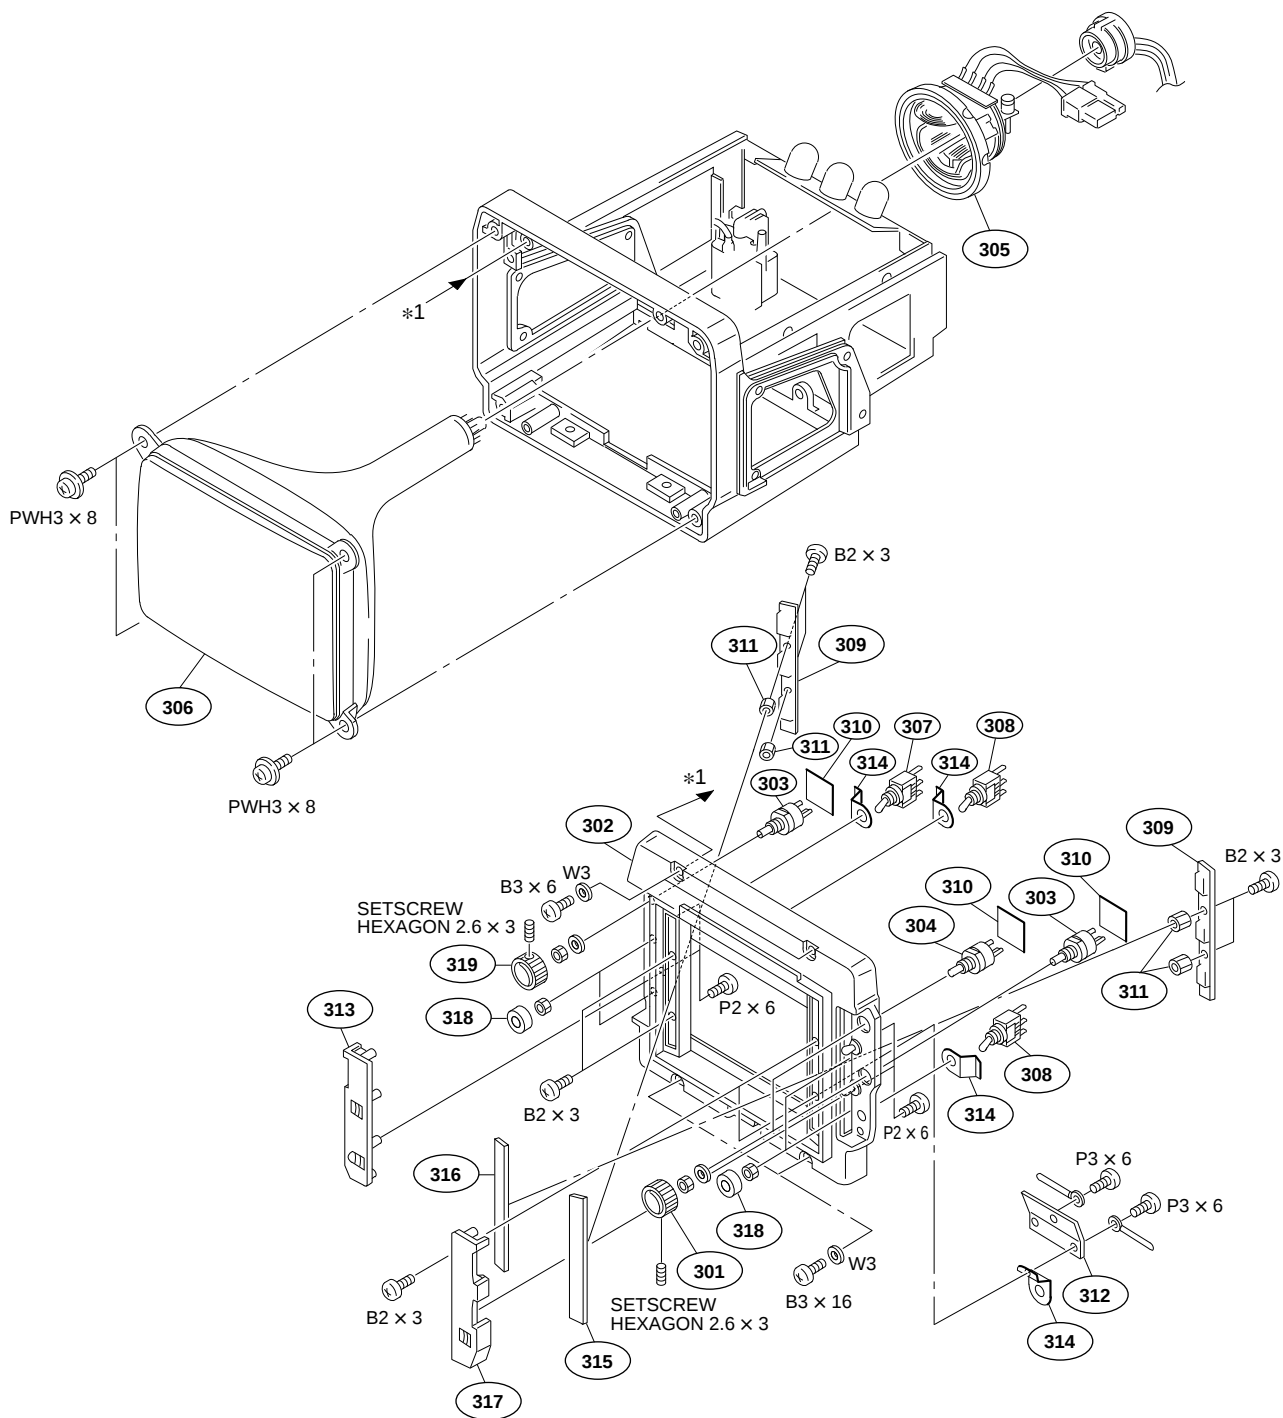

No.	Part No.	SP Description
301	X-3605-508-1	o KNOB(R)ASSY, VOLUME
302	X-3678-519-1	o ASSY,BEZEL
303	1-238-506-11	s RES, VAR, CARBON 5K
304	1-241-624-11	s RES, VAR, CARBON 50K
305	1-451-397-21	s DEFLECTION YOKE (B/W) (7-TYPE)
306	1-251-545-11	s CATHODE-RAY TUBE, B/W (7-TYPE)
307	1-553-626-00	s SWITCH, TOGGLE
308	1-571-070-11	s SWITCH, TOGGLE
309	1-589-538-11	o MOUNTED CIRCUIT BOARD, PD-809
310	1-648-737-11	o PRINTED CIRCUIT BOARD, VR-179

No.	Part No.	SP Description
311	2-542-223-01	o SUPPORT, PC BOARD
312	3-172-780-01	o NUT, PLATE
313	3-172-831-02	o LABEL (L), SW
314	3-181-052-01	o SPRING, GND
315	3-181-436-11	o MASK (L), LED
316	3-181-437-11	o MASK (R), LED
317	3-181-439-11	o LABEL (R), SW
318	3-729-007-01	o PLATE, ORNAMENTAL, TOGGLE SW
319	X-3605-509-1	o KNOB(L)ASSY, VOLUME