

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns: not supplied

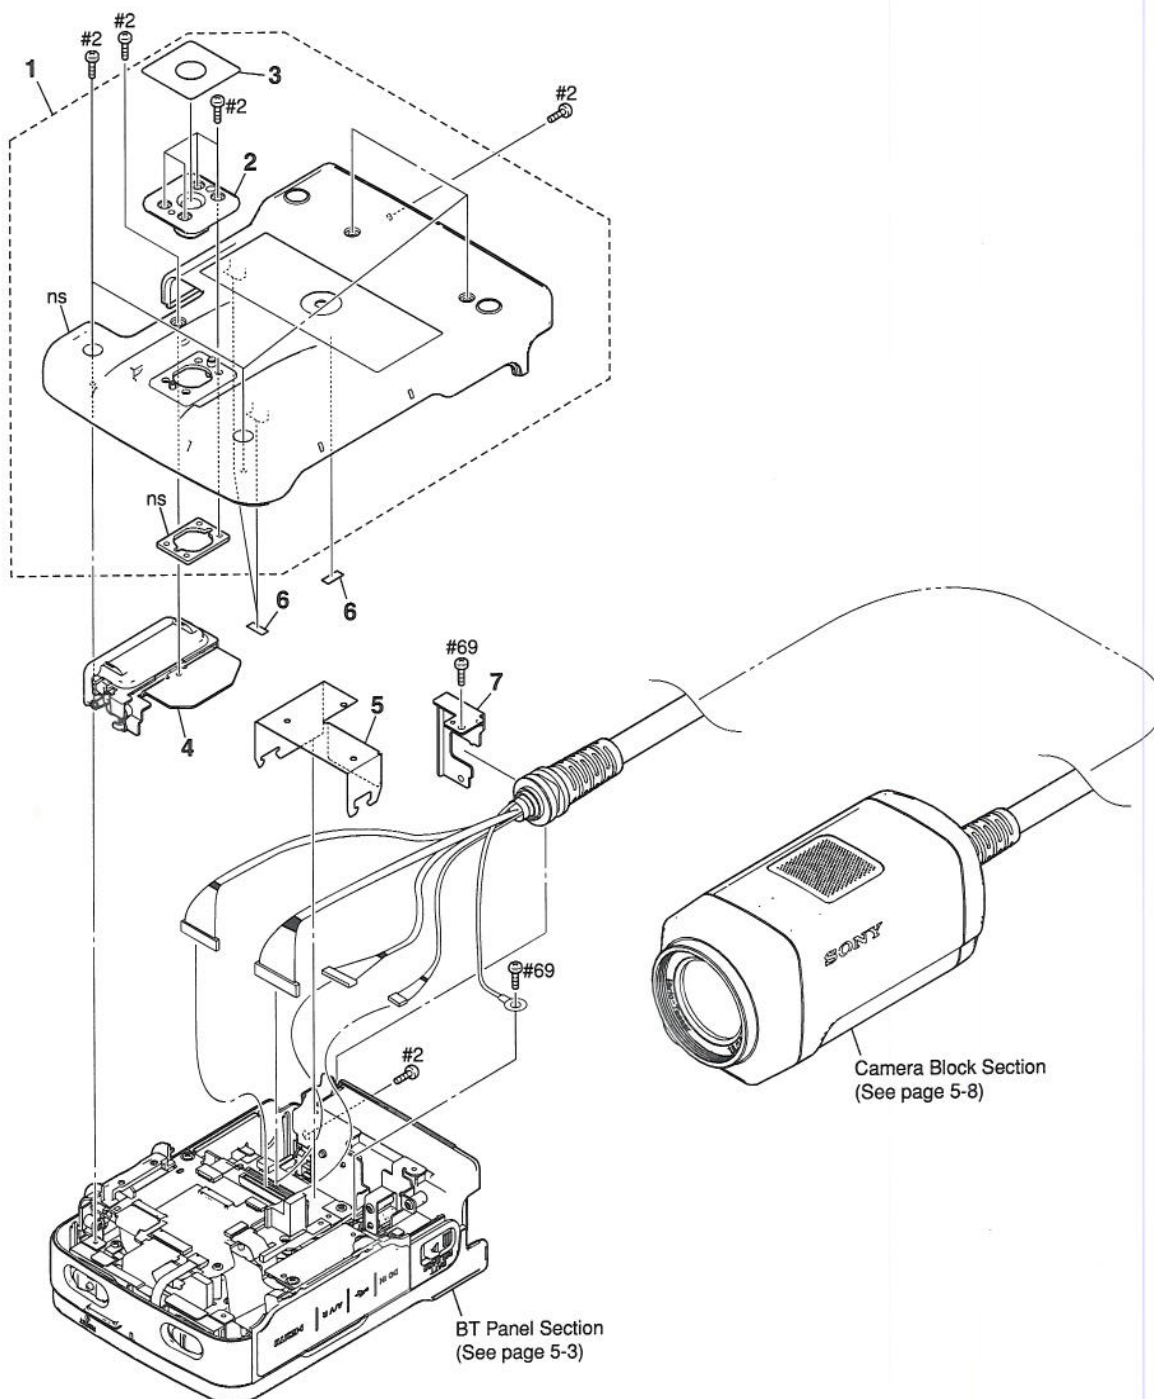

Ref. No.	Part No.	Description
1	X-2345-358-1	CABINET (B) ASSY
2	4-132-542-11	SCREW, TRIPOD
3	4-135-345-01	SHEET, TRIPOD
4	X-2345-360-1	LID ASSY, MS
5	4-132-603-01	PROTECTOR, CABLE

Ref. No.	Part No.	Description
6	4-132-601-01	SHEET (01), RADIATION
* 7	4-133-936-01	RETAINER, CABLE
#2	2-635-562-31	SCREW (M1.7) (Black)
#69	2-599-475-21	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. BT PANEL SECTION

ns: not supplied

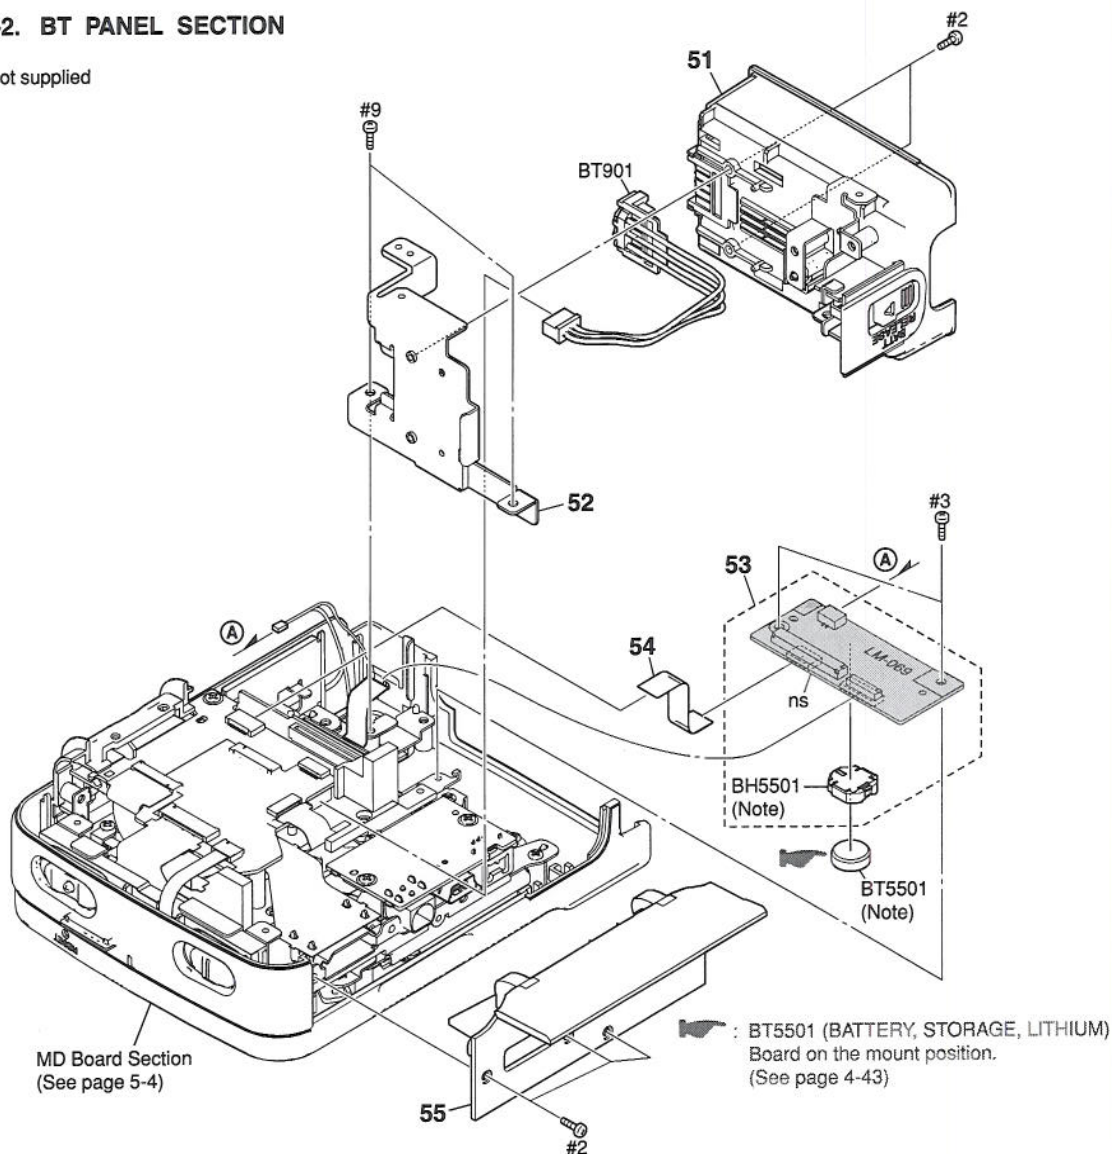

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換
してください。
使用済み電池は、取扱指示に従って処分してください。

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
51	X-2345-357-1	PANEL ASSY, BT
* 52	4-132-573-01	RETAINER, TERMINAL
53	A-1665-149-A	LM-069 BOARD, COMPLETE
54	1-836-120-11	FLEXIBLE FLAT CABLE (FFC-178)
55	X-2345-365-1	CABINET ASSY, JACK

Δ BH5501 1-756-615-61 HOLDER, BATTERY (Note)

Note: Replace the battery holder (BH5501) together when replacing the lithium battery (BT5501) on the LM-069 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: LM-069基板的リチウム電池 (BT5501) を交換する場合は
バッテリーホルダ (BH5501) も同時に新品に交換してください。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてから
リチウム電池を装着してください。

Ref. No.	Part No.	Description
Δ BT5501	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
Δ BT901	1-780-692-11	BATTERY CONNECTOR HARNESS
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. MD BOARD SECTION

ns: not supplied

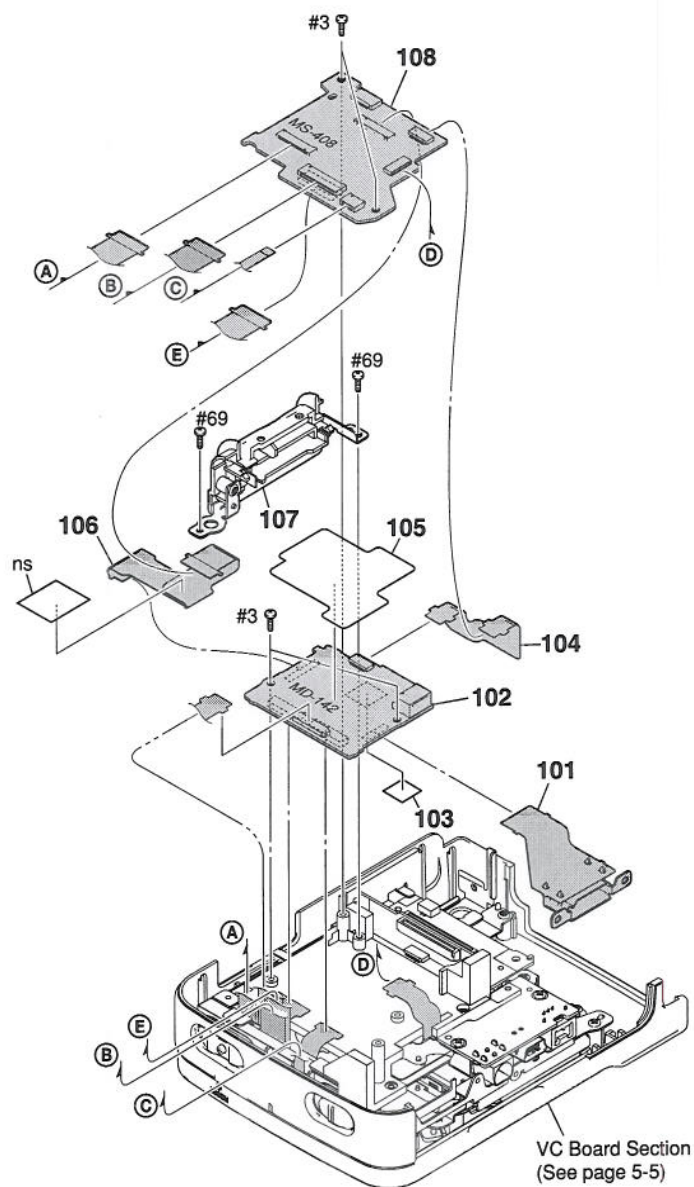

Ref. No.	Part No.	Description
101	A-1665-151-A	FP-995 FLEXIBLE BOARD, COMPLETE
102	A-1665-360-A	MD-142 BOARD, COMPLETE (SERVICE)
103	3-300-092-01	SHEET (N), RADIATION
104	1-878-639-11	FP-1005 FLEXIBLE BOARD
105	4-124-827-01	LABEL, FUSE REPLACEMENT CAUTION


Ref. No.	Part No.	Description
106	1-875-837-11	FP-916 FLEXIBLE BOARD
107	X-2345-359-1	CABINET ASSY, MS
108	A-1665-147-A	MS-408 BOARD, COMPLETE
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#69	2-599-475-21	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. VC BOARD SECTION

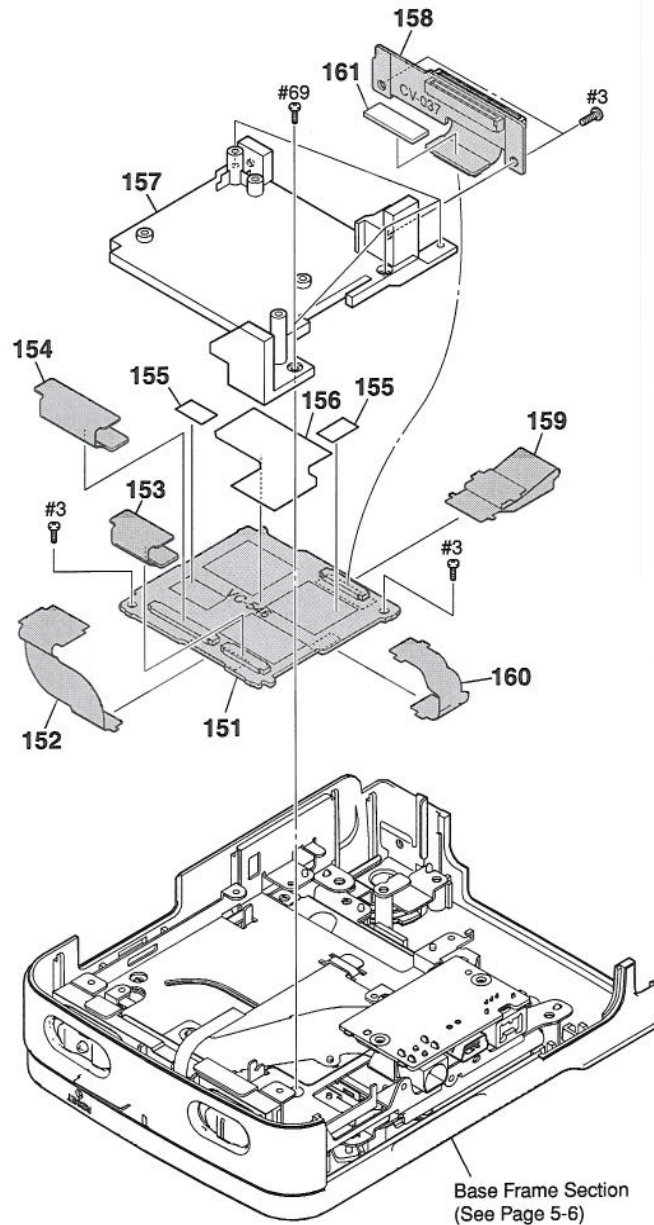

Ref. No.	Part No.	Description
----------	----------	-------------

151	A-1665-357-A	VC-546 BOARD, COMPLETE (SERVICE) (MC1)
151	A-1665-358-A	VC-546 BOARD, COMPLETE (SERVICE) (MC1P)
152	1-875-834-11	FP-913 FLEXIBLE BOARD
153	A-1528-452-A	FP-902 FLEXIBLE BOARD, COMPLETE
154	A-1528-464-A	FP-903 FLEXIBLE BOARD, COMPLETE
155	3-300-101-01	SHEET, AG COPY
156	3-300-091-01	SHEET (A), RADIATION

Ref. No.	Part No.	Description
----------	----------	-------------

* 157	4-132-600-01	HEAT SINK, MD
158	A-1665-153-A	CV-037 BOARD, COMPLETE
159	1-878-635-11	FP-997 FLEXIBLE BOARD
160	1-878-638-11	FP-1004 FLEXIBLE BOARD
* 161	4-137-996-01	SPACER, CV
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#69	2-599-475-21	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. BASE FRAME SECTION

ns: not supplied

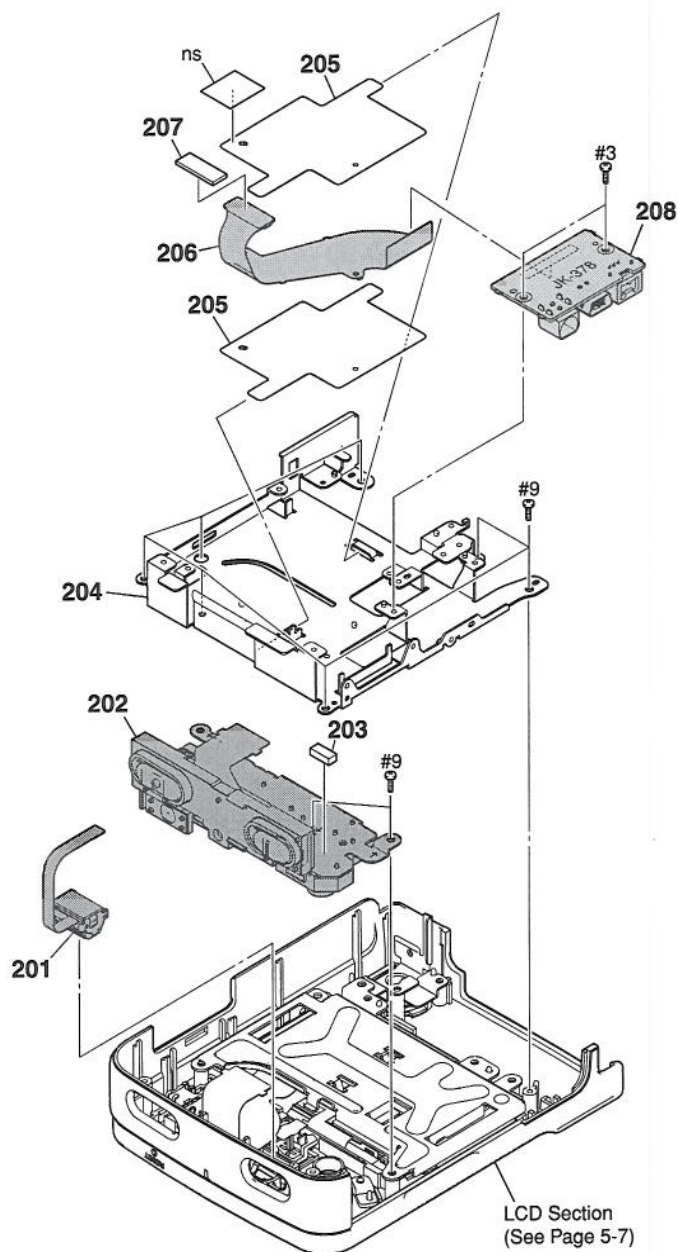

Ref. No.	Part No.	Description
201	1-479-004-41	SWITCH BLOCK, CONTROL (AD93700)
202	1-487-116-11	SWITCH BLOCK, CONTROL (PS93700)
* 203	3-452-954-01	SHEET (MD), CONDUCTIVE
* 204	4-132-599-01	FRAME, BASE
* 205	4-132-604-01	SHEET, JK

Ref. No.	Part No.	Description
206	A-1665-152-A	FP-994 FLEXIBLE BOARD, COMPLETE
207	3-300-099-01	SPACER, CR
208	A-1665-150-A	JK-378 BOARD, COMPLETE
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. LCD SECTION

ns: not supplied

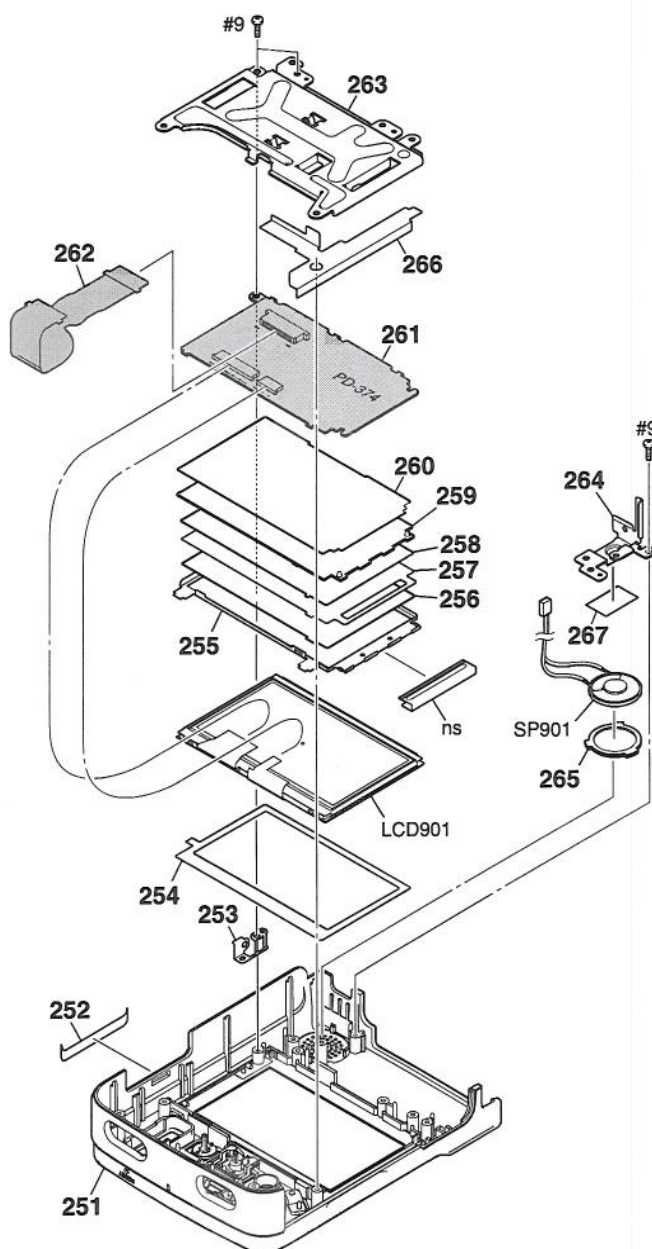

Ref. No.	Part No.	Description
251	X-2345-366-1	CABINET (T) ASSY
252	4-132-602-01	LID, CPC
* 253	3-290-639-01	PLATE (700), P GROUND
* 254	3-290-642-01	CUSHION (700), TP
255	2-694-516-01	FRONT FRAME (2.7)
256	2-694-512-01	PRISM SHEET V (2.7)
257	2-694-513-01	PRISM SHEET H (2.7)
258	2-694-514-01	DIFFUSION SHEET (2.7)
259	2-666-801-01	LIGHT GUIDE (2.7)
260	2-694-515-01	REFLECTION SHEET (2.7)

Ref. No.	Part No.	Description
261	A-1665-146-A	PD-374 BOARD, COMPLETE
262	1-878-637-11	FP-1001 FLEXIBLE BOARD
263	4-132-607-01	FRAME, LCD
* 264	4-132-605-01	HOLDER, SP
* 265	4-132-606-01	SHEET, SP
* 266	4-136-658-01	SHEET, LIGHT INTERCEPTION
* 267	4-141-380-01	CUSHION, SP
LCD901	A-1202-058-A	TP BLOCK ASSY (27ESHMG07)
SP901	1-825-260-51	LOUD SPEAKER (1.6CM)
#9	3-078-890-21	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. CAMERA BLOCK SECTION

ns: not supplied

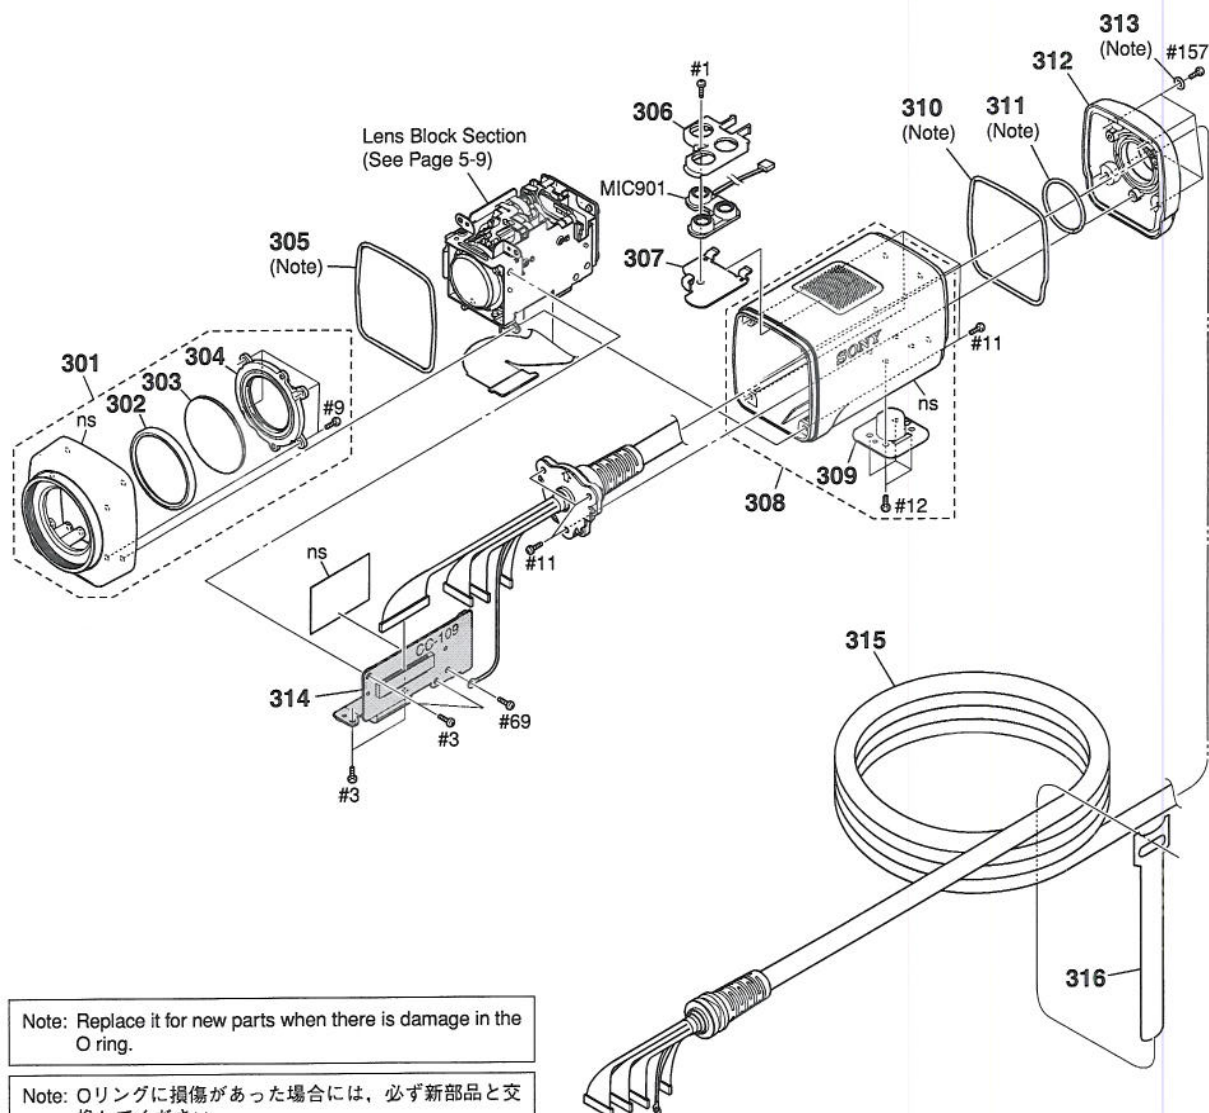

Note: Replace it for new parts when there is damage in the O ring.

Note: Oリングに損傷があった場合には、必ず新品と交換してください。

Ref. No.	Part No.	Description
301	X-2345-356-1	CABINET (F) ASSY
302	4-132-545-01	PACKING, LENS
303	4-132-546-01	COVER, LENS
* 304	4-132-547-01	RETAINER, LENS COVER
305	4-132-564-01	O RING (F) (Note)
* 306	4-132-565-01	COVER, MIC
* 307	4-132-566-01	RETAINER, MIC
308	X-2345-355-1	CABINET (C) ASSY
309	4-132-542-01	SCREW, TRIPOD
310	4-132-560-01	O RING (RE) (Note)
311	4-132-561-01	O RING (CABLE) (Note)
312	4-132-559-01	CABINET (RE)


Ref. No.	Part No.	Description
313	4-132-563-01	O RING (TP) (Note)
314	A-1665-274-A	CC-109 BOARD, COMPLETE
315	1-966-478-11	HARNESS (CC-002)
316	4-132-611-01	CLAMP, CODE
MIC901	1-542-787-11	MICROPHONE UNIT
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#69	2-599-475-21	SCREW (M1.7) (Silver)
#157	4-132-562-01	STEP TP1.7X5 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. LENS BLOCK SECTION

ns: not supplied

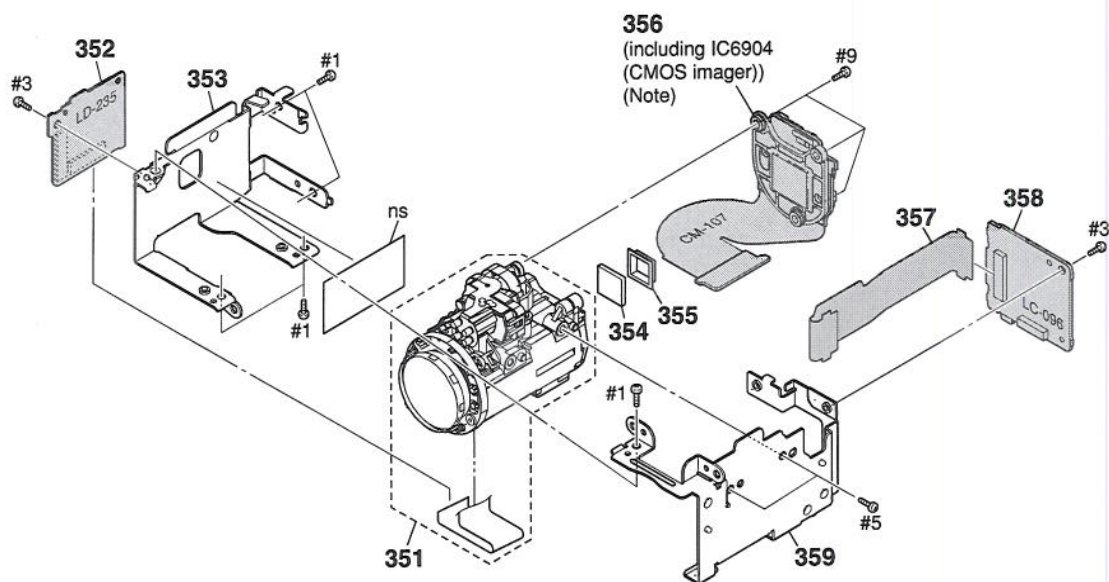

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

Ref. No.	Part No.	Description
351	1-788-710-11	OPTICAL UNIT (CH001)
352	A-1528-468-A	LD-235 BOARD, COMPLETE (MC1)
352	A-1543-261-A	LD-235 BOARD, COMPLETE (MC1P)
* 353	4-132-551-01	FRAME (L), LENS
354	1-788-737-11	OPTICAL FILTER BLOCK (OFB-05-06)
355	3-279-478-01	RUBBER (CH001), SEAL
356	A-1665-272-A	CM-107 BOARD, COMPLETE (including IC6904 (CMOS imager)) (Note)

Ref. No.	Part No.	Description
357	1-878-636-11	FP-1000 FLEXIBLE BOARD
358	A-1665-271-A	LC-096 BOARD, COMPLETE
* 359	4-132-552-01	FRAME (R), LENS
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#9	3-078-890-21	SCREW, TAPPING (Silver)