

[ Internal Use Only ] <<The information in this document should not be used for other purpose than Sony and/or Sony authorized dealers (ASC/ASD).>>

Sony Corporation

No. HDCM13-061-TN

# Technical News

Issued : September 25, 2013

**Subject: Software Release (V1.61)**

[Applicable Model ]

Model / Destination	Serial Number	Number of Unit
HDCU2000 CED	all	
HDCU2000 E2	all	
HDCU2000 E3	all	
HDCU2000 J2	all	
HDCU2000 UC5	all	
HDCU2500 CED	all	
HDCU2500 SY3	all	
HDCU2500 SYL	all	

**[Description]**

Upgraded software (V1.61) is released for new functions. Upgrade it as necessary.

**[Change Points]**

- Add the function to switch the transmission mode of HDFX200 (Fiber/Triax) remotely.  
Add the function to switch between the TRAIX camera and the FIBER camera, which are connected to HDFX200, remotely.

**[Preparation]****1. Memory Stick**

Use a memory stick to upgrade the version. Prepare either one of the following memory sticks. The memory stick used for other purposes can also be used if it has 2 MB or more free space.

- MSA-8AN (8MB)
- MSA-16AN (16MB)
- MSA-32AN (32MB)
- MSA-64AN (64MB)

**2. File to upgrade**

File name: hdcu2000.rom (ROM data, binary file)

\* Please contact to your local Sony's service office for obtaining the software file.

Create the following directory in the memory stick, and copy the obtained hdcu2000.rom.  
¥MSSONY¥PRO¥CAMERA¥HDCU2000 (Enter all in upper case)

Enter the directory name with upper-case letters. Note that due to the Windows display characteristics, even when all the letters are entered in upper case, only the first letter of a word is displayed in upper case and the rest in lower case.

**[Installation Procedure]**

1. Turn off the power to HDCU2000/2500.
2. Insert the memory stick, in which the version upgrade data is copied in the specified directory, to the memory stick connector on the AT-167 board.
3. Set switch S401 (upper switch) located near the edge of the AT-167 board to the "SD" side.
4. Set switch S402 (lower switch) to the "ADV" side and while keeping its position, turn on the power.
5. When the memory stick access LED has changed from red to green, release switch S402.
6. The green LED of MAIN-POWER of HDCU2000/2500 blinks for about 15 seconds and then lights.
7. Set switch S401 back from the "SD" side to the original position.
8. Turn off the power and turn it back on to start with the new software.

**[Confirmation]**

Check the ROM version with the CHARACTER output or the MONITOR output. (This page shows the ROM names, therefore, the ROM name “HDCU2000” is displayed for both HDCU2000 and HDCU2500.)

	*ROM Version*			
	CHU			
	CCU	HDCU2000		
		1.61	13.09.03	