

SONY®

TRIPOD ATTACHMENT

VCT-14

注意


部品表のSP (Supply code) 欄に “o” で示される部品は在庫していないことがあり、納期が長くなる場合があります。

Note

Parts marked with “o” at SP(Supply Code) column of the spare parts list may be not stocked. Therefore, the delivery date will be delayed.

MAINTENANCE MANUAL

1st Edition

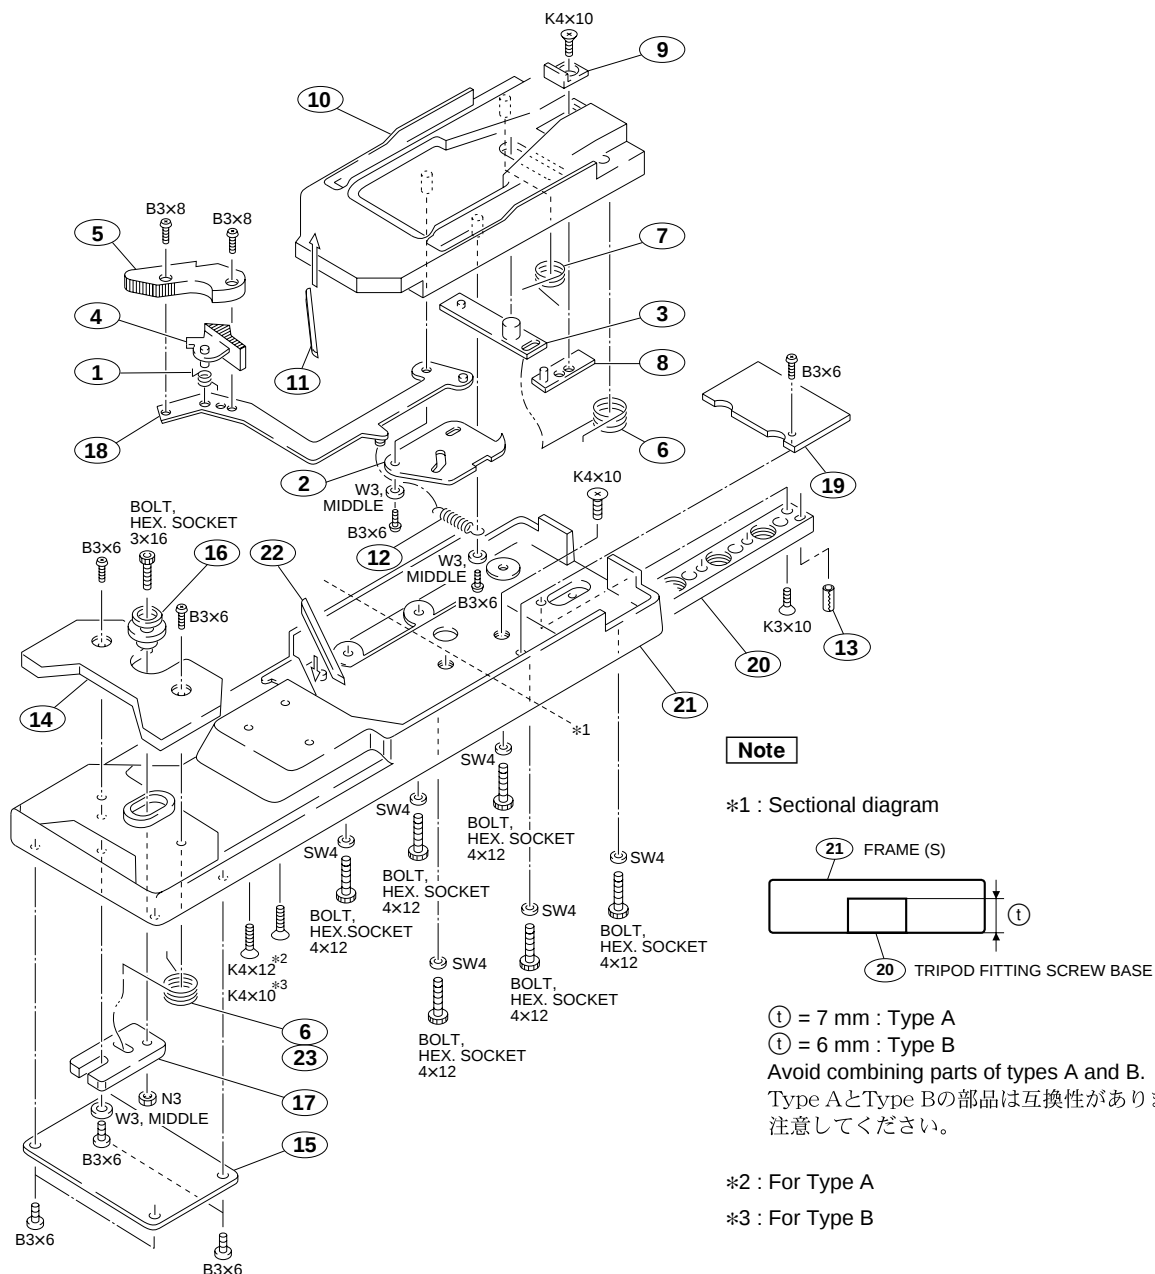

Tripod Adaptor

No.	Part No.	SP Description	No.	Part No.	SP Description
1	2-381-631-01	o SPRING	15	3-720-906-01	o LID (S), REAR
2	2-381-632-02	o ARM, LOCKER	16	3-720-907-02	o PIN (S), REAR
3	A-8277-622-A	o ARM ASSY, SLIDE	17	3-720-908-01	o TABLE (S), PIN, REAR
4	2-381-635-01	o LEVER, LOCK	18	3-720-909-02	o KNOB, CRANK
5	2-381-636-01	o KNOB	19	3-720-910-03	o SHEET, SLIDE
6	2-381-637-02	o SPRING	20	3-720-911-02	o BASE, TRIPOD FITTING SCREW
7	2-381-638-03	o SPRING			(for Type A)
8	2-381-640-02	o DOG		3-720-911-11	o BASE, TRIPOD FITTING SCREW
9	2-381-641-01	o COLLAR			(for Type B)
10	2-381-642-02	o MOUNT	21	3-720-912-03	o FRAME (S) (for Type A)
11	2-381-648-03	o INSULATOR, KNOB		3-720-912-11	o FRAME (S) (for Type B)
12	2-381-652-01	o SPRING, TENSION	22	2-381-648-11	o INSULATOR, KNOB
13	2-381-654-01	s PIN, SPRING (for Type A)	23	2-381-637-11	o SPRING (for Type B)
14	3-678-704-01	o SPACER			