

## Vista 5 Section – Contents

---

- 0 Contents
- 1 Vista 5 V4.2 Operating Instructions
- 2 Vista 5 Service Instructions
  - 2.1 Vista 5 Basic Information
    - 2.1.1 Basic Configurations
      - 2.1.1.1 Block Diagrams
      - 2.1.1.2 Layouts
      - 2.1.1.3 Configurations, Bios Settings
      - 2.1.1.4 Installation
  - 2.2 Vista 5 Diagrams
  - 2.3 Vista 5 Service Instructions
    - Spare Parts
    - Fader/Control Bays
      - Removing the Vistonics Unit
      - Retrofit Joystick
      - New Trackball wiring (USB) 89.20.1176
      - Keyboard Replacement
    - Desk & PC
      - Custom Panel GPIO
      - Bootable USB Stick / Bootable Hard Disk (for BIOS 1.0 and 1.3)
      - Mainboard MS-9632 Battery Replacement
      - LAN Update
      - Create a Backup Partition
      - System Backup
      - Title Backup
    - Core
      - Bridge Card Firmware Info
    - Vista 5 File Structure
  - 2.4 Vista 5 Service Notes
    - Service Notes 2007
      - SN 2007-00 Modification PowerDistr Board
      - SN 2007-00a Distribution Board modification
      - SN 2007-01 New Trackball Wiring
      - SN 2007-02 D21m Supplies
      - SN 2007-02a New Distribution board.pdf
      - SN 2007-03 D21m Madi HD Card
      - SN 2007-04a D21m Ground Wiring
      - SN 2007-05 D21m PSII Board 402.00
    - Service Notes 2008
      - SN 2008-01 Bridge Card Update 31A
      - SN 2008-02 Custom\_Panel\_GPIO
      - SN 2008-03 Joystick Retrofit
      - SN 2008-04 Bootable USB Stick/Hard Disk
      - SN 2008-05 Keyboard Replacement
  - 2.5 HW/SW Upgrade
    - 2.5.1 PC Upgrade (currently empty)
    - 2.5.2 HW Upgrade (currently empty)
    - 2.5.3 SW Upgrade
      - SW Upgrade Basics
      - Vista5\_3603
      - Vista5\_3605
      - Vista5\_4003
      - Vista5\_4004
      - Vista5\_4005
      - Vista5\_41
      - Vista5\_42
      - Vista5\_4203

2.6 Appendix: 3rd-Party Components

2.6.1 PC\_Components

AOpen\_i915\_Manual.pdf

MSI\_945GT\_Manual.pdf

2.6.2 Peripherals (currently empty)

2.7 Vista\_PluginEngine

Blockdiagram Studer PlugIn Engine.pdf

Quick Start Guide Studer PlugIn Engine.pdf

**3 D21 MultiFeed/MasterSync Operating and Service Instructions**

**4 SCore Live Operating Instructions**

**5 D21m I/O System Operating Instructions and Diagrams**

**6 Marketing (Brochures and Presentations)**

## Revision History

Revision	Date	Comments
BD10.375150 (0109)	Jan 30, 2009	First issue
BD10.375150 (0509)	May 25, 2009	Chapter 2.7 'Vista PlugIn Engine' added
BD10.375150 (0709)	Jul 1, 2009	Update to SW V4.1: - Chapter 'Differences and New Features' added at the end of chapter 1/Register 10 - SW upgrade to V4.1 added to chapter 2.5.3
BD10.375150 (0310)	Mar 18, 2010	Update to SW V4.2: - AutoTouch+ chapter added to chapter 1 'Operating Instructions'. - Chapter 'Differences and New Features' added at the end of chapter 1 / register 10. - SW upgrade to V4.2 and V4.203 added to chapter 2.5.3
0310	Mar 23, 2010	- Added chapters: '6, Marketing: Brochures and Presentations' and 'Additional Information' - One single product DVD for Vista 5 and Vista 6-7-8
1110	Nov 2010	- D21m Diagrams updated - One single product DVD for Vista 5-9
0911	Sept 2011	Operating Instructions updated to Vista 5 M2

## Disclaimer

The information on this disc has been carefully checked and is believed to be accurate at the time of publication. However, no responsibility is taken by Studer for inaccuracies, errors, or omissions, nor is any liability assumed for any loss or damage resulting either directly or indirectly from use of the information contained within it.

