

Power Switch

Never move the power switch on the front panel without first disengaging its lock by pulling on the switch lever. Be sure to switch power on to the transmitter and receiver; the power switches on both units must be on for the system to achieve normal function.

Never disconnect the DC power input connector without first turning the power switch lever off. Failure to do this will result in the discharge of the internal UPS backup battery, affecting its integrity and useable lifetime.

System Block Diagrams

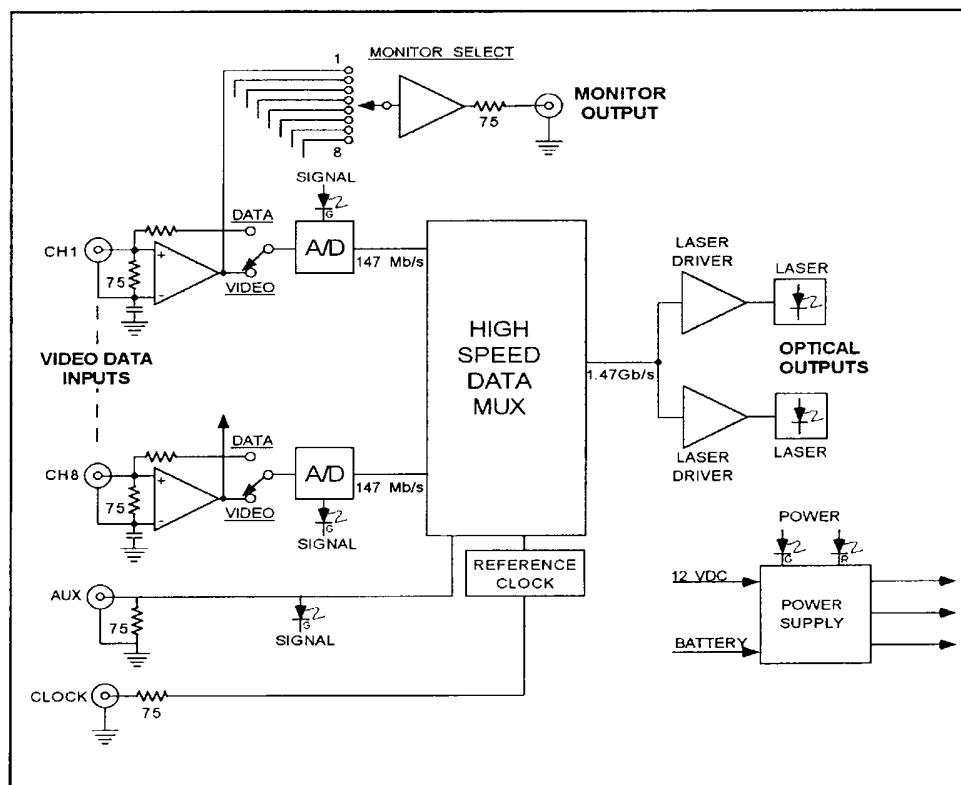


Figure 5. TX Block Diagram