

SMP Client: SMP-C0S0001

Serial Number: 07-170001

Username: *user*

Password: *user*

Username: *root*

Password: *root*

ETH0 IP Address: *192.168.125.56*

[Utilize SMP Appliance Web Browser StartUp to modify IP Address]

OSD Client: *192.168.125.54:60082/osd1.html*

SMP Appliance Web Browser

- StartUp *localhost:60083*

Web Server Log-In

Username: *admin*

Password: *admin*

Autostart Configuration

Location: */home/user/.config/autostart/osd.desktop*

SMP Client: SMP-C0S0001

Serial Number: 07-170002

Username: *user*

Password: *user*

Username: *root*

Password: *root*

ETH0 IP Address: *192.168.125.57*

[Utilize SMP Appliance Web Browser StartUp to modify IP Address]

OSD Client: *192.168.125.54:60082/osd2.html*

SMP Appliance Web Browser

- StartUp *localhost:60083*

Web Server Log-In

Username: *admin*

Password: *admin*

Autostart Configuration

Location: */home/user/.config/autostart/osd.desktop*

SMP Module: SMP-M0S0080
Serial Number: 07-170003

Username: *user* Password: *user*
Username: *root* Password: *root*

ETH0 IP Address: *192.168.125.54*

[Utilize SMP Appliance Web Browser StartUp to modify IP Address]

SMP Module Web Browsers

- Configurator *localhost:60080*
- Hot Key Manager *localhost:60082*
- StartUp *localhost:60083*

Web Server Log-Ins

Username: *admin*
Password: *admin*

Autostart Configuration

Location: */home/user/.config/autostart/osd.desktop*

