BPS-2020 Connection Guide

Tuesday, March 08, 2011

Note: each audio input "D" connector provides connections for 8 AES inputs that are associated with the 8 video by-pass switcher inputs. Up to four AES streams can be configured for each by-pass input by installing the optional 8X1 AES crosspoint cards. All 4 input "D" connectors use an identical pin out configuration as described in the input pin out balloon.

> AES Audio Input Pin Out: In 1: Pin 1=+, Pin 11=-; In 2: Pin 2=+, Pin 12=-; In 3; Pin 3=+, Pin 13=-; In 4: Pin 4=+, Pin 14=-; In 5: Pin 5=+, Pin 15=-; In 6: Pin 6=+, Pin 16=-; In 7: Pin 7=+, Pin 17=-; In 8: Pin 8=+, Pin 18=-; Pins 9, 10 & 19-26=gnd See note above

Note: each audio output "D" connector provides connections for 2 optional AES streams associated with the 8)BPS-2020 video output.

> Output Pin Out: AES 2: 1=+, 2=- (CH 3-4) AES 4: 11=+, 12=- (CH 7-8) Pins 3-9, 10, 13-18 & 19-26=gnd

Output Pin Out: AES 1: 1=+, 2=- (CH 1-2) AES 3: 11=+, 12=- (CH 5-6) Pins 3-9, 10, 13-18 & 19-26=gnd

OUT

Note: both the

BPS-8 and BPS-16

can be connected

at the same time.

Providing local &

remote control

2 video

Program

The BNC

labeled

 
output BNC's.


is inverted.

8 source BNC connections. Typically the master control program output connects to the source 1 BNC, with the other source BNC's being connected to sources that are used while the master control is being bypassed, BPS-2020 supports SMPTE259 and 292 digital video sources.

OP OUT

Optional video DA board provides 8 active loop through video sources for use with downstream devices.



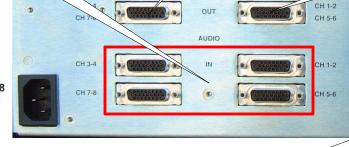

Reset video/control



BPS-8 control panel connected via a CAT5 cable.

BPS-NET provides control of up to 8)BPS-2020's with 1)BPS-16 master panel via CAT5 cable.

 
Active Source Tally: Selected source drives the corresponding pin to >+3V. Pin#'s

Source 1=1, 2=2, 3=3, 4=4, 5=5, 6=6, 7=7, 8=8. Pin 9=gnd

RS-232 or RS-422 serial port, 19.2K or 38.4K baud. Protocol is either USI RCP-1 or GVG 10XL.

RS-232 pin #'s: 2-TX, 3=RX, 5-gnd.

RS-422 pin #'s: 2=TX-, 3=RX+, 5=and, 7=TX+ & 8=RX-. Jumpers J12 & J13 select RS-232 or RS-422. For RS-232 set both jumpers between pins 1&2; for RS-422 set both jumpers between pins 3&4.





A closure between COM and connectors 7 and 8 will switch the bypass to the corresponding input.

12345678

BPS-2020 Front View

Tuesday, March 08, 2011

