


UTAH-400 V-72 Series 2 (Crosspoint Card 121337-2)

Tuesday, December 09, 2014

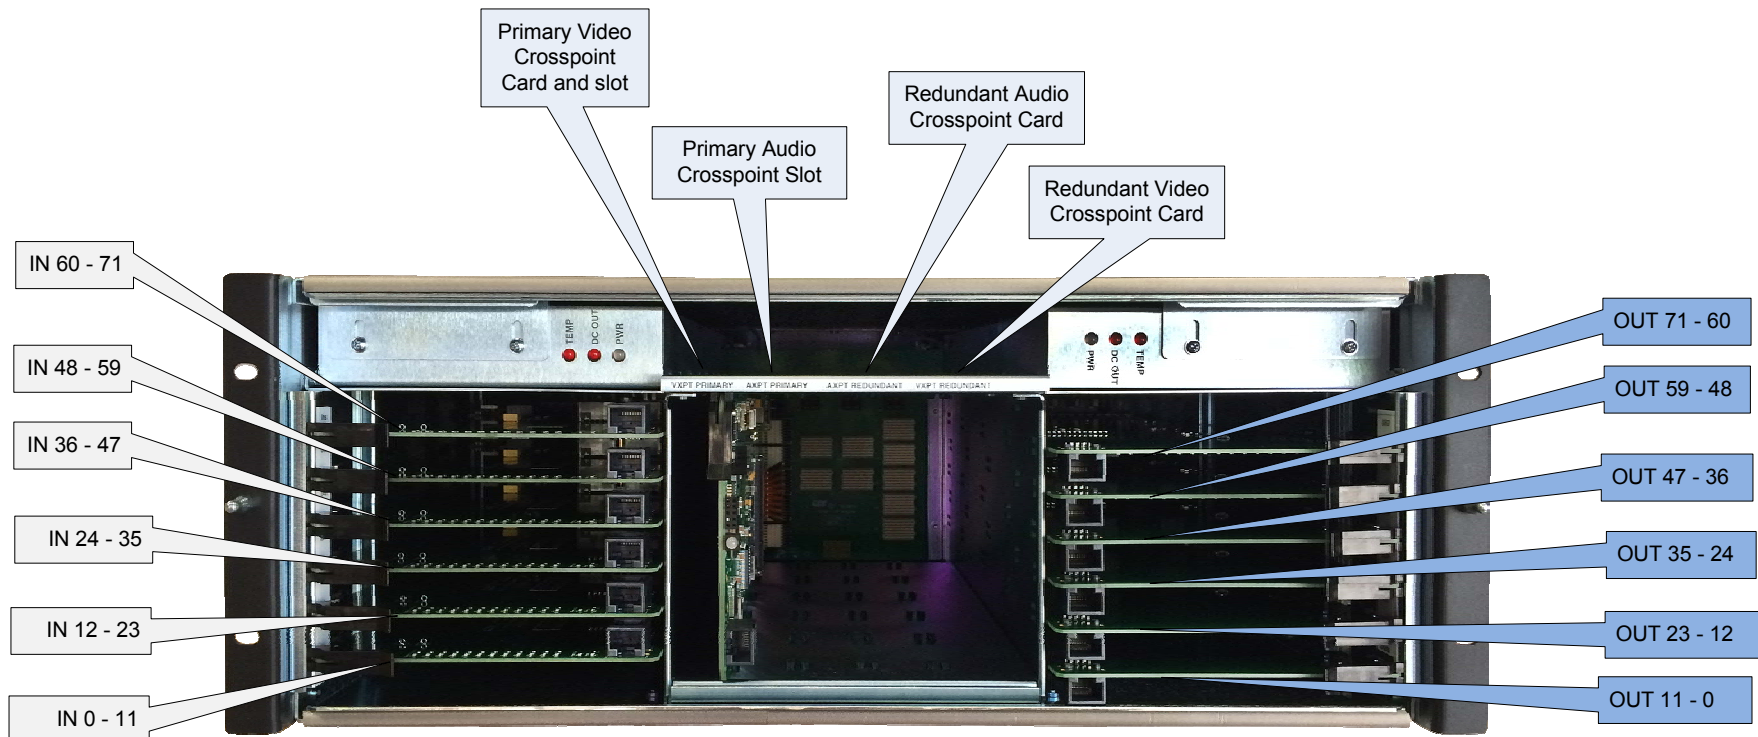

The above I/O layout contains Inputs 0-72 and is valid only when Crosspoint card (part #121337-2) is in use.
(Outputs 0-131 are valid when Crosspoint card #121337-1 is in use.)
For additional detail, please refer to *The UTAH-400 Series 2 Setup and Operations Guide* (part #82101-0077)
Section 2, Page 40.

UTAH-400 V-72 Series 2

Tuesday, December 09, 2014

