



Install Guide For X-Box Ultra and standard USB Xbox

Contents:

- 1) X-Box Ultra /USB Xbox
- 2) CD with software
- 3) USB cable
- 4) Hand control or Foot control
- 5) AC cable
- 6) 9-Pin to 9-Pin Serial Cable

It is strongly recommended that you register your product with Autoscript.

This will allow you to download the latest version of WinPlus.

Note: You will need 'local administrator' rights to install WinPlus

Run the setup program

Before Installing the Xboxes, run the setup program uau99XX.exe from the CD supplied.

The default install path for the X-Boxs is:

C:\Program Files\Pciwplus32U

After running the setup program, Plug one end of the USB cable into the computer and the other into the X-Box Ultra.

Apply power to the USB Xbox and switch to the On position

The computer will detect the X-Box and launch the Hardware Wizard



The Wizard will ask if you want to connect to Windows Update to find the appropriate software for the X-Box Ultra.

Select "No, not this time"

Select "Next"




Select "Install From A List Or Specific Location (Advanced)"

Select "Next"



Uncheck "Search Removable Media" and check "Include This Location In The Search."

Select "Browse"

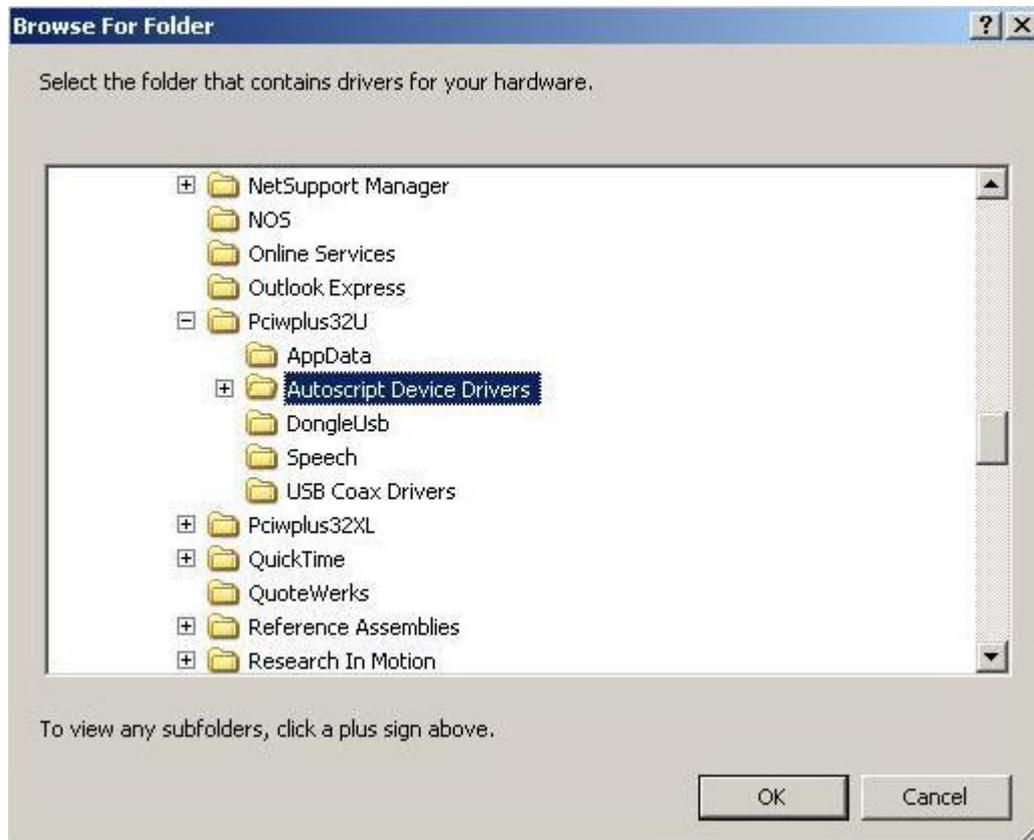

Browse to "C:\Program Files\Pciwplus32U\Autoscript Device Drivers"

Select "OK"


The Wizard will now copy and install the driver files



The Hardware Wizard has now installed the X-Box Ultra/USB Xbox


Select "Finish"

Launch the WinPlus application.

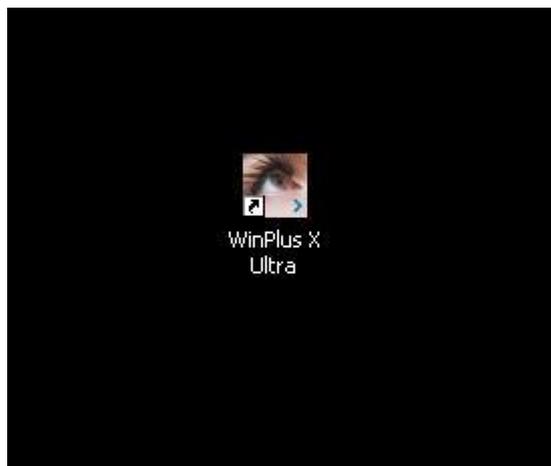


Click on the "WinPlus X Ultra" icon on your Desktop.


WinPlus as default will look for an Internal PCI card. The first time you run the application a window will pop up:

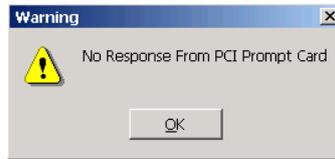

Click "OK". Click the "Configuration" icon on the far right of the toolbar. It is the icon which looks like a yellow gear-wheel

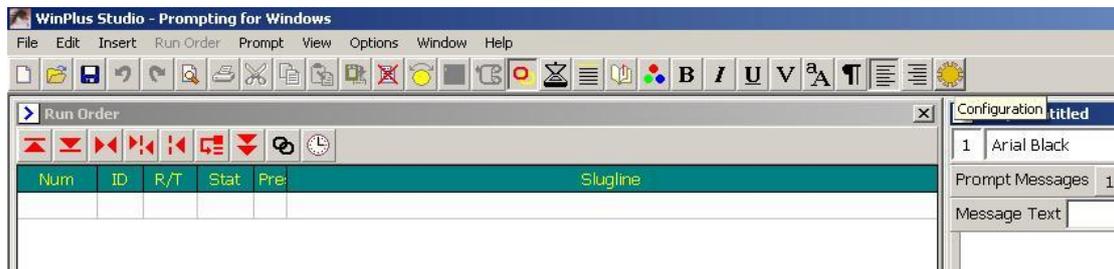

When the Configuration window launches select the "PC-Card" tab

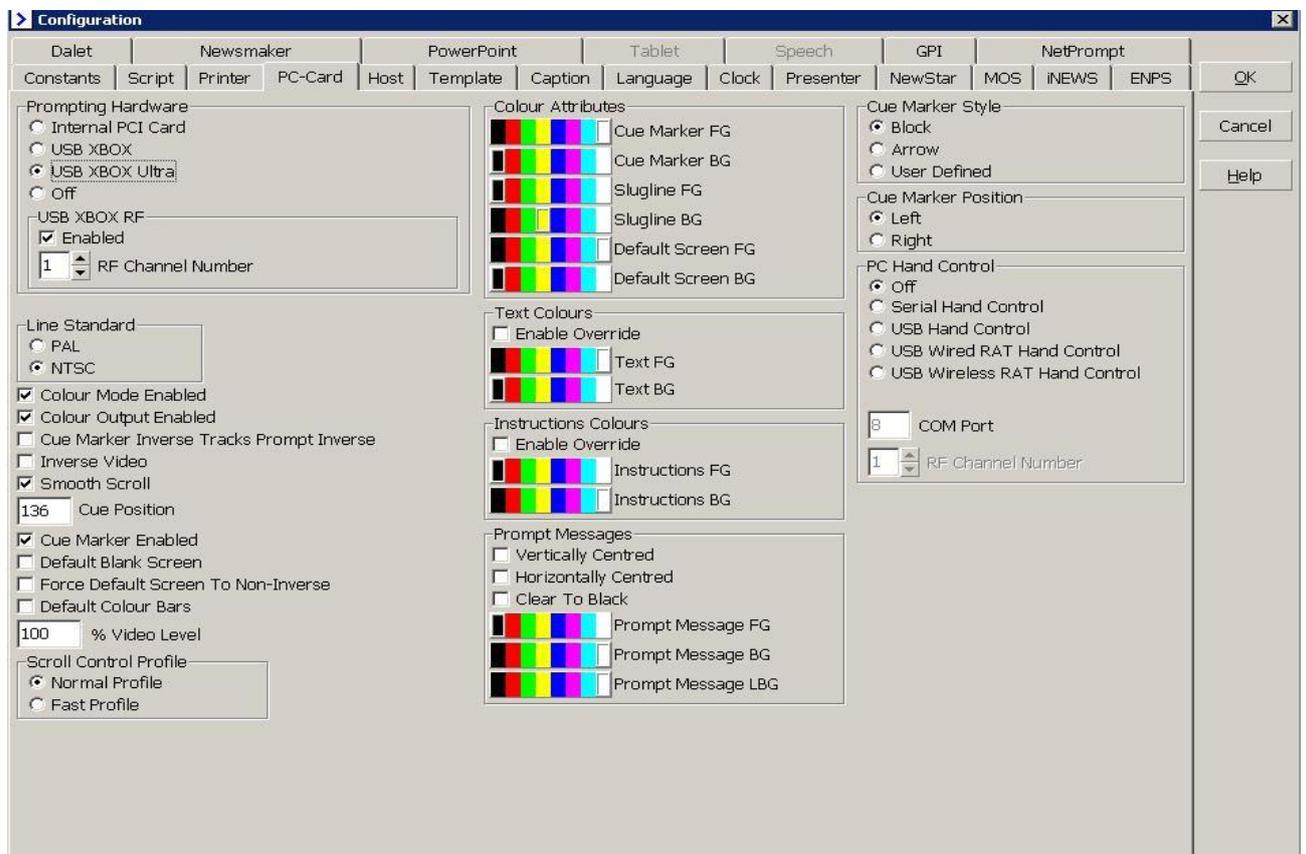

In this tab look under the "Prompting Hardware" options

Select "USB X-Box Ultra" or USB Xbox

Select "OK"

WinPlus will now contact the X-Box to confirm the registration number.
The "WinPlus Registration" window will pop-up.



Enter the X-Box Ultra registration number. This number can be found on a sticker on the CD case that shipped with WinPlus.
It is an eight digit number which is unique to each X-Box Ultra.

Click "OK".

Note: The registration number is also on a sticker on the underside of the X-Box Ultra.

For support please email: support@autoscript.tv

Autoscript (UK)

Unit 2, Heathlands Close
Twickenham
TW1 4BP UK

Tel: +44 (0) 20 8891 8900

Fax: +44 (0) 20 8891 8901

Email: uksales@autoscript.tv

Autoscript (USA)

16 Progress Drive
Shelton
CT 06484 USA

Tel: (+1) 203 926 2400

Fax: (+1) 203 926 2405

Email: sales@autoscript.tv