

(ISP=In Circuit Programmer (programming of parts installed in monitor))

Menu Map Setup **Control** Tools Help

FPGA ISP  
**F/W ISP**

Start Control

Monitor Name Set ID

**Firmware**

Monitor List on network

No	ID	IP Address	Version(Model)
<input checked="" type="checkbox"/> 1	DX000915	192.168.0.101	BVB25

Refresh

Directory  
C:\1\_Files\1\_BVB\250\_oled\1\_Pw\w07034\_Sw500ms\BVB25\_V07034.INF **Open .Inf File**

Hex file	Start	End	Size	CRC32
<input checked="" type="checkbox"/> Flasher	0A000	0C8FF	10172	A75AC41D
<input checked="" type="checkbox"/> BVB25_V07034	F20000	F938FF	471867	E8F5E7BF
<input checked="" type="checkbox"/> BVB_1920x1080_OL	FA0000	FD8CF0	232689	A1B3FFE3
<input checked="" type="checkbox"/> FactoryGui	F00000	F03984	14725	747672F7



Overall **Flash**  
Current

- Options
- Reset after download
  - Verify flash only
  - Reset before Flash
  - Re Flash

FLASH: Change Boudrate 9600bps  
FLASH: Successfully completed

Control: CVBS1, CVBS2, SVideo, YPbPr, PC, DVI, SDI1, SDI2

Picture: (empty)

Audio: F1, F2, F4, F5, Scan, Marker, HV, VU

Marker/OSD: (empty)

Functions: Menu, Up, Left, Sel, Down

PIP: (empty)