

FreeSpeak II™

Quick Start Guide for the stand-alone system

A FreeSpeak II (FS II) system consists of five main elements:

- Wireless beltpacks (FSII BP19)
- The Base station (FSII-BASE-19) that routes communication to and from the beltpacks and other audio devices
- Antennas (FSII-TCVR-19) that provide custom coverage zones in which the beltpacks operate
- Optional antenna splitters (PD2203) that run up to 5 separate antennas.
- Suitable headsets such as the Clear-Com CC-300-X4

Note: For more information about the system see the *FreeSpeak II User Guide*.

1. Connecting the transceiver/antennas to the Base station

To connect the antennas to the Base station:

- 1) Using 4-pair shielded screened cable (CAT-5/5e/6) with RJ45 connectors, connect the antennas to the Base station. Up to 5 antennas can be connected to each transceiver port using an antenna splitter, or two antennas can be connected directly to the Base station. The Base station can power cable lengths of up to 200m. Powering antennas or splitters individually can increase cable lengths to a maximum of 1000m. See *Wiring the antennas and splitters* in the User Guide for more information.



- 2) When the transceiver/antennas are connected, turn on the Base station and wait for it to boot.

2. Using the Beltpacks

The system arrives with a default audio set-up and configuration so the system can simply be wired and powered for basic use. The default set-up has two partyline (conference) audio channels (A & B). Each channel talks to:

- All the beltpacks on that channel
- The wired partyline (see connectors above, PL CH-A and PL CHA-B)
- The head set on the Base station.

To customise an audio channel configuration please refer to the *FreeSpeak II User Guide*.



3. Enabling registration of beltpacks to the Base station



- 1) From the Base station menu, go to **MAIN MENU ->SYSTEM ->REG ->START**. Enable registration mode has a two minute inactive time-out.
- 2) On the beltpack to be registered, hold down the menu key for 2 seconds, then enter **SYSTEM CONNECT** using the rotary controllers and the **C & D** keys.
- 3) Select the system you want to pair to. The system will be visible (V) and in pairing mode (P).
- 4) Enter the four digit pairing code for the system using the rotary controllers and the menu select key (**D**). The default is 0000.
- 5) Select an available role from the list displayed on the beltpack.

The Beltpack is now paired and ready for operation. To test, press and hold the channel A button while talking. Others will hear you on channel A.

Copyright © 2014 HME Clear-Com Ltd. All rights reserved.