

INSTALLATION AND CONFIGURATION MANUAL



LSM-VIA Version 1.9 December 2024

Corporate +32 4 361 7000

North & Latin America +1 973 575 7811

Asia & Pacific +852 2914 2501

Other regional offices evs.com/contact/offices



Disclaimer

This manual and the information contained herein are the sole property of EVS Broadcast Equipment SA and/or its affiliates (EVS) and are provided "as is" without any expressed or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. In particular, EVS makes no warranty regarding the use or the consequences of use of this manual and the information contained herein. Furthermore, EVS may not be held liable for any direct or indirect, incidental, punitive or consequential loss, damage, cost or expense of any kind whatsoever and howsoever resulting from the normal or abnormal use of this manual and the information contained herein, even if advised of the possibility of such loss, damage, cost or expense.

While every effort has been made to ensure that the information contained in this manual is accurate, up-to-date and reliable, EVS cannot be held liable for inaccuracies or errors that may appear in this publication. The information in this manual is furnished for informational purpose and use only and subject to change without notice.

This manual cancels and replaces any previous versions thereof.

Copyright

Copyright © 2018-2024 EVS Broadcast Equipment SA. All rights reserved.

This manual may not be reproduced, transcribed, stored (in a database or a retrieval system), translated into any language, computer language, transmitted in any form or by any means – electronically, mechanically, printed, photocopied, optically, manually or otherwise – in whole or in part without the prior written consent of EVS.

Trademarks

All product and brand names are registered trademarks and trademarks of EVS or of their respective owners.

Improvement Requests

Your comments will help us improve the quality of the user documentation. Please send improvement requests, or report any error or inaccuracy on this user manual by e-mail to <u>doc@evs.com</u>.

Regional Contacts

You will find the full list of addresses and phone numbers on the following webpage: <u>https://evs.com/contact/offices</u>.

User Manuals on EVS Website

The latest version of the user manual and other EVS product documentation can be found on the EVS documentation portal. The documentation portal can be accessed through the VIA Portal on the following webpage: <u>https://viaportal.evs.com/</u>.

Contents

Di	sclaimer	1
Co	ontents	
W	'hat's New	v
1.	Product Overview	1
2.	Prerequisites	4
	2.1. Overview	4
	2.2. Disabling or Enabling Port 80 Forwarding	6
	2.3. Setting up the Monitor Connectivity on LSM-VIA Workstation	8
	2.4. Setting Up the LSM-VIA MultiReview Environment	8
	2.5. Configuring an Active Directory on an XClient-VIA	10
	2.6. Updating the Chrome Version on the XClient-VIA	
3.	Upgrading LSM-VIA	15
4.	Deploying LSM-VIA on Several Workstations	20
5.	Managing Licenses	23
6.	Configuring LSM-VIA	25
	6.1. Introduction	25
	6.2. Infrastructure Settings	27
	6.3. System Settings	32
	6.4. Importing or Exporting a Configuration	
7.	Starting LSM-VIA	51
8.	Recovery Process of the Remote Panel	54
9.	Upgrading the Remote Panel Operating System (Factory Ins	stall) <u>55</u>



10. Deploying XClient-VIA 57

ICONOGRAPHY



What's New

In the Installation and Configuration Manual the icon **NEW!** has been added next to the text to highlight information on new or updated features.

The changes linked to new and updated features in version 1.9 are listed below.

Supported servers and Multicam version.

The current version works with Multicam 21.0.

• See section "Overview" on page 4.

Reference to XT-VIA Sportbox servers, equivalent to XS-VIA, has been added.

- See section "Product Overview" on page 1.
- See section "System Settings" on page 32.

Rocky Linux OS

LSM-VIA is now based on Rocky Linux rather than CentOS.

- See section "Configuring an Active Directory on an XClient-VIA" on page 10.
- See section "Deploying XClient-VIA" on page 57.

Settings

A new parameter is available to make the Metadata window automatically open when an IN point or an OUT point is marked on a record train, easily allowing the addition of metadata to a pending clip.

• See section "System Settings" on page 32.

Configuration export

Information has been added regarding the location of the local keyword file to be exported.

• See section "Importing or Exporting a Configuration" on page 48.

License management

Possibility to manage the licenses of all the workstations on the network from a workstation hosting the centralized VIA License Manager tool located on the same network.

• See section "Managing Licenses" on page 23.

XClient-VIA deployment

Prerequisites have been added to list the steps to be performed before the deployment.

A note has been added to mention the case of missing files during the process of USB key preparation.

• See section "Deploying XClient-VIA" on page 57.

1. Product Overview

Description

LSM-VIA is an IP-based solution that streamlines your live slow motion replay and highlights operations thanks to its usability, flexibility, speed and control.

It works with the XT-VIA, XT-GO or XS-VIA servers and relies on EVS VIA microservices ecosystem, opening up new workflows and providing faster and direct access to all the content on the live production network.

The LSM-VIA Remote Panel offers a streamlined ergonomics. The console layout remains familiar to the LSM operators.

Its console and its integrated touchscreen provide a direct access to basic and advanced functions.

Both the console key display and the touchscreen are automatically adapted according to the mode you are working in or the action you are doing, giving you what you need, just when you need it.

The LSM-VIA Viewer is mainly used for content management. It gives access to the list of clips and the list of playlists from the whole network, as well as to a visual representation of the active playlist.

Compared to the legacy LSM Remote, the LSM-VIA solution provides the following features, among others:

- faster access to content: direct access by entering the LSM ID; access to all the record trains on the whole XNet network.
- faster metadata tagging
- new or improved ways of organizing content:
 - The Shotbox tool allows users to map media items to buttons, with a set of playout options.
 - The Trains screen gives the possibility to define filters on a selection of record trains on the whole XNet network.
- assignable shortcut buttons: possibility to map predefined functions, media or Dyvi macros to 6 buttons for a quick access or action triggering.

The operator relies on the Multiviewer of the EVS server to view the requested IN and/or OUT channels.

The LSM-VIA MultiReview is an advanced mode which allows the LSM-VIA user to operate on all the XT-VIA server and XS-VIA server recorder channels from the whole network. See section "Setting Up the LSM-VIA MultiReview Environment" on page 8 for a detailed description.

Setup

On a standard LSM-VIA setup, the operator works with LSM-VIA using the LSM-VIA Remote Panel and the LSM-VIA Viewer on a dedicated LSM-VIA workstation.

The LSM-VIA Viewer and the LSM-VIA Remote Panel both communicate and control the EVS servers via an Ethernet connection.



The user can access any EVS video server (XT3, XT4K) on the same XNet network as the EVS servers connected to LSM-VIA.

The operator relies on the Multiviewer of the EVS servers to view the requested IN and/or OUT channels.



On an LSM-VIA MultiReview setup, the XClient-VIA receive the proxy streams multicasted from the XT-VIA servers, and XS-VIA network servers, and routed to the Control Network (PC LAN) through the switch. See section "Setting Up the LSM-VIA MultiReview Environment" on page 8 for a detailed description.



Limitations with XS-VIA Servers or XT-VIA Spotbox Servers

NEW ! The following restrictions exist with XS-VIA servers or XT-VIA Spotbox servers:

- VarMax functions are unavailable
- the lever is only used to play (100%) or pause (0%) the media but cannot change the playout speed

- the Split Screen mode is not available
- the Advanced Playlist Editing workflows are unavailable.

The following operations are possible:

- the lever can be used to edit playlists (including Second Lever Range support up to 400%)
- Search TC functions are available
- the Multi-operator mode is available.

Limitations with XT-GO Servers

The following restrictions exist with XT-GO servers:

- the Split Screen mode is not available
- the MultiReview mode is not available.



2. Prerequisites

2.1. Overview

Prerequisites on the Network

The operator service, installed on the XClient-VIA, manages communication between the Remote Panel and the LSM-VIA Viewer. It also communicates with the VIA services on the EVS server.

The LSM-VIA configuration tool can be accessed through a browser by entering the IP address of the XClient-VIA.

The following prerequisites apply regarding the network.

- The XClient-VIA and the Remote Panel must always be at the same location and should not be deployed in a distributed architecture.
- The round-trip time (RTT) between the XClient-VIA and the Remote Panel should be 20 ms max.

Even if the LSM-VIA workstation is virtualized, the round-trip time between the LSM-VIA Remote and the virtual machine should not exceed 20 ms.

- When working in remote conditions (LSM-VIA and the EVS video server in different locations), the maximum recommended round-trip time (RTT) is 100 ms between the XClient-VIA and the EVS video server. The usability of the product and the overall user experience will be degraded with higher latencies.
- When the EVS video servers are in the same VLAN, no additional configuration is needed.

When the EVS video servers are deployed in a different VLAN (MTPC) than the Remote Panel and the XClient-VIA, then the following ports must be opened to allow the XClient-VIA to communicate with the server:

- TCP 8088 (for XT Operations).
- TCP 8080 (to access the LSM-VIA configuration tool from a browser).

Routing must be set accordingly (IT).

- The TCP 9002 and 9004 ports must be opened to allow LSM-VIA to communicate with VIA Xsquare.
- The TCP 6668 and 6669 ports must be opened to be able to use the search functions from the LSM-VIA Viewer.
- The TCP 2071 port must be opened for the integration of LSM-VIA with Cerebrum.
- To make the device more secure, the 80 port forwarding should be disabled.
 - With LSM-VIA versions prior to 1.2, the port forwarding was enabled by default during the installation.
 - On workstations upgraded with LSM-VIA version 1.2, the installation does not disable the port forwarding.

• On workstations where the first LSM-VIA version installed is 1.2 or upper, the port forwarding is disabled by default.

See section "Disabling or Enabling Port 80 Forwarding" on page 6 for more information on how to proceed.

- IGMP Snooping must be properly configured on the switch of the PC LAN network connected to the XClient-VIA and to the LSM-VIA Remote consoles to avoid having the LSM-VIA network interfaces overwhelmed with Multicast packets not intended for them. Refer to the EVS Network Design Guide for more details.
- It is highly recommended that the display resolution of the XClient-VIA monitors used for the Viewer and the MultiReview is set to 1920 x 1080.

Prerequisites on the Controlled EVS Server

Most prerequisites to set up a functional environment for LSM-VIA are required on the EVS server side.

- The controlled EVS servers have to be XT-VIA, XT-GO or XS-VIA servers.
- **NEW!** The EVS server shall run at least Multicam 21.0.
 - The LSM-VIA option must have been selected in the VIA Controller Settings area during the Multicam configuration (Channels tab):

Via Controller Settings	
IPD-Via:	
LSM-Via:	

• 2 EVS Remote must have been assigned to RS422 ports from the Port settings area during the Multicam configuration.

Prerequisites on the LSM-VIA Workstation

Some prerequisites are applicable to the LSM-VIA workstation.

 The appropriate configuration for the monitor connectivity has to be defined on the LSM-VIA workstation.

See section "Setting up the Monitor Connectivity on LSM-VIA Workstation" on page 8.

• To use LSM-VIA with Active Directory, the appropriate configuration must be set.

See section "Configuring an Active Directory on an XClient-VIA" on page 10.

• If Google Chrome needs to be updated, you will have to perform some actions manually.

See section "Updating the Chrome Version on the XClient-VIA" on page 13.



Prerequisites on the LSM-VIA MultiReview Setup

The prerequisites to the use of the LSM-VIA MultiReview are described in section "Setting Up the LSM-VIA MultiReview Environment" on page 8.

2.2. Disabling or Enabling Port 80 Forwarding

Context of Use

- To make the device more secure, the port 80 forwarding should be disabled.
 - With LSM-VIA versions prior to 1.2, the port forwarding was enabled by default during the installation.
 - On workstations upgraded with LSM-VIA version 1.2, the installation does not disable the port forwarding.
 - On workstations where the first LSM-VIA version installed is the 1.2, the port forwarding is disabled by default.



If you need to edit the LSM-VIA configuration from another workstation, the port 80 must be open.

How to Check if the Port Forwarding is Enabled or Disabled

From the LSM-VIA workstation, run the following command:

sudo firewall-cmd --list-all

If the port 80 forwarding is enabled, you will get the following results:

```
evs-lan (active)
   target: default
   icmp-block-inversion: no
   interfaces: enol
   sources:
   services: ssh samba-client dhcpv6-client evs-docker-infra evs-avahi evs-
   consul
   ports: 5093/tcp 5093/udp 5938/tcp 5556-5557/tcp
   protocols:
   masquerade: no
   forward-ports: port=80:proto=tcp:toport=8080:toaddr=
   source-ports:
   icmp-blocks:
   rich rules:
```

How to Disable the Port Forwarding

From the LSM-VIA workstation, run the following command:

```
sudo firewall-cmd --zone=evs-lan --remove-forward-
port=port=80:proto=tcp:toport=8080 --permanent
sudo firewall-cmd --reload
```

How to Enable the Port Forwarding

From the LSM-VIA workstation, run the following command:

```
sudo firewall-cmd --zone=evs-lan --add-forward-
port=port=80:proto=tcp:toport=8080 --permanent
sudo firewall-cmd --reload
```



2.3. Setting up the Monitor Connectivity on LSM-VIA Workstation

The required CentOS configuration differs depending on whether the monitor is plugged to the LSM-VIA workstation using a Mini-DP cable or a KVM switch.

The file xorg.conf stored in the folder Computer/etc/X11 on the LSM-VIA workstation contains the display configuration of CentOS.

By default, the configuration is set for Mini-DP display.

To set the configuration for use with a KVM switch, proceed as follows:

- On the LSM-VIA workstation, open a Linux command line by selecting Applications > Favorites > Terminal.
- 2. Log in with administrator rights (sudo) on the workstation
- 3. Execute the script enable-kvm.sh Stored in /opt/evs/scripts/

The configuration required for KVM connection is applied.



If you need to restore the initial configuration for Mini-DP use, execute the script disablekvm.sh stored in the folder /opt/evs/scripts/.

2.4. Setting Up the LSM-VIA MultiReview Environment

Introduction

The LSM-VIA MultiReview is an advanced mode which allows the LSM-VIA user to operate on the recorders from the whole network. It is used to view and browse the feeds from all the XT-VIA and XS-VIA server recorder channels of the network and select attractive camera angles to create and export clips or to build playlists.

Network Requirements

- The LSM-VIA MultiReview uses the proxy streams from the XT-VIA and XS-VIA servers. Those streams are multicasted from the B1 port of each XT-VIA and XS-VIA server of the network. The bandwidth consumed per each proxy stream is 2-3 Mbps.
- XClient-VIA will receive those proxy streams via the Control Network (PC LAN). Therefore, the proxy streams from the XT-VIA / XS-VIA port B1 need to be routed to the Control Network via the switch.

INSTALLATION AND CONFIGURATION MANUAL



- As the video is streamed through Multicast, using a local network for the Control Network between XT-VIA / XS-VIA servers, XClient-VIA workstations and LSM-VIA remotes is highly recommended.
- The XT-VIA / XS-VIA Proxy Streaming Configuration must be configured with an IP address in the same range as the MTPC PC LAN address via the Multicam Configuration.
- An SFP+ to RJ45 convertor module might be needed to cable the port B1 (SFP+) to the PC LAN switch (RJ45).



The convertor module used and validated by EVS is an Arista 1 Gigabit Ethernet SFP - Type 1000BASE-T, with the internal EVS reference ESSFP-A-1G-T.

LSM-VIA Requirements

- The MultiReview option must be enabled from the LSM-VIA configuration tool. See section "MultiReview " on page 48.
- The MultiReview license code LSM-VIA-MRV must be installed on the XClient-VIA. See section "Managing Licenses" on page 23.

Multicam Configuration Requirements

- The pool of XT-VIA and XS-VIA servers must be connected via XNet-VIA or XNet-SDTI to allow LSM-VIA MultiReview to discover all cameras from the XNet (3. Network – XNet).
- The Proxy must be enabled and set to H264 codec with 2Mbps bitrate (1. Server -Proxy).
- The Proxy Streaming must be enabled and configured with an IP address in the same range as the MTPC PC LAN address (3. Network Advanced mode Proxy Streaming).



1. Server 2. Channels 3	. Network 4. Monito	ring 5. Protocols	6. GPI 7. Ope	ration
_ XNet				٦
Operation Mode:	XNet-VIA	·		
Net name:	PCL_XT02			
Net number:	2			
Visibility:	XNet •	•		
XNet server:	Allowed	·		
Gigabit connection				
Physical interface:	1Gbe (on 10Gbe boar	d) 🗸		
Link aggregation:	None	*		
-Circles ID and formation -				
Gigabit IP configuration —	Port 1	0	wet 2	
IP Address 10 .	129 · 112 · 22	10 . 129	· 113 · 22	
Subnet Mask 255	255 255 0	255 - 255	. 255 . 0	
Default Gateway 10	120 1112 254	10 1230	. 112 . 254	
1	123 112 234	10 123	115 254	
Proxy Streaming Configura	tion			
Enable Proxy Streaming:	Disabled	~		
IP Address:	192 • 168 • 11	1. 10		
Subnet Mask:	255 · 255 · 255	5 · 0		
-Cirabit prioritization				
Configuration modeu	Disabled			
Configuration mode:	Disabled	1		_
Connections F	teserved Rema	in./Max.	Bandwith	_
Unreserved	6 🤤 1	9 / 25	100 %	
Total	6			

2.5. Configuring an Active Directory on an XClient-VIA

Prerequisites

- The date and time must be the same on the XClient-VIA and on the Active Directory.
- There must be an entry for the XClient-VIA IP address in the DNS.

How to Configure the Active Directory on an XClient-VIA

- 1. Configure your network interface to access your DNS.
 - a. Open the file /etc/sysconfig/network-scripts/ifcfg-YOUR_NETWORK_INTERFACE_NAME and add these lines:

```
DNS1=IP_ADDRESS_OF_YOUR_DNS
```

DOMAIN=YOUR_DOMAIN_ADDRESS_NAME

INSTALLATION AND CONFIGURATION MANUAL

b. Open the file /etc/hosts and add

IP_ADDRESS_OF_YOUR_DNS YOUR_NAME YOUR_DOMAIN_ADDRESS_NAME (e.g.: 192.168.0.151 adserver)

c. Restart the network service so that it considers the changes:

systemctl restart network

d. Check if the configuration is correct by pinging your DNS or by typing the command:

nslookup YOUR_DNS_NAME

- 2. Join the Active Directory
 - a. Now you can join the Active Directory:

realm join --user=USER NAME DOMAIN NAME

b. Check if you can join correctly the active directory by typing:

realm list

c. You can also see the information of your user with the command:

id USER_NAME@DOMAIN_NAME

- 3. Give privileges to the Active Directory user:
 - a. Add the user in the evs-lsm-via-services group:

sudo usermod -aG evs-lsm-via-services USER NAME@DOMAIN NAME

example: sudo usermod -aG evs-lsm-via-services delivery-user@DELIVERY.EVS

b. For sudo add the user in the "wheel" group:

sudo usermod -aG wheel USER NAME@DOMAIN NAME

example: sudo usermod -aG wheel delivery-user@DELIVERY.EVS

c. If you did not install LSM-VIA with that AD user, you need to add this user in the docker group to be able to activate docker functionalities (e.g. for VIA Search):

sudo usermod -aG docker USER NAME@DOMAIN NAME

example: sudo usermod -aG docker delivery-user@DELIVERY.EVS

You may need to log out or to restart the XClient-VIA in order to apply the new membership of the user to a group.

The command **groups USER_NAME@DOMAIN_NAME** should display the new group of the user once the membership is properly applied.



- 4. Delete EVS users
 - a. Connect to your new user.
 - b. Execute these commands:

```
sudo userdel evs
```

sudo userdel evsadmin

Options

Do Not Specify the Domain Name during the Login

You can configure sssd not to use the full username with the domain name.

- 1. Open/etc/sssd/sssd.conf.
- 2. Modify the following lines:

```
use_fully_qualified_names = True
```

```
fallback_homedir = /home/%u0%d
```

with

```
use fully qualified names = False
```

```
fallback homedir = /home/%u
```

3. Restart the sssd service:

systemctl restart sssd

Copy the LSM-VIA Shortcuts to the Desktop

NEW ! If you want the LSM-VIA shortcuts to be available on your desktop execute these commands:

- cp -p /usr/share/applications/evs-lsm-via-viewer.desktop /home/user-name/Desktop gio set /home/user-name/Desktop/evs-lsm-via-viewer.desktop metadata::trusted true
- cp -p /usr/share/applications/evs-gemalto-manager.desktop /home/user-name/Desktop gio set /home/user-name/Desktop/evs-gemalto-manager.desktop metadata::trusted true
- cp -p /usr/share/applications/evs-lsm-via-configuration-gio.desktop /home/user-name/Desktop gio set /home/user-name/Desktop/evs-lsm-via-configuration-gio.desktop metadata::trusted true

2.6. Updating the Chrome Version on the XClient-VIA

In the most recent versions of Chrome, and when it is launched for the first time, it proposes to create a keyring to save the passwords and to choose a password to protect the keyring opening.



- If you do not want to create a keyring,
 - a. Keep the **Password** and the **Type again** fields empty.
 - b. Click Continue.
- If you want to create a keyring, be aware that you will have to remember the password each time it is required.
 - a. Enter a password for the keyring and confirm it.
 - b. Click Continue.

To update Chrome,

- 1. Make sure you have an internet connection properly configured on the XClient-VIA.
- 2. From Google Chrome, click the **Update** button at the top right corner of the window

Update :)

A contextual menu is displayed:





- 3. Click Chrome is out of date.
- 4. Click Reinstall Chrome.

A window opens.

5. Scroll down and click **Download Chrome now**.

The following message is displayed:



- 6. Select 64 bit .rpm and click Accept and Install.
- 7. The rpm file google-chrome-stable_current_x86_64.rpm is downloaded and stored in /home/evs/Downloads/ by default.
- 8. Close Google Chrome.
- 9. Open a terminal.
- 10. Execute the following command: sudo yum install /home/evs/Downloads/google-chromestable_current_x86_64.rpm and presse Enter.
- 11. Enter **y** when you get the following message:



The package is then being installed.

3. Upgrading LSM-VIA

Upgrade Process

The LSM-VIA upgrade is executed in two steps:

1. Upgrading LSM-VIA on the workstation

This first step installs the LSM-VIA application and the VIA Licensing Manager.

2. Upgrading the LSM-VIA Remote Panel connected to the LSM-VIA workstation

This second step is performed automatically when you switch on the Remote Panel and associate it with the upgraded LSM-VIA application. It first checks the Operating System version on the Remote Panel, then it checks the version of LSM-VIA on the Remote Panel.

The LSM-VIA version number will be displayed at the top of the configuration screen.

Considerations

- You do not need to remove the previous version before upgrading.
- When an OS upgrade is required on the LSM-VIA Remote Panel, which rarely occurs, this is automatically performed before the upgrade of the LSM-VIA version during step 2.
- After upgrading LSM-VIA, the parameters defined in the LSM-VIA configuration tool are kept. See section "Configuring LSM-VIA" on page 25.

Step 1 - Installing / Upgrading LSM-VIA Application on the Workstation

1. Copy the installer archive on the XClient-VIA:

LSM VIA Installer-<LSM-VIA version number>.tar.gz

where <LSM-VIA version number> is the full version number of LSM-VIA included in the package.

This can be done in one of the following ways:

- a USB key (formatted in FAT32)
- TeamViewer
- FTP transfer (e.g. FileZilla)



The full path of the RPM file (RPM filename and folder name) may not include any space character.

- 2. Unzip the file.
- 3. Double-click the extracted file:

LSM_VIA_Installer-<LSM-VIA version number>-x86_64.AppImage



The LSM-VIA Installer window opens.

A warning message shows you the required Multicam version.



4. Click Install LSM-VIA.

The installation process starts



5. Wait until the installation is done and the following message is displayed:



6. Click Restart now.

When the LSM-VIA application is installed, three shortcut icons are added on the desktop:

- LSM-VIA Configuration shortcut to access the LSM-VIA configuration tool.
- LSM-VIA shortcut to open the LSM-VIA application.
- VIA Licensing Manager shortcut to manage the required license key.

Step 2 - Upgrading LSM-VIA Remote Panel

Once you have upgraded the LSM-VIA application on the workstation, proceed as follows to upgrade the LSM-VIA Remote Panel.

- 1. Double-click the **LSM-VIA Configuration** shortcut to open the LSM-VIA configuration tool.
- 2. In the Infrastructure tab, define the IP address of the EVS server to work with as described in the section "EVS Server Settings" on page 28.
- 3. Double-click the **LSM-VIA** shortcut to start the LSM-VIA application on the workstation.

A valid license must have been installed. See section "Managing Licenses" on page 23.

4. Switch on the Remote Panel.

The Network Configuration screen is displayed on the touchscreen.



5. On the Remote Panel touchscreen, in the **IP Address** field, enter the IP address of the LSM-VIA workstation.

When you enter three digits for an octet, the focus shifts directly to the next octet. Otherwise, you can tap the octet you want to edit.

LSM-VIA	i i				
	Netwo	rk Configuration			
		Workstation			
	IP Address	010.	1	2	3
			4	5	6
			7	8	9
	IP Address	010.		0	
	Subnet Mask	010.			
	Default Gateway	010.			
				Connect	

- 6. In the same way, enter the IP address, subnet mask and default gateway for the LSM-VIA Remote Panel.
- 7. Tap **Connect** on the Remote Panel touchscreen.

When the connection is being initialized, the version of the Operating System is checked.

• If the version of the Operating System in the LSM-VIA rpm file does not correspond to the version on the Remote Panel, the following message is displayed:



Proceed with step 8.

• If the version of the Operating System on the Remote Panel is up-to-date, the version of LSM-VIA on the Remote Panel is checked.

Proceed with step 10.

Upgrading the Remote Panel Operating System

8. Tap **OK** on the displayed message.

The upgrade starts and the following message is displayed on the Remote Panel:



At the end of the process, the Remote Panel displays the Network Configuration screen.

9. Repeat steps 5, 6 and 7: fill in the fields on the <u>Network Configuration</u> screen and tap **Connect**.

When the connection is being initialized, the version of LSM-VIA on the Remote Panel is checked.

Upgrading the LSM-VIA Version

10. When the version on the LSM-VIA workstation does not correspond to the version on the Remote Panel, a message is displayed.

. e qui e u		
Different version on Workstation & Remote Panel. (Workstation - Remote Panel)		
Update		

Tap **Update** to launch the update process on the Remote Panel.

During the update, messages inform about installation progress.

When the Remote Panel has been updated, the following message is displayed which allows you to start LSM-VIA:





4. Deploying LSM-VIA on Several Workstations

Overview

A centralized deployment tool is available to deploy an LSM-VIA version on several XClient-VIA workstations at once. It can run on Linux and Windows.

It contains a configuration file, to set the IP addresses of the XClient-VIA to upgrade and a deployment script, which will retrieve the workstation IP addresses from the configuration file and send the installation package through sftp.

At the end of the deployment process, a file summarizes the installation status on the different workstations.

Prerequisites

- The TCP 22 port must be open for sftp transfer.
- On LSM-VIA workstations:
 - Users must be evs. The installation will not work with Active Directory users.
 - The password must be the same on all the workstations.

Procedure

1. Download the archive package from the EVS web site.

evs-lsm-via-centralized-installer-<tool version number>.tar.gz

where <tool version number> is the full version number of the tool.

2. Copy the package on the workstation from which you will deploy the version, either an XClient-VIA or a Linux or Windows PC on the same PCLAN network.

This can be done in one of the following ways:

- a USB key (formatted in FAT32)
- TeamViewer
- FTP transfer (e.g. FileZilla)
- 3. Unzip the package.

4. Open the configuration file (configuration.json).

```
Here is generic example for Linux:
```

```
{
    "installerPath": "/folder/subfolder/installer.tar.gz",
    "forceInstall": false,
    "ipAddresses": [
        "x.x.x.x",
        "y.y.y.y",
        "z.z.z.z"
    ]
    }
Here is generic example for Windows:
```

{

```
"installerPath": "\\folder\\subfolder\\installer.tar.gz",
```

```
"forceInstall": "false",
```

```
"ipAddresses": [
```

```
"x.x.x.x",
"y.y.y.y",
"z.z.z.z"
```

```
}
```

Then,

]

- a. Set the path to the LSM-VIA installer.
- b. Set the **forceInstall** parameter to **True** if you want the installation to be forced would the version already be present or not.
- c. Set the IP addresses of the XClient-VIA to upgrade.
- d. Save the file.
- 5. Run the deployment script:
 - On Windows, double-click the file evs-lsm-via-centralized-installer-<tool version number>.



- On Linux:
 - i. Open a terminal and type the command to be located in the folder containing the tool.
 - ii. (optional) In case the tool cannot be executed after the transfer, type **chmod 777 evs-lsmvia-centralized-installer-<tool version number>**.
 - iii. Type ./evs-lsm-via-centralized-installer-<tool version number>.
- 6. Enter the user password of the target workstations. See section "Prerequisites" on page 20.

The script first checks the **forceInstall** option.

- If the **forceInstall** parameter has been set to **True**, the version is deployed on all the workstations.
- If the **forceInstall** parameter has been set to **False**, the script checks the LSM-VIA version in the version.txt file on each workstation to be updated.
 - If the version in the version.txt file matches the version to be deployed, no version is installed.
 - If the versions do not match, the installation starts.

From the command prompt of the script, you can receive feedback related to:

- progress indication,
- installation status,
- error messages if any

At the end of the whole process, two log files are created.

- evs-lsm-via-installation.log lists all the logs.
- evs-lsm-via-installation-summary.log summarizes the installation status for each XClient-VIA specified in the IP Address text file:
 - Installation Status
 - Detailed error message if the installation failed on some units.

The files are stored in the following directory:

- on Linux: /var/log/EVSLogs/lsm-via-installation
- on Windows: C:\EVSLogs\lsm-via-installation

5. Managing Licenses

License Codes

Valid license keys must be installed from the VIA Licensing Manager on the XClient-VIA. Refer to the VIA Platform user manual for more information.

The list of available license codes is given hereafter.

Valid license keys must be installed on the XClient-VIA:

- LSM-Via-PACK: mandatory license dedicated to LSM-VIA
- LSM-VIA-MRV: license required for the MultiReview mode (optional).



When the centralized VIA License Manager tool has been installed on one of the network workstations, it will be possible to manage the licenses of the other workstations on the same network.

How to Request and Import the License Key



The following panel opens with a command line and various menu options to perform the various steps.





VIA Licensing



2. Generate the locking code by selecting the first option.

The screen will display the device's unique locking code.

- 3. Send this code to EVS support, in order to receive the specific license file for this device.
- 4. When you receive the file containing the license key from the EVS Support, install the license as follows:
 - a. From the LSM-VIA Licensing Manager, select the **Install a license** option.
 - b. Drag & drop the file or enter the file path on the displayed screen.
- 5. Once the license(s) are installed, select the **Show installed licenses** option to display them.

6. Configuring LSM-VIA

6.1. Introduction

About the LSM-VIA Settings

The settings of LSM-VIA allow you to configure different parameters.

Each time you upgrade (or downgrade) the LSM-VIA application, you do not need to redefine configuration parameters on the LSM-VIA workstation. The existing configuration is kept.

🗕 LSM-VIA Settings							
	Settings mport	Export			LSM-VIA 1.9.2.53662		
	ili System		Infrastructure				
	Operations Cie Playlats Kwords Wul-Search Multifieview	Clips Configuration					
			Reset	Cancel Save			

Prerequisite

The configuration tool is a web-based interface.

• Make sure that Google Chrome is the default web browser.

Settings Categories

The settings are grouped in the following categories:

- System: Clips, Playlists, Keywords, Remote, VIA-Search, MultiReview.
- Infrastructure: EVS Server, VIA Xsquare, Dyvi.



How to Edit the LSM-VIA Settings

- 1. Access the LSM-VIA configuration tool in one of the following ways:
 - From the LSM-VIA workstation, double-click the **LSM-VIA Configuration** shortcut. By default, it opens in Chrome.



• As the configuration tool is a web-based interface, you can access it using a web browser.

From any workstation, type the URL of the LSM-VIA workstation in a web browser: http://IP address:8080.

• From the LSM-VIA Viewer window on the LSM-VIA workstation, click the button and select **Settings**.



Make sure that the configuration tool opens in Chrome.

- 2. Edit the values of the relevant parameters. See sections "System Settings" on page 32 and "Infrastructure Settings" on page 27.
- 3. Click Save.



Reset, Cancel, Save

- The **Reset**, **Cancel** and **Save** buttons apply to all the tabs at once.
- After a reset, you must save the changes, but you can also cancel the reset operation.



Parameters with Fixed Value on LSM-VIA

Some parameters, which cannot be edited in the LSM-VIA configuration tool, have a fixed value for the current version of LSM-VIA. This can therefore not be edited in the current version.

Enable PGM+PRV Mode

The PGM+PRV mode is always set to Active, that means available on the Remote Panel.

Video Effect

The transition between playlist elements is always a Mix.



Should the parameter correspond to a parameter available in the Multicam configuration module of the controlled EVS server, the Multicam parameter will not be taken into account.

6.2. Infrastructure Settings

The Infrastructure settings are grouped according to the following categories:

- "EVS Server Settings" on page 28
- "VIA Xsquare Settings" on page 30
- "Dyvi Settings" on page 31



EVS Server Settings

Station	EVS Server Configuration				
VIA Xsquare	V General EVS Server				
Dyvi	XT-VIA XT-GO XS-VIA				
	EVS Server IP Address (PC LAN)				
	Check Connection				
	Last check				
	Latency between LSM-VIA Workstation & EVS Server				
	EVS Server				
	Server SW version				
	VIA Services				
	VIA Services response time				
	Net Number - Net Name				
	Serial Number				
	Operator Players				
	PGM 1 PGM 2 PGM 3 PGM 4 PGM 5 PGM 6				
	Running more than 4 Operators on the same local EVS Server is not supported.				
	Operator Recorders				
	ABCDEFGHIJKL				

EVS Server

Click the button corresponding to your server to be able to configure it.

EVS Server IP Address (PC LAN)

This setting specifies the IP Address of the EVS video server to be controlled by LSM-VIA.



From Multicam 21.0, it is possible to use either PC LAN 1 or PC LAN 2.

Check Connection

This button is used to check the connection with the EVS server.

The fields underneath are filled in as follows:
EVS Server IP Address (PC LAN)
10.129.59.127	
Check Connection	
Last check	14 May 2024 - 01:18 PM
Latency between LSM-VIA Workstation & EVS Server	0 ms RTT
EVS Server	XT-VIA
Server SW version	Multicam 20.07.18.83741, compatible with LSM-VIA 1.8.32.51818
VIA Services	🥝 Available
VIA Services response time	8 ms RTT
Net Number - Net Name	7 - XTVIA1
Serial Number	375410

The check result shows whether

- The Multicam version is compatible 🗹 or not 🔀 with the LSM-VIA version.
- The connection between LSM-VIA and the VIA services can be established 🗹 or not 🗷.

Operator Players

Description	Allows to select the local server player channels the connected operator will be able to work with.	
	Running more than 4 operators on the same local EVS server is not supported.	
Possible Values	PGM1, PGM2, PGM3, PGM4, PGM5, PGM6	
	Up to 3 PGM may be selected per operator and they must be consecutive.	
	Click the players buttons to select (highlight) the corresponding player channels.	
	Be careful when selecting players.	
	Indeed, the same players should never be selected by several operators. However, the system does not prevent different operators to select the same players.	
	The remote buttons will automatically be mapped appropriately.	
Default value	PGM1 + PGM2 + PGM3	



Operator Recorders

Description	Allows to select the recorder channels the selected operator will be able to work with.
Possible Values	Recorder labels from A to L.
	Click the recorder buttons to select (highlight) the corresponding recorder channels.
	Operator Recorders
	The same recorders can be selected by several operators.
	The remote buttons will automatically be mapped appropriately.
Default value	No recorder selected.

VIA Xsquare Settings

Station	VIA Xsquare Configuration	
EVS Server		
VIA Xsquare	∽ General	IP Address
Dyvi		10110-0010
		Login
		Password
		Check Connection

IP Address

This setting specifies the IP Address of the machine hosting the VIA Xsquare to be used for export purposes.

Login

This field is used to enter the login of the VIA Xsquare user.

Password

This field is used to enter the password of the VIA Xsquare user.

Check Connection

This button is used to check the connection with VIA Xsquare.

The result will be displayed in one of the following ways:



Dyvi Settings

Station	Dyvi Configuratio	on
EVS Server		
VIA Xsquare	∽ General	Enable Dyvi Macros
Dyvi		

Enable Dyvi Macros

Description	Allows the use of Dyvi macros from the Remote Panel.
	The Dyvi macros, if appropriately configured, will be available as functions to be mapped to Remote Shortcut buttons/keys. So, the operator will be able to trigger the Dyvi macros from the Remote Panel console or touchscreen. Up to 6 Dyvi macros can be used from LSM-VIA.
Possible Values	• No (cleared) means that the Dyvi macros will not be available from LSM-VIA.
	• Yes (selected) means that the Dyvil macros will be available for mapping to Remote Shortcut buttons/keys.
Default value	No (cleared)

IP Address

Availability	This setting is only displayed when the Enable Dyvi Macros parameter has been selected.
Description	Specifies the IP Address of the Dyvi switcher to be connected to LSM-VIA.



6.3. System Settings

The System settings are grouped according to the following categories:

- "Clip Settings" on page 33
- "Playlists Settings" on page 38
- "Keywords Settings" on page 43
- "Remote Settings" on page 44
- "VIA Search Settings" on page 47
- "MultiReview " on page 48

Clip Settings

Operations	Clips Configuration
Clips Playlists	∽ General
Keywords	
Remote	Automake Clip for Cam
VIA-Search	ABCDEFGHIJKL
MultiReview	
	Guardbands Duration (secs)
	Default Clip Duration (secs)
	4
	Post-Roll Duration (secs)
	2
	Autoname Clips
	Disabled -
	Edit Clip Metadata on mark IN/OUT
	Cip Creation Boundaries (IN & OOT)
	Identical for all Cams Flexible per Cam
	Default Mark Points
	Live Playback
	Default Freeze on Mark Points
	Clip Loop Mode
	Bounce
	bunde



Automake Clip for Cam

Context	When creating clips, the clip corresponding to the camera on which IN/OUT points have been marked is always saved. It is possible to do automatically the same action on the other cameras.	
	Ø	Currently, the Automake setting does not take into account the number of IN channels defined on the EVS Server.
		The Automake parameter defined for unused cameras will therefore be ignored.
Description	Specifies that clips have to be created on the enabled cameras even if no IN or OUT point has been marked on that camera.	
Possible Values	Camera labels from A to L.	
	Click the camera buttons to select (highlight) the corresponding cameras.	
Default value	All cameras selected (highlighted).	

Guardbands Duration (secs)

Description	Specifies the duration of clip guardbands in seconds.
	This represents the additional material that should be added before the IN point and after the OUT point for preroll and postroll.
Possible Values	From 0s to 60s
Default value	5s

Default Clip Duration (secs)

Description	Specifies the duration of clips created with only one reference point (IN or OUT point).
Possible Values	From 0s (=inactive) to 14400s (240min)
Default value	4s

Post Roll Duration (secs)

Description	Specifies the duration of the Post Poll		
Description			
	When the Post Roll function is activated from the Live screen or Clip screen, the playout will continue for the duration defined by the Post Roll Duration parameter		
	 after the OUT point of a clip, provided that there is enough media in the guardband 		
	 after the OUT point of the last playlist element, provided that there is enough media in the guardband 		
Possible Values	From 00s00fr to 600s00fr		
Default value	02s00fr		

Autoname Clips

Description	If this function is enabled, the value of the selected field will automatically be used to name the clip upon creation.
Possible Values	• Disabled:
	No name is assigned to the clip when it is created.
	• TC IN:
	The timecode of the IN point of the clip is used as clip name when the clip is created.
	CAM Name
	The name of the record channel is used as clip name when the clip is created.
	ID Louth/UmID
	The ID Louth (UmID) of the clip, i.e. the unique identifier for the clip on the XNet network, is used as clip name when the clip is created.
	• VarID 32
	The VarID of the clip is used as clip name when the clip is created. Actually, the clip name will be limited to the first 8 characters of the VarID.
Default value	Disabled



NEW ! Edit Clip Metadata on Mark IN/OUT

Description	Specifies whether the Metadata window will open as soon as an IN point or an OUT point is marked on a record train loaded on the smallest controlled PGM. This allows to easily add metadata to a pending clip.
Possible Values	• No (cleared): the Metadata window does not automatically open when an IN point or an OUT point is marked on a record train.
	• Yes (selected): the Metadata window opens as soon as an IN point or an OUT point is marked on a record train.
Default value	No (cleared)

Clip Creation Boundaries (IN & OUT)

Description	Specifies if IN/OUT points must be identical or can be different for the different clip angles.
Possible Values	 Identical for all Cams: the clip is created with the same IN and OUT points on all clip angles, including the recorder channels (Cams) selected with the Automake clip for cam setting.
	• Flexible per Cam: different IN / OUT points can be manually set on the different recorder channel (Cams) and will be taken into account when you save the clip.
	The angles, selected with the Automake clip for cam setting, for which no other IN/OUT points have been manually set, will inherit the IN/OUT points defined by the operator on the reference player. The reference player is the first player on which an IN or OUT point has been defined.
Default value	Identical for all Cams

Default Mark Points

Description	Defines how a mark point will be set.
Possible Values	• Live: mark points are set on all the record trains, at the LIVE input timecode of the train loaded on the smallest controlled PGM.
	• Playback: mark points are set at the current timecode of the clip or the train loaded on the smallest controlled PGM.
Default value	Live

À

This default setting is only taken into account at startup of LSM-VIA. It is independent of the **Mark Live / Playback** setting available from the Live screen and the Clip screen of the Remote and any change of the **Mark Live / Playback** setting will have no impact on the default setting.

Default Freeze on Mark Points

Description	Specifies whether Multicam will freeze or not when it reaches a mark point set on the clip and/or the record train that is being played back.
Possible Values	• No (cleared): the playout does not freeze on the mark points when playing clips or record trains.
	• Yes (selected): the playout freezes on the mark points when playing clips or record trains where mark points have been defined.
Default value	No (cleared)

This default setting is only taken into account at startup of LSM-VIA. It is independent of the **Freeze on Marks** setting available from the Live screen and the Clip screen of the Remote and any change of the **Freeze on Marks** setting will have no impact on the default setting.

Clip Loop Mode

Description	Defines the behavior of the Loop function when the Loop mode is activated.
Possible Values	 Loop: plays the loaded clip in a continuous loop. Bounce: plays the loaded clip from its IN point to its OUT point, then backwards from OUT to IN and so on.
Default value	Loop



Playlists Settings

Operations	Playlists Configuration	
Clips Playlists Keywords	∽ General	Default Playlist Speed Unknown Custom 100
Remote VIA-Search MultiReview		Default Effect Duration (frames)
		Advanced Audio Editing
		Audio Effect Duration
		Fade Effect Color Black White
		Wipe Effect Type Vert. R>L Vert. L>R
		Insert in Playlist Before After
		Insert SLSM at Native Speed
		Default Playlist Load Mode
		AUX Track Output PRV PRV&7-8/15-16 PGM

Default Playlist Speed

Description	Defines the default speed value that the playlist elements will have when added to a playlist.
Possible Values	• Unknown : means that the speed of the previous element in the playlist will be used as a reference for the current element.
	• Custom : from 0 to 100%.
	• 0% will force the playlist to pause at the end of each element.
	• 1% to 100% will apply the specified speed as default speed for playlist elements.
	To set a custom speed:
	a. Click Custom .
	An additional field appears.
	Default Playlist Speed
	Unknown Custom 100
	b. Select a value from 0 to 100%.
Default value	100 %

Default Effect Duration (Frames)

Description	Sets the default v	Sets the duration of video transition effect. The specified value is used as default value in the Playlist Edit mode.	
		The duration of the video transition when using the TAKE button in 1PGM+PRV mode has its own parameter, <u>Effect Duration for Take</u> , defined from the Remote settings.	
Possible Values	From 0 f	r to 600 fr	
Default value	0 fr		



Advanced Audio Editing

	Availability	• This setting is only available if the license code 112 is valid.
NEW!		• This setting is not available with XS-VIA configurations or XT-VIA Spotbox configuration.
	Description	Gives access to advanced audio settings, such as audio split, audio swap.
	Possible Values	• No (cleared) means that it will not be possible to modify video and audio transition effects separately.
		• Yes (selected) means that it will be possible to change the video and audio transition effects separately.
	Default value	No (cleared)

Audio Effect Duration

NEW !	Availability	• This setting is only available if the license code 112 is valid.
		 This setting is only displayed if the Advanced Audio Editing setting has been selected.
		 This setting is not available with XS-VIA configurations or XT-VIA Spotbox configuration.
	Description	Sets the duration of audio transition effect. The specified value is used as default value when a clip is added to a playlist in Playlist Edit mode.
	Possible Values	From 0 fr to 600 fr (20 sec in NTSC)
	Default value	0 fr

Fade Effect Color

Description	Defines the color displayed during the fade transition effects.
Possible Values	Black, White
Default value	Black

Wipe Effect Type

Description	Defines the direction of a wipe transition effect: from right to left or from left to right.
Possible Values	Vert. L>R, Vert. R>L
Default value	Vert. L>R

Insert in Playlist

Description	Specifies if the clips added to a playlist are inserted before or after the active clip in the playlist.
Possible Values	Before, After
Default value	Before

Insert SLSM Native Speed

Description	Defines whether an SLSM clip inserted into a playlist will automatically be set to be played out at its native speed, or at the value defined in the <u>Default Playlist</u> <u>Speed</u> parameter.
Possible Values	 No (cleared) means that playout speed of the SLSM clips depends on the value defined as the Default Playlist Speed.
	• Yes (selected) means that the playout speed of the SLSM clips is automatically set to its native speed.
Default value	No (cleared)

Default Playlist Load Mode

Default value	
	It allows loading and playing multiple playlists using a single Remote Panel.
	• Conditional : the playlist is loaded in PGM+PRV, except in Multi-PGM mode when a single PGM is controlled, then only the first playlist element is loaded on the controlled channel.
Possible Values	• Always : the playlist is always loaded in PGM+PRV.
Description	Determine the way a playlist will be loaded.



This default setting is only taken into account at startup of LSM-VIA. It is independent of the **Always / Conditional** setting available from the Live screen and the Clip screen of the Remote and any change of the **Always / Conditional** setting will have no impact on the default setting.



AUX Track Output

Description	Specifies to which audio outputs the auxiliary track of the playlist will be played out.
Possible Values	The following values are possible:
	• PRV:
	The auxiliary track will use the audio outputs normally assigned to the PRV channel. If no PRV channel is available, the Aux Track will not be assigned to any audio output.
	• PRV&7-8/15-16:
	The auxiliary track will use the audio outputs normally assigned to the PRV channel if there is one, plus all the audio outputs from 7-8/15-16 that have not yet been assigned to another channel.
	Use this option if you need an auxiliary track without PRV channel available.
	• PGM:
	The auxiliary track will use the audio outputs normally assigned to the PGM channel.
Default value	PRV

Keywords Settings

Operations	Keywords Configuration	
Clips Playlists Keywords Remote VIA-Search MultiReview	∽ General	Keyword File Mode Local Network Local Keyword File /opt/evs/evs-lsm-via/share/Athletics.kwd
Operations	Keywords Configur	ation
Clips Playlists Keywords Remote	∽ General	Keyword File Mode Local Network
VIA-Search MultiReview		IP Address of Network Keyword File Host

Keyword File Mode

Description	Specifies whether the local workstation works with a keyword file stored locally or on another LSM-VIA workstation of the network.
Possible Values	Local, Network
Default value	Local

Local Keyword File

Availability	This setting is only displayed when the Local option for the Keyword File Mode parameter has been selected.
Description	This field gives the path to and name of the local keyword file used to manage clip keywords.

IP Address of Network Keyword File Host

Availability	This setting is only displayed when the Network option for the Keyword File Mode parameter has been selected.
Description	This setting specifies the IP Address of the LSM-VIA workstation hosting the keyword files.



Remote Settings

Operations	Remote Configuration	
Clips Playlists Keywords	∽ General	Effect Duration for Take (frames)
Remote VIA-Search MultiReview		Fast Jog 20
		Default Channel Mode Multi-PGM PGM/PRV
		Recall Clip Toggle
		Second Lever Range -100% -> +100% -
		PGM Speed / VarMax
		Display Info & Success Notifications

Effect Duration for Take (frames)

Description	Specifies the duration of the Take effect (swap between the media loaded on the PGM1 and the PGM2 or the PGM and the PRV).
Possible Values	From 0 to 600 frames
Default value	10 frames

Fast Jog

Description	Specifies how many times faster than the standard jog speed the loaded media is browsed when enabling the Fast Jog function on the Remote Panel.
Possible Values	From 1x to 20x (integer numbers)
Default value	20x

Default Channel Mode

Description	Specifies the default mode to control the channels of the EVS server.	
Possible Values	Multi-PGM, PGM+PRV	
Default value	Multi-PGM	



This default setting is only taken into account at startup of LSM-VIA. It is independent of the **PGM+PRV / Multi PGM** setting available from the Live screen and the Clip screen of the Remote and any change of the **PGM+PRV / Multi PGM** Remote setting will have no impact on the default setting.

Recall Clip Toggle

Description	Enables/disables the selection of the camera of a clip through the Function keys: pressing several times the Function key of the clip position calls successively the various camera angles of the clip.
Possible Values	ON, OFF
Default value	ON

Second Lever Range

Context	The lever can be used in normal mode to play back clips at slow motion speed from 0 to 100%.
	A secondary range is available to playback material at other speed ranges.
	To gain access to the secondary speed from the remote panel console, press SHIFT + 2nd Lever/TAKE.
	The second lever range is also available when editing the speed of playlist elements.
Description	Specifies the secondary speed range on the Remote Panel.
Possible Values	 -100% → +100%
	 0 → 200%
	 -200% → +200%
	 0 → 300%
	 0 → 400%
	 -400% → +400%
Default value	-100% → +100%



PGM Speed / VarMax

NEW !	Availability	The Var Max option is not available with XS-VIA configurations or XT-VIA Spotbox configuration.
	Context	During playback, if PGM Speed or Var Max has been activated, the lever range will be adapted so that:
		• in PGM Speed mode: the only playback value for any position of the lever other than 0, is the one specified by this parameter.
		OR
		 in Var Max mode: the speed range defined by the lever corresponds to [0% - setting value].
	Description	Specifies the playback speed assigned to the lever when the PGM Speed mode is activated, or the speed range when the Var Max mode is activated.
	Possible Values	Range of values from 1 to 400 %
	Default value	50%

Display Info & Success Notifications

Description	Enables/disables the display of the notifications as pop-up for the Info and the Success categories on the LSM-VIA Viewer and on the Remote Panel touchscreen.		
	Notifications for Error and Warning are displayed in any case.		
	This setting does not impact the notifications listed in the Notification pane which still displays the notifications from all the categories.		
Possible Values	ON, OFF		
Default value	OFF		

VIA Search Settings

Operations	VIA-Search Configuration			
Clips Playlists Keywords Remote VIA-Search MultiReview	∽ General	Deployment Mode Disabled Local Network		
Operations	VIA-Search Configuration			
Clips Playlists Keywords Remote VIA-Search MultiReview	∽ General	Deployment Mode Disabled Local Network IP Address of VIA-Search Services		

Deployment Mode

Description	Enables/disables the Search services and specifies where they are deployed.
Possible Values	• Disabled: VIA Search services will be disabled and the user will not be able to use the search feature.
	Local: VIA Search services are deployed locally on the LSM-VIA workstation and started when LSM-VIA is launched.
	• Network: VIA Search services are deployed on a single LSM-VIA workstation of the network identified in the next field.
Default value	Local

IP Address of VIA Search Services

Availability	This setting is only displayed when the Network option for the Deployment Mode parameter has been selected.
Description	This setting specifies the IP Address of the network LSM-VIA workstation where the VIA Search services are installed.



MultiReview

Operations	MultiReview Configuration	
Clips Playlists Keywords Remote	∽ General	MultiReview Mode
VIA-Search MultiReview		

MultiReview Mode

Description	Makes the MultiReview option available from the LSM-VIA Main menu, provided that a valid license has been installed.	
	The MultiReview mode allows the users to view and browse the feeds from all the EVS server recorder channels of the network and to perform actions on the selected channels.	
	See section MultiReview Mode in the user manual.	
Possible Values	• No (cleared) means that the MultiReview mode is not available from LSM- VIA.	
	• Yes (selected) means that the MultiReview mode will be available from LSM-VIA.	
Default value	No (cleared)	

6.4. Importing or Exporting a Configuration

Context of Use

From the Configuration tool, a configuration can be exported from or imported to any XClient-VIA of the network.

This covers:

- the System settings
- LSM-VIA Remote assignable Shortcut keys
- the Shotbox content
- the Trains filter content.



it is not possible to import Shortcuts, Shotbox and Trains filter between two major LSM-VIA versions (e.g. 1.X and 1.(X+1)).

How to Export a Configuration

1. Click the **Export** button at the top of the Configuration tool.

The Export Configuration window opens.

2. (optional) Clear some parameters or categories you do not want to be part of the exported configuration.

Export configuration	×
Select file name File name	
i¦i System 🗹	🗘 Shortcuts 🛛
Clips	
Playlists 🖌 🛃	Export
Remote Z	Add to PL11 Xsquare 1 MultiViewer
VIA-Search	
Mulikeview M	
≣→ ShotBox 🗹	
1 2 3 4 5 6 7 8 9 10	
	Cancel Export configuration

- 3. Enter a name for the configuration in the **Select file name** field.
- 4. Click Export configuration.

The configuration is exported as a .json file in the Downloads folder.



If you want to select a local keyword for the export, make sure the local keyword file is located in the /opt/evs/evs-lsm-via/share folder.



How to Import a Configuration

- 1. Copy the .json configuration file you want to import on your workstation.
- 2. From the Configuration tool, click the **Import** button.

The Import Configuration window opens.

Import configuration		×
Select file to import No file Chosen Browse		
i!i System		
Clips Playlists Keywords Remote VIA-Search MultiReview		
≘→ ShotBox		
1 2 3 4 5 6 7 8 9 10		
	Cancel Import & Save configura	

3. Click the **Browse** button to select a valid .json configuration file to import and click **Open**.

The Import Configuration window displays the corresponding parameters.

Import configuration			×
Select file to import Config 1.json	Browse		
i¦i System	•	¢- Shortcuts	
Clips Playlists Keywords Remote VIA-Search MultiReview		Add to PL11 Xsquare 1 MultiViewer	
∃→ ShotBox	•	ក្នេ Trains Filter	
1 2 3 4		1 2 3 4 5 6 7 8	
		Cancei Import	& Save configuration

- 4. (optional) Clear some parameters or categories you do not want to be part of the imported configuration.
- 5. Click the **Import and Save configuration** button.
- 6. If requested, restart LSM-VIA for the configuration to be taken into account.

7. Starting LSM-VIA

How to Start LSM-VIA

Starting LSM-VIA consists in launching the application on both the LSM-VIA workstation (LSM-Viewer) and the LSM-VIA Remote Panel.

1. Double-click the LSM-VIA icon on the desktop of the LSM-VIA workstation:



- 2. Switch on the Remote Panel using the power switch at the back of the Remote Panel, above the power supply.
- 3. On the Remote Panel touchscreen, in the IP Address field, enter the IP address of the LSM-VIA workstation.

When you enter three digits for an octet, the focus shifts directly to the next octet. Otherwise, you can tap the octet you want to edit.

LSM-VIA						
	Netwo	rk Configuratio	n			
		Workstation				
	IP Address	010 .		1	2	3
				4	5	6
				7	8	9
	IP Address	010.			0	
	Subnet Mask	010.				
	Default Gateway	010.				
					Connect	

4. In the same way, enter the IP address, subnet mask and default gateway for the LSM-VIA Remote Panel.

Connect 5. Tap

on the Remote Panel touchscreen.



6. (Optional) In the LSM-VIA, you can select the Remote Panel in the **Sync** field so that the page and bank navigation is synchronized between LSM-VIA Viewer and LSM-VIA Remote Panel.



You are now ready to start working in LSM-VIA.



The IP addresses are stored in memory so that you can skip steps 3 and 4 for subsequent connections.

How to Close LSM-VIA

This closes LSM-VIA on the LSM-VIA workstation and on the LSM-VIA Remote Panel.

- 1. Switch off the Remote Panel using the power switch at the back of the Remote Panel, above the power supply.
- 2. Close the LSM-VIA application using one of the following keyboard shortcut sequences from the LSM-VIA Viewer:



How to Quit LSM-VIA on the Remote Panel

This closes the LSM-VIA application on the LSM-VIA Remote Panel.

1. Press **SHIFT** + **MENU** to access the main menu.



The following message is displayed on the touchscreen:



INSTALLATION AND CONFIGURATION MANUAL

3. Tap Or press ENTER to confirm you want to close LSM-VIA on the Remote Panel.

The Network Configuration screen opens, allowing you to directly restart LSM-VIA on the Remote Panel if the LSM-VIA Viewer is still open on the workstation.

LIII



• If you close the LSM-VIA Viewer, the LSM-VIA application on the Remote Panel will request you to quit the application.



8. Recovery Process of the Remote Panel

Introduction

Should the Remote Panel crash or no longer react to any command, you will have to perform a recovery process of the Remote Panel.

The recovery consists in reinstalling a minimalist version of the Remote Panel, and then updating the LSM-VIA components on the Remote Panel from the LSM-VIA workstation.



It is recommended to close the LSM-VIA application on the LSM-VIA workstation before you start the recovery.

How to Recover from a Crash

- 1. Power off the LSM-VIA Remote Panel.
- 2. Press and hold the recovery button located under the Remote Panel.
- 3. Power on the Remote Panel while keeping the recovery button pressed for at least 5 seconds, until the following message is displayed on the Remote panel:

Installation in progress this might take some time, please wait. Do not turn off the remote.

When you release the recovery button, a message displays the installation progress. It should take about 1 minute. When the application has been reset, you are requested to restart the Remote Panel.

4. Power off and on the Remote Panel when requested.

The normal boot sequence is executed (about 20 seconds).

At the end of the process, the Remote Panel displays the Network Configuration screen.

- 5. On the workstation, start the LSM-VIA application.
- 6. On the Remote Panel, fill in the fields in the Network Configuration screen with the touchscreen and
 Connect

tap

7. The LSM-VIA application detects that the versions between the Remote Panel and the Workstation are different and prompts you to upgrade the version on the Remote Panel, as for a standard upgrade process.

See section "Step 2 - Upgrading LSM-VIA Remote Panel" on page 17 for a full description of the version upgrade on the Remote Panel.

9. Upgrading the Remote Panel Operating System (Factory Install)



This operation will result in the loss of the Remote Panel configuration. Make sure you take note of your configuration from the Welcome screen.

When required by EVS, you may have to manually update the Operating System installed on the Remote Panel.

Use a USB stick formatted in FAT32 with up to 4GB memory.

1. Extract the content of the Factory Install version of the Operating System archive (*.tar.gz) at the root location of a USB stick (unzipped content).

Name	Date modified	Туре	Size
<mark></mark> res	25/09/2020 16:21	File folder	
📧 install.scr	25/09/2020 16:21	Screen saver	4 KB
📄 mbr	25/09/2020 16:21	File	1 KB
📄 recovery.ext2	25/09/2020 16:21	EXT2 File	614 400 KB
📧 update.scr	25/09/2020 16:21	Screen saver	1 KB

- 2. Power OFF the Remote Panel.
- 3. Plug the USB stick to one of the USB port of the Remote Panel.
- 4. Power ON the Remote Panel.

The Operating System located on the USB stick will automatically be installed.

The following message is displayed on the touchscreen:

Installation in progress, this might take some time, please wait. Do not turn off the remote!	
50%	



- 5. Once the installation is done, power OFF the Remote Panel.
- 6. Remove the USB stick.
- 7. Power ON the Remote Panel.

The LSM-VIA Welcome Screen is displayed.



This update of the Remote Panel Operating System will update the recovery partition on the Remote Panel at the same time.

10. Deploying XClient-VIA

Prerequisites

NEW ! Through this procedure, you will reghost your LSM-VIA workstation, meaning you will restore a factory default. You will have to redo some basic configurations, so it is preferable to be well prepared.

1. Check if you have a valid license file stored on your LSM-VIA workstation.

If a file is stored,

• back it up so you can re-import it after the deployment of the ISO.

The locking code of your LSM-VIA workstation stays the same after the reghost, meaning your license will still be valid.

See section "Managing Licenses" on page 23.

If the file is no longer stored on the LSM-VIA workstation, you can do one of the following actions:

- Check your emails for mails received from EVS to see if you still have the license file provided by EVS.
- Retrieve the license installed on the LSM-VIA workstation through the following command line (which will also rename the license file with the serial number of the unit):

sudo cp /etc/gemalto/lserv.lic /home/evs/Desktop/\$(cat /etc/evs/serial) && sudo chmod 777 /home/evs/Desktop/\$(cat /etc/evs/serial)

Then, back up the "Axxxxxx" file (where "xxxxxx" is the serial number of the XClient-VIA) which is on the desktop to another storage (USB key, other computer, ...).



You can retrieve the license file by connecting remotely in SSH with PuTTy.

- 2. Write down the **serial number** of your LSM-VIA workstation. This information will be needed later during the reghosting process. You can either:
 - Check the label on the chassis of the workstation: Axxxxxx (6 digits),
 - Check the content of the /etc/evs/serial file on the LSM-VIA workstation hard-drive.



If you connect remotely with PuTTy, use the command cat /etc/evs/serial.

- 3. Take a screenshot/picture to keep a trace of your LSM-VIA RCU shortcuts.
- Back up your keyword files. Your LSM-VIA settings will be back to default after the reghost.
 See section "Keywords Settings" on page 43.
- 5. Export the System settings.

See sections "System Settings" on page 32 and "Importing or Exporting a Configuration" on page 48.





The export/import functionality introduced in the LSM-VIA configuration tool with the LSM-VIA 1.8 release will not work for Shortcuts, Shotbox content & Trains Filter, since there is no compatibility between the Setting files from different major versions (1.8 <> 1.9). However, the import/export will work properly for the **System settings**.

 Document all your Infrastructure settings like the IP addresses from the LSM-VIA workstation wired settings, LSM-VIA remote IP settings, EVS server PC LAN you are connecting to, VIA Xsquare IP address (+ user/password).

See section "Infrastructure Settings" on page 27.

7. Export your **bookmarks** in Google Chrome, like the MultiViewer links, VIA Xsquare monitoring page,...



We know some older generation USB keys can cause the reghost process to fail. Would you encounter this problem, use a different type of USB key, preferably a newer model. Make sure the key is FAT32, and can at least hold 8 GB.

USB Key Preparation

- 1. Download Rufus on https://rufus.ie./
- 2. Launch Rufus and select the USB device

INSTALLATION AND CONFIGURATION MANUAL

🕈 Rufus	_		×
Drive Properties			
Device			
USB-LSMVIA (D:) [32 GB]		~	
Boot selection			
Disk or ISO image (Please select)	~ 😔	SELECT	▼
Partition scheme	Target system		
MBR ~	BIOS (or UEFI-CSM)		\sim
 Hide advanced drive properties 			
List USB Hard Drives			
Add fixes for old BIOSes (extra partition,	align, etc.)		
Use Rufus MBR with BIOS ID 0x80 (Default)			\sim
Format Options			
USB-LSMVIA			
File system	Cluster size		
FAT32 (Default)	16 kilobytes (Default))	\sim
 Hide advanced format options 			
✓ Quick format			
Create extended label and icon files			
Check device for bad blocks	1 pass		\sim
Statuc			
status —			
REAL	Y		
🔇 ① ≵ 🖩	START	CLOSE	
device found			



		0 (No persistence)
Downloa	d required	×
1	This image uses Syslinux 6.04 but this application includes the installation files for Syslinux 6.04 As new versions of Syslinux are not compatible another, and it wouldn't be possible for Ruft them all, two additional files must be downly Internet ('Idlinux.sys' and 'Idlinux.bss'): - Select 'Yes' to connect to the Internet and de files - Select 'No' to cancel the operation Note: The files will be downloaded in the cu directory and will be reused automatically if	ation only 4/pre1. ole with one us to include oaded from the lownload these rrent application present.
	Yes	No
Qui	ck format	
Crea	ate extended label and icon files	
Che	ck device for had blocks 1 page	

Check device for bad blocks	1 pass	~
Status —		
Downloa	ding: 100.0%	
© (i) ≵ 🔳	START CA	NCEL
Downloading Idlinux.bss (512 bytes)		
Continue the procedure.		

3. Select your LSM-VIA iso image.

You can download the right image version from the download area (<u>https://download-area.evs.com/en</u>).

🖋 Rufus 3.11.1678 — 🗆 🗙	📙 🛛 🚽 🖬 soFiles 🛛 🛛 Manage — 🗆 🗙
Drive Properties	File Home Share View Disc Image Tools 🗸 🥝
Device	$\leftarrow \rightarrow \checkmark \uparrow$ $\sim \land \land$ Des \rightarrow isoFiles $\checkmark \circlearrowright$ \checkmark Search isoFiles
USB-LSMVIA (D:) [32 GB] 🗸 🖓	A Name
Boot selection	A Quick access
Disk or ISO image (Please select) \checkmark SELECT 🔽	Desktop 🖈
Partition scheme Target system	🚽 Downloads 🖈
MBR V BIOS (or UEFI-CSM) V	😫 Documents 🖈
 Hide advanced drive properties 	📰 Pictures 🖈
List USB Hard Drives	
Add fixes for old BIOSes (extra partition, align, etc.)	System32
Use Rufus MBR with BIOS ID 0x80 (Default)	VENTOYUSBBO
Format Options	Xeebra 2.4
Volume label	OneDrive - EVS B
USB-LSMVIA	
File system Cluster size	This PC
FAT32 (Default) $$\sim$$ 16 kilobytes (Default) $$\sim$$	3D Objects
 Hide advanced format options 	Desktop
Quick format	Documents
Create extended label and icon files	Downloads
Check device for bad blocks 1 pass \checkmark) Music
Status	E Pictures
	Videos
READY	별을 Windows (C:)
	USB-LSMVIA (D
S (i) ≈ 🗐 START CLOSE	🛫 Team Store (#10
	Public Store (#2 ♥
No image selected	i item i i item selected 3,18 GB



4. Check all the parameters and click **Start**.

* n / n // / / m					
Rufus 3.11.1678		-	-		×
Drive Properties					
Device					
USB-LSMVIA (D-) [32 GB]				~	Ш
Post relation					(III)
evelop-via-	~	0		ELECT	-
Dersistent partition size	-	\odot		DELECT	1.
Persistent partition size		0 (No	nersi	stence)	
-	To an at as at an	0 (140	, beisi	steriecy	
		n I			~
	BIOS OF DEP	1			~
 Hide advanced drive properties 					
List USB Hard Drives					
Add fixes for old BIOSes (extra partition, ali	gn, etc.)				
Use Rufus MBR with BIOS ID	0x80 (Defau	lt)			\sim
Format Options					
• Volume label					
BOOT					
File system	Cluster size				
FAT32 (Default)	16 kilobytes	(Defau	ult)		~
 Hide advanced format options 					
Ouick format					
Create extended label and icon files					
Check device for bad blocks	1 nass				~
	1 puss				-
Status —					
READY					
iter of					
③ ① 尧 ■	START			CLOSE	
	Swatt				
Using image: evs-lsm-via-1.0.6.30453 iso					

5. Select the Write in DD image mode option and click OK.

🖋 Rufus 3.11.1678	– 🗆 X				
Drive Properties					
Device					
USB-LSMVIA (D:) [32 GB]	~ E				
Boot selection					
evs-lsm-via-	✓ Ø SELECT ▼				
Persistent partition size					
	0 (No persistence)				
Partition scheme Tai	rget system				
 Hide advanced drive properties 					
Add fixes for old BIOSes (extra partition, align	etc.)				
ISOHybrid image detected					
The image you have selected is an 'ISOHybrid' image. This means it can be written either in ISO Image (file copy) mode or DD Image (disk image) mode. Rufus recommends using ISO Image mode, so that you always have full access to the drive after writing it. However, if you encounter issues during boot, you can try writing this image again in DD Image mode.					
Please select the mode that you want to use to write this image:					
O Write in ISO Image mode (Recommended)					
Write in DD Image mode					
	OK Cancel				
READY					
\$ () ≈ 🗉	START CANCEL				
Using image: evs-lsm-via-1.0.6.30453.iso					

6. Wait a few minutes until the USB stick is ready to be used.



Client Installation



This operation will result in the loss of the XClient-VIA Infrastructure configuration and the existing licenses. Make sure you copy and save the license files and you take note of your configuration.

- 1. Plug the USB key on the computer.
- 2. Boot on the USB key:
 - a. Press F12 during startup (or Fn+F2 on small EVS keyboards).
 - b. From the Startup Device menu, select the USB key created with Rufus.



c. From the next screen, select **LSM-VIA Server**.



The installation process starts:

3. At the end of the first installation step, keep the USB key plugged to the XClient-VIA and reboot:


4. After the reboot, you will be asked to enter the serial number (available at the front of your computer).

	00.52.541					
12024-00-04	09:52:541					
[2024-06-04]	09:52:54]	*******	##	##	нининини	
[2024-06-04	09:52:54]		##	. ##		
[2024-06-04	09:52:541	********	##	##		
[2024-06-04	09:52:541		## #	11		
[2024-06-04	09:52:54]	********	####			
[2024-06-04	09:52:54]					
12024-06-04	09:52:541					-
[2024-06-04	09:52:541	Proceeding with	installat	ion of	evs-lsmvia-server	
[2024-06-04	09:52:541					
[2024-06-04	09:52:54]	Executing /opt/	evs/evs-pr	roduct-	-installer/lib/evs-product-installer/install.d/1	ти-спеск-
[2024-06-04	09:52:541	*** Stop servic	es a			
[2024-06-04	09:52:541					
[2024-06-04 09:52:54] *** Stop containers						
[2024-06-04 09:52:54] *** Check graphical context						
[2024-06-04 09:52:54] *** Check modules usage						
[2824-86-84 09:52:54] Check kernel module usage of nvidia_uvm (not loaded) [OK]						
[2024-06-04 09:52:54] Check kernel module usage of nvidia_drm (not loaded) [OK]						
[2024-06-04 09:52:54] Check kernel module usage of delta_x300 (not loaded) [OK]						
12024-06-04 09:52:541 Check kernel module usage of mlx5_ib (not loaded) [OK]						
[2024-06-04	Ø9:52:541	Executing /opt/evs/evs-product-installer/lib/evs-product-installer/install.d/28-hardwa				
[2024-06-04 09:52:54] [EUS] Checking hardware profile specifics.						
[2824-86-84 89:52:54] Detecting hardware profile using evs-config-io						
[2024-06-04	R9:52:54]	Set system se	rial numbe	er syst	tem - allowed pattern: 'A[0-9]{6}' []:	
		and the second second		•		
-						

5. At the end of this process, restart your computer to finalize the installation.

```
[EUS] System is configured
[2024-06-04 10:07:08] logs are available at /var/log/evs/evs-lsmvia-server/install_evs-lsm
Removed "/etc/systemd/system/multi-user.target.wants/evs-setup@evs-lsmvia-server.service".
[EVS] Press ENTER to reboot
```

If you have any question(s), please contact us: support@evs.com.



EVS Broadcast Equipment is continuously adapting and improving its products in accordance with the ever changing requirements of the Broadcast Industry. The data contained herein is therefore subject to change without prior notice. Companies and product names are trademarks or registered trademarks of their respective companies.

