



## TECH NOTE

### DOS 6.22 Upgrade Install Disk



This procedure will guide you through upgrading a EVS XT or XT[2] series server from DOS version 5 to DOS version 6.22. This upgrade is required to operate Multicam version 8.00.0+



DOS6.22\_UpgradeInstaller.exe

Download the DOS6.22\_UpgradeInstaller.exe to your computer

Run the exe program to use the image file to create a bootable DOS 6.22 installer disk

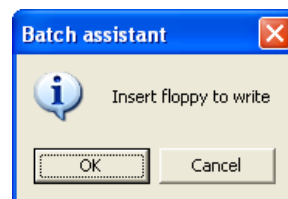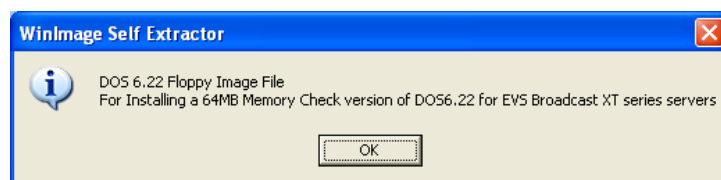

Insert the floppy disk into the A: Drive and press OK.  
Once the disk is created... proceed to the XT server

**Note:** 64MB of RAM is required to install DOS 6.22 and Multicam 8.00+ Contact EVS if your server has less than 64MB of RAM installed.

#### Place the disk into the server and reboot.

The system will perform the following:

- ZIP the existing parameters and configuration files from the server for restore later
- Format the disk (answer Y to any prompts)
- once DOS 6.22 is installed, you can install the Multicam software.

Place the USB memory stick into the server, and reboot.

If installing from floppy, reboot to the C:prompt and then insert the disk 1 of 5

At the C: prompt, change to the appropriate drive for install

D: for USB normally

A: for floppy install

and type: INSTALL followed by [enter]

After the Multicam installer is complete, reboot the XT and you are done.