

From: Son bui@for-a.com
Subject: Re: FA-10DCRU & FA-1010 Firmware Update
Date: June 17, 2020 at 11:16 AM
To: Ian Liuzzi-fedun iliuzzifedun@amvchelsea.com
Cc: Ken Truong truong@for-a.com, Bob Peterson peterson@for-a.com, Son Bui son@for-a.com, Kensuke Sakamoto sakamoto@for-a.co.jp, Murayama Kazuaki murayama@for-a.co.jp

Hi Ian,

Nice to hear from you.

The latest version for your FA-1010 is Software version 4.10.

Please see below for the update procedure and download link in case you need it.

Please let us know if you have any questions or need further assistance.

1. FA-1010


Software: v4.10
FPGA1: v3.15
FPGA2: v3.15
FPGA3: v3.15
GUI: 4.1.0

FA-10DCRU

<https://www.dropbox.com/sh/1lv3w7vaxov0unb/AABxstUiosmWqtqeB4xTueCQa?dl=0>

I. FA-1010 Software Update Procedure

1. Connect your FA-1010 and PC using a LAN cable.
2. Start the file **FA1010 Updater.exe**.
3. Enter the **IP address** (default IP address is 192.168.0.10)
4. Check **FA-1010 Soft** under the **Target** section.
5. Select the latest firmware version under Update File.
FA10DCCRU FA1010 Update/
FA-1010 Updates/FA- 1010_180214(SOFT=4.10+FPGA1-3=3.15+FPGA4=3.14)/DSP/
FA1010_PM9222-17_V410.ais
6. Click on **Update**.

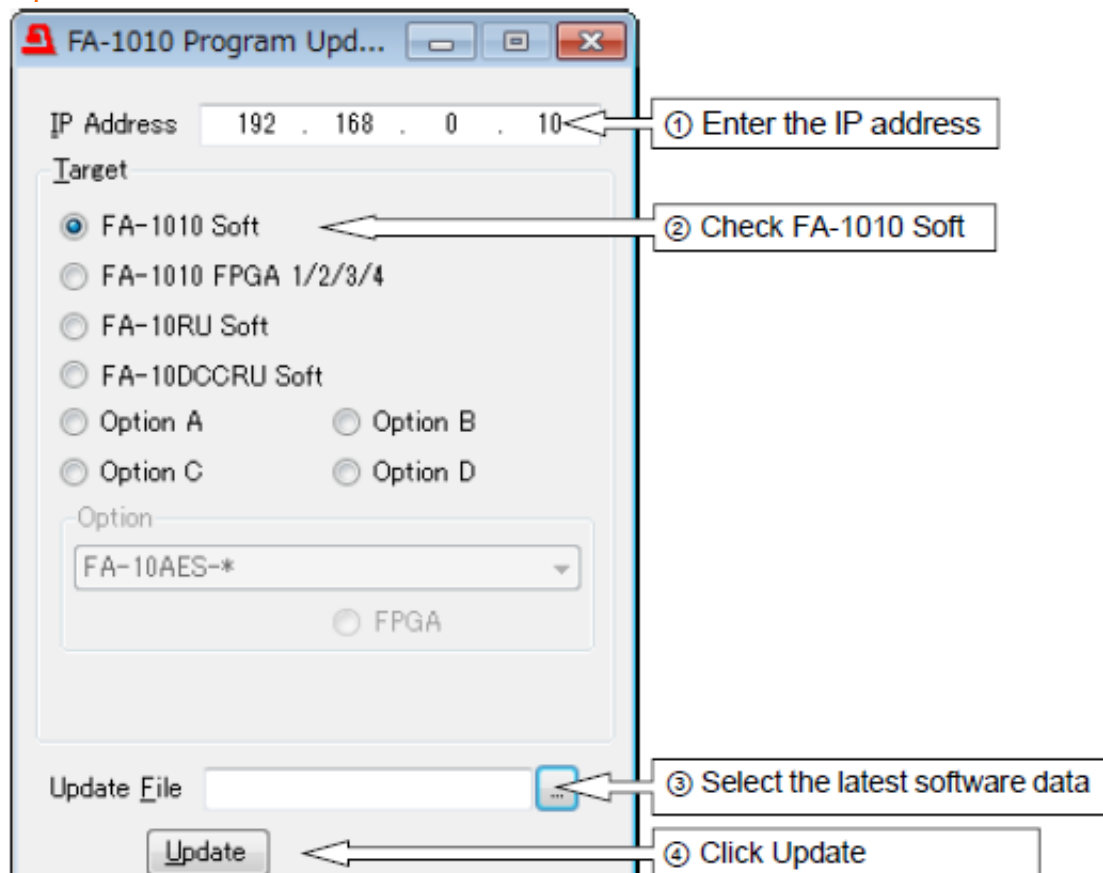

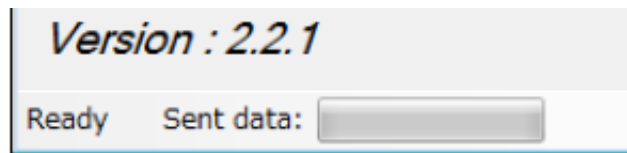


Fig. 13 FA-1010 Program Updater dialog
(for Software update settings)

II. FA-1010 FPGA Update Procedure

1. Connect your FA-1010 and PC using a LAN cable.
2. Start the file **FA1010 Updater.exe**.
3. Enter the **IP address** (default IP address is 192.168.0.10)
4. Check **FA-1010 FPGA1/2/3/4** under the **Target** section.
5. Select the latest firmware version under Update File.
FA10DCCRU FA1010 Update/
FA-1010 Updates/FA- 1010_180214(SOFT=4.10+FPGA1-3=3.15+FPGA4=3.14)/FPGA/
FA1010_PM9221-17_V315_314.pof
6. Click on **Update**.

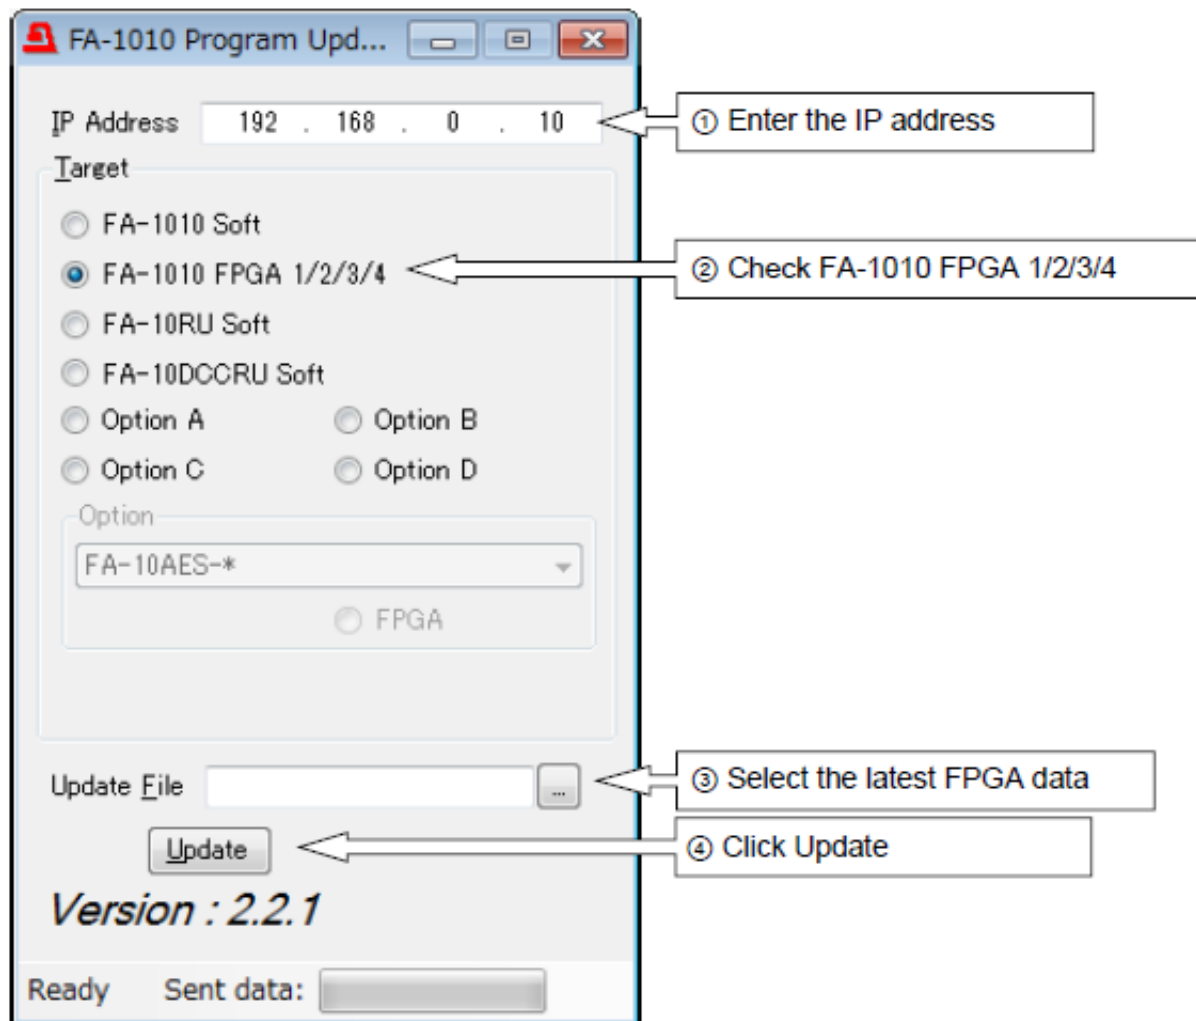


Fig. 14 FA-1010 Program Updater dialog
(for FPGA update settings)

III. FA-1010 GUI Installation Procedure

1. Connect your FA-1010 and PC using a LAN cable.
2. Navigate to the folder:
FA10DCCRU FA1010 Update/FA-1010 Updates/
FA-1010_180214(SOFT=4.10+FPGA1-3=3.15+FPGA4=3.14)/PD/PD0282-16/FA-1010GUI/
3. Run the file **Setup.exe**.
4. Please follow the prompts from the dialog boxes.

4. Please follow the prompts from the dialog boxes.

IV. FA-10DCCRU Update Procedure

1. Connect your FA-1010 and PC using a LAN cable.
2. Start the file **FA1010 Updater.exe**.
3. Enter the **IP address** (default IP address is 192.168.0.10)
4. Check **FA-10DCCRU Soft** under the **Target** section.
5. Select the latest firmware version under Update File.
FA10DCCRU FA1010 Update/FA10DCCRU_181030(SOFT=4.00+GUI=2.00+Manual)/FA10DCCRU_181030(SOFT=4.00+GUI=2.00+Manual)/FA10DCCRU_PM9316-7_V400.ais
6. Click on **Update**.
7. When the message "Please Reboot" appears, please reboot the unit.

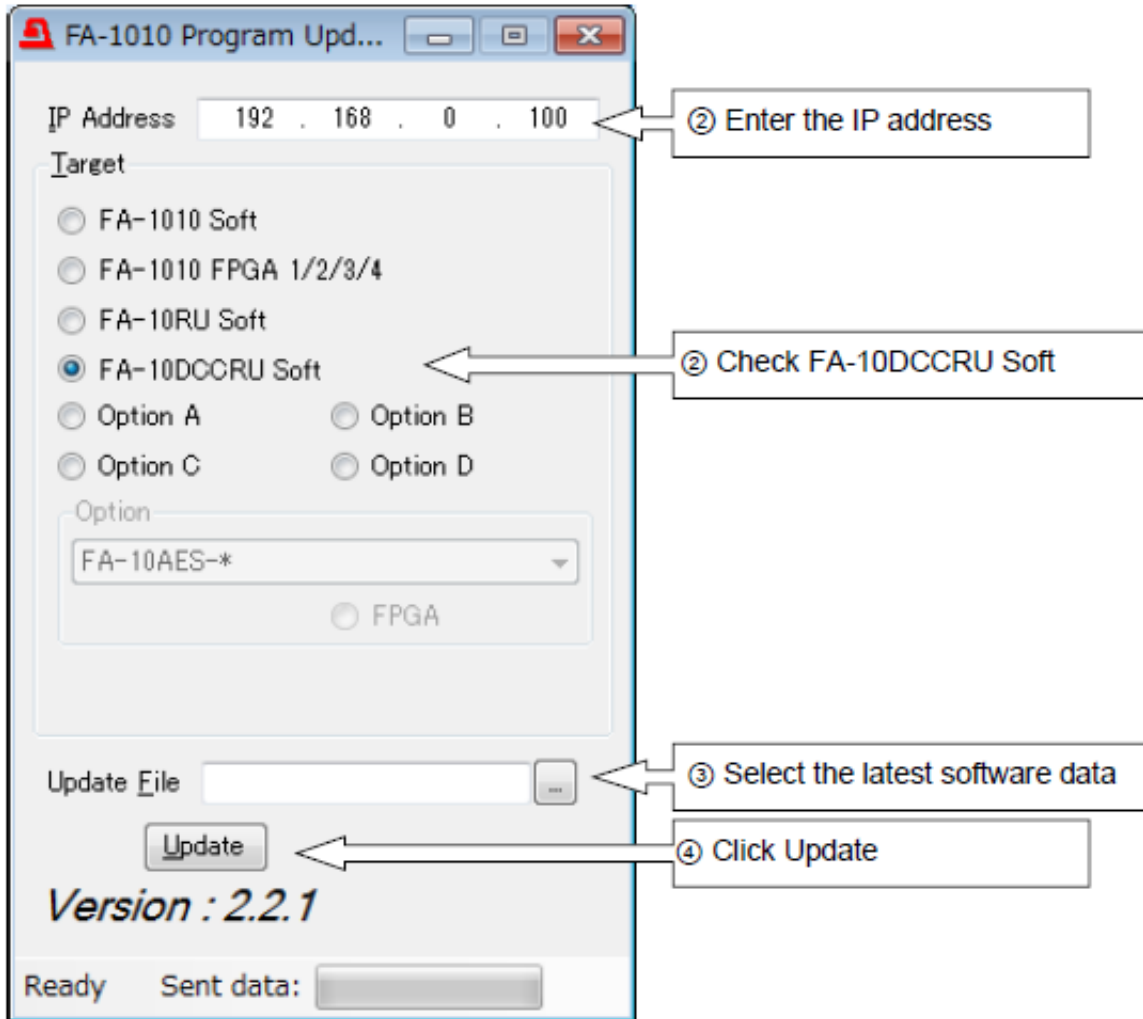


Fig. 19 FA-1010 Program Updater dialog
(for FA-10DCCRU software update settings)

Thank you very much for your time and efforts. They're very much appreciated.

Thank You And Have A Nice Day,
Son Bui
352.681.0251

On 6/17/2020 7:15 AM, Ian Liuzzi-fedun wrote:

Following up to see if you folks have released a new version of the FA-1010 firmware or GUI software in the past 6-12 months or so please.
Ian

Ian Liuzzi-Fedun
Engineer-in-Charge
All Mobile Video
516-417-7241



Virus-free. www.avast.com