



TXI-48



Set Dip Sw 7 & 8
to the up position

The TXI-48 is shipped from the factory to work serially.
To make the TXI-48 work using Ethernet.

1. Power off the TXI-48.
2. Set Dip Switch 7 and 8 to the up position.
3. Power on unit.