

LV5770 Software Upgrade Procedure

Caution: Please DO NOT turn off the power during software upgrade.

1. Unzip the **LV5770.zip** file.
2. Copy the "**LV5770_UPDATE**" folder to the USB thumb drive from the PC. (The LV5770_UPDATE folder includes the SYS, DAT, and LDR subfolders).
NOTE: The USB thumb drive maximum capacity should be 4GB and it should be formatted as FAT32.
3. Plug in the USB thumb drive to the LV5770.
4. Power on the LV5770.
5. Press the **SYS** button on the front panel.
6. Press **[F7] INITIALIZE**.
7. Press **[F7] FIRMWARE UPDATE**.
8. Press **[F3] UPDATE YES**
9. Update will take a few minutes and it will reboot after update is completed.
10. END.