

## MVS panel supported SBUS commands

The MVS control panel supports the following 8 commands including 7 extended commands. Refer to the SBUS PROTOCOL and COMMAND SPECIFICATIONS 2nd Edition (Revised 2) document for command description and examples. Page numbers and brief description of panel supported commands are listed below:

**[1] Matrix switching request (page 14)**

<MVS Panel supports 1024 sources and destinations and 8 levels>

<MVS Panel receives and reports protection status only>

**[3] Data request between primary station and secondary station (page 16)**

<MVS Panel Requests P1 standard data only>

**[4] Data transfer between primary station and secondary station (page 17)**

<MVS Panel transfers tally data with device type and SBUS table data (page0)>

**[5] Data request to secondary station through primary station (page 18)**

<MVS Panel requests empty XPT assign data from MKS-808X remote AUX panels>

**[6] Data transfer to secondary station through primary station (page 20)**

<MVS Panel transfers XPT assign data to MKS-808x remote aux panels>

**[9] Switching execution result (page 22)**

<MVS Panel supports maximum 1024 sources and destinations and 8 levels>

**[C] Message code and extended command for setting (page 23)**

<MVS panel supports the following extended commands>

**-MCOD: 04h Data transfer between primary station and secondary station (page24)**

<MVS Panel S-BUS Table Data (Page1) receive messages >

**-MCOD: 1Ah Description name data request B (page 30)**

<The MVS panel can request descriptive names from a primary or secondary station>

**-MCOD: 1Bh Description name data transfer B (page 31)**

<MVS panel can receive a data transfer of descriptive names from a primary or secondary station>

**-MCOD: 30h ALIAS name data request (page 34)**

<MVS Panel can request Alias name data from the primary station>

**-MCOD: 31h ALIAS name data transfer (page 34)**

<MVS Panel can receive a data transfer of Alias names from the primary station>

**-MCOD: A0h - BCh Data to Remote 3 sent by secondary station (page 38)**

<The MVS Panel returns "No Setup Items" when using remote 3 terminal mode (call secondary station) >

**-MCOD: BDh Key code data sent by primary station (page 38)**

<MVS Panel only accepts Ctrl-D remote 3 command>

**[F] Reset (Cancel) (page 39)**