

8 XLRs

High = Red
Low = Black
No Ground

WOHLER PINOUTS #1
4 Channel
 BOTH PINOUTS ARE FOR A 25 PIN MALE CONNECTOR
 (WOHLER HAS CHASSIS MOUNT FEMALE)

SUM 6 PIN # ABCD SELECT

I/P 1	HIGH	1	I/P 1 LEFT	HIGH
I/P 1	LOW	2	I/P 1 LEFT	LOW
I/P 2	HIGH	3	I/P 2 LEFT	HIGH
I/P 2	LOW	4	I/P 2 LEFT	LOW
I/P 3	HIGH	5	I/P 3 LEFT	HIGH
I/P 3	LOW	6	I/P 3 LEFT	LOW
N/C	N/C	7		N/C
I/P 4	HIGH	8	I/P 1 RIGHT	HIGH
I/P 4	LOW	9	I/P 1 RIGHT	LOW
I/P 5	HIGH	10	I/P 2 RIGHT	HIGH
I/P 5	LOW	11	I/P 2 RIGHT	LOW
I/P 6	HIGH	12	I/P 3 RIGHT	HIGH
I/P 6	LOW	13	I/P 3 RIGHT	LOW
		14	I/P 4 LEFT	HIGH
		15	I/P 4 LEFT	LOW
		16		
		17		
		18		
		19		
		20		
		21		
		22		
		23		
		24	I/P 4 RIGHT	HIGH
		25	I/P 4 RIGHT	LOW

Wohler Speaker Adapter #2

6 Channel

Pin #	XLR	Pin
1	1	High
2	1	Low
3	2	High
4	2	Low
5	3	High
6	3	Low
7	No	Pin.
8	4	High
9	4	Low
10	5	High
11	5	Low
12	6	High
13	6	Low

No grounds

1 Male db 25 → 6 Female XLR