



CLEAR

AUX CLEAR

DEFAULT SET UP

CONSOLE CLEAR

REPLAY

EXEC

CHANNEL

GLOBAL

MAIN 1 SURR	MAIN 1 STEREO	MAIN 2 SURR	MAIN 2 STEREO
GROUP1 STEREO	GROUP2 STEREO	GROUP3 STEREO	GROUP4 STEREO
GROUP5 STEREO	GROUP6 STEREO	GROUP7 STEREO	GROUP8 STEREO


SELECTION

BANK A MAINS GROUPS	BANK B AUX 1-10	BANK C AUX 11-20
BANK D EXT	BANK E USER	MISC FUNCT


SELECTION TYPE

MISC FUNCTIONS


METER 1 MAIN 1 SURROUND	METER 2 MAIN 2 STEREO	METER 3 VTR1/1 STEREO
-------------------------------	-----------------------------	-----------------------------

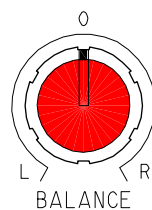

BALANCE

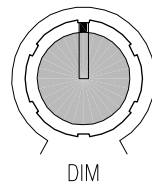

DIM

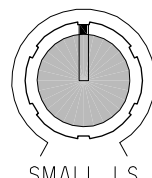

SMALL LS

LS MON  
INSERT

IN

STEREO

MONO

CHANGE  
OVER

HEAR  
1

HEAR  
2

CONTROL ROOM MONITOR

123

456

789

CLR0EXEC

LIVE MEMORY

04  
04 08 76

Scene3  
Scene8

PRE VIEW

LOAD

SAVE

SELECTED MEMORY

><

REMOVE

INSERT INTO  
STACK

MEMORY


PFL/LIST

AFL

DIRECT INPUT

CLEAR

DIRECT INPUT

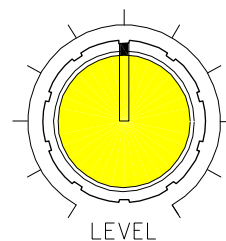

LEVEL

DIM

CONTROL ROOM MONITOR

CUT

PRE-SEL1 MAIN 1 SURR	PRE-SEL2 MAIN 2 SURR
----------------------------	----------------------------

1	2	3
STUDIO MAIN 1 STEREO	MISC OP2 FOLLOW CR LS	MISC OP3 AUX 7 MONO
MUTE	MUTE	MUTE
4	5	6
MISC OP4 PFL	MISC OP5 MAIN 1 STEREO	MISC OP6 FOLLOW LS SEL
MUTE	MUTE	MUTE

