



Table of Contents

1	Overview.....	2
2	Connecting with a Device.....	3
3	General navigation.....	5
3.1	Toolbar.....	5
3.2	Sidebar.....	5
3.3	System Settings Dialog.....	7
3.4	Debug Terminal.....	8
4	The Tabs.....	10
4.1	In-Out Tab.....	10
4.2	Black Level Tab.....	13
4.3	White Balance Tab.....	14
4.4	Filter Tab.....	15
4.5	Multi Color Controller Tab.....	16
4.6	Knee Function Tab.....	17
4.7	Lookup Table Tab.....	18
4.8	Defect Pixel Correction Tab.....	20
4.9	Output Tab.....	22
4.10	Info Tab.....	23
4.11	Update Tab.....	25



1 Overview

This manual describes the usage of the ProVideo GUI by Dream Chip. The GUI is used to setup supported ProVideo devices which are attached over a serial interface. The GUI is currently available for Linux and Windows operating systems and supports the following devices:

- ATOM one
- ATOM one mini
- ATOM one 4K Mini

The goal of this document is to describe the full functionality of the GUI. Not all devices listed above support all features, so the actual appearance of the GUI might vary.

The screenshots in this documentation were created, while the GUI was connected to an ATOM one camera. The application was run on a desktop PC running Ubuntu 16.04, on other operating systems the style of the UI elements may vary.

The GUI mainly consists of two windows: The connection dialog is used to establish a connection to a device, while the main window is used to setup the device. They are described in detail in the following chapters.

The GUI is open source software, you can get the source code from GitLab:

<https://gitlab.com/dreamchip/provideo-gui>


The latest firmware and software updates for Dream Chip products, including updates for the ProVideo GUI can be downloaded here:

<https://gitlab.com/dreamchip/provideo-downloads>

2 Connecting with a Device

The GUI supports serial connections using either the RS485 or RS232 protocol. When using RS232 only one device can be connected at a time, with RS485 multiple devices can be connected over one bus. The standard power cable adapter provided with most devices uses RS485.

On application startup the GUI will automatically search for connected devices on the last used COM-Port. If one or more devices are found, the GUI will connect to the first device and directly open the main window. If no device can be found the connect dialog will open. It has two pages, one for setting up RS485 the other for RS232 connections:

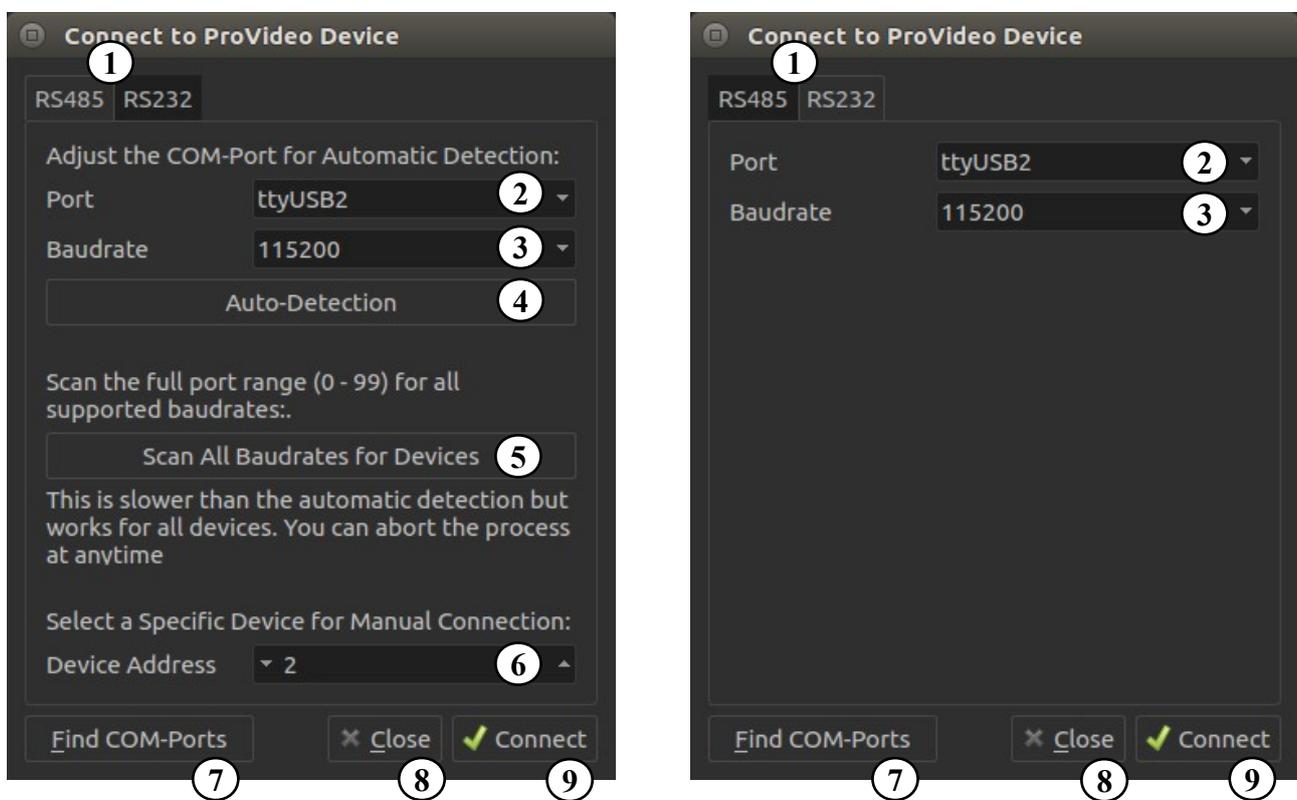

1	Choose between RS485 or RS232 connection.
2	COM-Port to which the device is connected. This will be "ttyUSBX" on Linux and "ComX" on Windows.
3	The Baudrate has to match the Baudrate of all connected devices. Using devices with different Baudrates on the same RS485 Bus is not supported.
4	The Auto-Detection will find all devices which are connected to the selected COM-Port and match the selected Baudrate.
5	If the Auto-Detection fails, you can try the automated scan which will find all devices which are connected to the selected COM-Port.
6	When manually connecting to a device, the Device Address has to match the device parameters.




7	When connecting a new COM-Port device after the GUI was launched, click this button to add it to the Port list.
8	Close the Connect Dialog. If you have previously tried to establish a connection to a device, but the connection was unsuccessful, this will close the GUI (since it is in disconnected state).
9	Connect to the device which is specified through the above mentioned settings (see points 2, 3 and 6).

3 General navigation


After the connection was established, the main window will open. It has toolbar for general options and a sidebar to navigate through the sub pages of the GUI.

3.1 Toolbar

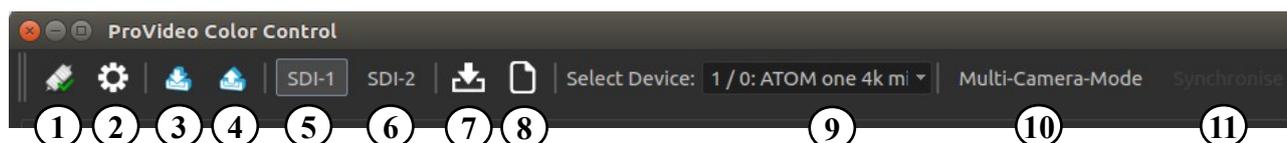

1	Open the connect dialog (see chapter 2).
2	Open the system settings dialog (see chapter 3.3)
3	Load settings from camera to GUI.
4	Save settings from GUI to camera for startup configuration.
5	On ATOM one (4k) devices: Switch to configuration of SDI 1 LUT On Cameleon devices: Switch to configuration of complete SDI 1 chain
6	On ATOM one (4k) devices: Switch to configuration of SDI 2 LUT On Cameleon devices: Switch to configuration of complete SDI 2 chain
7	Save current system settings to disk.
8	Load settings from disk into GUI and transfer them to the device.
9	Switch between connected devices. Only visible if the auto-detection was used to connect with the device over RS485. The first number represents the device address, the second number the device broadcast address.
10	Toggle broadcast mode. In broadcast mode the currently selected device will be the broadcast master, all other devices in the same broadcast group will be slaves. Settings applied to the master will also be applied on all slaves.
11	The Synchronise button is only enabled, if broadcast mode is active. Click it to apply the settings of the current device (broadcast master) on all other devices (broadcast slaves).

3.2 Sidebar

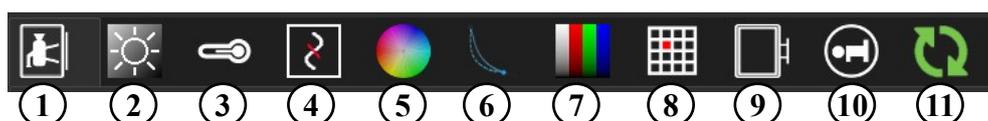

Note: for better presentability the screenshot of the sidebar has been turned left by 90 degrees. A click on a symbol opens the corresponding tab:

1	In-Out Tab: Configure exposure settings, lens shading correction, video output, genlock and timecode features.
---	--




2	Black Level Tab: Configure black levels and flare compensation.
3	White Balance Tab: Configure white balance settings.
4	Filter Tab: Configure denoise and detail filters.
5	Multi Color Controller Tab: Configure color correction.
6	Knee Function Tab: Configure the knee function.
7	Lookup Table Tab: Configure the gamma correction lookup table.
8	Defect Pixel Correction Tab: Setup the automatic defect pixel correction and create a defect pixel table.
9	Output Tab: Configure the RGB to YcbCr matrix and fine tune the SDI output range.
10	Info Tab: Show device and software information and change system settings.
11	Update Tab: Perform device updates.

The tab pages will be described in detail in chapter 4.

3.3 System Settings Dialog

The settings dialog is used to configure general device and GUI settings.

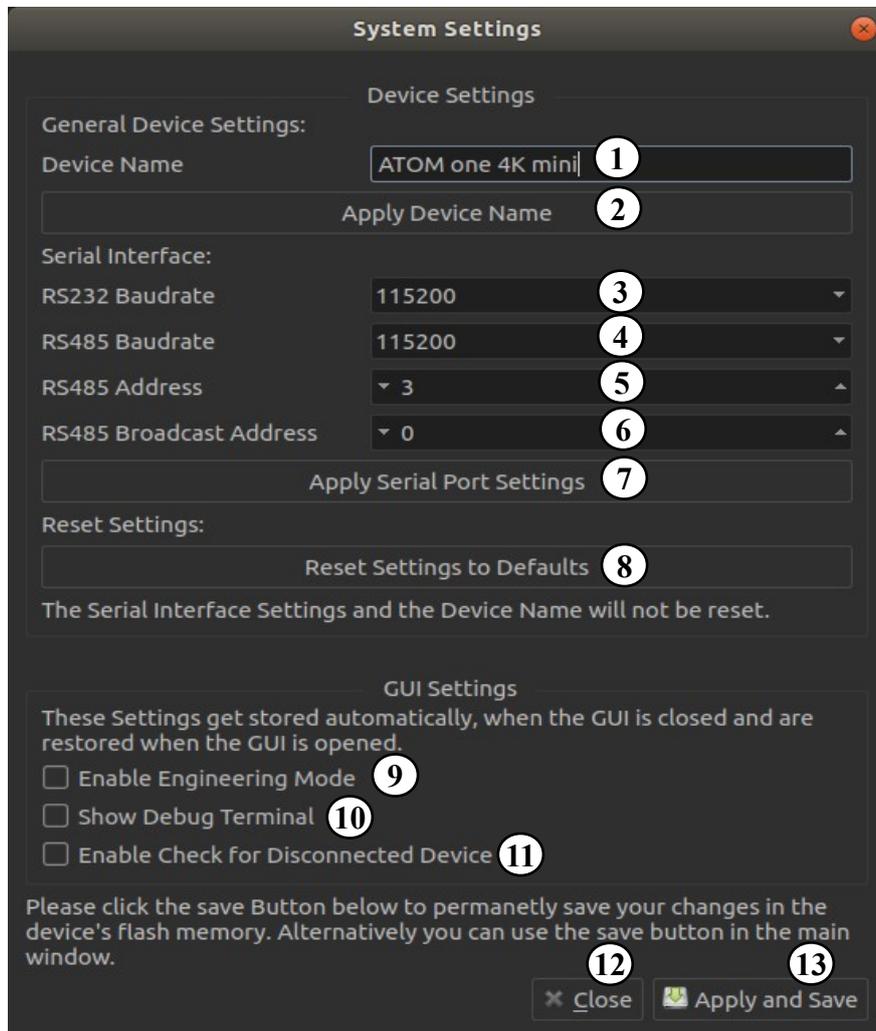


1	Use this field to enter a new device name.
2	Click to apply the device name on the device.
3	Change the baudrate of the RS232 port of the device. Usually this should be left at the default setting.
4	Change the baudrate of the RS485 port of the device. Usually this should be left at the default setting.
5	Change the RS485 address of the device. Before connecting multiple devices to one RS485 bus, make sure that all devices have different addresses, or you will have address conflicts!
6	Change the RS485 broadcast address of the device. This is useful if you want to have multiple broadcast groups on one RS485 bus.



7	Click this button to apply the new Serial interface settings. Without this step, the settings will be left unchanged.
8	Use this to reset all settings to factory defaults. Careful: This will delete any calibration you have done, e.g. to the multi color controller. If needed save those settings separately before performing a full reset!
9	Enable the engineering mode to display additional GUI elements. Careful: Changing engineering settings can drastically decrease the image quality.
10	Enable the Debug Terminal (see chapter 3.4 for more details).
11	Enable a periodic connection check. If enabled the GUI will ping the connected device every 2 seconds. If device connection is lost, a dialog will be displayed.
12	Close the settings dialog. Please note that this will not save any settings. If you have made changes which you want to apply permanently, click the "Apply and Save" button first.
13	Apply all Settings and Save the settings permanently. This has the same effect as clicking the save settings button in the toolbar. If you do not want to save the settings permanently, use the Buttons 2 and 7 and then close the dialog using the button 11.

Note: The GUI Settings (points 11, 12 and 13 above) will be saved when the GUI is closed and are restored when it is opened again.

3.4 Debug Terminal

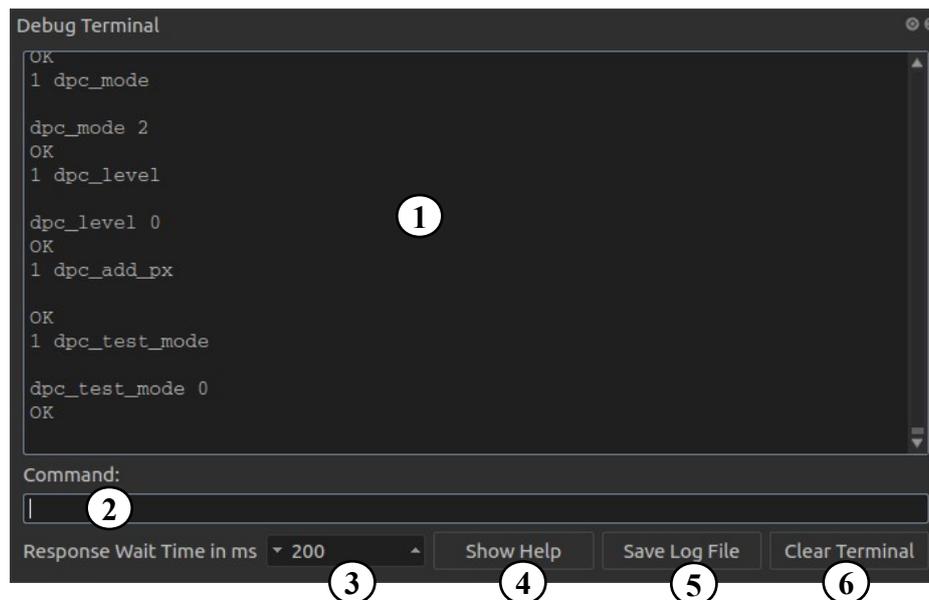

The Debug Terminal shows all commands which are sent by the GUI. It can also be used to manually send commands to the device.

By default the Debug Terminal opens as a docked widget of the main window. You can turn it into a stand-alone window by grabbing it and dragging it away from the main window.




The Debug Terminal can be useful to understand how the ProVideo command system of your device works. Simply open the debug terminal, make changes in the GUI and watch the output.

1	History of send / received commands. This window shows a maximum of 10000 lines, older lines get deleted as soon as this limit is reached.
2	<p>The command line can be used to enter your own commands (see the reference manual of your device for a full list of the available commands). The command line features a command history which you can access by pressing the Arrow Up and Down keys on your keyboard while the command line is active. The command history can contain up to 100 commands, older commands are deleted as soon as this limit is reached.</p> <p>You can also copy and paste a list of commands, e.g. from a text document to the command line, all commands will then be executed. Please make sure that you have selected an appropriate command response wait time (see point 3).</p>
3	<p>Since the Debug Terminal does not know how long a manually entered command has to be processed in the device a maximum wait time has to be specified. For most commands the default of 200ms is sufficient.</p> <p>For long commands like storing the DPCC table or enabling Genlock you will have to increase the wait time, otherwise you will not see the answer of the device. If you run a script with multiple commands by pasting it into the command line make sure to select a wait time which is long enough for the most time consuming command in the script.</p>
4	Click this button to show the in-application help of the Debug Terminal.
5	Click this button to save the current content of the Debug Terminal to a text file. If you experience problems with your device like commands which are not correctly executed, it can be helpful for the Dream Chip support team if you send them the command log for investigation.
6	This button clears the content of the Debug Terminal. The command history is not deleted.

4 The Tabs

Each tab focuses on a certain feature set of the device. Below is a list of all tabs currently available in the GUI. Depending on your device, some tabs or features might not be available.

4.1 In-Out Tab

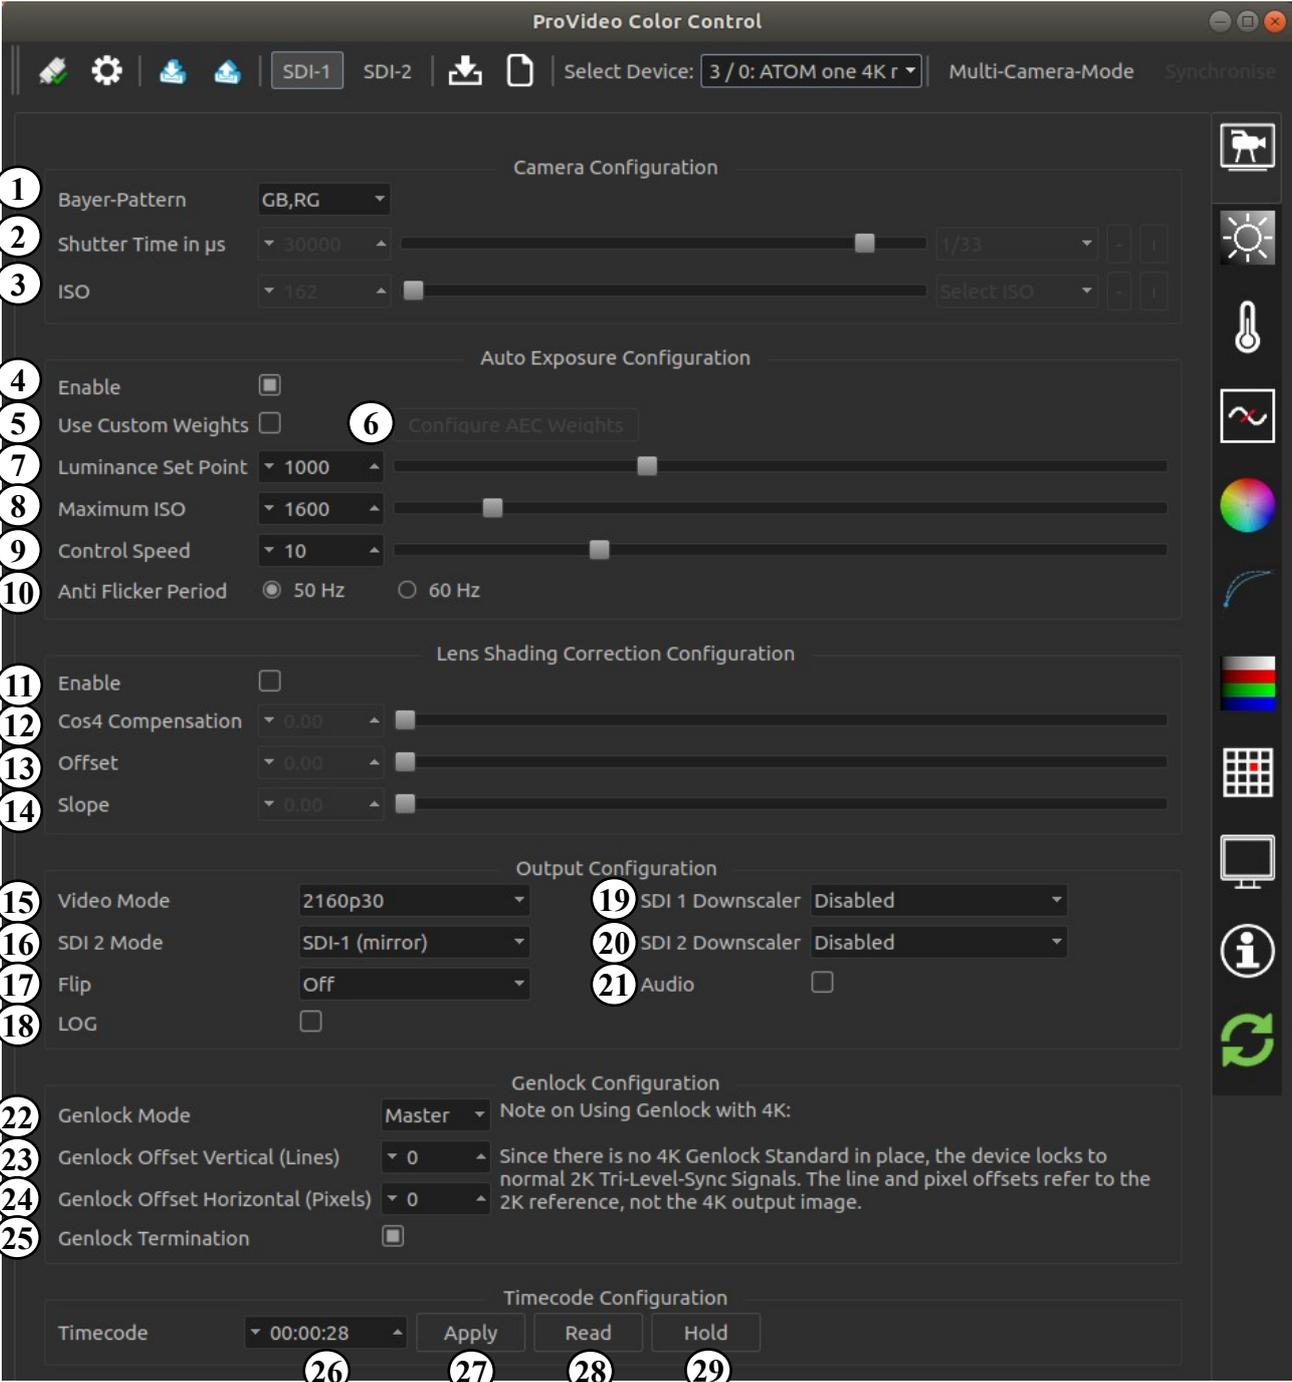

The screenshot shows the ProVideo Color Control GUI with the following settings and callouts:

- Camera Configuration**
 - 1 Bayer-Pattern: GB, RG
 - 2 Shutter Time in μ s: 30000
 - 3 ISO: 162
- Auto Exposure Configuration**
 - 4 Enable:
 - 5 Use Custom Weights:
 - 6 Configure AEC Weights
 - 7 Luminance Set Point: 1000
 - 8 Maximum ISO: 1600
 - 9 Control Speed: 10
 - 10 Anti Flicker Period: 50 Hz, 60 Hz
- Lens Shading Correction Configuration**
 - 11 Enable:
 - 12 Cos4 Compensation: 0.00
 - 13 Offset: 0.00
 - 14 Slope: 0.00
- Output Configuration**
 - 15 Video Mode: 2160p30
 - 16 SDI 2 Mode: SDI-1 (mirror)
 - 17 Flip: Off
 - 18 LOG:
 - 19 SDI 1 Downscaler: Disabled
 - 20 SDI 2 Downscaler: Disabled
 - 21 Audio:
- Genlock Configuration**
 - 22 Genlock Mode: Master
 - 23 Genlock Offset Vertical (Lines): 0
 - 24 Genlock Offset Horizontal (Pixels): 0
 - 25 Genlock Termination:

Note on Using Genlock with 4K: Since there is no 4K Genlock Standard in place, the device locks to normal 2K Tri-Level-Sync Signals. The line and pixel offsets refer to the 2K reference, not the 4K output image.
- Timecode Configuration**
 - 26 Timecode: 00:00:28
 - 27 Apply
 - 28 Read
 - 29 Hold



1	Setup the bayer pattern of the sensor. This setting is only visible if “Engineering Mode” is enabled on the info tab and usually should not be changed by the user.
2	Manually set the shutter time in microseconds. Can only be adjusted if auto exposure is disabled. Use the Combo Box and the “+” and “-” buttons to the right of the slider to switch between common exposure time presets.
3	Manually set the sensor gain (ISO). High values will lead to a brighter image but also more noise. Can only be adjusted if auto exposure is disabled. Use the Combo Box and the “+” and “-” buttons to the right of the slider to switch between common ISO presets.
4	Enable auto exposure. This will automatically adjust shutter time, ISO and aperture (if available). Turn off to use manual settings (see points 2 and 3). If turned on the elements 5 to 10 will be enabled.
5	By default the device uses an optimized auto exposure algorithm, which also works with back light conditions. If you want to manually setup the weighting of the auto exposure, check this box and click the “Configure AEC Weights” button (see point 6).
6	This button is only enabled, if the “Use Custom Weights” check box is checked (see point 5). Click this button to open a dialog to setup the weights of the 5x5 measuring fields of the auto exposure control. By default all fields are weighted equally with ‘1’, setting a higher value for one of the fields prioritizes it, that means the AEC will try to correctly expose that field. The minimum weight is 1, the maximum is 25.
7	The luminance set point defines how bright the auto exposure will set the output image.
8	The maximum ISO setting defines how high the auto exposure is allowed to adjust the sensor gain (see point 3). Use a lower value if you want to avoid noise in low light scenarios, choose a higher value if more gain is needed and noise is of secondary importance.
9	The control speed defines how fast the auto exposure reacts to changes in the light conditions. A lower value means a faster reaction, but setting the value too low might cause the controller to overshoot.
10	Set the anti flicker period to the power frequency of your country (e.g. 50 Hz in Europe, 60 Hz in North America) to avoid screen flickering when the auto exposure is enabled.
11	Enable lens shading correction. Please see the notes below this table for detailed instructions on how to setup the lens shading correction module.
12	The Cosine ⁴ Compensation mainly adjusts the correction in the middle regions of the image.
13	The Offset determines where the compensation of the outer image regions starts.
14	The slope defines how strong the compensation in the outer image regions is.
15	Set the video mode (resolution and timing).



16	Set the mode of the second SDI output. In mirror mode the image is identical to the first output, in RAW-10 and RAW-12 modes a custom raw image will be output. Set it to "SDI-2 LUT" to use a custom de-gamma LUT for the second output. To configure the LUT of the second output additionally you have to switch to SDI-2 config in the Toolbar (see chapter 3.1, point 5 and 6 and chapter 4.7 for more details).
17	Set the flip mode to mirror the image vertically, horizontally or both (rotate 180°).
18	Enable LOG mode. In LOG mode the gamma curve of all outputs is fixed to a Hybrid LOG Gamma curve (HLG). This generates a "flat" output image which preserves more details in the highlights. In LOG mode the gain range is adjusted (minimum ISO is doubled) to match the LOG curve. Please note that in LOG mode the Lookup Table Tab (see chapter 4.7) is deactivated.
19	Enable 4K to 2K downscaler and optional interlacer for the first SDI output. This option is only available for 4K cameras, see the cameras reference manual for more details.
20	Enable 4K to 2K downscaler and optional interlacer for the second SDI output. This option is only available for 4K cameras, see the cameras reference manual for more details.
21	Enable or disable Audio. When enabled the audio signal of the device internal microphone is embedded into the SDI output signal.
22	Enable genlock in slave mode (when connecting an external sync source) or master mode (to generate a genlock signal).
23	Set the vertical genlock offset in lines.
24	Set the horizontal genlock offset in pixels.
25	Enable or disable genlock termination.
26	Field to enter the timecode.
27	Apply the currently entered timecode.
28	Get the current timecode of the device.
29	Hold the timecode. When enabled the device will stop incrementing the timecode on the SDI output. The internal counter will keep running, so if you resume, the timecode will jump to the current value. This can be used to trigger external flash recorders.

Note: How to setup the lens shading correction:


1. Point the camera at a homogeneous light source.
2. Connect the camera to a wave monitor and select a line in the middle of the image, depending on the lens you use, you should see a decrease in luminescence towards the edges of the image.
3. Enable lens shading correction, start with the Cosine⁴ Compensation, Offset and Slope set to 0.



4. Now turn up the Cosine⁴ Compensation, this should correct the lens shading in the middle area of the image, the edges will probably still be not ideally illuminated. Make sure to not overcompensate, this will create a wavelike appearance of the luminescence on the monitor.
5. Set the Offset to 0.5 and set to Slope to a high value like 1.5, you should now clearly see where the compensation starts. Now adjust the Slope until you hit the point where the luminescence starts decreasing. Finally decrease the Slope until the result is not overcompensated anymore.
6. Make fine adjustments until you are satisfied with the result.

Please note that, depending on the optical lens used, the aperture and focal length have influence on the lens shading, so you should use your default setup for configuring the compensation. Also it might be helpful to turn off the auto exposure during the setup.


4.2 Black Level Tab

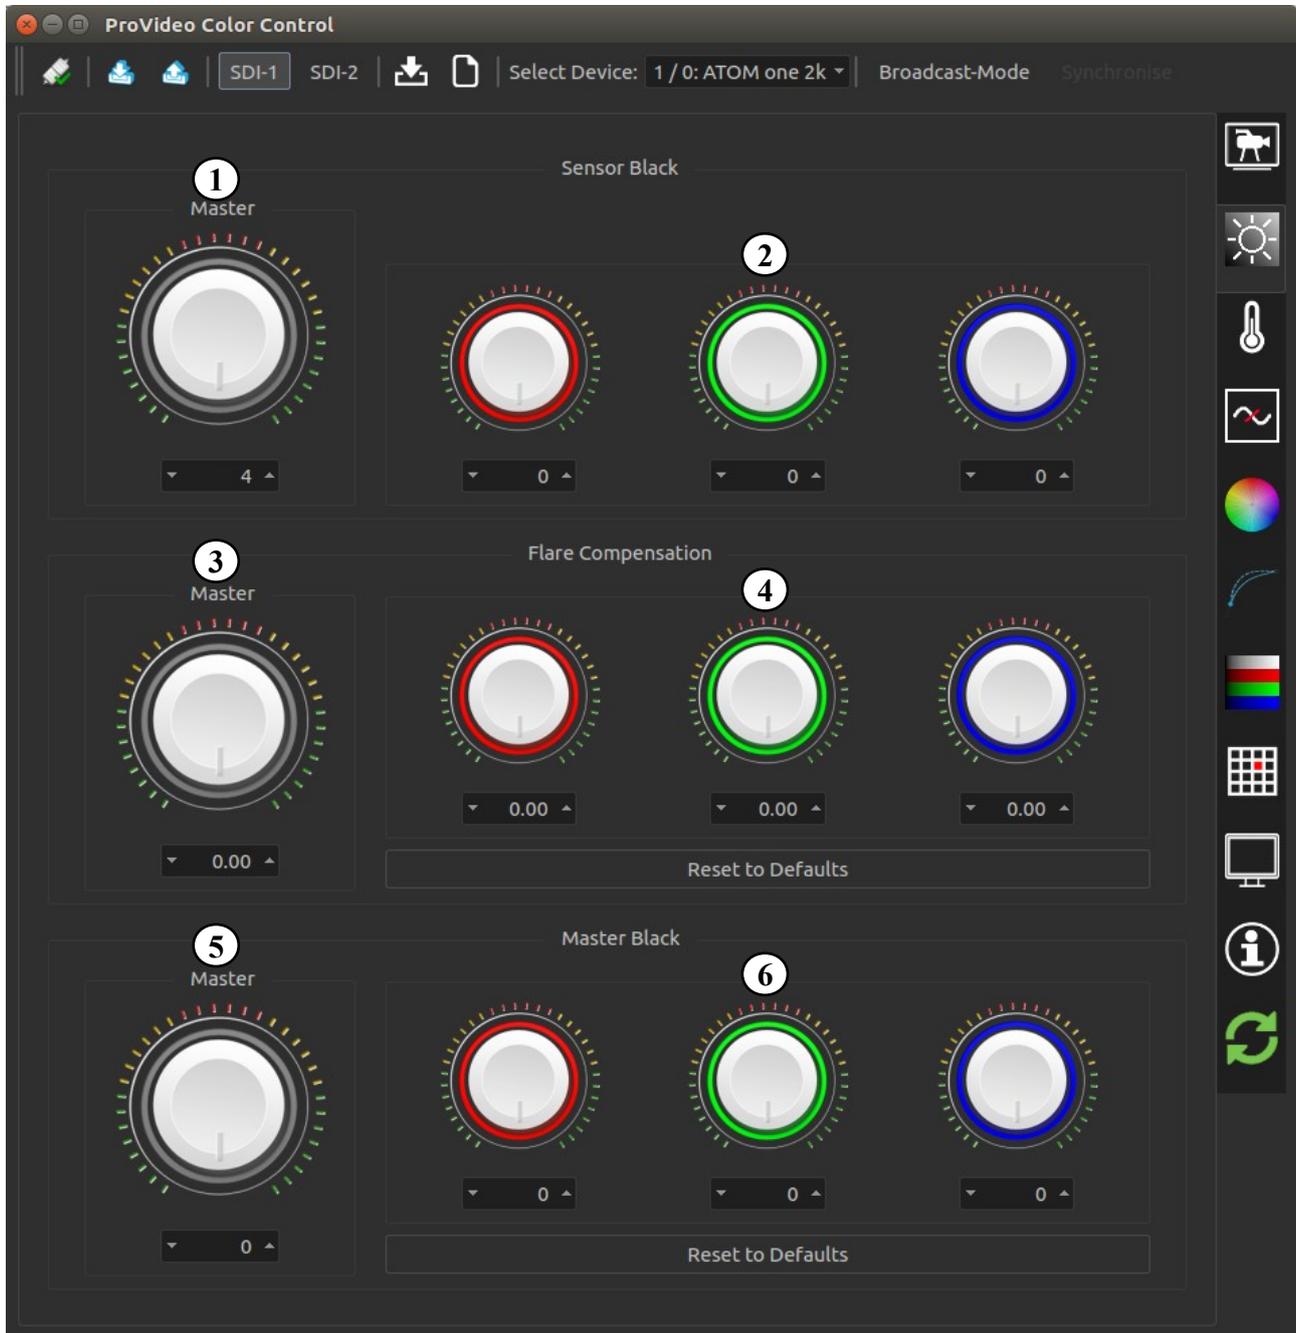

1	Sensor black for all colors (only visible when “Engineering Mode” is enabled on the Info Tab).
2	Sensor black for each component separate (only visible when “Engineering Mode” is enabled on the Info Tab).
3	Flare compensation (defog) for all colors.
4	Flare compensation (defog) for each component separate.

- | | |
|---|---|
| 5 | Master black for all colors. |
| 6 | Master black for each component separate. |


4.3 White Balance Tab

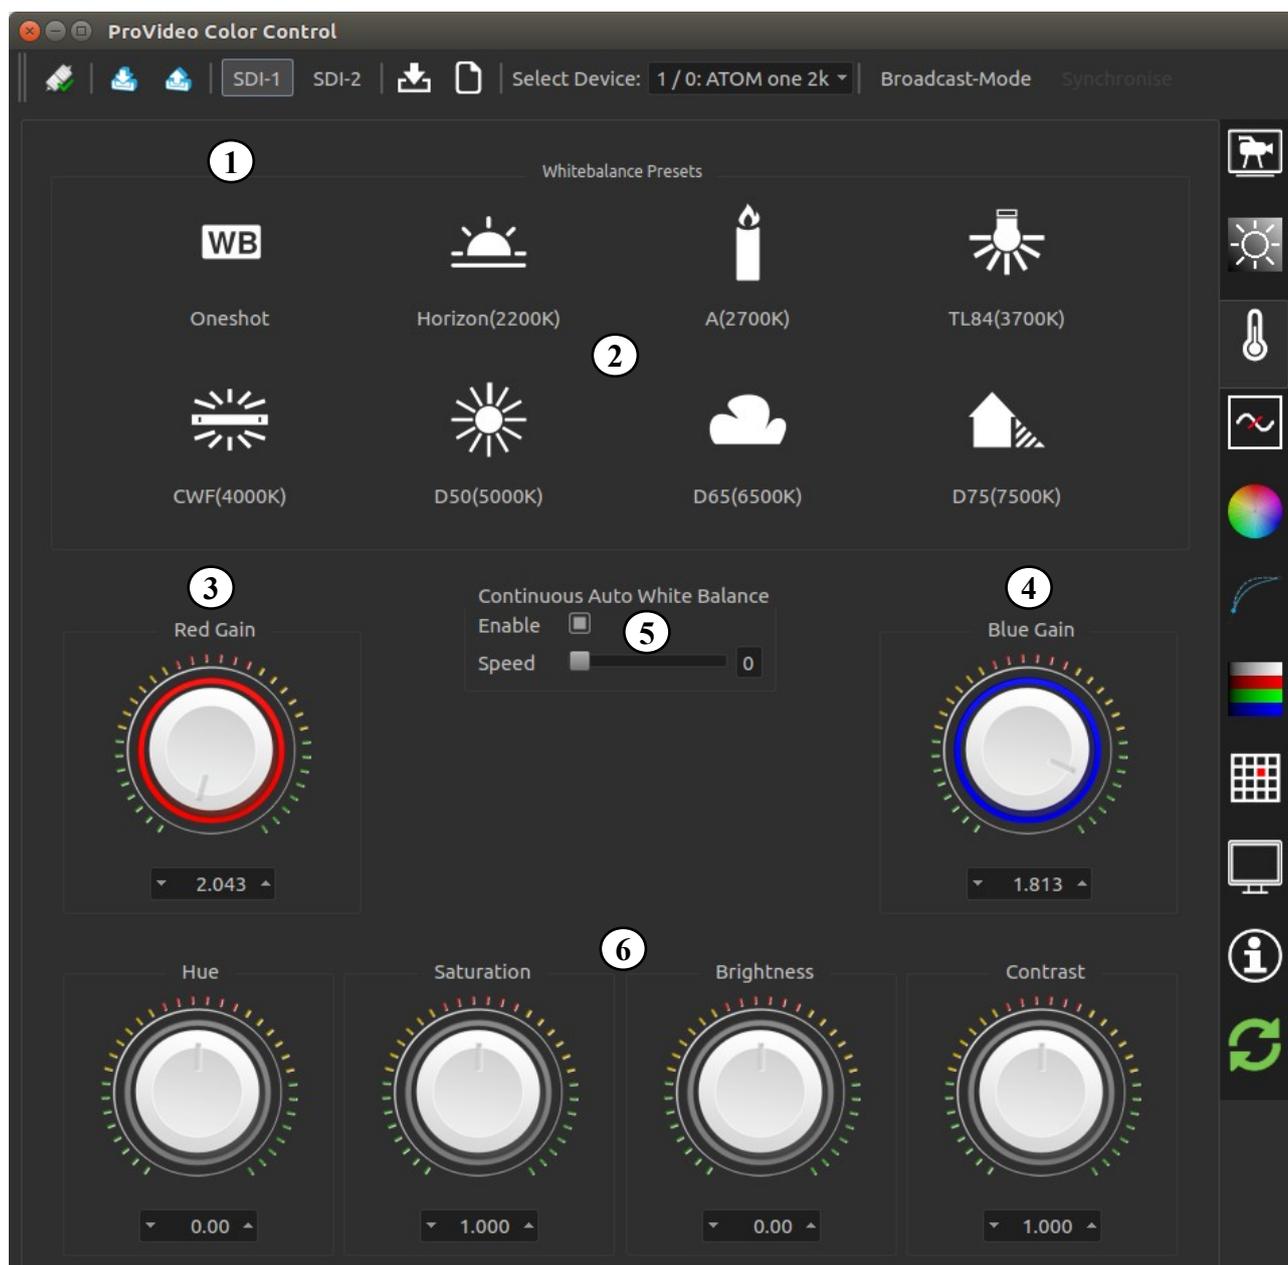

- | | |
|---|--|
| 1 | Trigger automatic white balance (one shot, not continuous). |
| 2 | Select a white balance preset: 2200K, 2700K, 3700K, 4000K, 5000K, 6500K or 7500K depending on the current lighting conditions. |
| 3 | Manual red gain. |
| 4 | Manual blue gain. |

- | | |
|---|--|
| 5 | Configure continuous automatic white balance (AWB). A higher speed means faster adjustment, but also a less fluid look of the AWB. |
| 6 | Post processing: Hue, Saturation, Brightness, Contrast |

4.4 Filter Tab

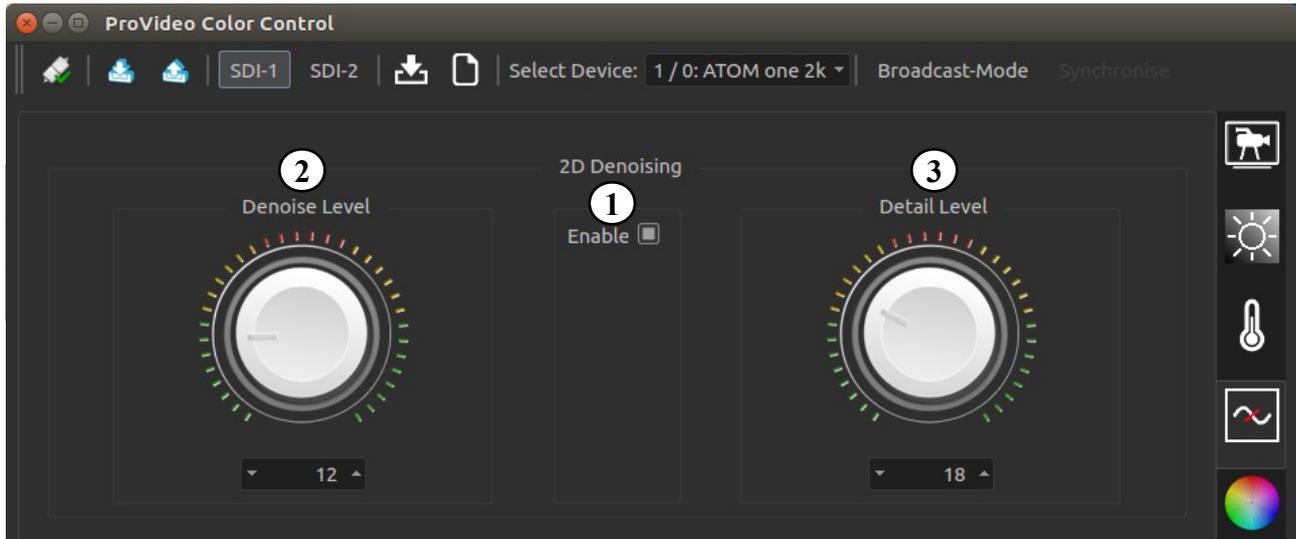

4.5 Multi Color Controller Tab



1	Enable / disable the multi color controller and select the amount of phases (12, 16, 24 or 32). The more phases the finer you can tune the image color.
2	Load or save the current color profile from / to file.
3	Change the range of the hue and saturation sliders to make more accurate adjustments to the phases. The current minimum and maximum values are displayed on the right hand side of the equalizer sliders. Resetting the equalizer will set all sliders to their default values.
4	Set hue and saturation of the currently selected color phase.
5	The hue sliders will move the color of the selected phase to the neighboring color.
6	The saturation sliders make the selected phase more or less prominent.

- 7 Toggle the blink button of a phase to make it blink in the output image to spot which colors the phase will effect.

4.6 Knee Function Tab



- | | |
|---|--|
| 1 | Graphical view of current knee settings. |
| 2 | Enable knee function. |
| 3 | Set knee point (point where the curve bends, indicated by the blue line in the plot). |
| 4 | Set white clipping point (maximum value of the knee function, indicated by the yellow line in the plot). |
| 5 | Set knee slope (angle of the first part of the knee function till the knee point). |

4.7 Lookup Table Tab



The screenshot shows the ProVideo Color Control GUI with the Gamma Correction tab active. The main window displays a graph of the gamma curve with a yellow curve and a grey diagonal line. Below the graph, there are controls for 'Table-Based Interpolation' and 'Fast Gamma'. The 'Table-Based Interpolation' section includes a table of sample points, a 'Table Generator' with various settings, and buttons for 'Import CSV', 'Export CSV', and 'Apply and Interpolate'. The 'Fast Gamma' section includes a dial for gamma adjustment and radio buttons for 'Rec. 709', 'Rec. 2100 - PQ', and 'Rec. 2100 - HLG'.

	X	Y
1	0	0
2	496	7314
3	1008	10056
4	1184	10810
5	1520	12093
6	2032	13776
7	2544	15239
8	3056	16547
9	4080	18839
10	5104	20832
11	6128	22614


- 1 Graphical representation of current gamma curve. Click anywhere in the plot to add a new sample point. You can add up to 24 sample points. This is only possible in "Table-Based Interpolation" mode, in "Fast Gamma" mode the plot will show an un-editable preview of the gamma curve.
- 2 Select channel for gamma. The RGB curves will be overlain with the master curve to create the resulting RGB curves. The GUI will show the resulting curve with a darker color. In "Fast Gamma" mode, the channels can not be separately and only



	“Master” will be shown.
3	Enable “Table-Based Interpolation” which allows for a fine adjustment of the gamma curve but is not ideal for real-time gamma changes.
4	The device can store up to five different tables of sample points, use the storage selector to switch between them.
5	Table of all sample points for the selected curve and preset. Entries can be edited by double clicking a value.
6	Delete the currently selected entry out of the table.
7	Clear all sample points from the table. This will create a linear de-gamma function for the currently selected curve and preset.
8	Calculate LUT tables for given sample points on the device. This must be done to apply any changes.
9	Load / save gamma curve from / to file.
10	Save current gamma curve to file.
11	By default the parameters in this box are set to generate a standard REC.709 de-gamma curve. Fine tune the parameters to generate a custom de-gamma curve.
12	Reset the REC.709 parameters to their defaults to restore the standard REC.709 de-gamma curve.
13	Calculate the de-gamma curve based on the given parameters for the currently selected curve and preset. This will also apply the curve on the device. Please note that to generate the default behavior, the Master curve should be set to REC.709 and the RGB curves should be linear.
14	Enable “Fast Gamma” mode which changes the gamma curve by varying only one parameter. In this mode you can not set the RGB channels separately, but it is faster and thus can be used during production.
15	Change the gamma value.
16	Set gamma value to REC.709 default.
17	Enable “Fixed Gamma” mode where the gamma curve is set to a fixed preset. You can select between REC.709, REC.2100 PQ and REC.2100 HLG.

Note: Some devices support a feature, where each of the two SDI output has its own lookup-table. To enable this feature the mode of the second SDI output has to be set to “SDI-2 LUT” (see chapter 4.1, point 16). Afterwards you can switch between the configuration of the two outputs by using the “SDI-1” and “SDI-2” buttons in the toolbar (see chapter 3.1).

4.8 Defect Pixel Correction Tab

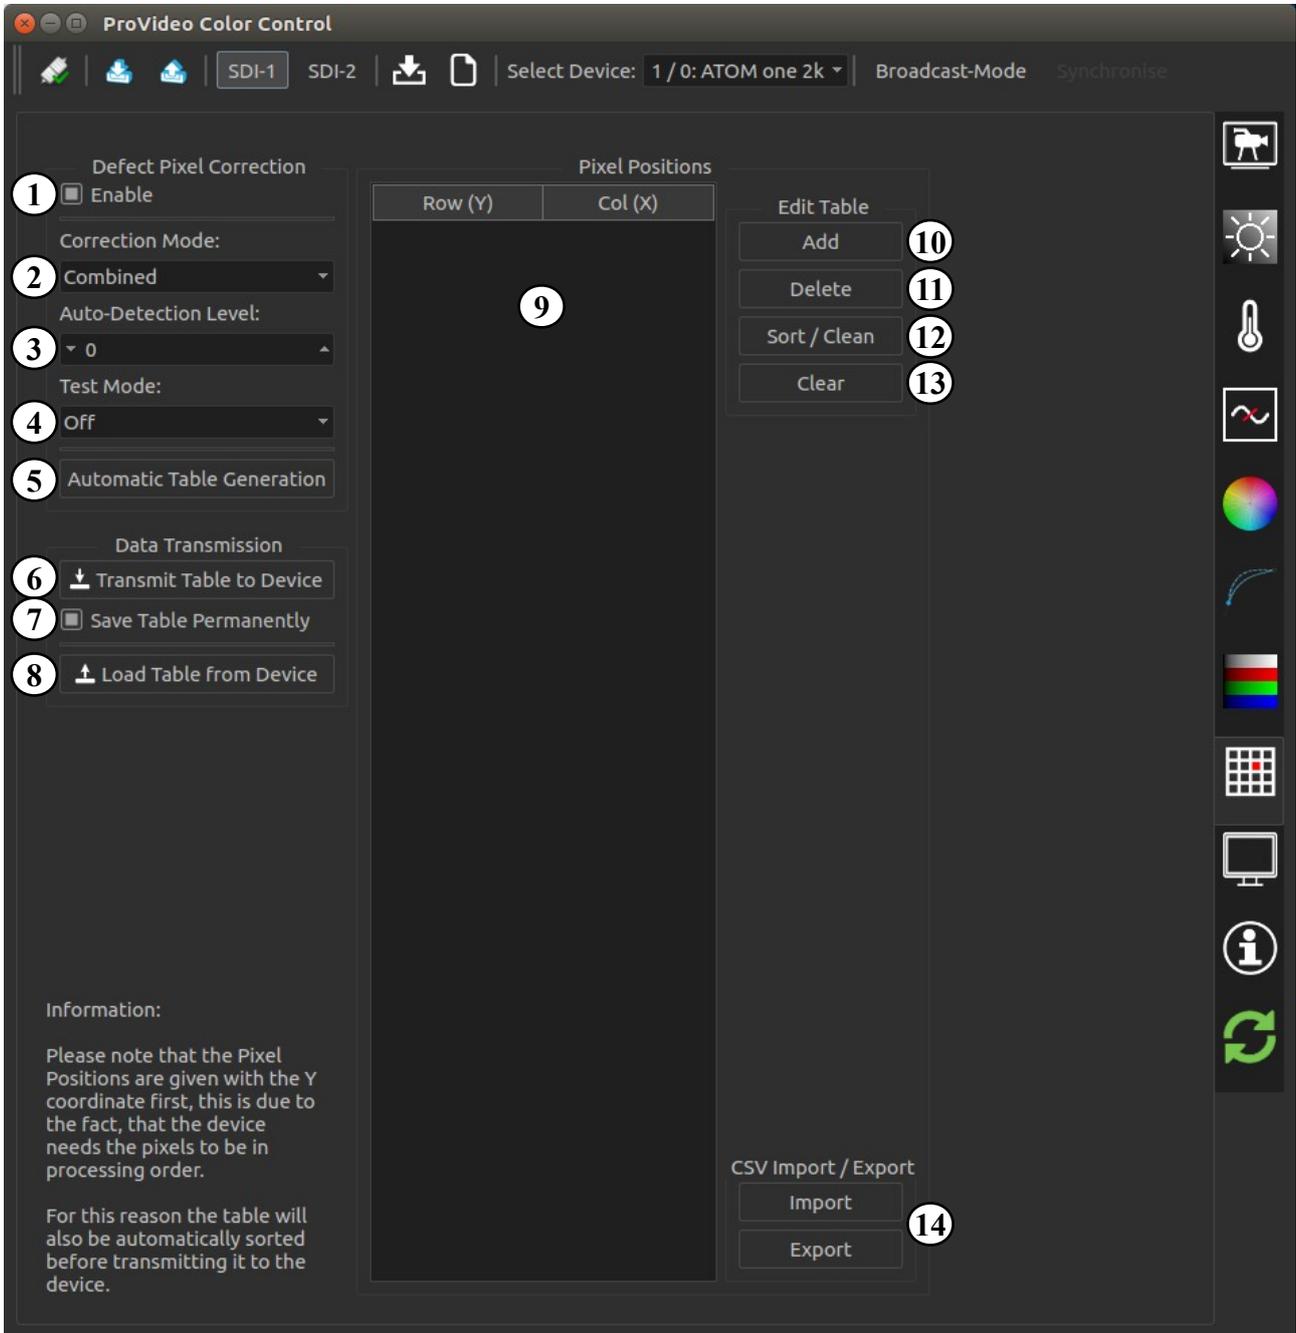

Defect Pixel Correction

1 Enable

Correction Mode:

2 Combined

Auto-Detection Level:

3 0

Test Mode:

4 Off

5 Automatic Table Generation

Data Transmission

6 Transmit Table to Device

7 Save Table Permanently

8 Load Table from Device

Pixel Positions

Row (Y)	Col (X)
9	

Edit Table

10 Add

11 Delete

12 Sort / Clean

13 Clear

CSV Import / Export

14 Import

Export

Information:

Please note that the Pixel Positions are given with the Y coordinate first, this is due to the fact, that the device needs the pixels to be in processing order.

For this reason the table will also be automatically sorted before transmitting it to the device.

1	Enable the defect pixel correction module.
2	Set the correction mode. "Combined" will use both, automatic and table based detection.
3	Increasing the auto-detection level will find more defect pixels, but will also increase the amount of false positives.



4	The "Calibration" test mode will configure a black and white output mode, in which defect pixels can be spotted more easily. The "Validation" mode will turn the output image black and highlight currently detected or setup defect pixels.
5	The automatic table generation will use the currently configured auto-detection level and perform a single shot detection run. The resulting defect pixels will be stored in the defect pixel table. Afterwards the automatic detection can be set to only table based to avoid the detection of false positives. Note: You should use defined lighting conditions and a grey test image to perform the automatic table generation.
6	Transmit the pixels entered in the table to the device. You have to click this button to apply changes to the table.
7	If this box is checked the table will also be stored in the permanent memory and will be restored after a power cycle. If the box is not checked the table is only stored in the non-permanent memory and will be reset after a power cycle.
8	Load the table from the device. This will always load from the permanent device memory!
9	Table of defect pixel positions. Double-click a value to edit it.
10	Add a position to the table.
11	Delete the selected position from the table.
12	Sort the table and remove duplicates.
13	Delete all positions from the table.
14	Import or export a CSV file with the defect pixel table.

How-To use the defect pixel correction:

Most ATOM one devices support two different correction modes, they can automatically detect defect pixels and correct them or use a user defined table to do so (you can also combine both methods).


The easiest way is to use the automatic detection. Therefore set the "Correction Mode" to "Auto-Detection" or "Combined". Then increase the "Auto-Detection Level" until the defect pixels are no longer visible. Please note that a higher detection level will increase the amount of pixels found, but it will also increase the amount of false-positives which means it will slightly degrade image quality. So you should keep the detection level as low as possible.

For best image quality you will have to use the table based defect pixel correction. Therefore you need to record the image of the ATOM one and find out the pixel positions (row and column) of the defect pixels. You then have to add them to the defect pixel table. Alternatively you can use the automatic table generation. Therefore you should point the camera at a grey test image which is evenly illuminated, so that you can detect both hot and dead pixels. Configure the "Correction Mode" to "Combined" and then increase the detection level of the automatic detection until all defect pixels are corrected. Then you click "Automatic Table Generation" and it will automatically fill the table. You can then

change the "Correction Mode" to "Table Based". Do not forget to click "Transmit Table to Device", with "Save Table Permanently" checked, to store the table on the camera.

To find defect pixels more easily you can use the "Validation" "Test Mode", it will configure a black and white output mode, in which defect pixels can be spotted more easily. The "Validation" "Test Mode" can be used to verify if the correction is working as intended, it will turn the output image black and highlight currently detected or setup defect pixels.

4.9 Output Tab

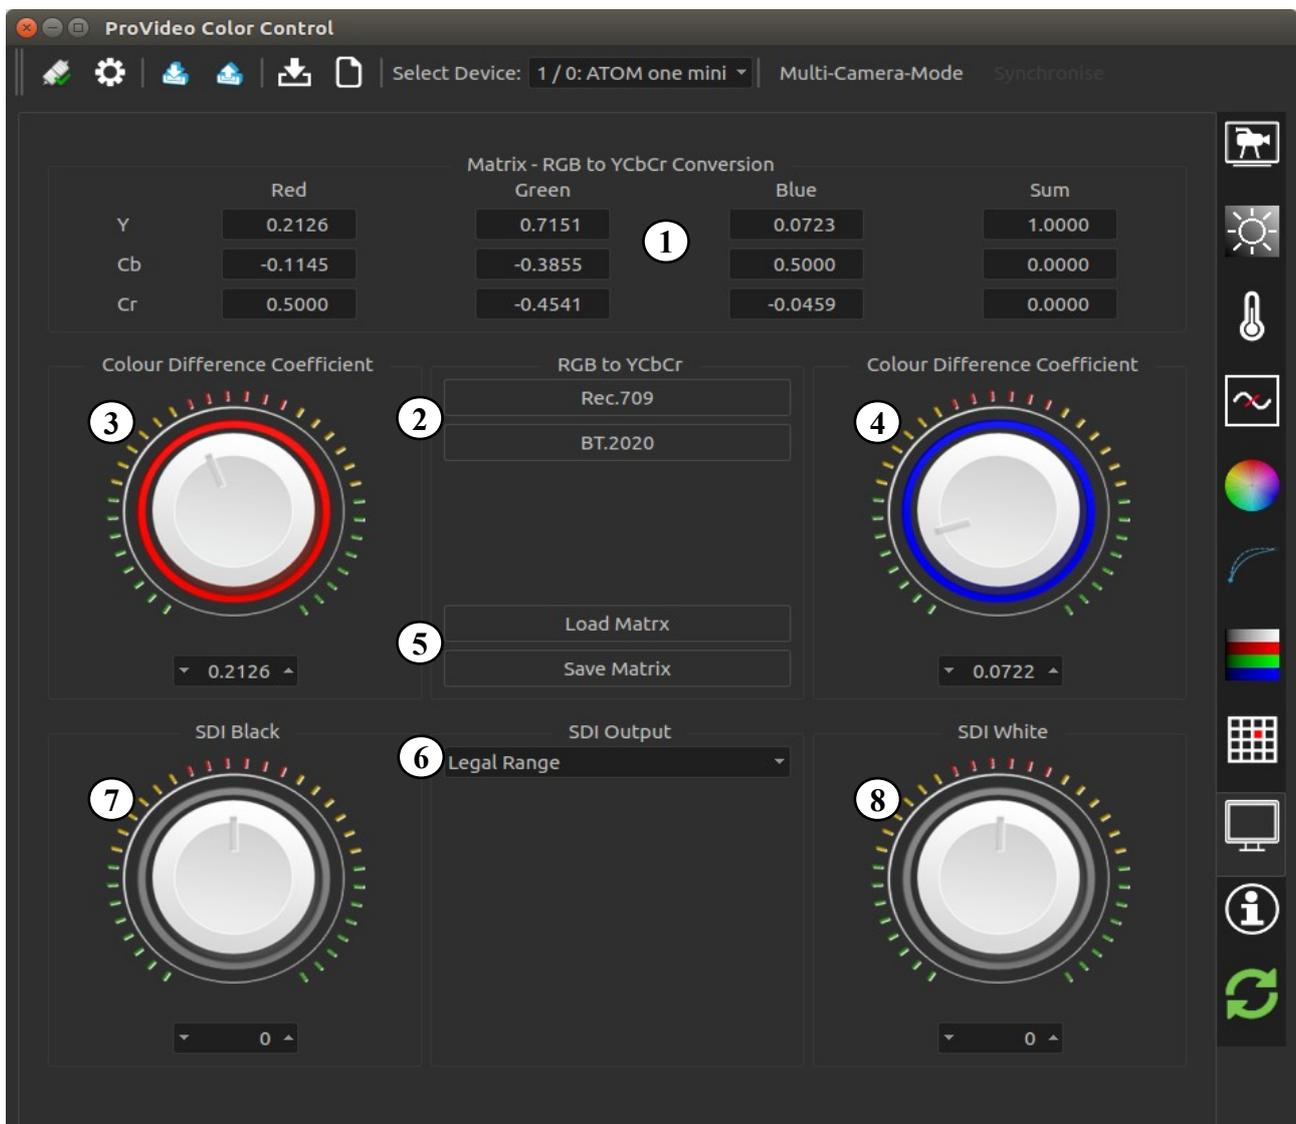

1	Values of current color conversion matrix.
2	Presets for color conversion. The default is Rec.709. BT.2020 is usually used for UHD video or HDR content.
3	Fine tuning of the matrix red balance.

4	Fine tuning of the matrix blue balance.
5	Load / save the color conversion matrix from / to file.
6	Set SDI output range to legal or extended. In legal range mode, the black and white levels can be fine tuned (see below).
7	Sets SDI black level (extend dynamic).
8	Sets SDI while level (extend dynamic).

4.10 Info Tab



ProVideo Color Control

SDI-1 SDI-2 Select Device: 1 / 0: ATOM one 4K r Multi-Camera-Mode Synchronise

System Information

Device Name	ATOM one 4K mini	
Platform	condor4k_mini_16	
System ID	0037003E-32374716-39393238-FFFFFFFF	
Validity	LICENSED 1	
Bitstream ID	0x2293	
Loader ID	2314	
Software ID	v1.1.5	
SW Release Date	2018-09-24 13:02:17 +0200 (Mon, 24 Sep 2018)	
SW Build Date	2018-09-24 13:03:57	
Runtime	0:7:39:24 (d:h:m:s)	
GUI Version	v1.1.8	

System Temperature

The temperature values will be updated automatically every second, while the Info Tab is opened.

Current Temperature 2	55.0 °C (System)	50.4 °C (CPU)
Fan Speed / Target Temperature	6 %	55 °C 3
Maximum Logged Temperature	55.0 °C (Persistent)	55.0 °C (User) 4
Shut-Down Temperature	80.0 °C	
Number of Over-Temperature Events	0	

To protect the device it will shut down when this temperature is reached and the Over-Temperature Event counter will be incremented.

Software Licenses

This software is published under GPLv3, to view the license, click the "Show Software License" button. We use the Qt Framework by the Qt Company and other open source components. Click the "Show Third Party Licenses" button to view all third-party software licenses.

Show Software License **5** Show Third Party Licenses **6**

Copyright (C) 2018 Dream Chip Technologies GmbH

This program comes with ABSOLUTELY NO WARRANTY. This is free software, and you are welcome to redistribute it under certain conditions. See above license for more details.


You can download the source code of this software from GitLab:

<https://gitlab.com/dreamchip/provideo-gui> **7**



1	The system information box gives some general information about the connected device. Check the “Software ID” to find out your current device version.
2	<p>This section shows information about the operating temperature of the device. Depending on the device one or two temperature sensors are available, their current values are listed under “Current Temperature”.</p> <p>Additionally the device is logging the maximum temperature of any sensor, it is displayed under “Maximum Logged Temperature”. There is a persistent maximum temperature value which can not be reset, and a user resettable one (also see point 4).</p> <p>The maximum allowed temperature is displayed under “Shut-Down Temperature”. The “Number of Over-Temperature Events” shows how often the device had reached its critical operating temperature and had to enter the fail-safe mode. The values are updated automatically every second, as long as the info tab is opened.</p>
3	Set the target system temperature for the fan controller (if device has a cooling fan). The fan controller will try to keep all measured system temperatures below the target value. If the value is set too low, the fan will always run at 100%.
4	Use the “Reset” button to reset the maximum temperature to the current temperature.
5	Show the open source software license of the GUI software.
6	Show the open source software licenses of third party software, which is used in the GUI.
7	Click the link to open the GitLab page of the ProVideo GUI.

4.11 Update Tab

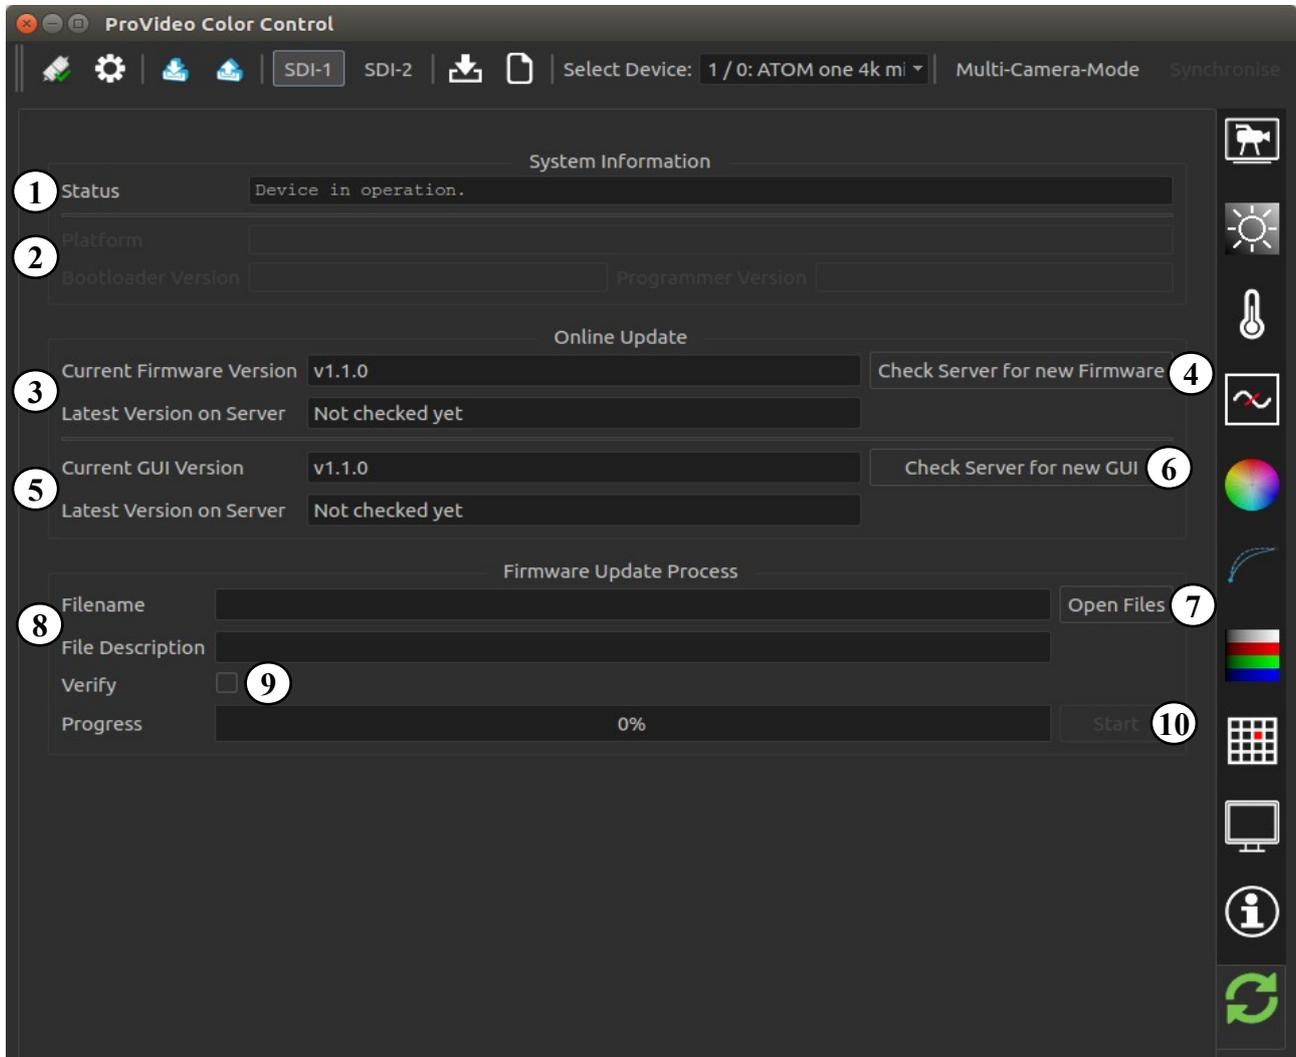

1	Shows the current status of the device.
2	Shows information about the firmware update components (device and local programmer tool).
3	Shows the firmware version which is currently installed on the device, and the version which is available on the update server.
4	Click this button to contact the update server and check for a new firmware version. If a new version is available, you will be asked to download and install it.
5	Shows the GUI version which is currently installed on the device, and the version which is available on the update server.
6	Click this button to contact the update server and check for a new GUI version. If a new version is available a browser window will open which redirects you to the download page.
7	Click the "Open Files" button to open a file open dialog. Navigate to the folder



where the update files are placed and click “Open”. You do not have to select the file directly, the GUI will automatically choose the correct update file and display its name in the “Filename” field. An Update can consist of more than one file, in that case the total amount of files is shown to the left of the progress bar.

Alternatively you can also drag an update file from your file explorer and drop it anywhere on the Update Tab to load it.

8 Shows information about the file which is currently being flashed to the device.

9 If you wish you can run an additional verification check after the update was performed. Usually this is not needed, as the update process is safe.

10 Click the “Start” button to initiate the update process. The progress bar will inform you about the current status.

Note: During the update the “Start” button will change into the “Abort” button. Click it to stop the update. Please note that **aborting the update will leave your device in a non-functional state**, you have to re-run the update to make the device operational again. If you do not finish the update you might not be able to access the device with the GUI and have to flash it using an update script.